




ASSEMBLY INSRTRUCTION


BAUANLEITUNG

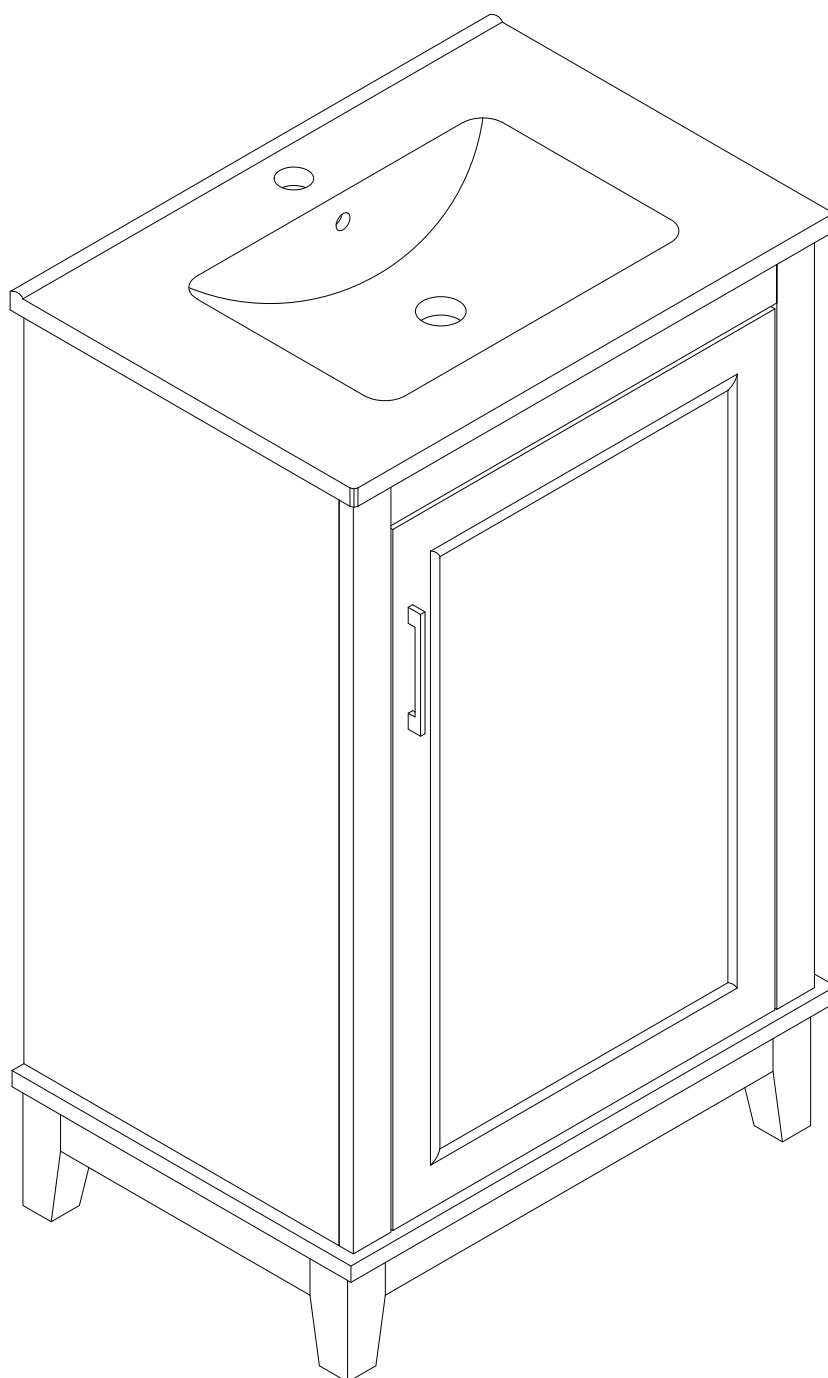

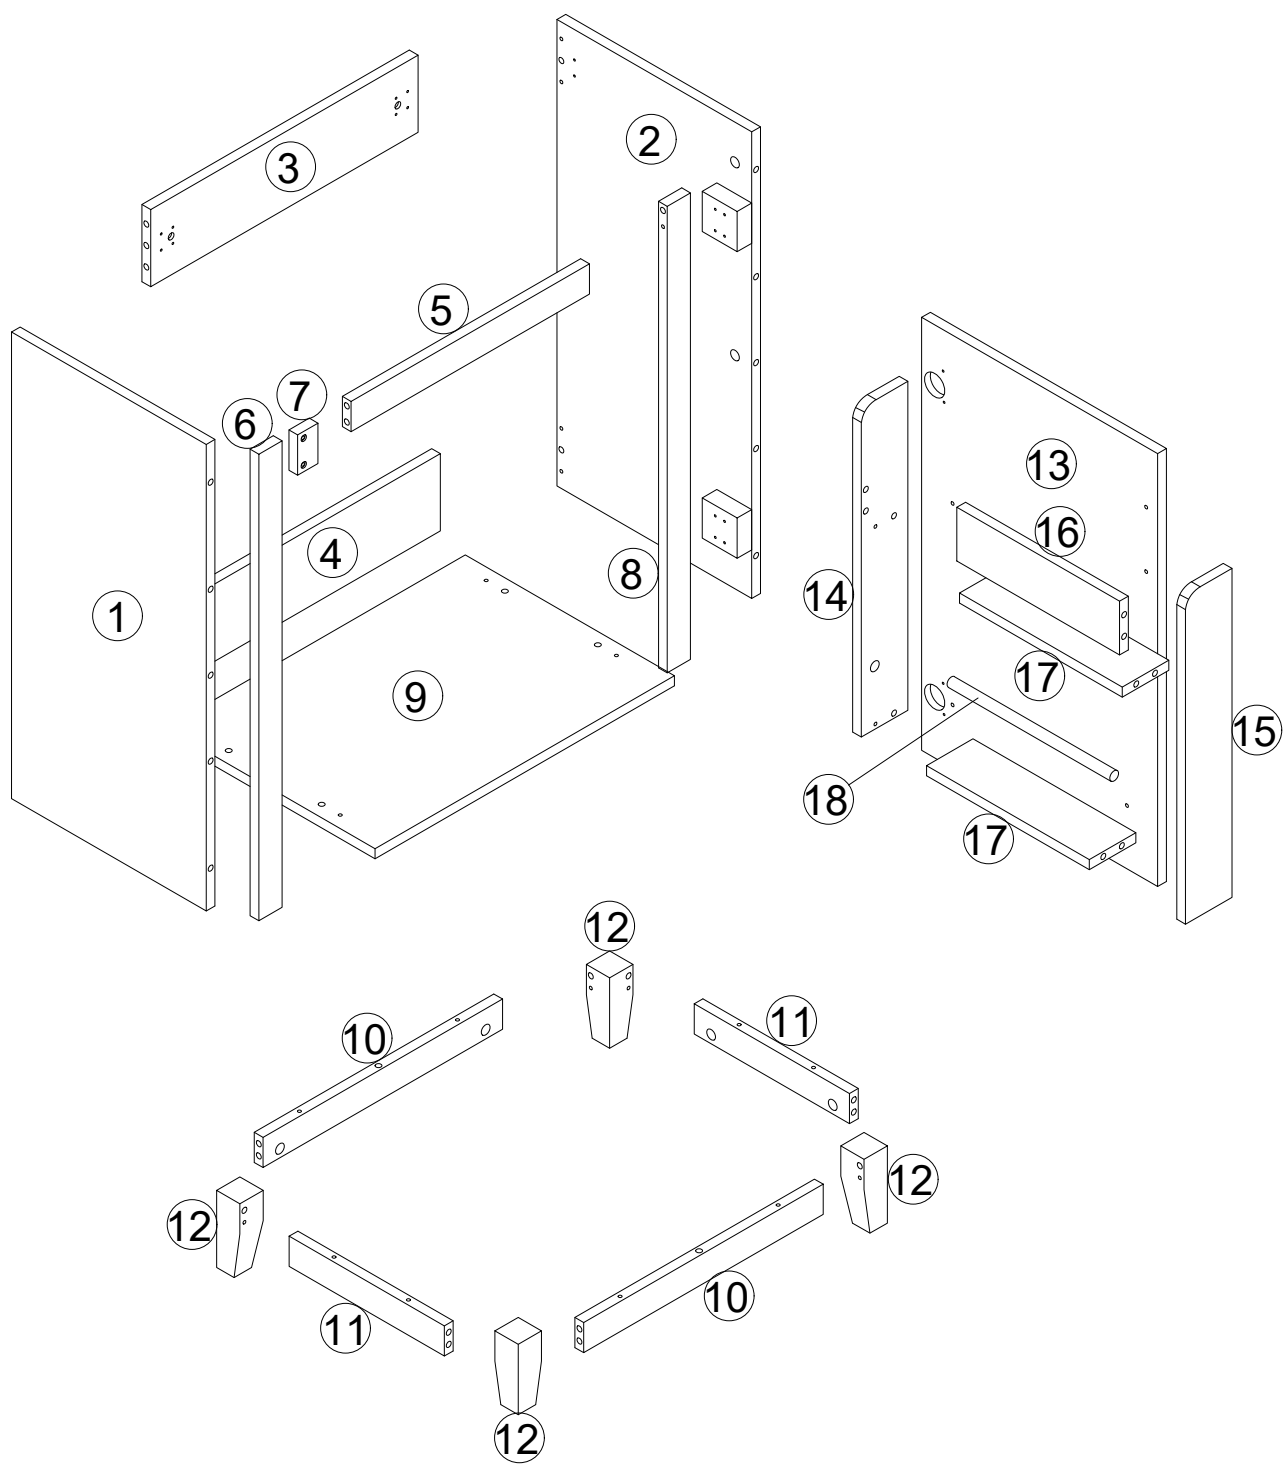


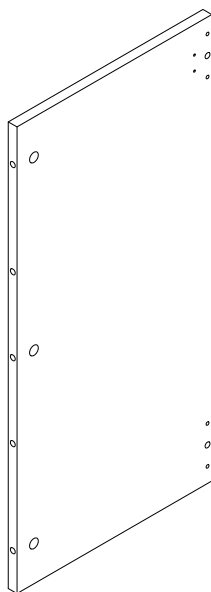


① x 1

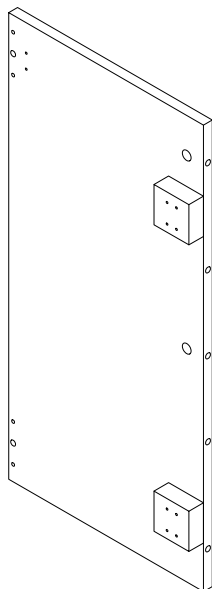


② x 1

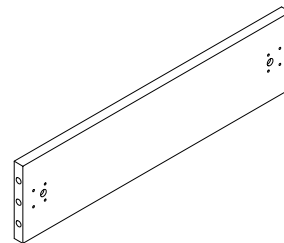


③ x 1

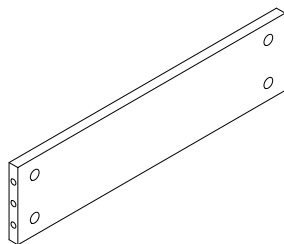

④ x 1

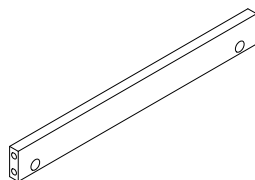


⑤ x 1




⑥ x 1




⑦ x 1




⑧ x 1

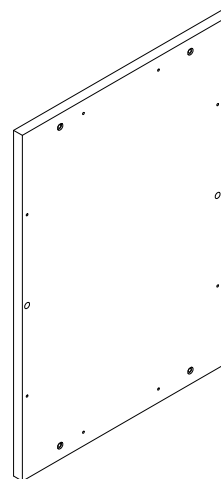

⑨ x 1

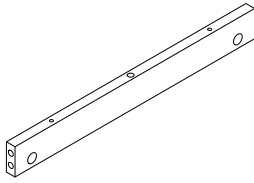


⑩ x 2

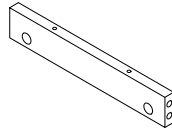

⑪ x 2




⑫ x 4

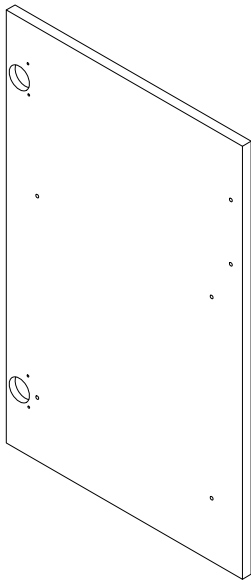


⑬ x 1




⑭ x 1




⑮ x 1

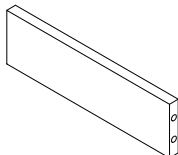





⑯ x 1

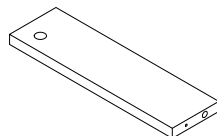



⑰ x 2





⑱ x 1

 Φ6x35mm A x 30+2	 Φ15x12mm B x 30+2	 Φ8x30mm C x 32+2	 M4x20mm D x 2	 E x 1	 M4x14mm F x 12+1
 G x 2	 M4x35mm H x 8	 M4x25mm I x 2	 M4x12mm J x 12+1	 M4x35mm K x 6	 L x 2
 Φ8x40mm M x 2	 M6x60mm N x 2				




Step 1

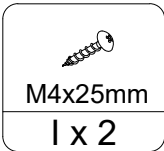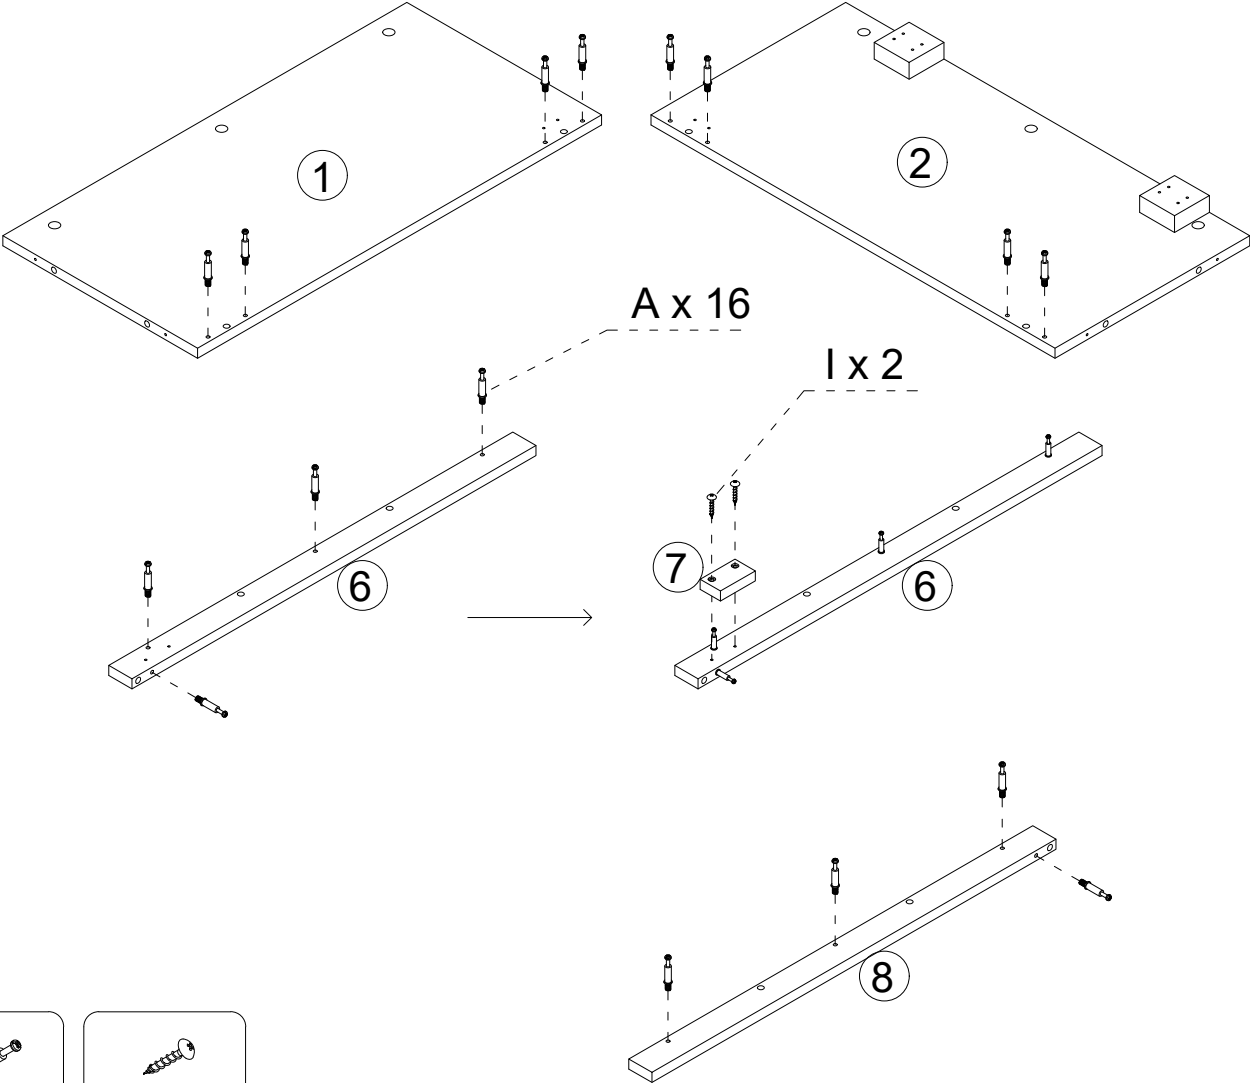




Step 2

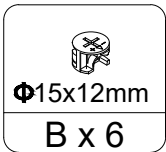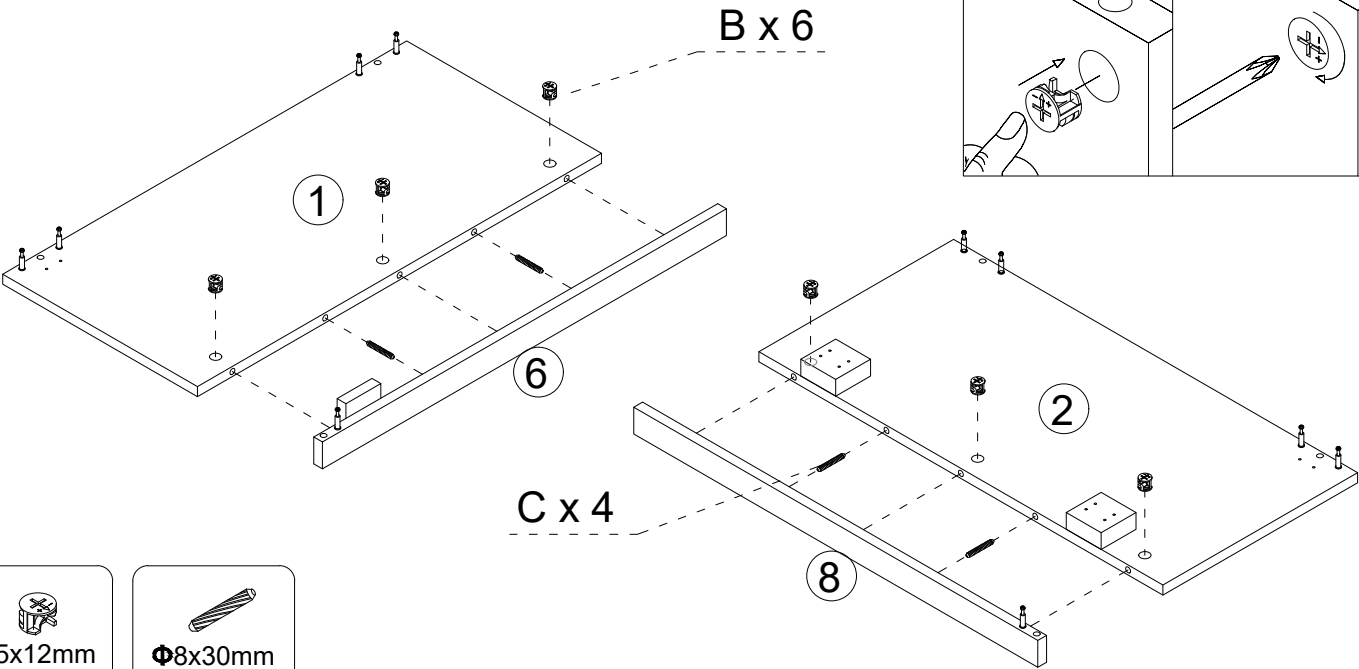



Step 3

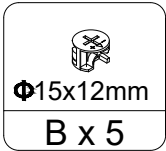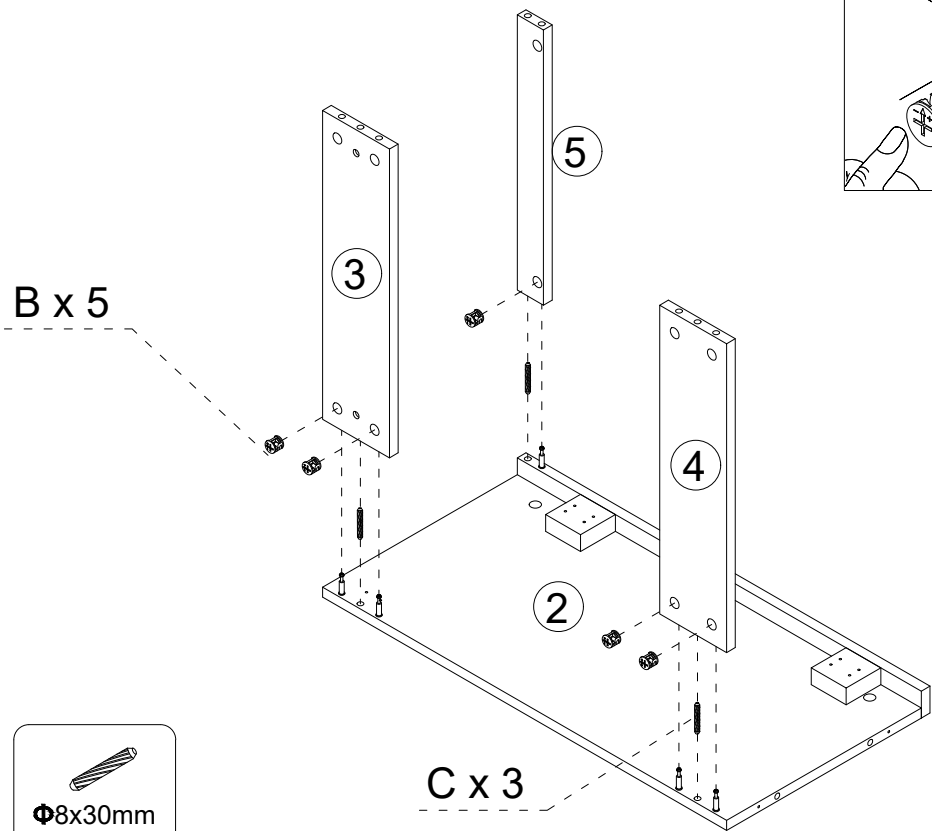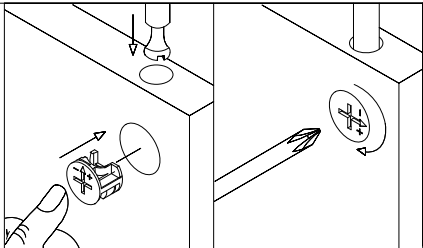




Step 4

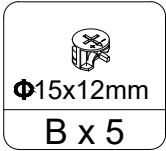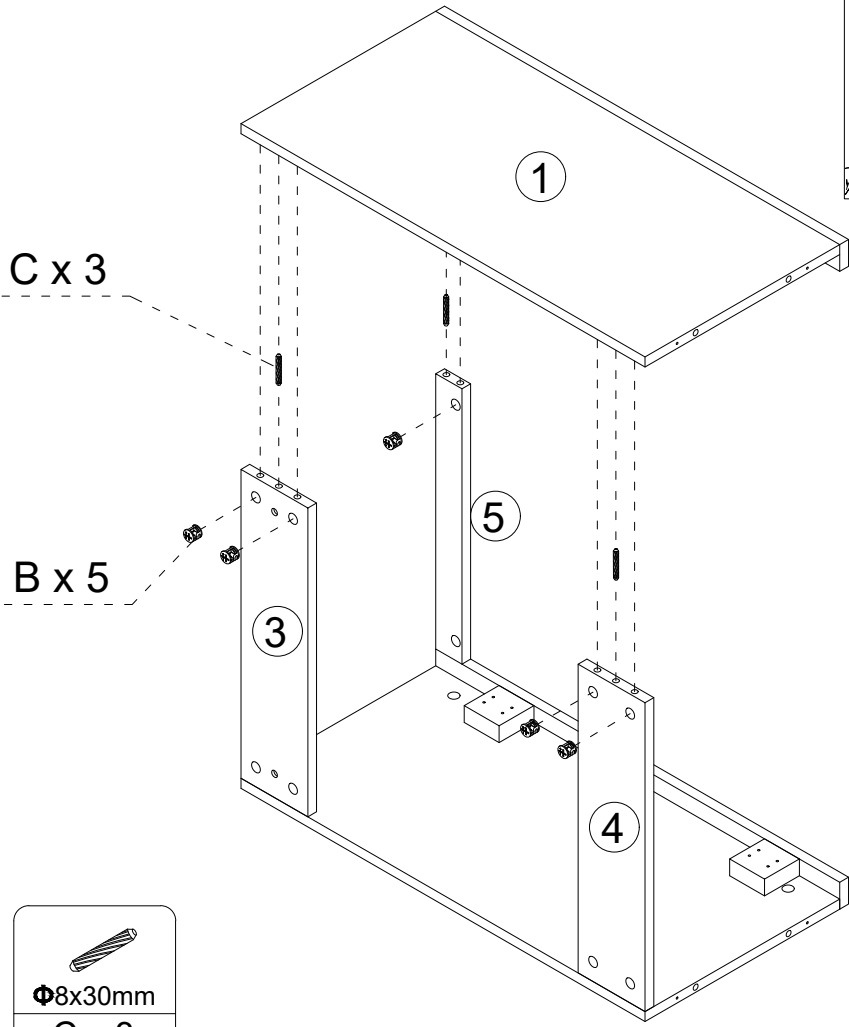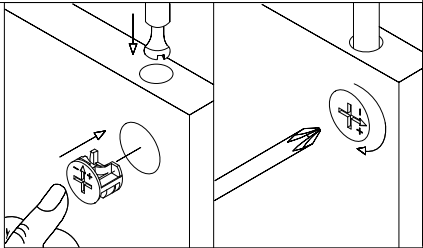



Step 5

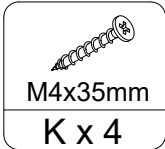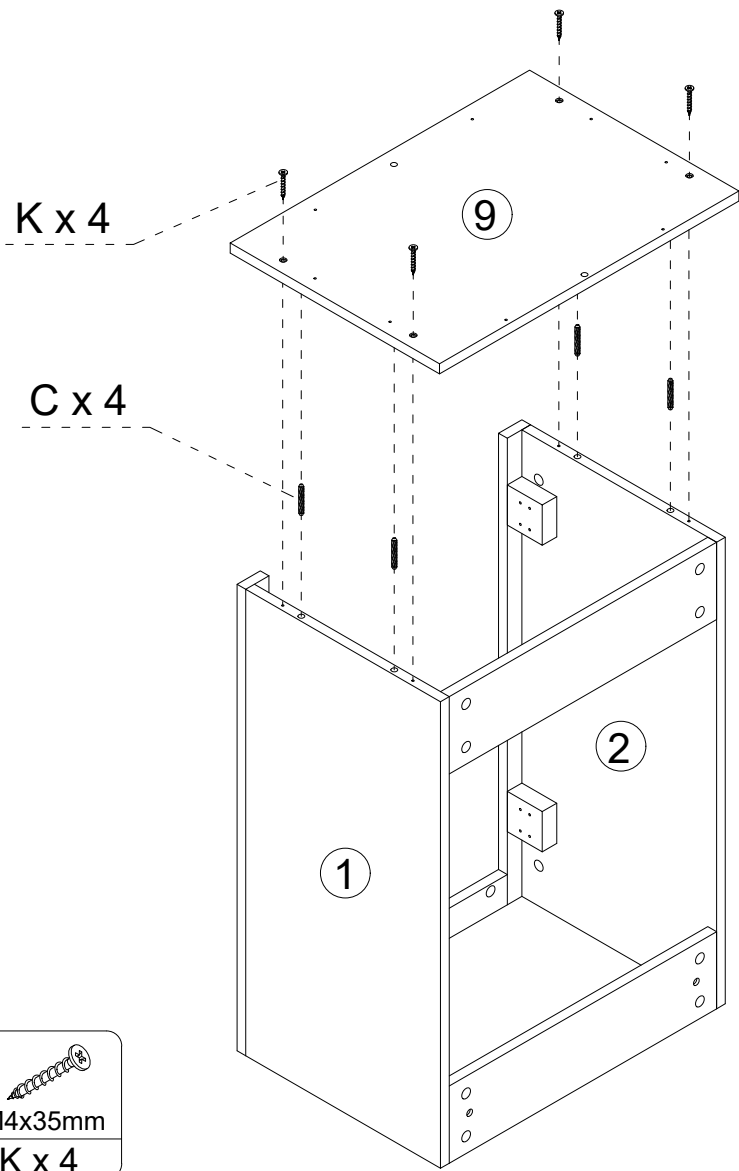




Step 6

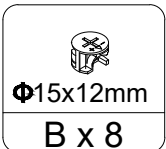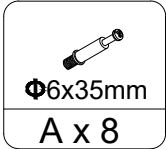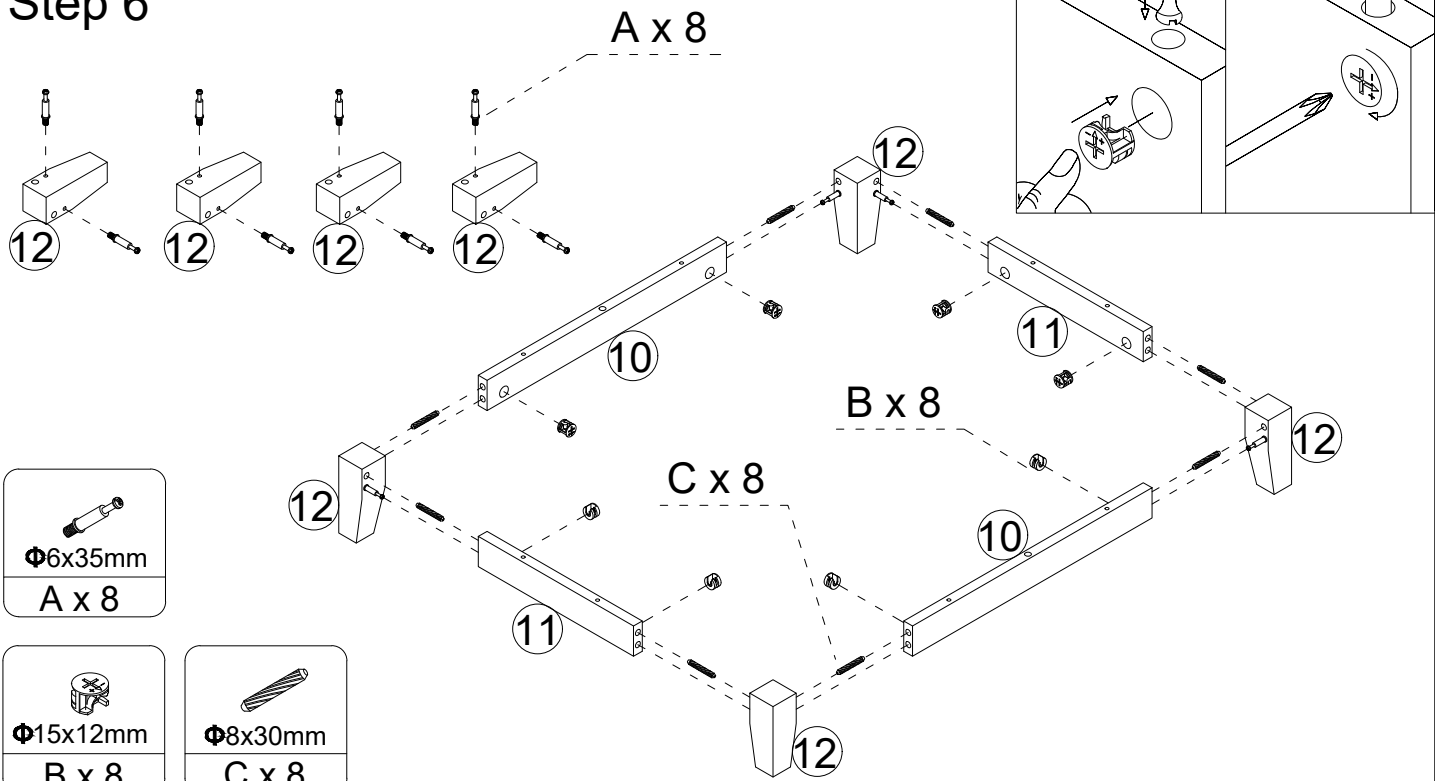



Step 7

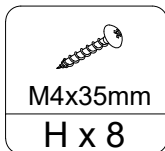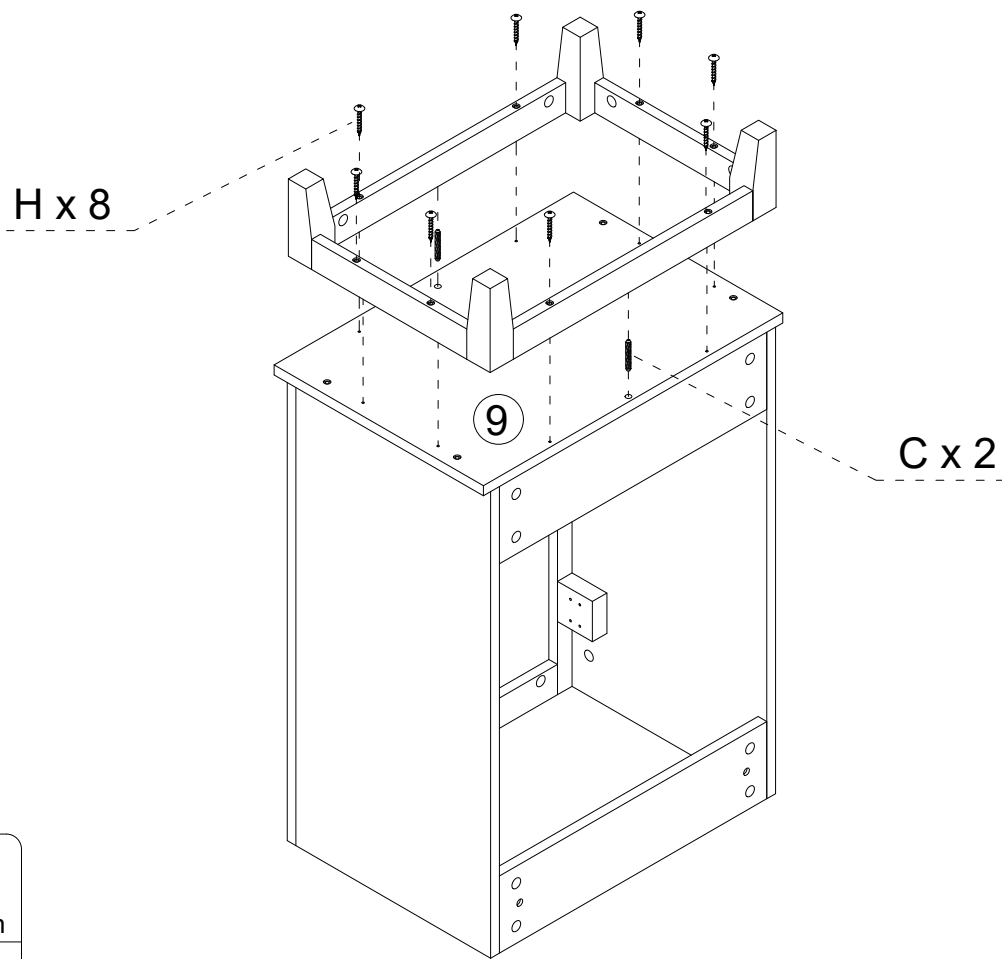

Step 8

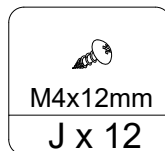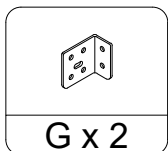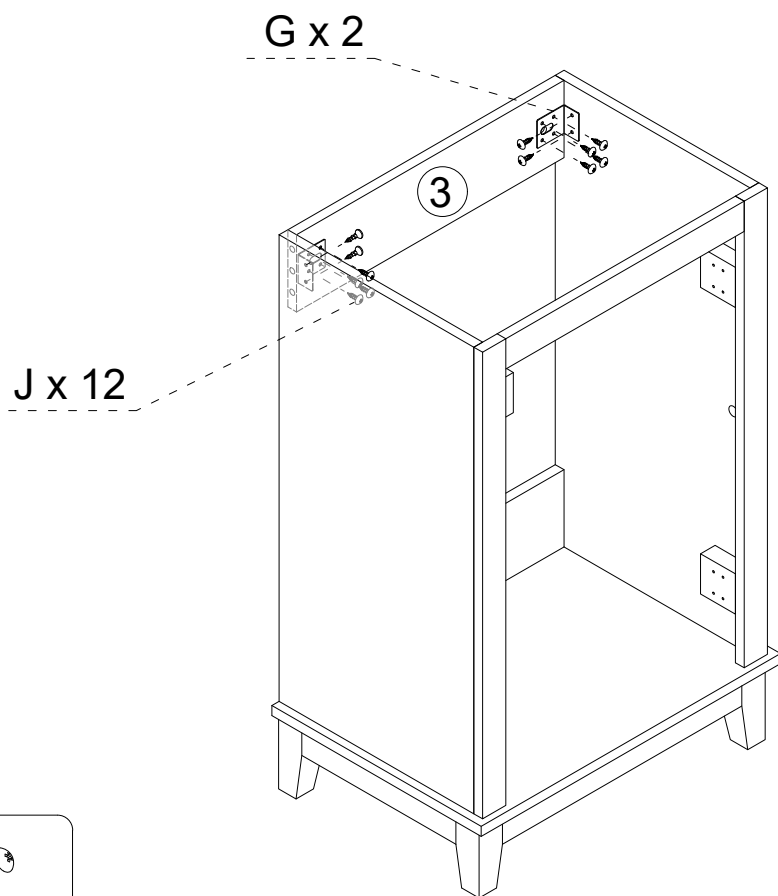


Step 9

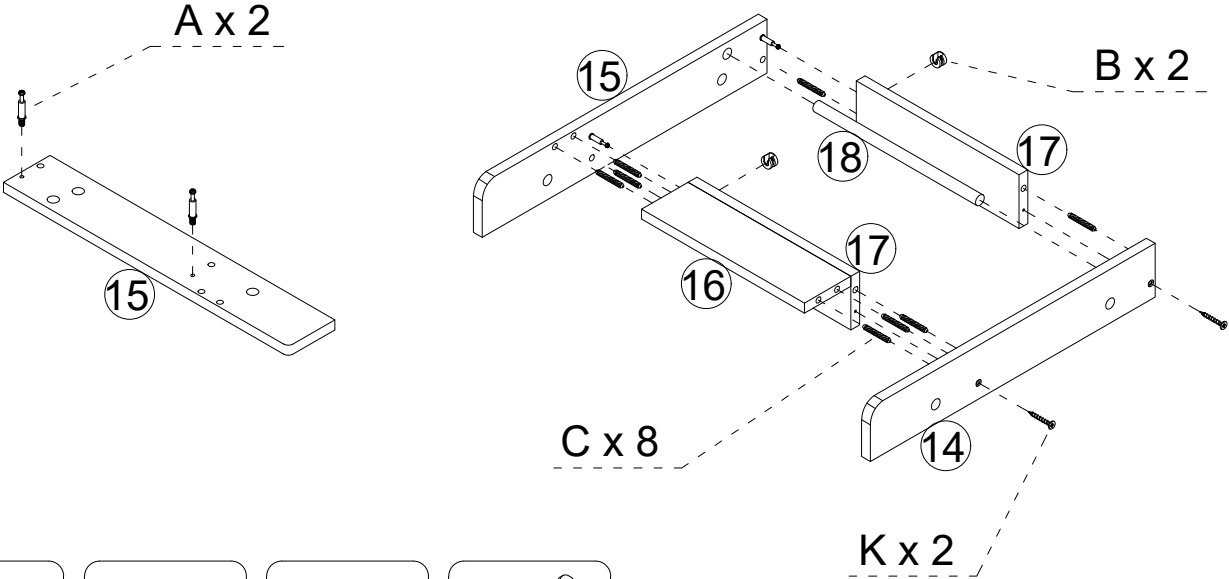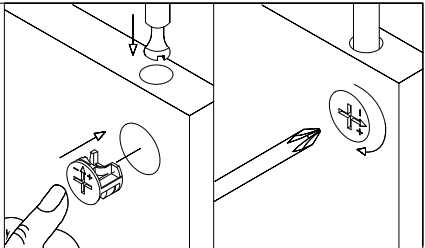

 $\Phi 6 \times 35 \text{mm}$ A x 2	 $\Phi 15 \times 12 \text{mm}$ B x 2	 $\Phi 8 \times 30 \text{mm}$ C x 8	 M4 x 35mm K x 2
--	---	--	---




Step 10

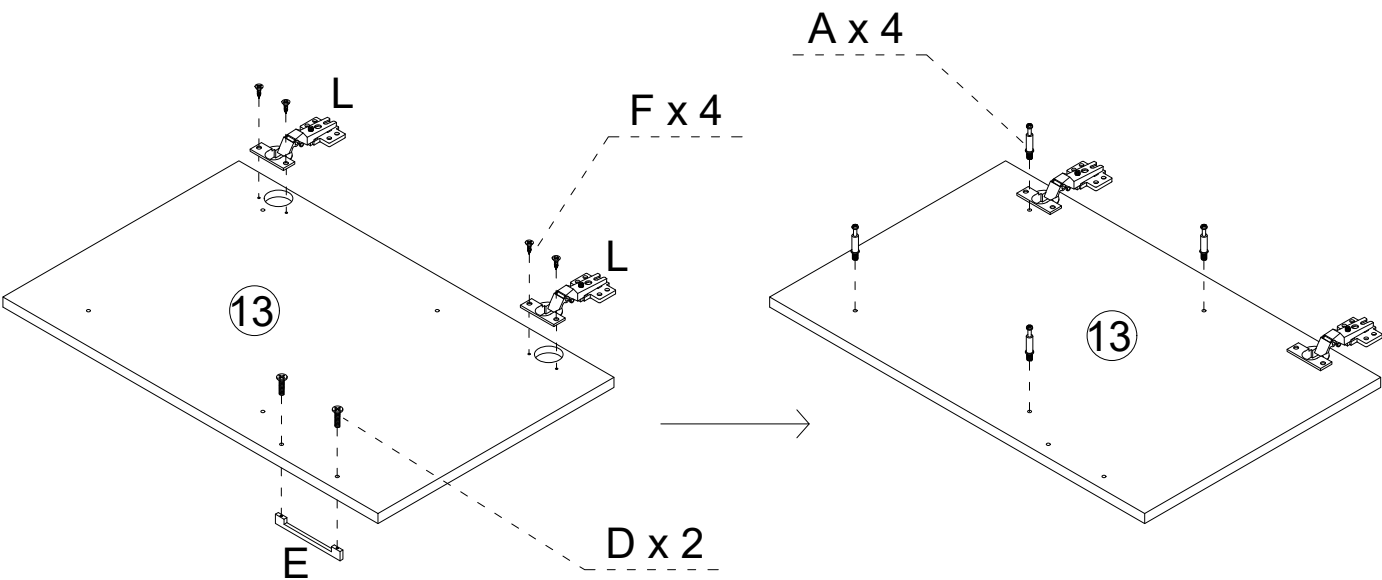




 $\Phi 6 \times 35 \text{mm}$ A x 4	 M4 x 20mm D x 2	 E x 1	 M4 x 14mm F x 4	 L x 2
--	---	--	---	--

Step 11



Pay attention to the direction

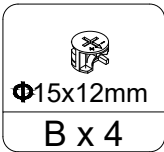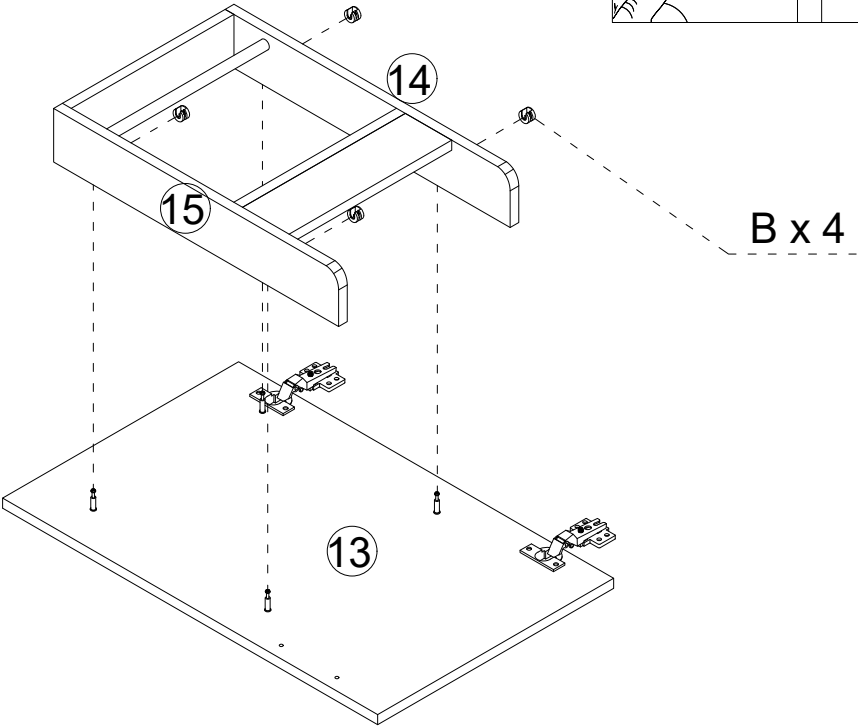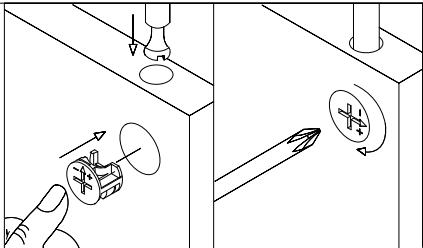




Step 12

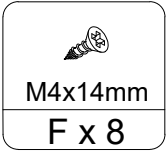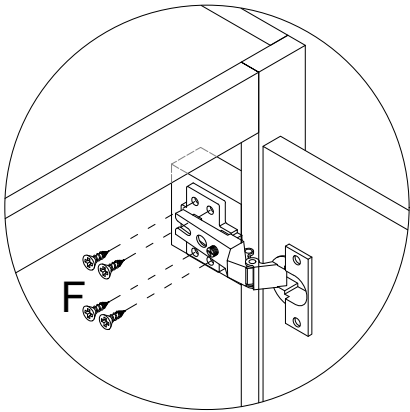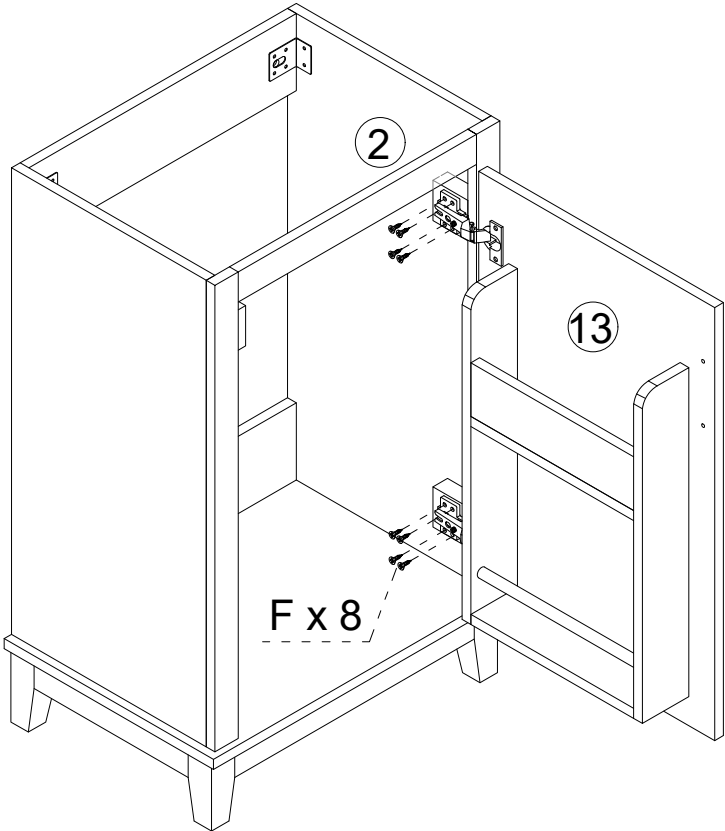


Step 13

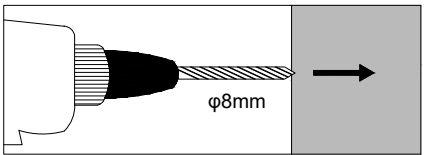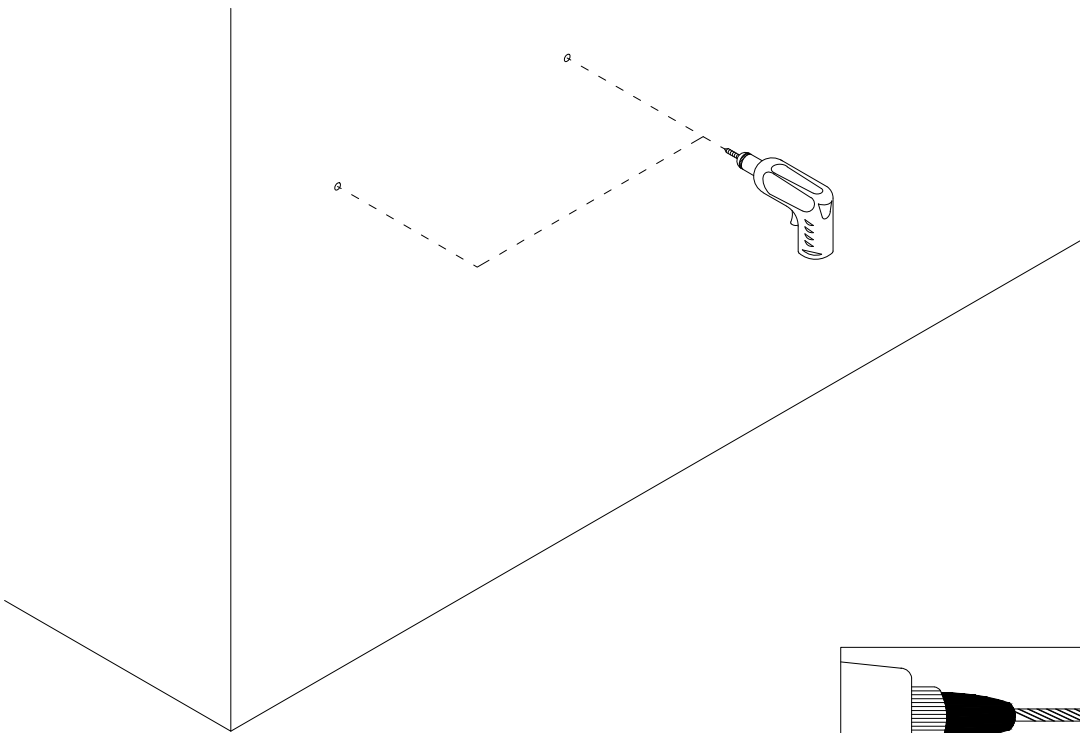

Step 14

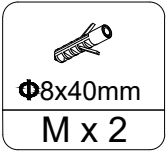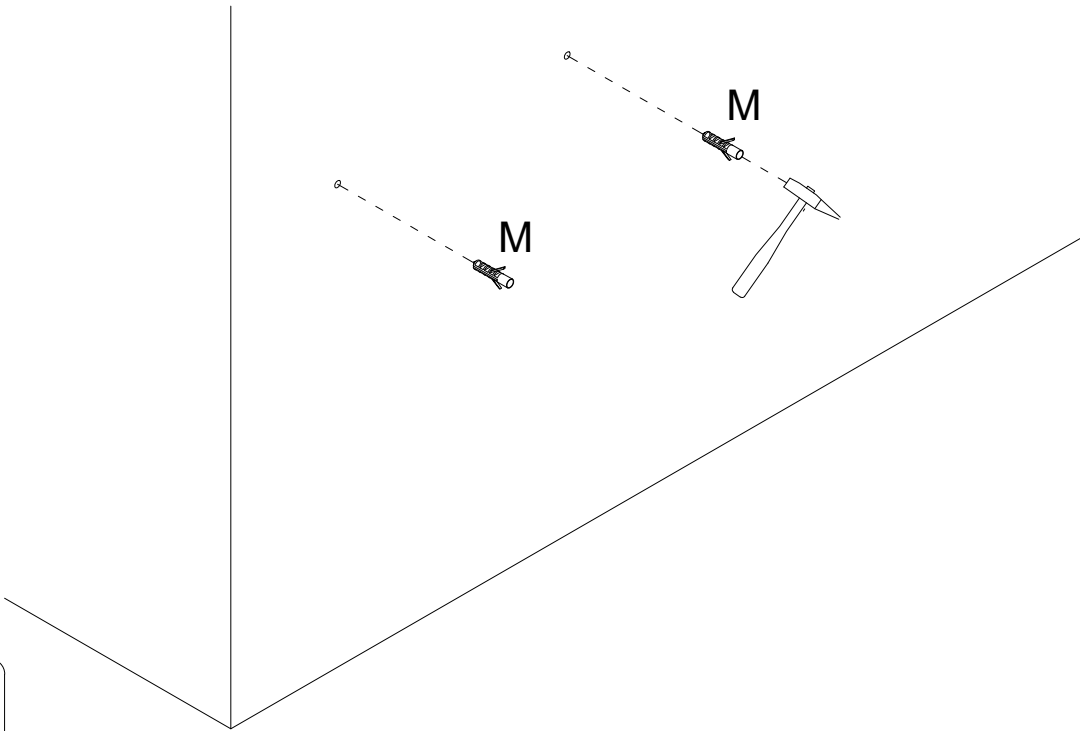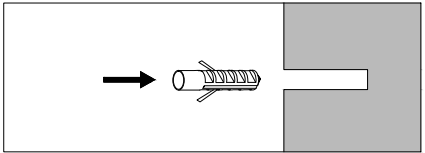


Step 15

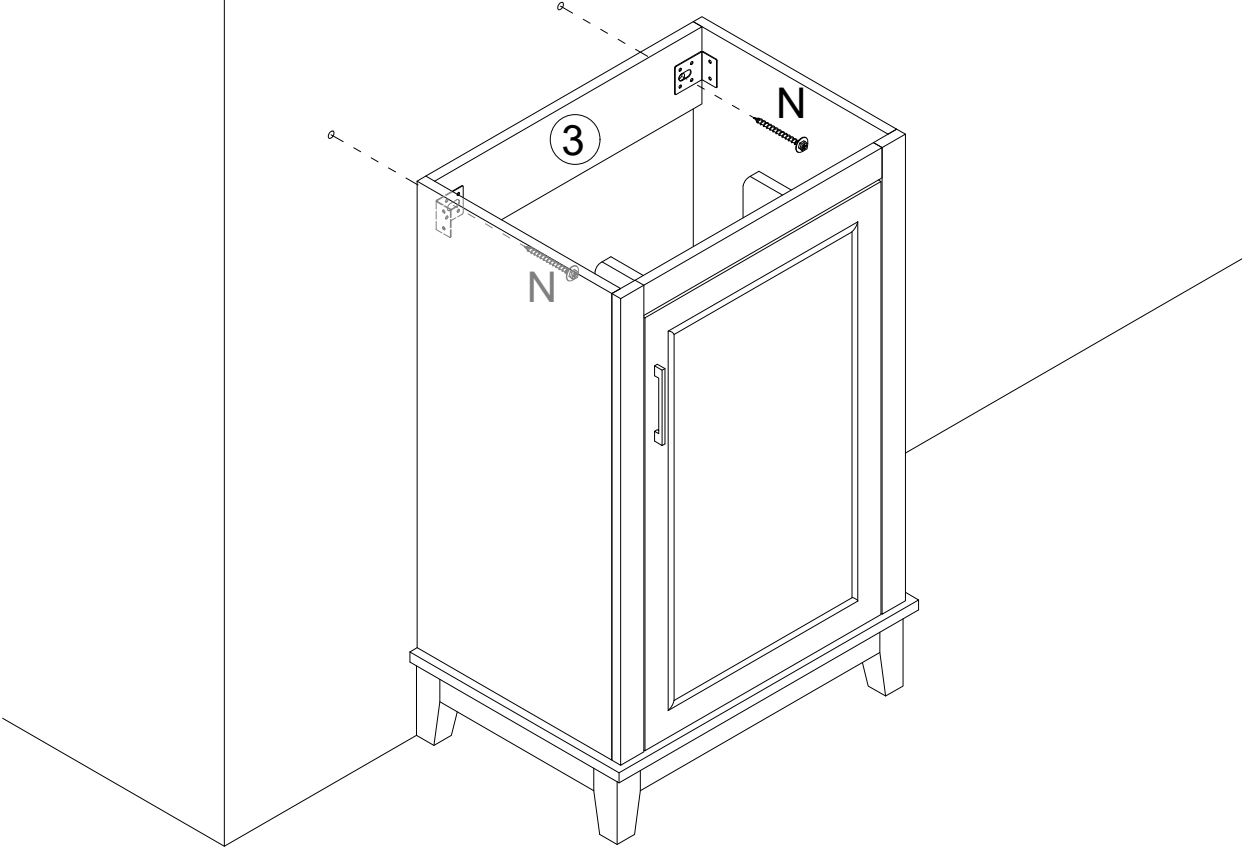



M6x60mm
N x 2

Step 16

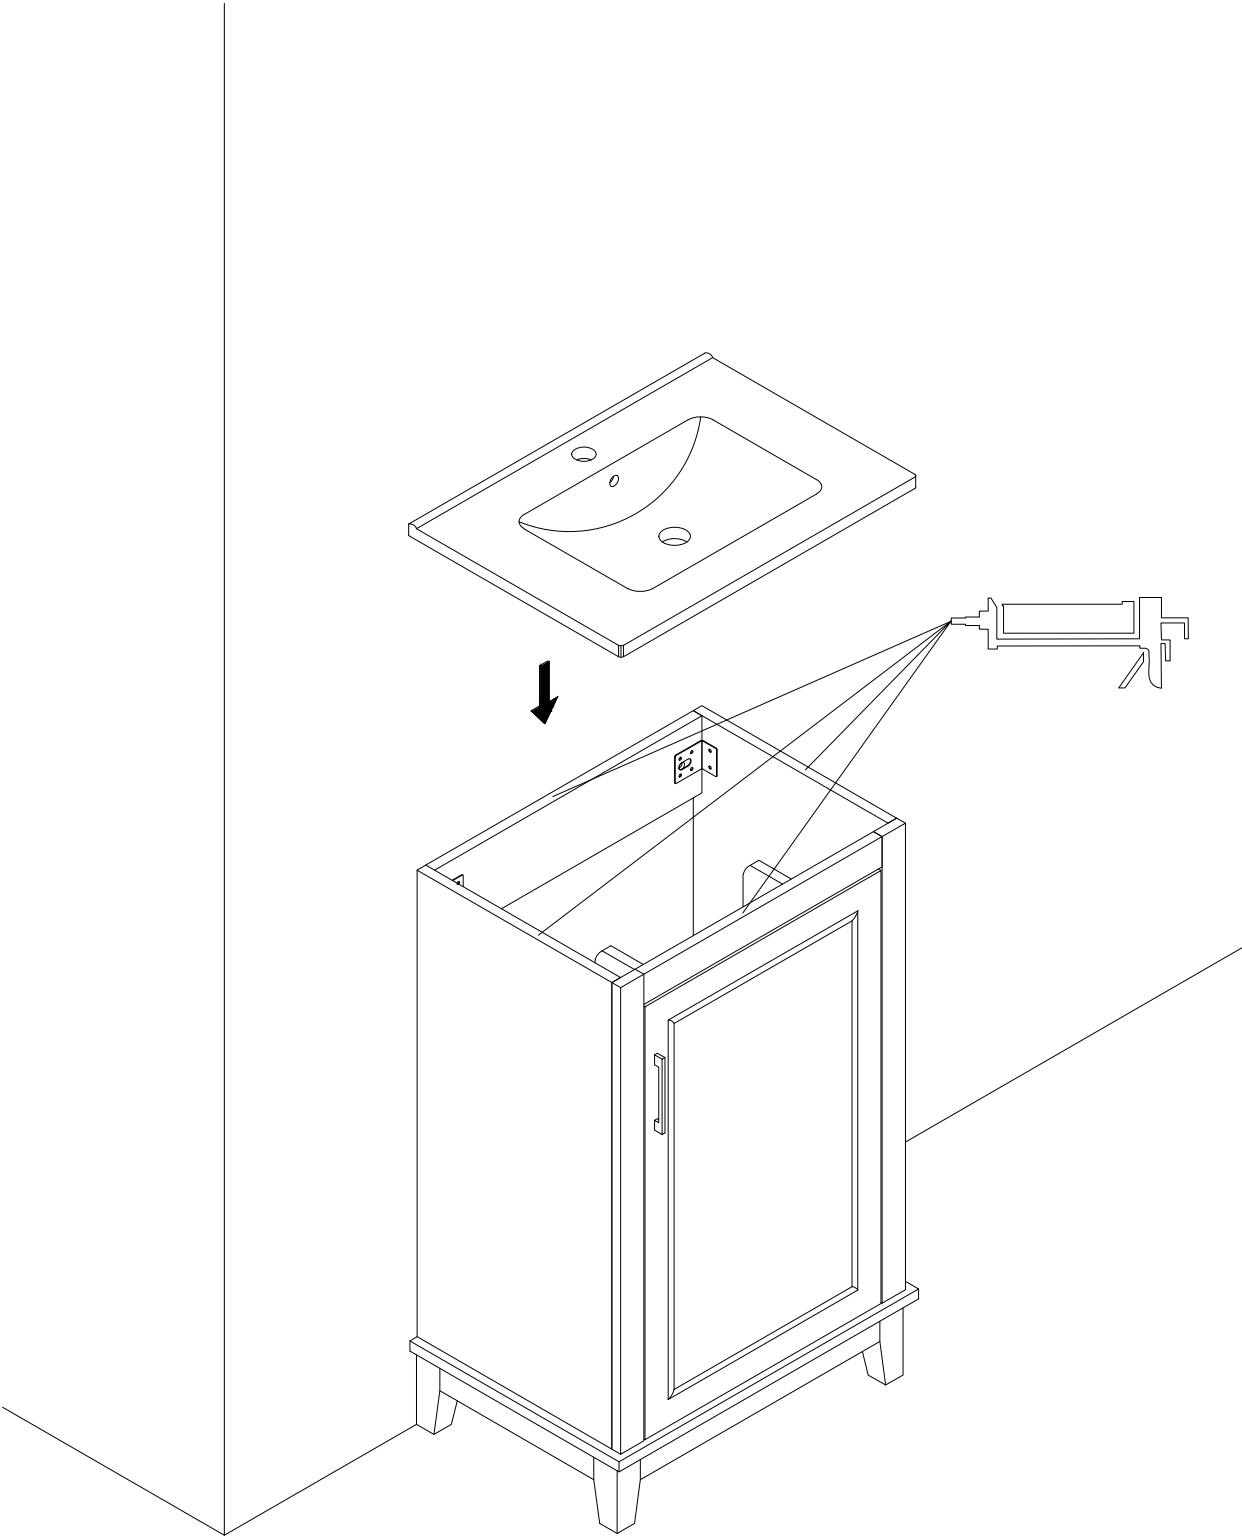

Step 17

