


Model:BF-K-001








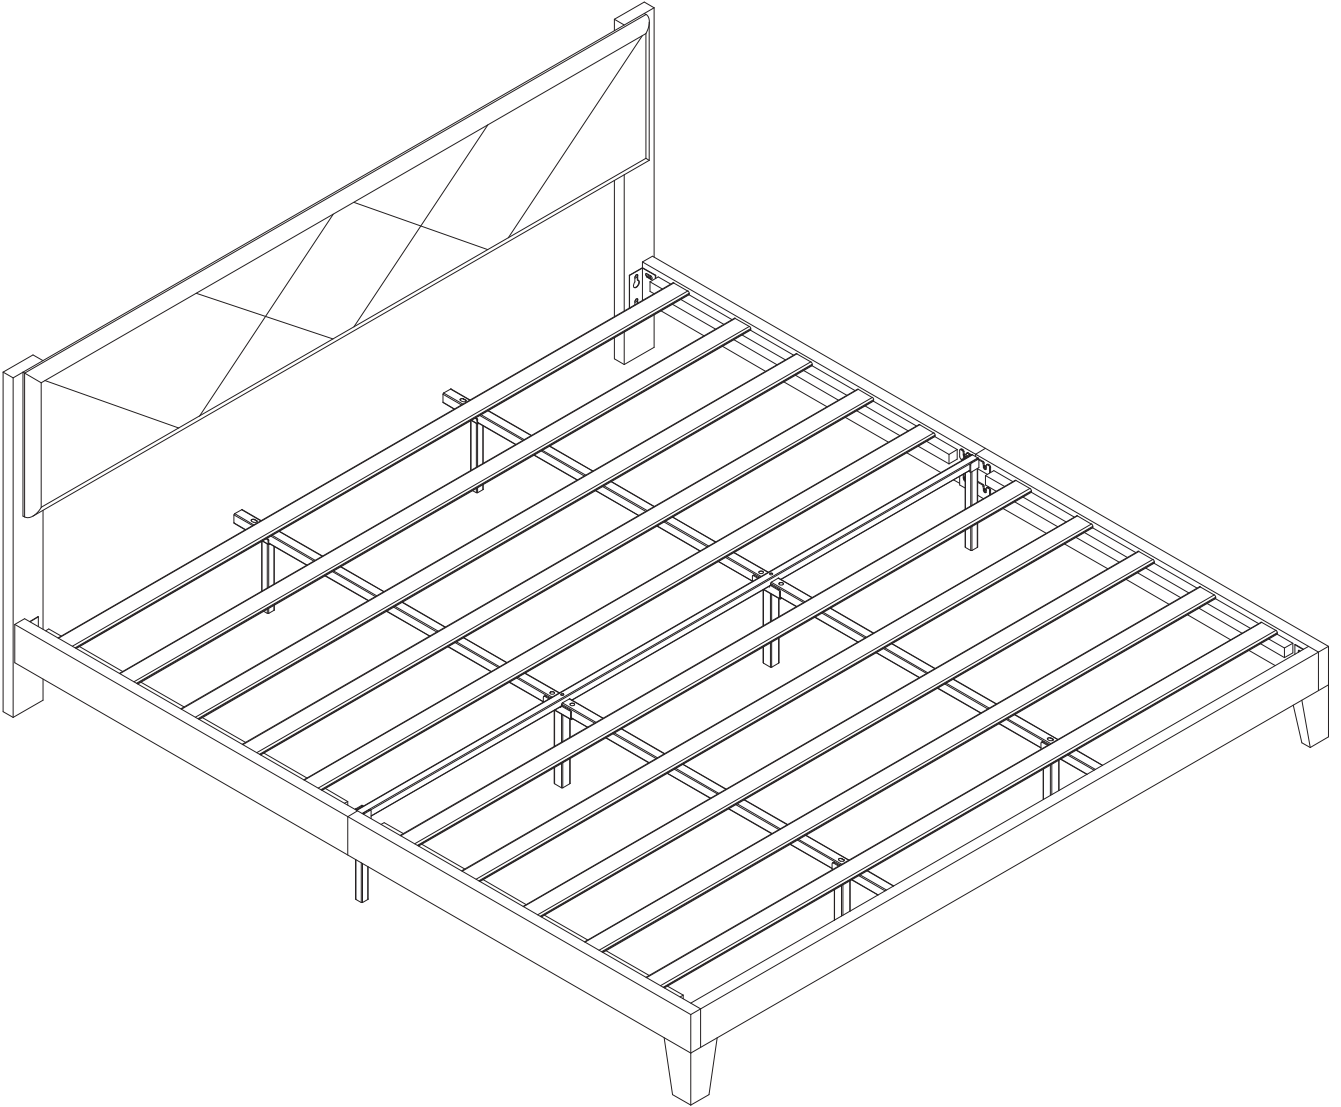


If you have any questions, please contact:

kbunservice@gmail.com















We will help you within 24 hours

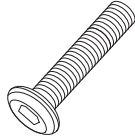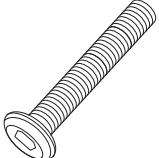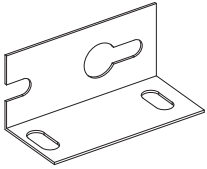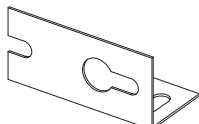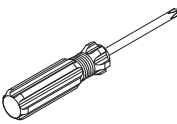


Ⓐ x32  M8*20mm	Ⓑ x8  M8*30mm	Ⓒ x6  M8*40mm
Ⓓ x2  M8*50mm	Ⓔ x10  5*45mm	Ⓕ x2 
Ⓖ x2 	Ⓗ x4 	Ⓘ x1  5mm
Ⓙ x1  Screwdriver		


1 inch=25.4mm

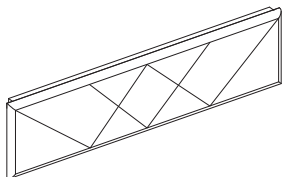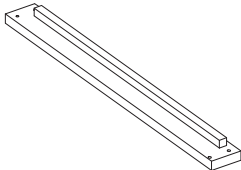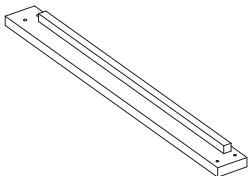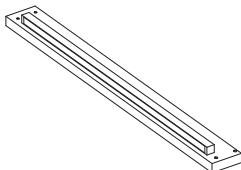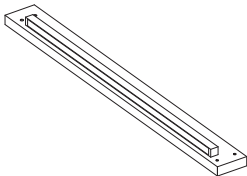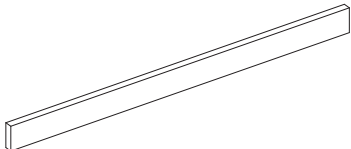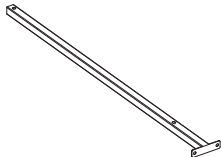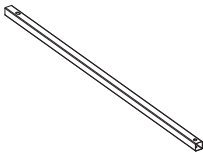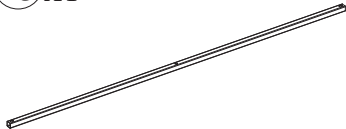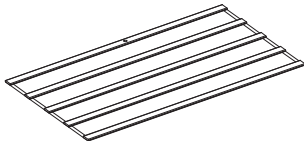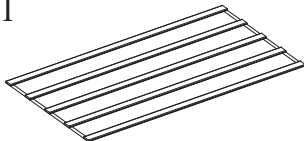

①x1 	②x1 	③x1 
④x1 	⑤x1 	⑥x1 
⑦x1 	⑧x1 	⑨x2 
⑩x2 	⑪x2 	⑫x4 
⑬x2 	⑭x2 	⑮x1 
⑯x1 	⑰x1 	

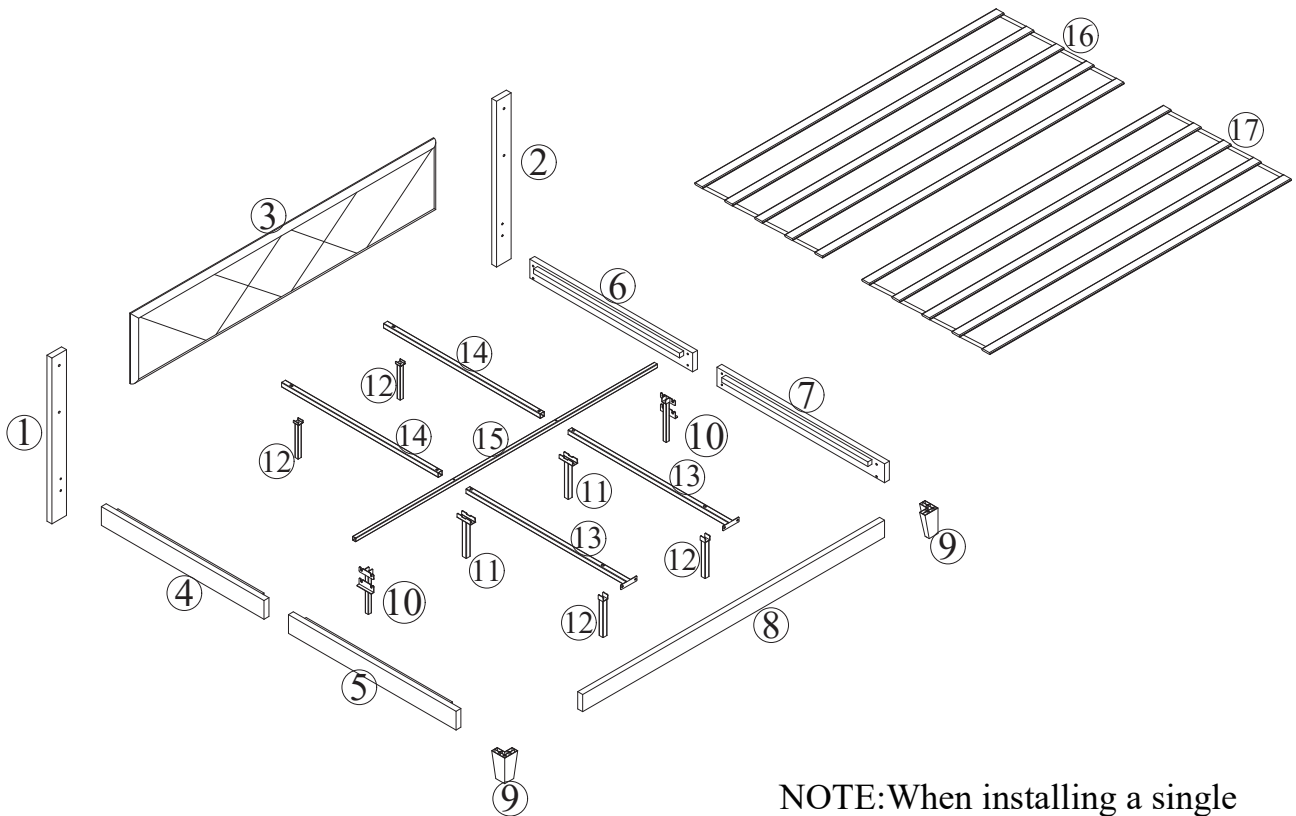


NOTE: When installing a single screw, avoid tightening it too much; tighten each screw individually after all screws are installed.

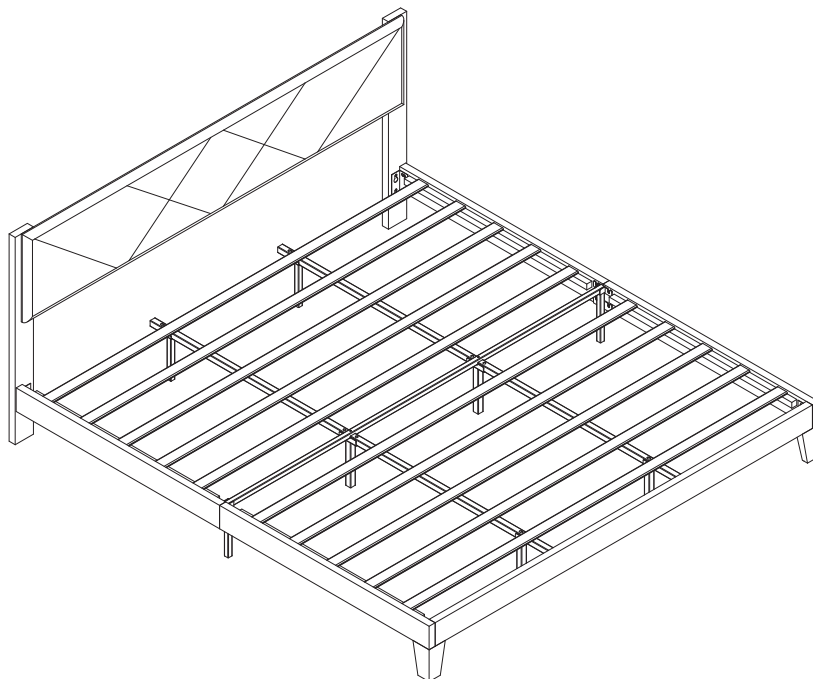



Step 1


Connect Part 1 and Part 2 to Part 3 using Screw C and Washer H.

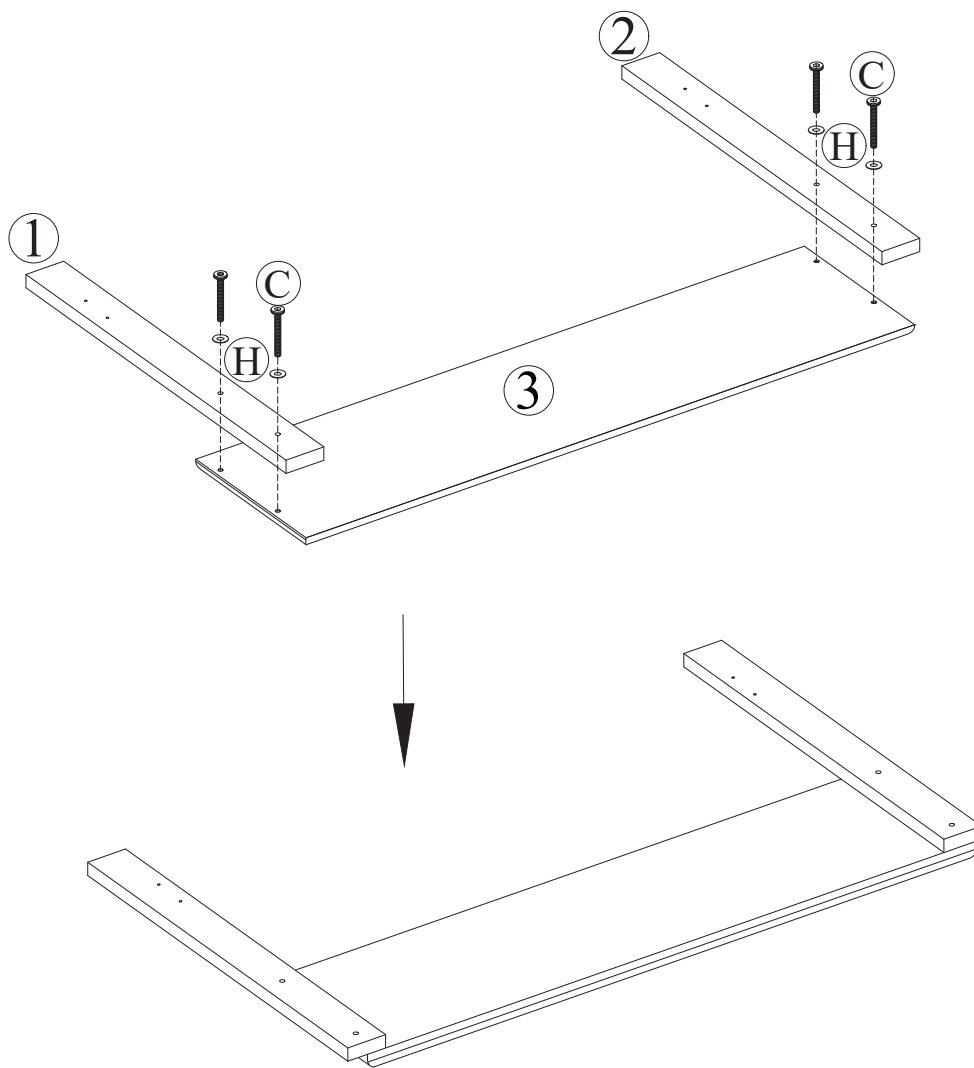

① x1 ② x1 ③ x1 ④ x4 ⑤ x4




Do not fully tighten
the screws yet.



**Step 2**


Secure the Bracket G to Part 4 using Screw A. Insert Screws A into the pre-drilled holes at the opposite end of Part 4.

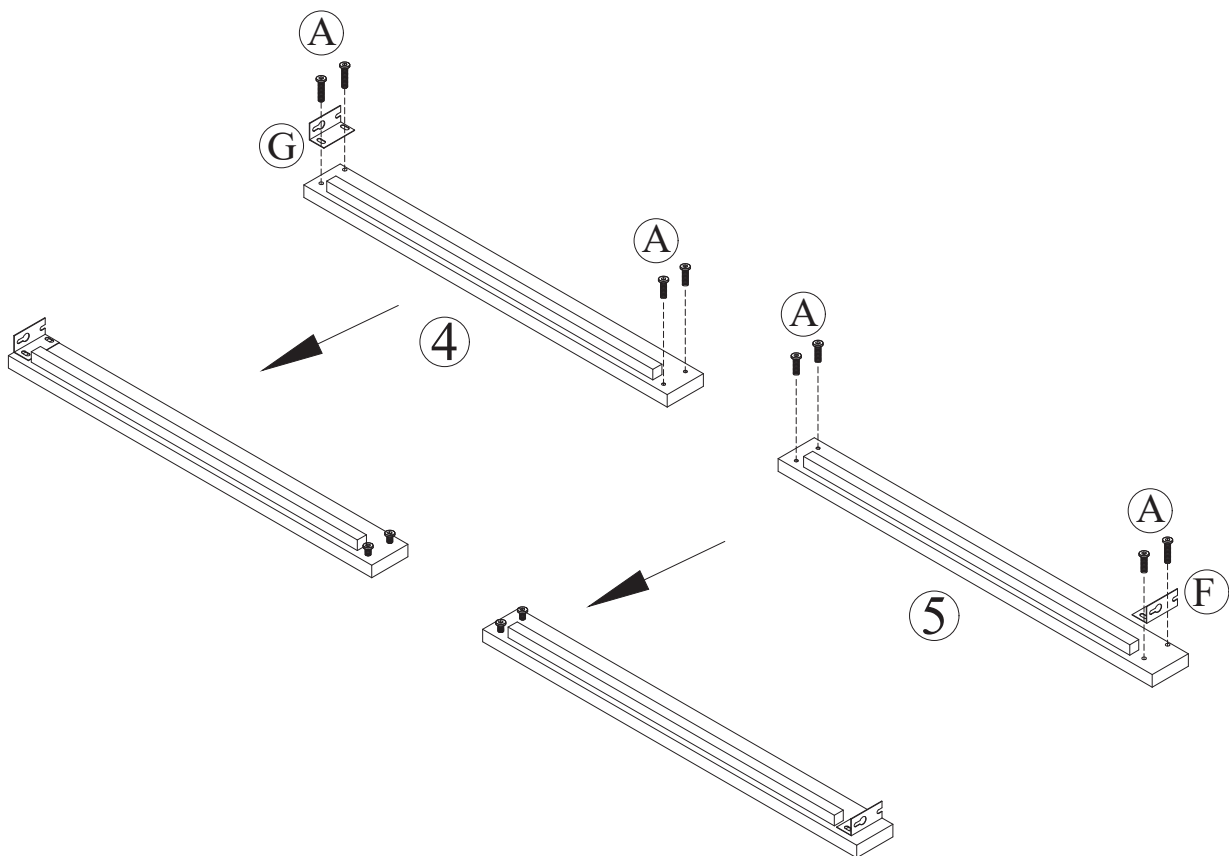

Secure the Bracket F to Part 5 using Screw A. Insert Screws A into the pre-drilled holes at the opposite end of Part 5.

④ x1 ⑤ x1 ⑥ x1 ⑦ x1 ⑧ x8


Do not fully tighten the screws yet.





Step 3


Secure the Bracket F to Part 6 using Screw A. Insert Screws A into the pre-drilled holes at the opposite end of Part 6.

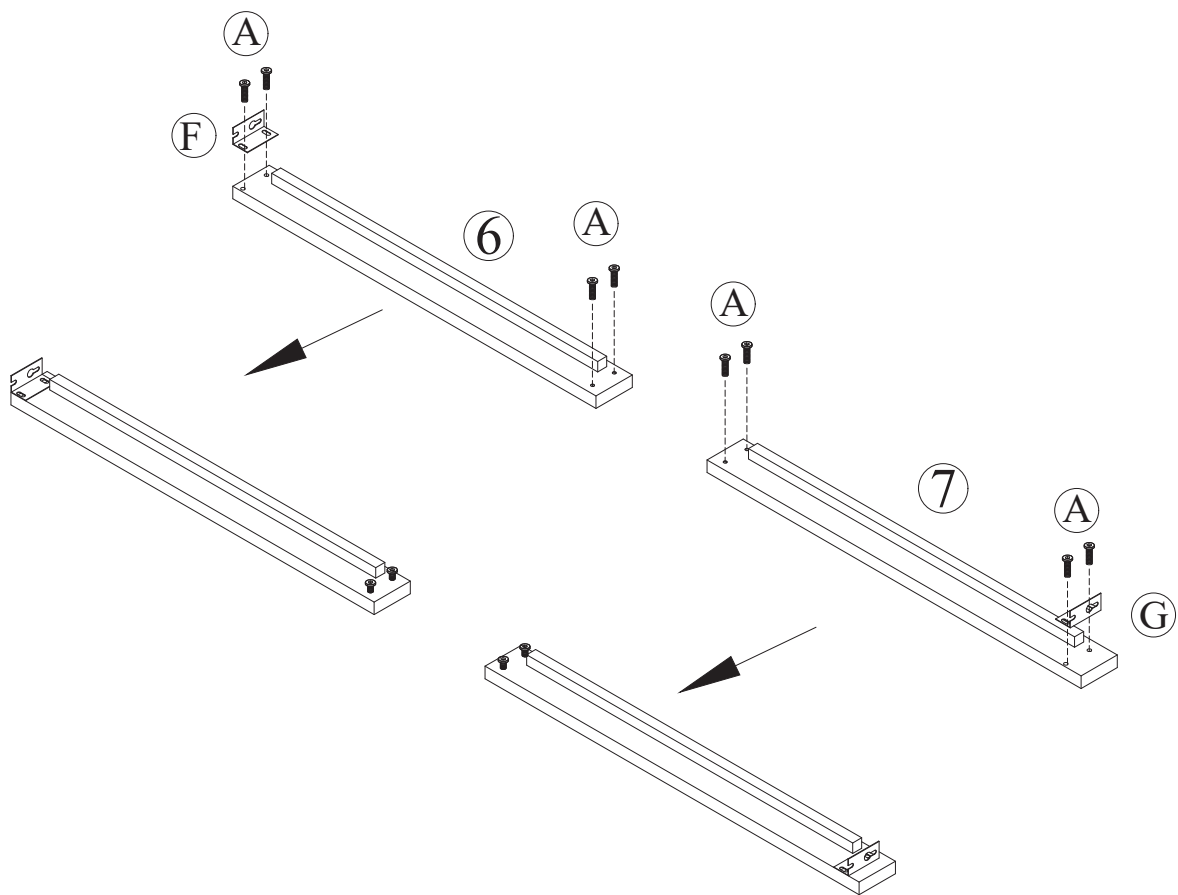

Secure the Bracket G to Part 7 using Screw A. Insert Screws A into the pre-drilled holes at the opposite end of Part 7.


⑥ x1 ⑦ x1 ⑦ x1 ⑧ x1 ⑨ x8

Do not fully tighten the screws yet.






Step 4

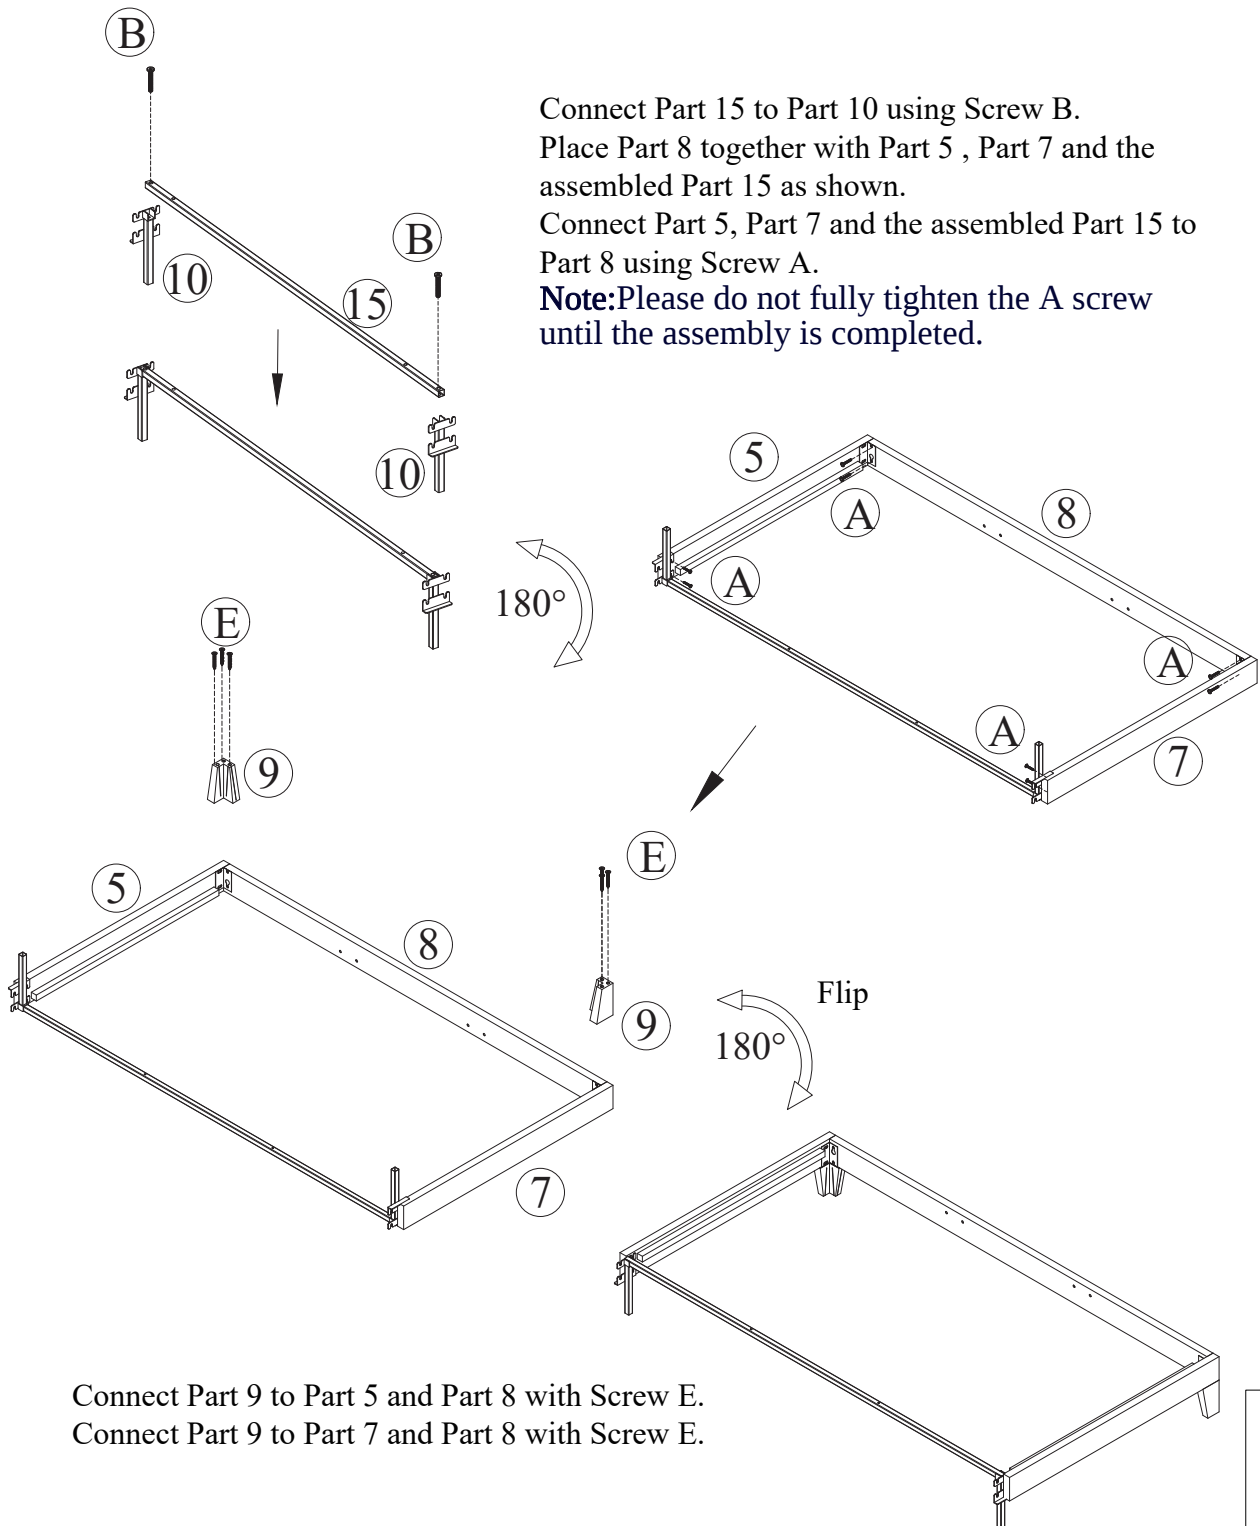


⑩ x2 ⑮ x1 ⑨ x2 ⑧ x1 Ⓐ x8 Ⓑ x2 Ⓔ x6

Do not fully tighten the screws yet.

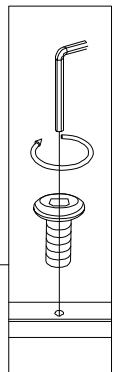




Step 5

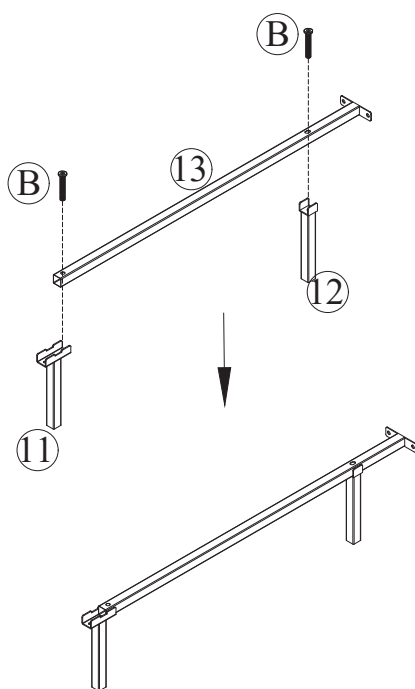

Connect Part 11 and Part 12 to Part 13 using Screw B.
Repeat this step twice.


x2

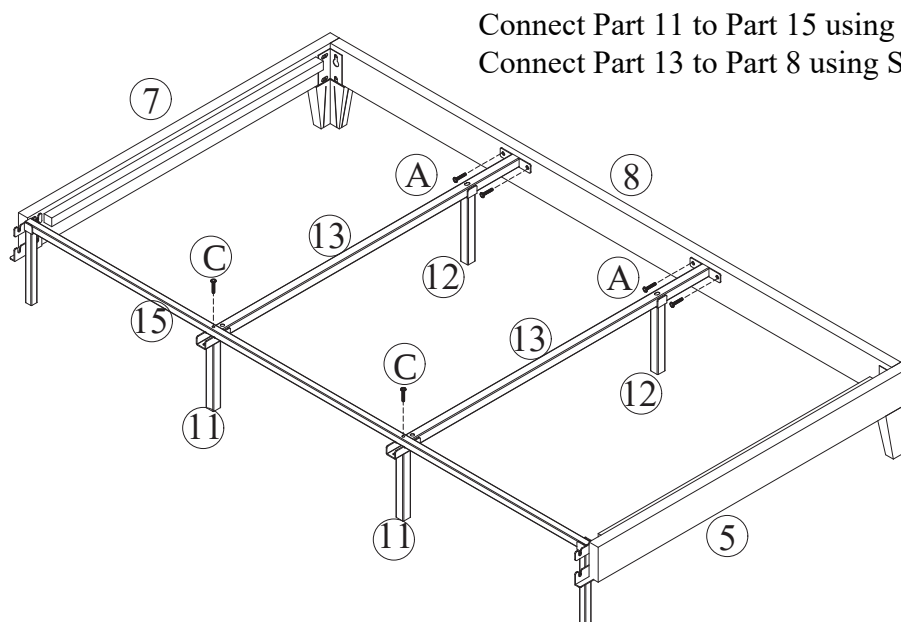

Connect Part 11 to Part 15 using Screw C.
Connect Part 13 to Part 8 using Screw A.


⑪ x2 ⑫ x2 ⑬ x2 ① x4 ② x4 ③ x2

Do not fully tighten
the screws yet.






Step 6

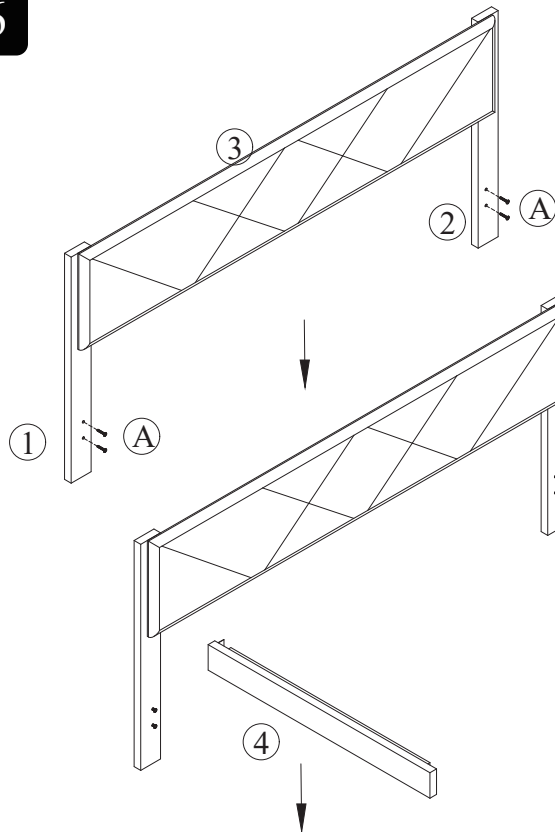


Place Screw A into the pre-drilled holes on Part 1 and Part 2. Do not fully tighten the screws at this stage.

Hang Part 4 onto Part 1 and Part 10.

Hang Part 6 onto Part 2 and Part 10.

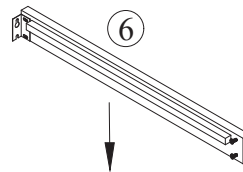


Connect Part 14 to Part 11 using Screw B.
Note: Do not secure Part 12 and Part 14 with screws yet. They will be fixed together with Part 16 in step 8.

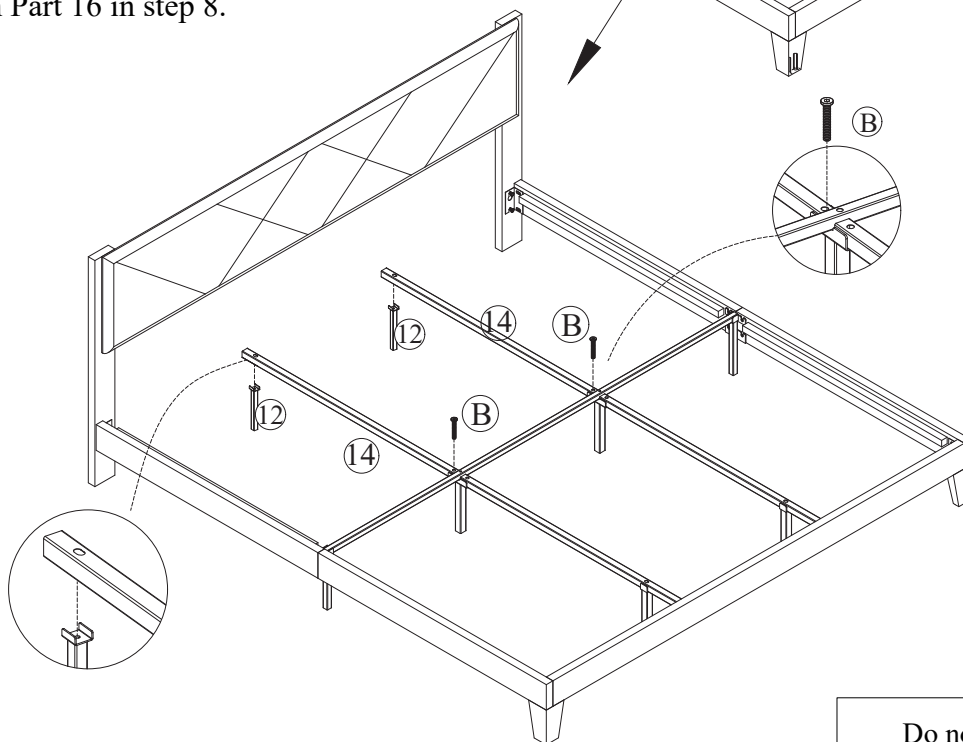

A x4 B x2 4 x1 6 x1 12 x2 14 x2


Do not fully tighten the screws yet.

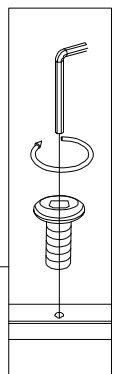



Step 7


Connect Part 1 and Part 2 to Part 4 and Part 6 using Screw E.

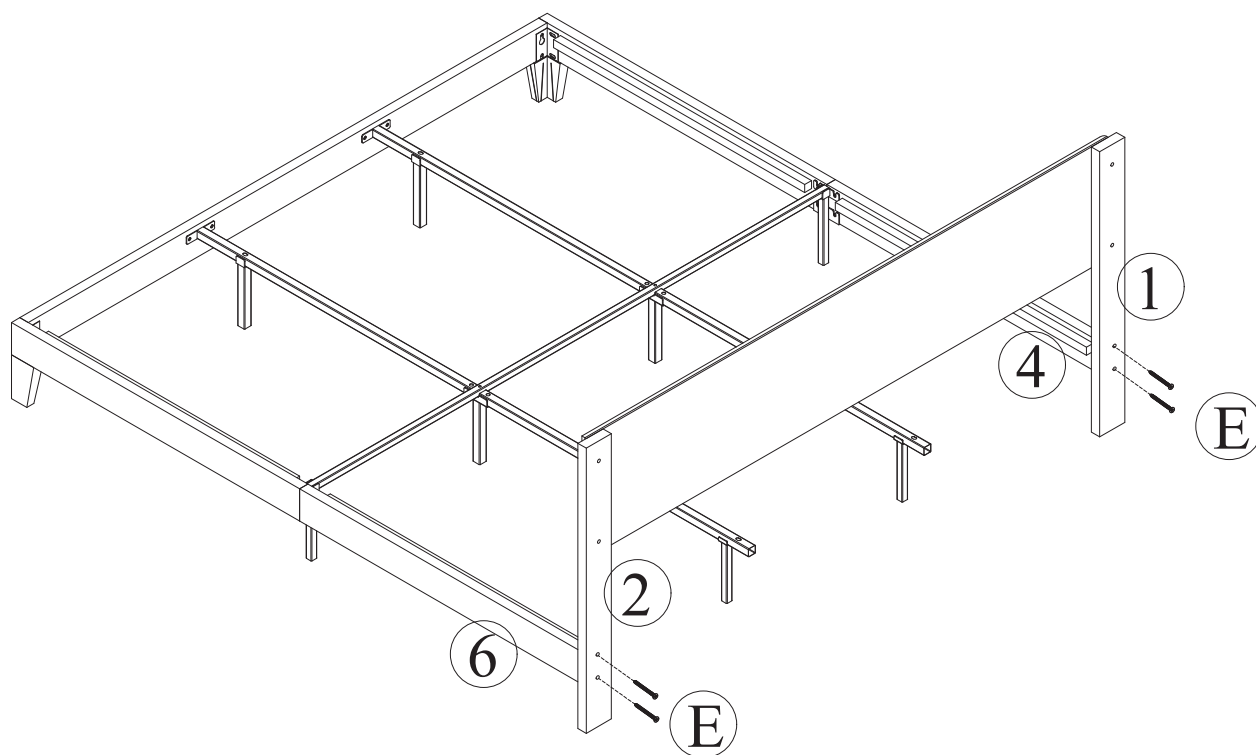

(E) x4




Do not fully tighten
the screws yet.





Step 8

Unfold Part 16 and Part 17, and put them as shown in the diagram.

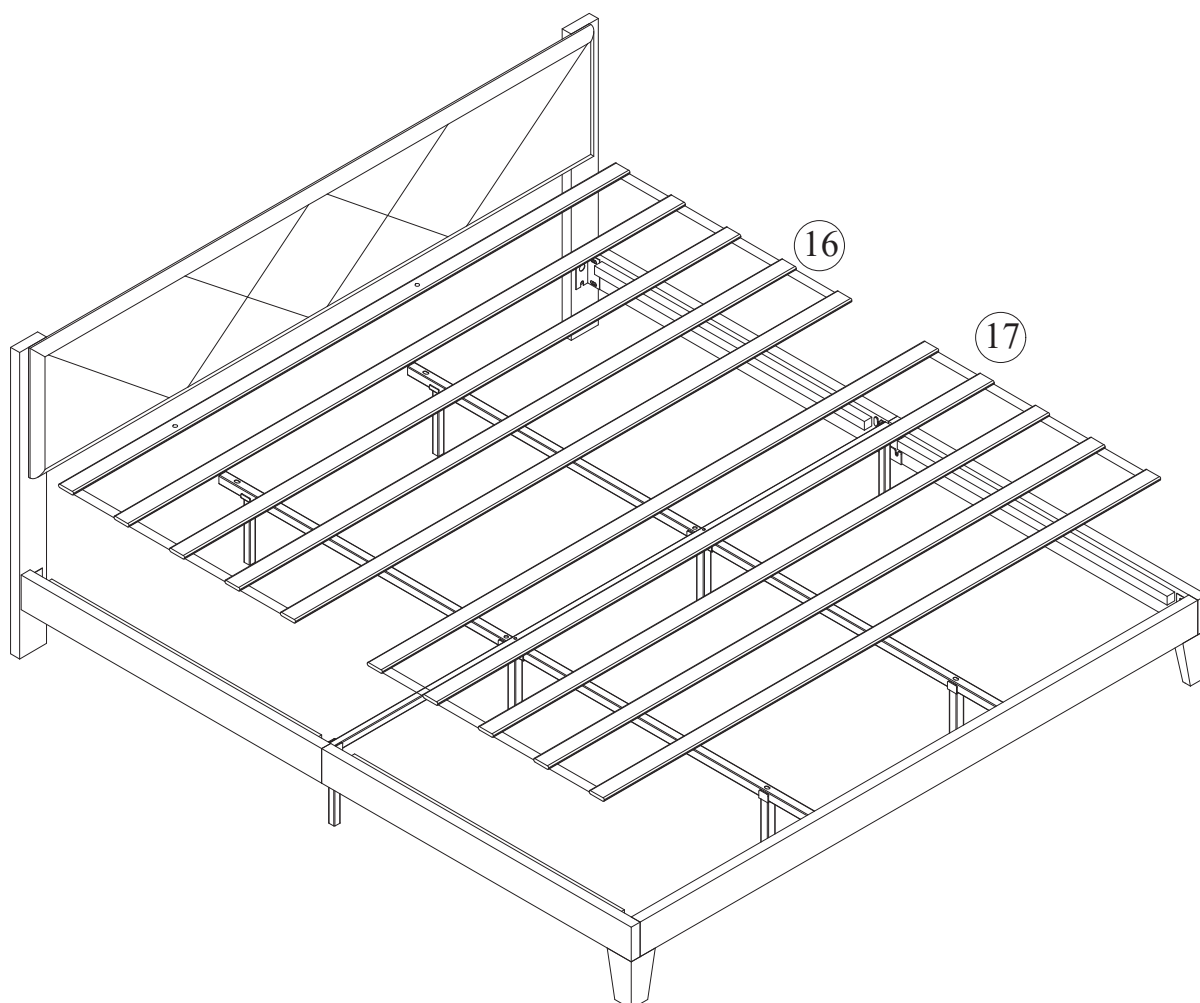


①⑥ x1 ①⑦ x1



Step 9


Insert Screw D through Part 16 to connect it with Part 12 and Part 14.

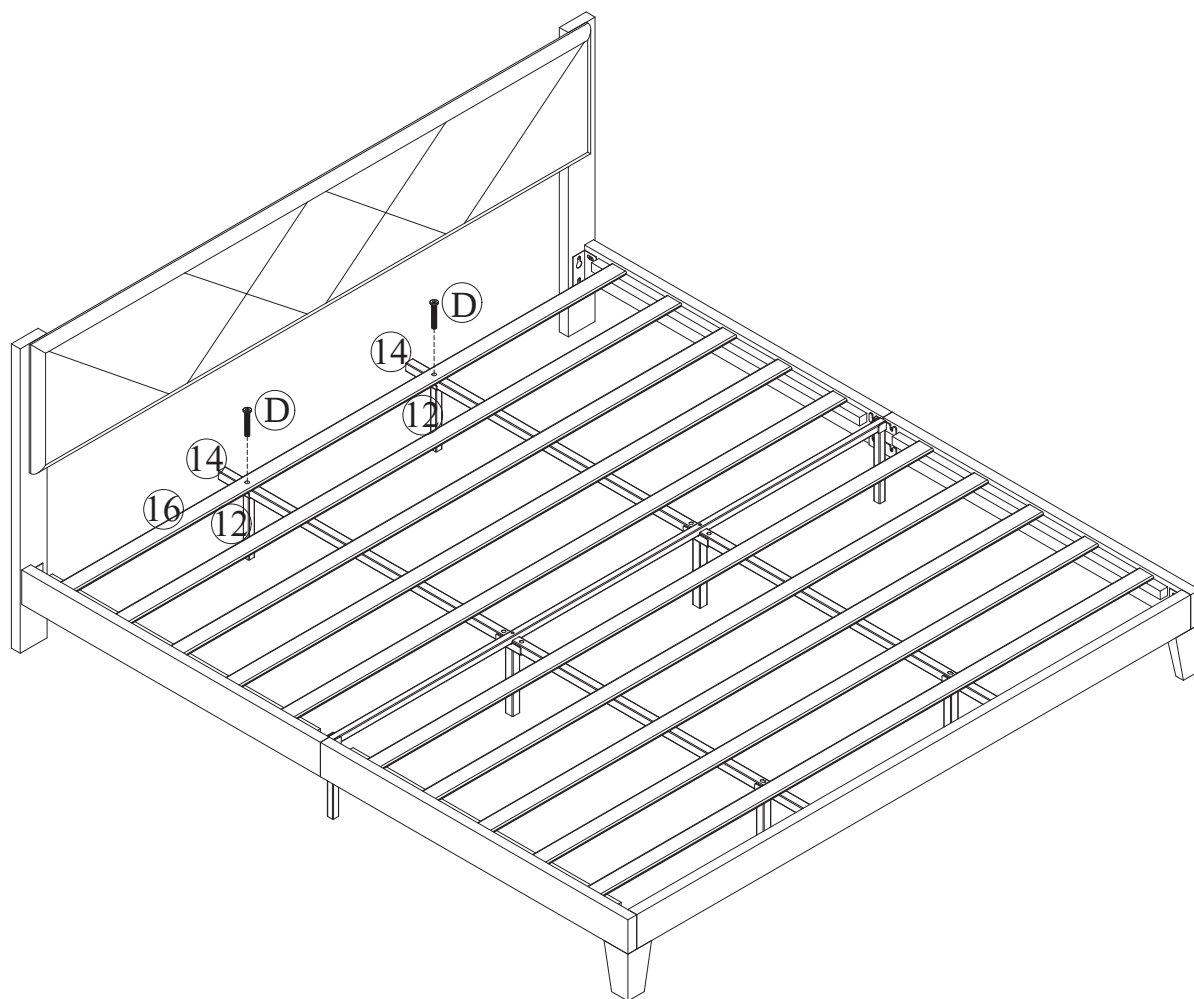


D x2



Fully tighten all
the screws.



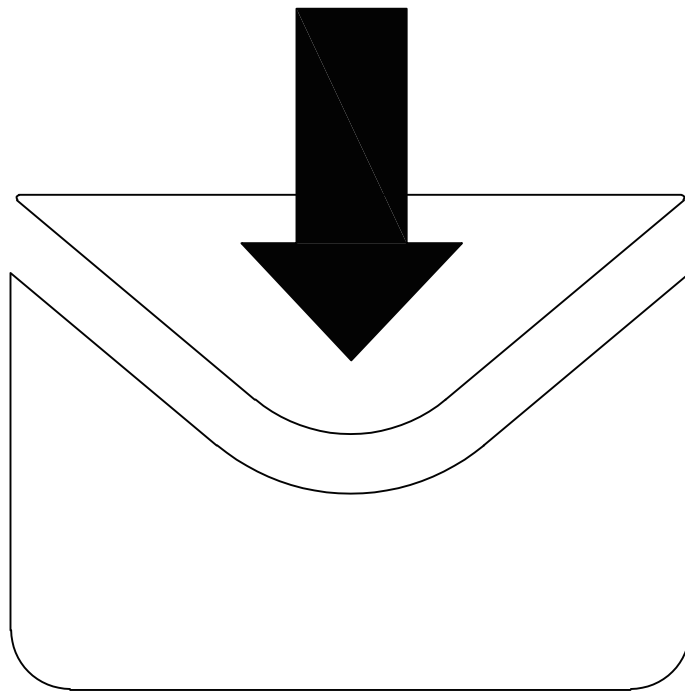

We' d Love to hear from you!

Thank you for your purchase of our product !

If you encounter any problems, please give us an opportunity to improve your experience right away, our team members are more than happy to help.

please provide your order number when contacting us

Email: kbunservice@gmail.com

We also welcome you to post a product review so that others could benefit from your experience.

Thanks again for your support, feedback and time.