
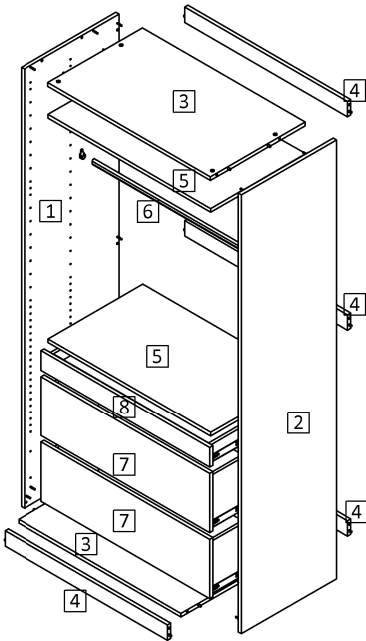


ASSEMBLY INSTRUCTIONS:


- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
- 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
- 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
- 4- DO NOT USE ABRASIVES SOLUTIONS;

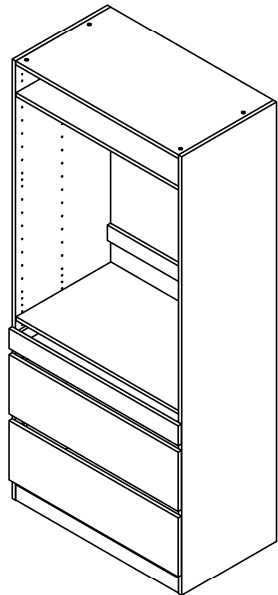

ASSEMBLY INSTRUCTIONS
BOX 02


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	2	SHELVES
6	1	RODS
7	2	LARGE DRAWER
8	1	SMALL DRAWER






CABINET HARDWARES	16	16	16
			
	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

CABINET ASSEMBLY

STEP 01
PREPARATION OF THE SIDE PANELS

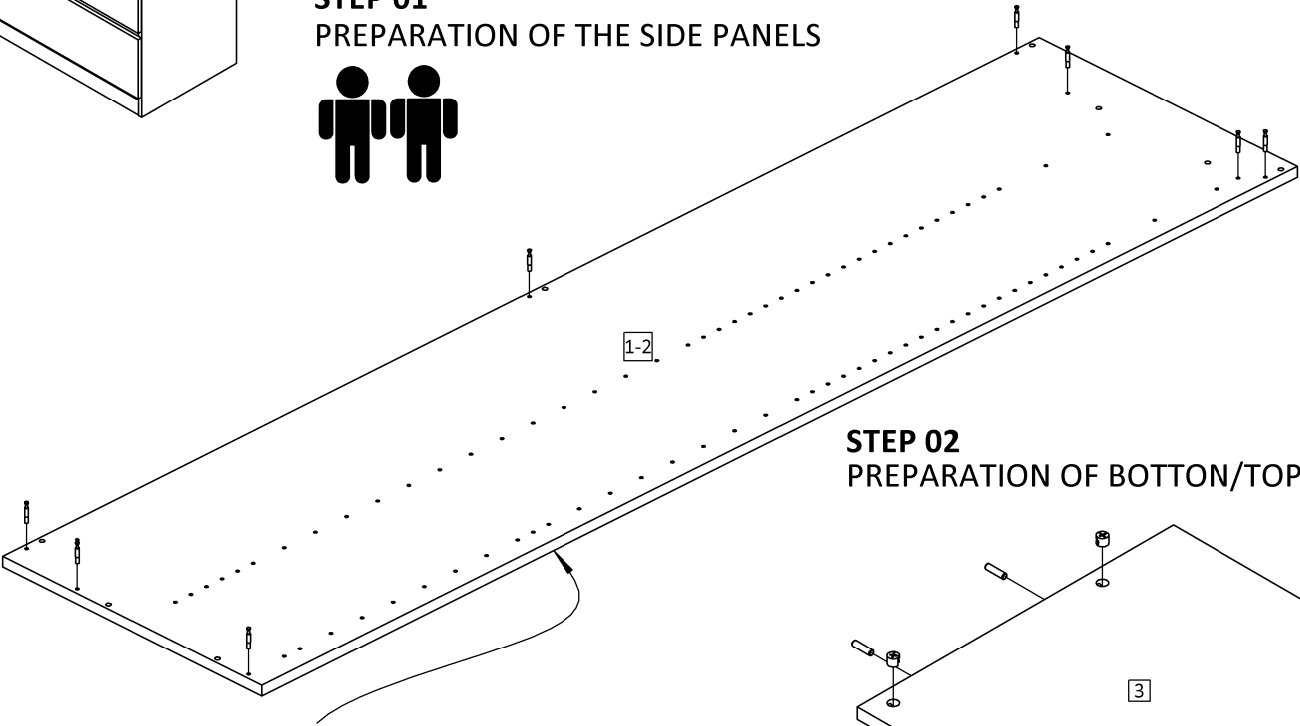

STEP 02
PREPARATION OF BOTTOM/TOP PANELS

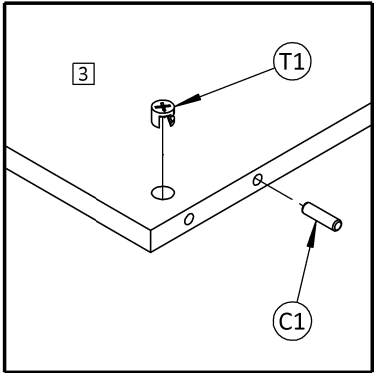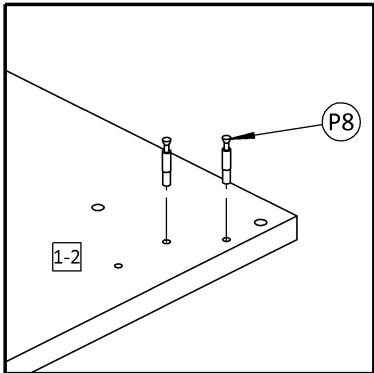
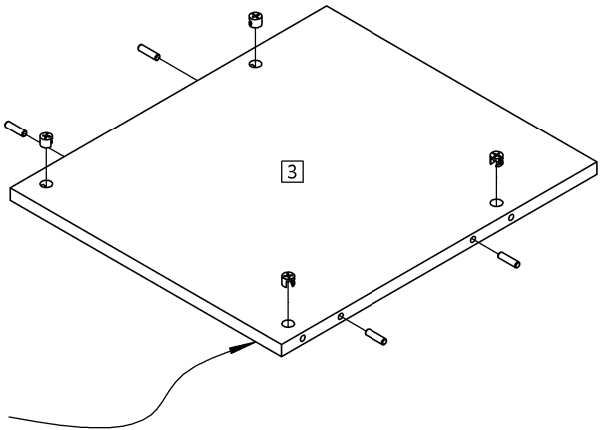


**ASSEMBLY INSTRUCTIONS**



BOX 02

STEP 03

PREPARATION OF THE FRAMES

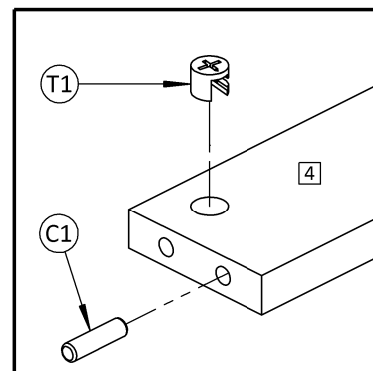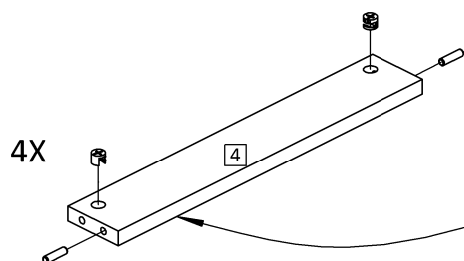**STEP 04**

LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

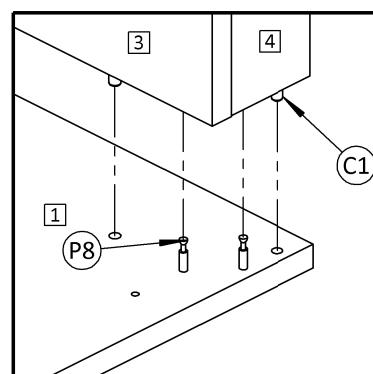
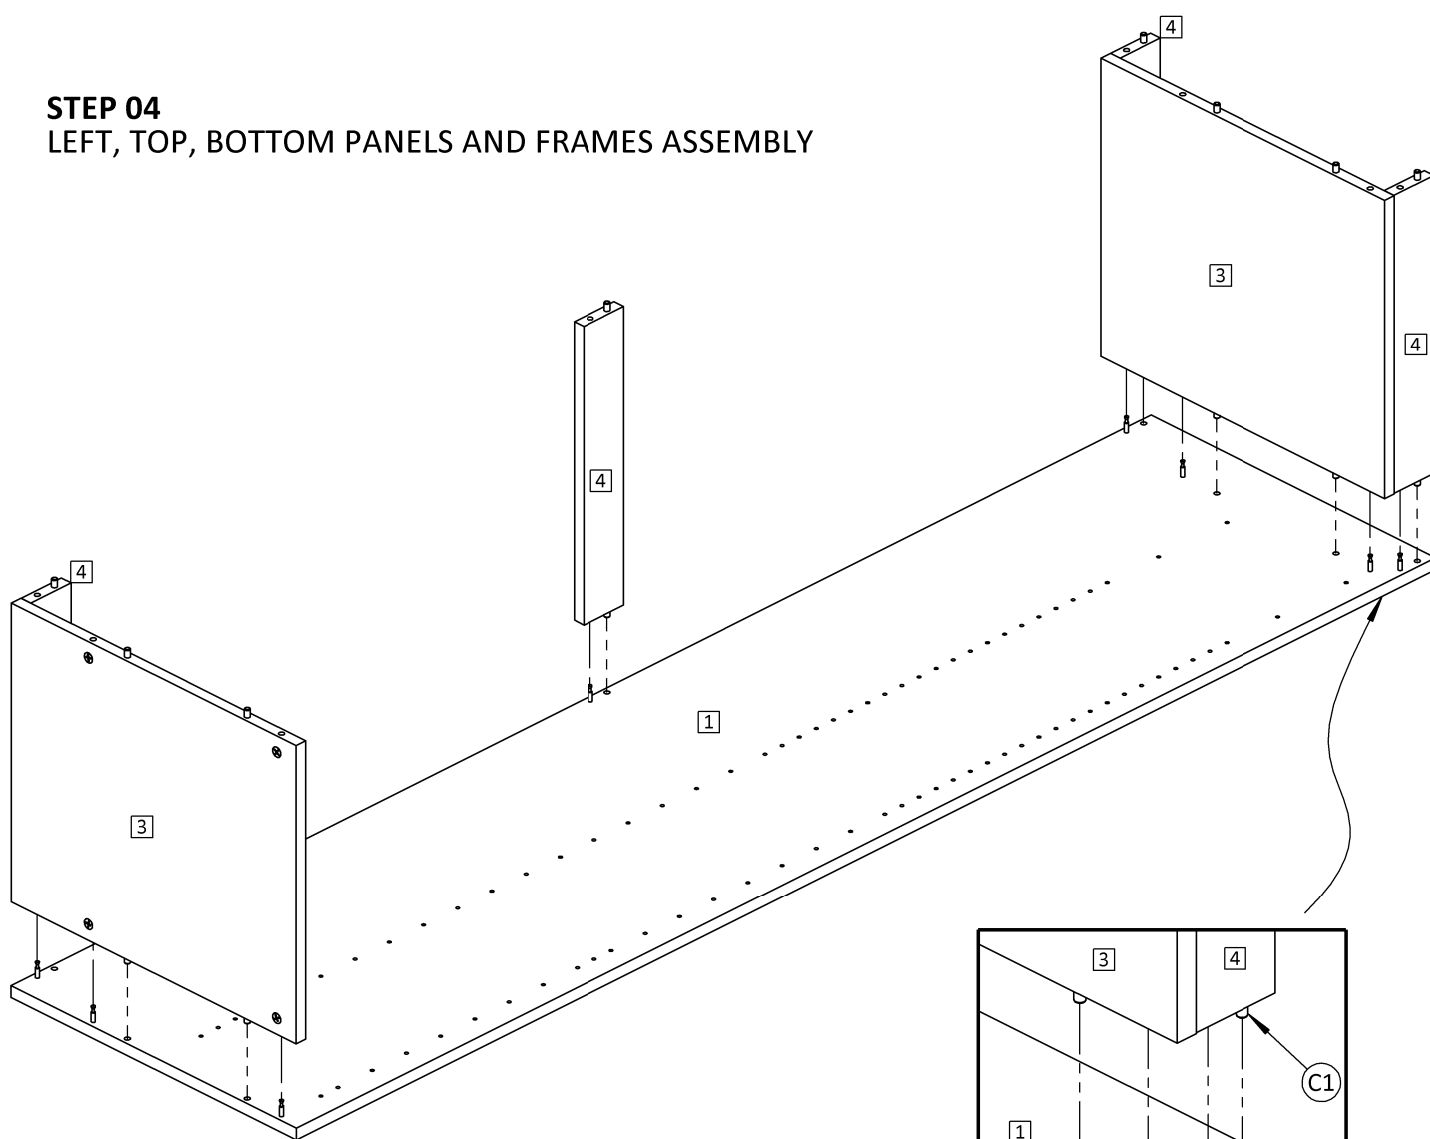


ASSEMBLY INSTRUCTIONS

BOX 02


STEP 05

RIGHT SIDE PANEL ASSEMBLY

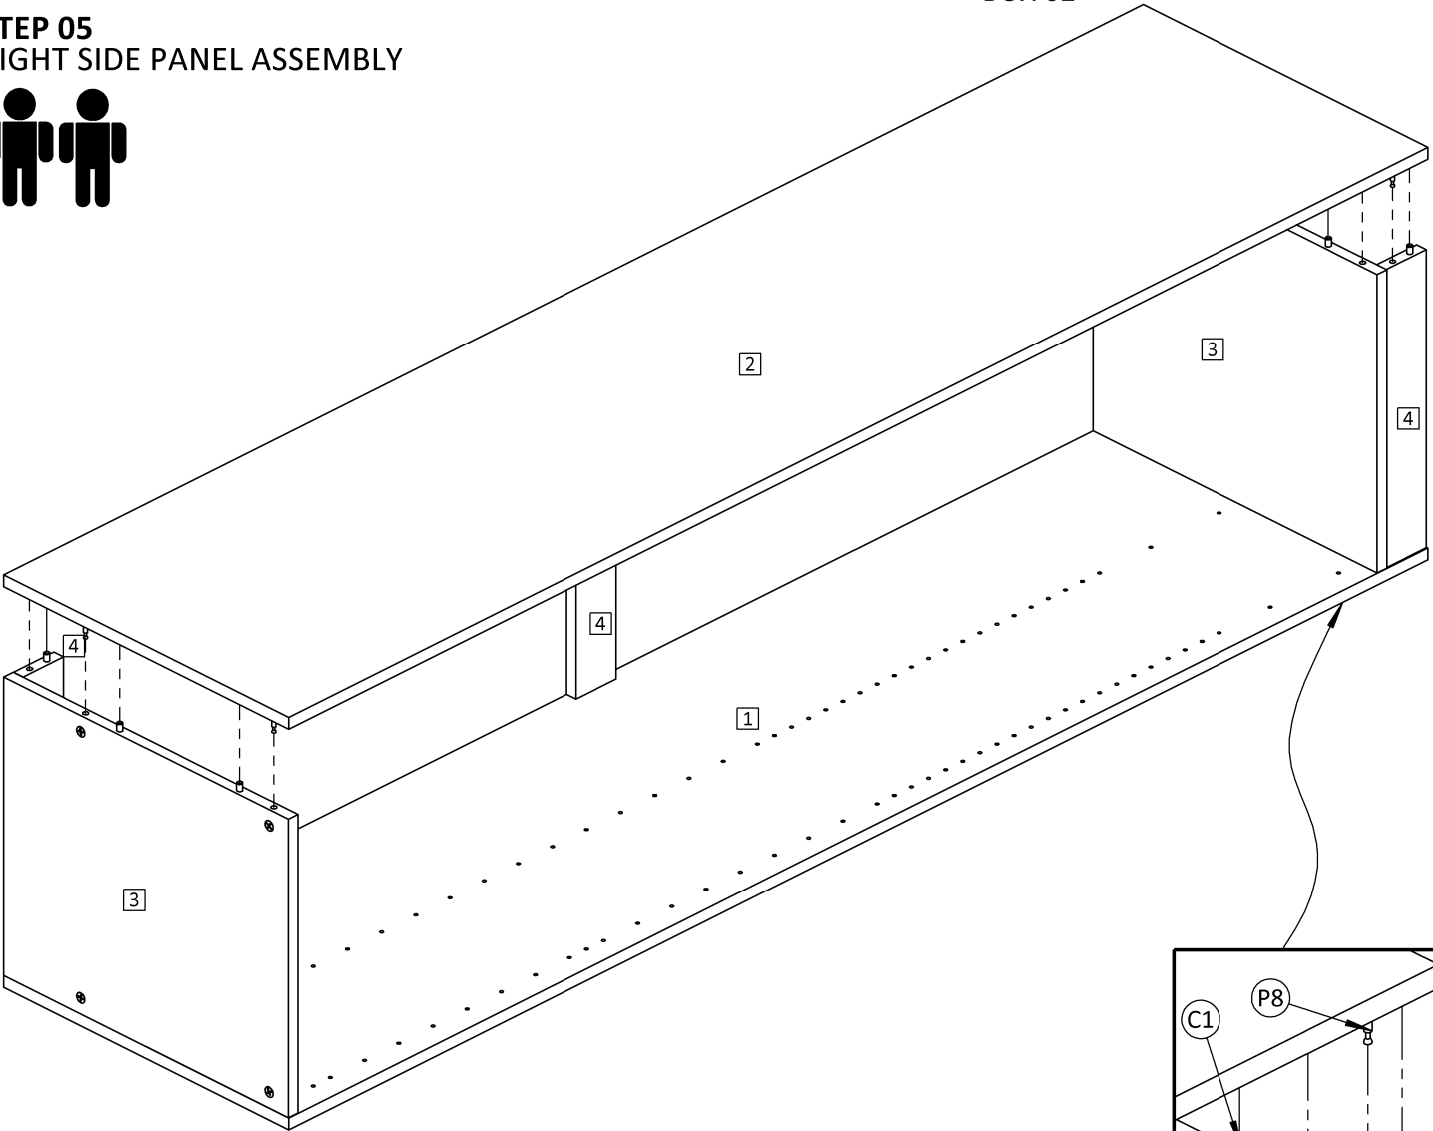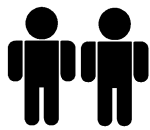

DRAWERS ASSEMBLY


PART NUMBER 7 - LOW DRAWER

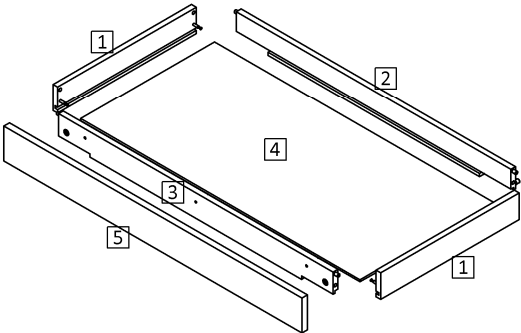

DRAWERS HARDWARES	18	06	12	12	24
					
	SCREW 9/64 X 1 1/4	SLIDER PIN	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

STEP 06


PREPARATION OF DRAWER SIDE PANNELS

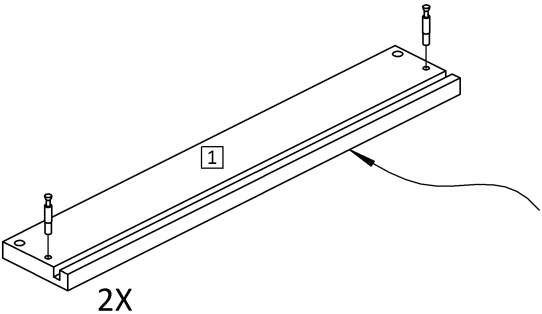

PART LIST		
PART NUMBER	QTY	DESCRIPTION:
1	2	DRAWER SIDE PANEL
2	1	DRAWER BACK PANEL
3	1	DRAWER INSIDE FRONT
4	1	DRAWER BOTTOM PANEL
5	1	DRAWER FRONT

**STEP 07**


PREPARATION OF DRAWER BACK PANNEL
AND DRAWER INSIDE FRONT

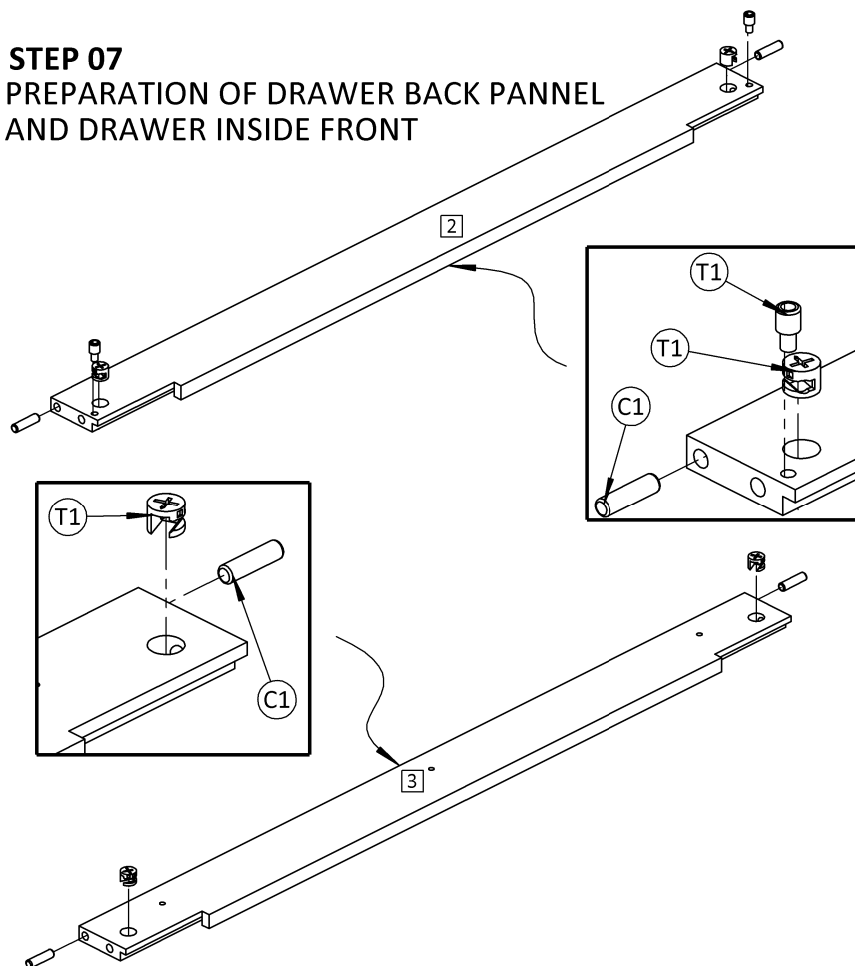**ASSEMBLY INSTRUCTIONS**


BOX 02

STEP 08




DRAWER ASSEMBLY

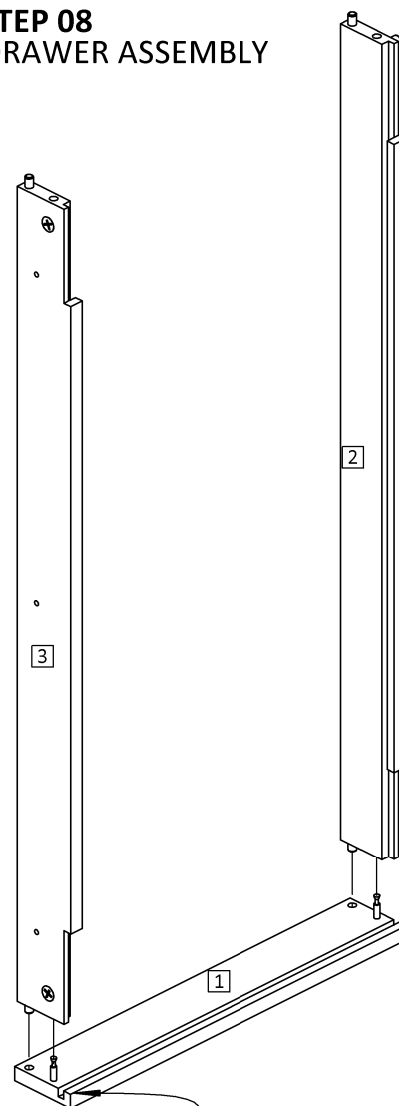**STEP 09**

BACK PANNEL
ASSEMBLY

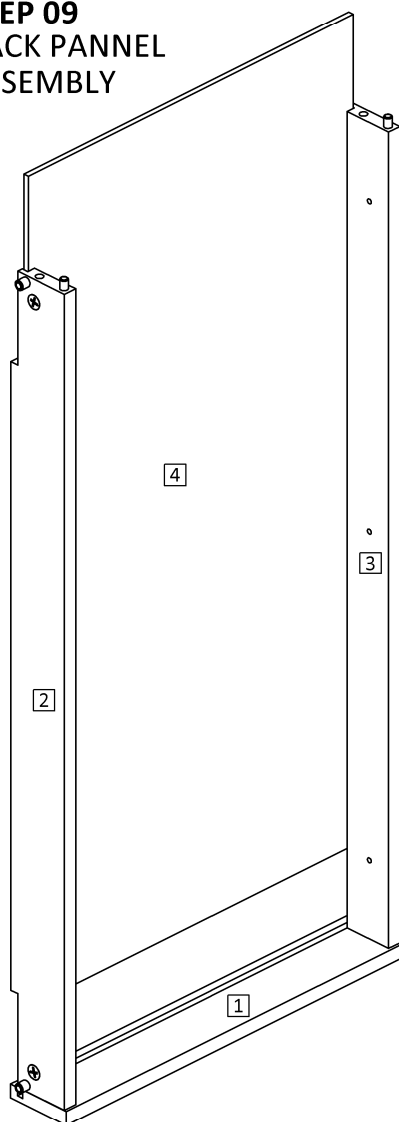**STEP 10**

RIGHT SIDE PANNEL
ASSEMBLY

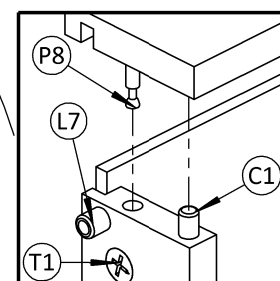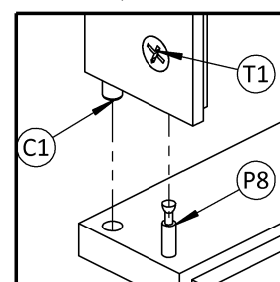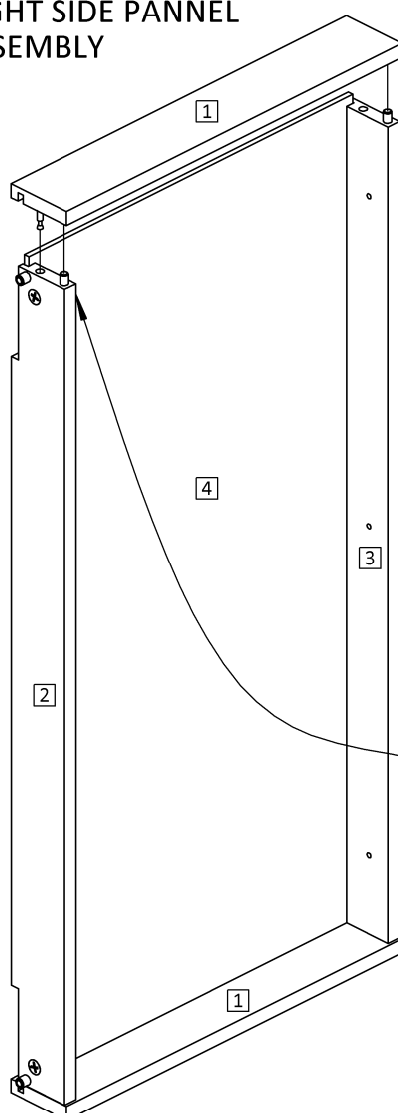




STEP 11



ASSEMBLING FRONT POSITION

DRAWER BACK VIEW

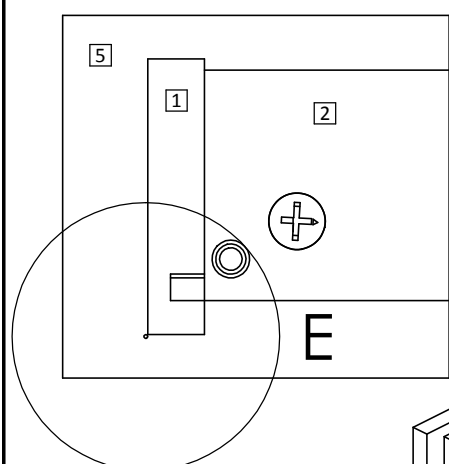


STEP 12


DRAWER FRONT ASSEMBLY

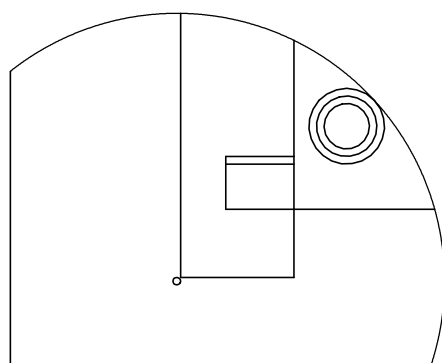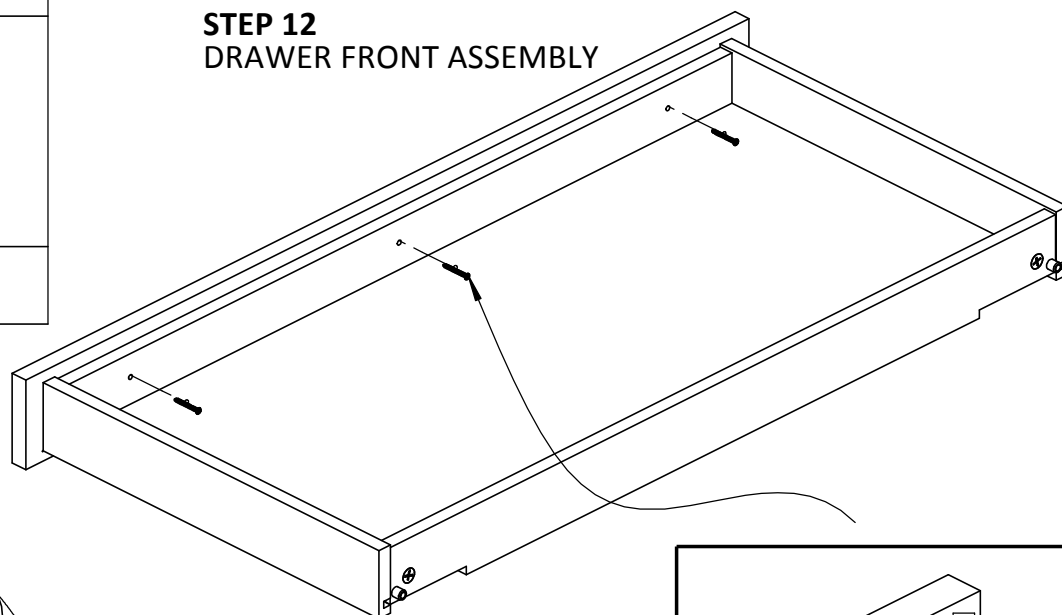

DETALHE E

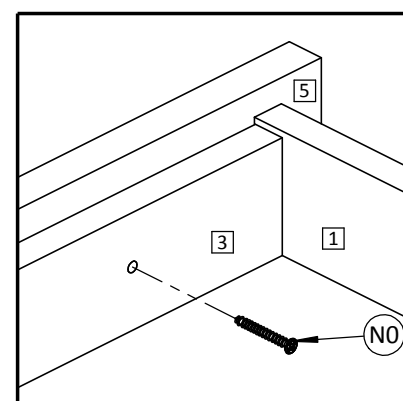


PART NUMBER 8 - LARGE DRAWER

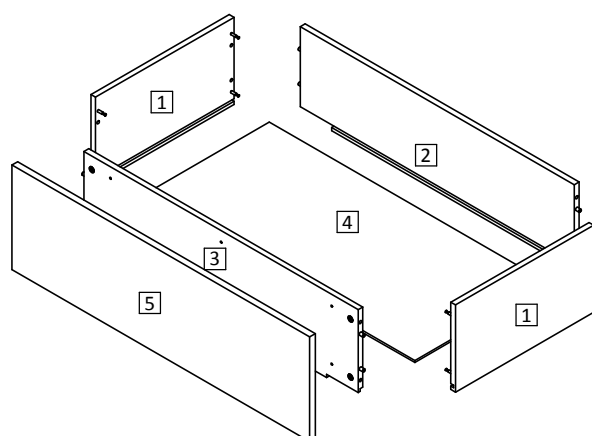


STEP 13






PREPARATION OF DRAWER SIDE PANELS

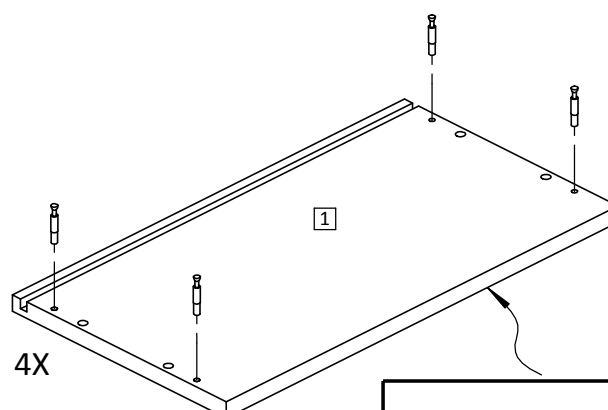

4X

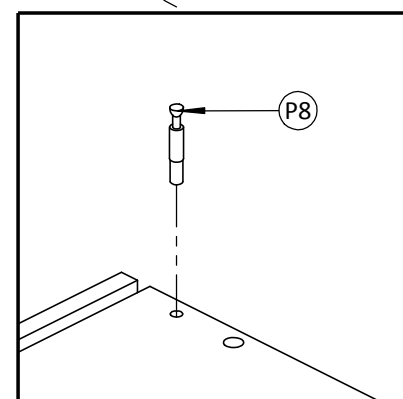

PART LIST		
PART NUMBER	QTY	DESCRIPTION:
1	2	DRAWER SIDE PANEL
2	1	DRAWER BACK PANEL
3	1	DRAWER INSIDE FRONT
4	1	DRAWER BOTTOM PANEL
5	1	DRAWER FRONT

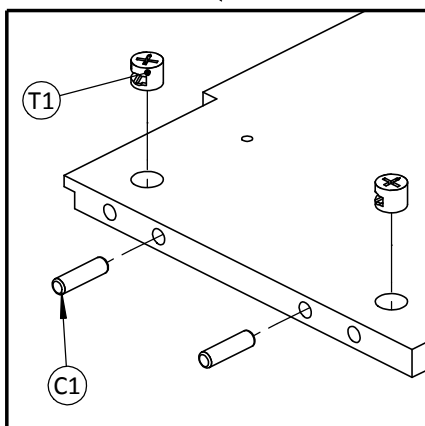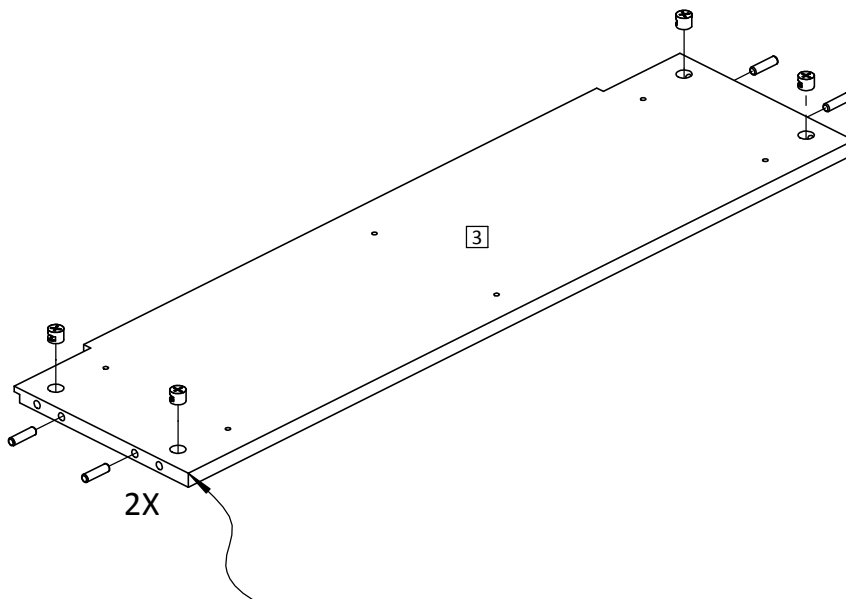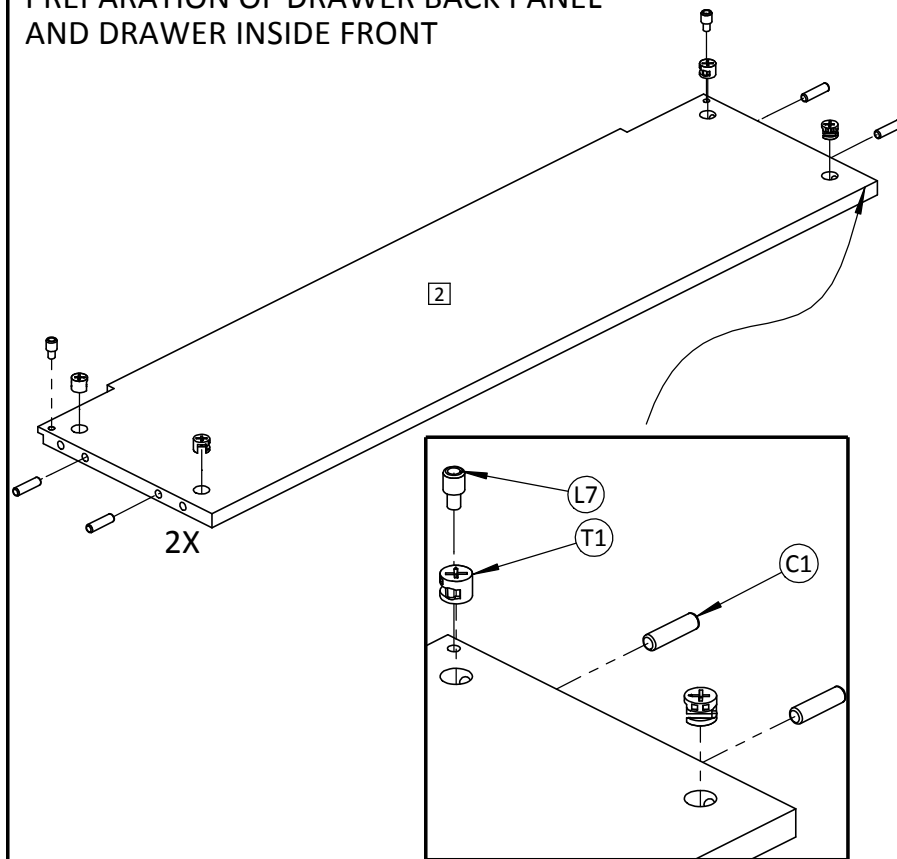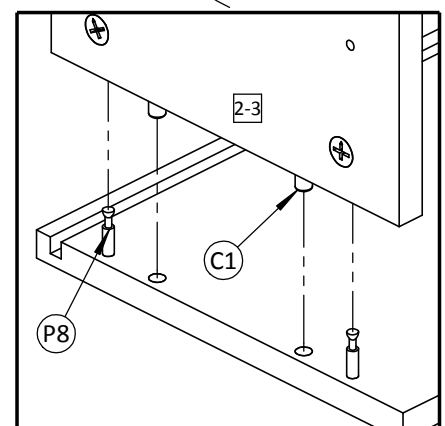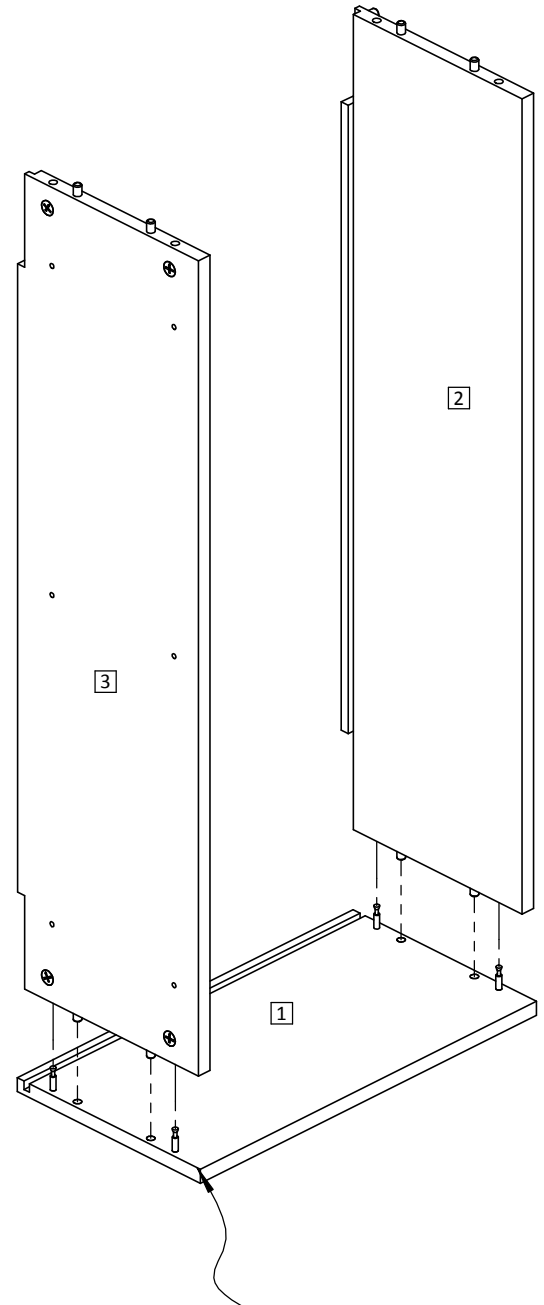STEP 14**PREPARATION OF DRAWER BACK PANEL
AND DRAWER INSIDE FRONT****ASSEMBLY INSTRUCTIONS****BOX 02****STEP 15****DRAWER ASSEMBLY**




STEP 16

BACK PANEL ASSEMBLY



ASSEMBLY INSTRUCTIONS

BOX 02

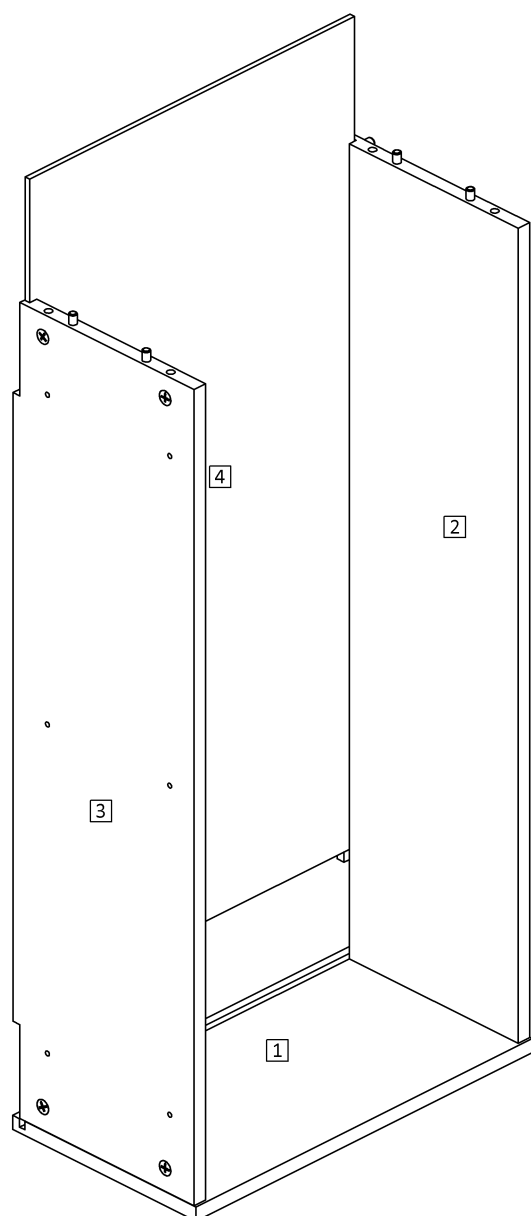

STEP 17

RIGHT SIDE PANEL ASSEMBLY

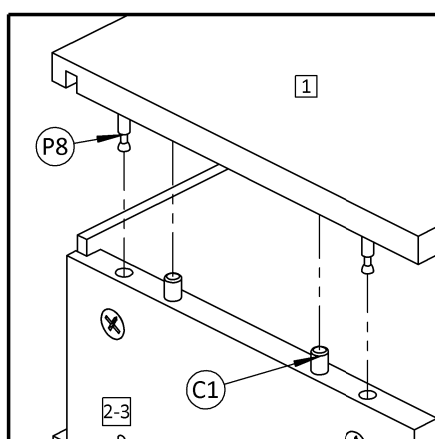
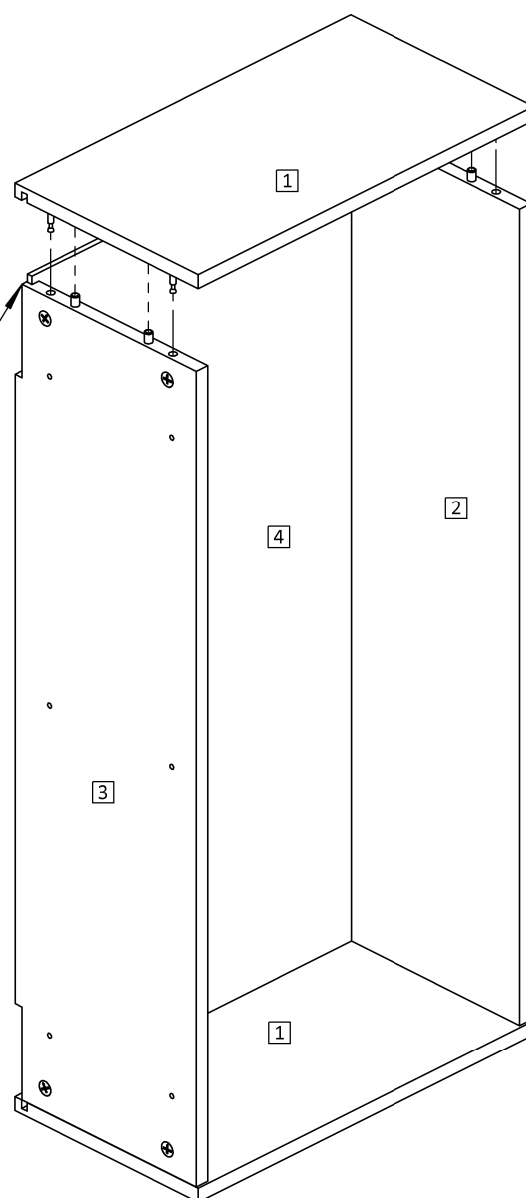




STEP 18

ASSEMBLING FRONT POSITION

DRAWER BACK VIEW

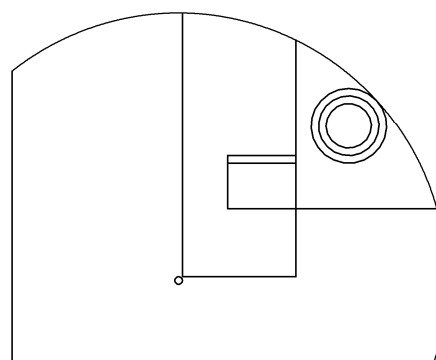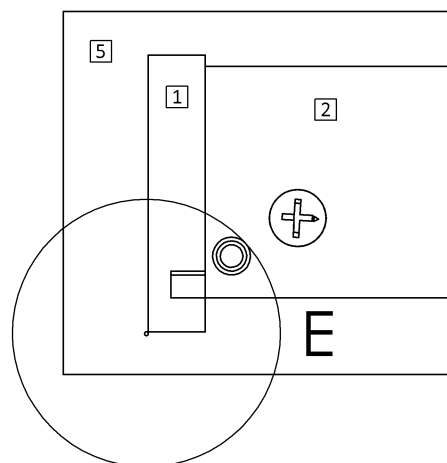



DETALHE E

ASSEMBLY INSTRUCTIONS

BOX 02

STEP 19

DRAWER FRONT ASSEMBLY

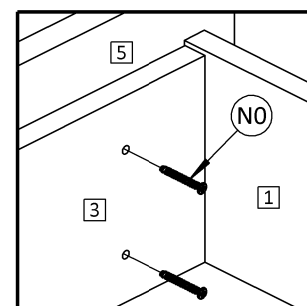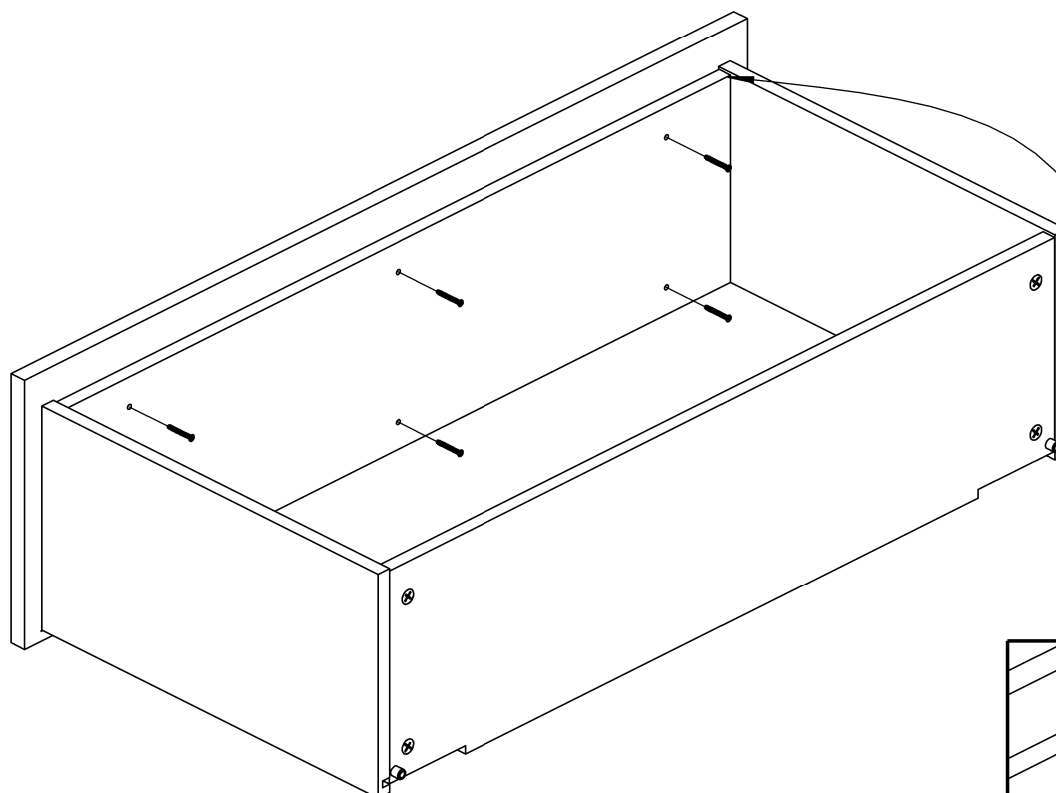

STEP 20 FIXING THE CABINET ON THE WALL

FIXING THE CABINET

Rev.01



REF.: MCL010




DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG



ASSEMBLY INSTRUCTIONS BOX 02




IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!






FIXING CABINET HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

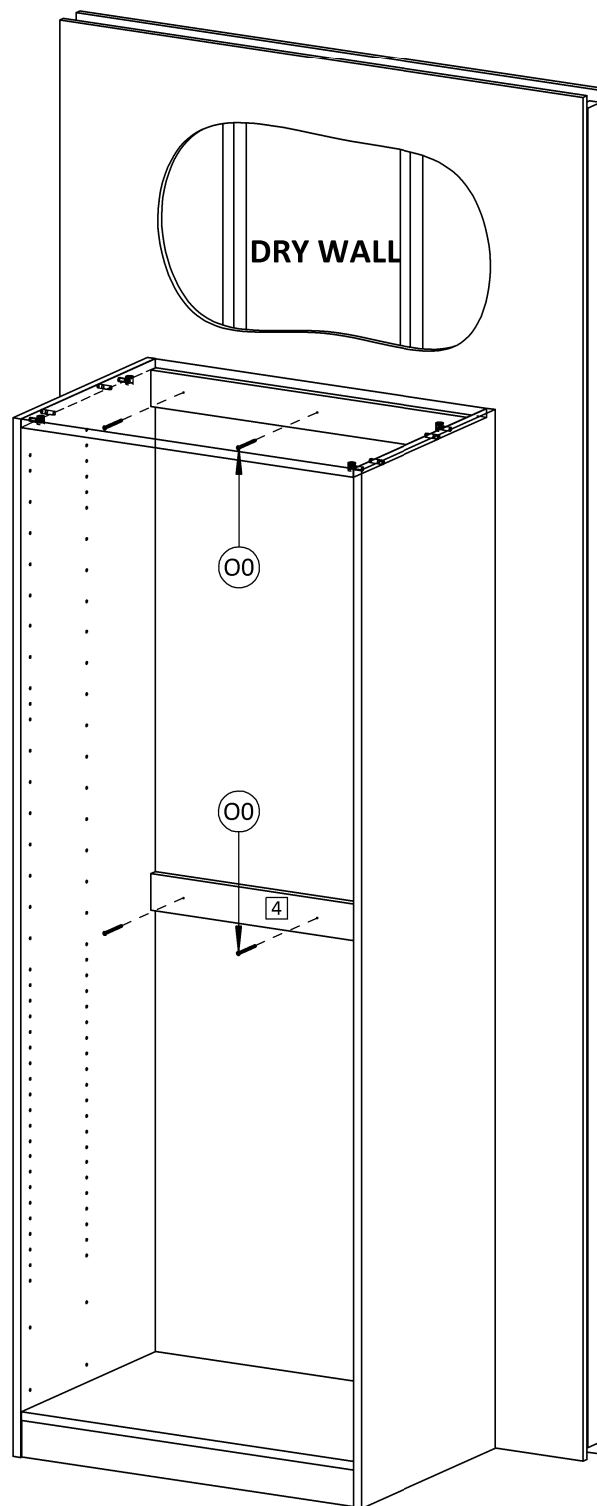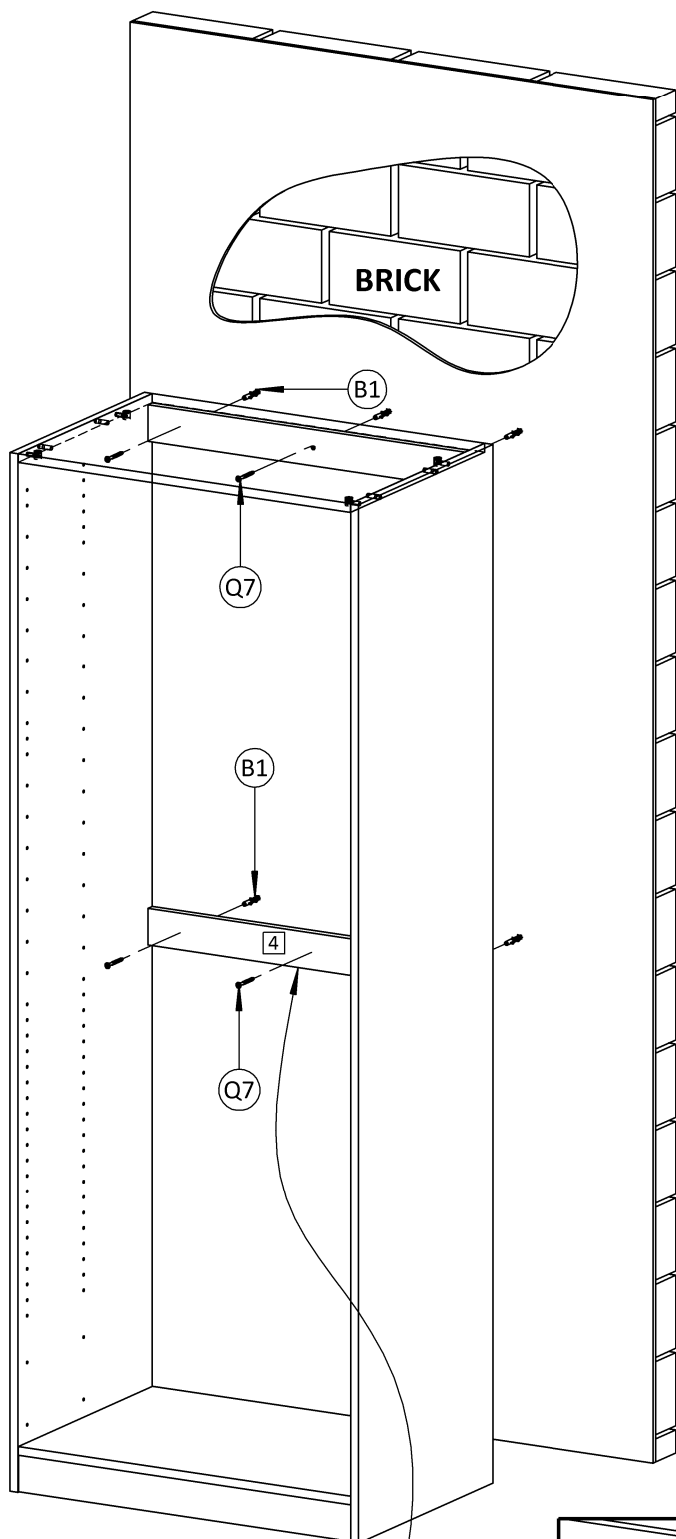

SCREW IN THE CENTER
OF THE FRAME

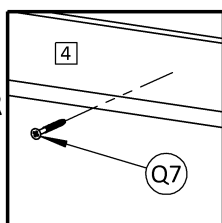

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND

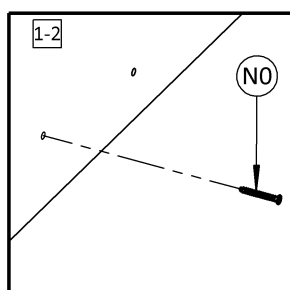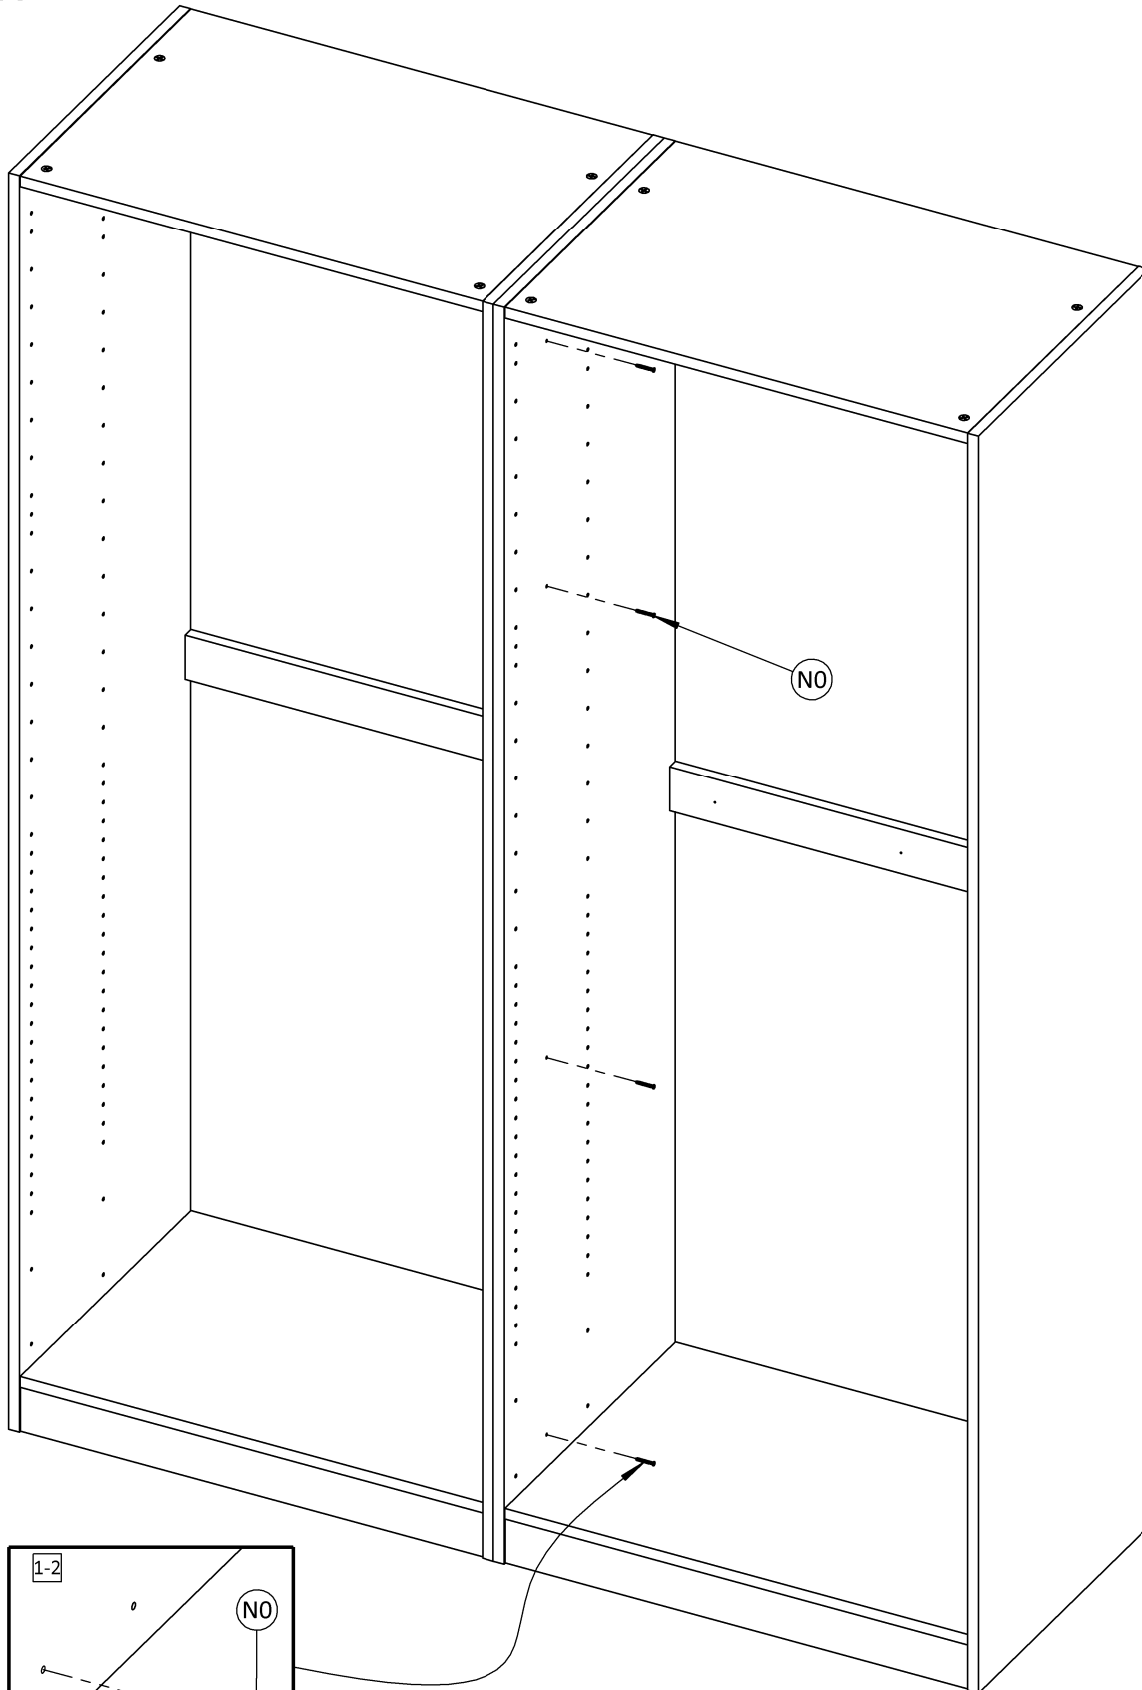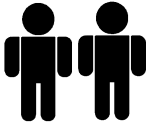STEP 21
JOINING THE CABINETS**ASSEMBLY INSTRUCTIONS**
BOX 02






ASSEMBLY INSTRUCTIONS

BOX 02

STEP 22



FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

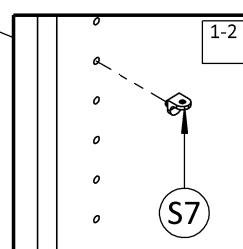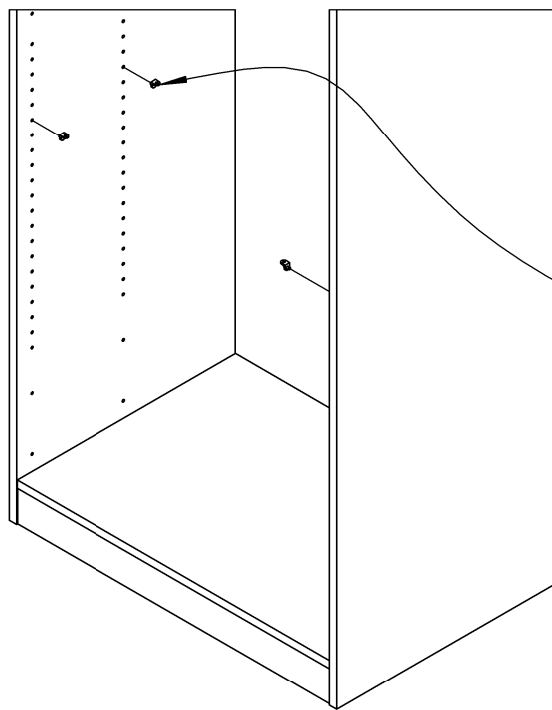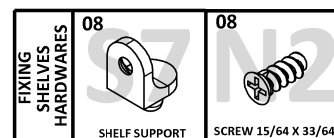

STEP 23



FIT THE SHELF ON THE CLOSET

SCREW THE SHELF
ON THE SUPPORT

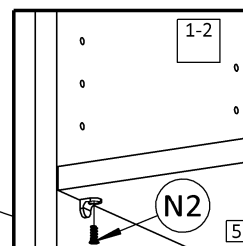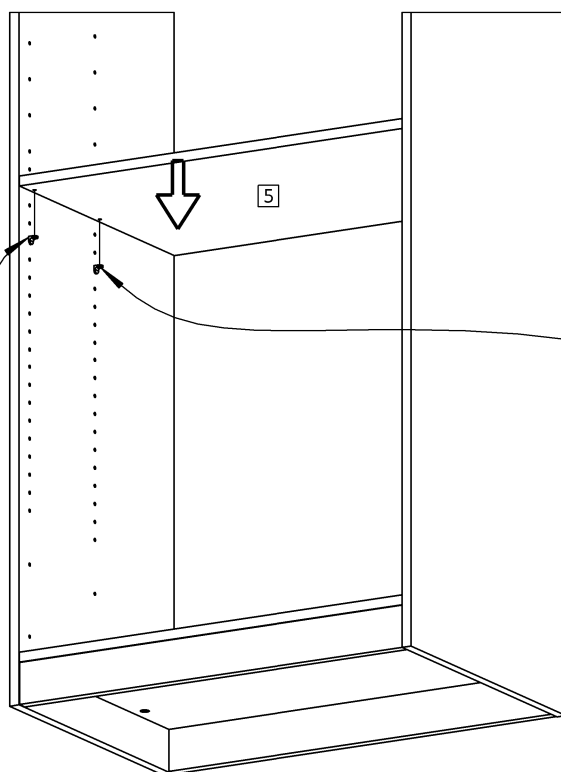





ASSEMBLY INSTRUCTIONS
BOX 02

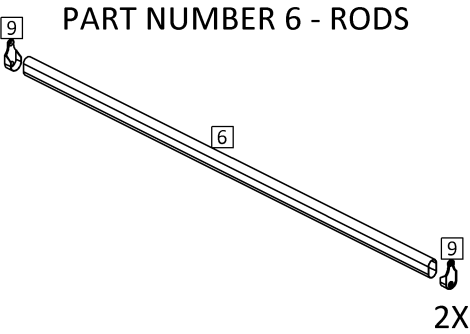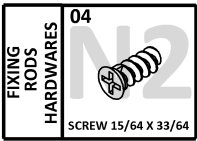




PART LIST		
PART NUMBER	QTY	DESCRIPTION
6	1	ROD
9	2	ROD SUPPORT

STEP 24
ROD SUPPORT FIXATION

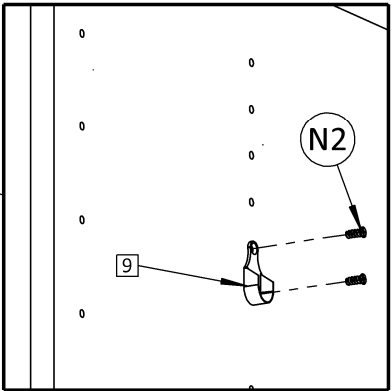
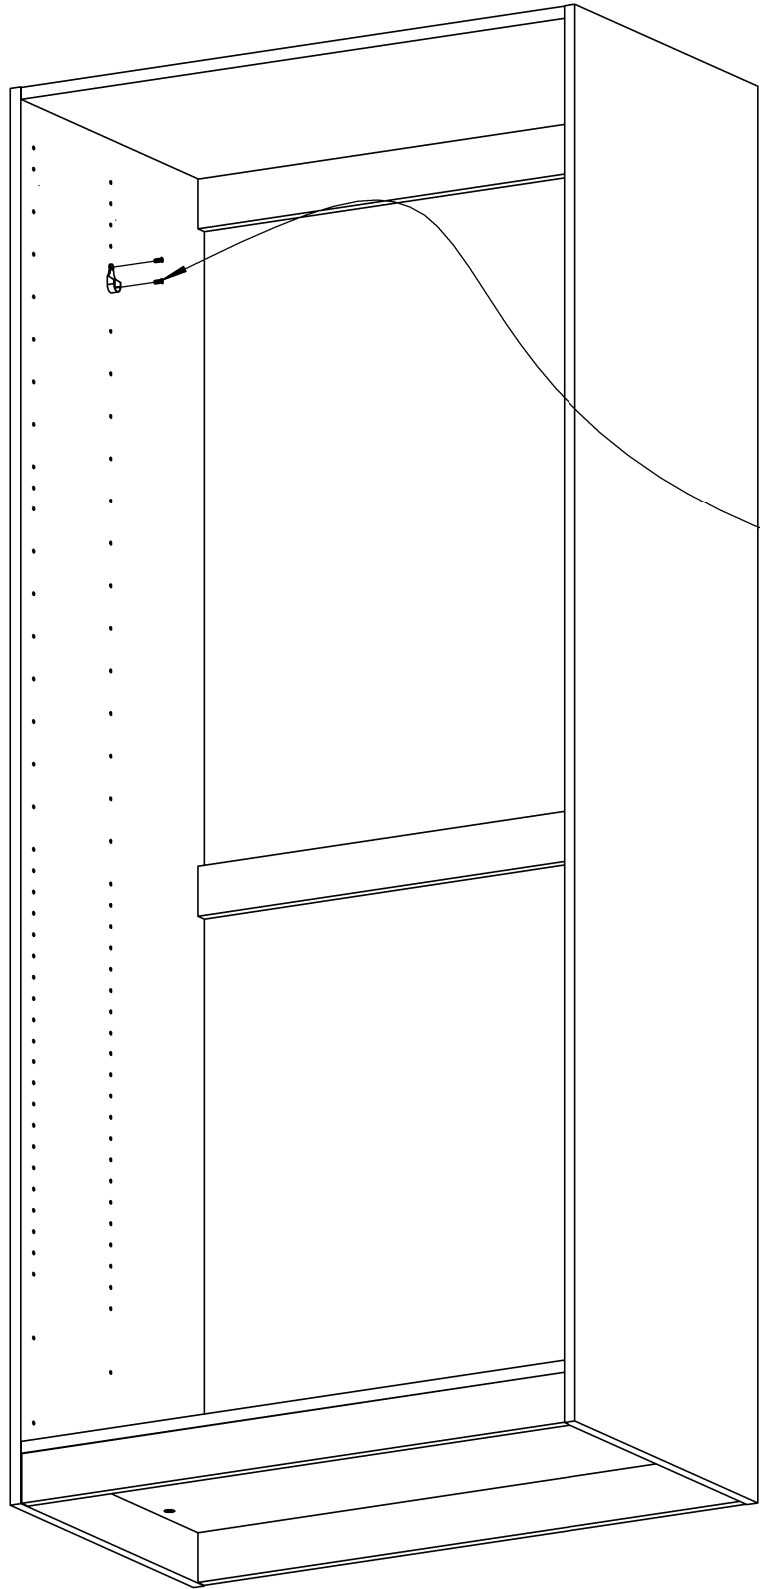


STEP 25
FIT ROD

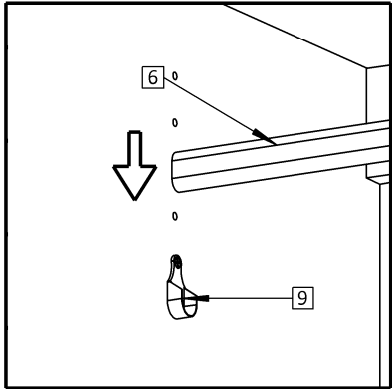

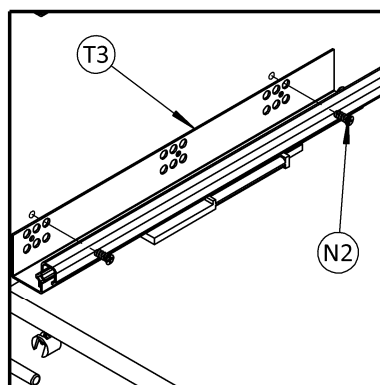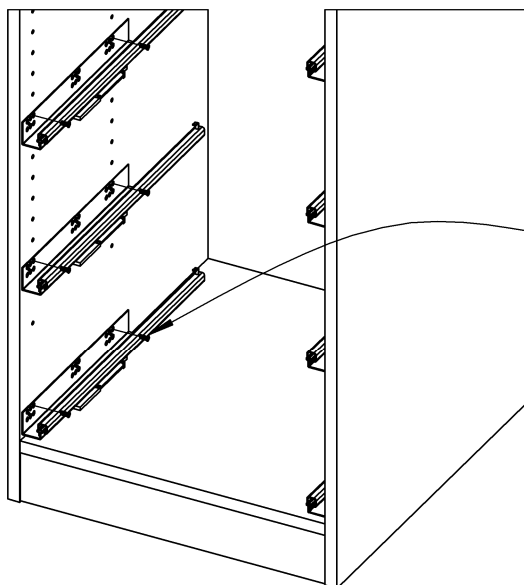**STEP 26**
FIX THE SLIDERS ON THE CLOSET**ASSEMBLY INSTRUCTIONS**
BOX 02

FIXING DRAWERS HARDWARES	03 (PAIR)	12
	SLIDER	SCREW 15/64 X 33/64

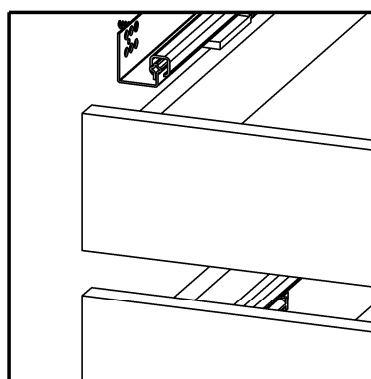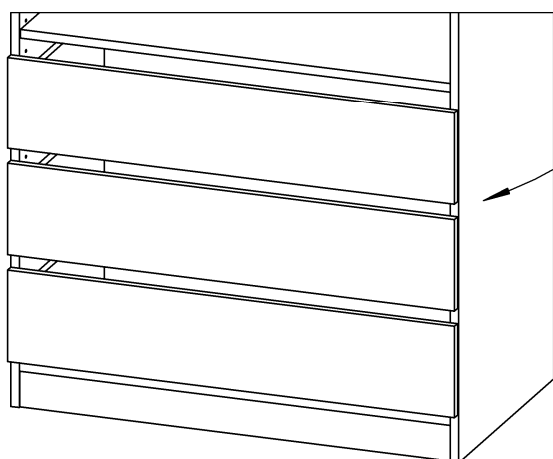STEP 27
FIT THE DRAWERS ON THE SLIDERS

1,25" BETWEEN DRAWERS

STEP 28
FIT THE PIN DRAWERS INTO THE SLIDER