



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF318587

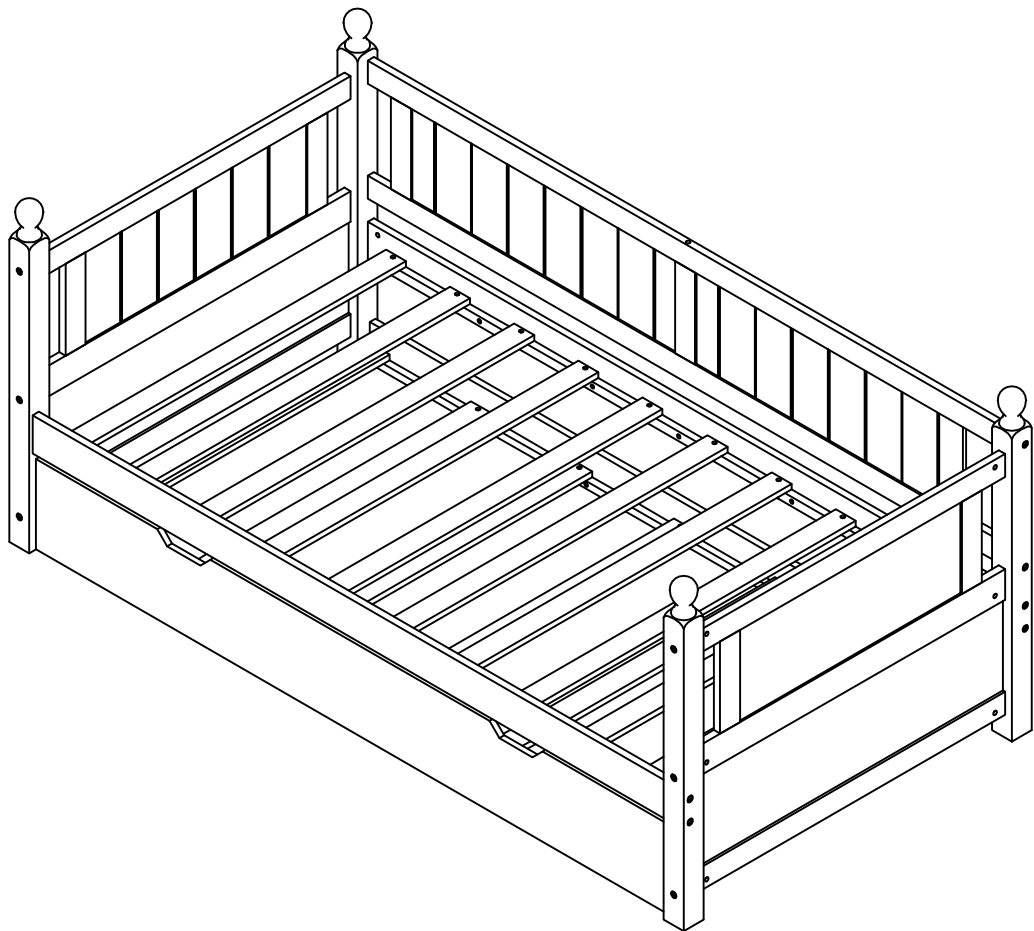

DETAIL VIEW

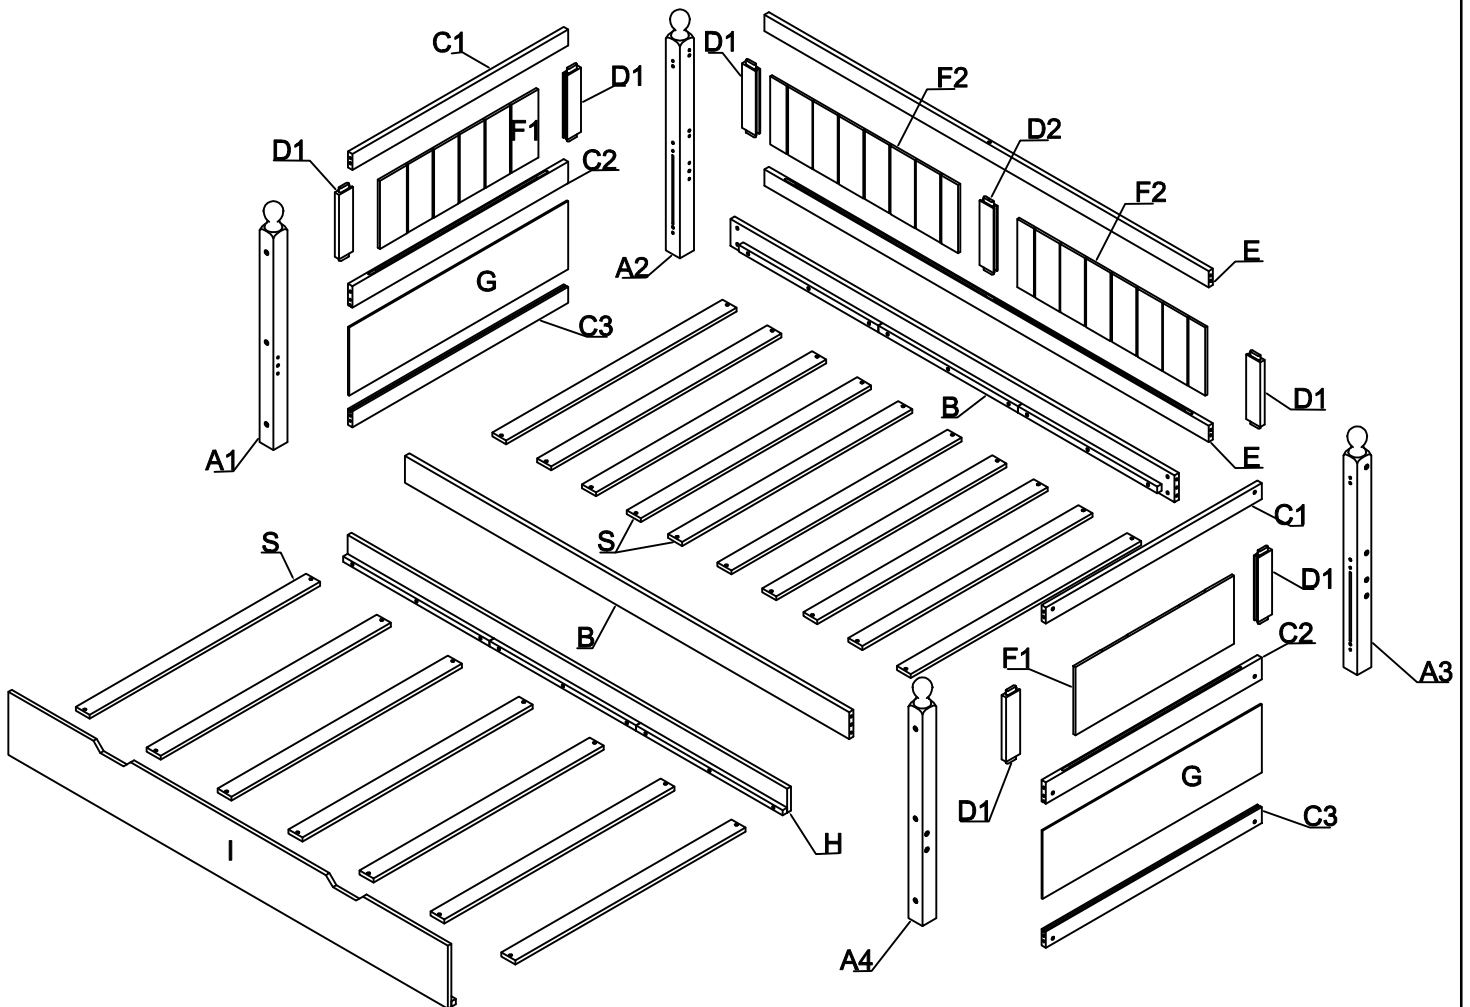


BOX: WF318587

A1




Left Fore Leg - (1pc)

A2



Left Hind Leg - (1pc)

A3




Right Hind Leg - (1pc)

A4




Right Fore Leg - (1pc)

B

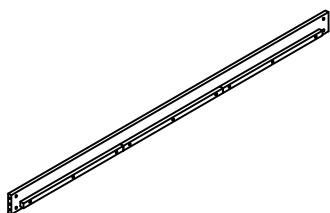


Shoulder Bed - (2pcs)

C1

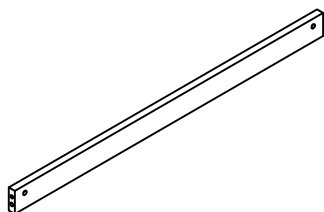


Horizontal Frame - (2pcs)

C2

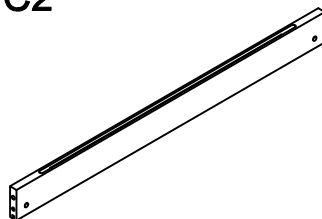


Horizontal Frame - (2pcs)

C3

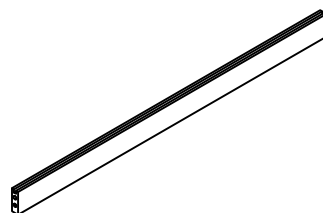

Horizontal Frame - (2pcs)

D1




Vertical Bar - (6pcs)

D2




Vertical Bar - (1pc)

E

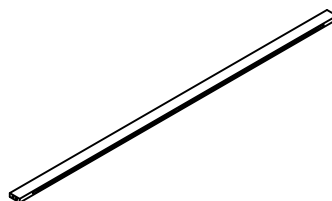


Horizontal Frame - (2pcs)

F1

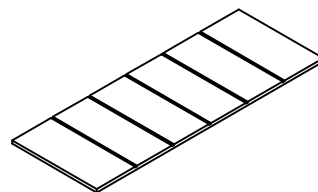


Hip Plank - (2pcs)

F2

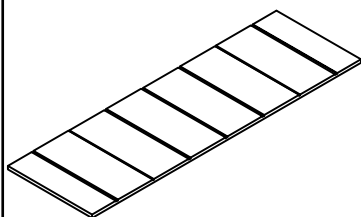


Hip Plank - (2pcs)

G

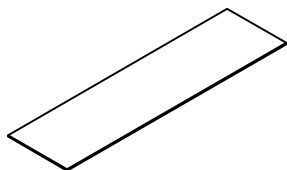


Panel - (2pcs)

I

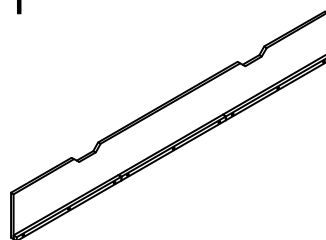


Front trundle - (1pc)

H

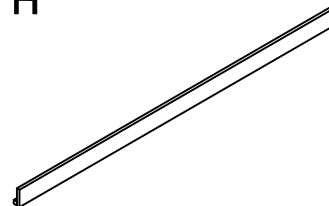







Back trundle - (1pc)


S

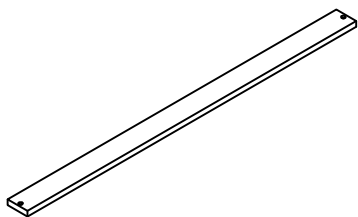

Slats - (17pcs)

HARDWARE LIST: WF318587

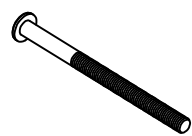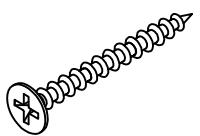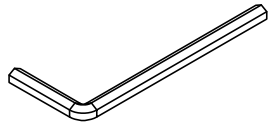
1  Wood dowel Ø8 * 30 - 20pcs	2  Horizontal - Hold bolts Ø1/4" - 24pcs	3  Hex - Head bolts Ø1/4" * 110 - 24pcs	4  Wood crews M4 * 25 -34pcs
5  Wood crews M4 * 45 - 2pcs	6  Round wood crews M3.5 * 15 - 16pcs	7  L - Bracket - 4pcs	8  Wheel 4pcs
9  Allen key K4 - 1pcs			



Assembly Tools Required (Not Included)

STEP 1

X2

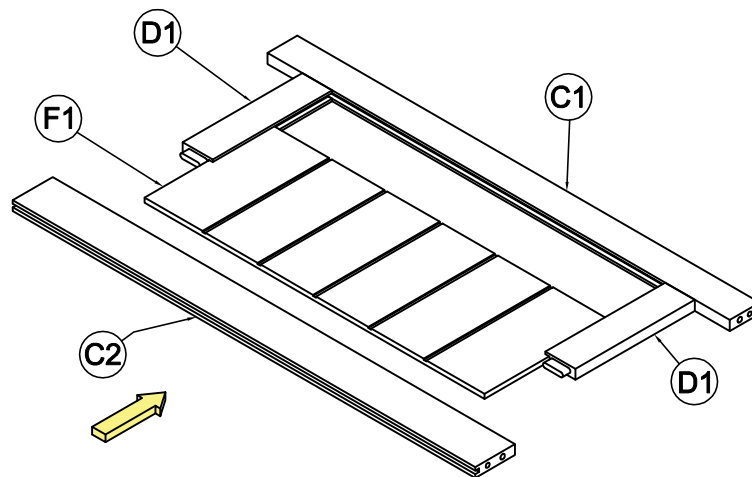

STEP 2

1



Wood dowel
Ø8 * 30 - 6pcs

2




Horizontal - Hold bolts
Ø1/4" - 6pcs

3



Hex - Head bolts
Ø1/4" * 110 - 6pcs

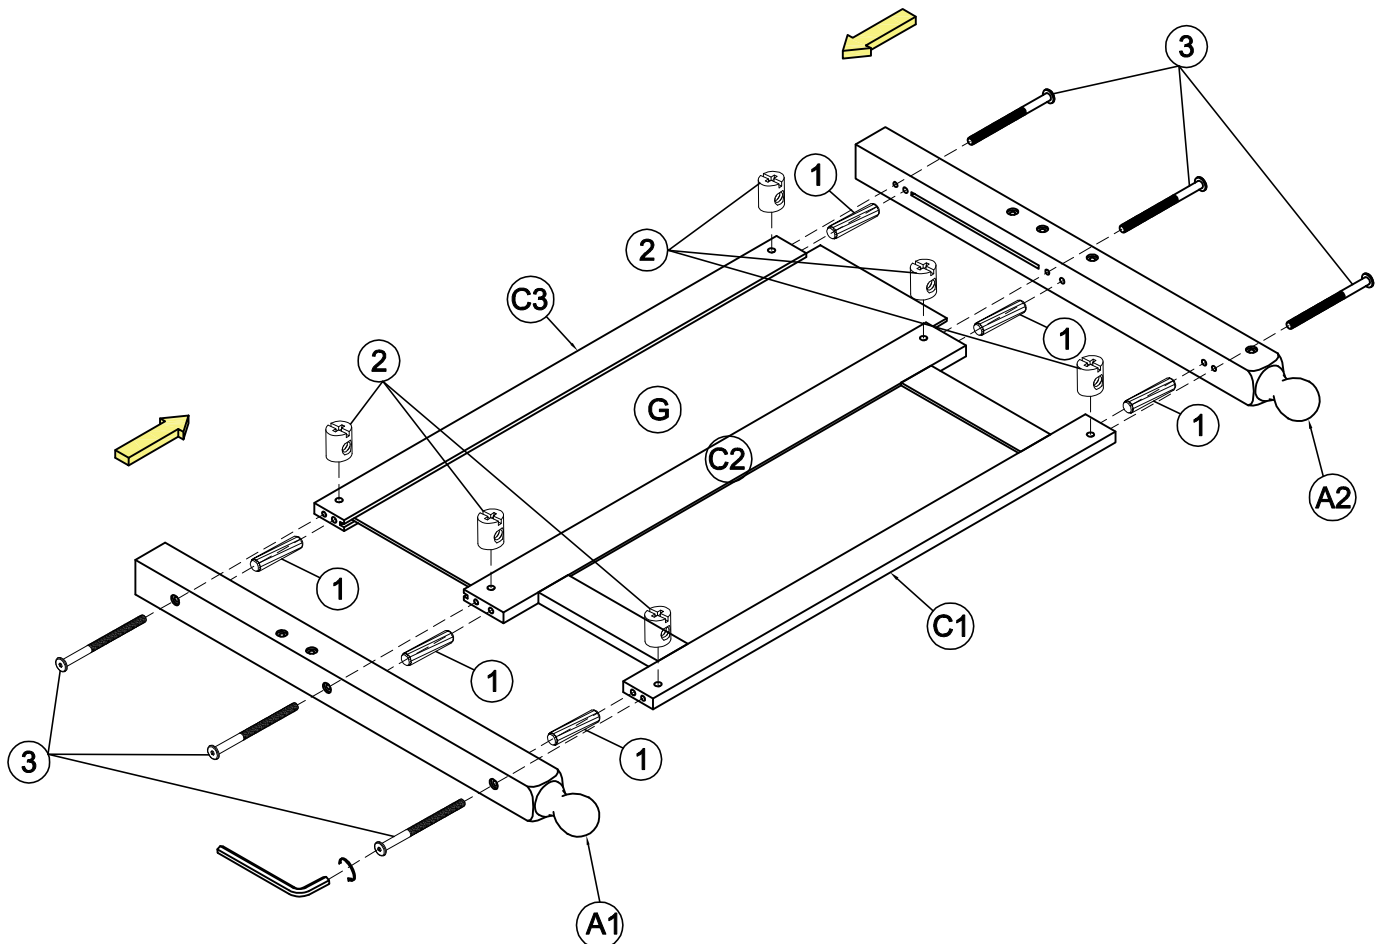

STEP 3

1



Wood dowel
Ø8 * 30 - 6pcs

2




Horizontal - Hold bolts
Ø1/4" * 6pcs

3




Hex - Head bolts
Ø1/4" * 110 - 6pcs

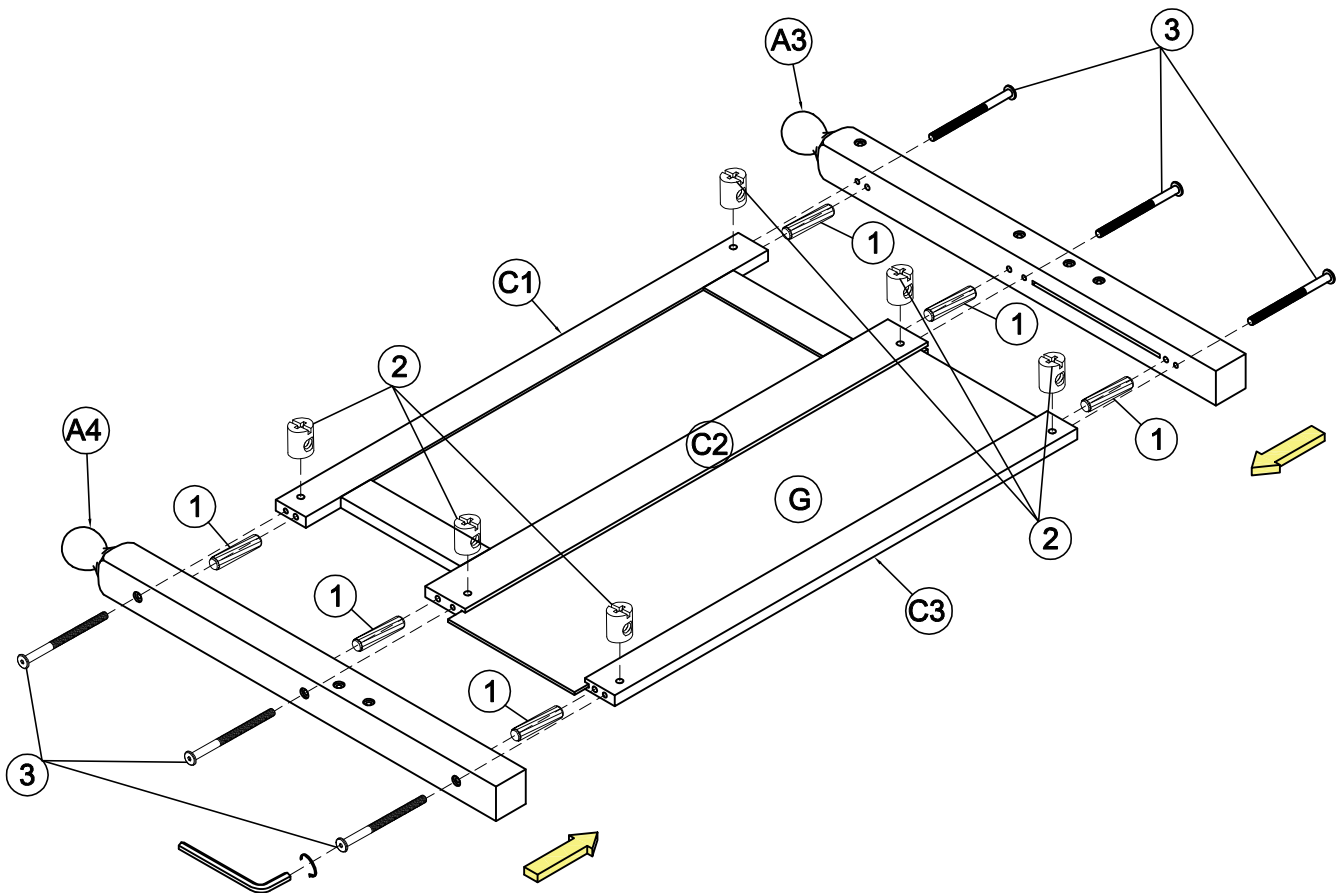


STEP 4

5



Wood crews
M4 * 45 - 2pcs

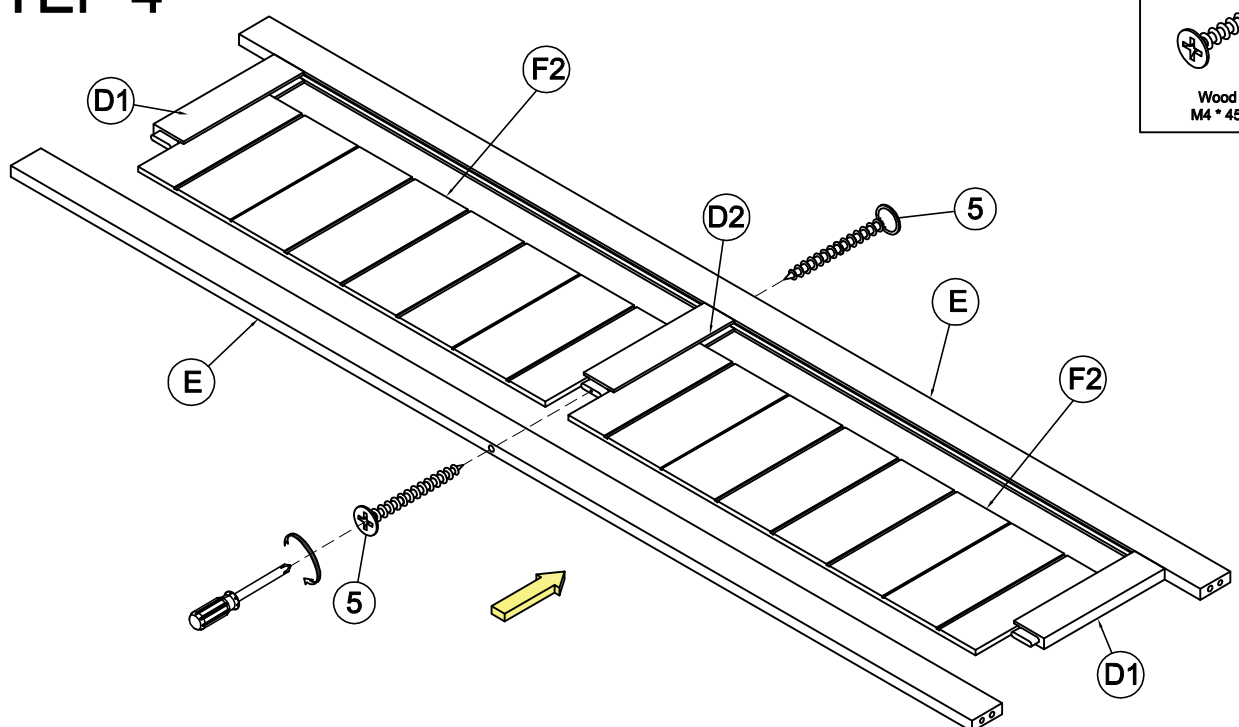

STEP 5

1



Wood dowel
Ø8 * 30 - 8pcs

2




Horizontal - Hold bolts
Ø1/4" - 12pcs

3




Hex - Head bolts
Ø1/4" * 110 - 12pcs

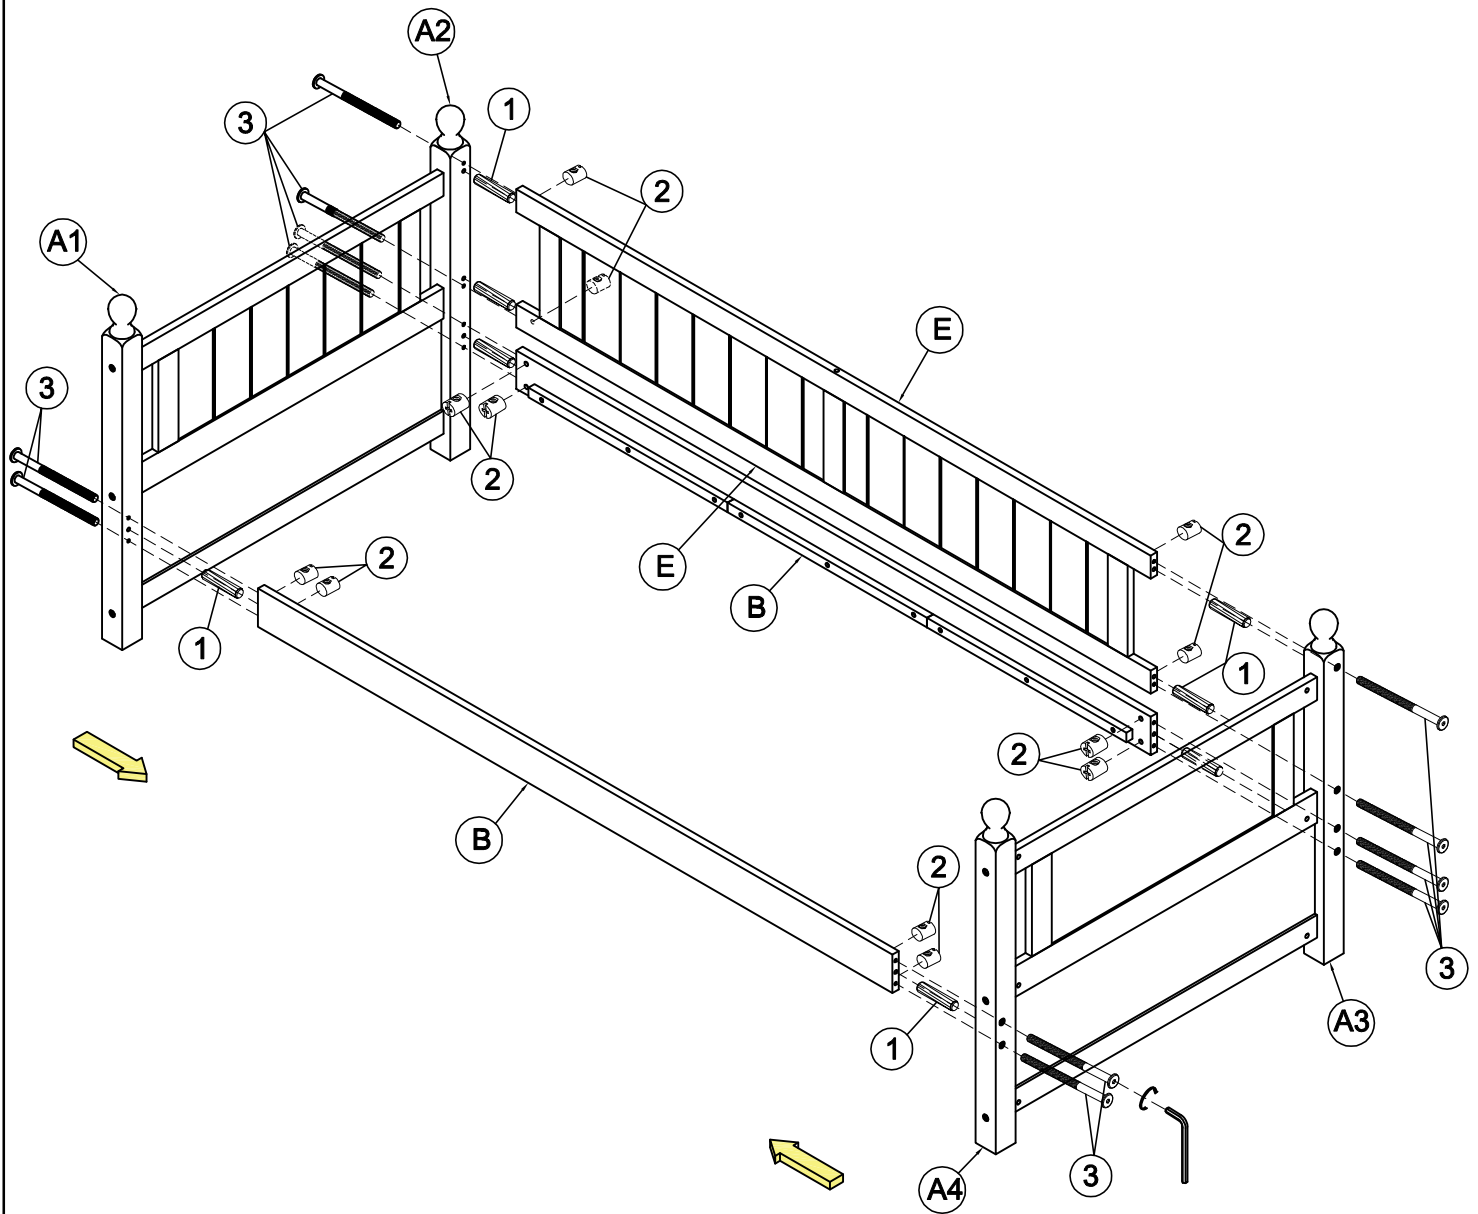


STEP 6



4



Wood crews
M4 * 25 -20pcs

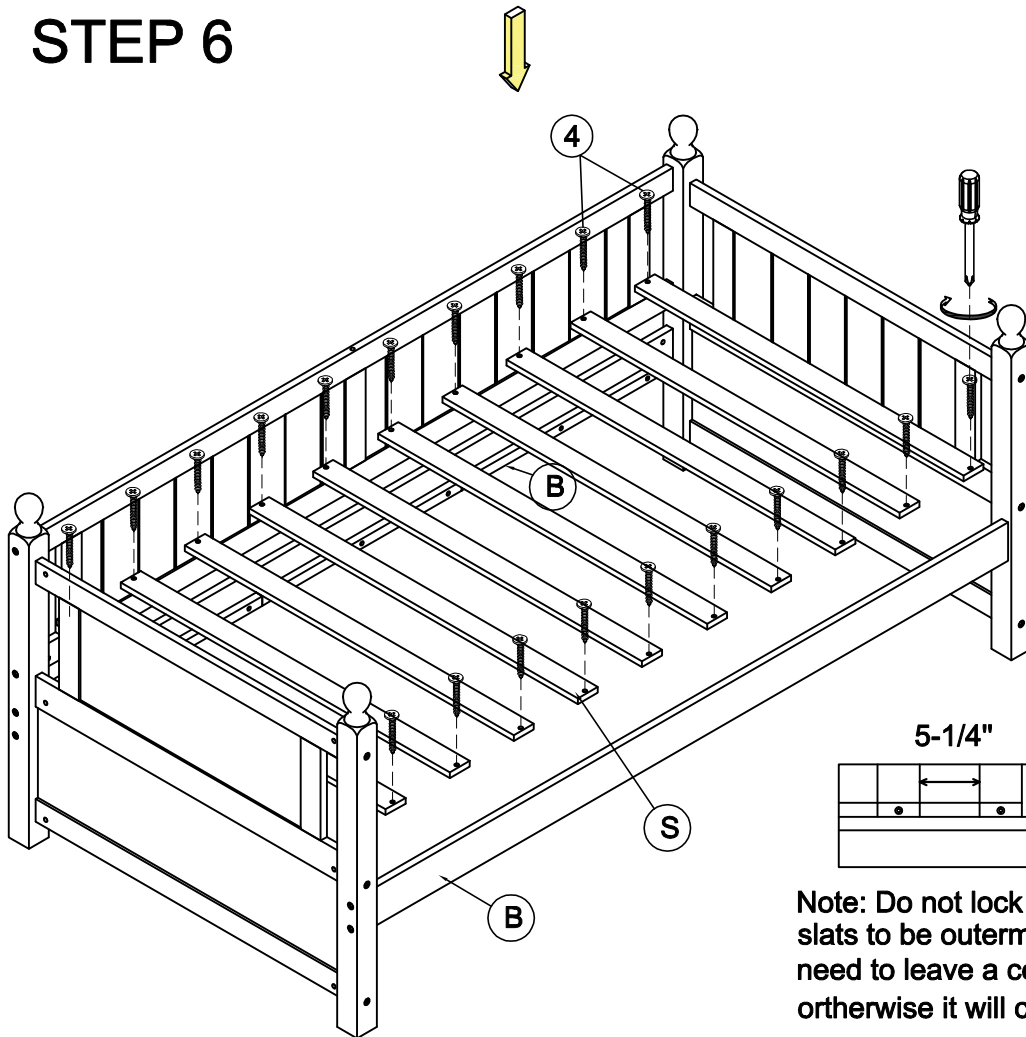

5-1/4"




Note: Do not lock the screws of the bed slats to be outermost edge the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break


There are no reserved holes, screws can be drilled in

STEP 7



4



Wood crews
M4 * 25 - 14pcs

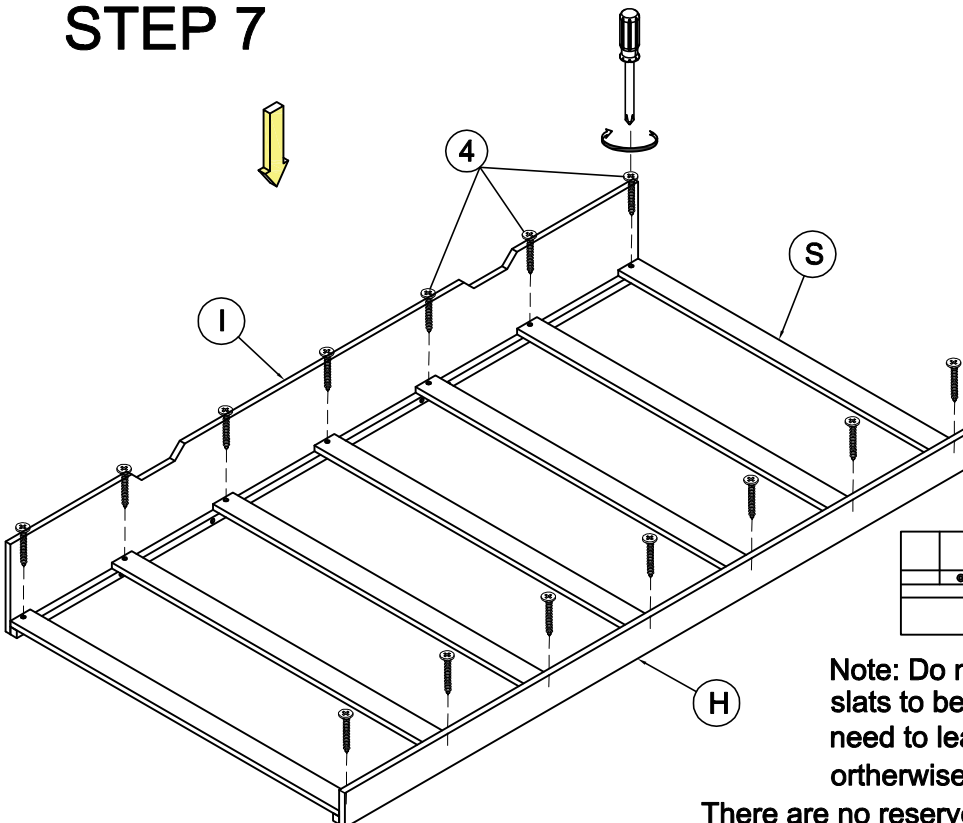


8-1/4"



Note: Do not lock the screws of the bed slats to be outermost edge the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

There are no reserved holes, screws can be drilled in

STEP 8

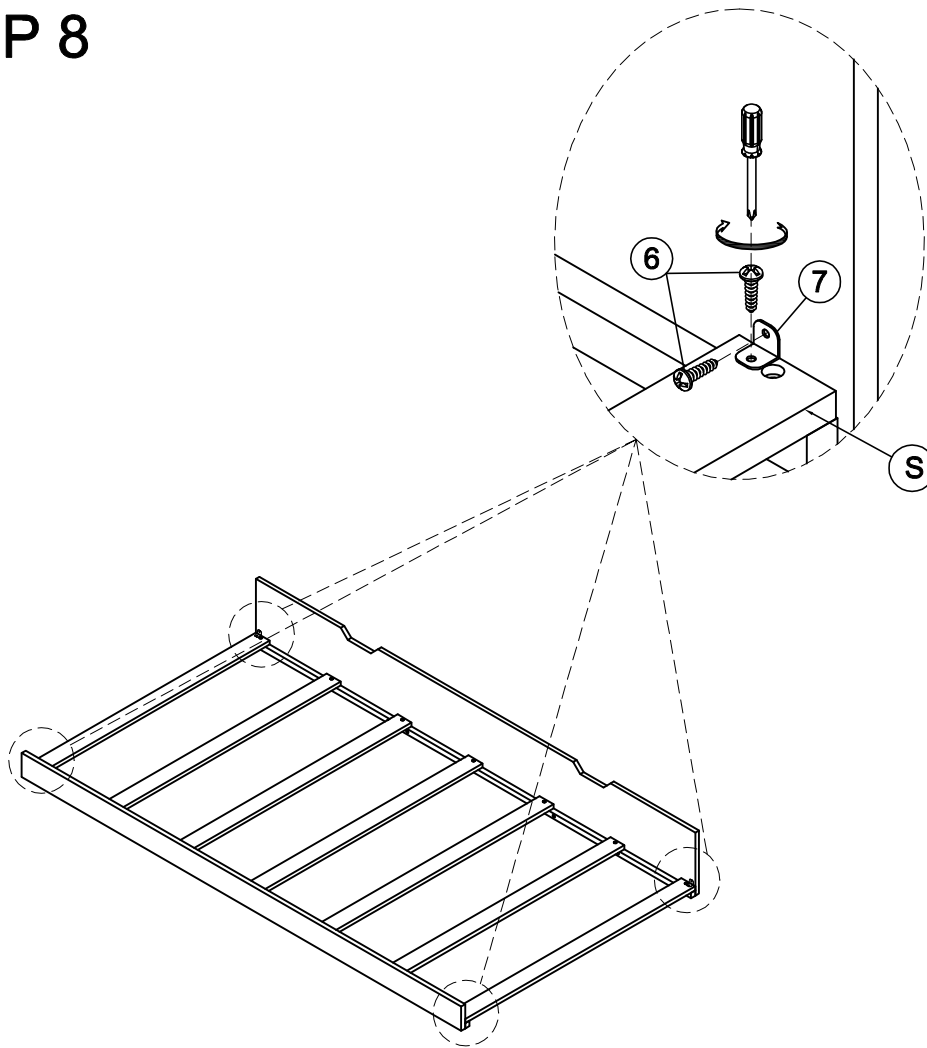

6




Round wood crews
M3.5 * 15 - 8pcs

7



L - Bracket - 4pcs

STEP 9

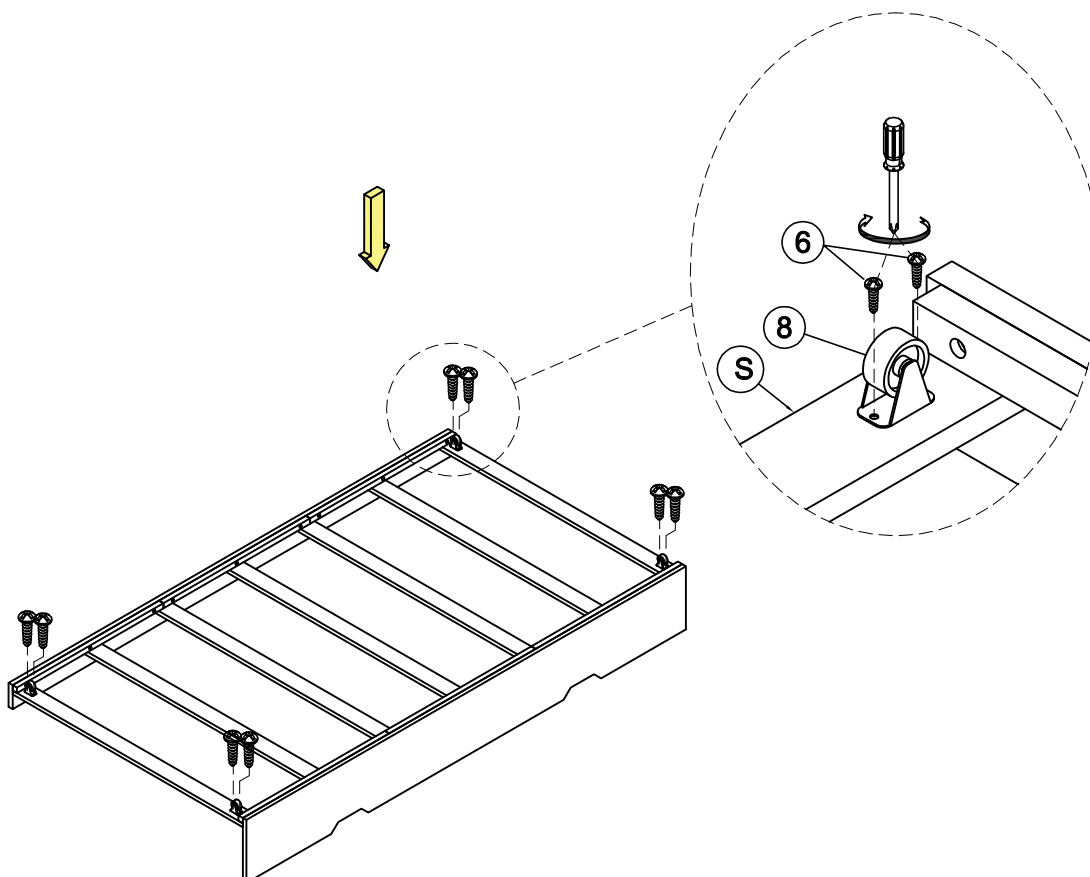

8




Wheel
4pcs

6



Round wood crews
M3.5 * 15 - 8pcs

STEP 10

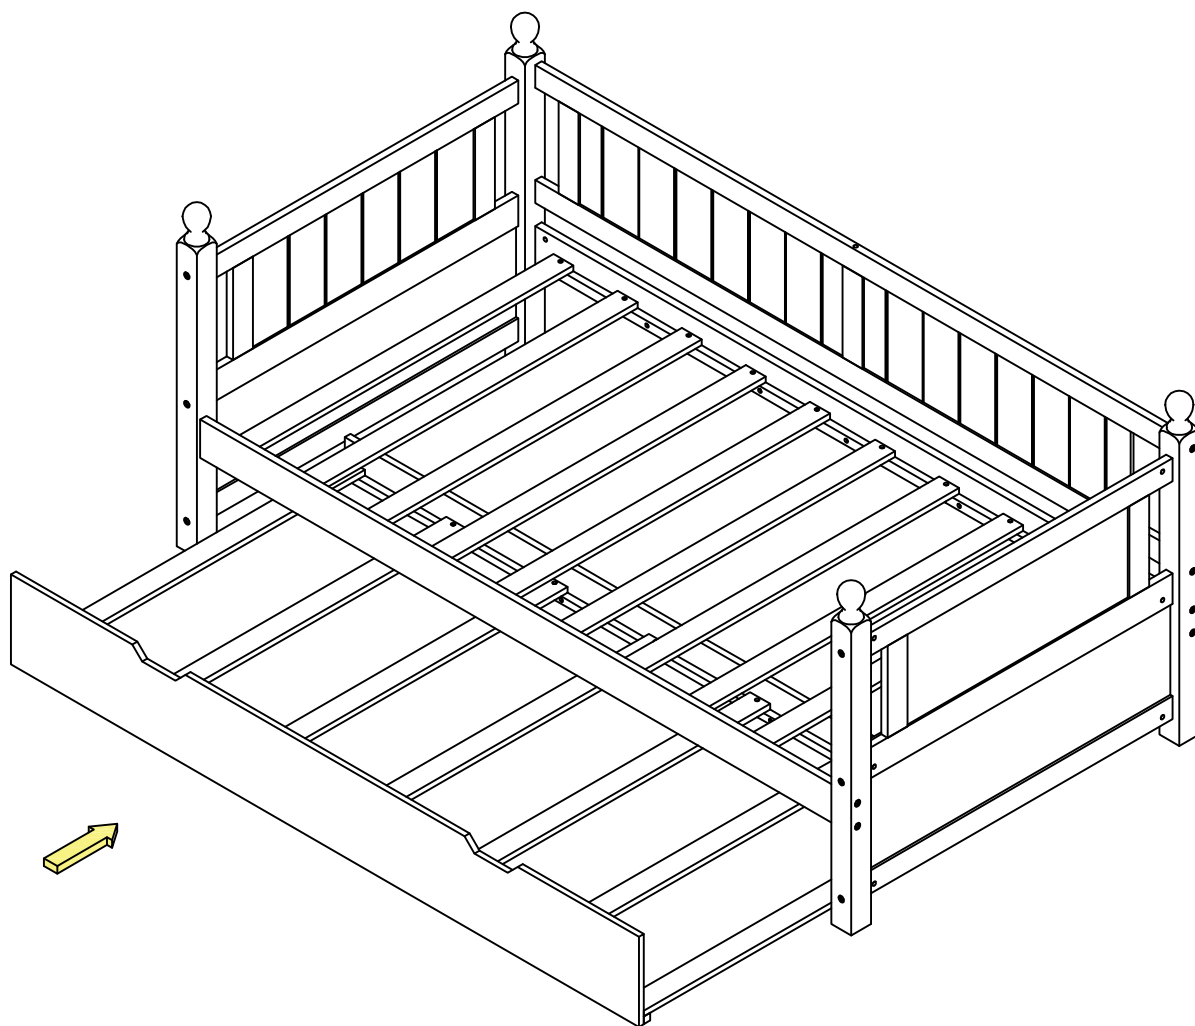

COMPLETED

