



ASSEMBLY INSTRUCTIONS

FULL CANOPY BED











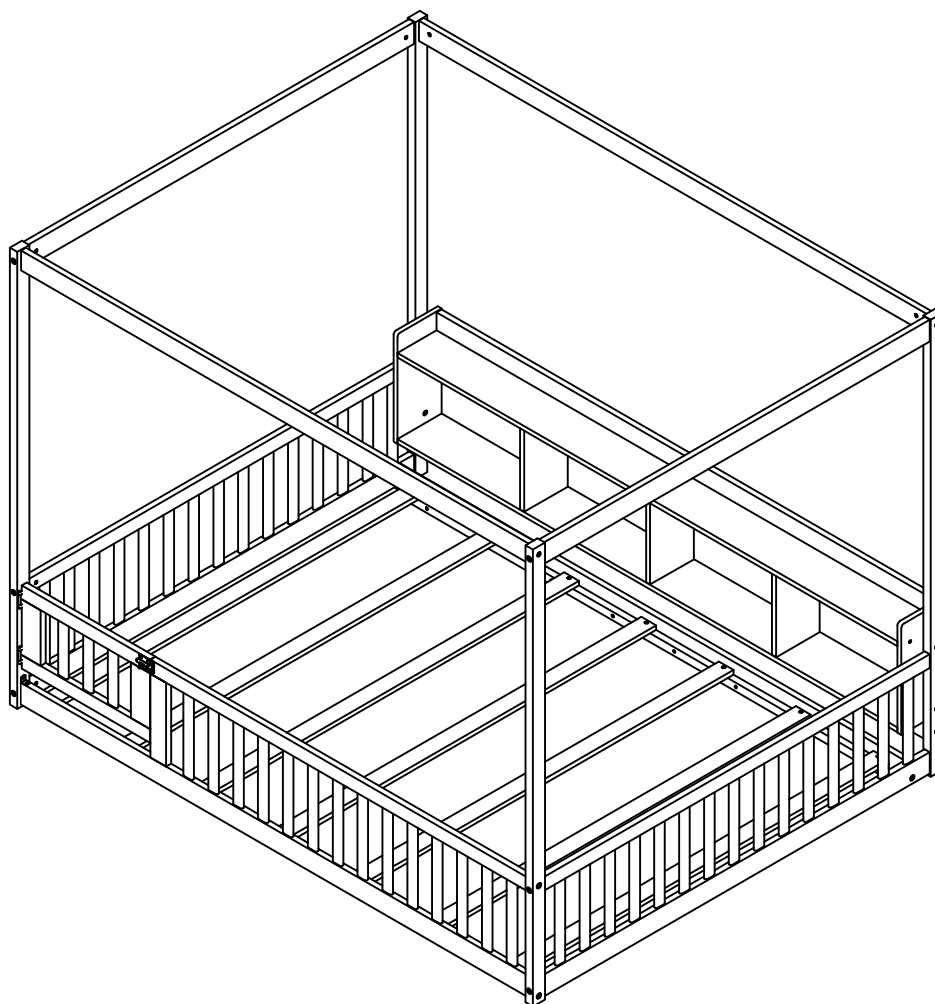


US-BED272AF08/US-BED272AF77




Detail View

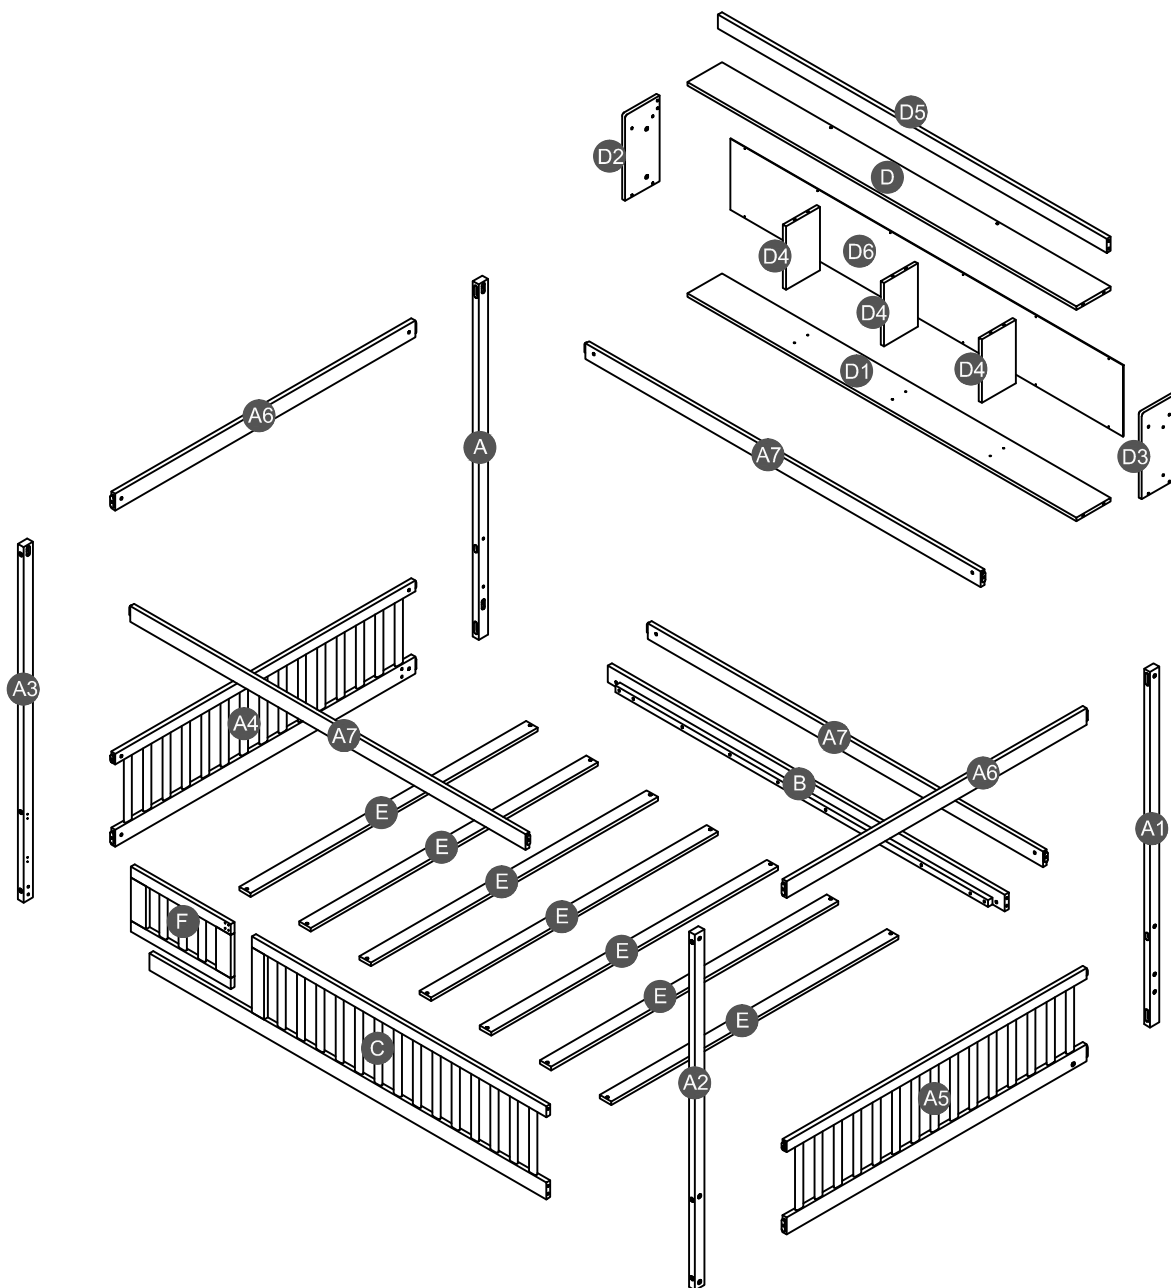



Part List

A  Leg (Left back) - 1pc	A1  Leg (Right back) - 1pc	A2  Leg (Right front) - 1pc
A3  Leg (Left front) - 1pc	A4  Guard rail FB (Left) - 1pc	A5  Guard rail HB (Right) - 1pc
A6  Upper horizontal bar HB/FB - 2pcs	A7  Horizontal bar - 3pcs	B  Side rail (Back) - 1pc
C  Guard rail (Front) - 1pc	D  Top panel - 1pc	D1  Bottom panel - 1pc
D2  Side panel (Left) - 1pc	D3  Side panel (Right) - 1pc	D4  Divider panel - 3pcs
D5  Upper horizontal bar - 1pc	D6  Back panel - 1pc	E  Slats - 7pcs
F  Door - 1pc		

Hardware List

1	 Ø8*30mm Wood dowel (6pcs)	2	 (Ø15)1/4"*80mm Hex-Head bolts (23pcs)	3	 (Ø12)1/4"*60mm Hex-Head bolts (10pcs)
4	 (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(33pcs)	6	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)
7	 Ø4*30mm Wood screws (14pcs)	8	 Ø3.5*15mm Wood screws (16pcs)	9	 Ø3*12mm Wood screws (12pcs)
10	 55*27*6mm(135°) Hinges (2pcs)	11	 60*38*10mm Lock (1pc)	12	 Ø7"*35mm Cam lock (12pcs)
13	 Ø14*9mm Cam lock (12pcs)	14	 21*21*17*1.7mm Metal bracket (1pc)	15	 (1/4")4.5*58mm Allen key (1pc)


OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)




Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

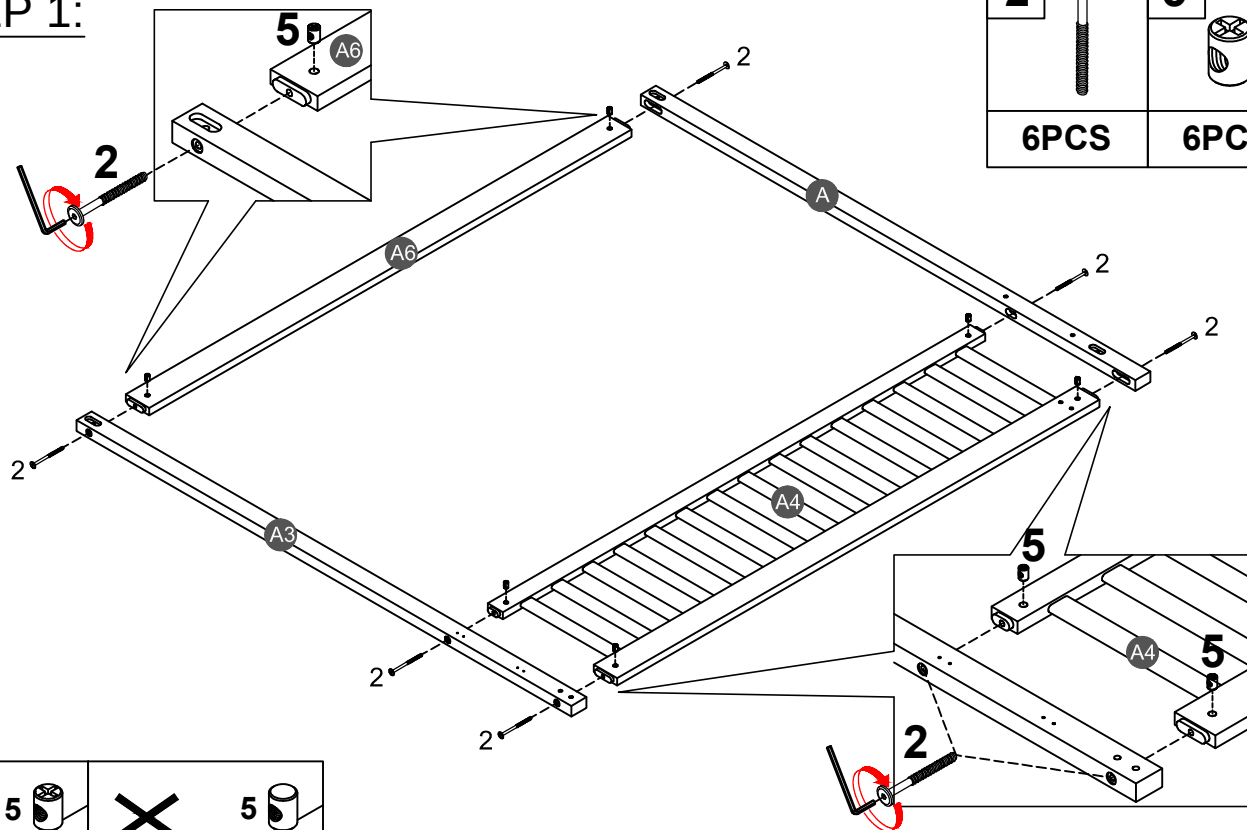


2		5	
6PCS		6PCS	

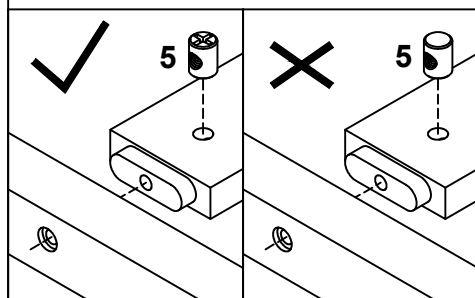

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

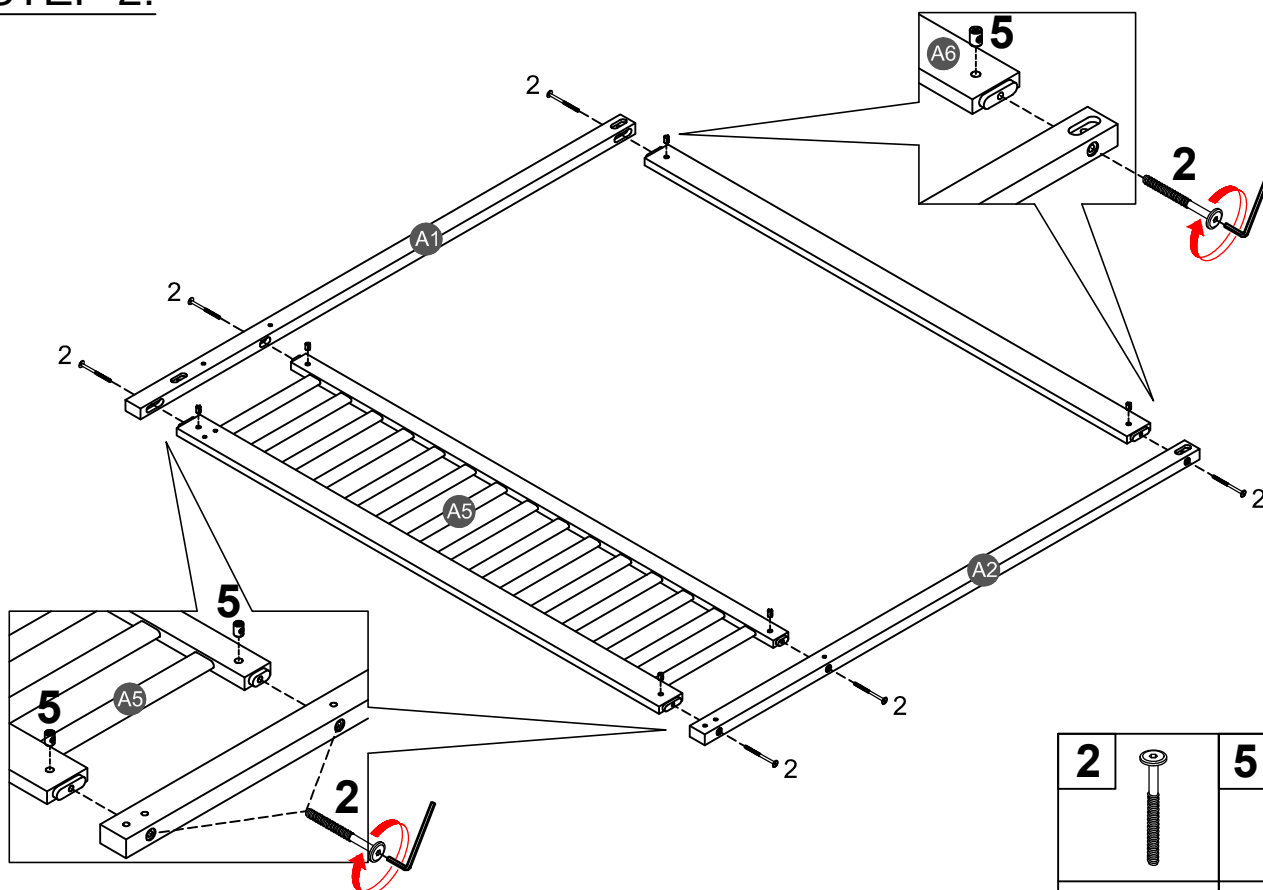


2		5	
6PCS		6PCS	

STEP 3:


1		2		5	
4PCS		11PCS		11PCS	

Note: Not fully tighten until all bolts are started.

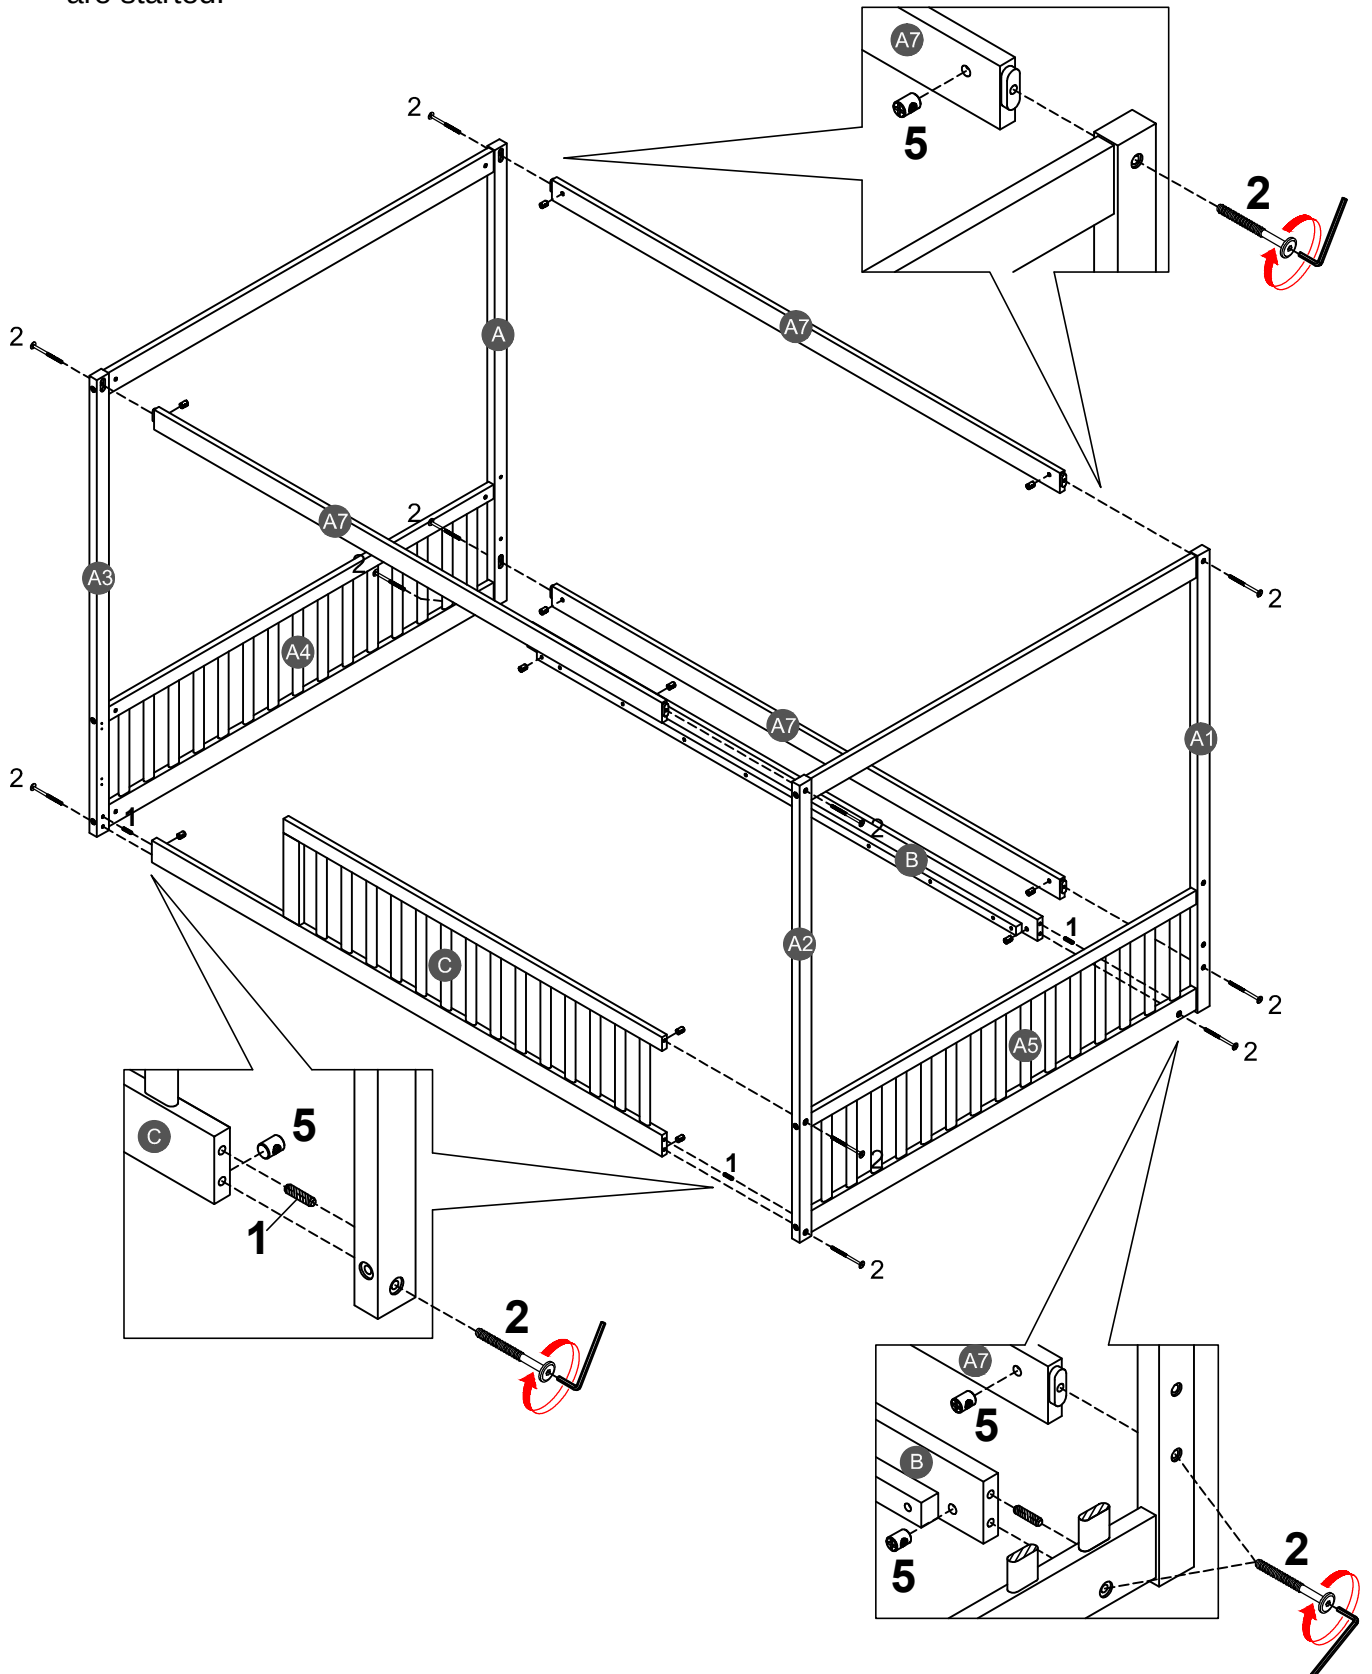


STEP 4:


12




12PCS

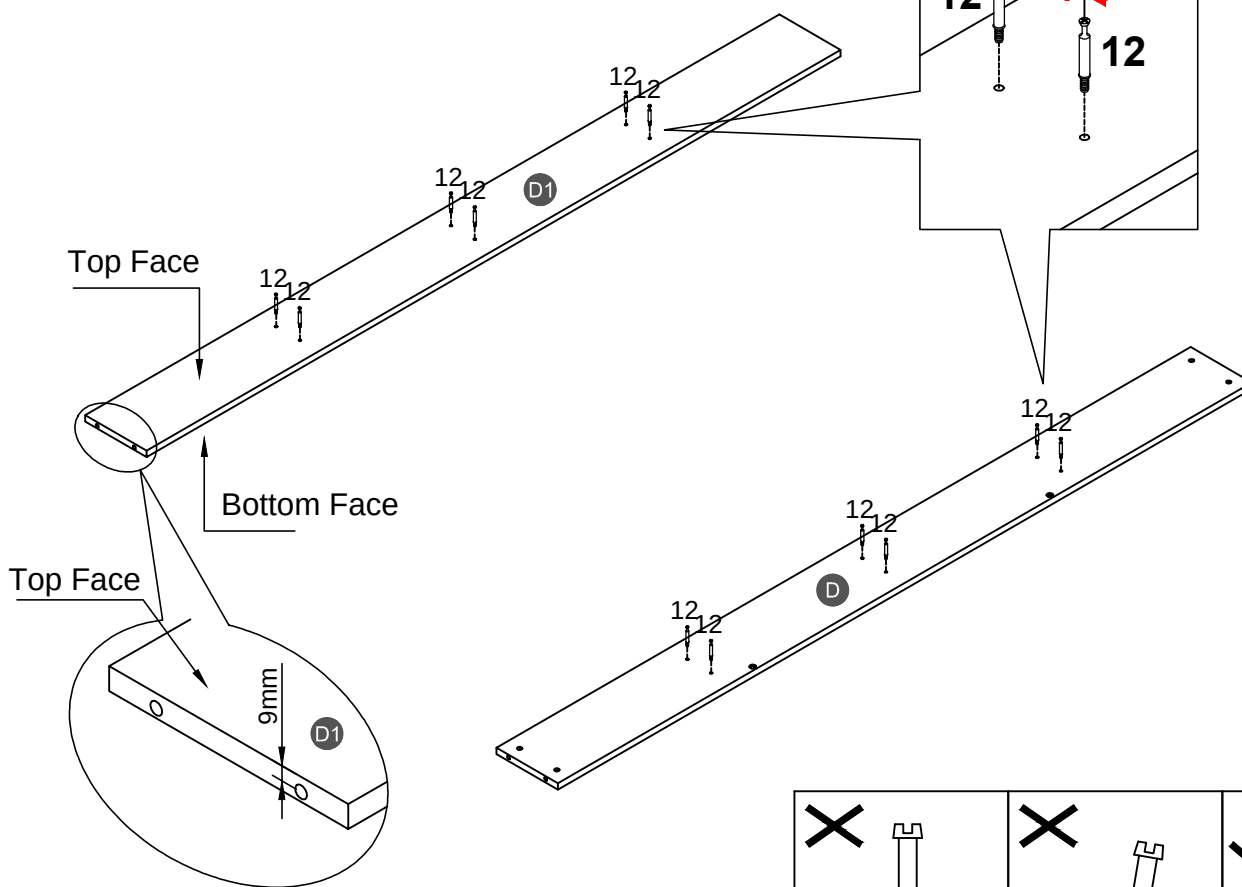

Note: Assemble the cam lock (12) on the top D1.

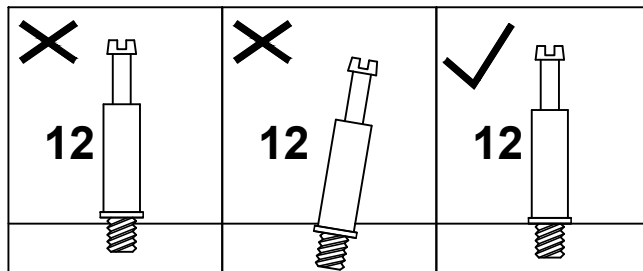

STEP 5:

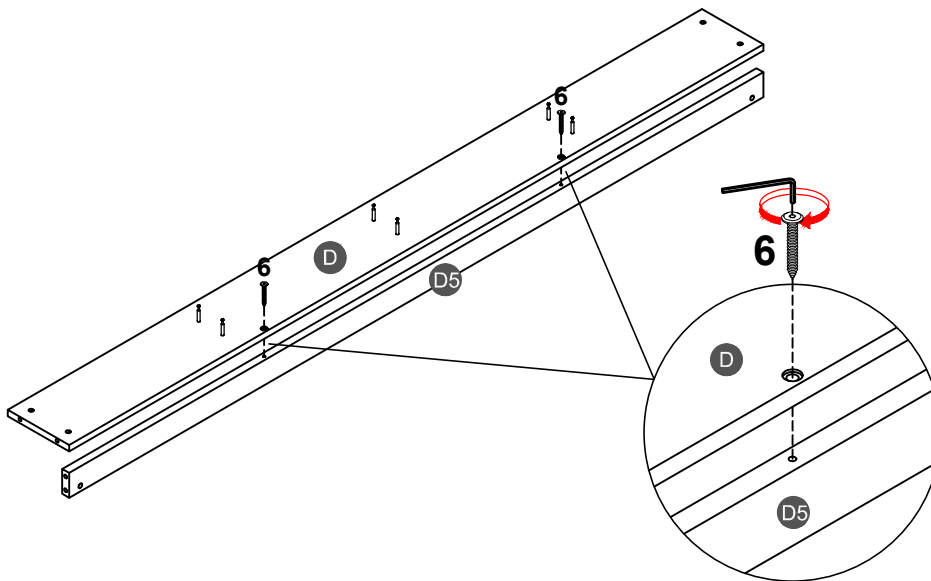


6




2PCS

STEP 6:

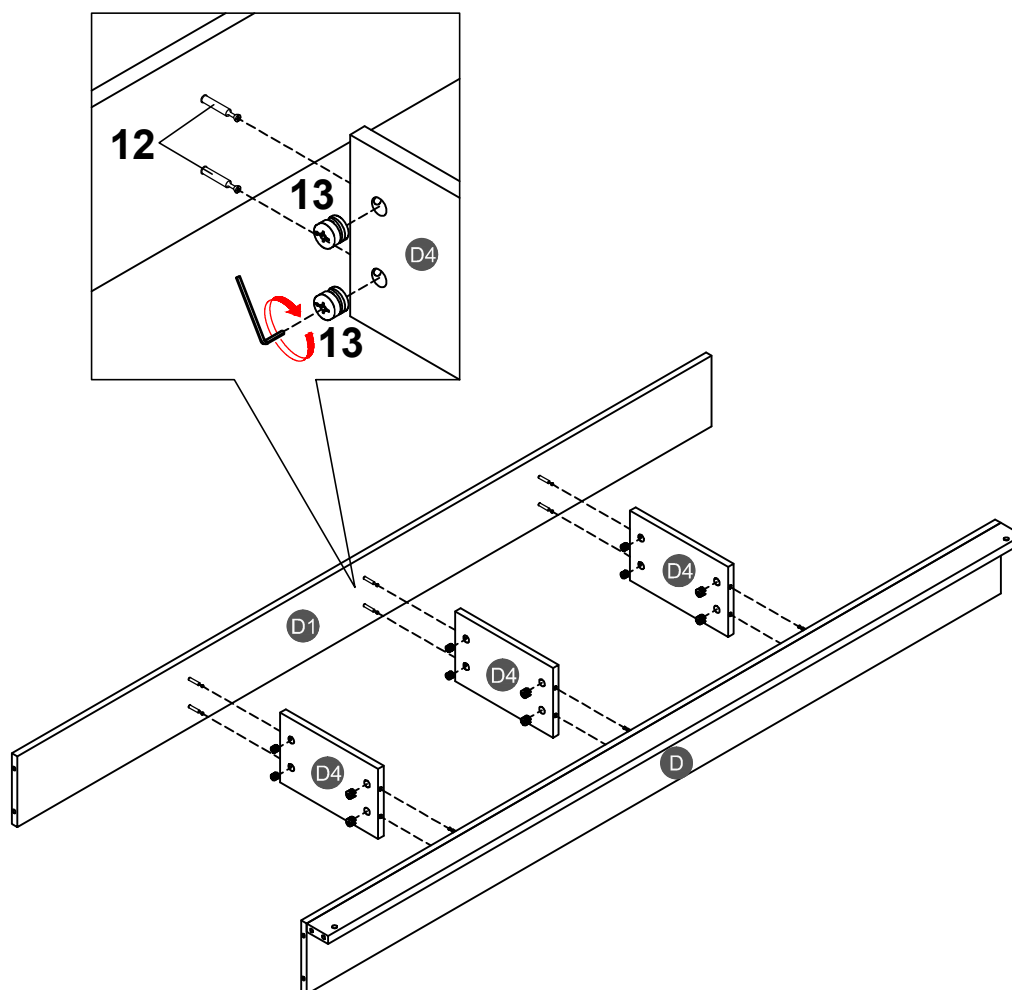
13**12PCS**

Note: Place hardware #13 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #13 into the hole of hardware #12 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)

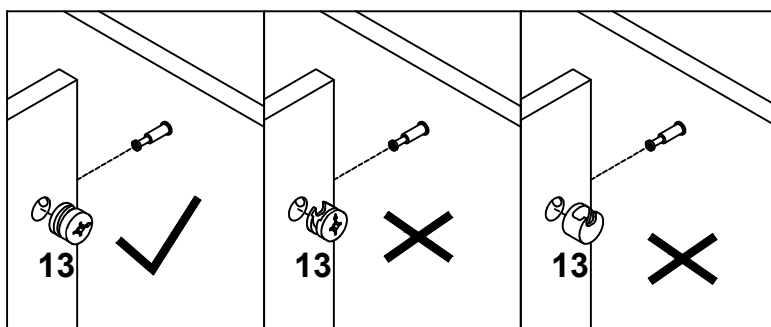


STEP 7:

1		3		5	
2PCS		10PCS		10PCS	

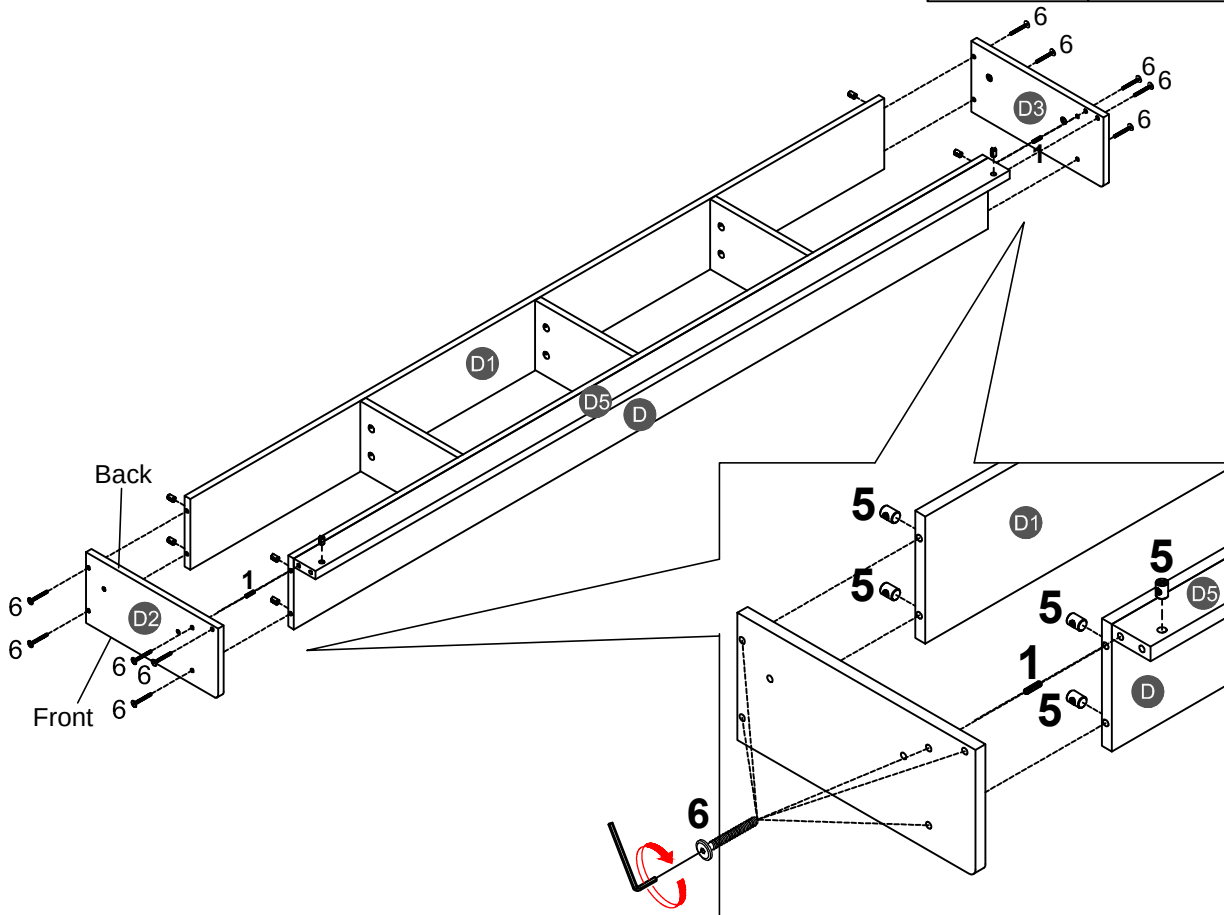


STEP 8:

9	
12PCS	

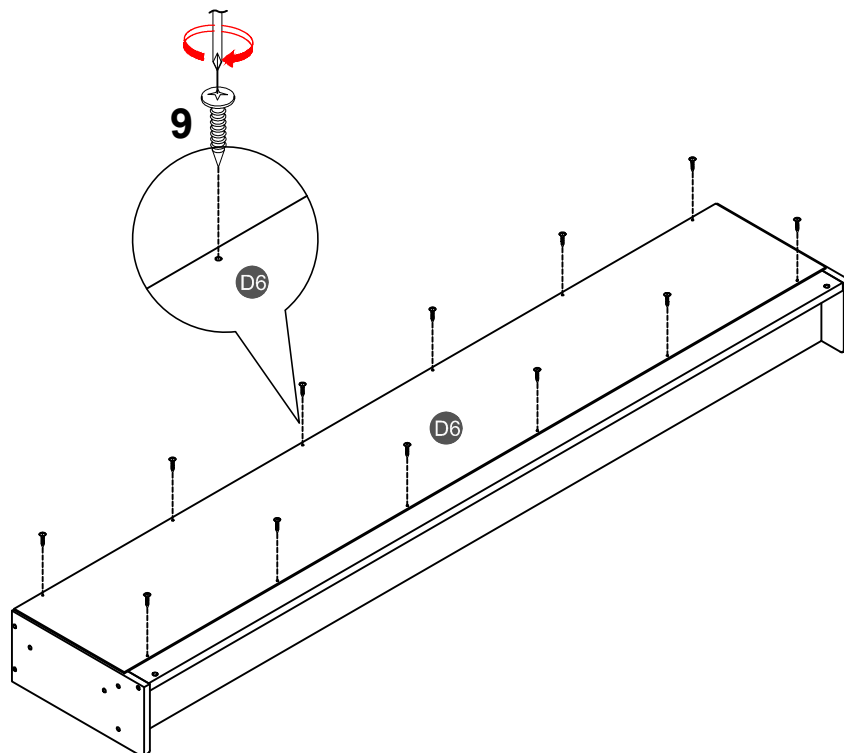

STEP 9:

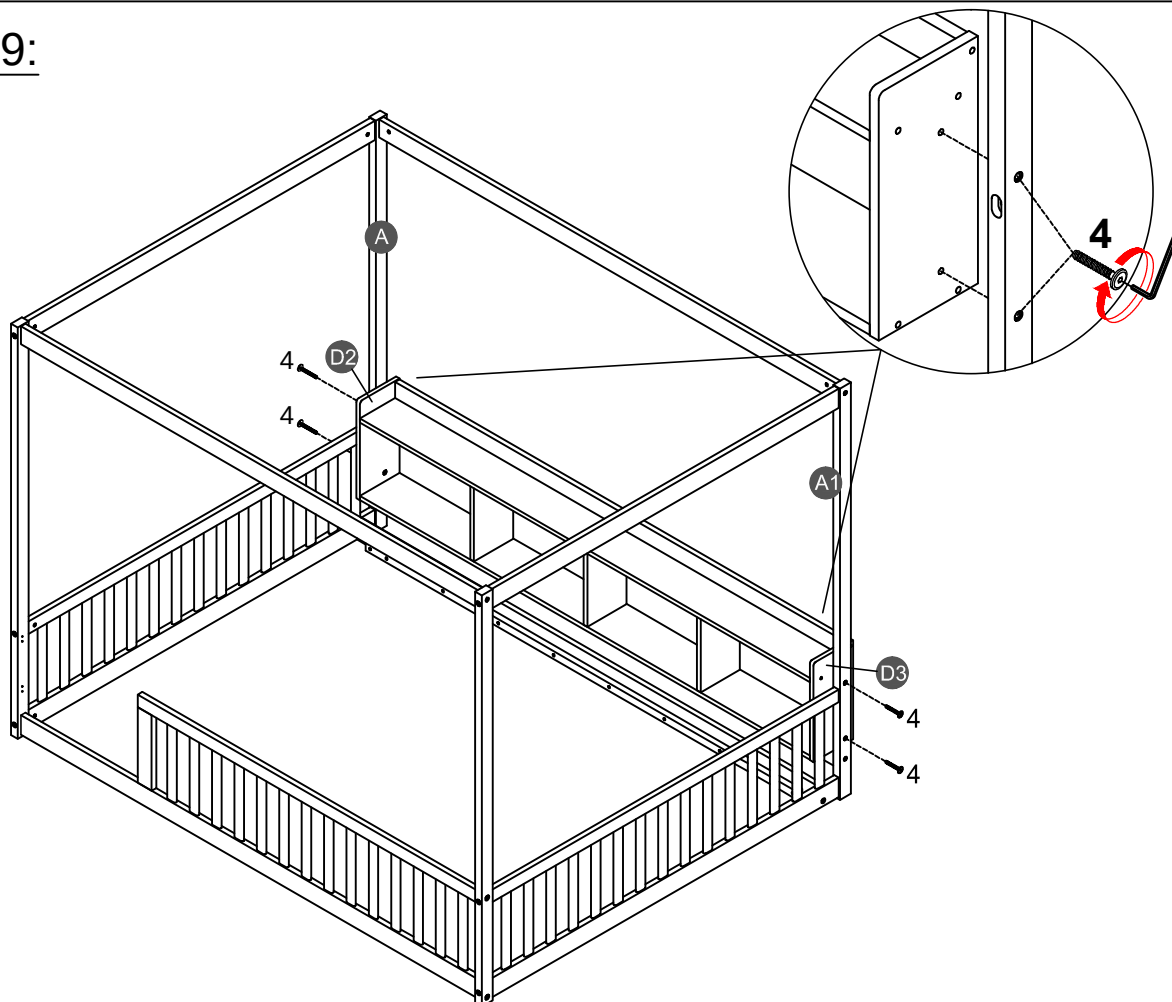


4



4PCS

STEP 10:

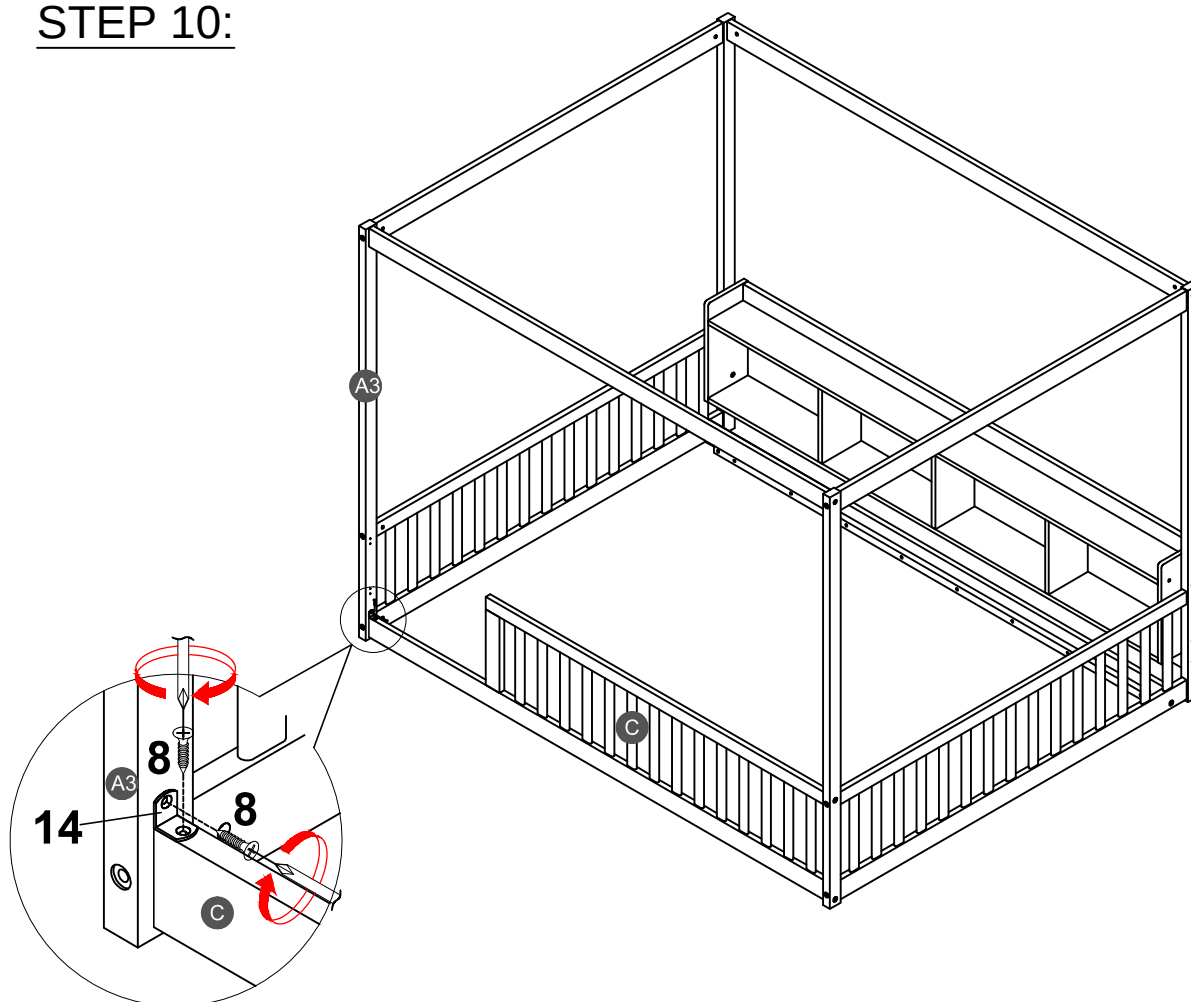

8



2PCS


14



1PC

STEP 11:


8	10
	
4PCS	2PCS

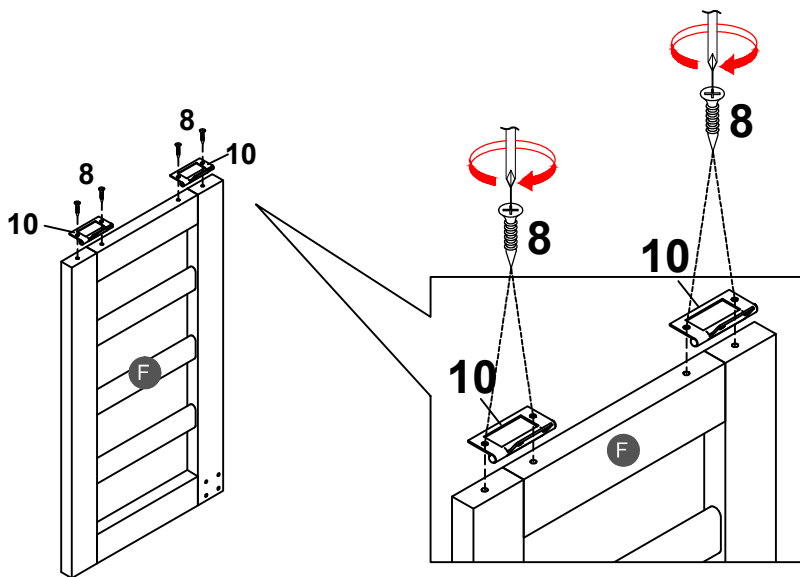


STEP 12:


8

4PCS

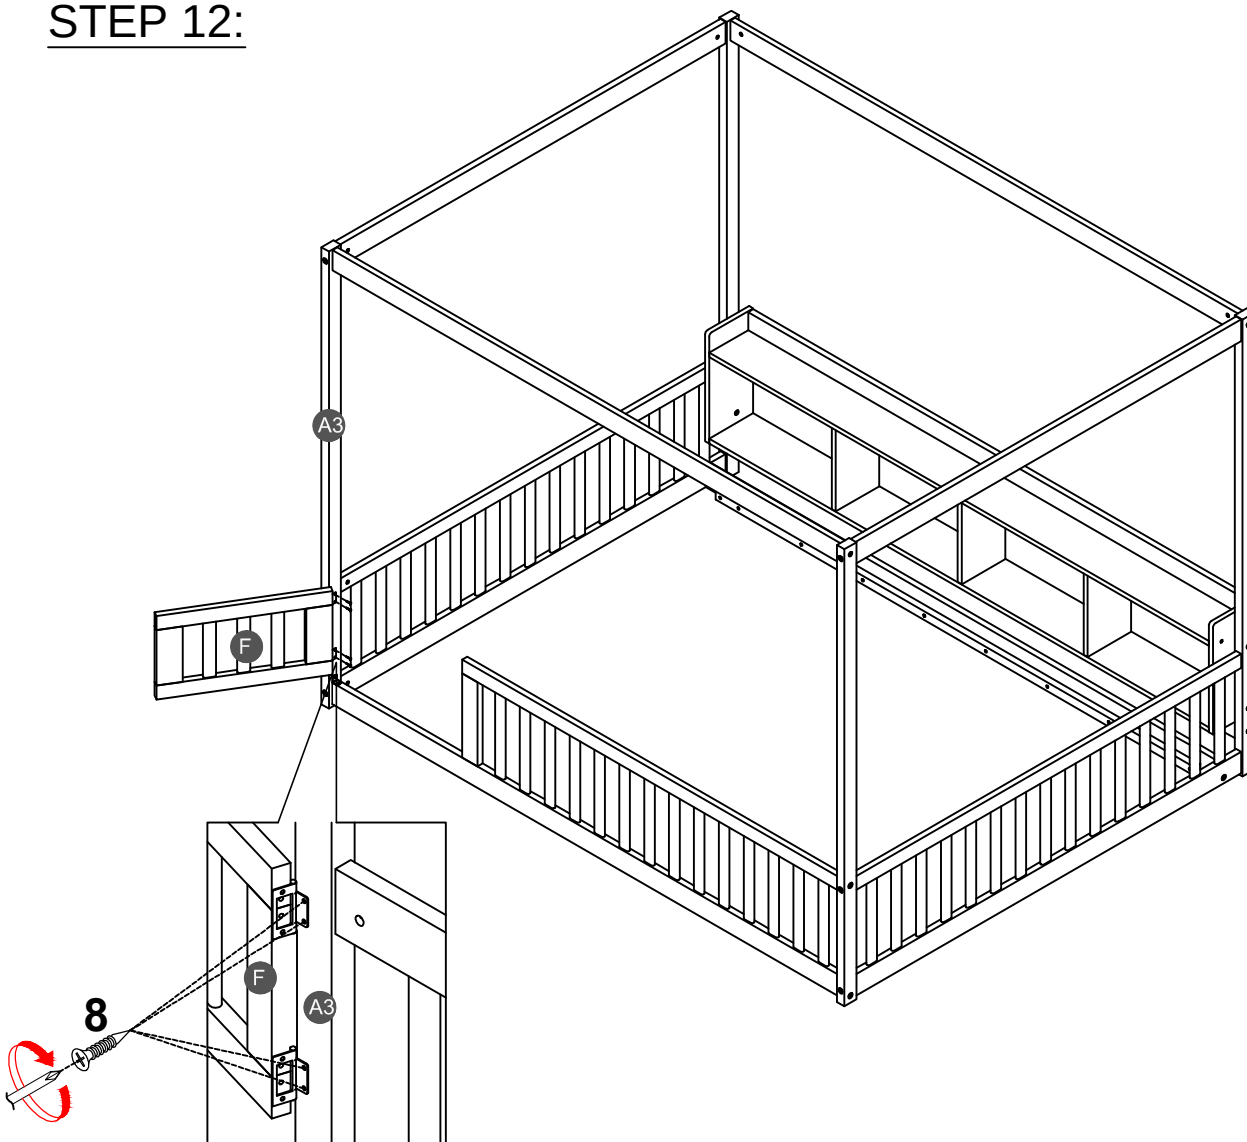

STEP 13:

11	8
	
1PC	6PCS

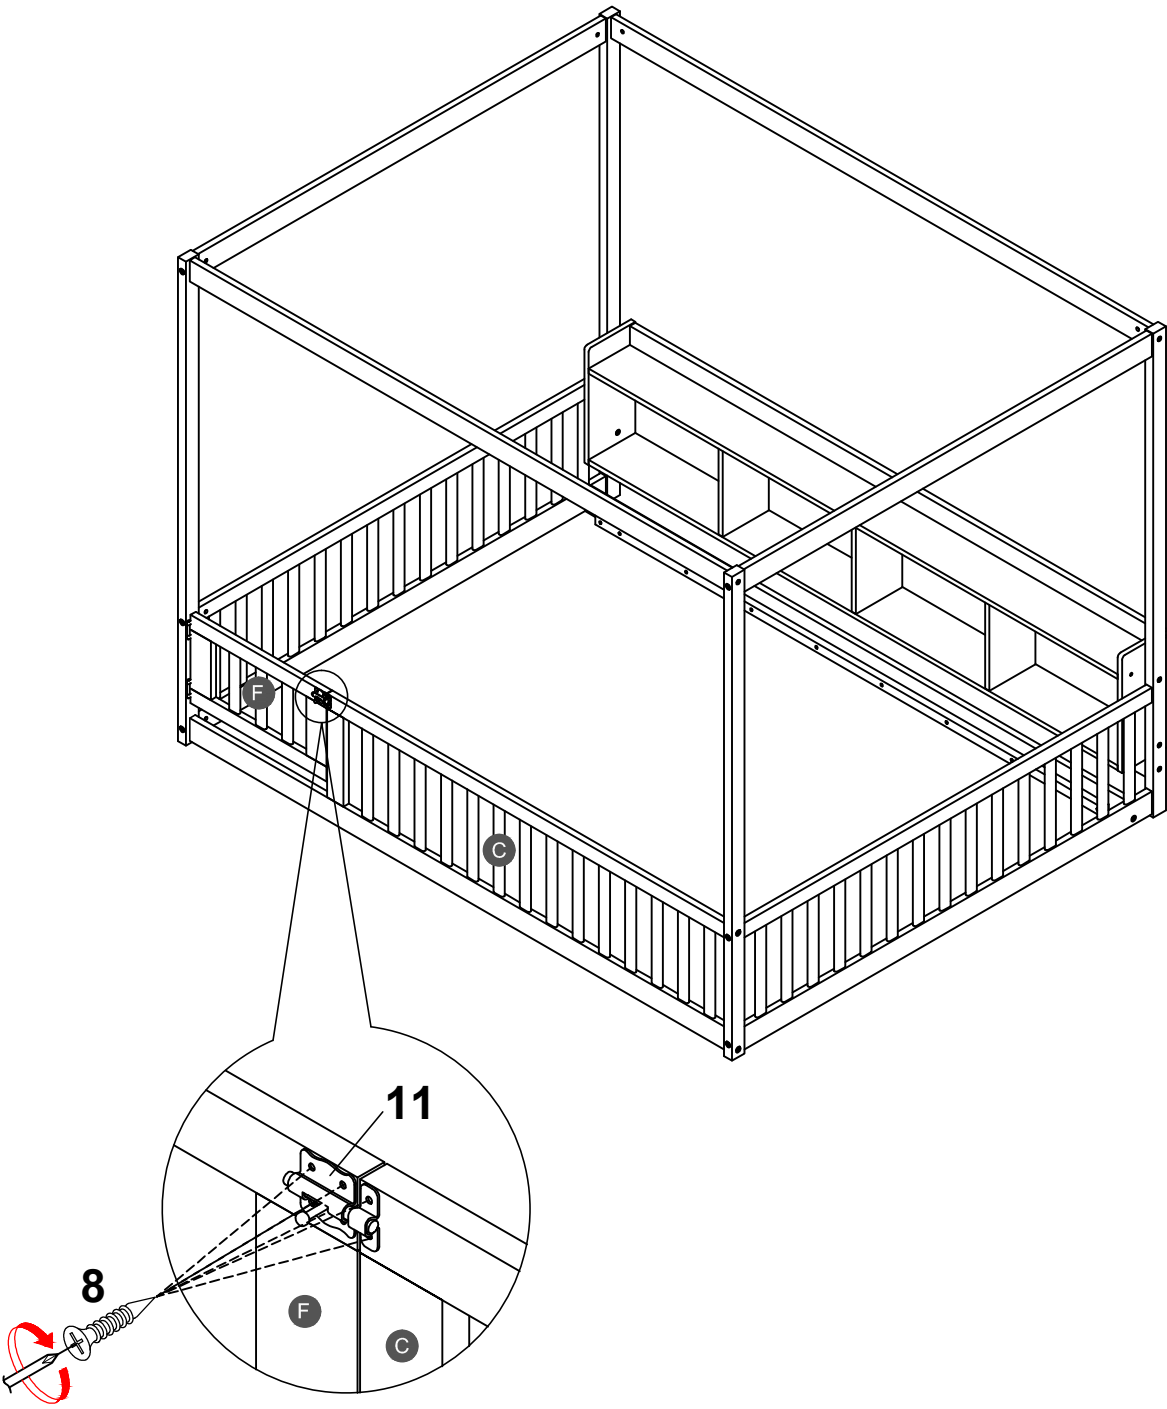




STEP 14:

For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.

7



14PCS

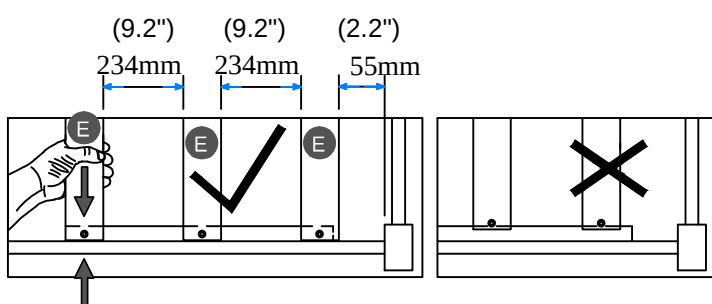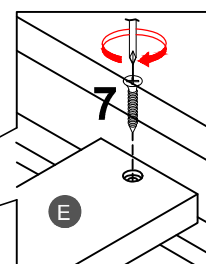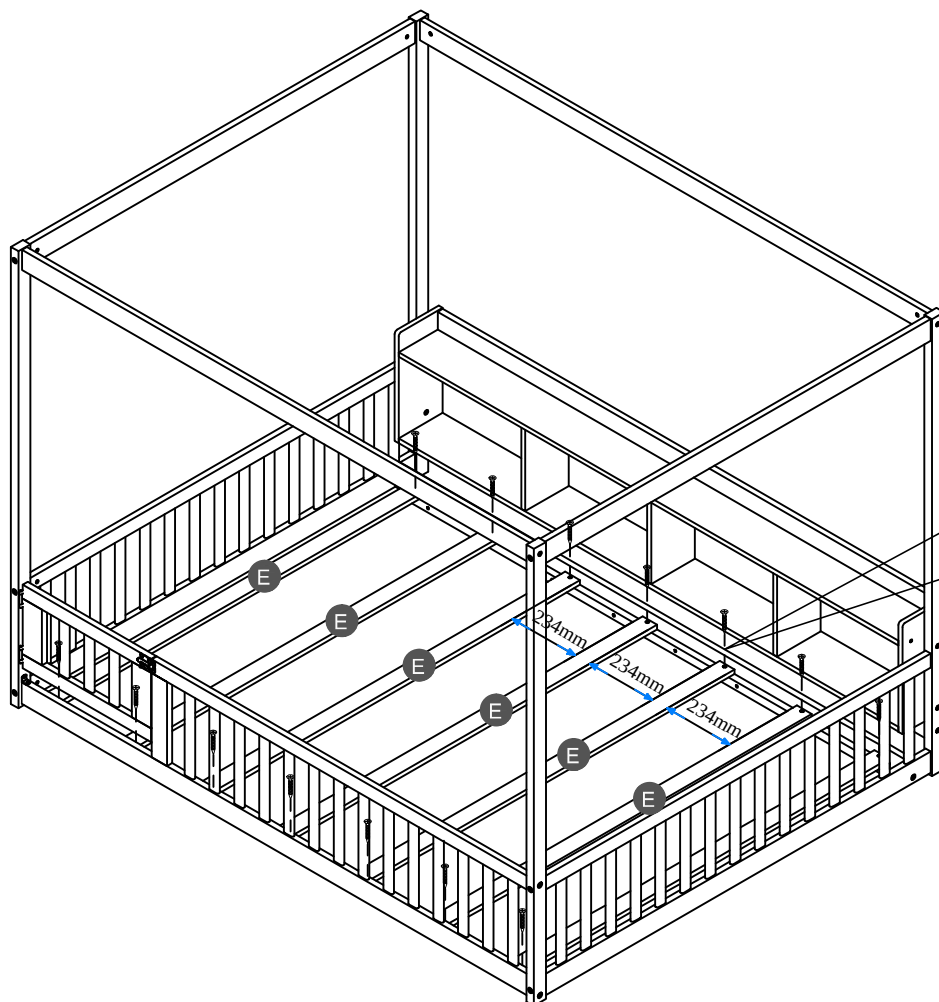

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.