


EROMMY!

Closer to Life!

WQSP255TN

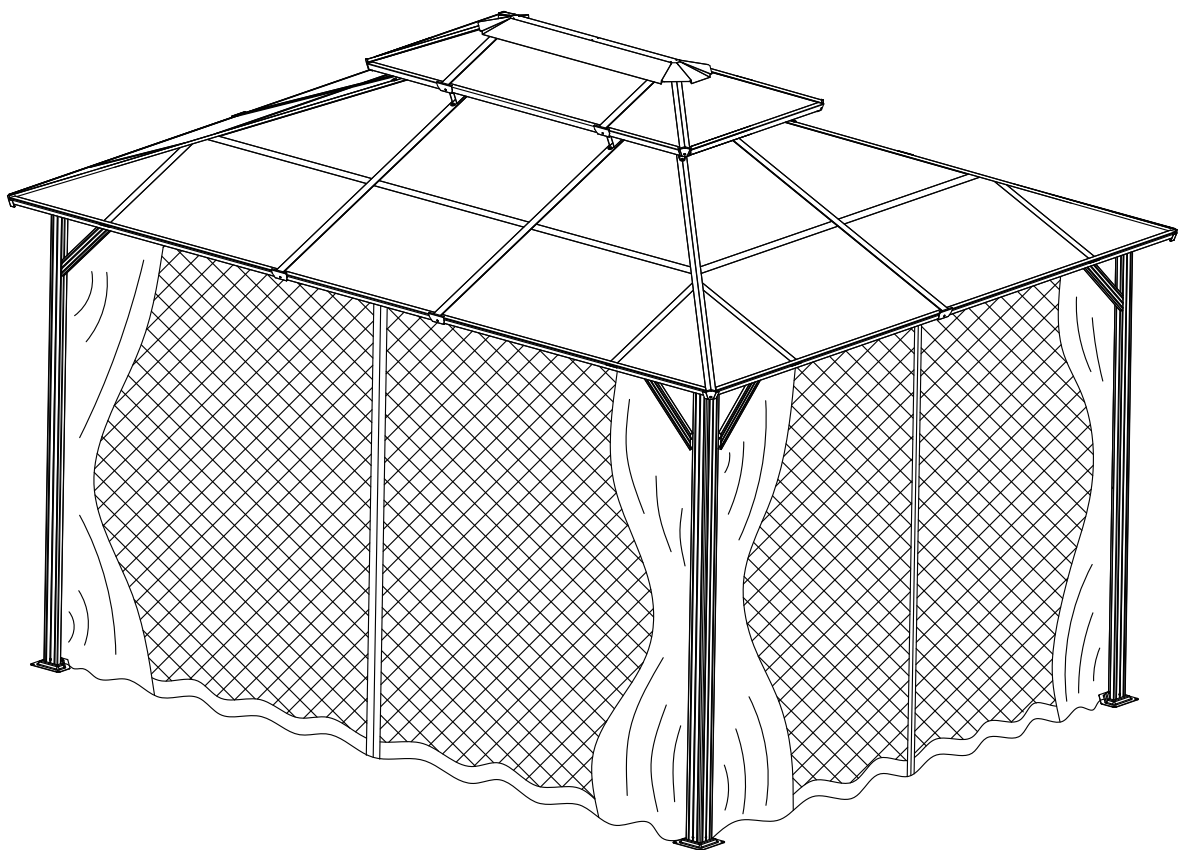

10x12.8ft

PC ROOF GAZEBO

Installation instructions

EROMMY PRODUCT INSTRUCTION

i Remember that the assembly might take (5) hours and requires (4) people.

REMEMBER

EROMMY isn't responsible for replacing parts lost or damaged during assembly. If you have issues, Email: **service@erommy.com** or Tel: **8886766299** instead of returning the unit.

IMPORTANT

Finalize site preparation and foundation construction before unpacking. Remove all parts from the packaging and check the right count and type of pieces before assembling.

! CAUTION

- Consult local authorities to ensure you have the required permits and are aware of any applicable local building regulations.
- It's crucial to review the site preparation information in the manual beforehand to get everything ready.
- Read instructions thoroughly before starting assembly. Follow the steps carefully because the kit contains parts that might be damaged if constructed incorrectly.
- Please handle the kit with caution since some parts have sharp metal edges.
- Avoid working in severe winds or extreme cold and wear gloves, eye protection, and long sleeves during assembly or maintenance.
- When filling it, store heavier items near the bottom. The product isn't intended for children to play in, and don't stand, sit, or store anything on the roof.

BRAND STORY

Guided by the ideology of “Closer to Life”, EROMMY is committed to bringing you refined and trustworthy products that fit your needs. Our vision is to empower every customer to stay close to nature and ultimately transform their lifestyle.

EROMMY, Closer to Life!



PACKING LIST

Serial number

Box A




Part name	C	C1	D1	D4	E	E1	E2
Qty	4	4	4	4	4	4	4
Part name	E3	E4	F2	F3	F4	G	H
Qty	4	2	2	2	2	4	1
Part name	H1	I	J	J1	J2	J3	K
Qty	1	2	4	4	4	4	4
Part name	K1	K2	K3	L	L1	L2	Q
Qty	4	4	2	2	2	2	1
Part name	Q1	Q2	S	T	T1	M	N
Qty	8	2	4	4	1	4	4
Part name	N1	O	O1	O2	O3	P	P1
Qty	4	8	8	4	6	8	10
Part name	P2	R	U				
Qty	3	4	80				








PACKING LIST


Serial number

Box B


Part name	A	B	B1	B2	B3	B4	B5
Qty	4	2	2	2	2	2	2
Part name	B6	B7	D	F	F1	D1	D2
Qty	2	2	4	4	4	4	2
Part name	G1						
Qty	2						

	A x4
	B x2
	B1 x2
	B2 x2
	B3 x2
	B4 x2
	B5 x2
	B6 x2
	B7 x2
	C x4
	C1 x4
	D x4
	D1 x4
	D2 x4
 	D3 x2

	D4 x4
	E x4
	E1 x4
	E2 x4
	E3 x4
	E4 x2
	F x4
	F1 x4
	F2 x2
	F3 x2
	F4 x2
	G x4
	G1 x2




H x1




H1 x1




I x2

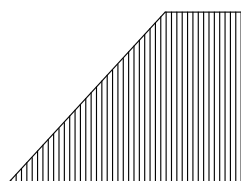


J x4

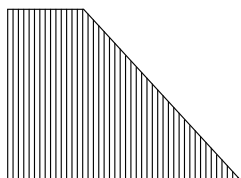


J1 x4

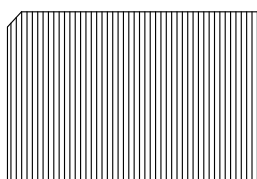


J2 x4

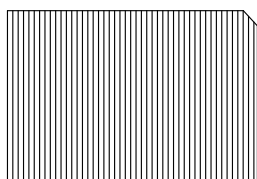


J3 x4

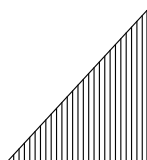


K x4

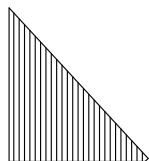


K1 x4

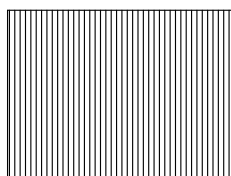


K2 x4




K3 x2



L x2




L1 x2



L2 x2





M x4






N x4






N1 x4

	O x8
	O1 x8
	O2 x4
	O3 x6
	P x8
	P1 x10
	P2 x3
	Q x1
	Q1 x8
	Q2 x2
	R x4
	S x4
	T x4

		T1 x1
		U x80
 Ø11 * Ø6* 20mm		U1 x8
		V x32
 M6 * 15 mm		W x128
 M6 * 20mm		W1 x20
 M6 * 35 mm		X x8
 M4 * 12 mm		X1 x16
 ST4.8* 12 mm		Y x12
 M6		Y2 x3
		Z x12
		Z1 x1
		Z2 x1
		Z3 x1


No.	Qty	Picture	No.	Qty	Picture
A	4		W	12	 M6 * 15 mm
R	4				

Step1

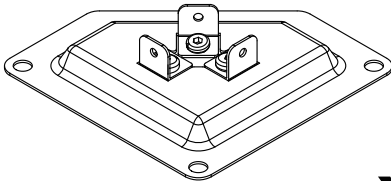
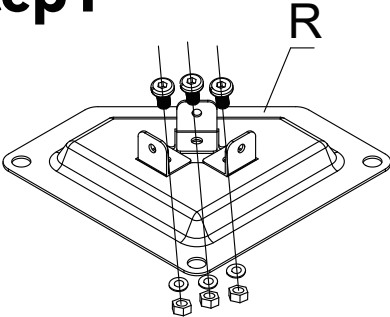


x4


Step2

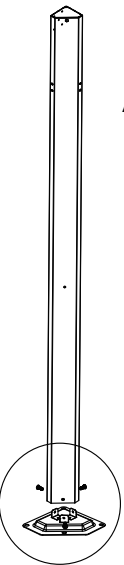

A







W

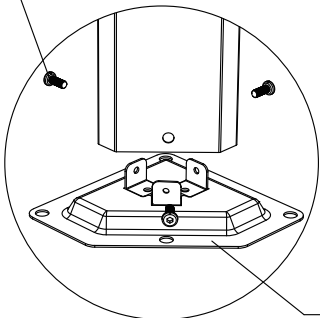



R

Z1	Z2
	





4pcs

No.	Qty	Picture	No.	Qty	Picture
B	2		B1	2	
B2	2		B3	2	
B4	2		B5	2	
B6	2		B7	2	
W	16	 M6 * 15 mm			


Step3

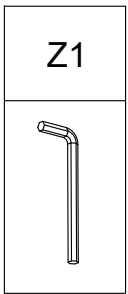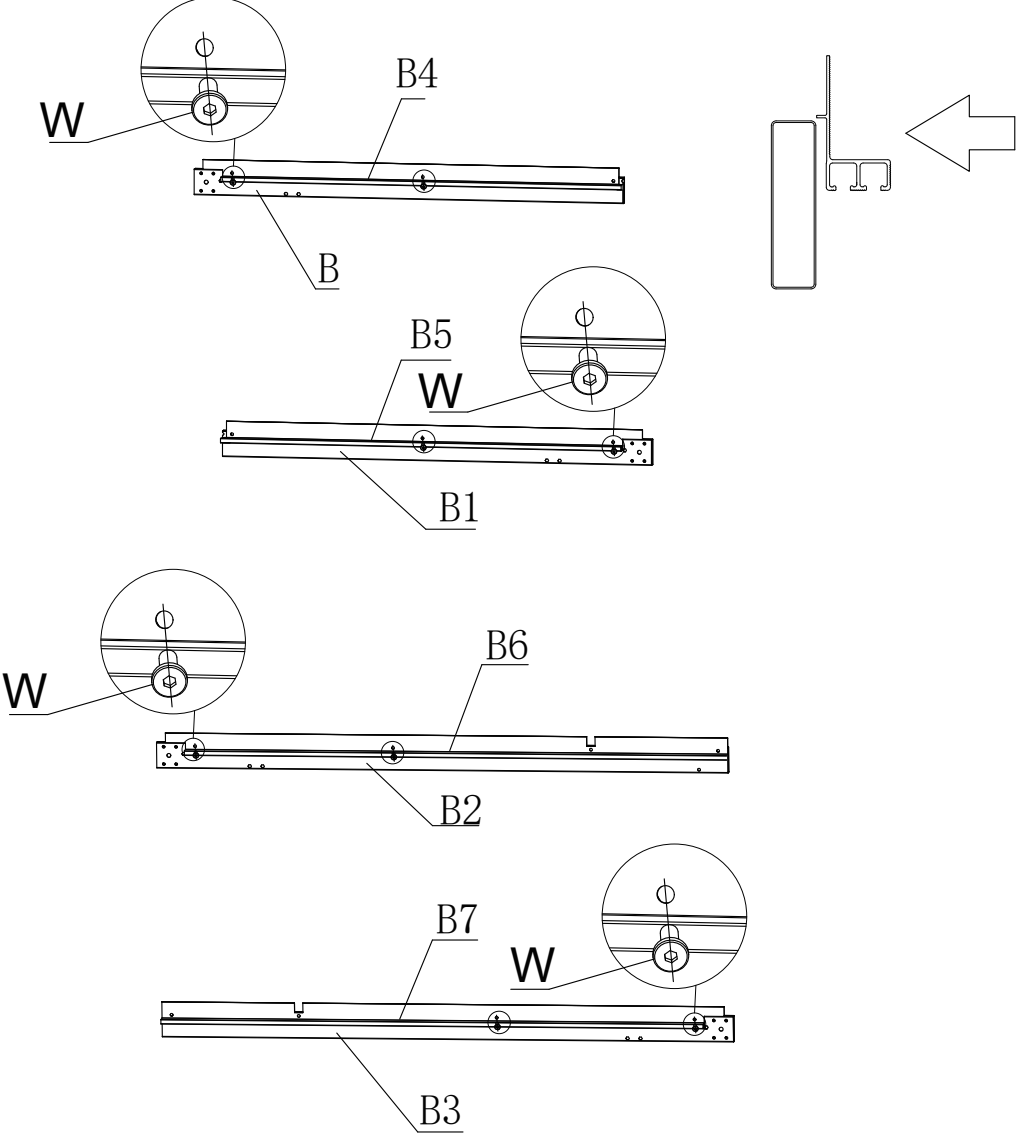

x2


No.	Qty	Picture	No.	Qty	Picture
B	2		B1	2	
B2	2		B3	2	
W	40	 M6 * 15 mm	M	4	

Step4

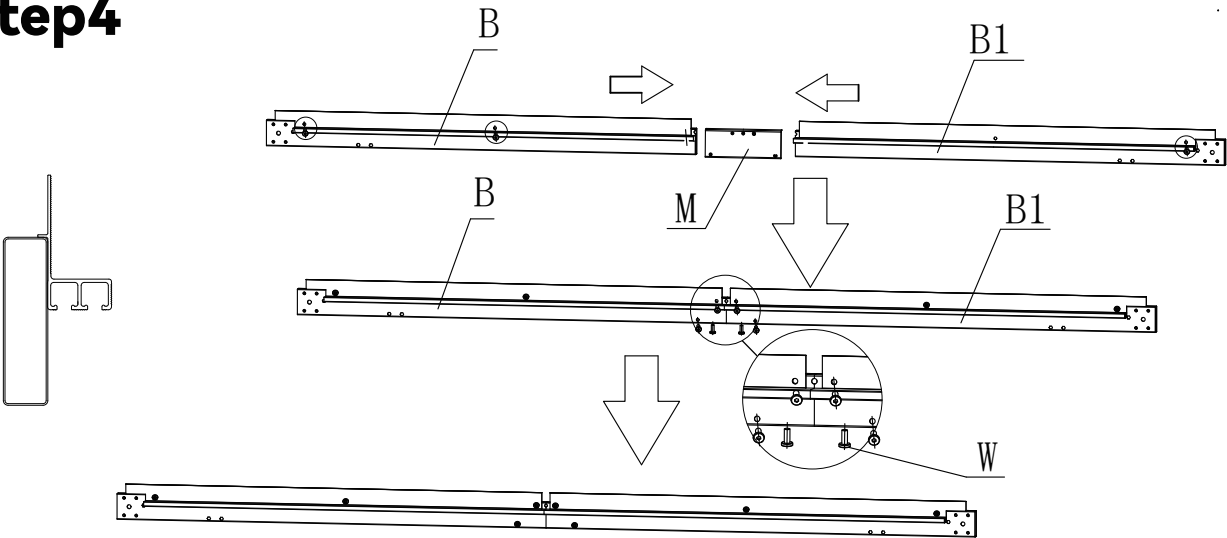


x2

Step5


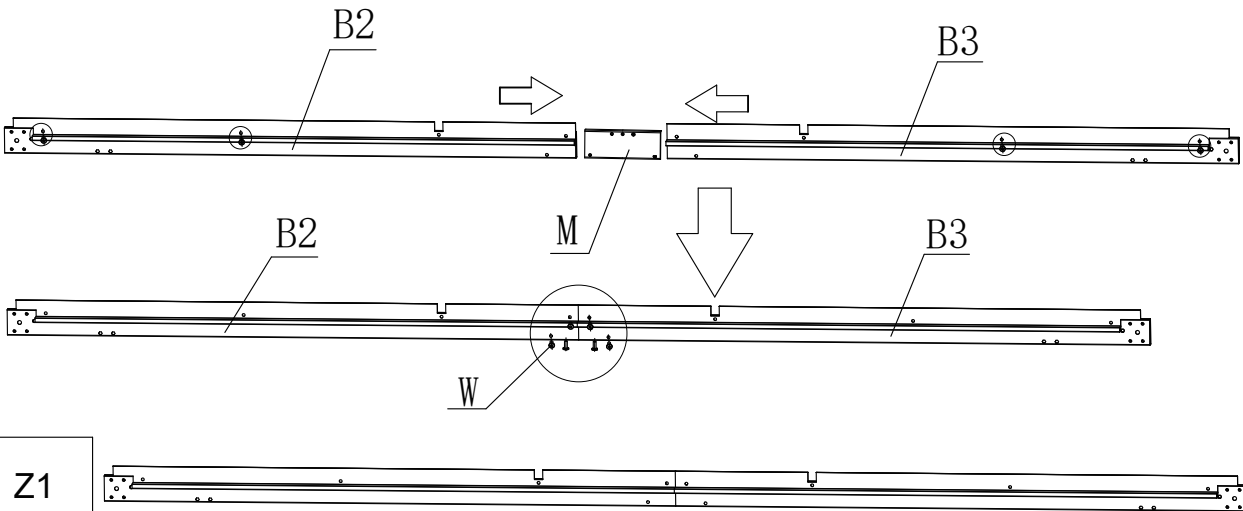


x2

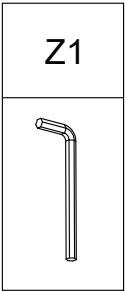


No.	Qty	Picture	No.	Qty	Picture
V	32				

Step6

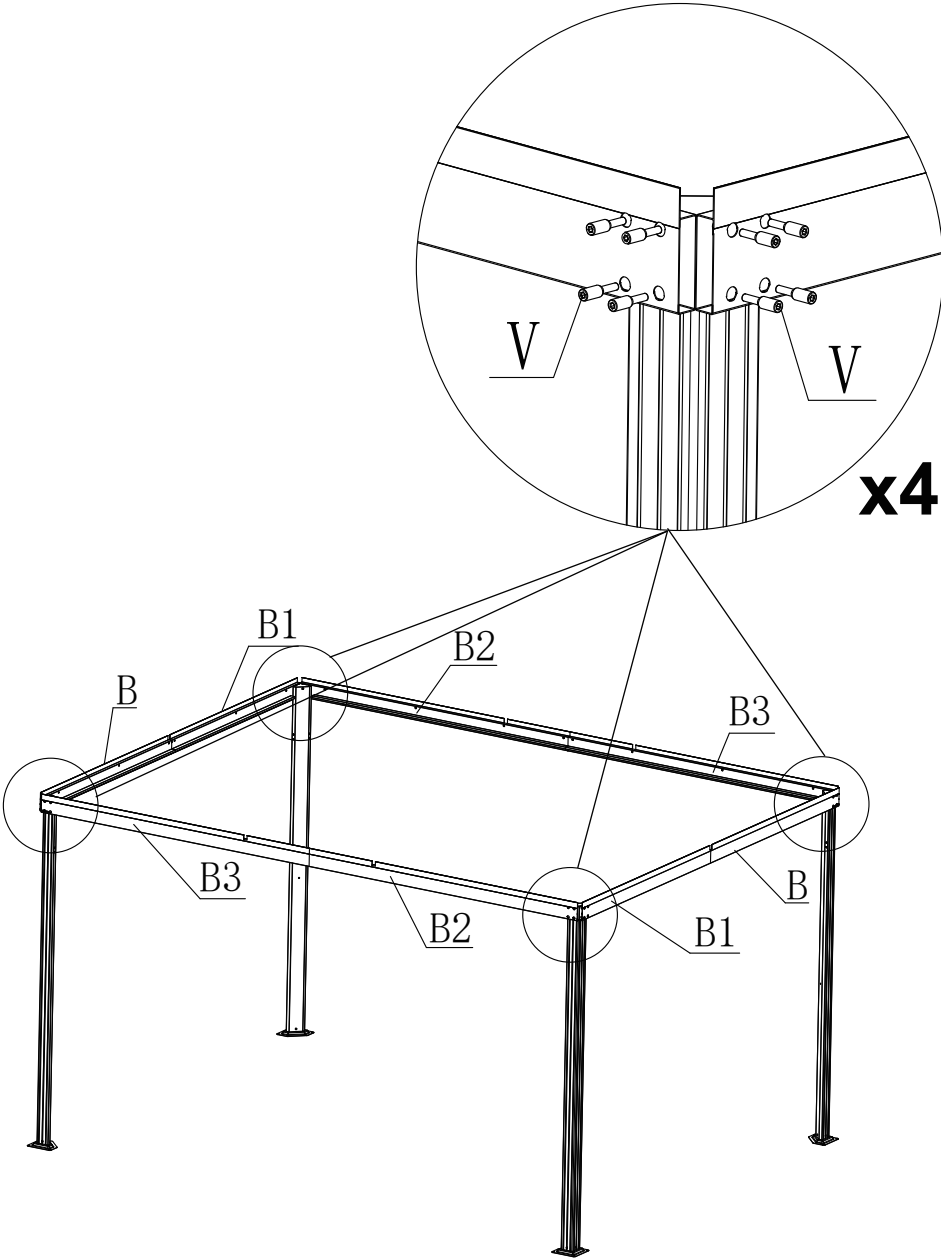

No.	Qty	Picture	No.	Qty	Picture
C	4		W	24	 M6 * 15 mm
C1	4		O	8	
			X1	16	 M4 * 12 mm



Step7

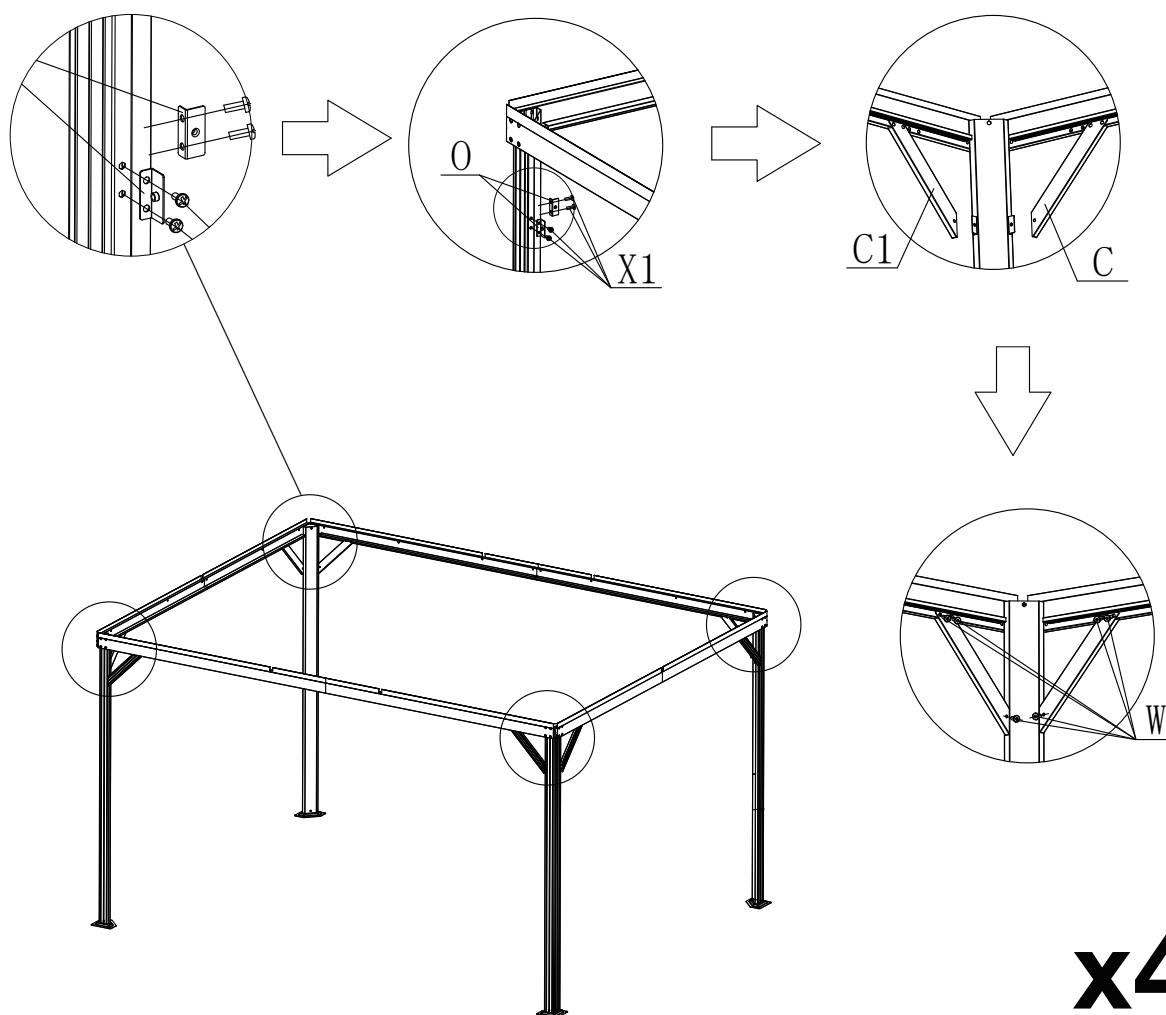

Z1	Z3
	


No.	Qty	Picture	No.	Qty	Picture
N	4		Y	12	 ST4.8* 12 mm
N1	4				


Step8

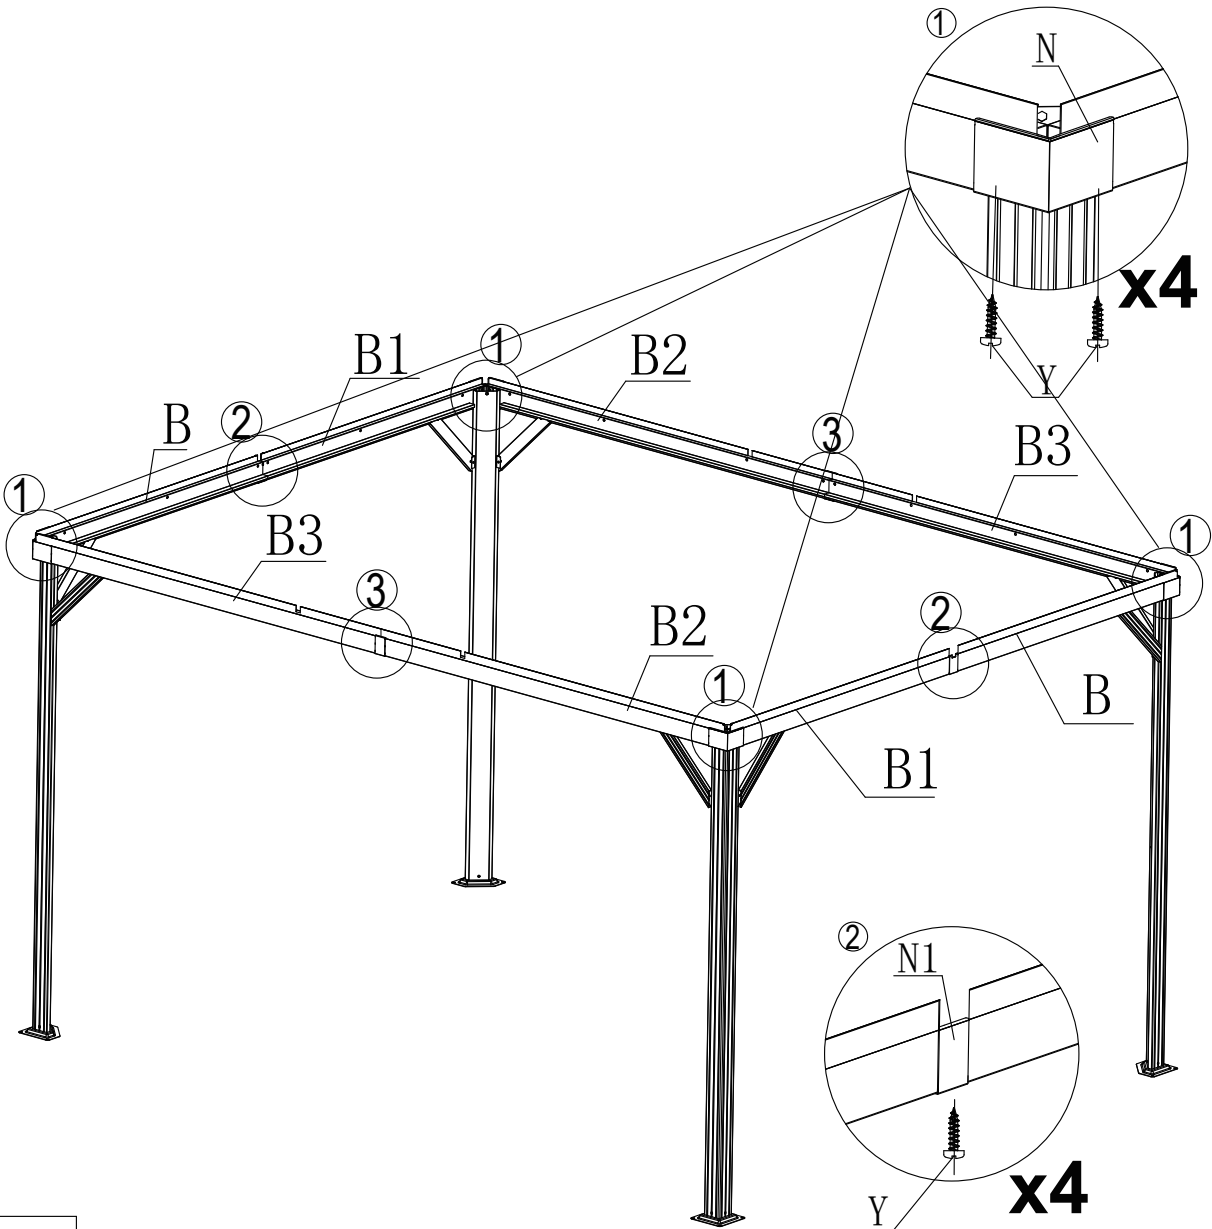


No.	Qty	Picture	No.	Qty	Picture
D	4		W	16	 15 mm
D1	4		O1	4	
O2	4				

Step9


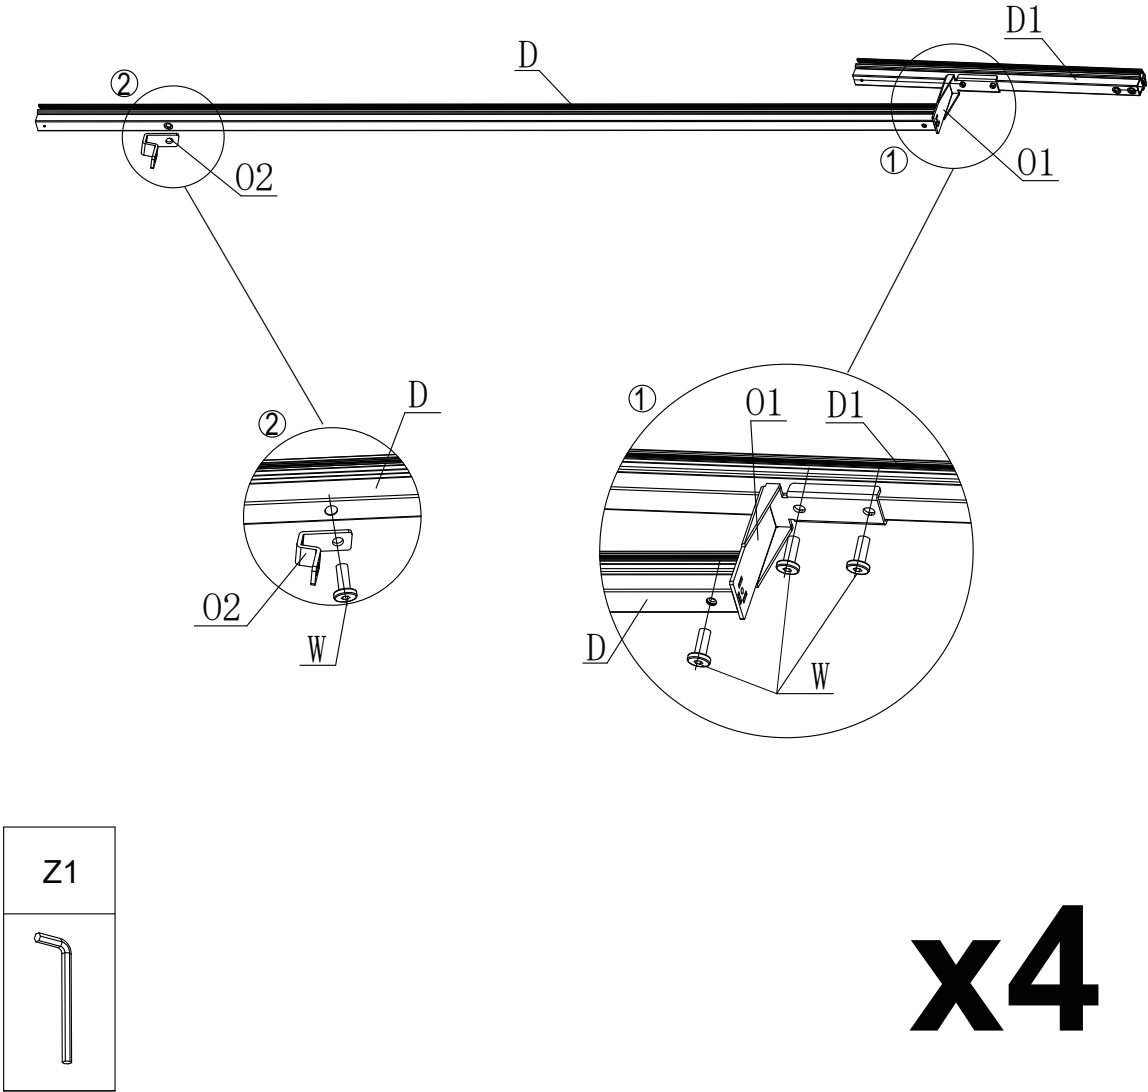


No.	Qty	Picture	No.	Qty	Picture
H	1		W	12	 M6 * 15 mm

Step10

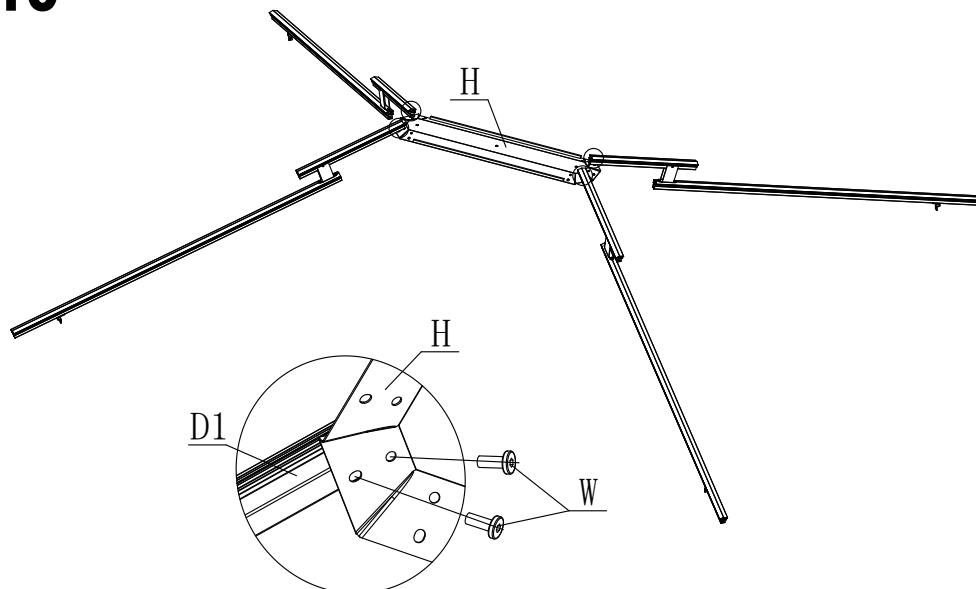

Step11


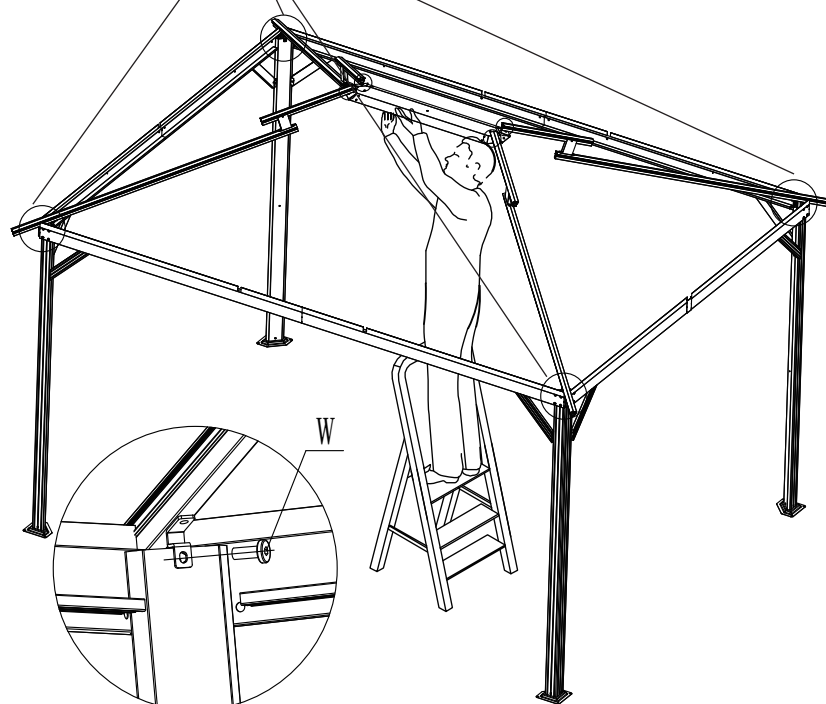


Note:

1. Have one person stand on the ladder to lift and hold "H" while others fasten the screws of "V"
2. Do not release "H" until all the "V" screws are fully tightened.


No.	Qty	Picture	No.	Qty	Picture
D2	4		W	16	 M6 * 15 mm
D4	4		O1	4	
O3	4				

Step12

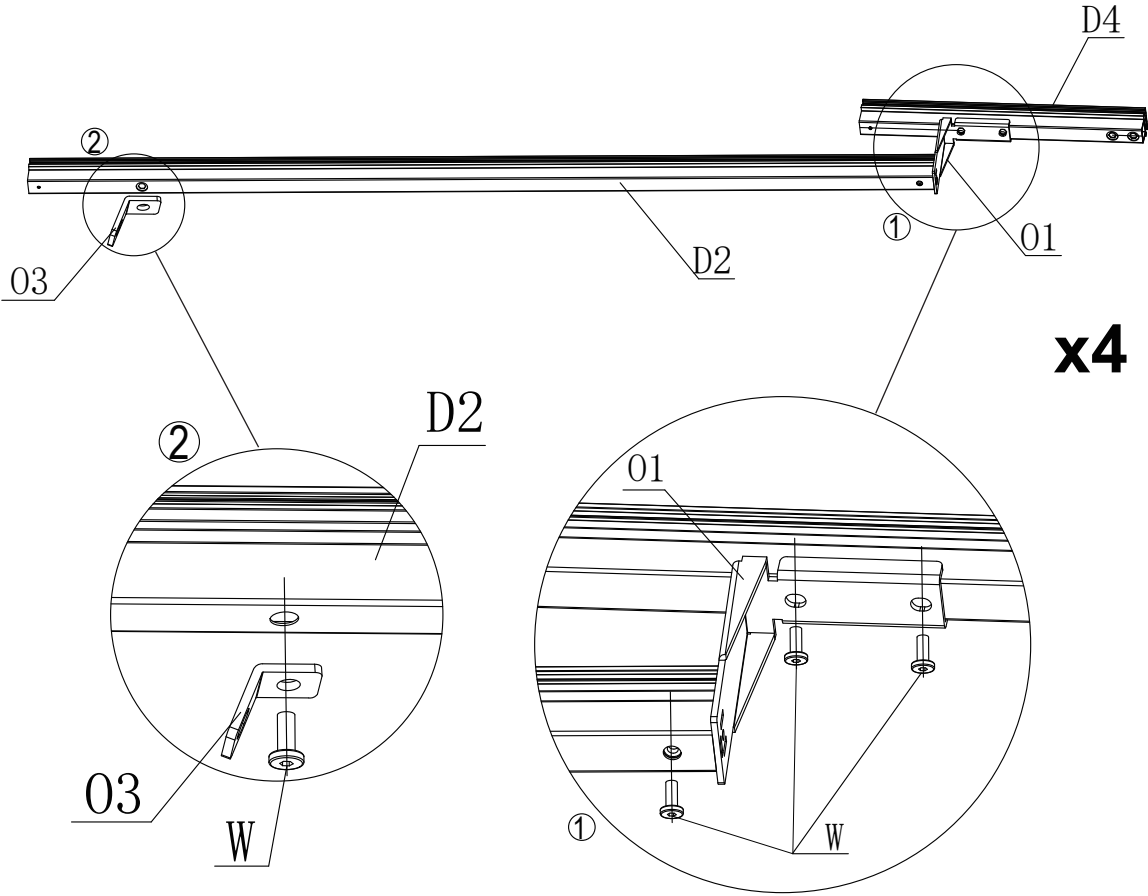



No.	Qty	Picture
W	12	 15 mm

Step13

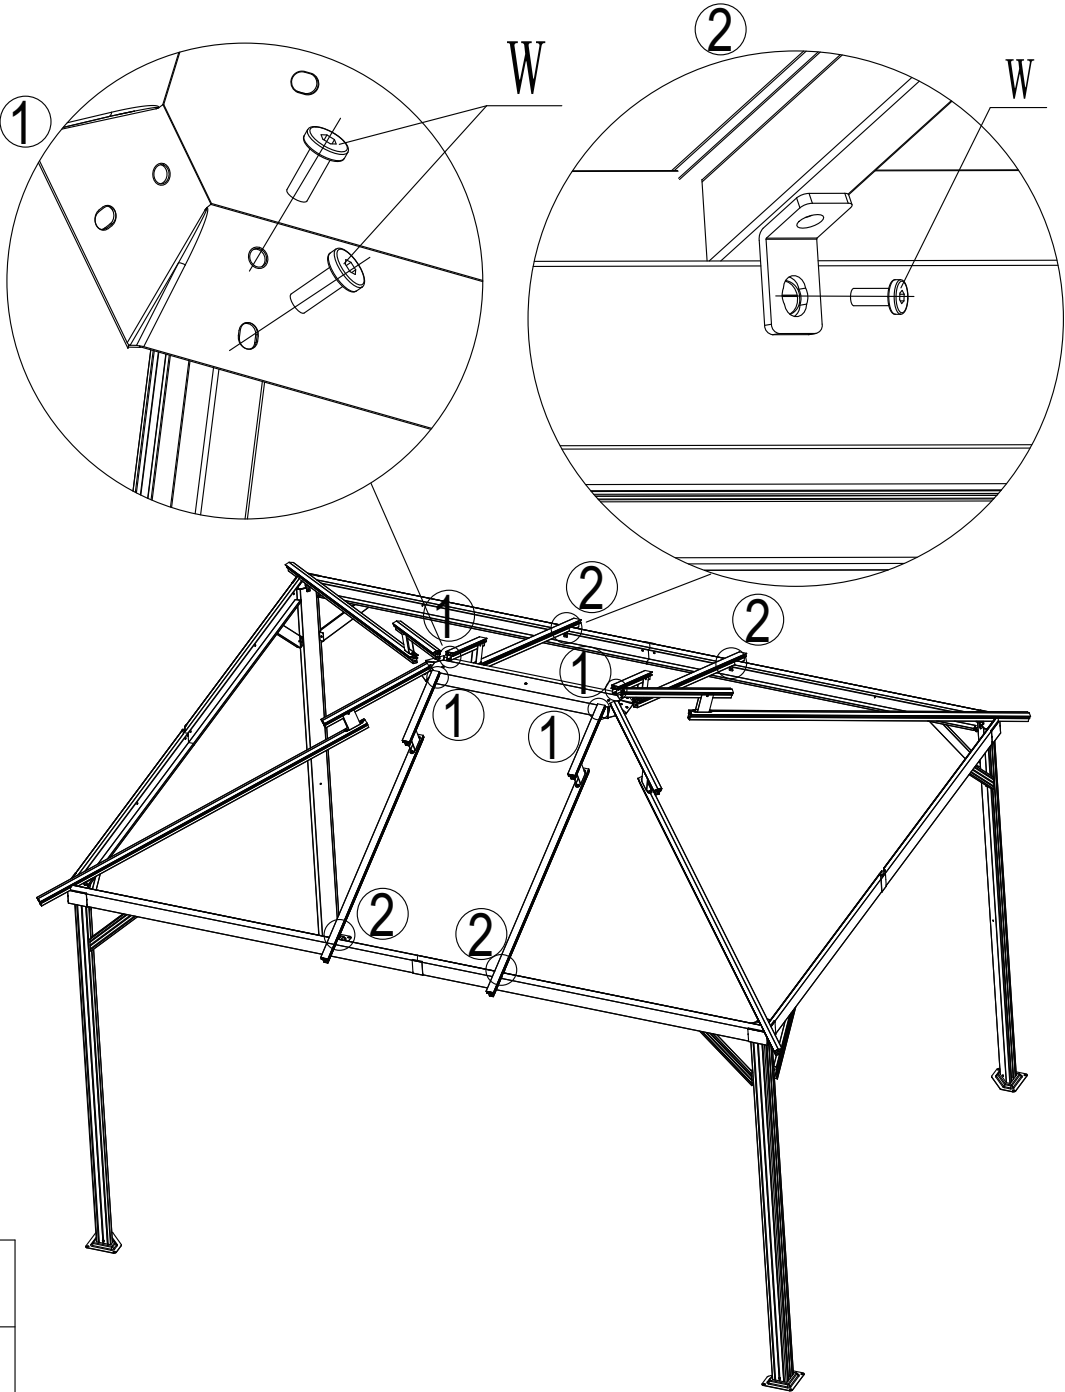



No.	Qty	Picture	No.	Qty	Picture
G1	2		W	4	 M6 * 15 mm

Step14

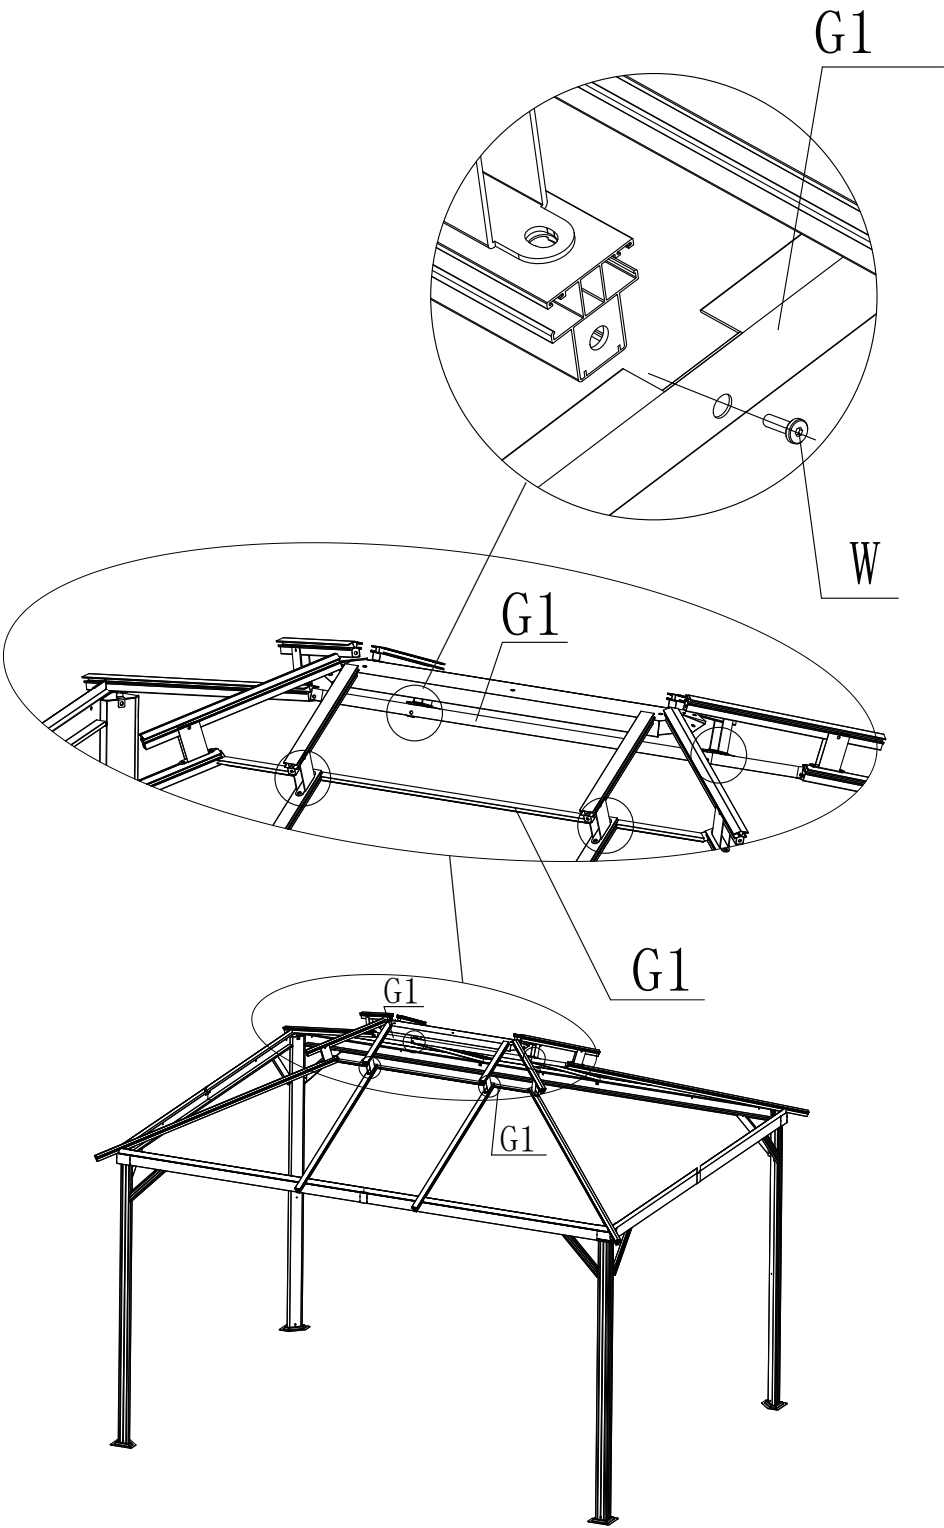



No.	Qty	Picture	No.	Qty	Picture
D3	2		W	4	 M6 * 15 mm
I	2		O3	2	

Step15


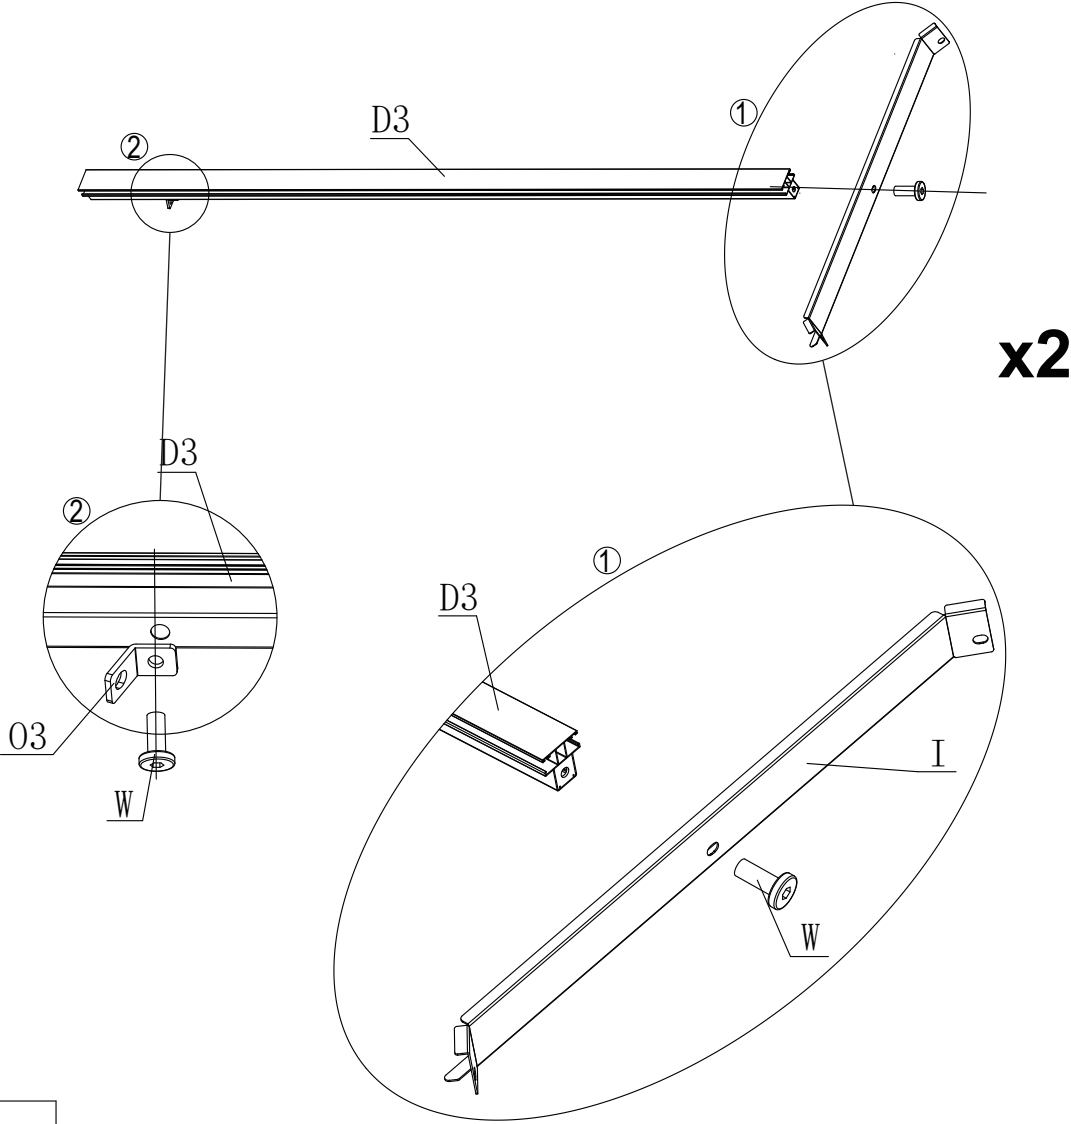


No.	Qty	Picture
W	6	 M6 * 15 mm


Step16

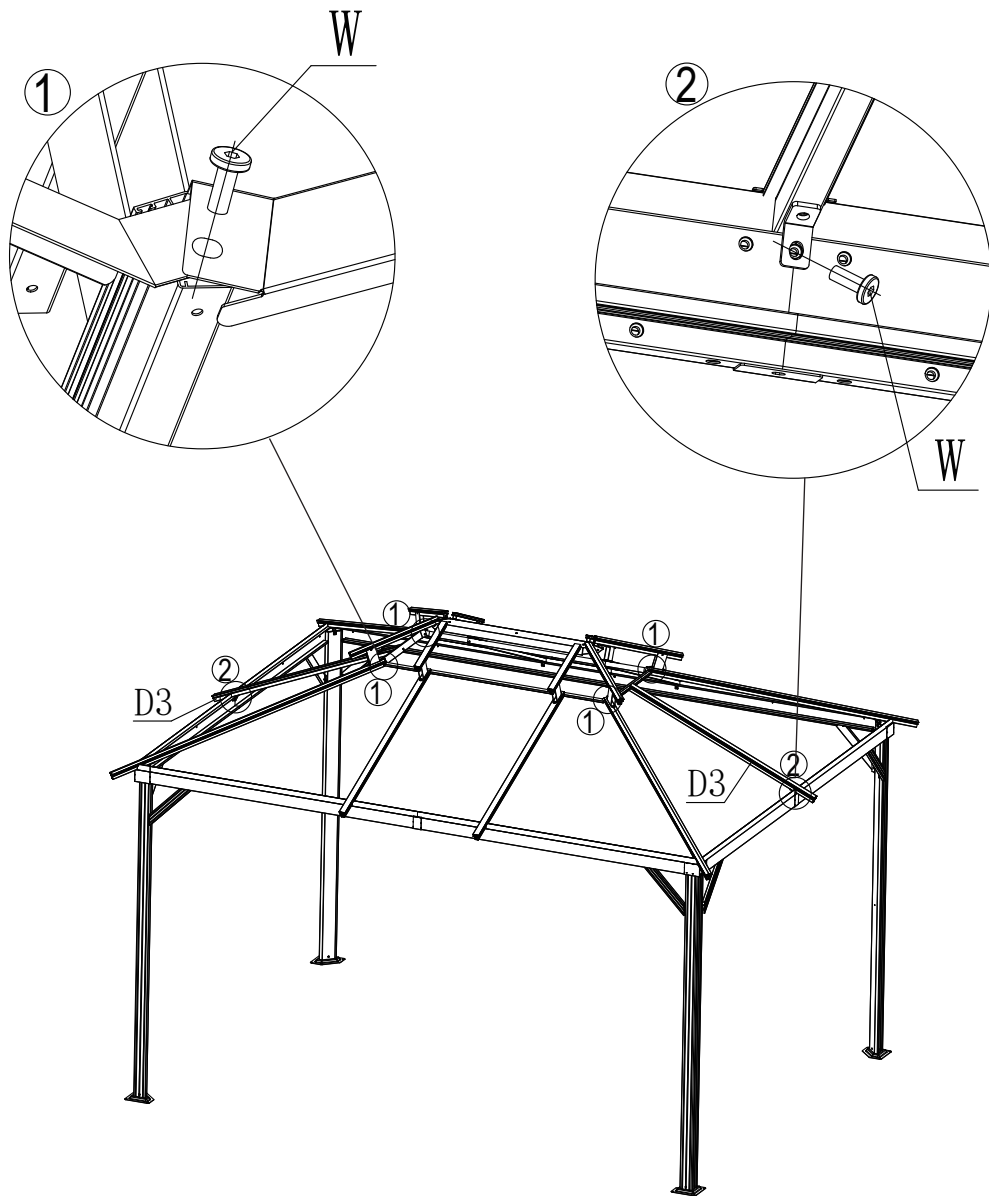



Step17

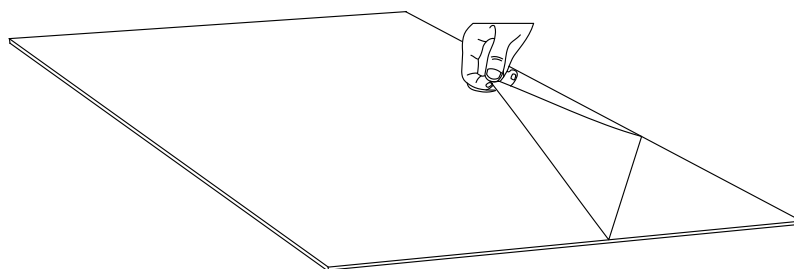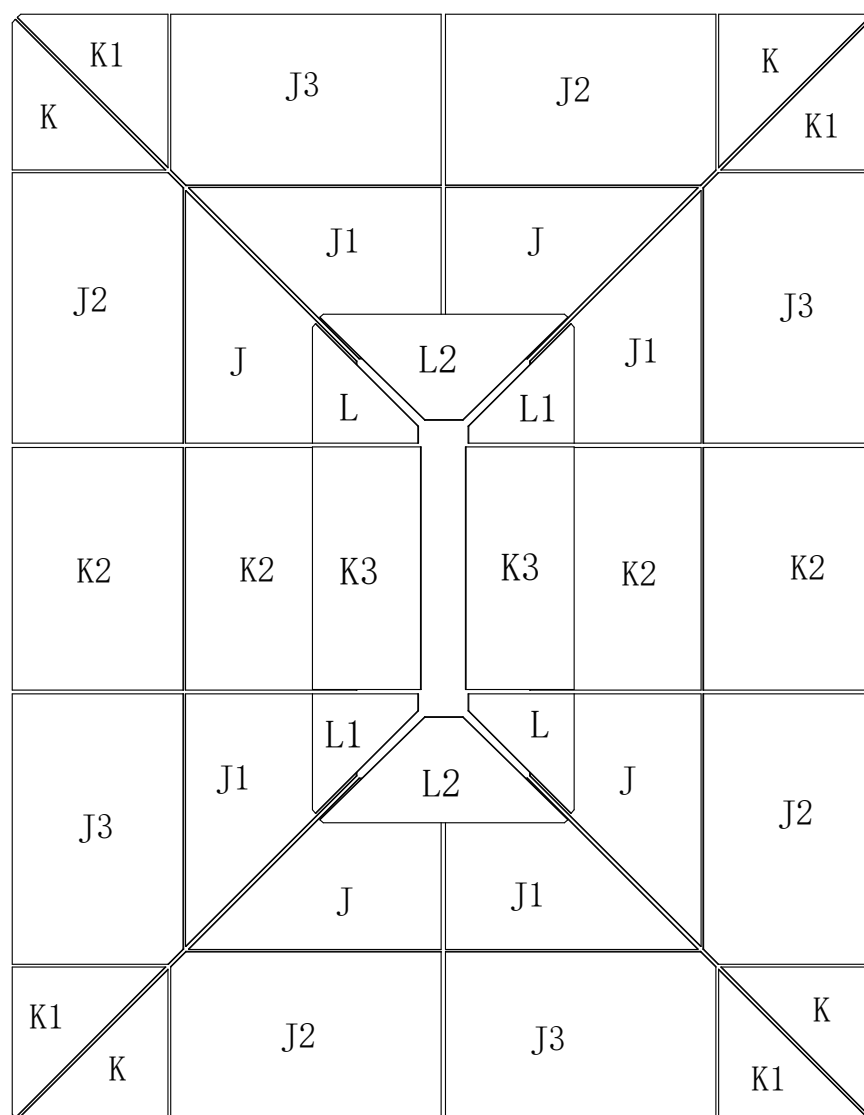


Remove the protective film
before installation.


No.	Qty	Picture	No.	Qty	Picture
K3	2		L	2	
L1	2		F3	2	
F4	2		G	2	
P1	4		W	4	 M6 * 15 mm

Step18


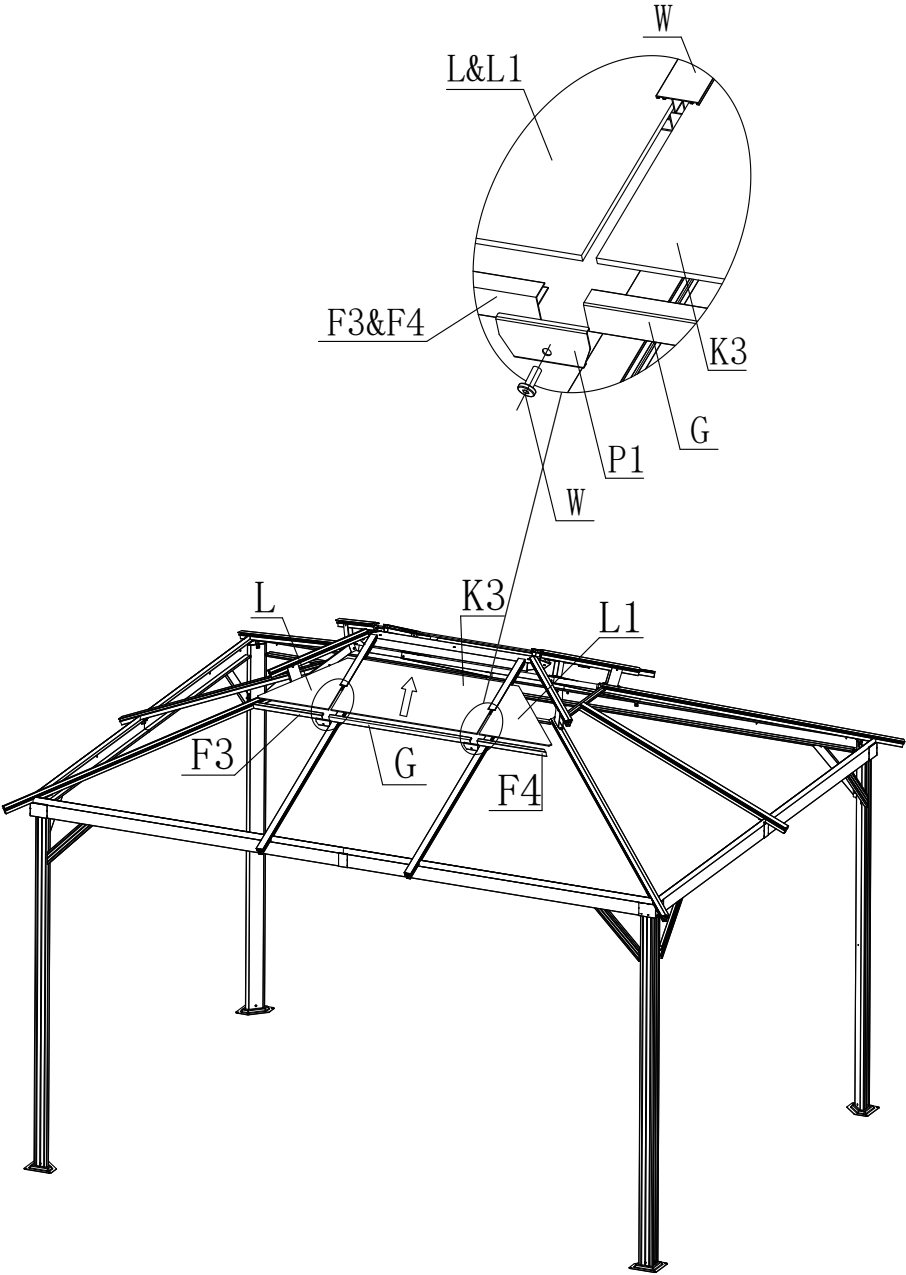



No.	Qty	Picture	No.	Qty	Picture
L2	2		P	4	
F2	2		W	4	 M6 * 15 mm

Step19


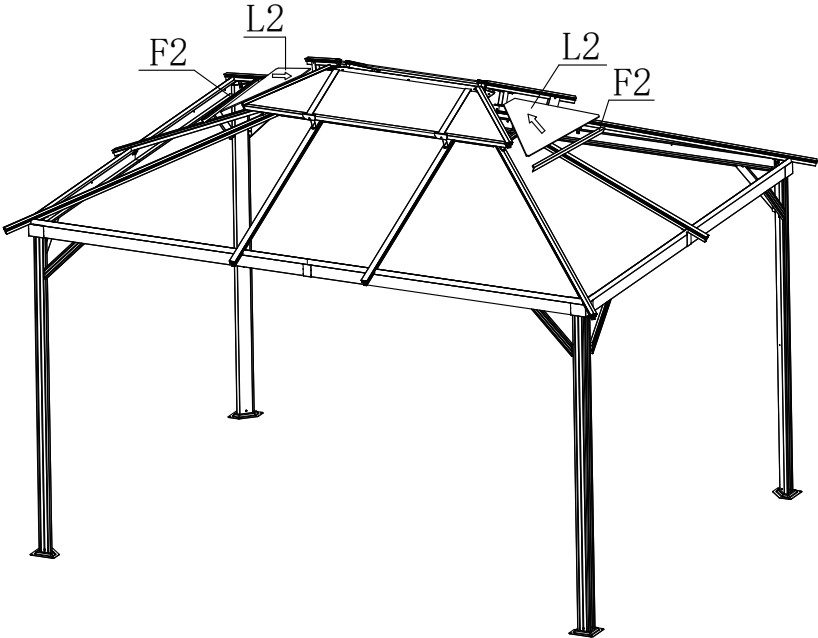


Step20

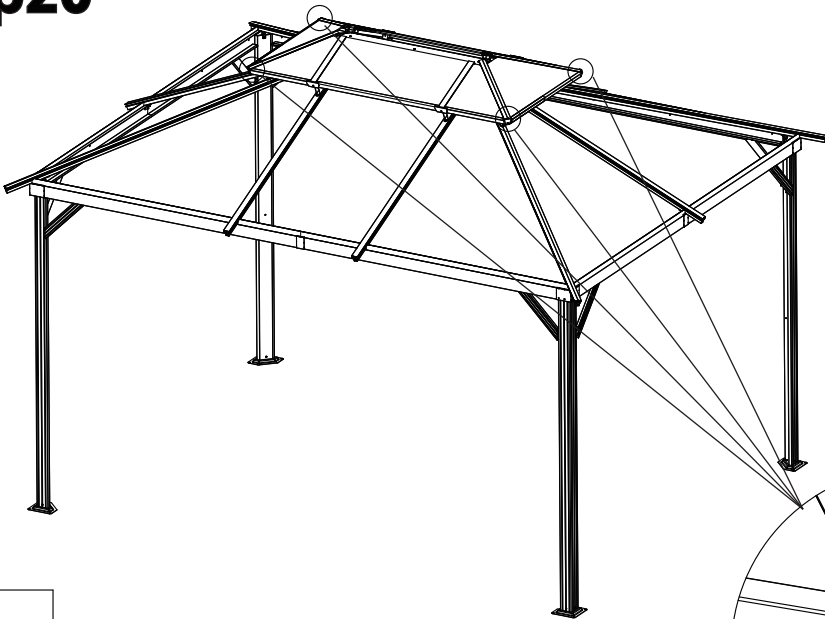



No.	Qty	Picture	No.	Qty	Picture
H1	1		T1	1	
Q	1		P2	3	
Y2	3	 M6			





Step21

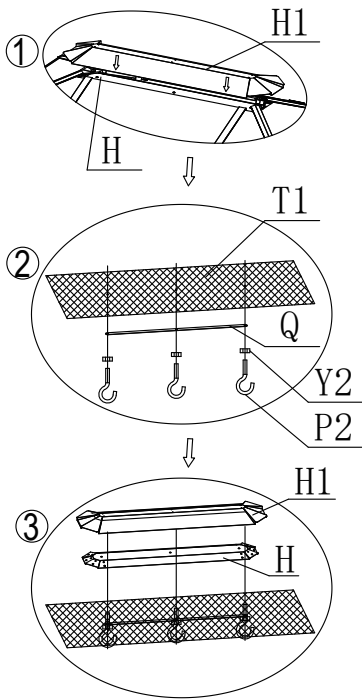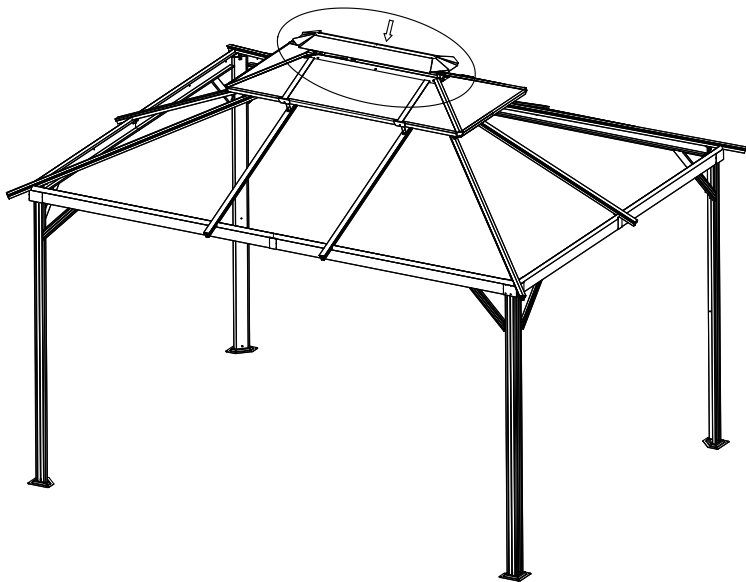


No.	Qty	Picture	No.	Qty	Picture
Q1	8		Q2	2	



Step22

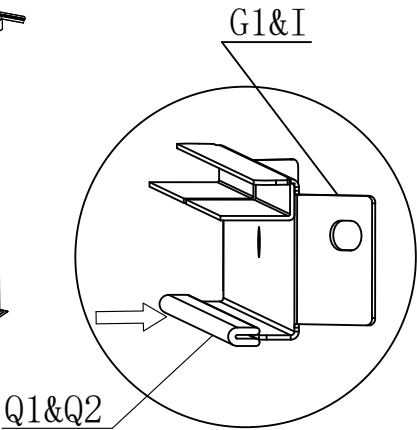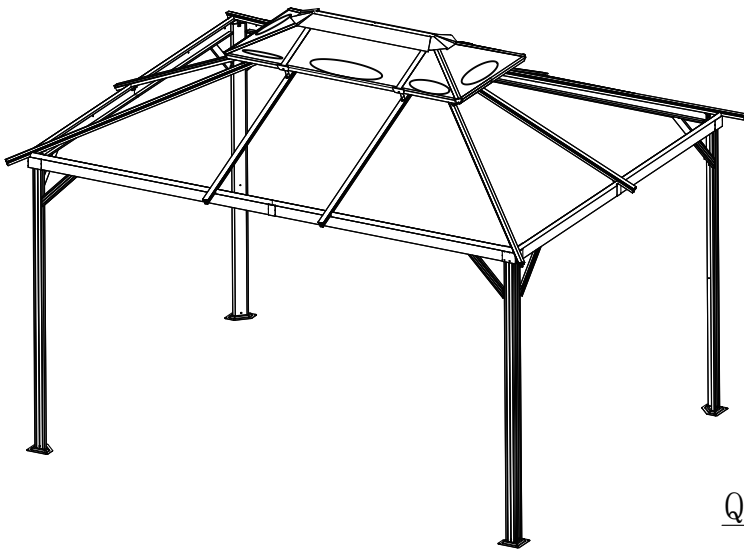


No.	Qty	Picture	No.	Qty	Picture
J	4		J1	4	
E	4		E1	4	



Step23

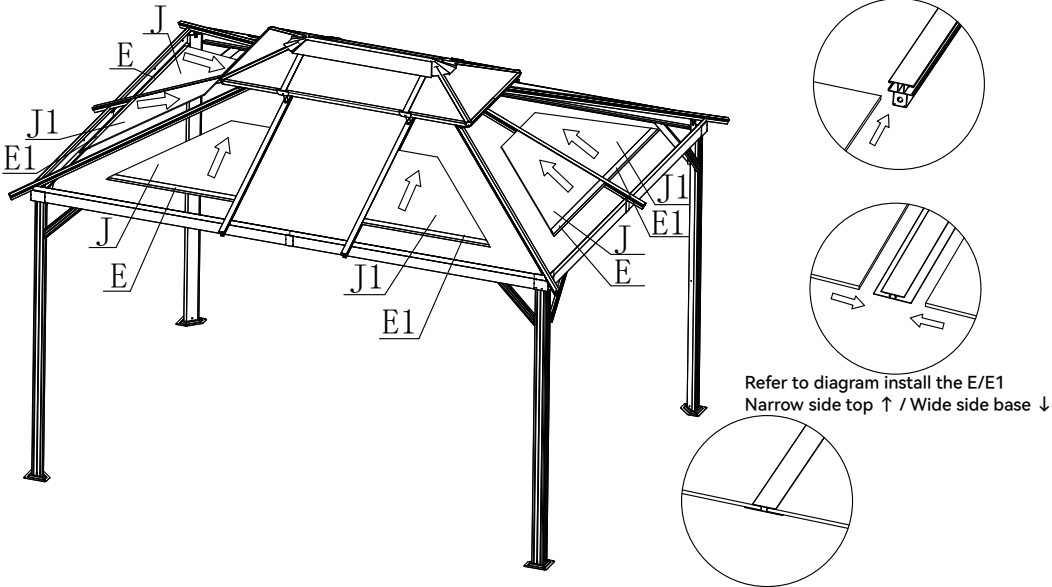


No.	Qty	Picture	No.	Qty	Picture
J2	4		J3	4	


Step24

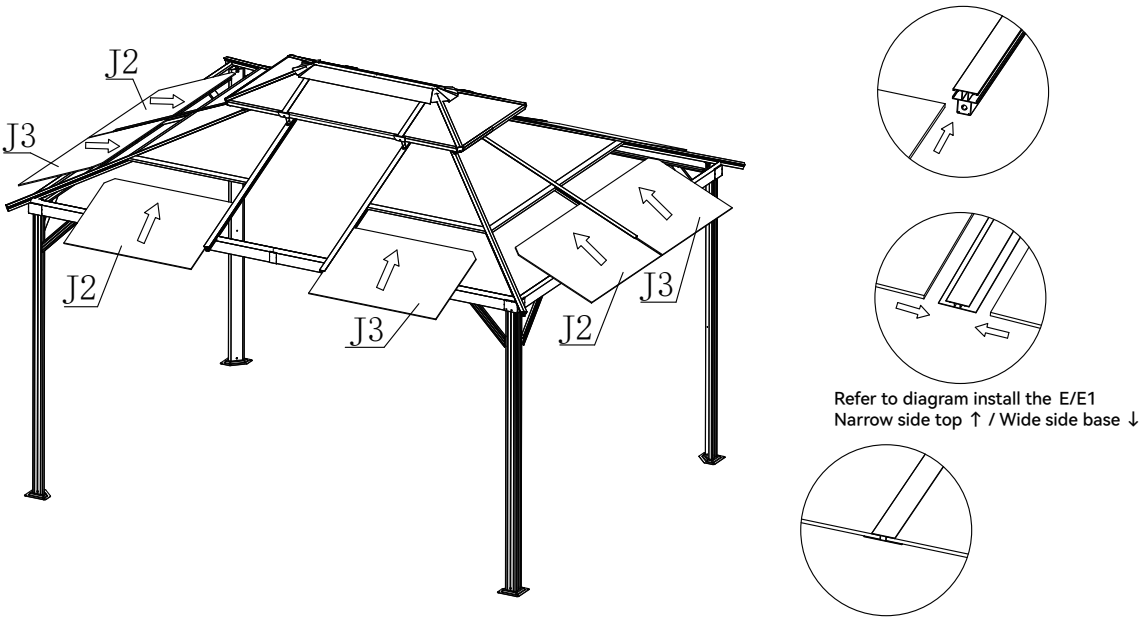


No.	Qty	Picture	No.	Qty	Picture
K	4		K1	4	
E2	4		E3	4	

Step25

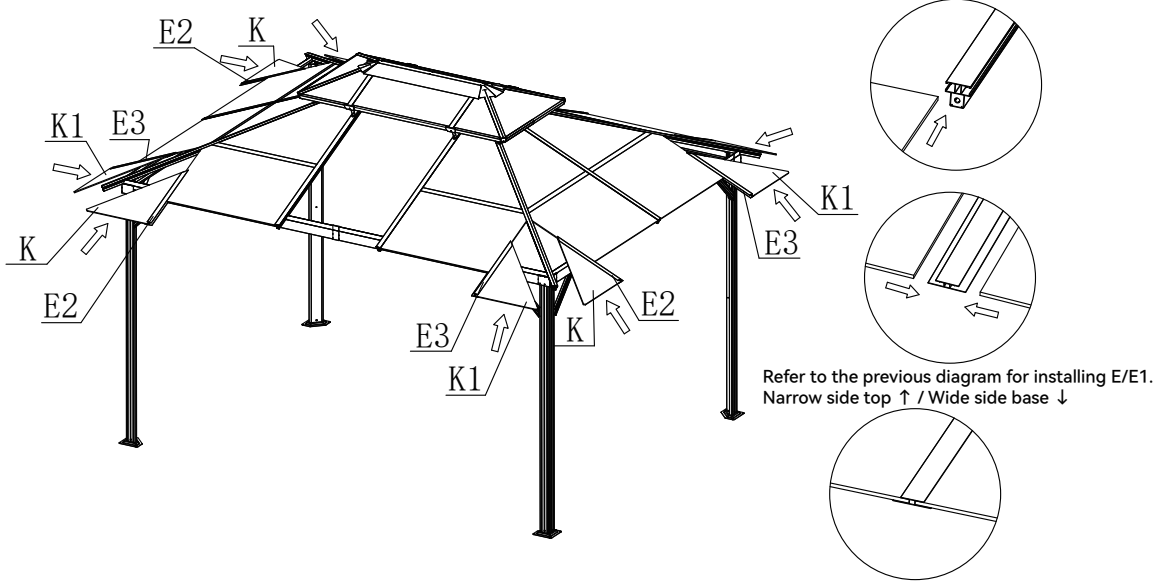


No.	Qty	Picture	No.	Qty	Picture
K2	4		E4	2	

Step26

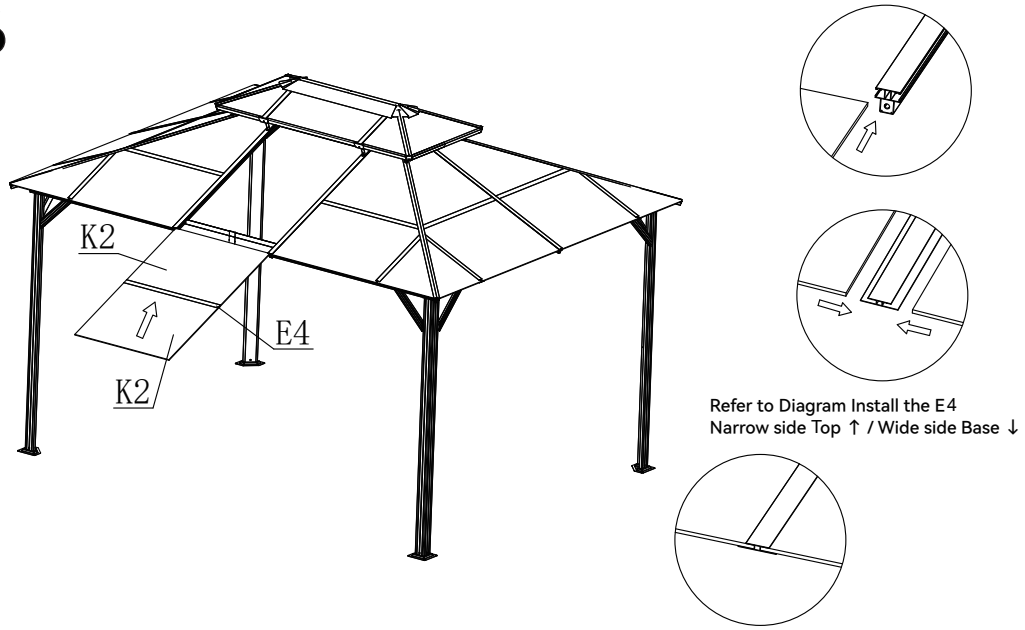


No.	Qty	Picture	No.	Qty	Picture
F	4		P	4	
F1	4		P1	6	
G	2		W	10	 M6 * 15 mm


Step27

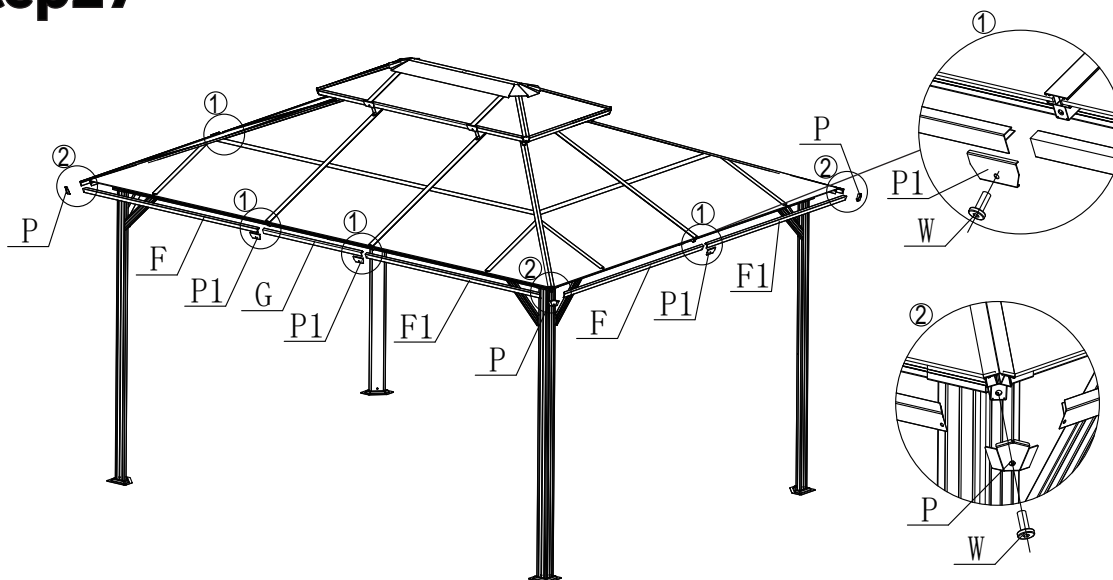


No.	Qty	Picture	No.	Qty	Picture
U	80		U1	8	 Ø11 * Ø 6* 20mm
X	8	 M6 * 35 mm			

Step28


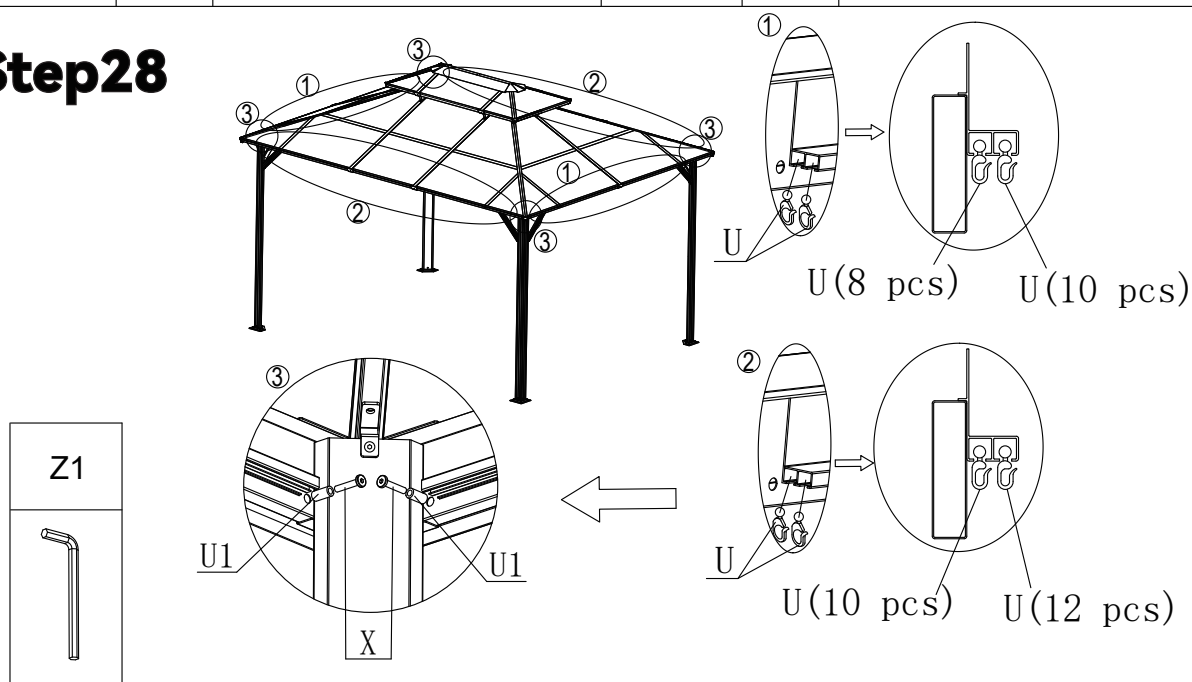


No.	Qty	Picture
S	4	 Curtain


Step29

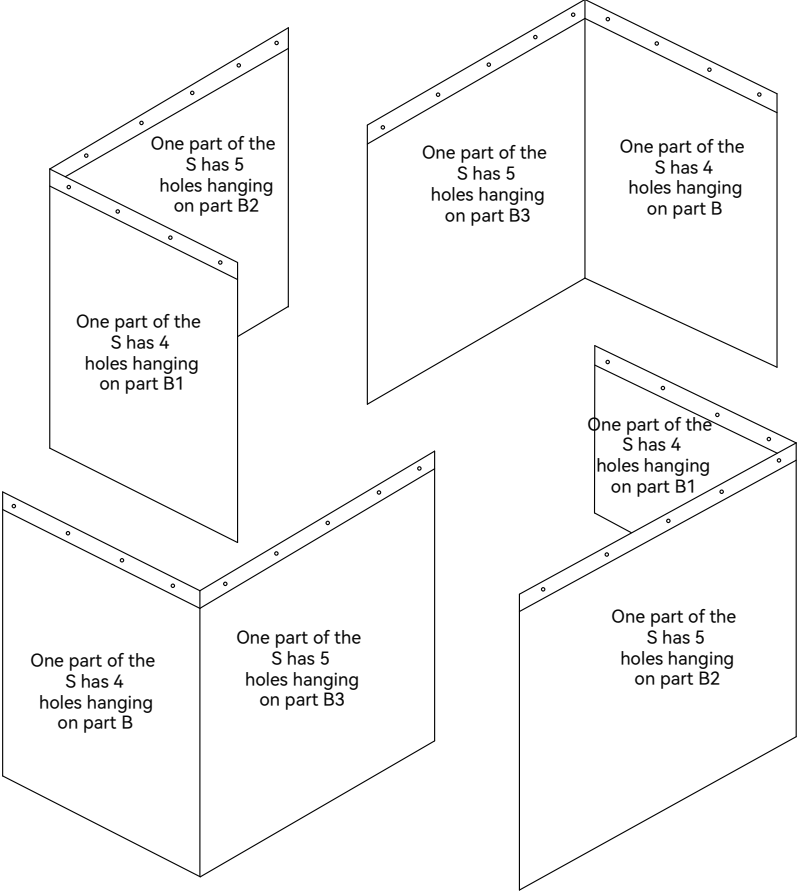

Step30

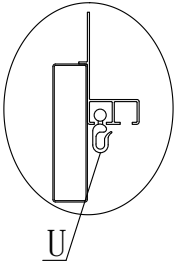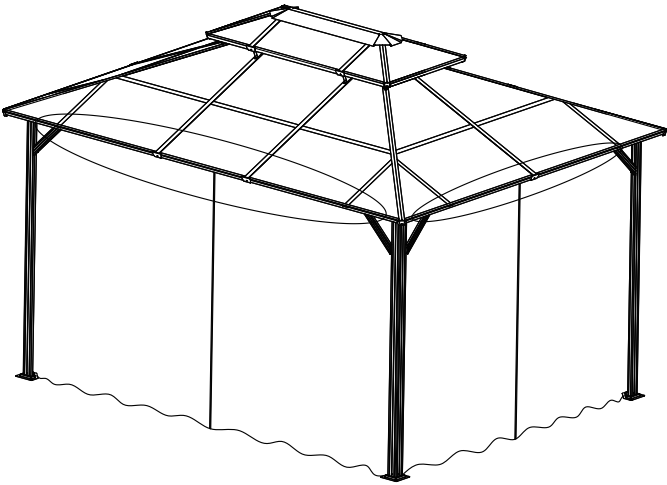


Pay attention to the sidewall curtain's installation position.



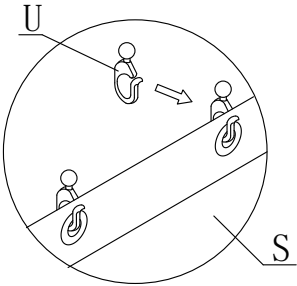


No.	Qty	Picture
T	4	 Net

Step31



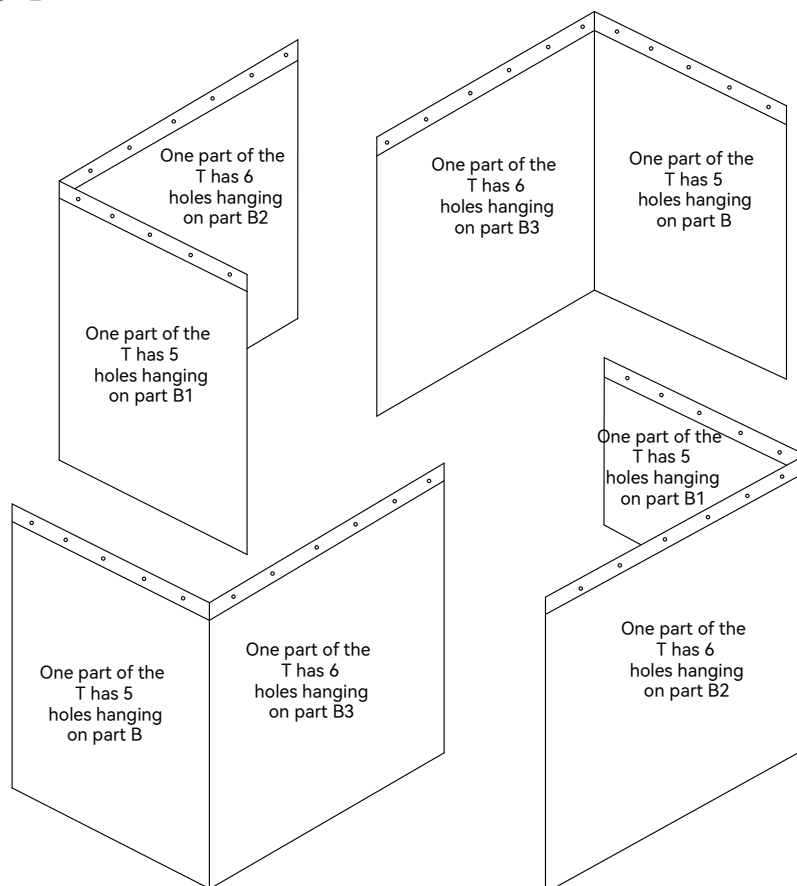


Step32

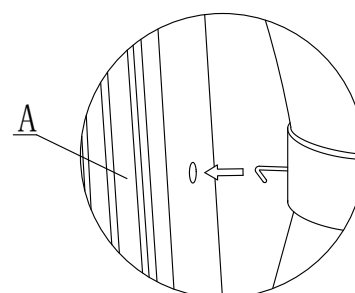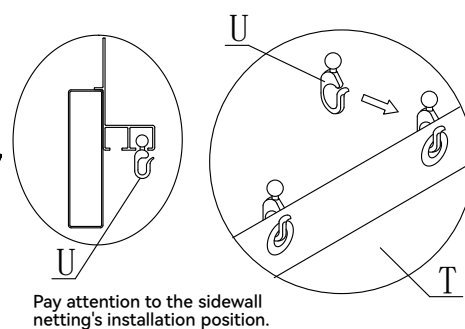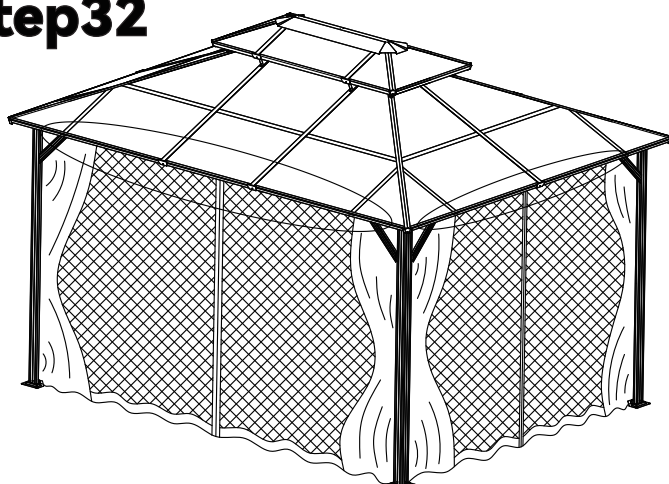

No.	Qty	Picture
Z	12	

Step33

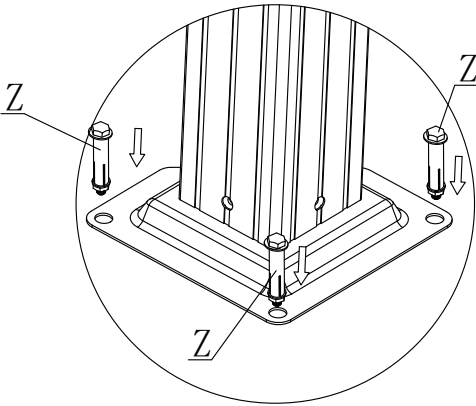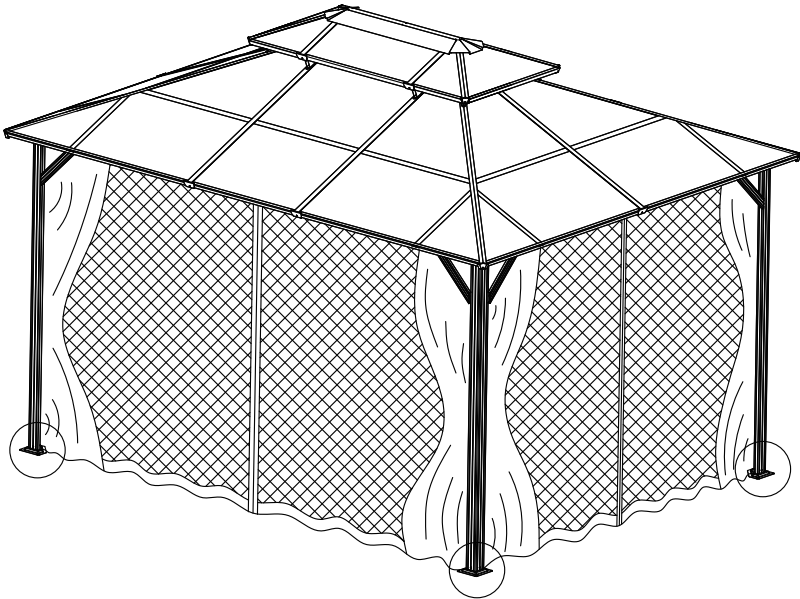

EROMMY!

Closer to Life!

