

Always be creative.



Scan The Code To Obtain The Electronic Manual




**ASSEMBLY AND OPERATING
INSTRUCTIONS**

11'x 13' Outdoor Hardtop
Wood Framed Gazebo






Recommended number

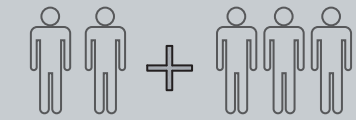

Needed for assembly

(The following tools are not included)

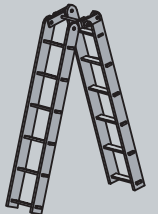
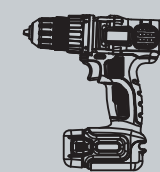


Installation Tips



(Do not fully tighten the screws)

1. When assembling **Step 8**, please do not fully tighten the EE/AA of E, until one side of wood post and beams are completely assembled(Step 9).
2. When assembling **Step 11**, the EE/AA of E and D need to be loosened a bit, then tighten them once finishing assemble H1 and H2.
3. When assembling **Step 15**, please do not fully tighten the II and HH, until all the top support parts (K-2,I-3) are completely assembled with the wood.
4. When assembling **Step 24**, please do not fully tighten the OO/HH of M and N, until each L7 and L8 are connected. Then install L6 and tighten BB.

Parts List

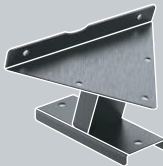
Part#		Qty
01		X2
02		X2
03		X2
04		X2
05		X2
05-1		X2
06		X4
07-1		X4
08		X4
10		X4
11		X4
B		X4
C		X4
D		X4
E		X4
F		X4
G		X6

Step 28

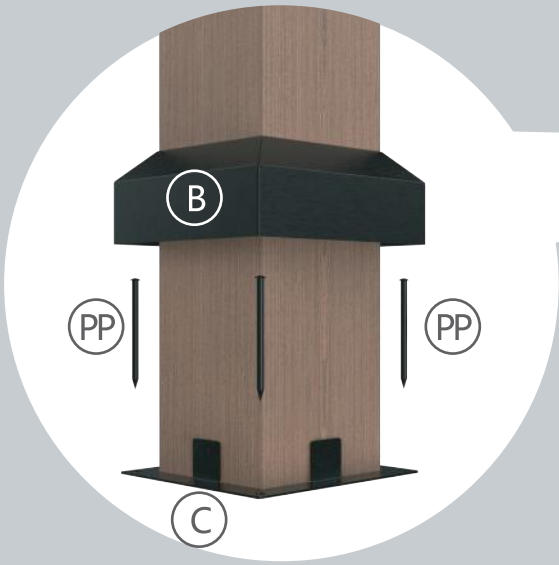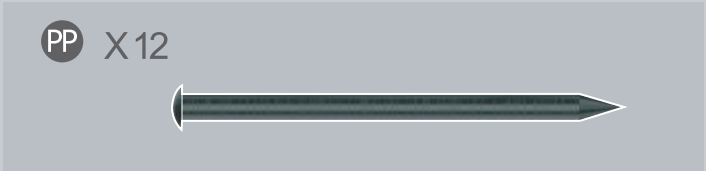

Tips:
Please purchase the anchors from local hardware store if anchor the gazebo to concrete or wood.



Step 27

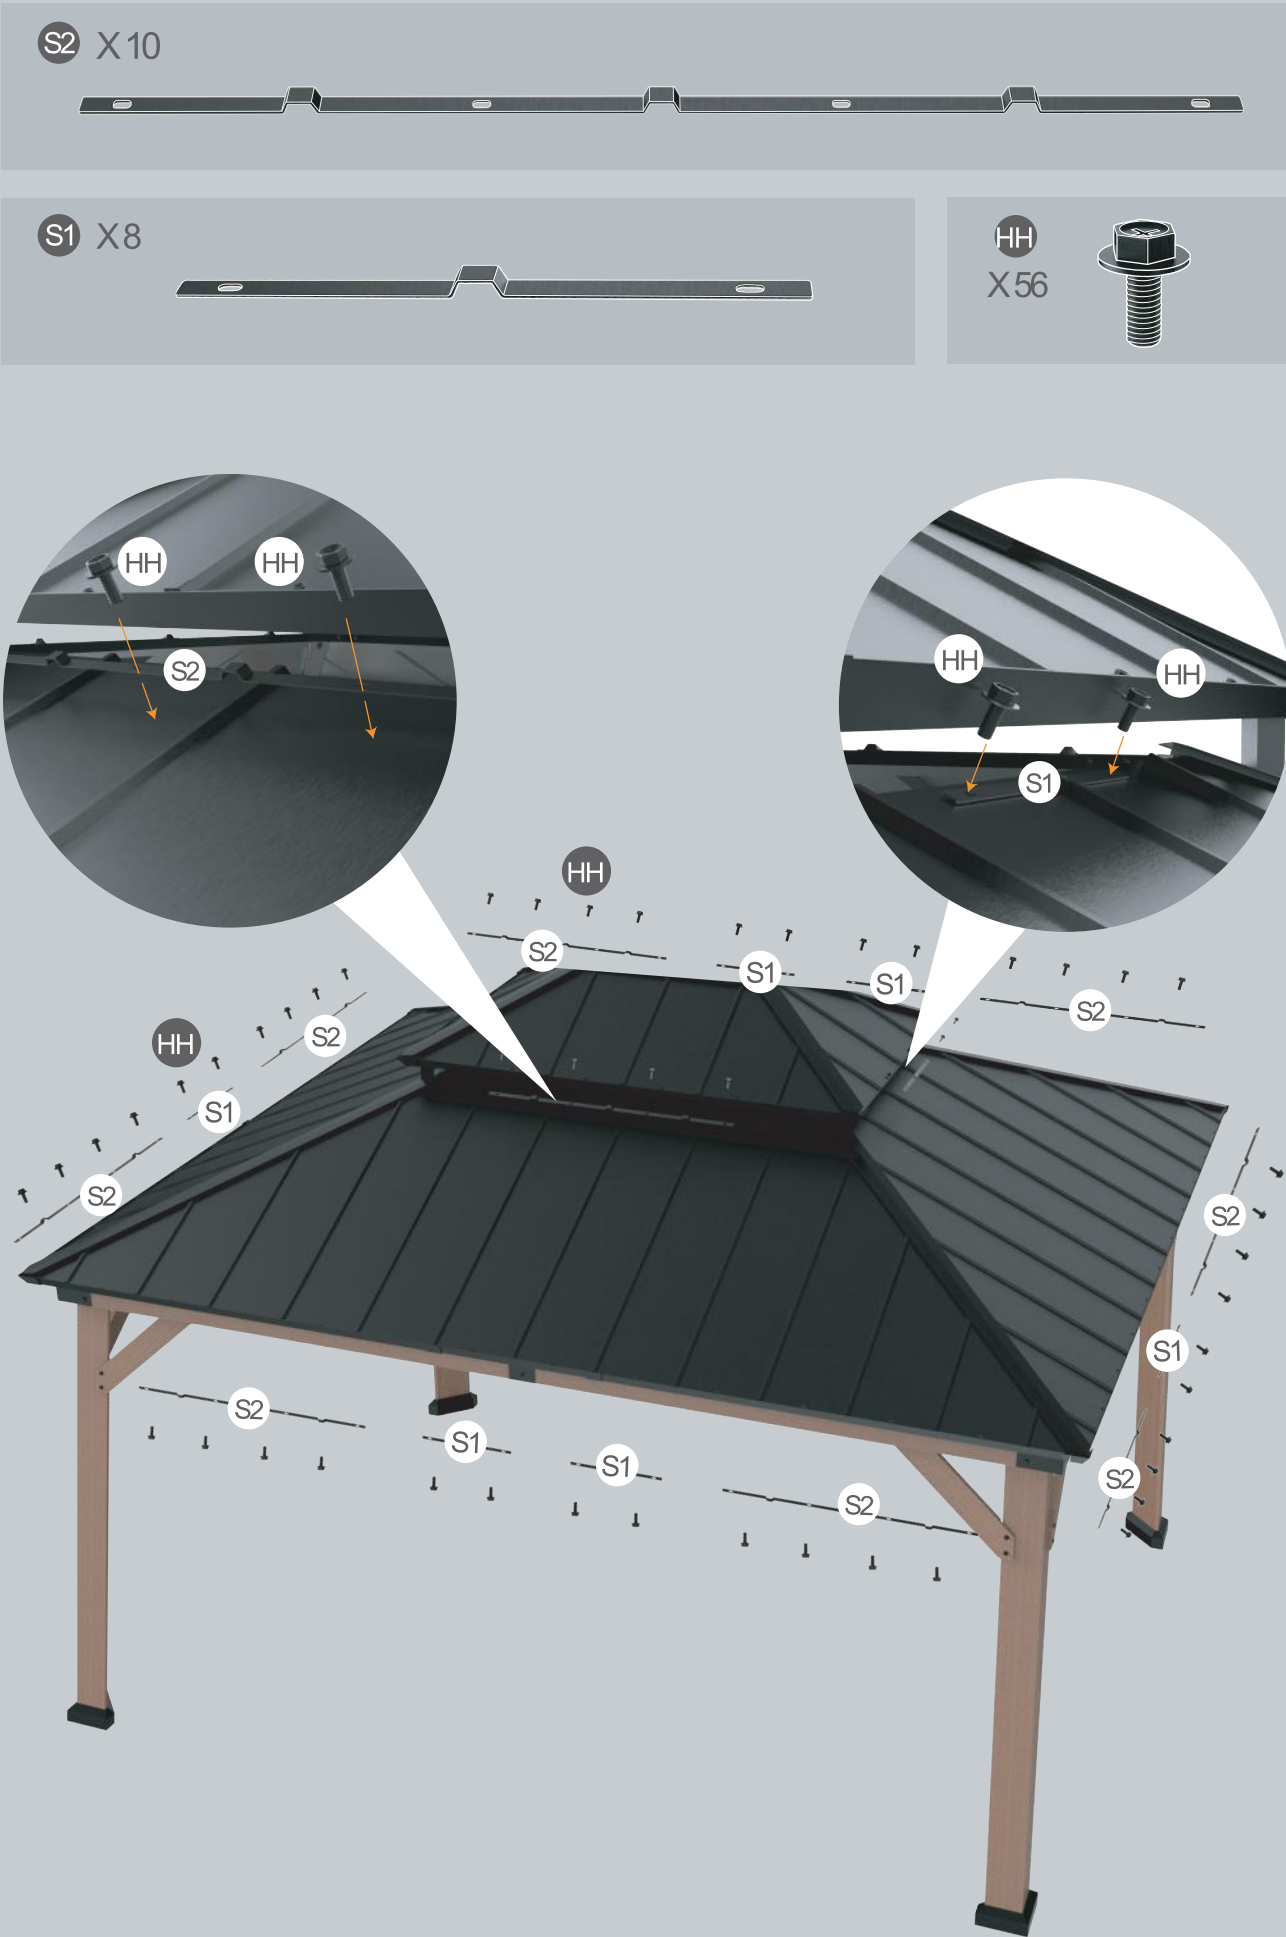



Parts List

Part#		Qty
X1		X1
I-3		X4
I-4		X4
U		X2
V1		X2
L1		X2
L2		X2
L1-1		X2
L2-1		X2
K-2		X6
L3-1		X4
L3-2		X4
L4-1		X4
L4-2		X4
L5		X4
L6		X2



Parts List

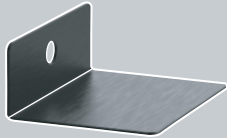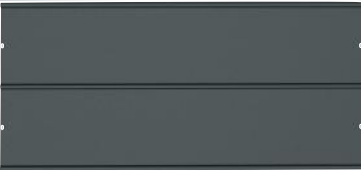Part#		Qty
L7		X4
L8		X4
M		X6
N		X8
Q1		X4
Q8		X4
Q2		X4
Q9		X2
Q3		X4
Q10		X4

Step 26

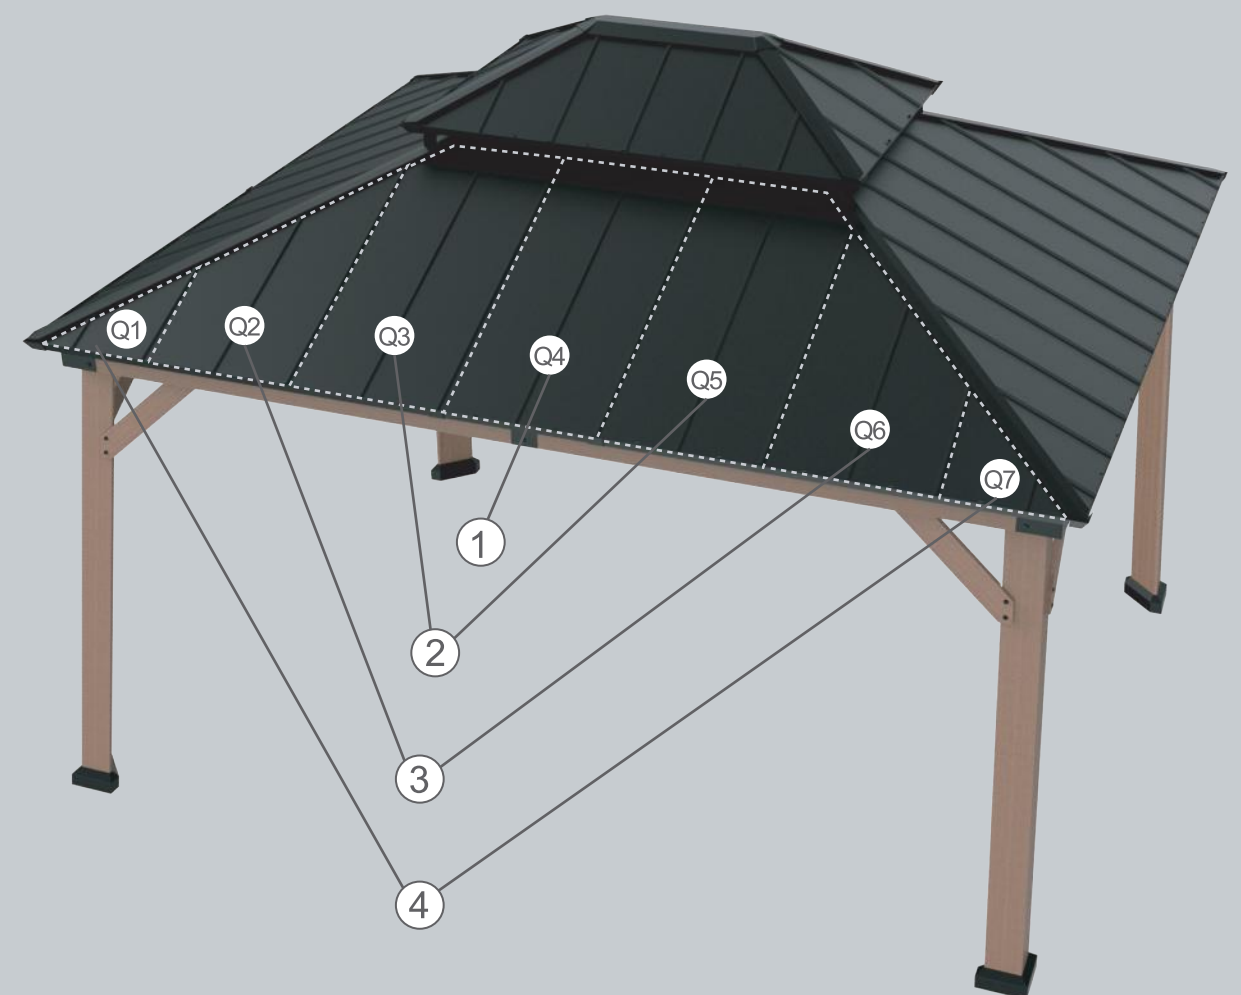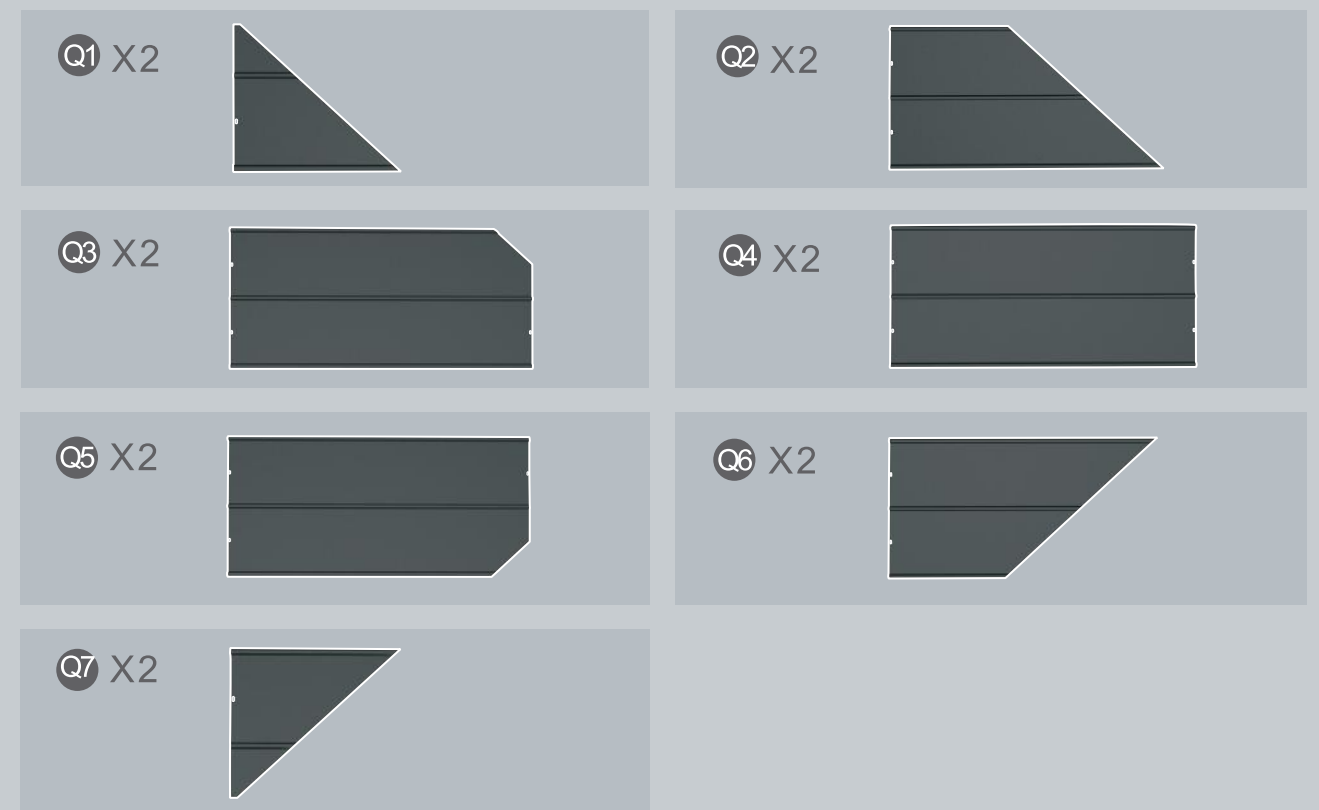

Step 25

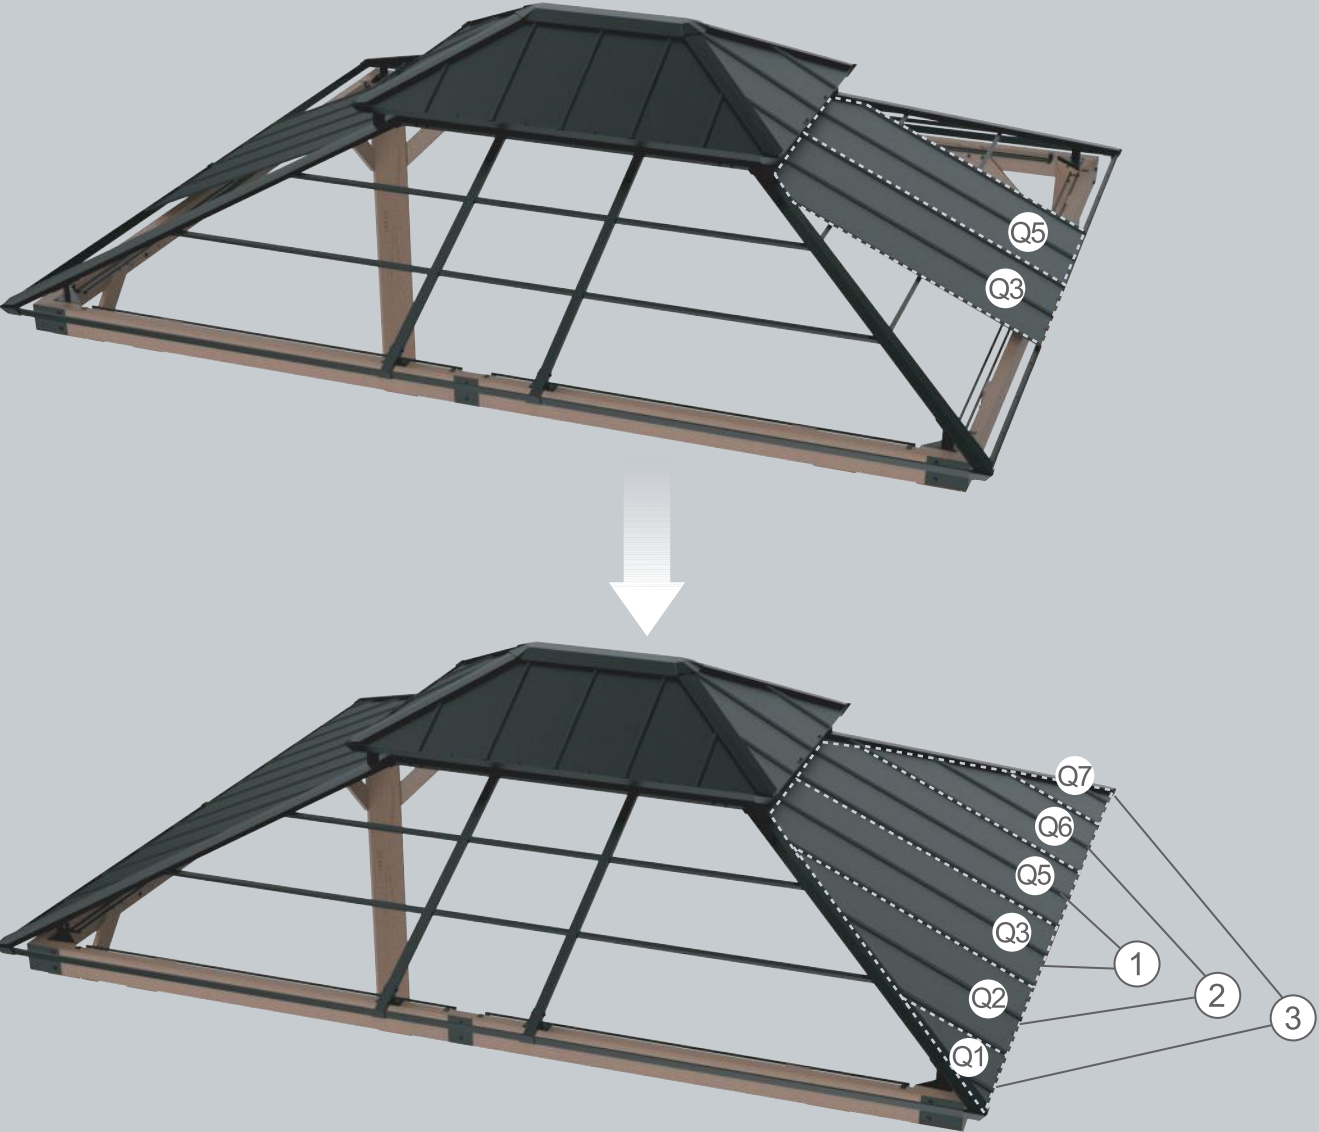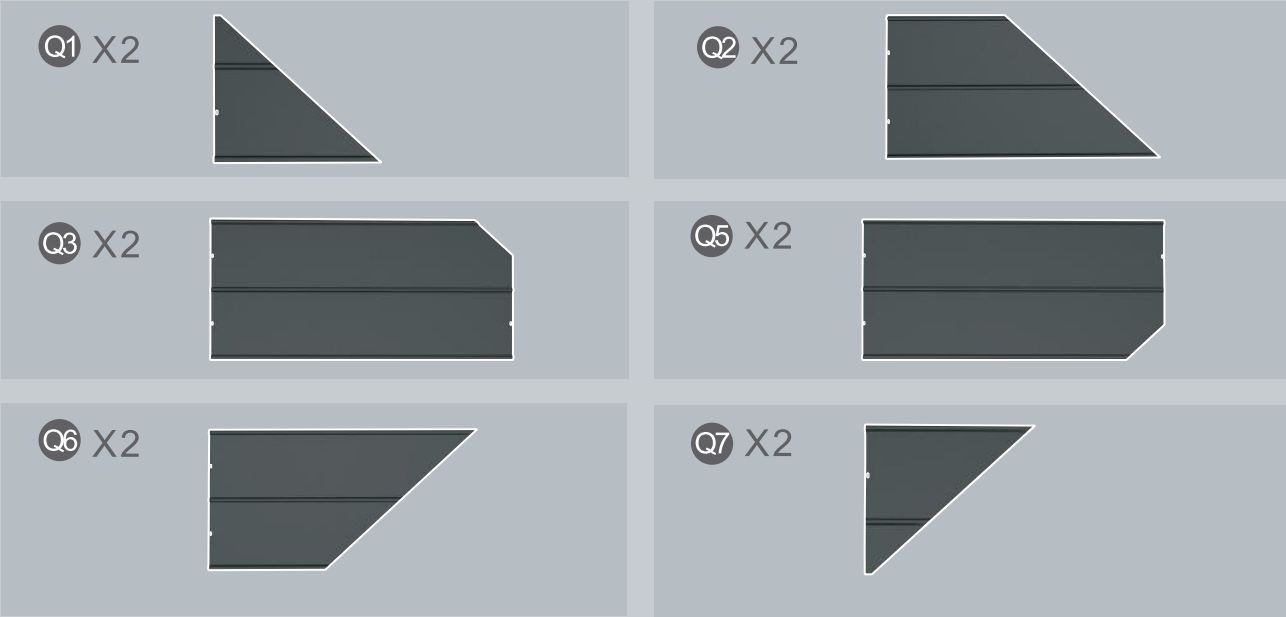



Parts List

Part#		Qty
S1		X10
S2		X12
R1		X1
T		X2
H1		X4
H2		X4
Q4		X2
Q5		X4
Q6		X4
Q7		X4


Parts List

Step 24

Part#				Qty
AA	M10x135			8
BB	M5x30			56+2
CC	M8x25			24+1
DD	M5x40			56+2
EE	M10x70			8
FF	M8x35			16+1
GG	M8x35			16+1
HH	M6x16			128+3
II	M6x55			20+1
JJ	M10			8
KK	M6			22+1
LL	M8			16+1
MM	M6			22+1
NN	M8			Preassemble
OO	M6x20			8
PP	Ø8			12
Z1	Ø3			2

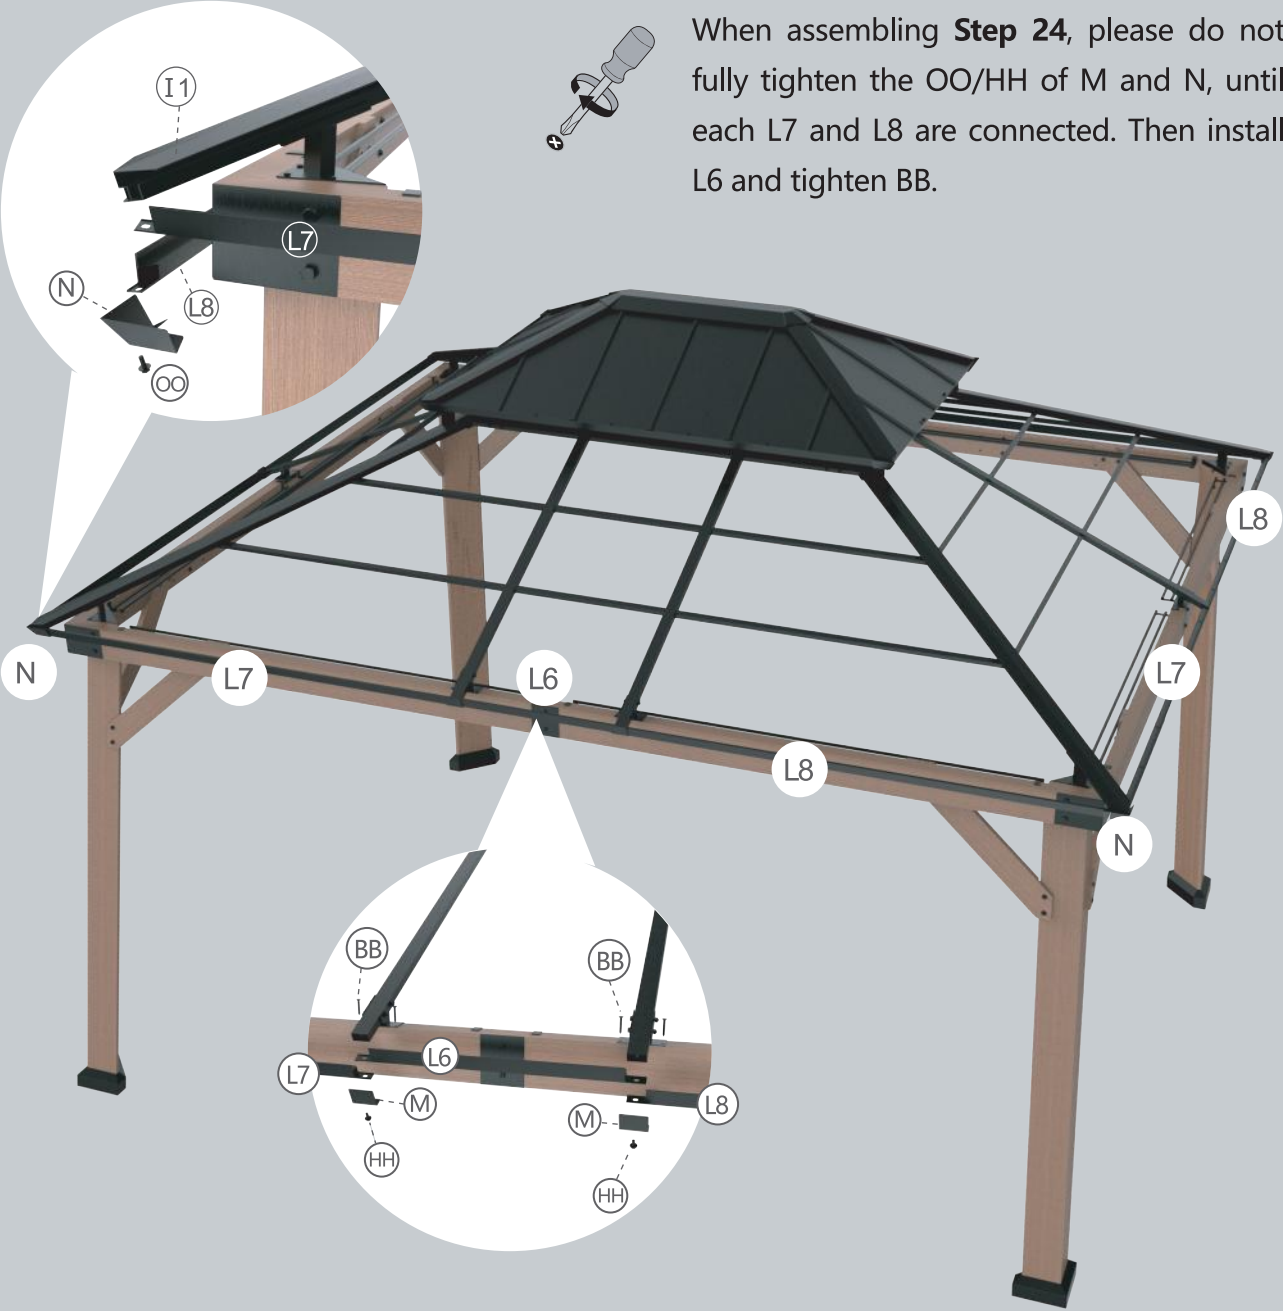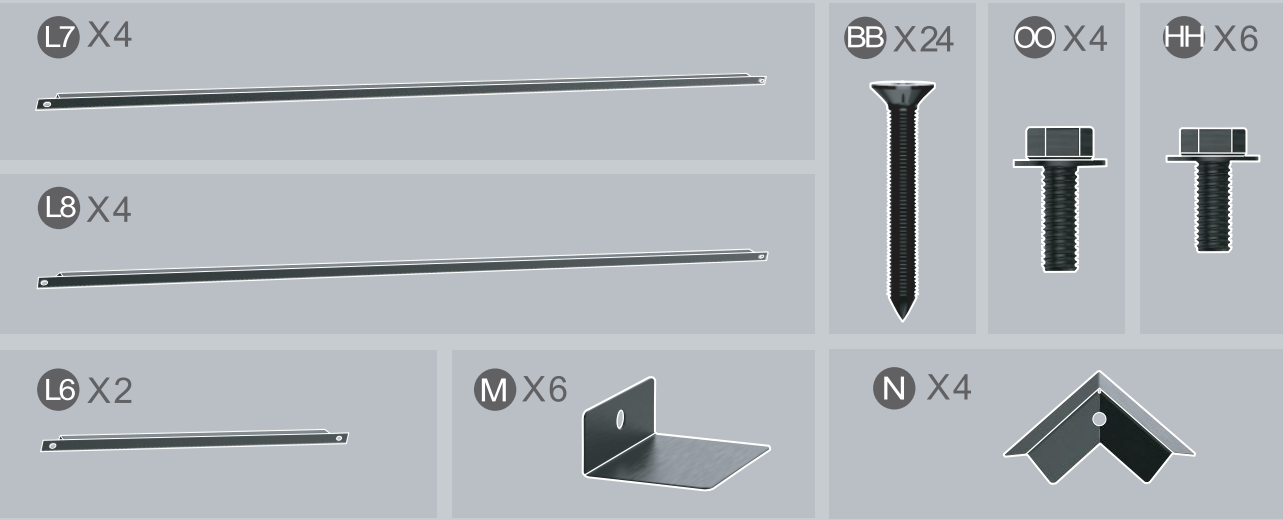

Step 23

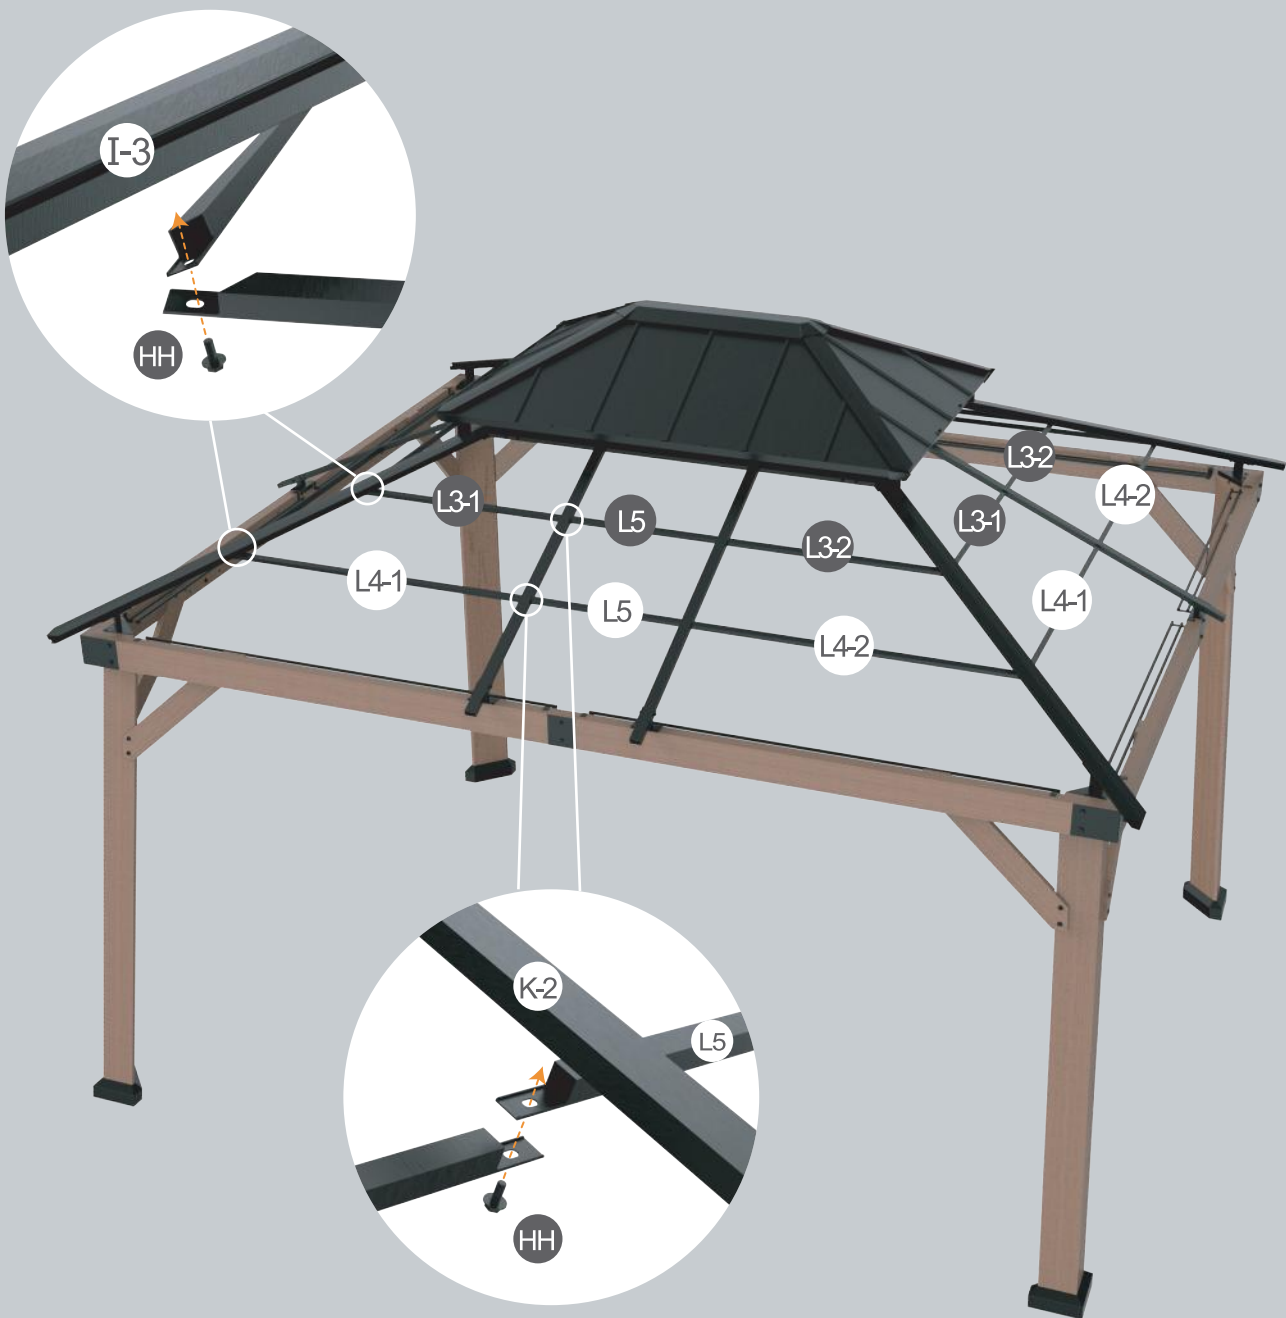




Parts List

Part#			Qty
Z2	M6		2
Z3	M8		1
Z4	M10		2
Z5	M10		1
Z6			1


Complimentary Parts

ZA		1
ZB		1
ZC		1
ZD		1
ZE		1


Step 1

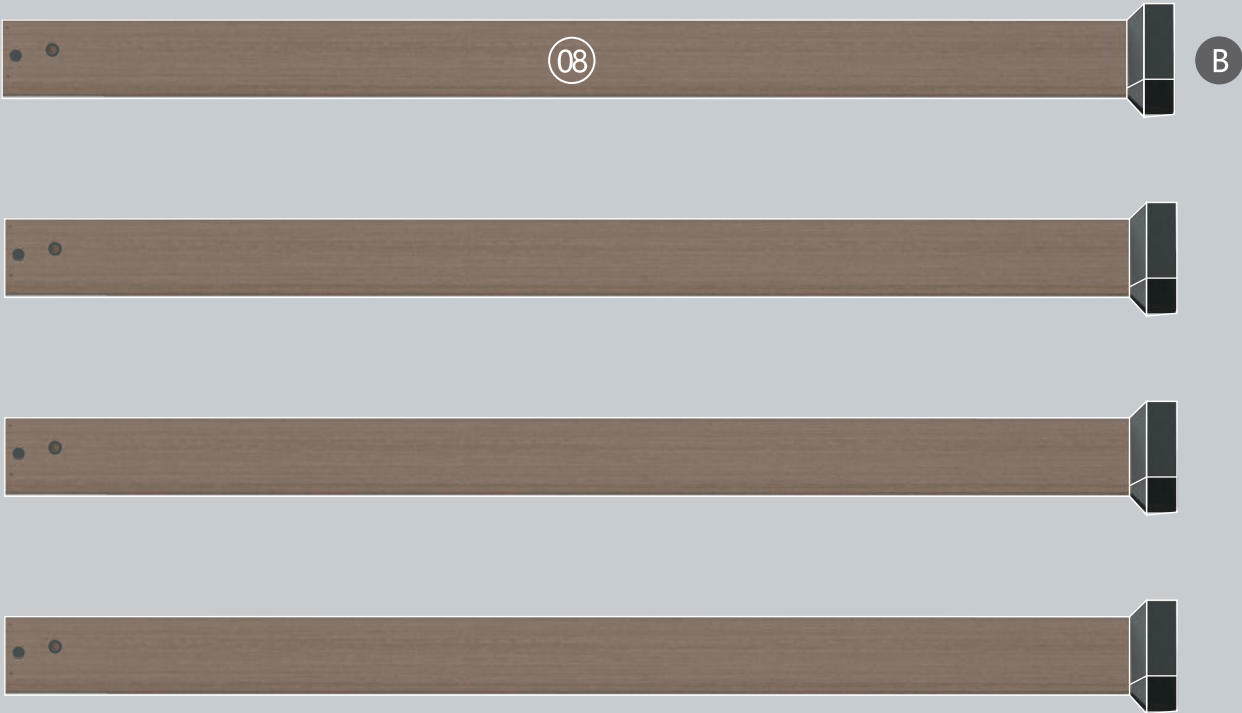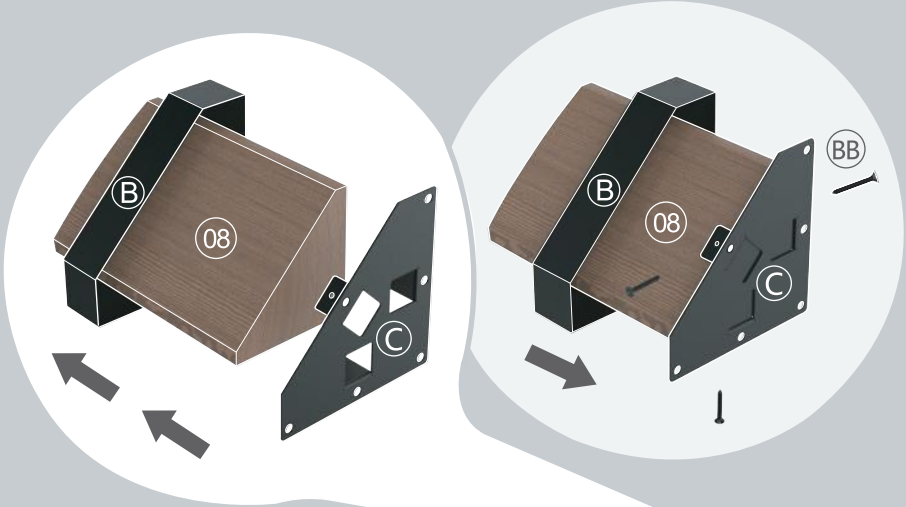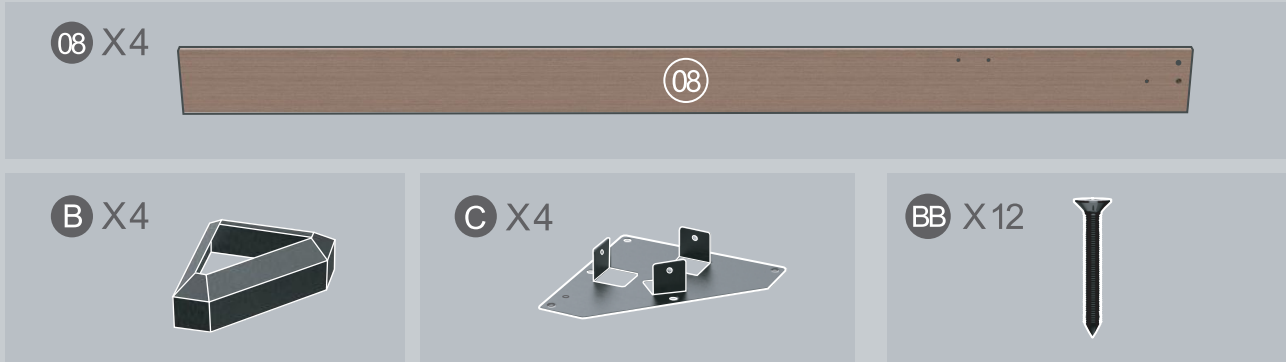



Step 22

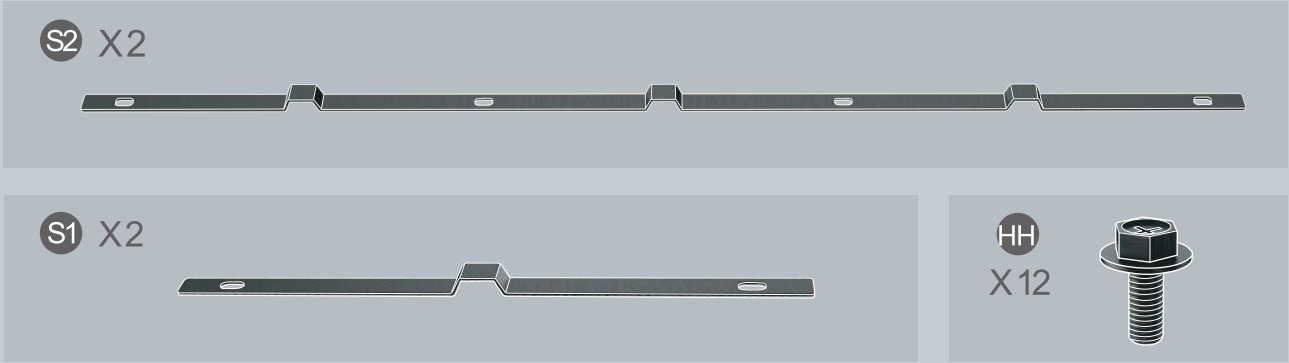



Step 21

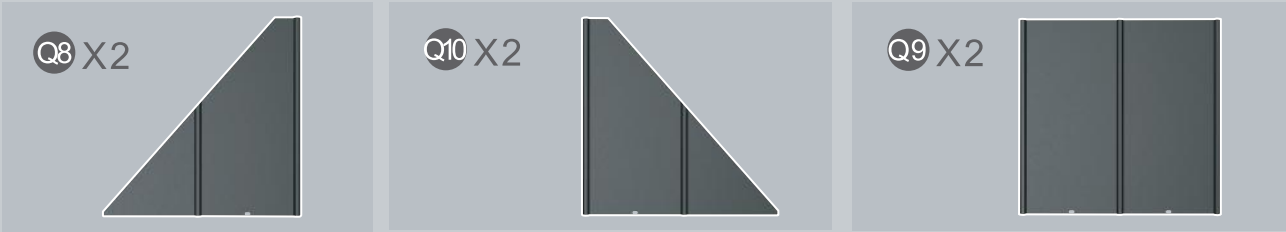


Step 2

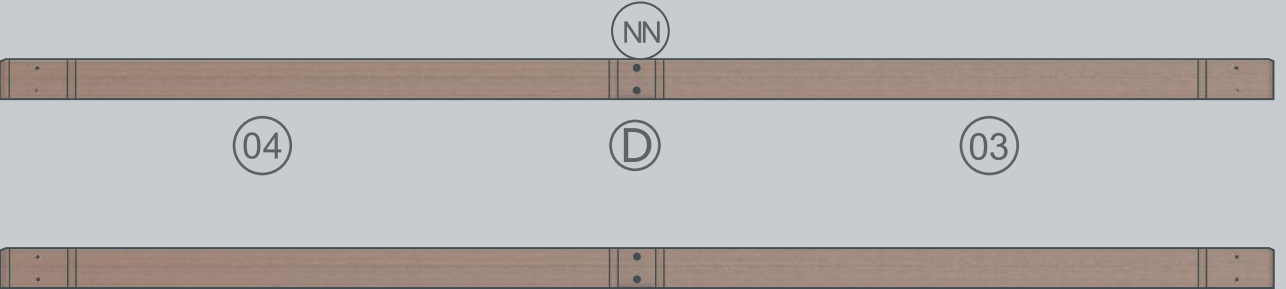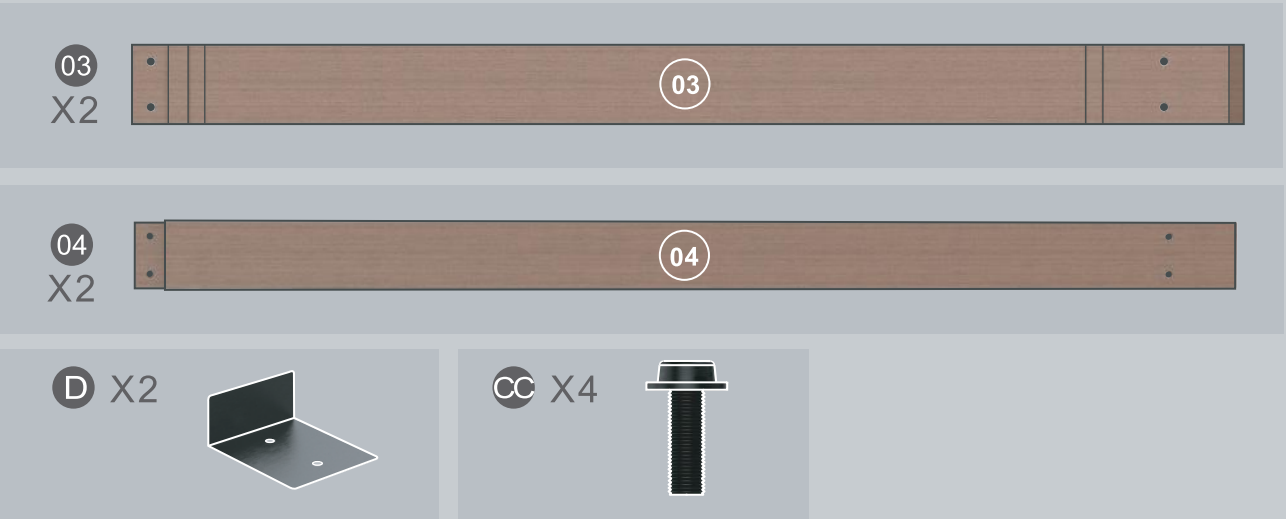




Step 3

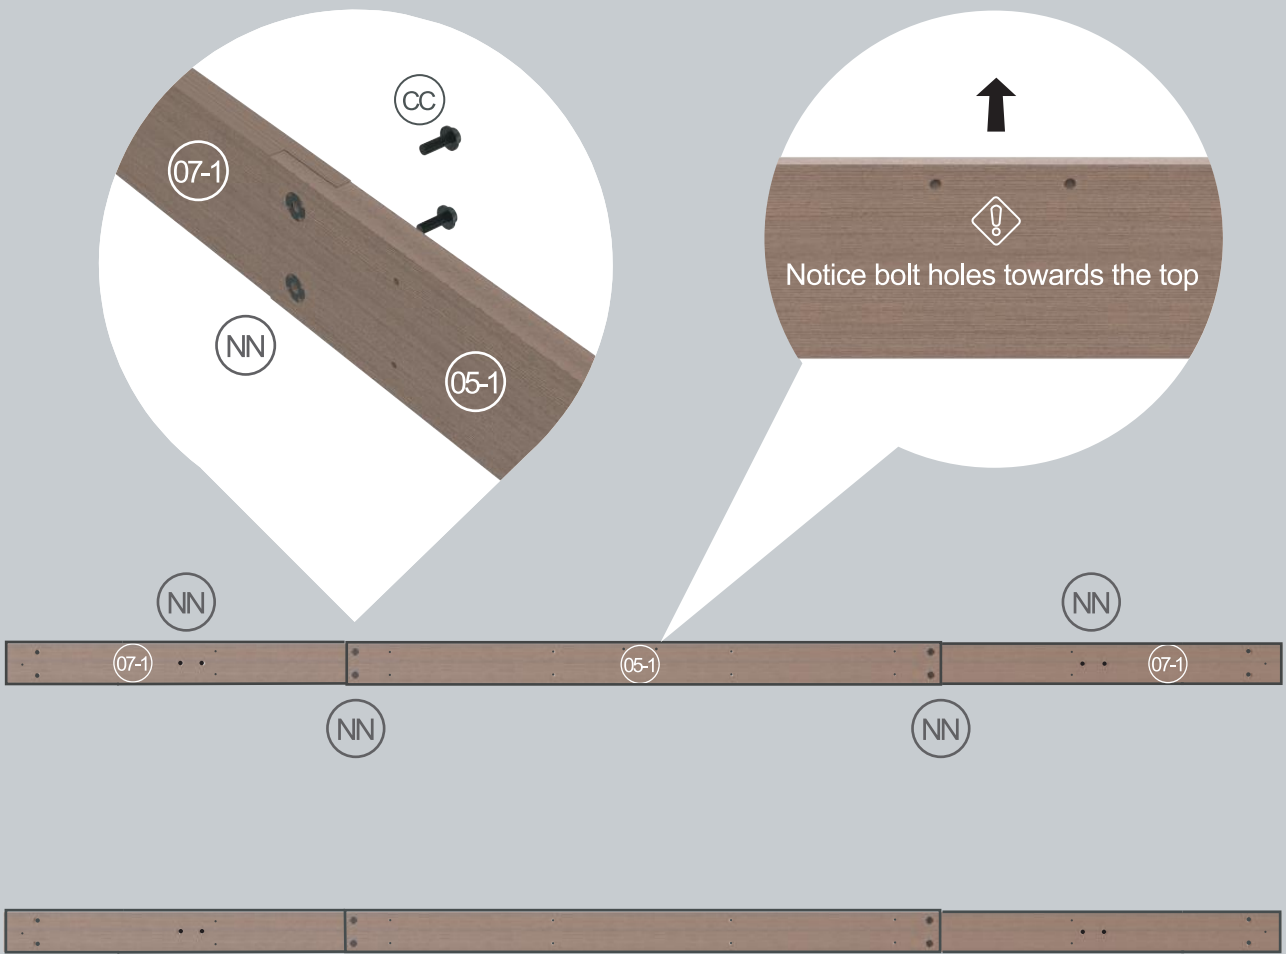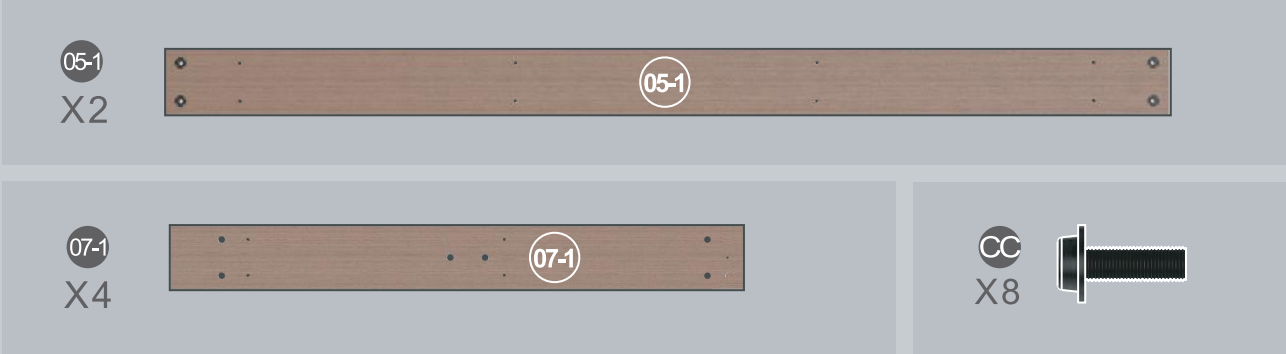

Step 20

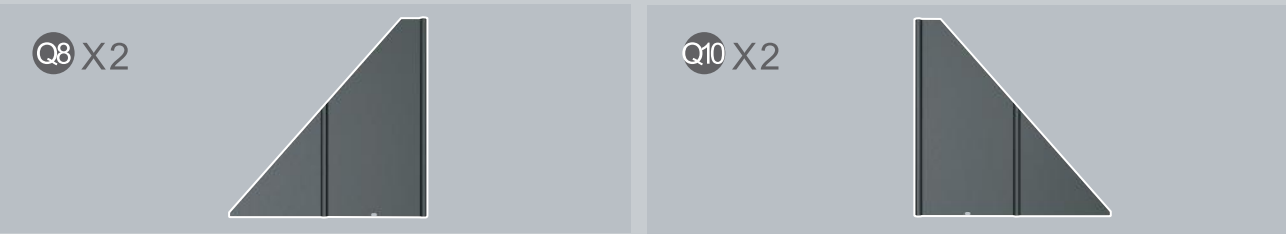


Step 19

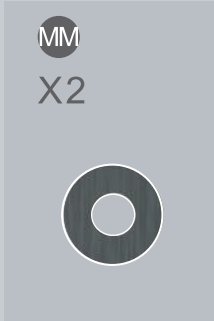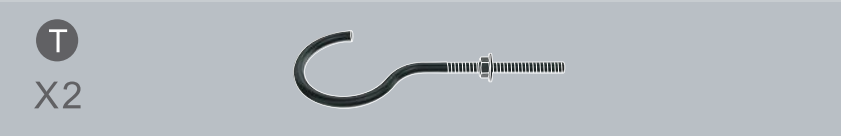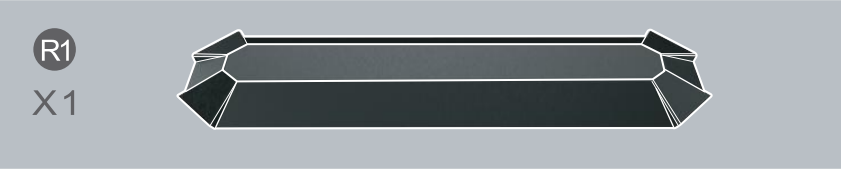


Step 4


Assemble the components installed in step 2 and Step 3, as shown in the following figure.

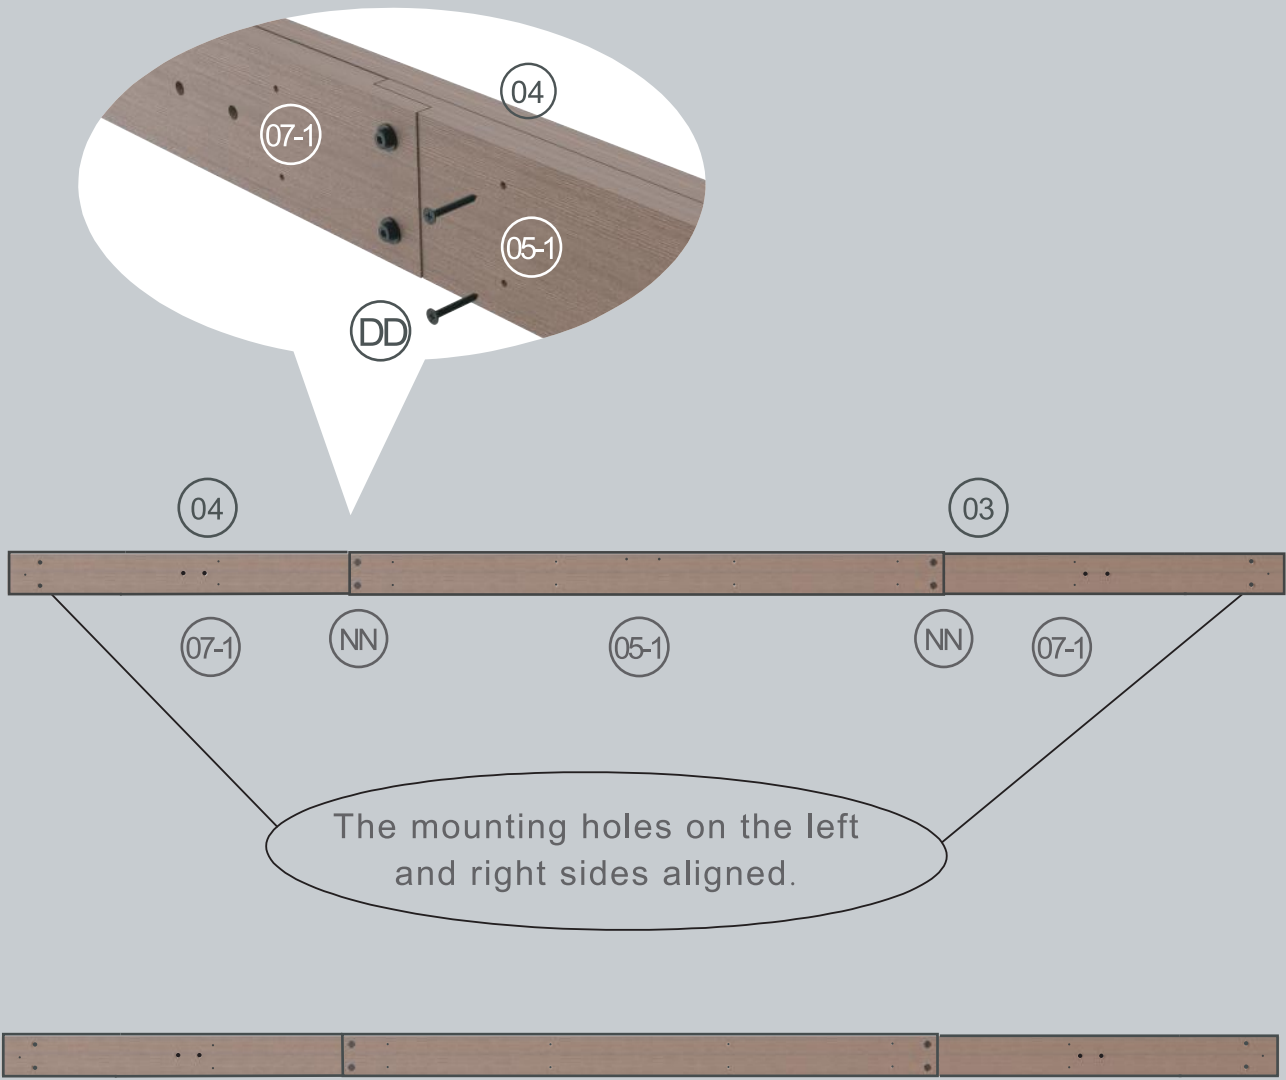



Step 5

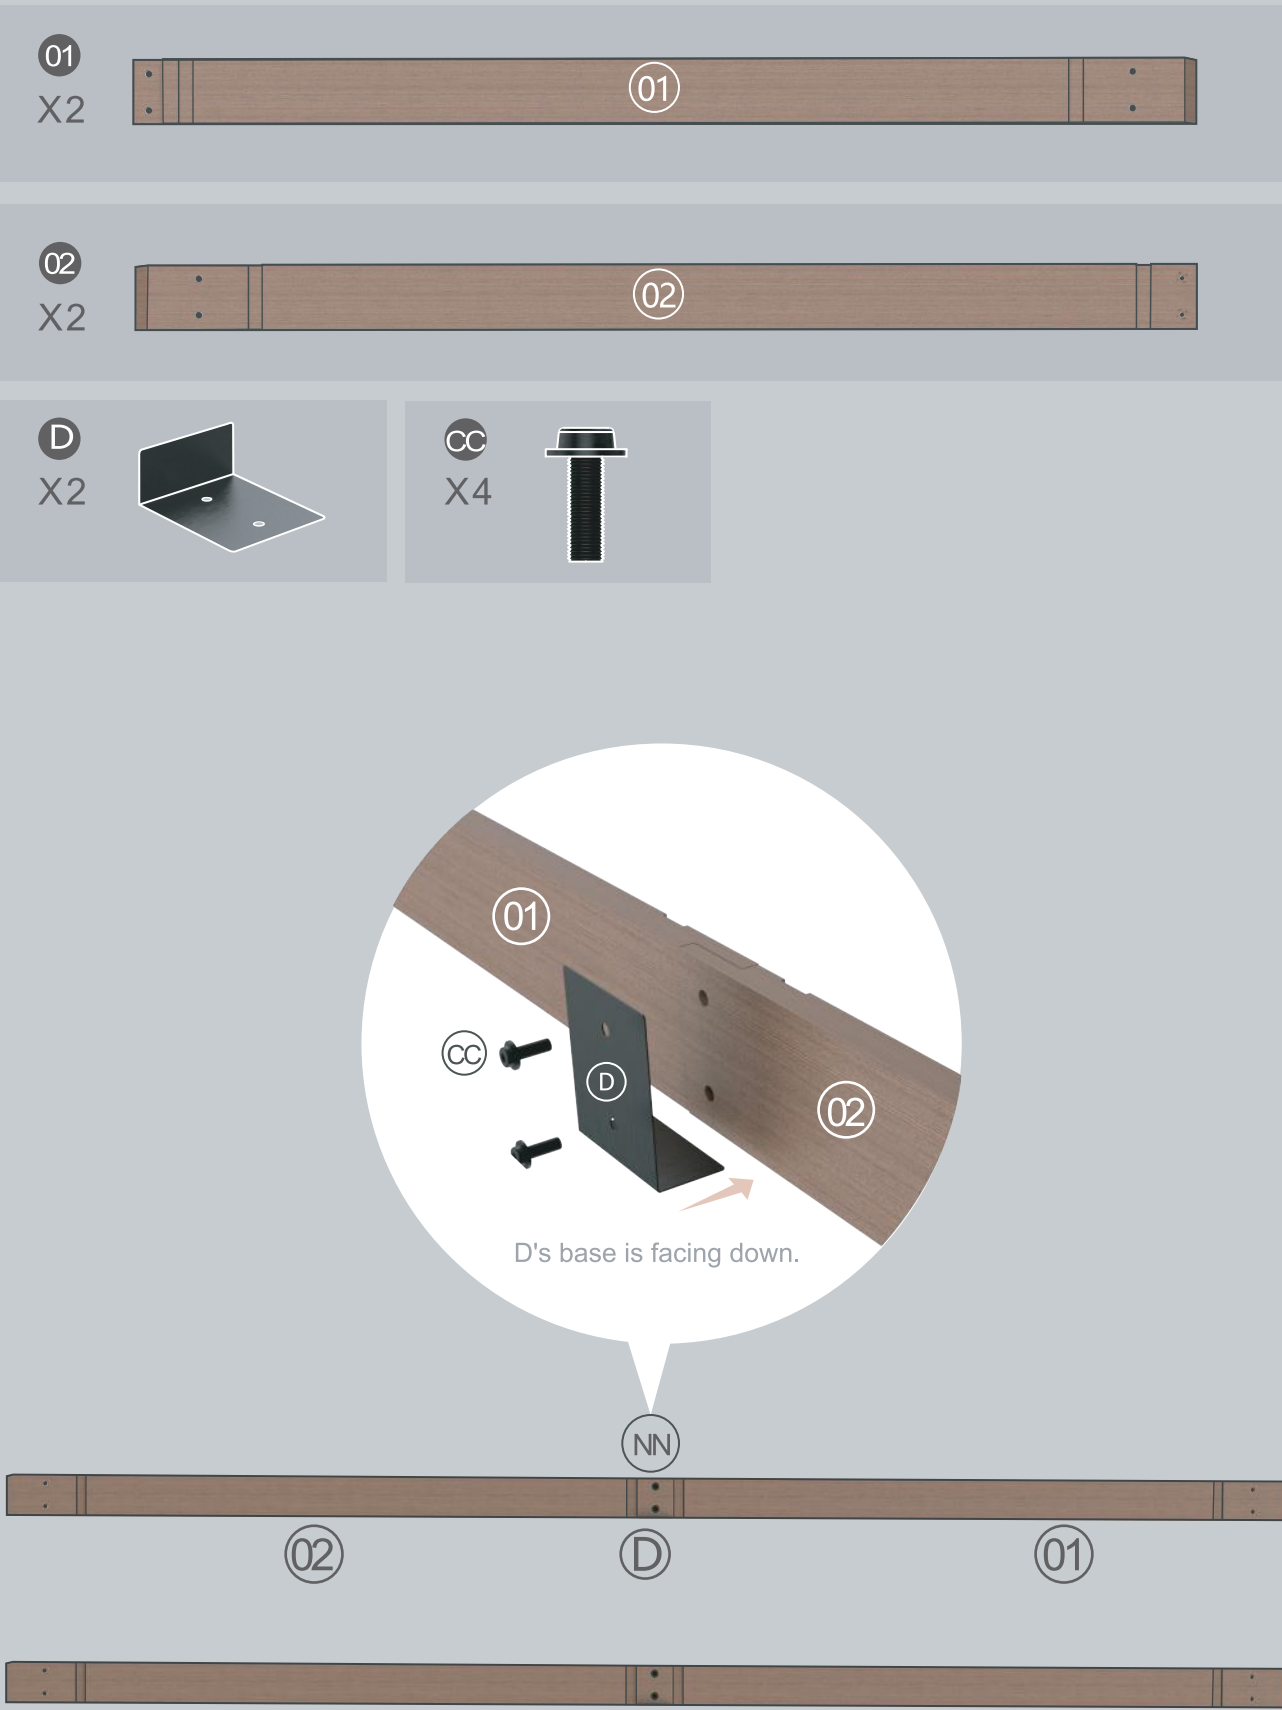


Step 18

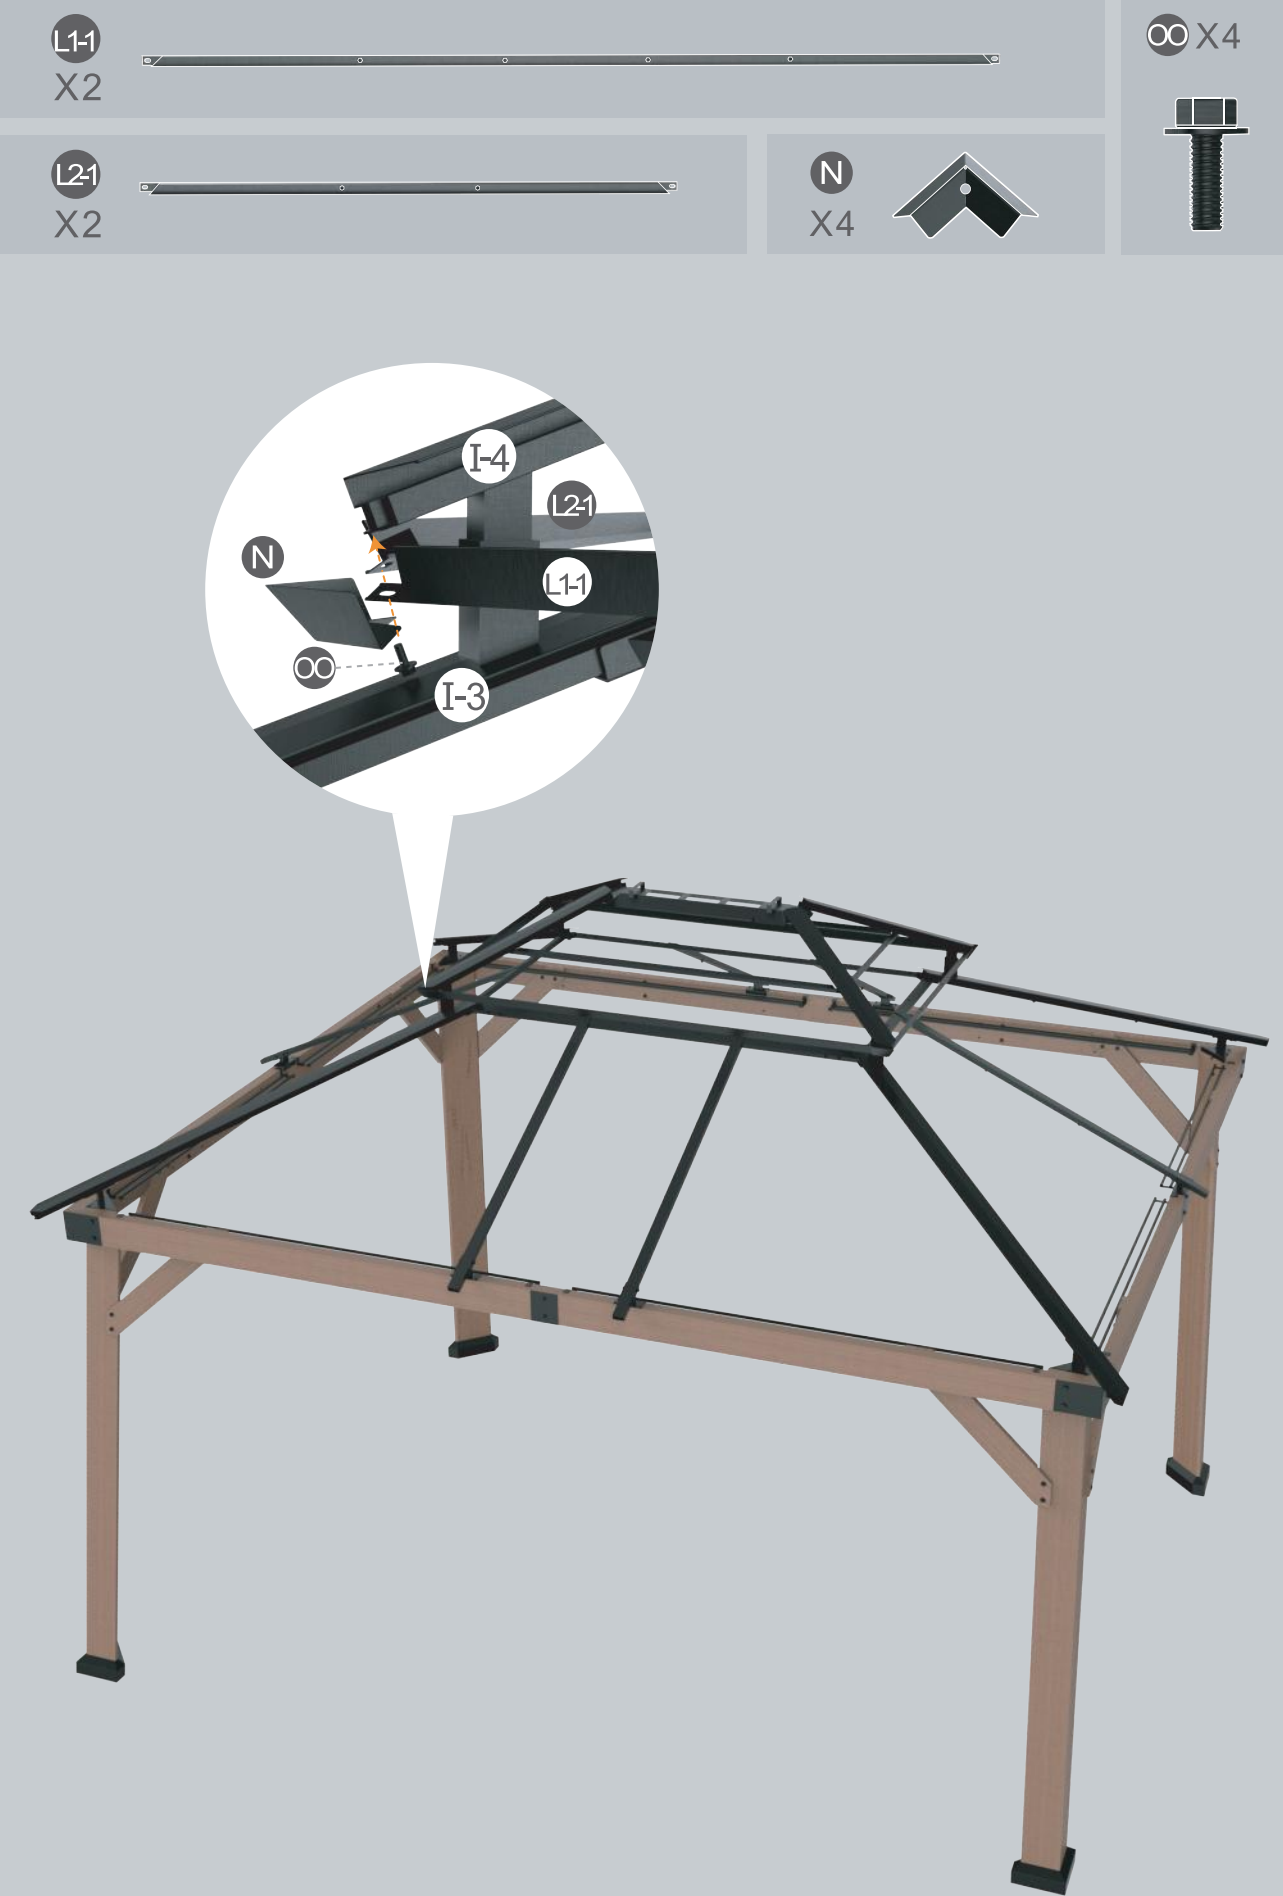

Step 17

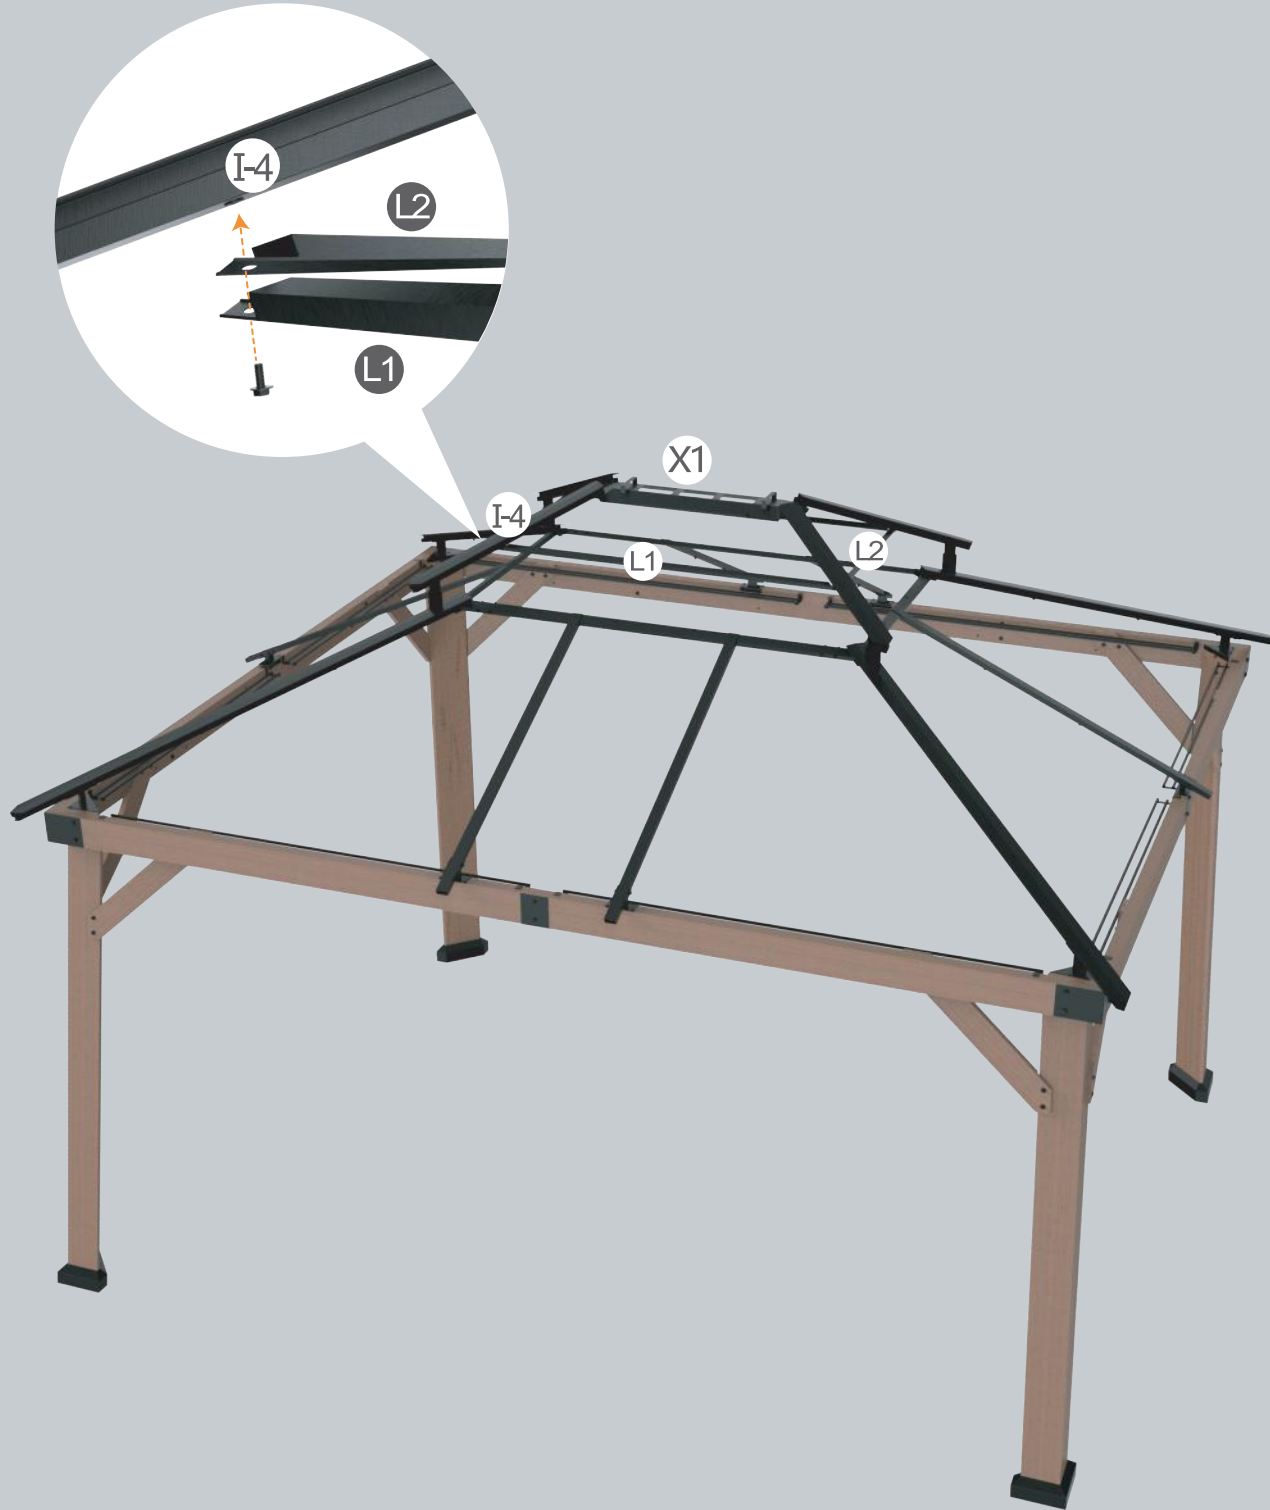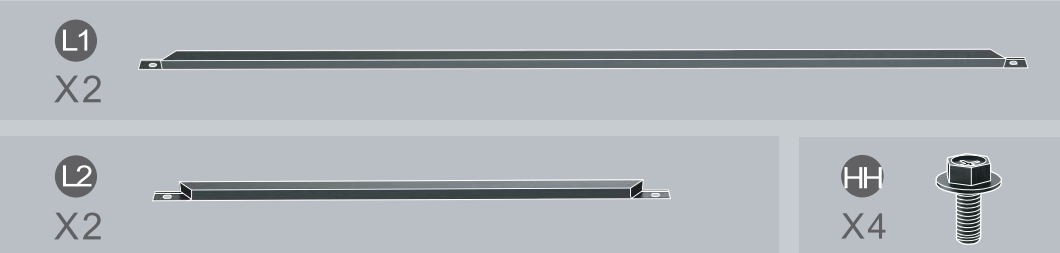


Step 6

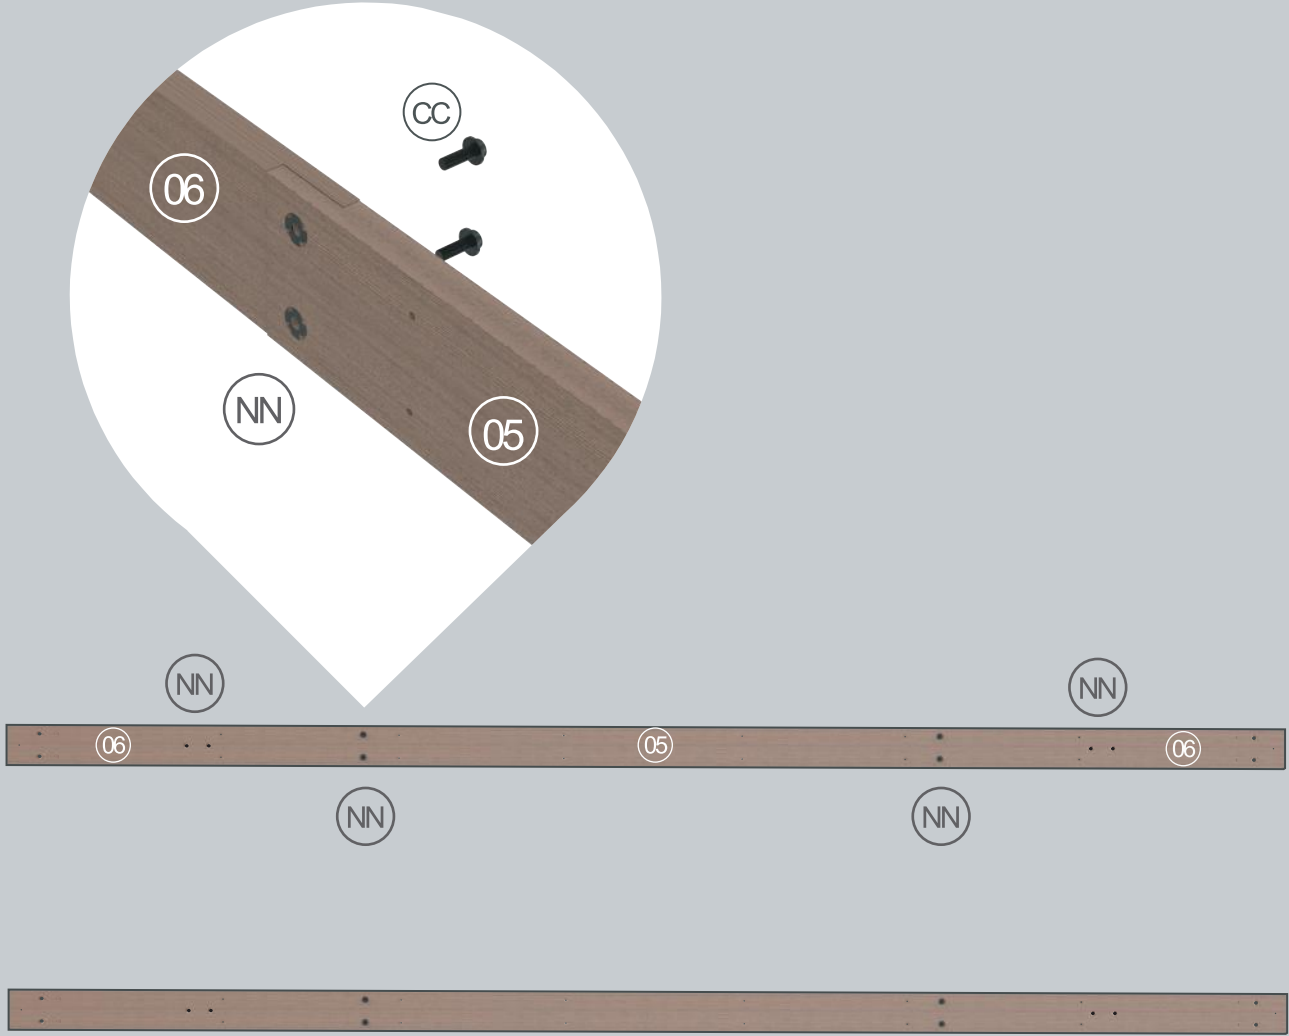


Step 7

Assemble the components installed in step 5 and Step 6,as shown in the following figure.

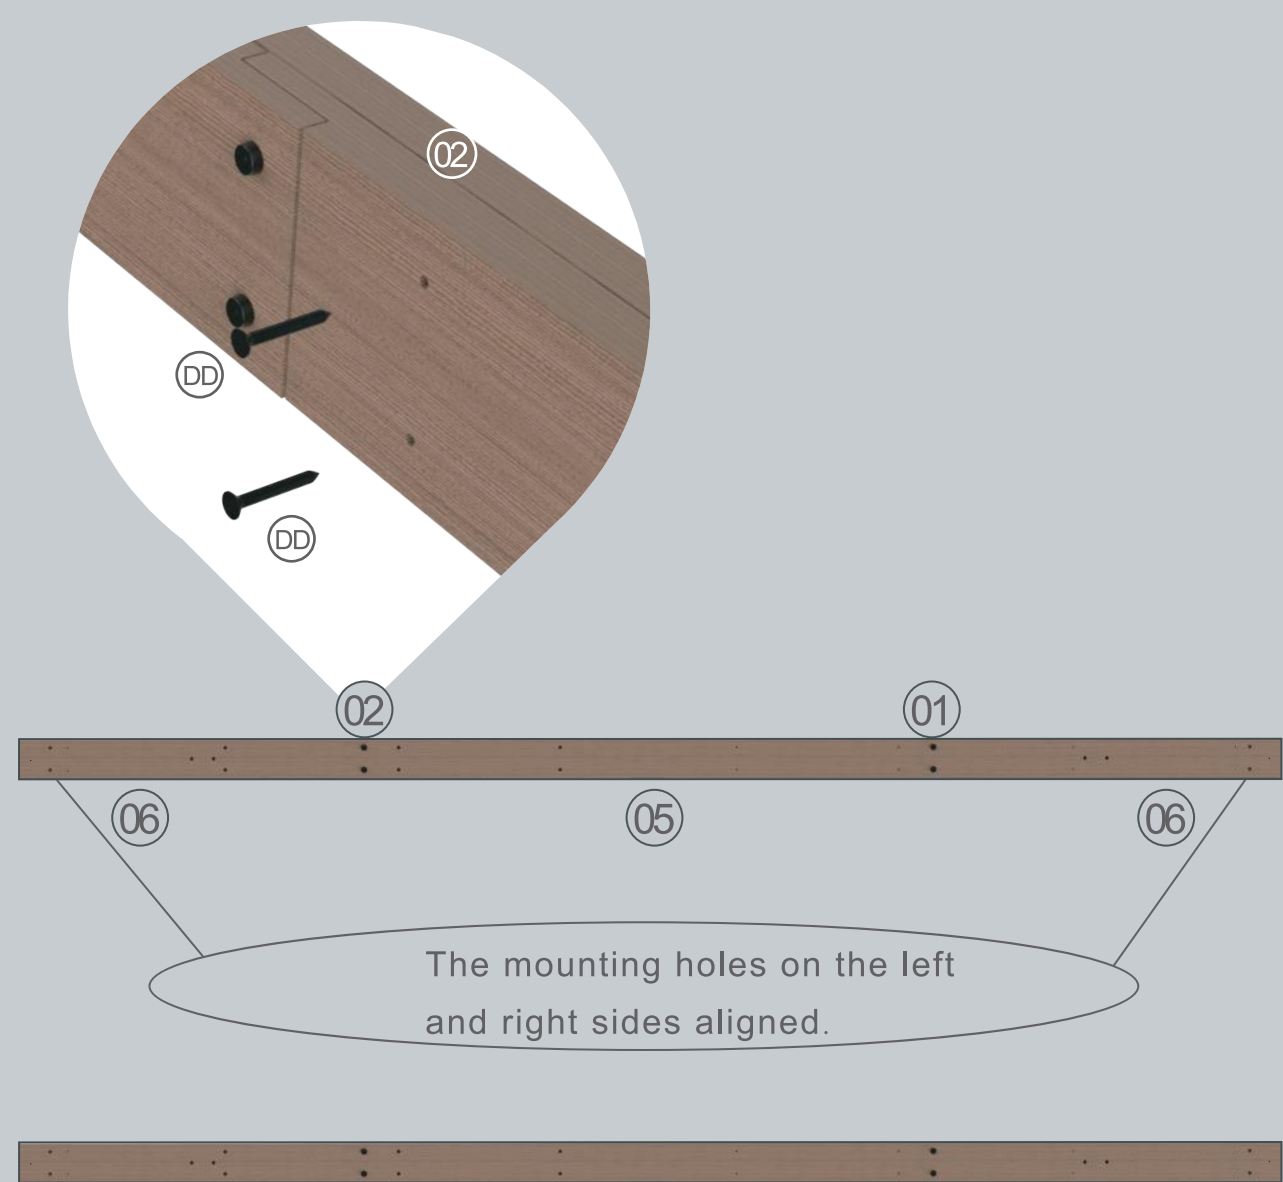

Step 16


X1
X1





HH
X8





I-4
X4

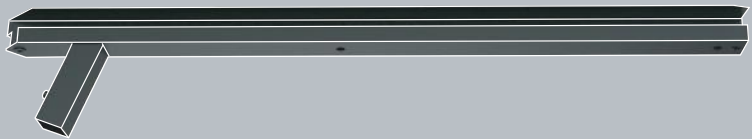

Step 15

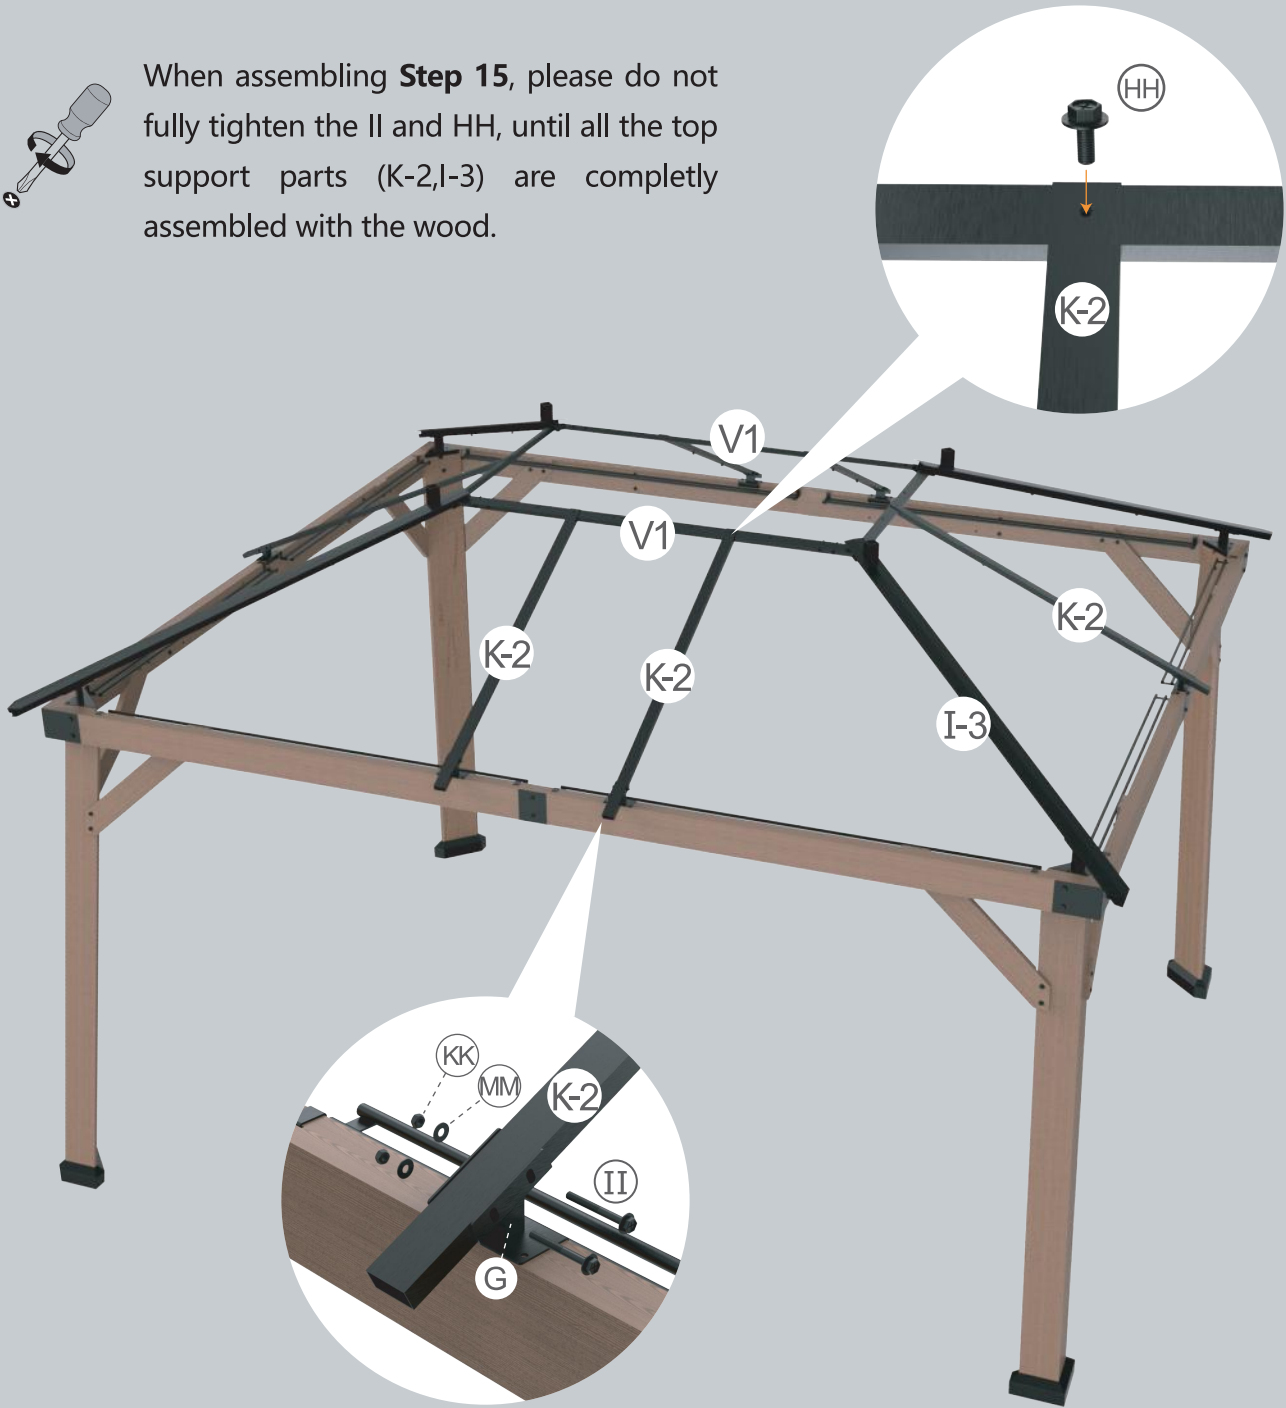
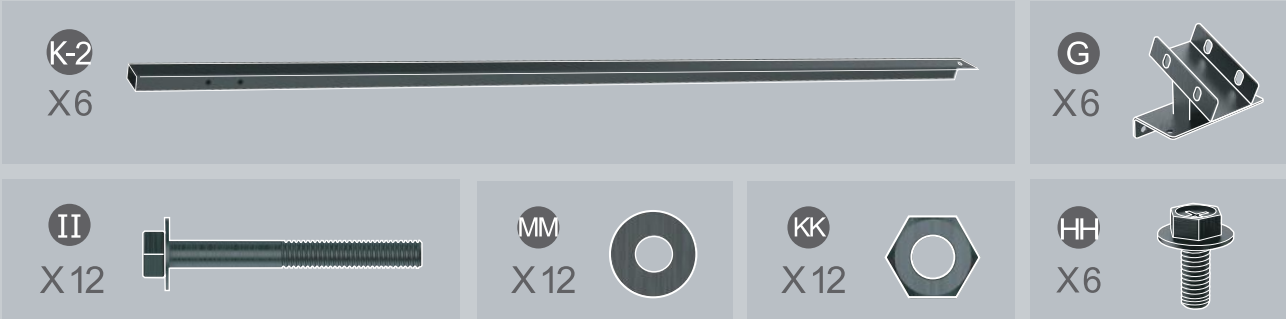


Step 8

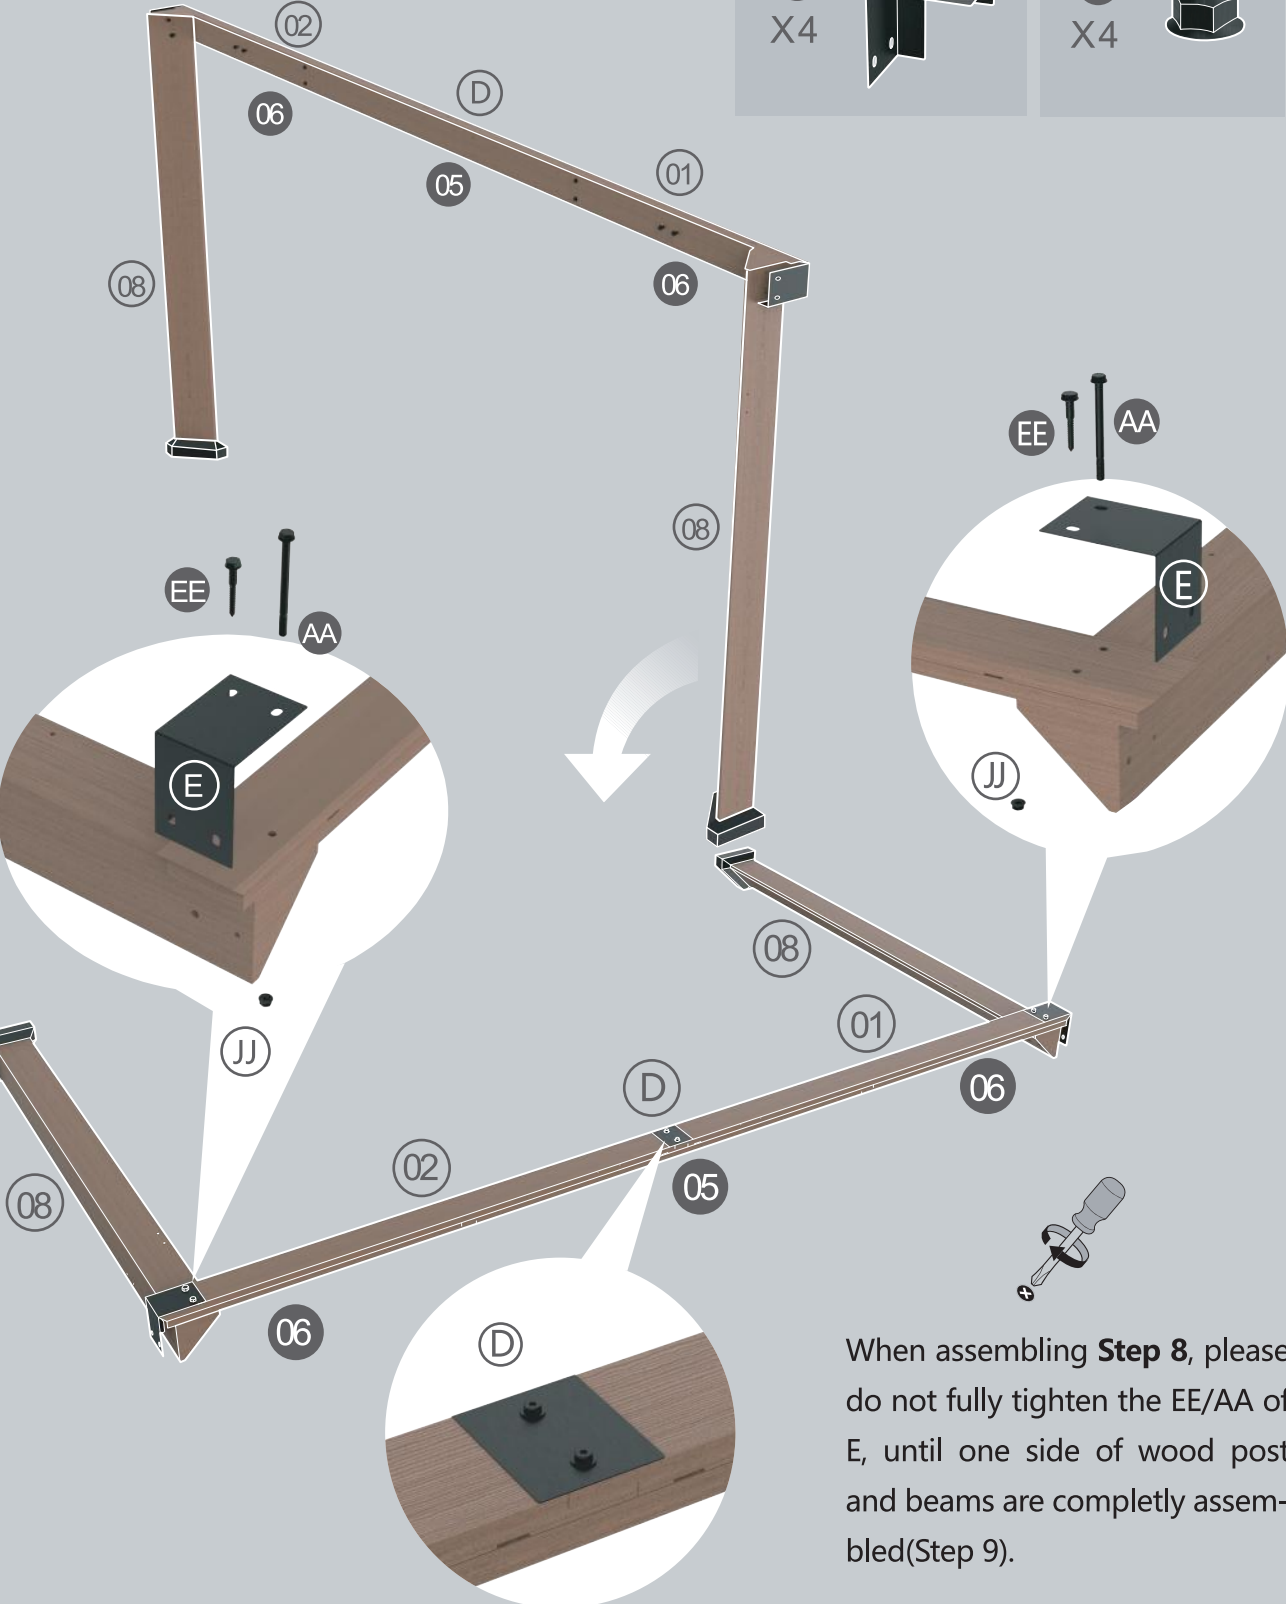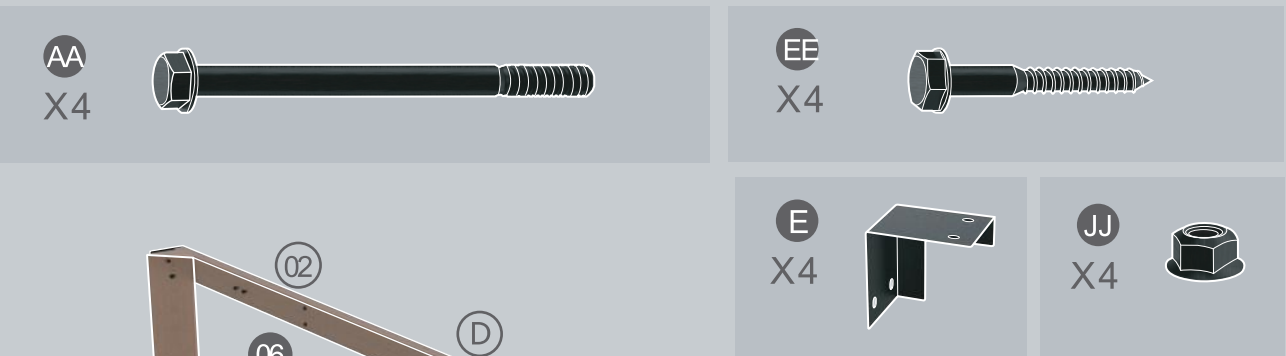


When assembling **Step 8**, please do not fully tighten the **EE/AA** of **E**, until one side of wood post and beams are completely assembled(Step 9).



Step 9

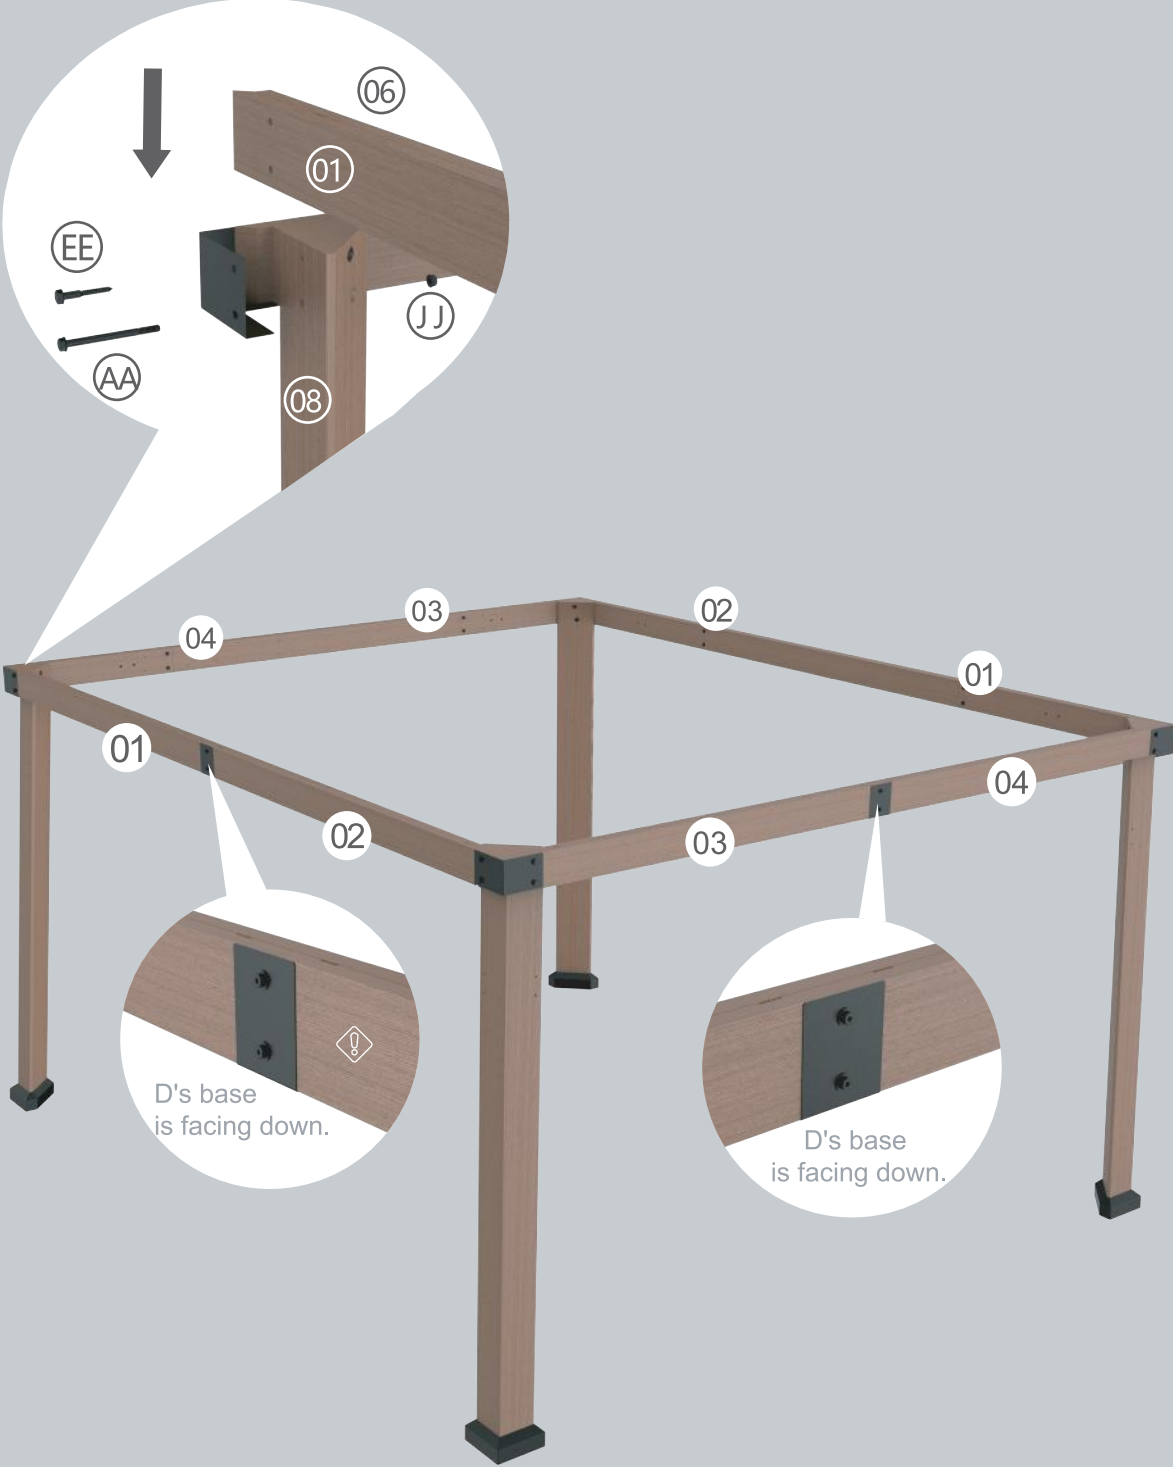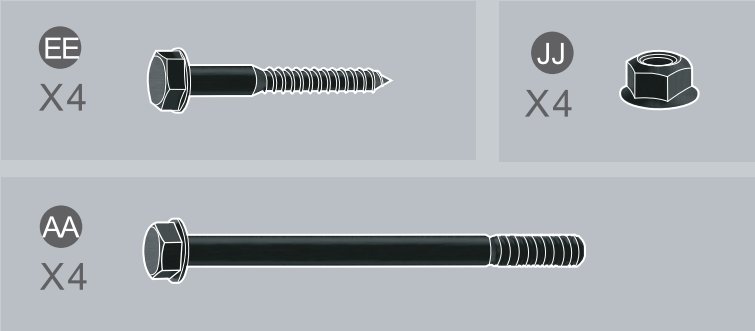


Step 14

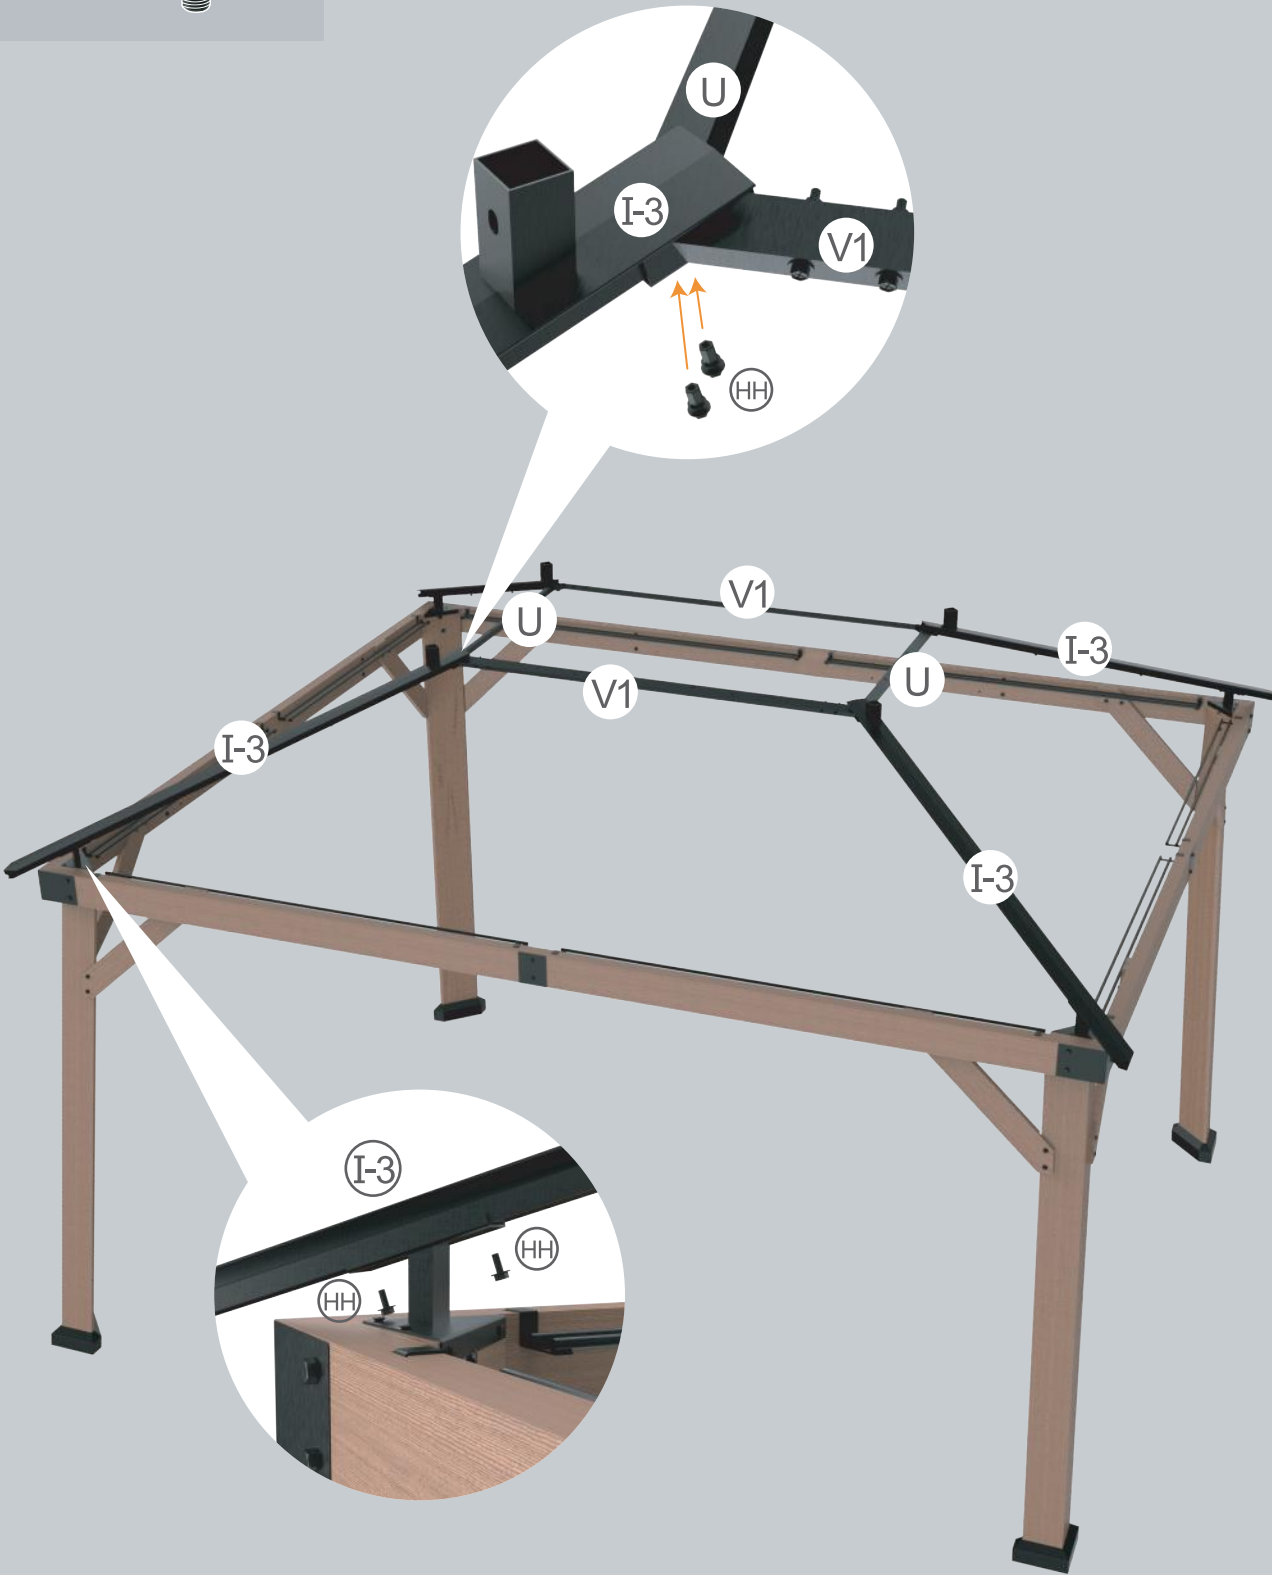


Step 13

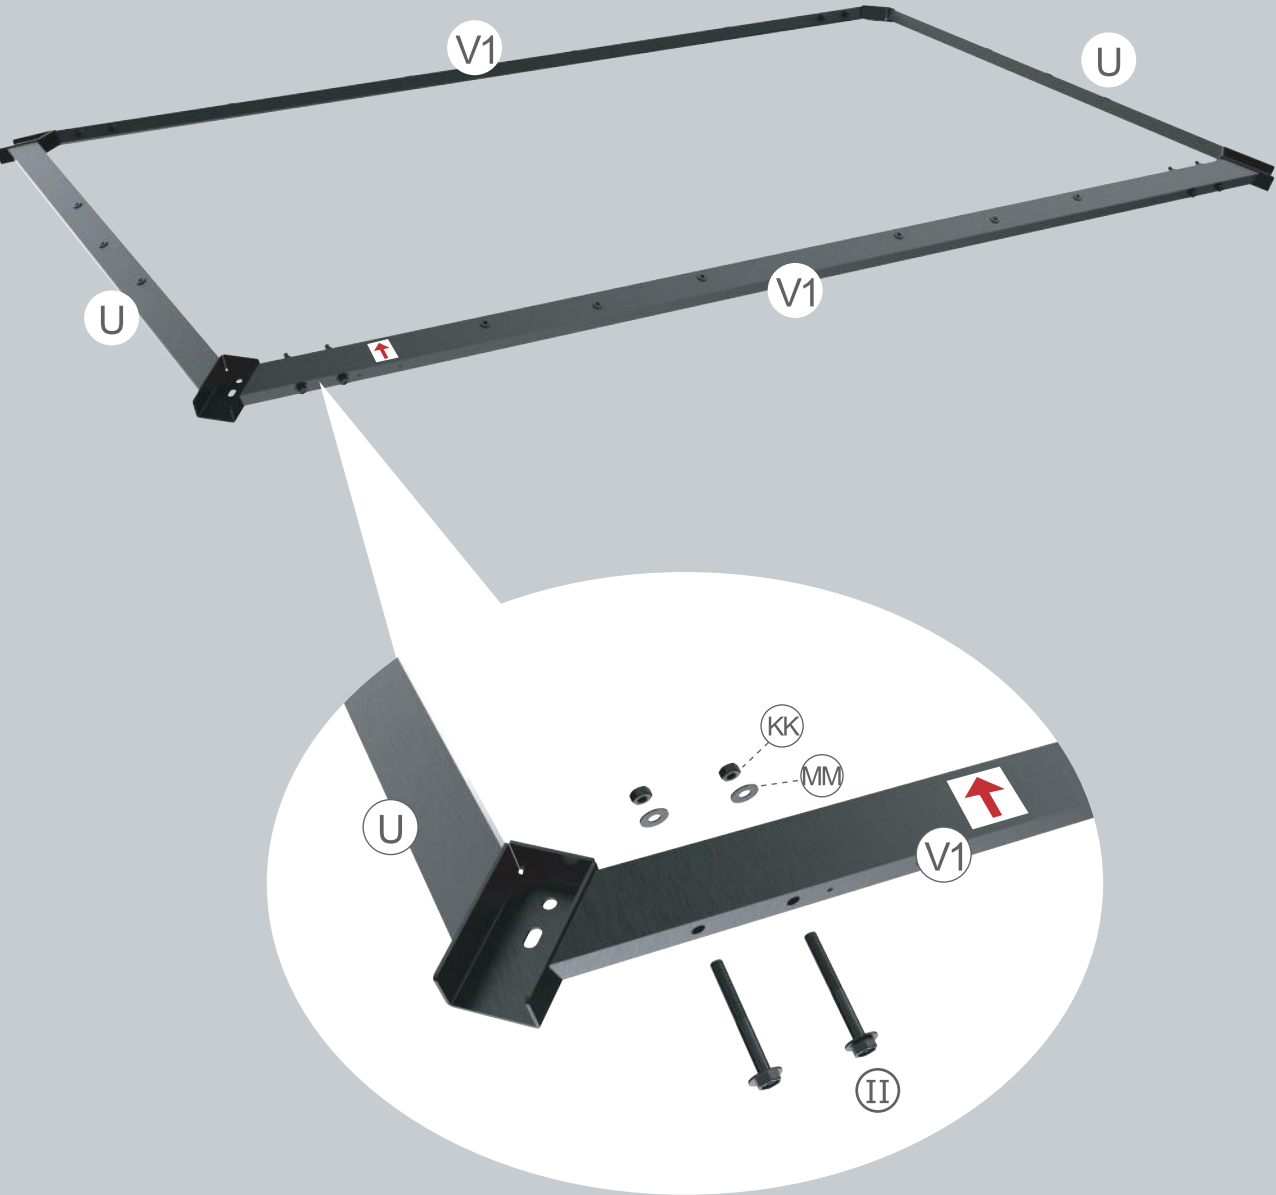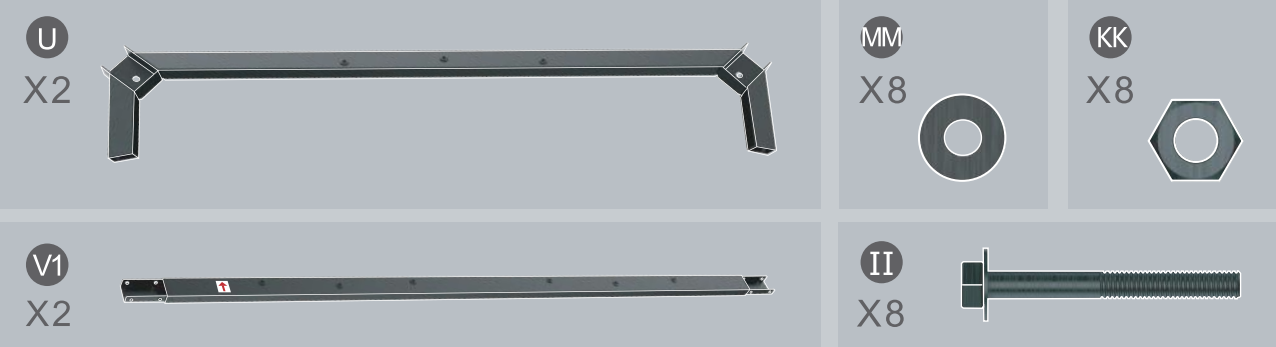

Step 10

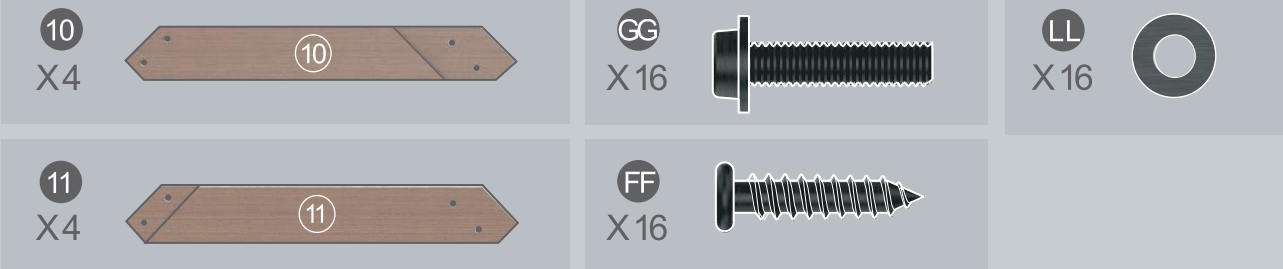


⚠ d1 = d2

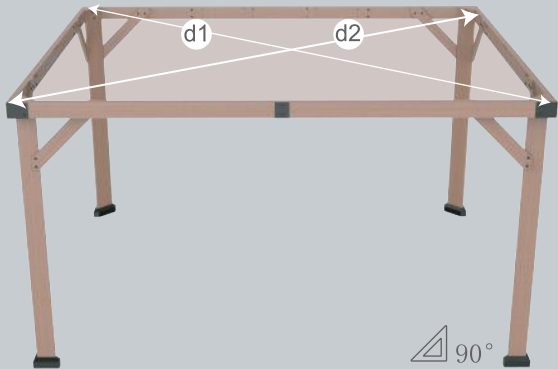


Tips:

Please measure to make sure *the length of d1 is equal to d2* before moving to next step to ensure a square frame and best results.Keep the beam at right angles to the post,the post at right angles to the ground,and keep the beam horizontal.

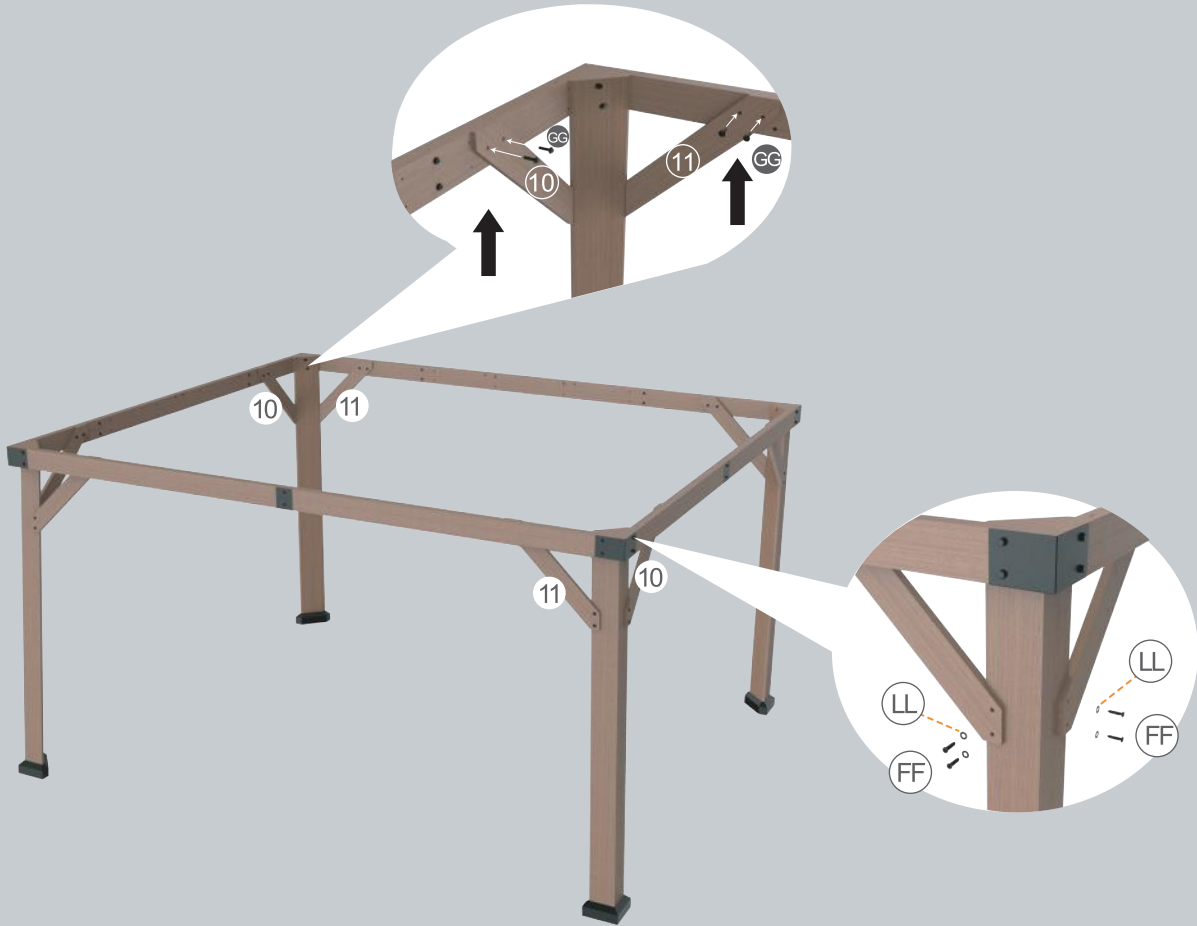

Step 11

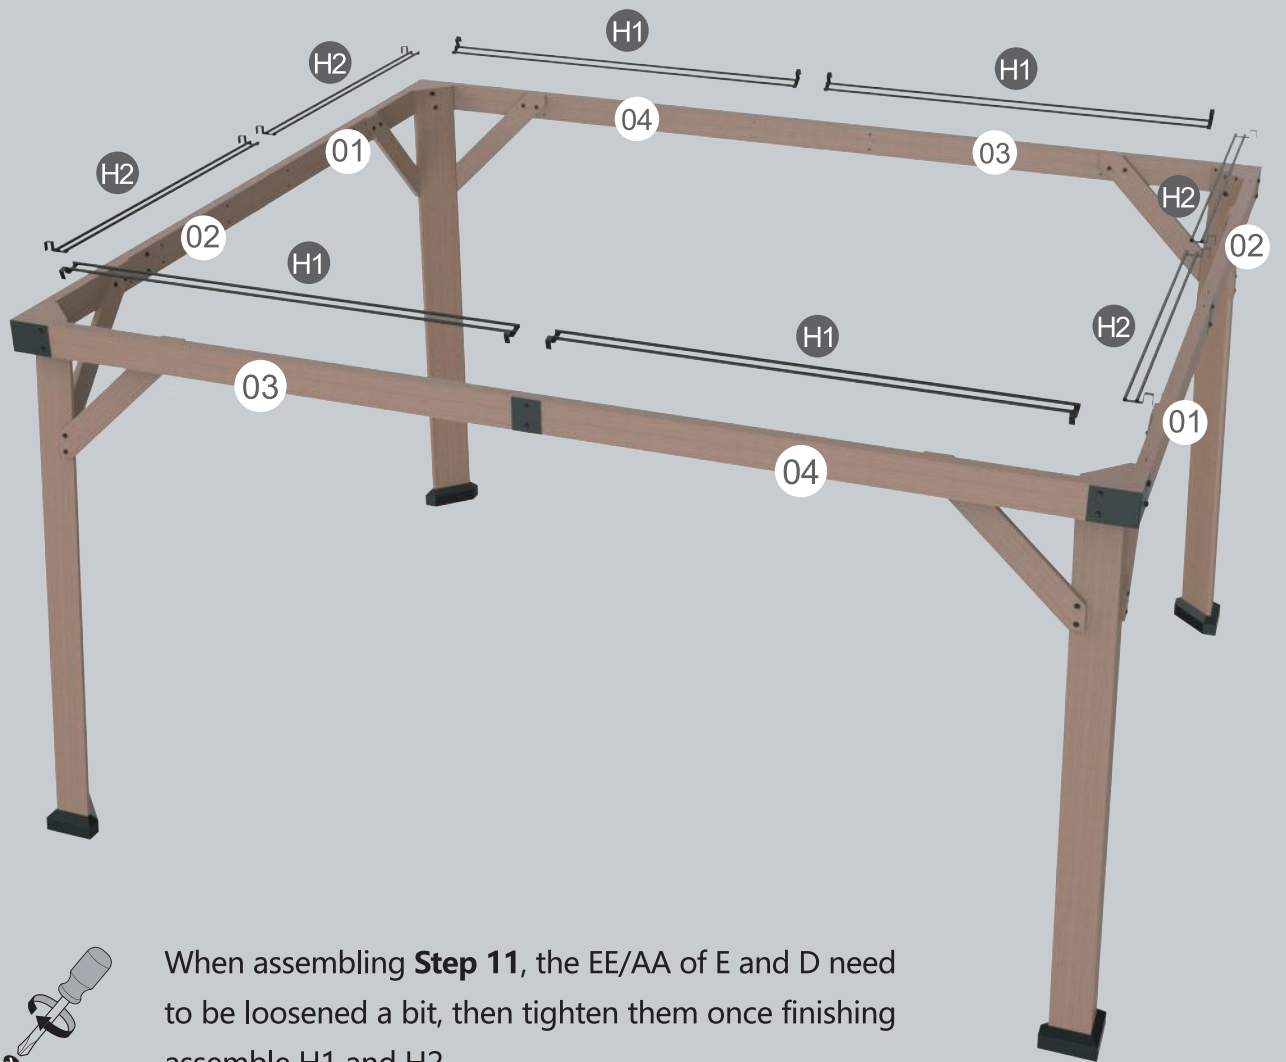

When assembling **Step 11**, the EE/AA of E and D need to be loosened a bit, then tighten them once finishing assemble H1 and H2.

Step 12

