


# Headboard Assembly Instructions

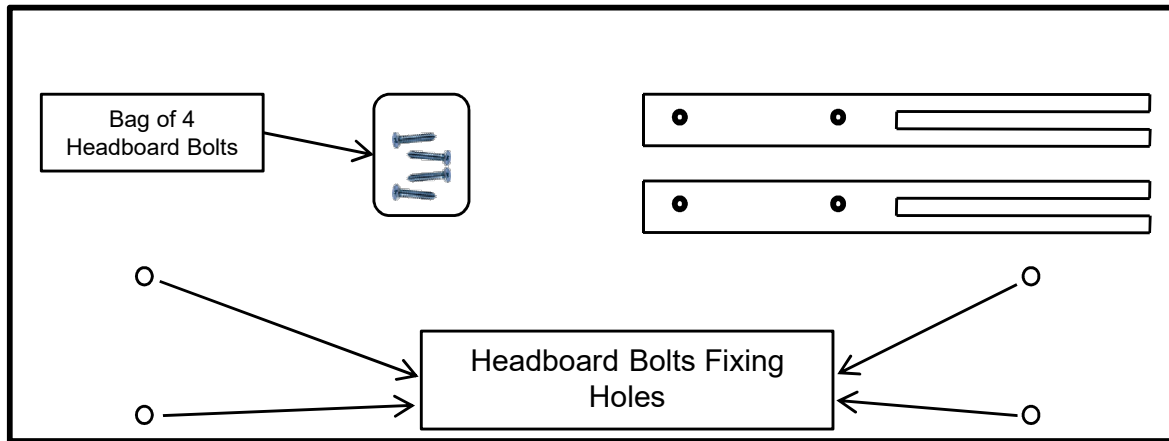

Step 1: Remove the Headboard from the packaging.  
You will find a Bag of 4 Headboard Bolts and 2 Wooden Struts.

Step 2: Align the Struts Fixing holes over the Headboard Bolts Fixing Holes.

Step 3: Insert Bolts provided Tighten by the Hand, and then using a Screw Driver.

Please Note : Bolts must be align and tight by Hand and then using a Screw Driver, using an Impact Driver can damage the T-Nut fixing used inside the Headboard.

