


Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers: 2

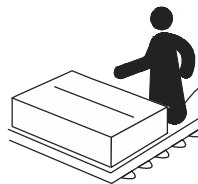


Put a carpet on the floor
before unpacking



















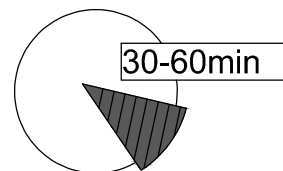


Estimate installation time:
60 minutes





ASSEMBLY INSTRUCTION

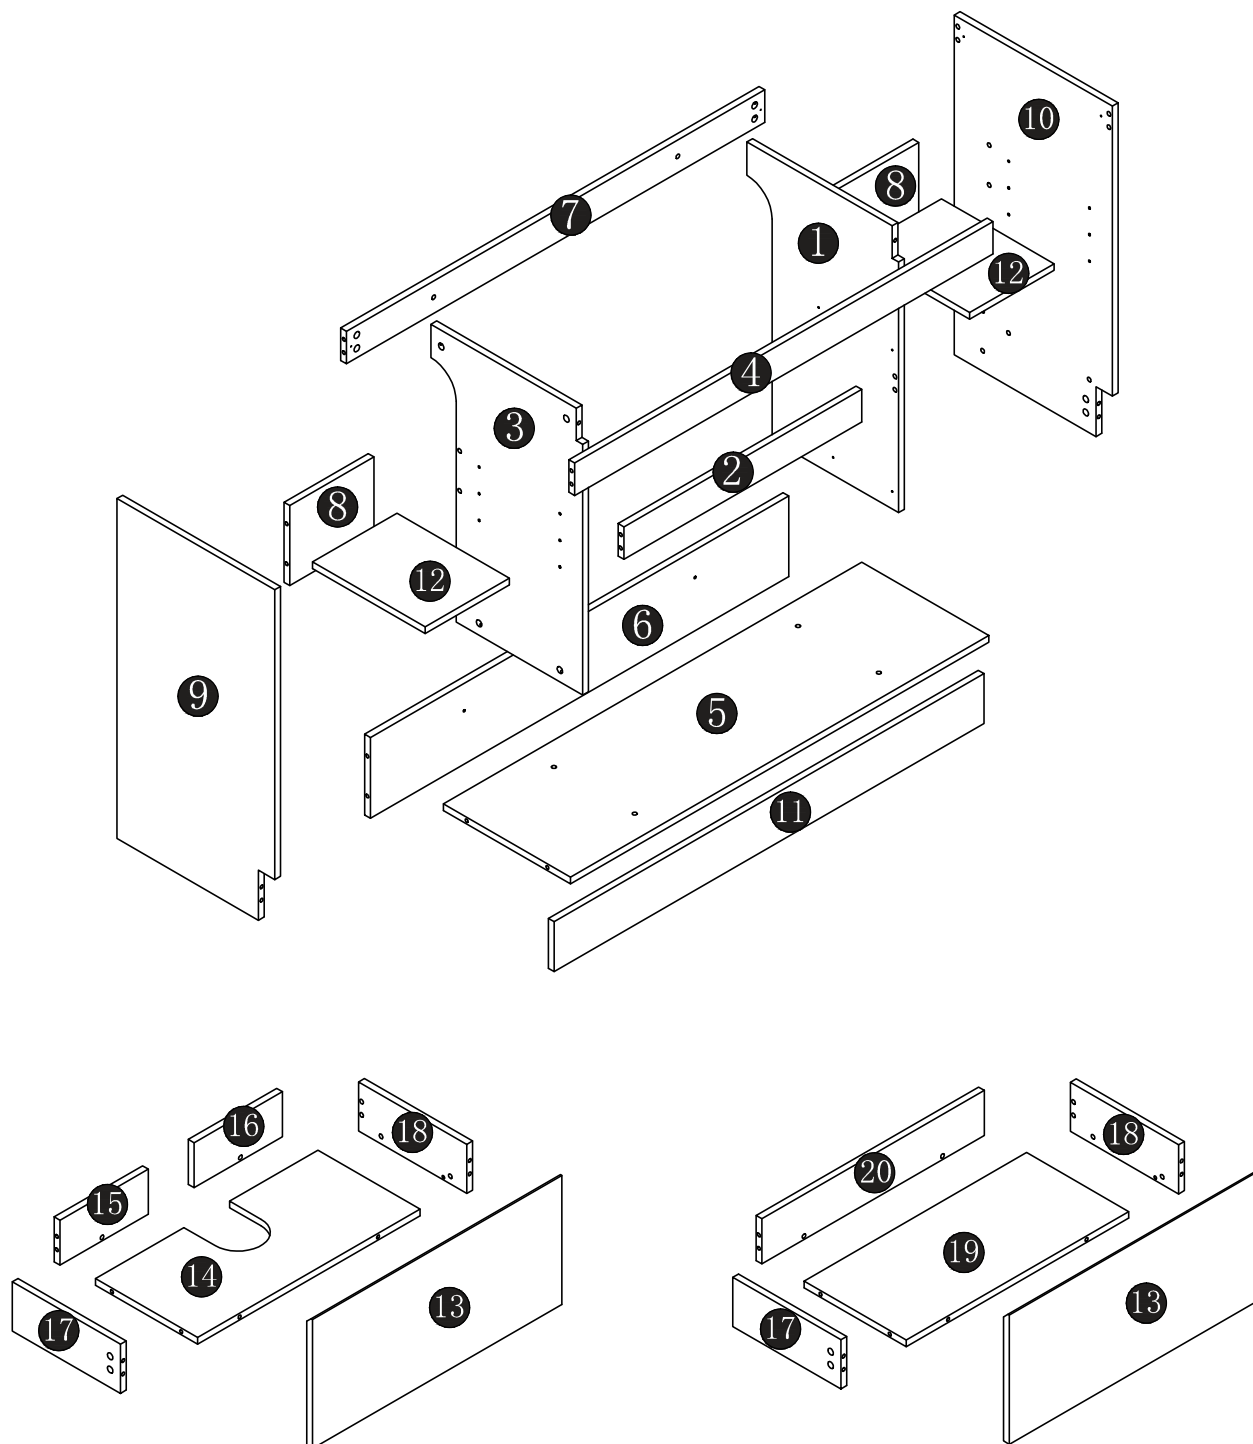

ASSEMBLY INSTRUCTION

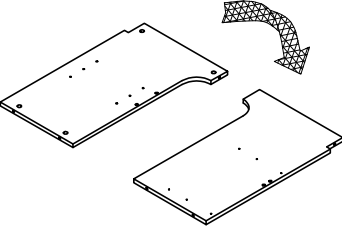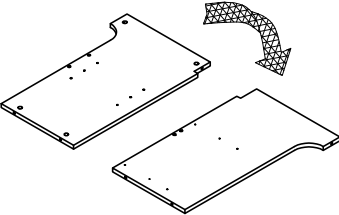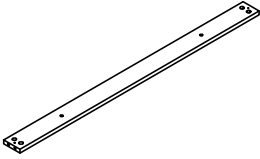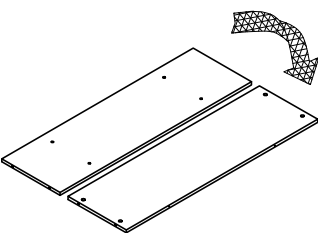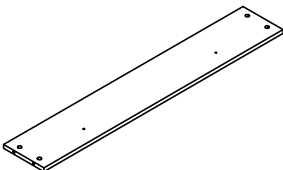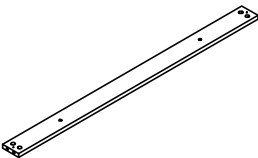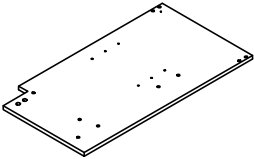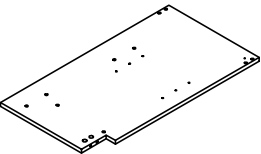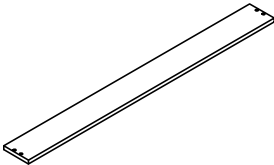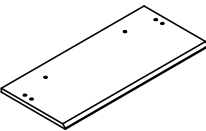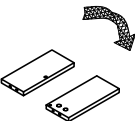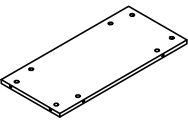
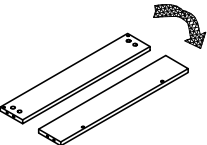
1  1PC	2  1PC	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  2PCS
9  1PC	10  1PC	11  1PC	12  2PCS
13  2PCS	14  1PC	15  1PC	16  1PC
17  2PCS	18  2PCS	19  1PC	20  1PC

ASSEMBLY INSTRUCTION

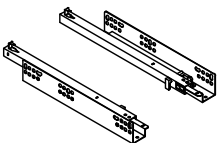
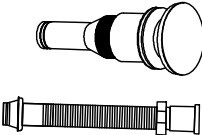
A 72PCS  M6*40	B 72PCS  Ø15*10	C 2sets 	D 33PCS  Ø3.5*14
E 2PCS  Ø3.5*35	F 4PCS 	G 8PCS 	H 1set 
I 72PCS 	J 16PCS 	L 1PC 	

Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL

Tighten the bolt until the shoulder is aligned with the panel.
Be suer not to tighten too much or too little.

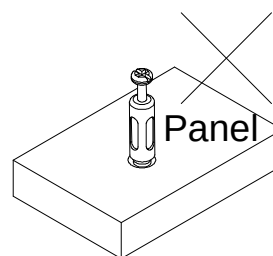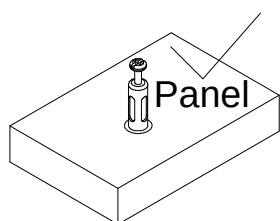

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

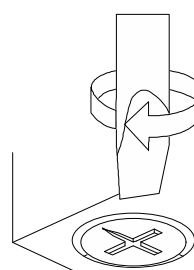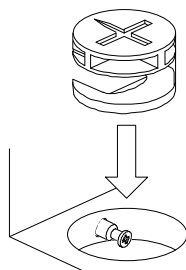

Turn the cam lock clockwise to tighten















ASSEMBLY INSTRUCTION

Step 1

A 72PCS





M6*40

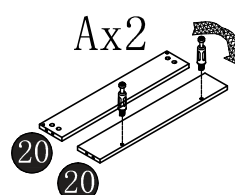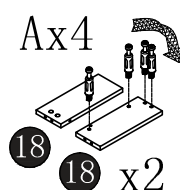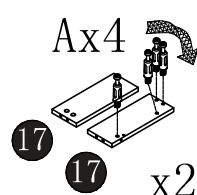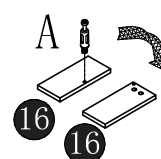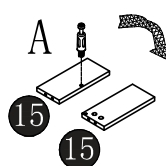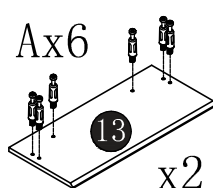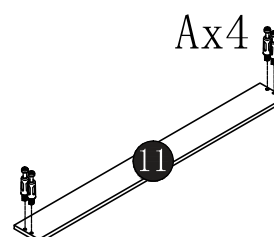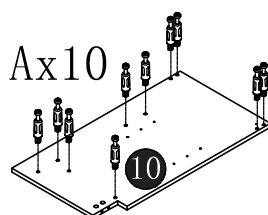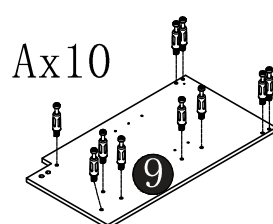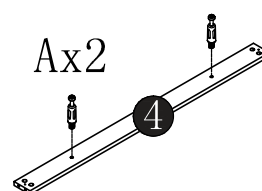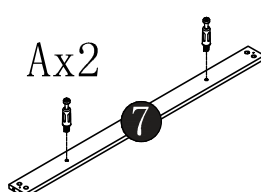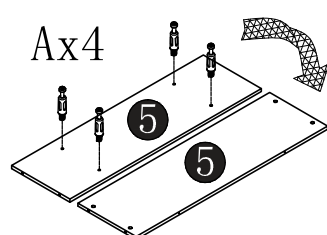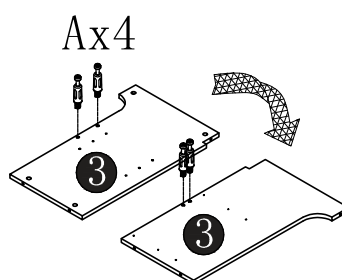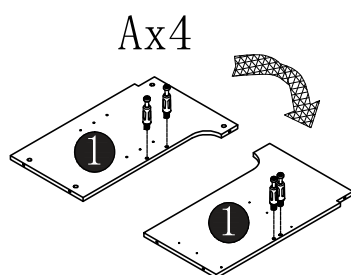


ASSEMBLY INSTRUCTION

Step 2

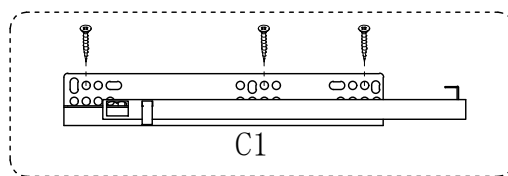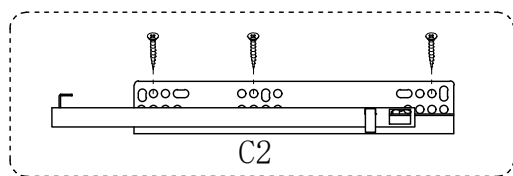



C 2sets



D 12PCS



Ø3.5*14

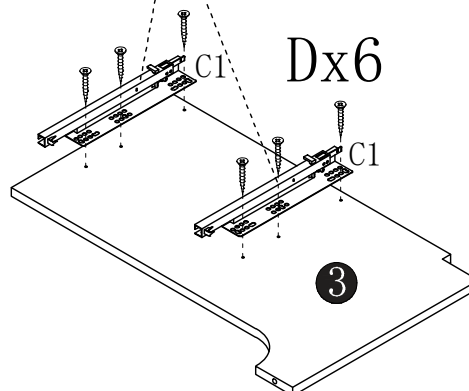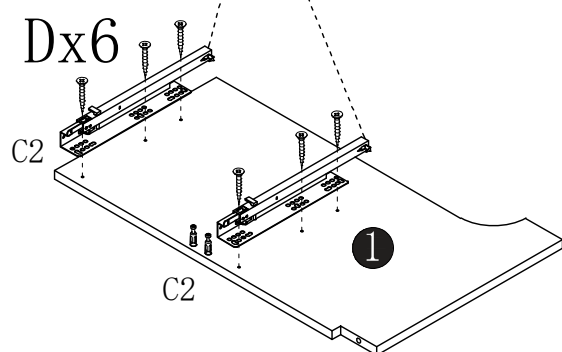


Step 3

B 4PCS



Ø15*10mm

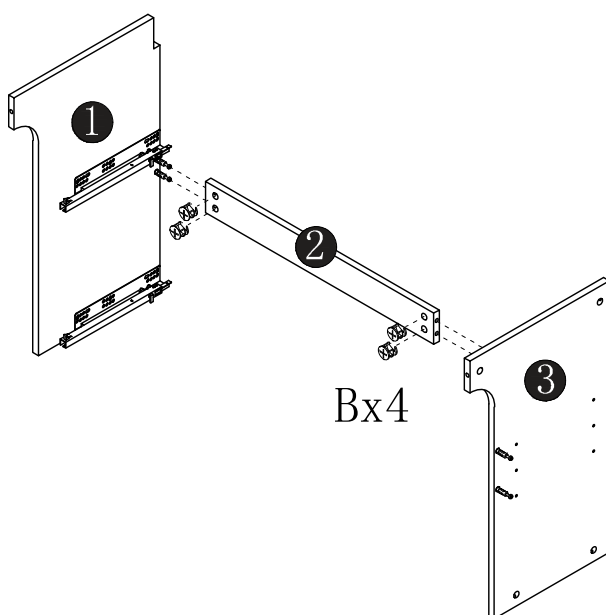


ASSEMBLY INSTRUCTION

Step 4

B 2PCS



Ø15*10mm

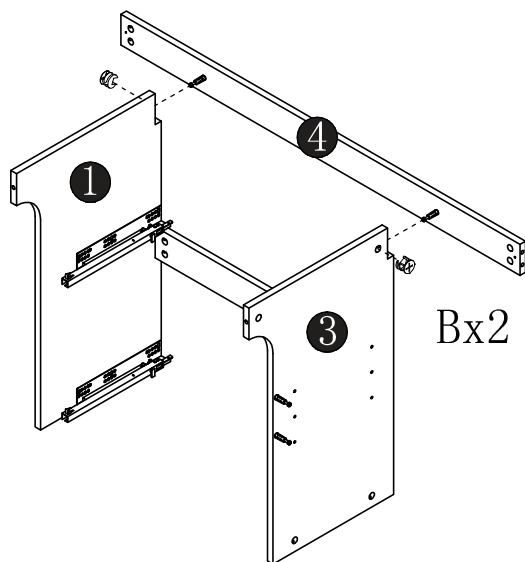


Step 5

B 4PCS



Ø15*10mm

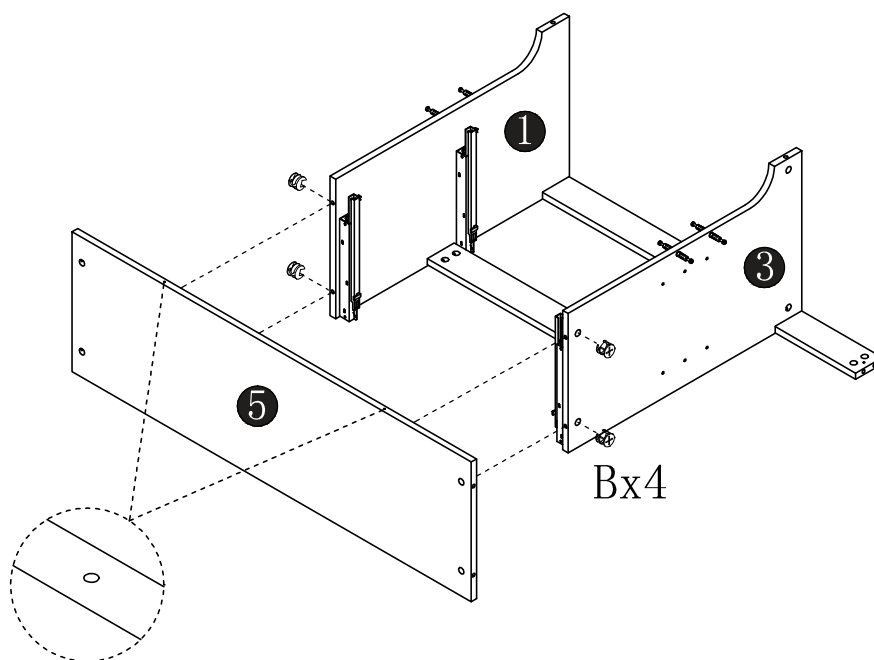


ASSEMBLY INSTRUCTION

Step 6

B 2PCS



Ø15*10mm

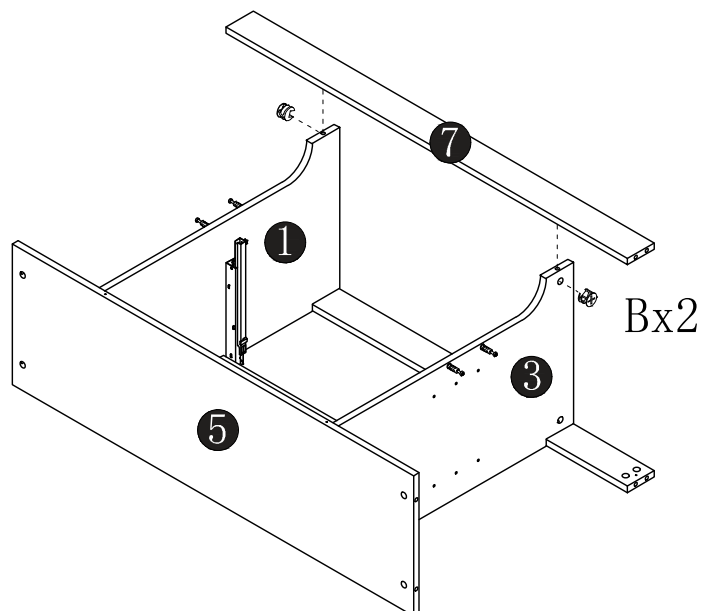


Step 7

E 2PCS



Ø3.5*35

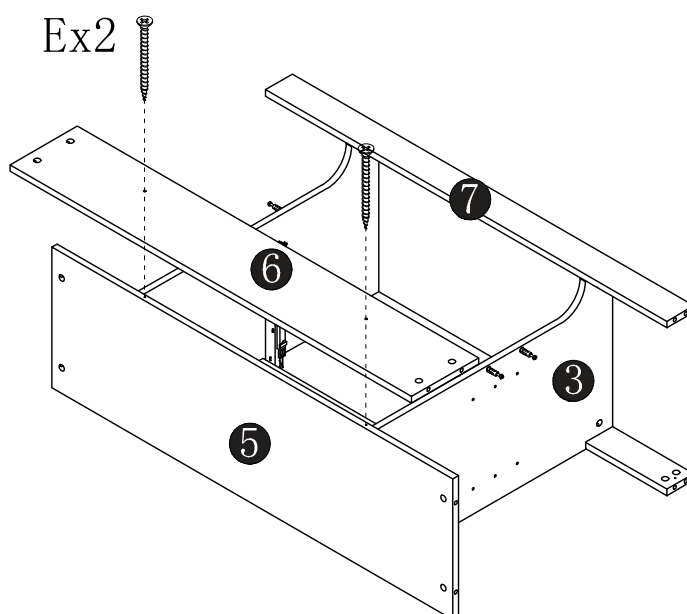


ASSEMBLY INSTRUCTION

Step 8

B 4PCS



Ø15*10mm

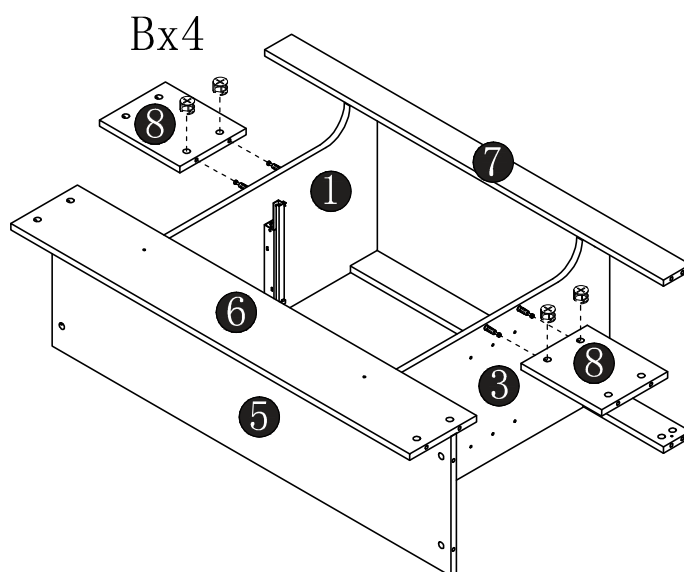


Step 9

B 10PCS



Ø15*10mm

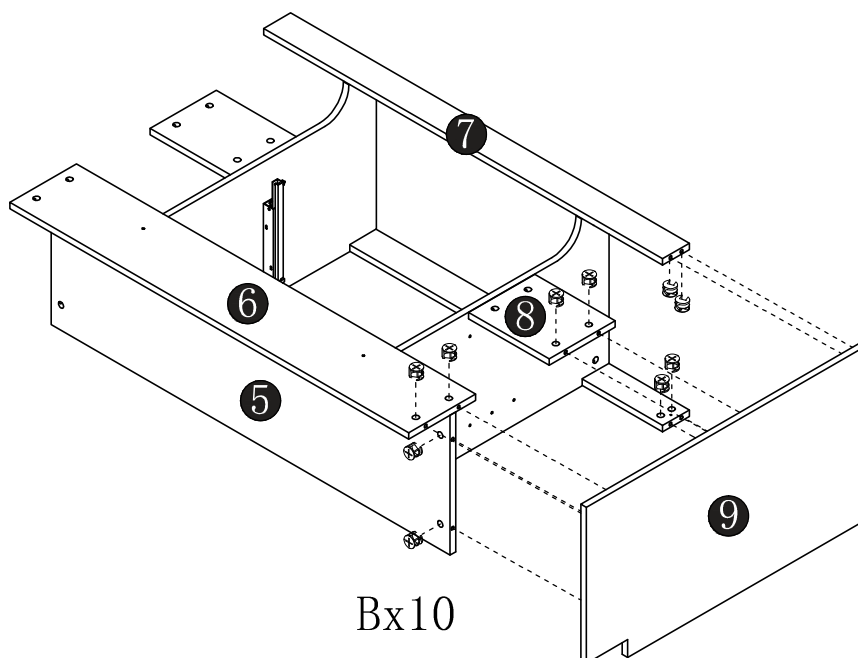


ASSEMBLY INSTRUCTION

Step 10

B 10PCS



Ø15*10mm

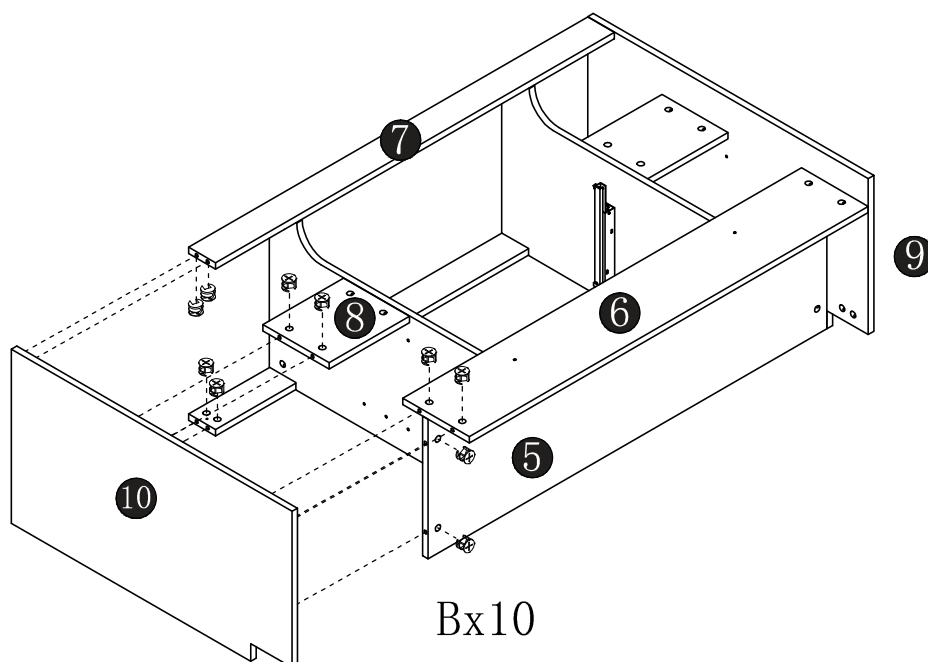


Step 11

B 4PCS




Ø15*10mm

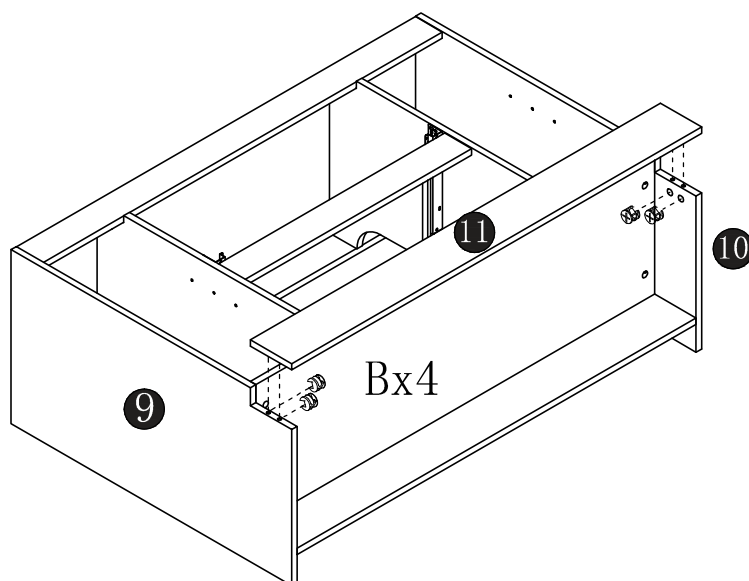

ASSEMBLY INSTRUCTION

Step 12

J 8PCS

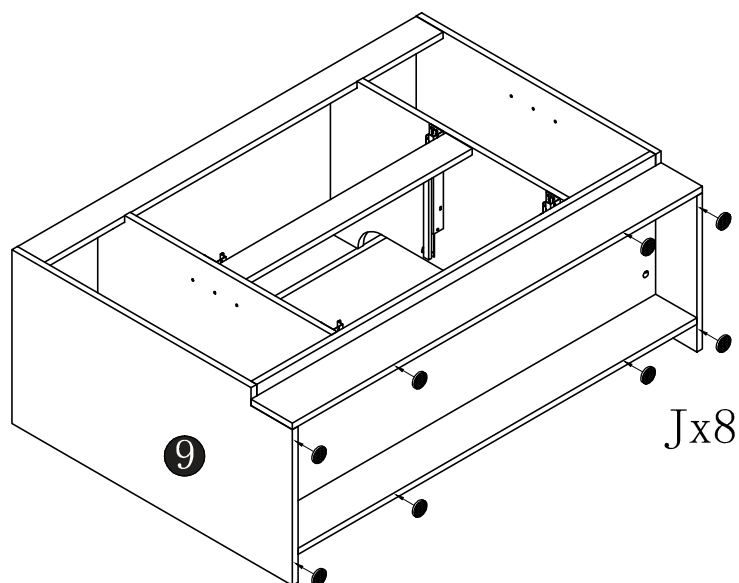


Step 13

D 8PCS



Ø3.5*14


F 4PCS

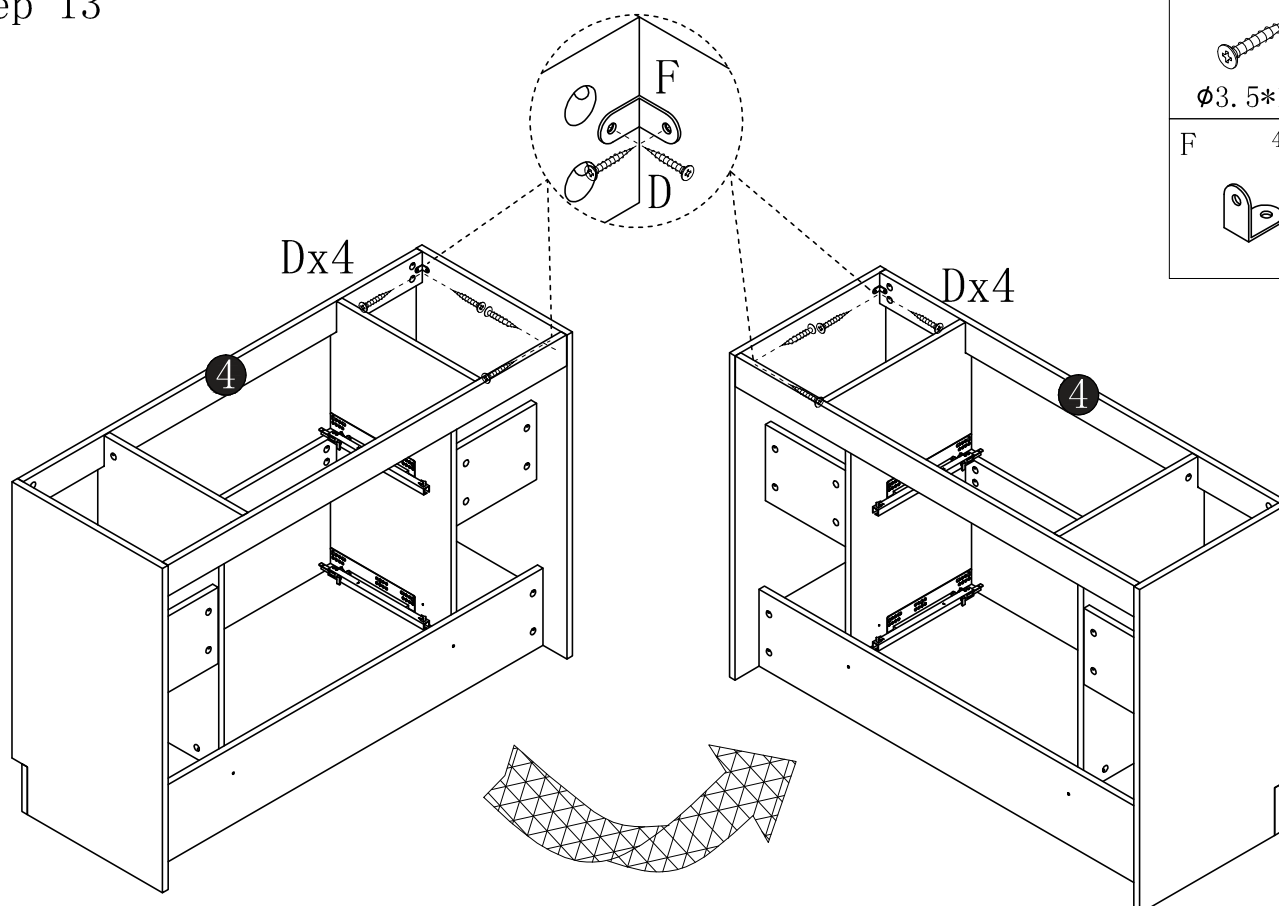


ASSEMBLY INSTRUCTION

Step 14

G 8PCS

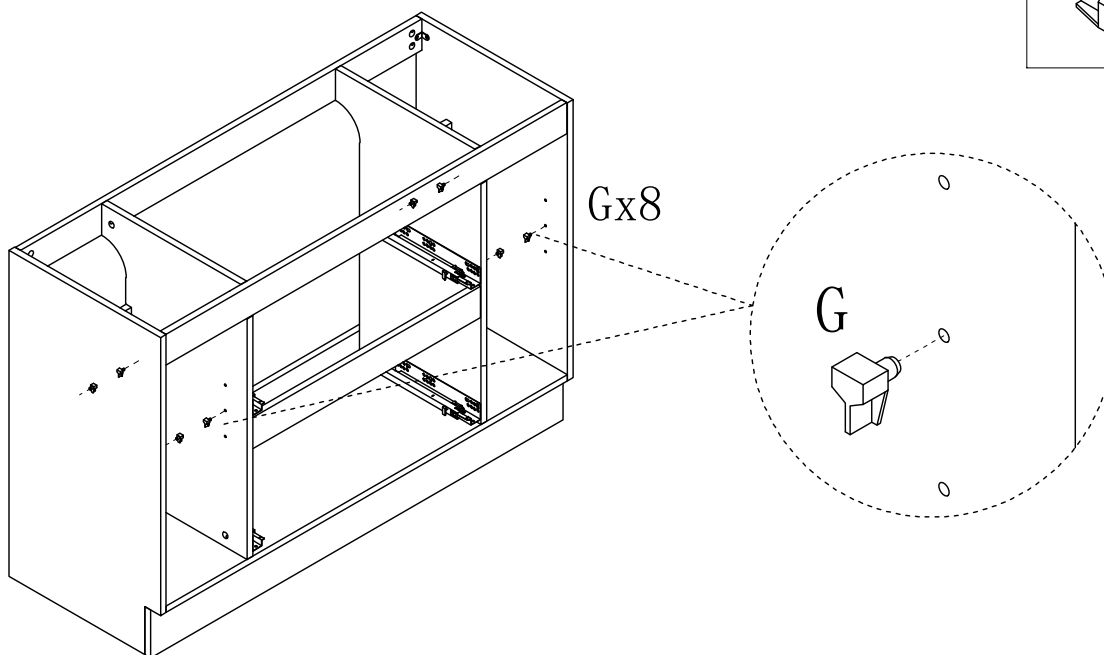





Step 15

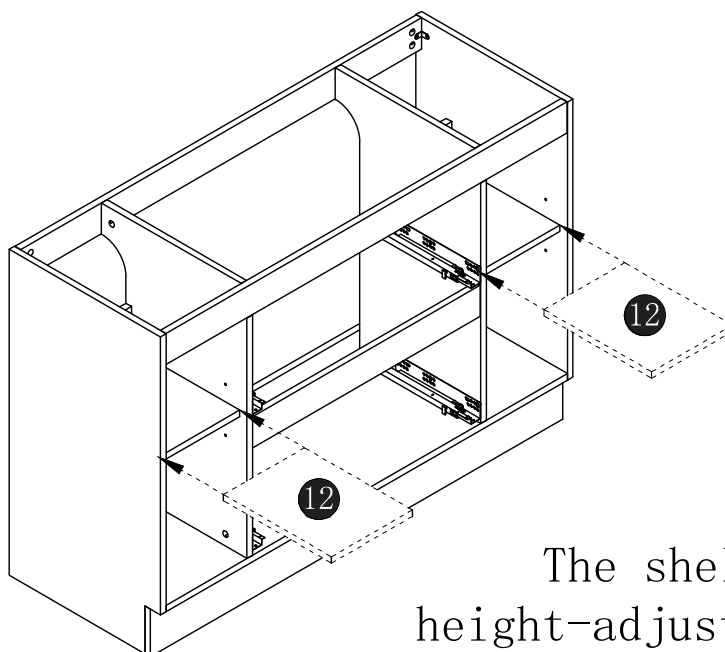

The shelves are height-adjustable and can be installed at different levels to suit your needs.

ASSEMBLY INSTRUCTION

Step 16

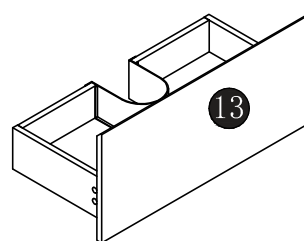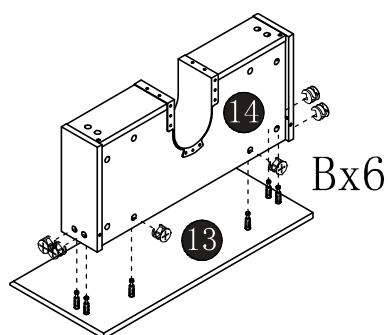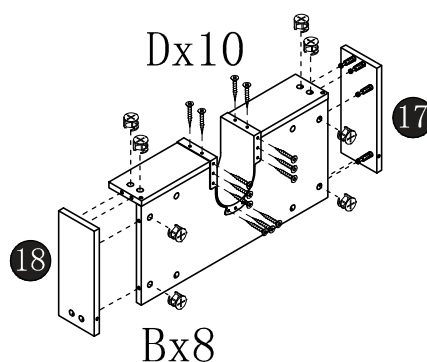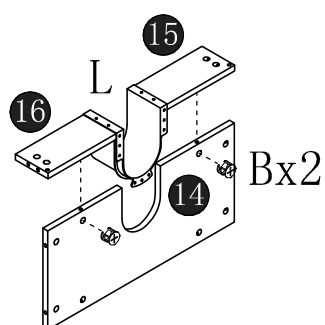

B 16PCS



$\phi 15*10\text{mm}$

D 10PCS







$\phi 3.5*14$

L 1PC



Step 17

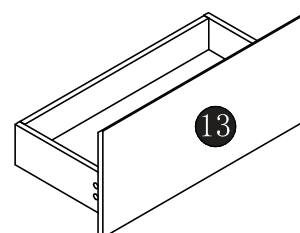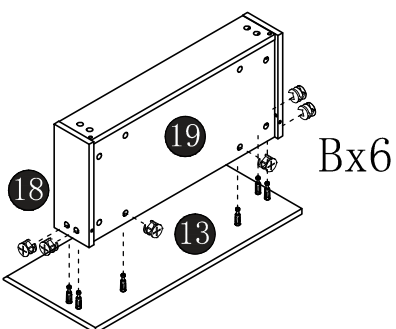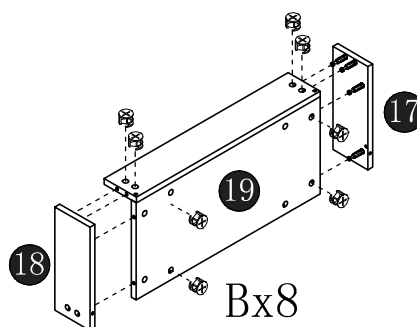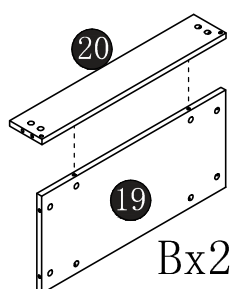

B 16PCS




$\phi 15*10\text{mm}$

ASSEMBLY INSTRUCTION


Step 18

D 8PCS

Ø3.5*14

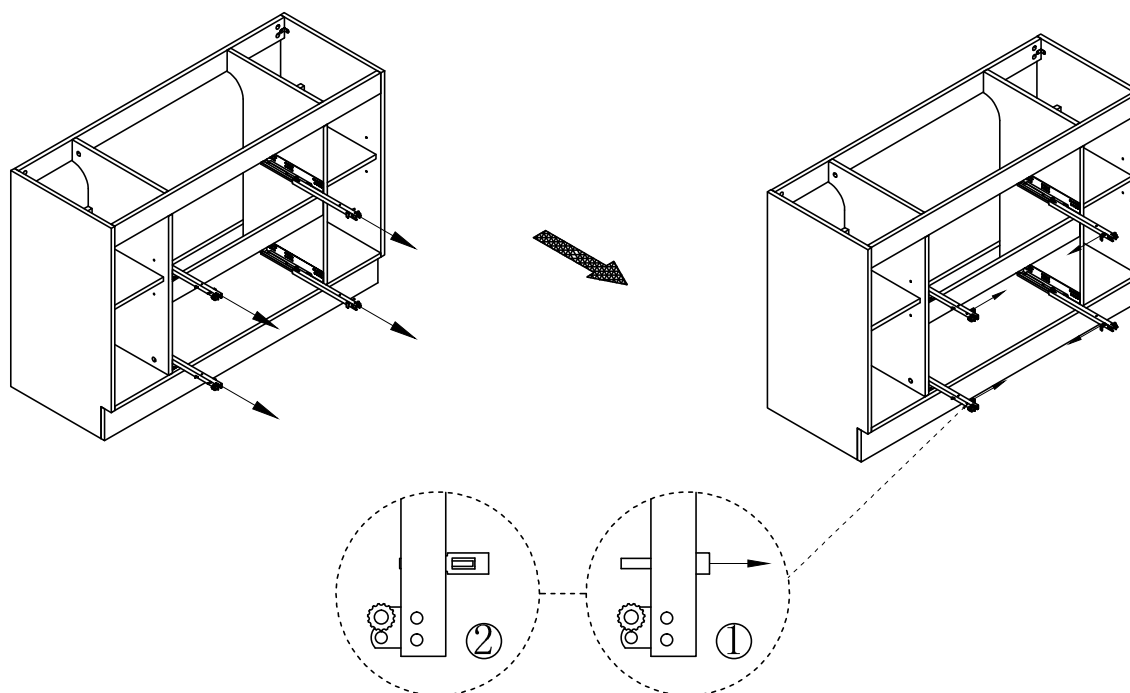

Step 19

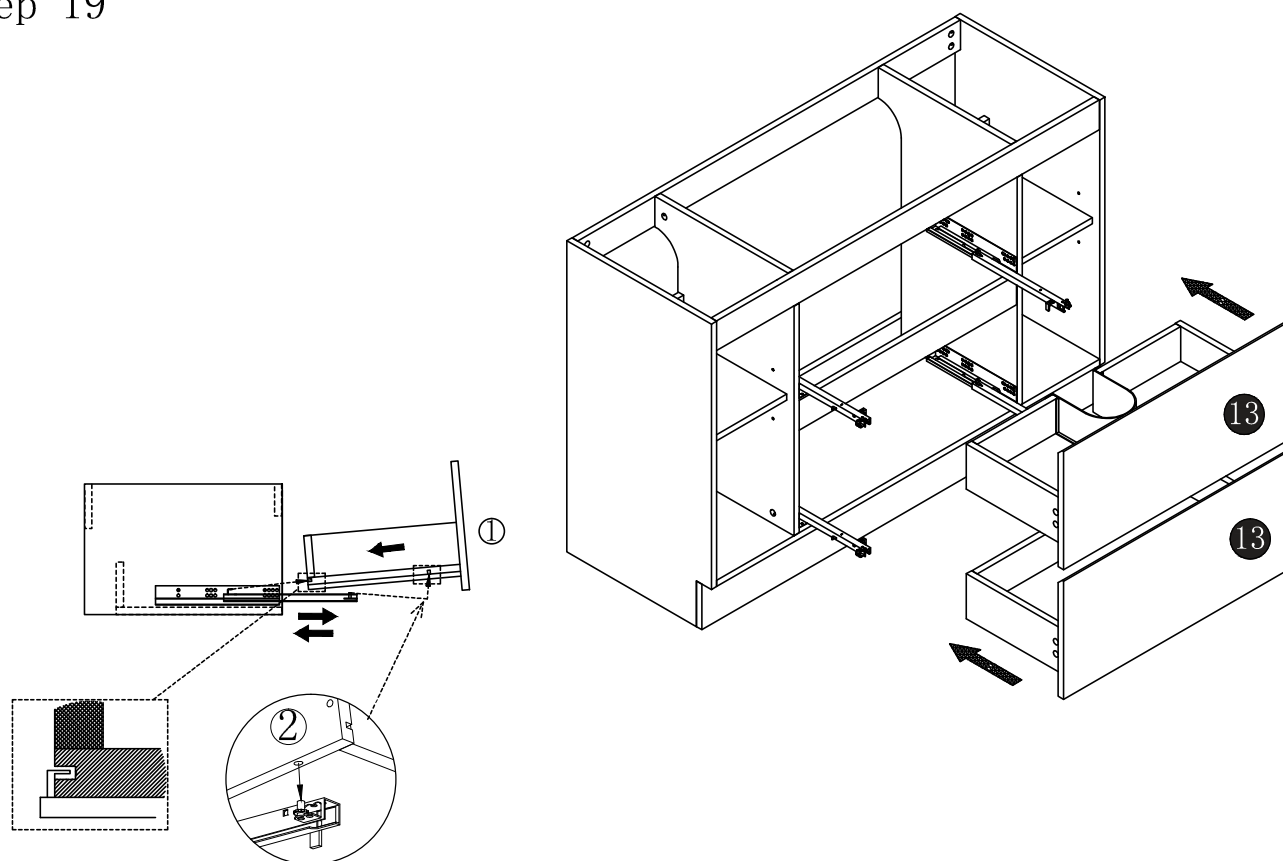


ASSEMBLY INSTRUCTION

Step 20

H 1set




J 8PCS

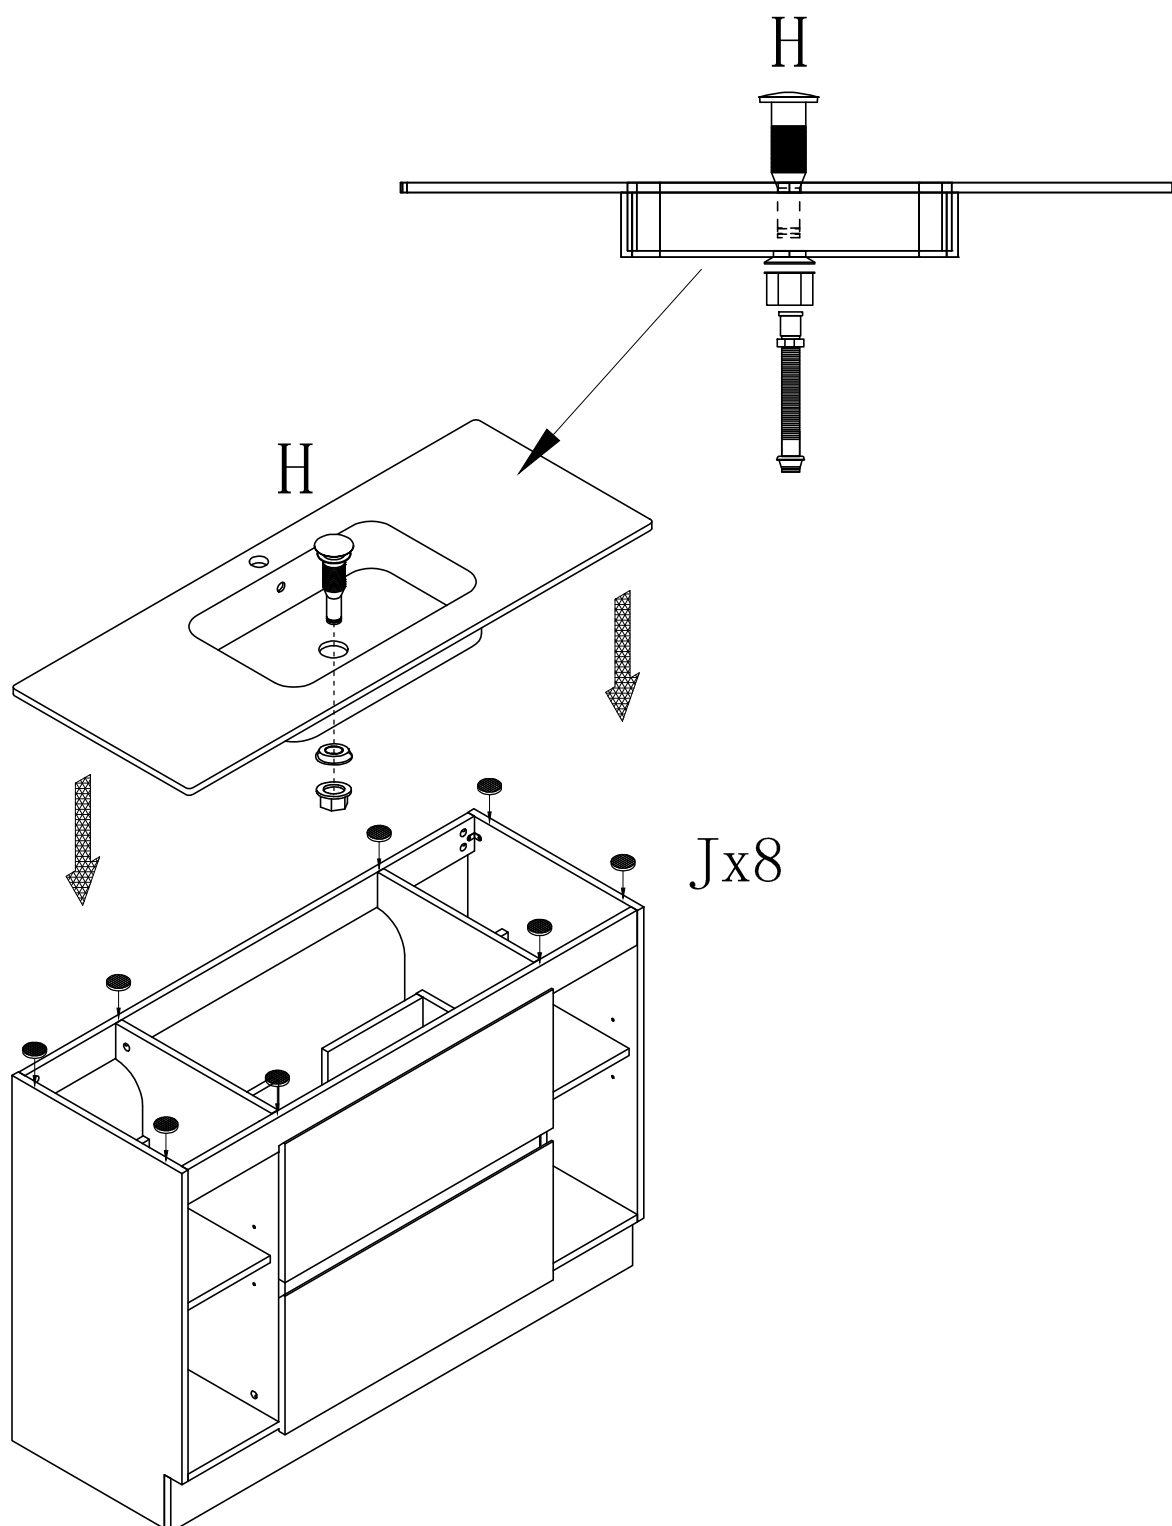

ASSEMBLY INSTRUCTION

Step 21

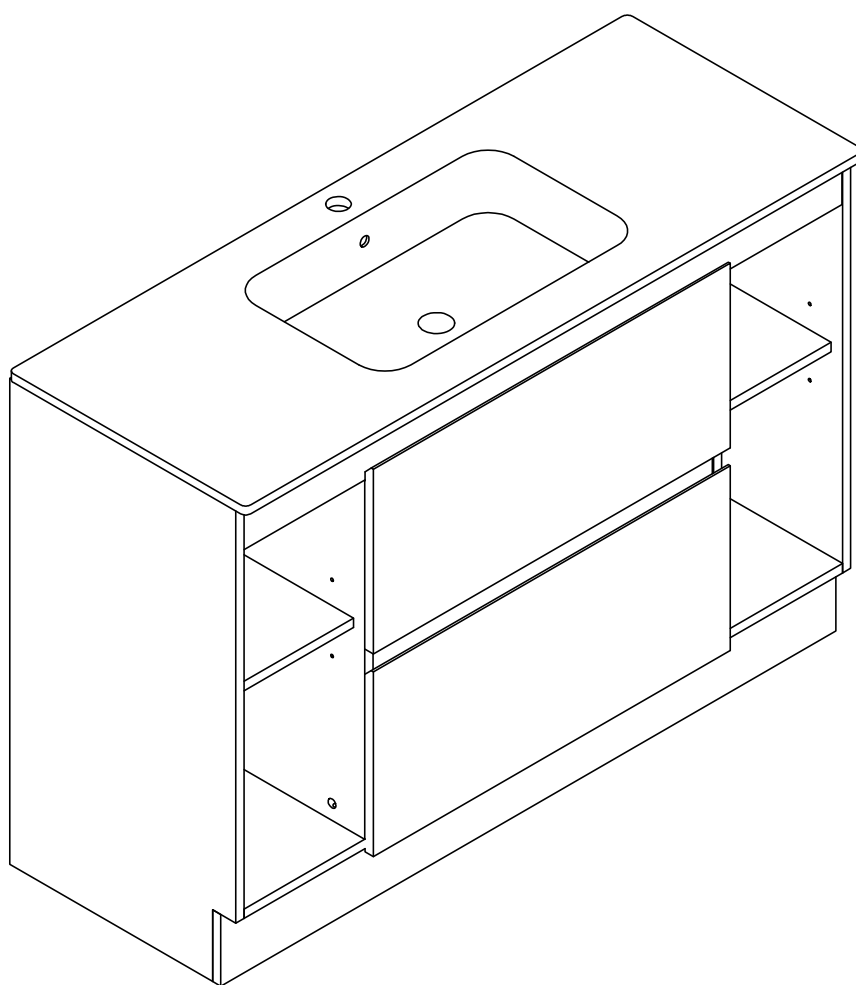

OK