

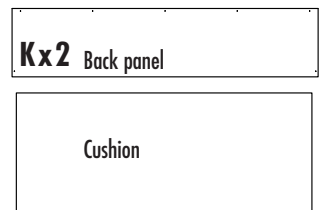
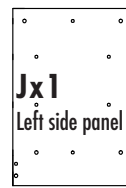
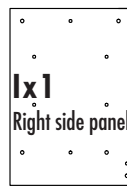
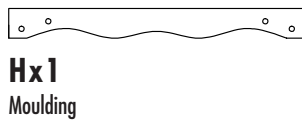
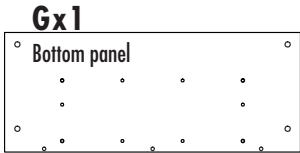
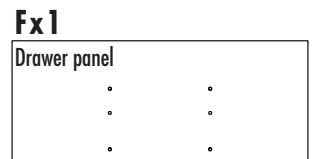


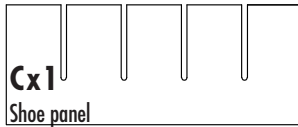


Identify parts before assembling.

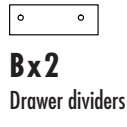

Lx20
Cam lock

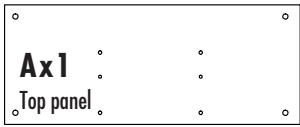

(M)x20
Cam screw



(N)x31
Wood dowel



(O)x8
Long screw



(P)x14
Short screw



Qx3
Handle washer




Rx3
Handle screw


Sx3
Handle




1 Insert hardware into assembly pieces as shown:

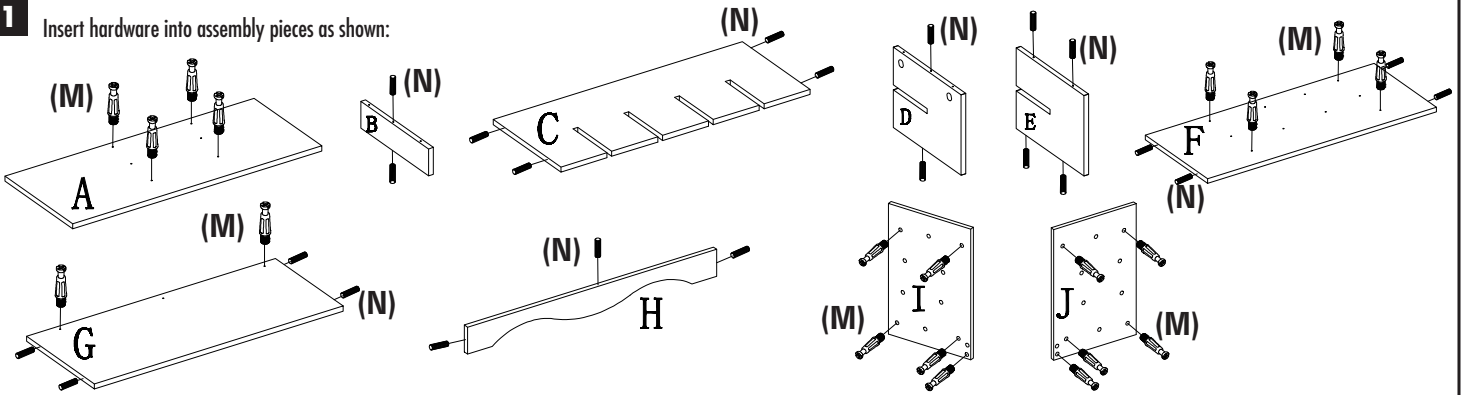


2 Insert shoe dividers (D/E) into slotted shoe panel (C) so that panels are in the following order: D, E, E, D

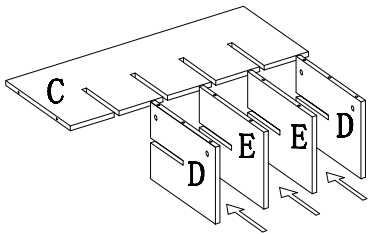


3 Attach drawer dividers (B) to the top side of drawer panel (F) using long screws (O). The top side of panel F has the wider-set holes.

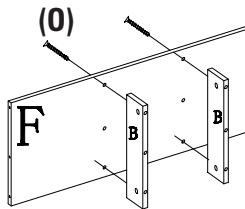


4 Insert 4 cam locks (L) into the predrilled holes (that align with cam screws in the underside of panel (F) on shoe dividers (D) and attach drawer panel (F) to shoe dividers (D/E). Turn cam locks to lock assembly.

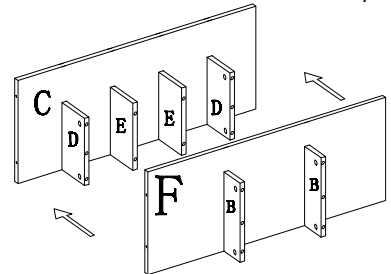


5 Insert 4 cam locks (L) into predrilled holes in (B) that align with cam screws in top panel (A). Attach top panel (A) to drawer dividers (B). Turn cam locks to lock assembly.

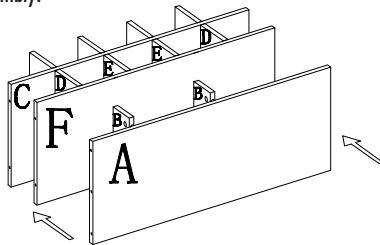


6 Attach bottom panel (G) to shoe dividers (D) and (E).

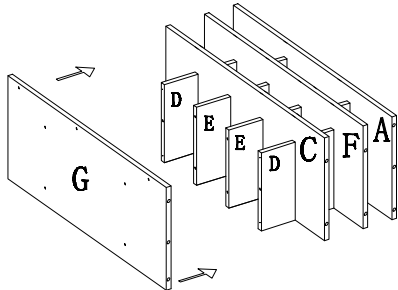


7 Screw bottom panel (G) into place using long screws (O). Insert 2 cam locks (L) into predrilled holes in moulding (H). Attach moulding to bottom panel (G). Turn cam locks to lock assembly together.

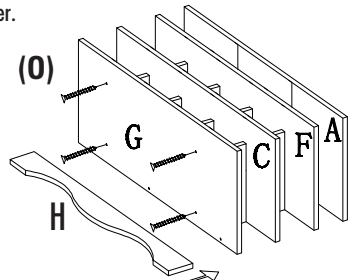


8 Insert 10 cam locks (L) into predrilled holes on the sides of assembly that line up with cam screws in side panels (I/J). Attach side panels (I/J) to assembly. Turn cam locks (L) in assembly to lock assembly together.

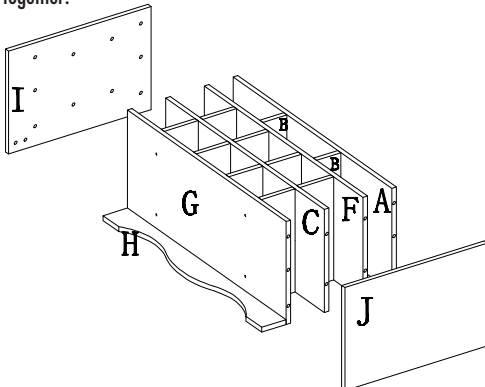

9 Attach back panels (K) using short screws (P).

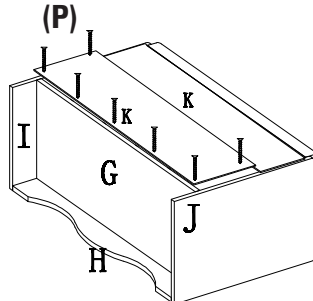

10 Remove adhesive backing from hook and loop strips on the underside of cushion. Position on the top side of top panel (A) and press into place.

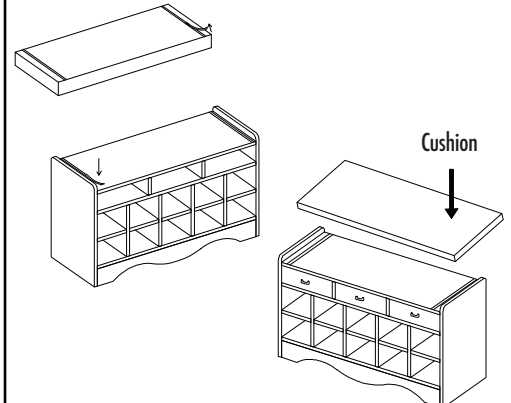

11 Unfold drawers and lay bottom panel inside as a liner / base.

Attach handles: fit handles (S) on drawer fronts and secure from inside the drawer with washer (Q) and screw (R).

Insert drawer into cubby. **FINISHED.**

