



# **DIMENSIONS**

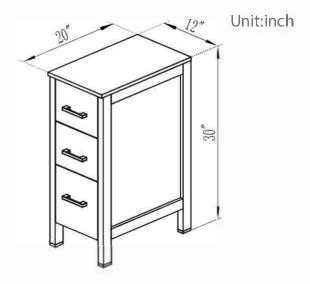

## ASSEMBLY DIAGRAM

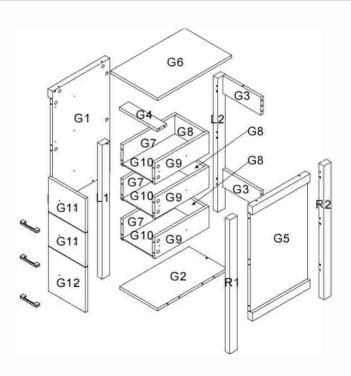


#### **PARTS LIST**

	PARTS LIST		G9 <u>2</u> 3
NO.	DESCRIPTION	QTY	G10 3
L1		1	G11 2
L2	<del></del>	1	G12 · 1
R1		1	HARDWARE LIST
R2		1	NO. DESCRIPTION QTY
G1		1	A CAM LOCK 58
G2		1	B CAM SCREW 58
G3		2	C CAM LOCK COVER 58
G4		1	D WOODENDOWEL 22
G5		1	E £3.3.3
G6		1	F SOM 36
G7		3	G HANDLE 3
G8		3	H HASCREV (M4X20mm) 6

**CAUTION:** Please confirm the parts list before installtion

YOU MAY NEED (NOT SUPPLIED)



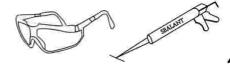





## INST.ALLAT.IONS


## STEP

• Insert the cam screw into the shelves above.




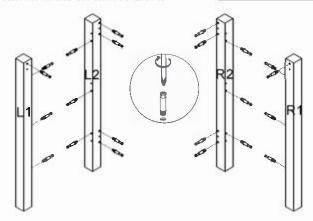

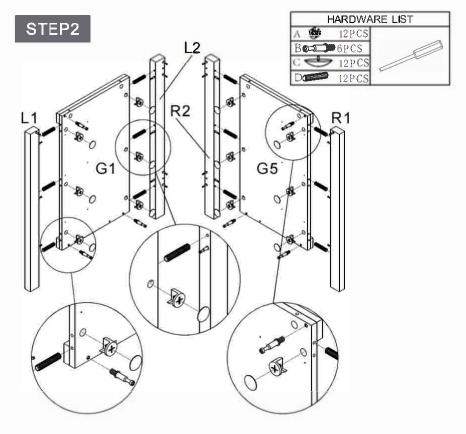


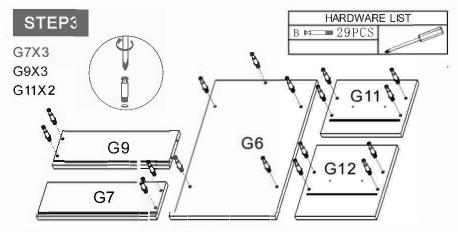


Insert the cam screw into the shelves above.

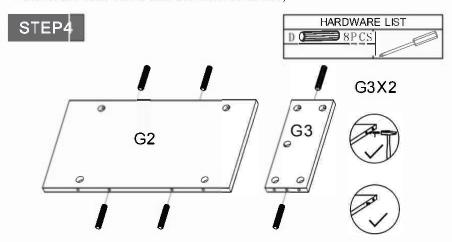


• Insert the wooden dowel pins into the shelves.

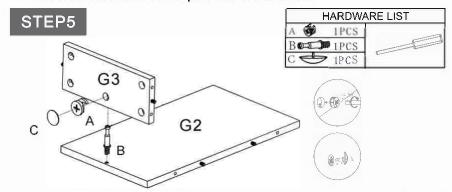


• Insert shelves G2 and G3 downwards to their corresponding positions, then tighten the cam lock with the cover.

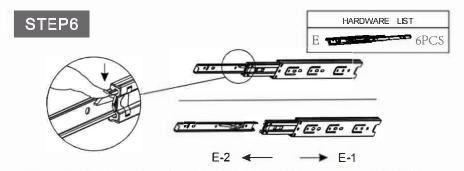


• Press the button and extend the slide slowly. Then separate it with the release latch. Repeat these steps for the other slides.

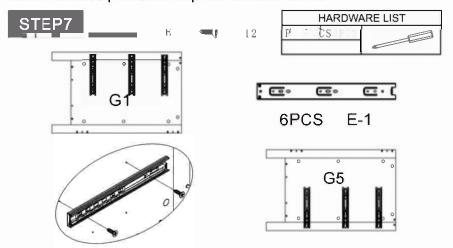


• Insert the screws to connect the slides (E-1) to the shelves.

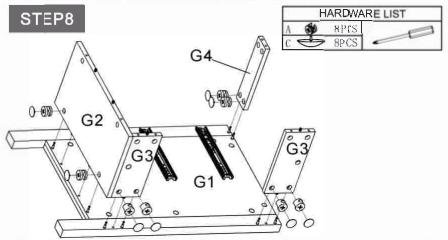


• Insert shelves G1,G2 and G3 downwards to their corresponding positions, then tighten the cam lock.

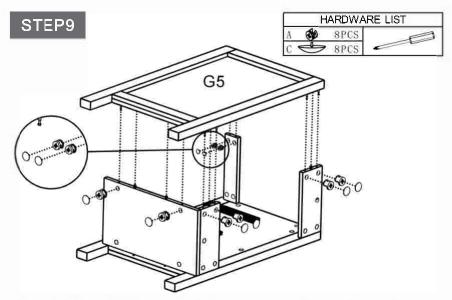


• Insert shelvesG5 downwards to their corresponding positions, then tighten the cam lock.

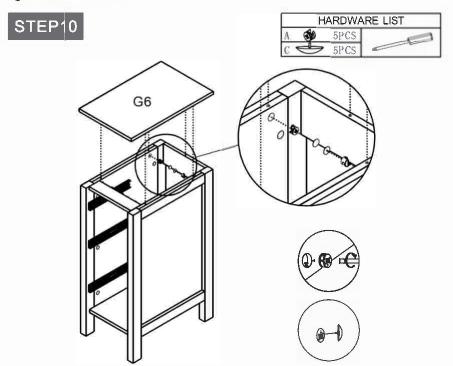


• Insert shelvesG6 downwards to their corresponding positions, then tighten the cam lock.

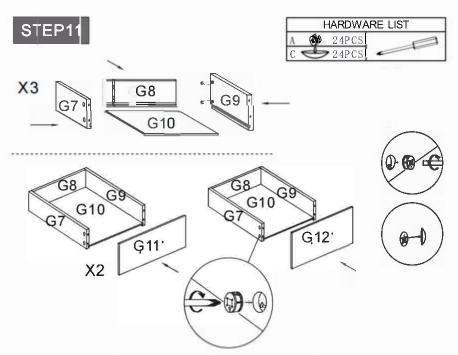

• G7,G8,G9,G10 in order,and then install shelves G11/G12.

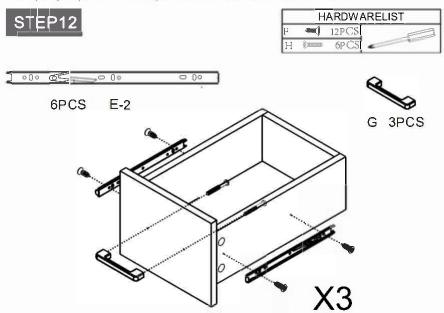

- Use H screws to fix the handle on the shelf G11/G12.repeat for the second drawer.
- Insert the screws to connect the slides (E-2) to the drawer side.

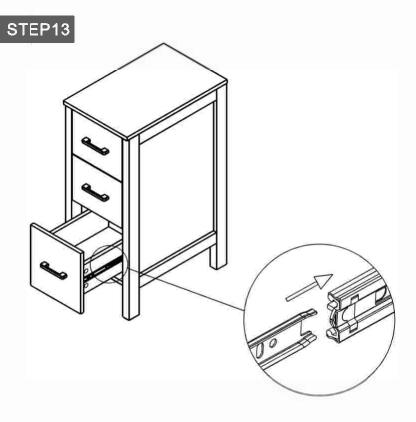

#### CARE AND CLEANING

- 1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with a clean soft cloth.
- Maintain ventilation in the bathroom and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom to maintain adequate ventilation.
- 3. This cabinet is built to withstand normal bathroom humidity. For best results, keep this vanity dry and take necessary steps to minimize bathrom humidity by opening windows and doors and using the exhaust fan (if available).
- 4. To maintain the cabinet door, clean and wipe the door regularly with a soft cloth. Wipe condensation with a dry, soft cloth. Keep away from fires and high temperatures.
- 5.Please do not sit, lean or step on the basin cabinet.



Thank you very much for purchasing from us.

We have always been trying to provide the best service and reliable products for every customer.

We sincerely hope you will be satisfied with our products and leave us FIVE STARS and POSITIVE feedback/review in our page.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.

Many thanks and welcome to our shop again!