


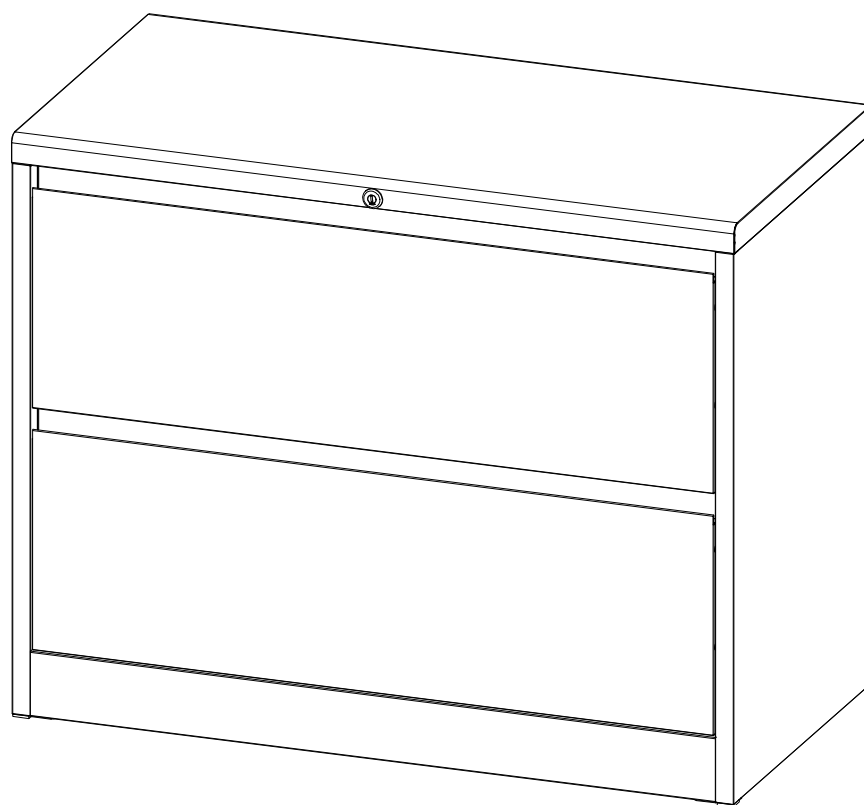
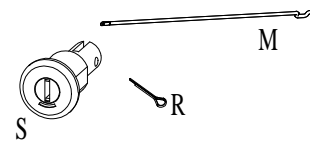


ASSEMBLY INSTRUCTION

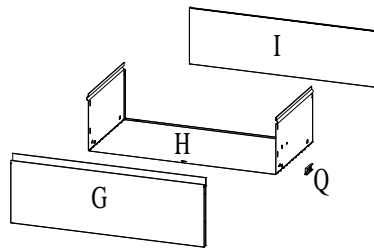

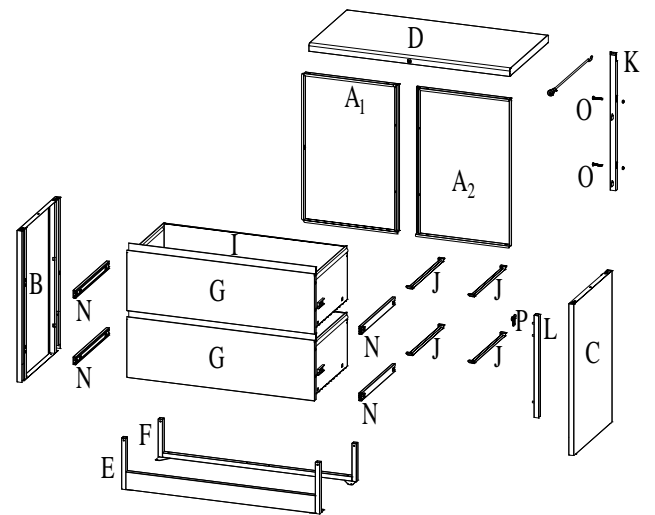


LEFT BACK PANEL

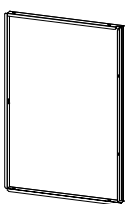

-A1
-1 pc

RIGHT BACK PANEL

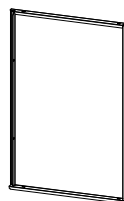


-A2
-1 pc

LEFT SIDE PANEL




-B
-1 pc

RIGHT SIDE PANEL




-C
-1 pc

TOP PANEL



-D
-1 pc

FRONT FOOT




-E
-1 pc

BACK FOOT


















-F
-1 pc


DRAWER FRONT PANEL

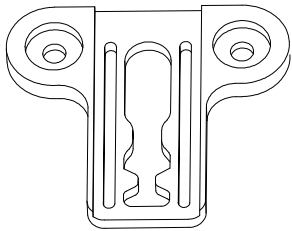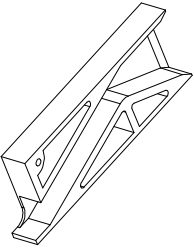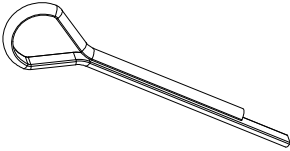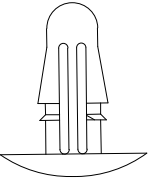

-G
-2 pcs

<p>DRAWER PANEL</p>  <p>-H -2 pcs</p>	<p>DRAWER BACK PANEL</p>  <p>-I -2 pcs</p>	<p>HANGING FILE FOLDER BAR</p>  <p>-J -4 pcs</p>	<p>LINK ROD</p>  <p>-K -1 pc</p>
<p>ANTI-TIPPING LOCK ROD</p>  <p>-L -1 pc</p>	<p>LOCK BAR</p>  <p>-M -1 pc</p>	<p>LEFT AND RIGHT SLIDING RAIL</p>  <p>-N -4 pcs</p>	<p>SCREW</p>  <p>-O -2 pcs -M6X40</p>
<p>ANTI-TIPPING ACCESSORY</p>  <p>-P -1 pc</p>	<p>DRAWER ACCESSORY</p>  <p>-Q -2 pcs</p>	<p>LOCK ACCESSORY</p>  <p>-R -1 pc</p>	<p>LOCK SET</p>  <p>-S -1 pc</p>
<p>PLASTIC BUTTON</p>  <p>-T -2 pcs</p>	<p>SCREW</p>  <p>-U -14 pcs -M4X8</p>	<p>SCREW</p>  <p>-V -2 pcs -M3X8</p>	

Step 1 Put front foot(E) and back foot(F) into left side panel(B) and right side panel(C), then using 4 pcs screws (U) to fixed.

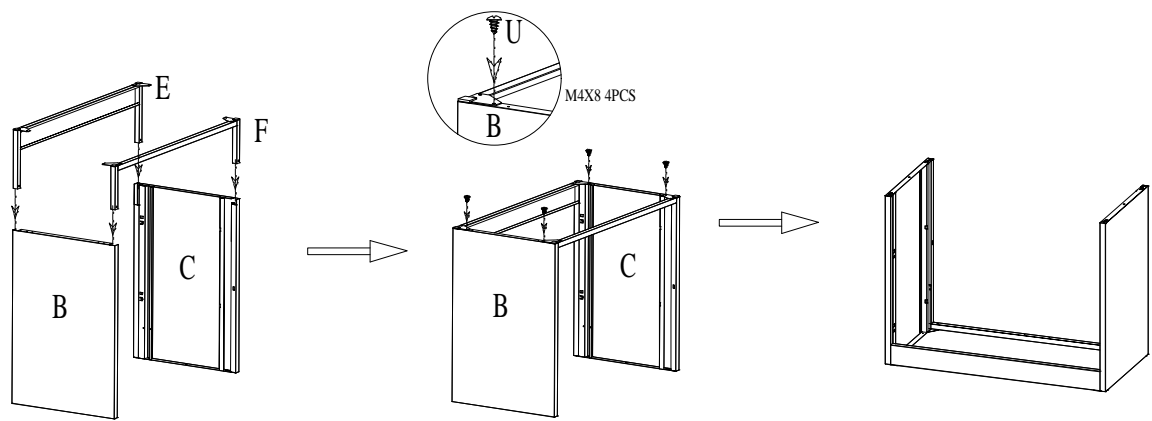


Need



Part B 1PC
Part C 1PC
Part E 1PC
Part F 1PC
Part U 4PCS

Step 2 Connect back panel(A1) with left panel (B), using plastic button (T) and screw (U) to fixed, then using screwdriver to push “H” hole. Connect(A2) with (C) as same way.

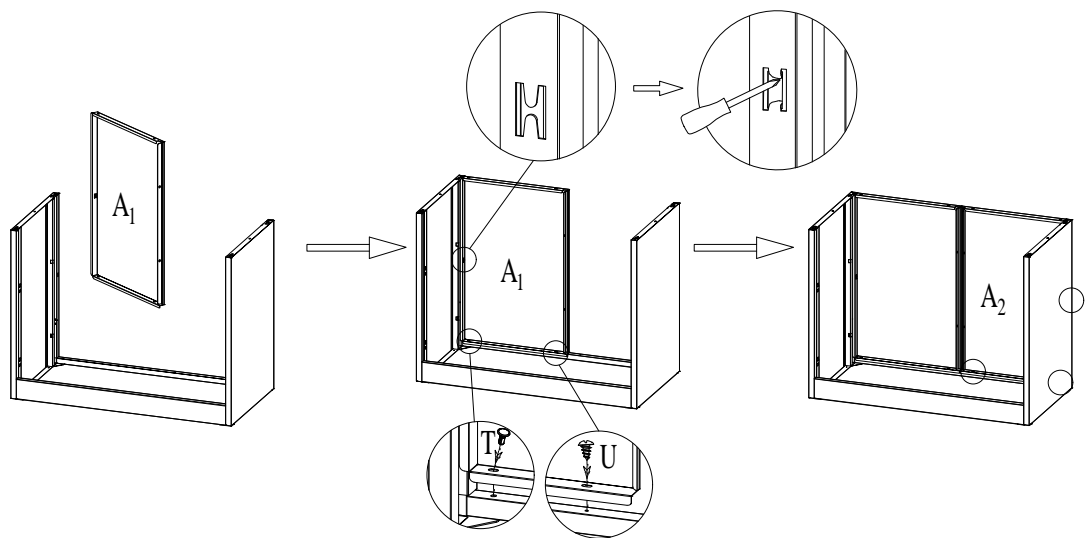


Need



Part A1 1PC
Part A2 1PC
Part T 2PCS
Part U 2PCS

Step 3 Assembly top panel (D) using 6 pcs screws (U).

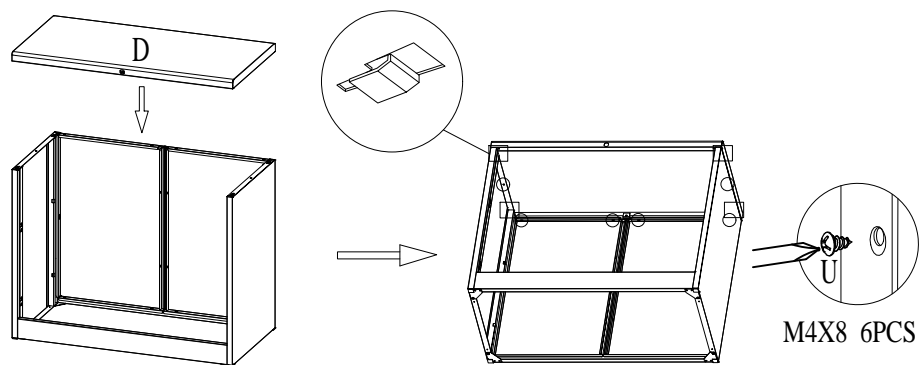


Need



Part D 1PC
Part U 6PCS

Step 4

Using link rod (K) to link back panel, and using 2pcs screws(O) to fixed.
Note: Pay attention to the top side of link rod (K).

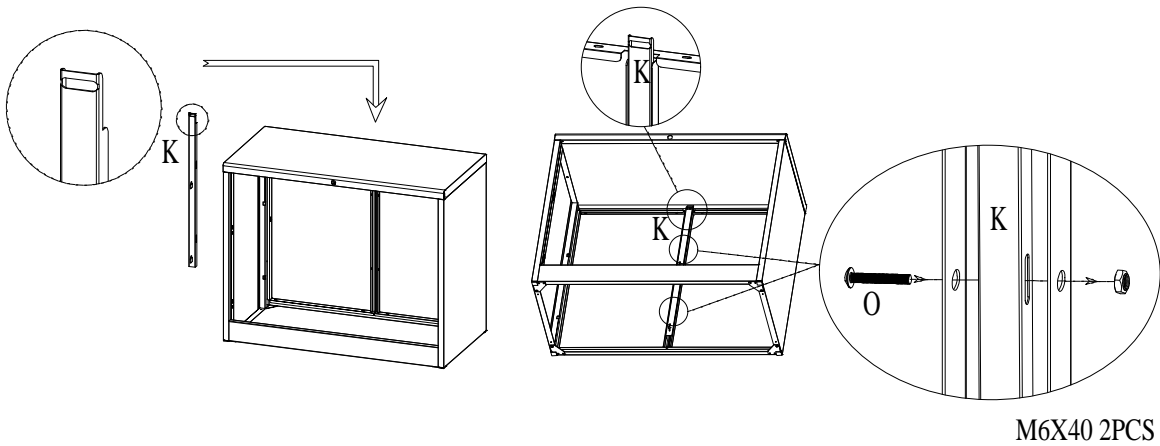


Need



Part K 1PC
Part O 2PCS

Step 5

1. Install lock (S)
 2. Install lock bar(M) into the hole of part (K) and the hole under top panel.
 3. Using part (R)to link lock and lock bar.
- Note: Pay attention to the detail pictures.

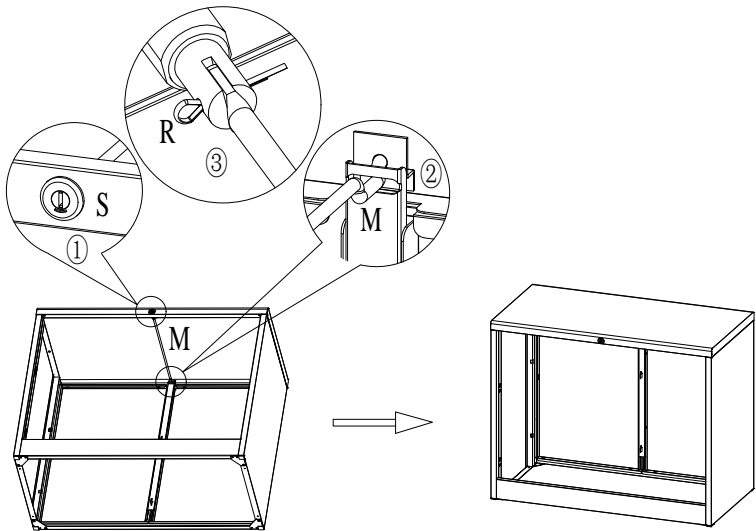


Need



Part S 1PC
Part M 1PC
Part R 1PC

Step 6

Install anti- tipping lock rod (L) on the right side panel (C), then using 2 pcs screws (U) to fix part P.

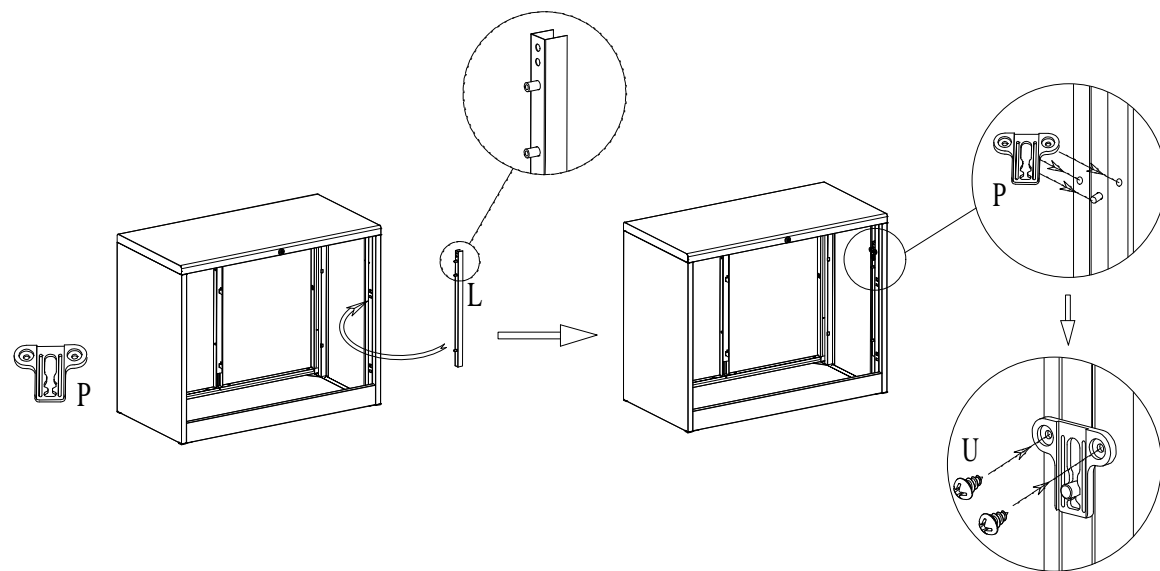


Need



Part L 1PC
Part P 1PC
Part U 2PCS

Step 7

Disassemble the rail (N).
1.Find the left rail, with “L” mark .
2. As the picture show to find the black plastic, then put down, the rail is take down.

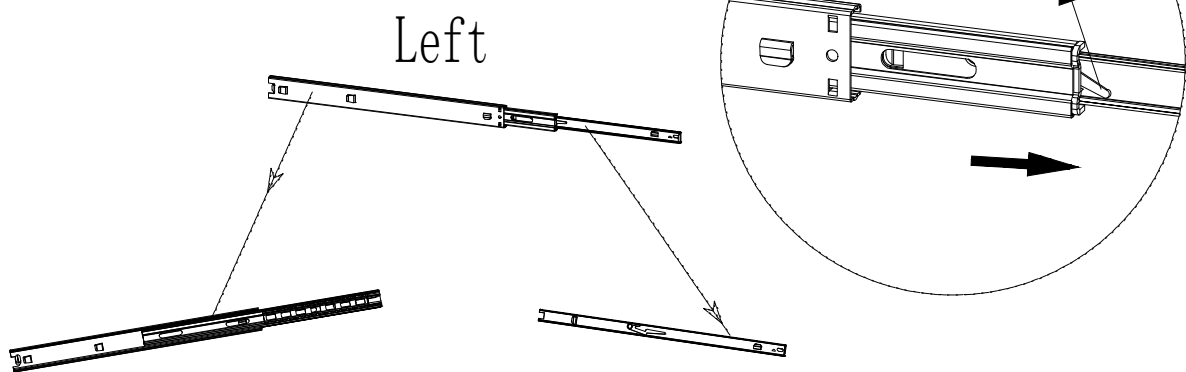


Need



Part N 2PCS

1.Find the right rail, with “R” mark .
2. As the picture show to find the black plastic, then put up, the rail is take down.

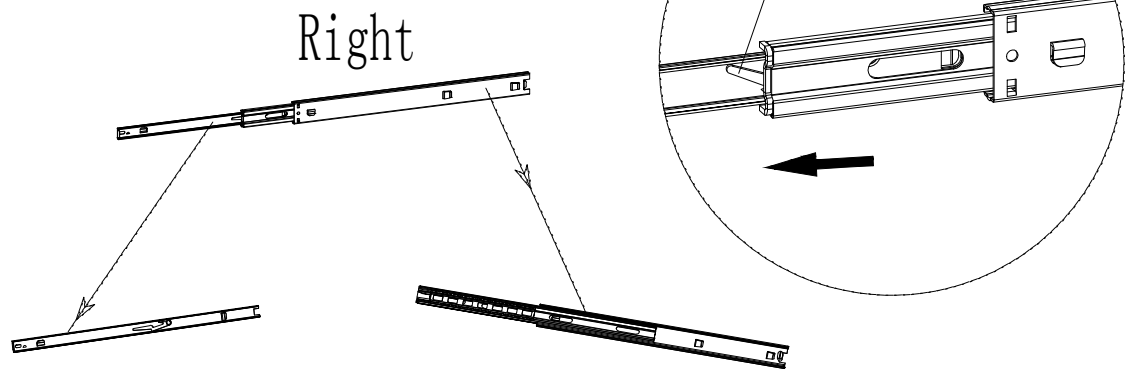


Need



Part N 2PCS

Step 8

Put the outer left side rail on the left side panel (B), outer right side rail on the right side panel (C).

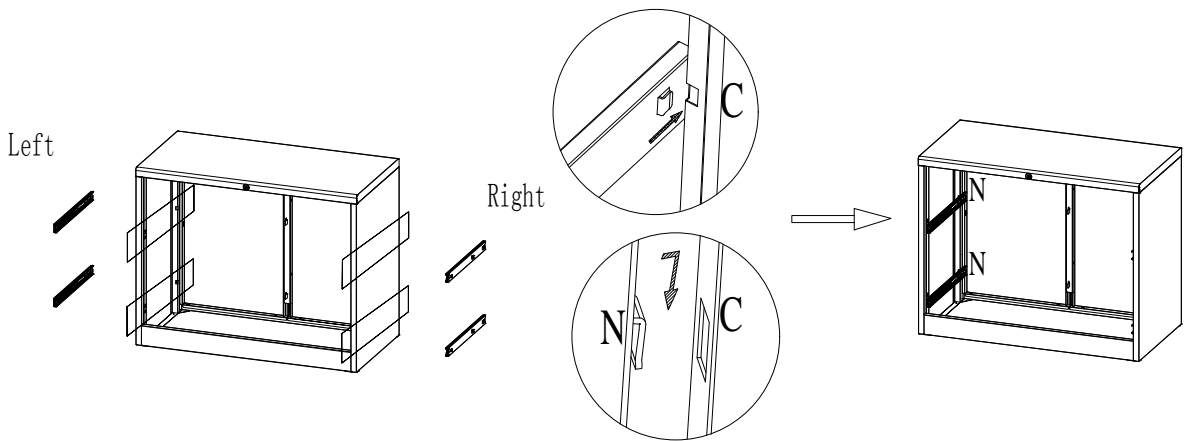


Need



Part N 4PCS

Step 9 Install the drawers.

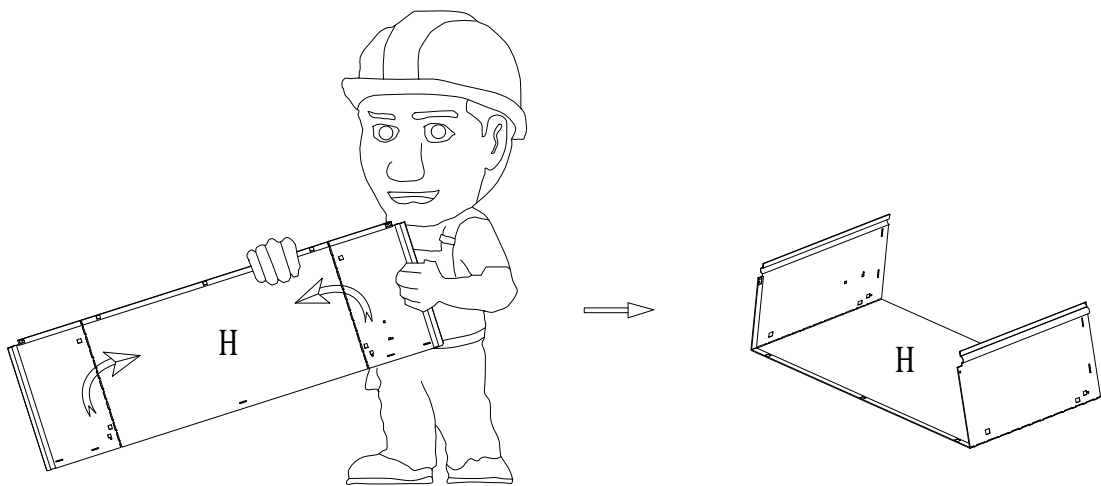


Need



Part H 2PCS

Step 10 Connect drawer panel (H) with drawer front panel (G).

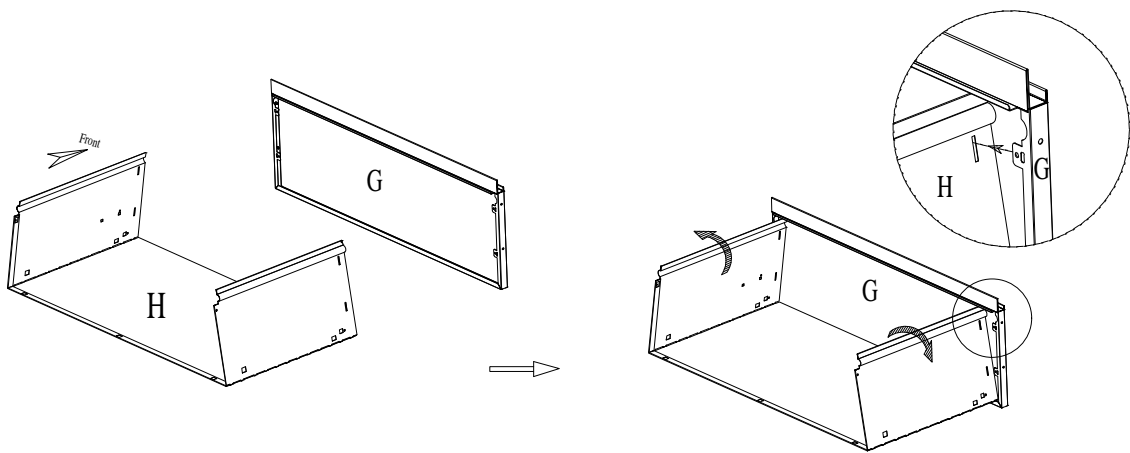


Need



Part G 2PCS

Step 11 Fixed the drawer. Put drawer back panel (I) into the drawer and push it into the fixing hole.

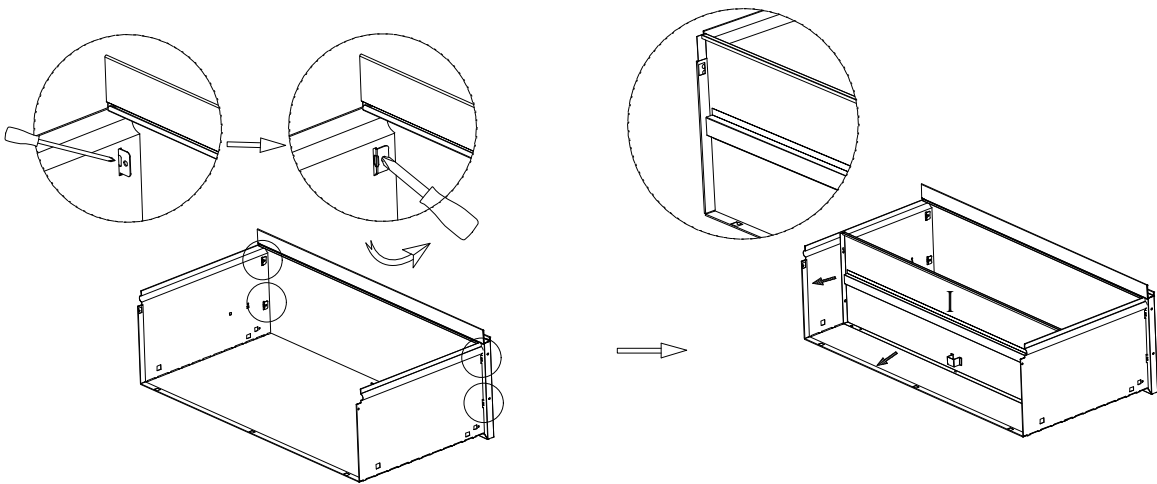


Need



Part I 2PCS

Step 12 Put inner rail on the both side of drawer.
Note: Pay attention to the left and right.

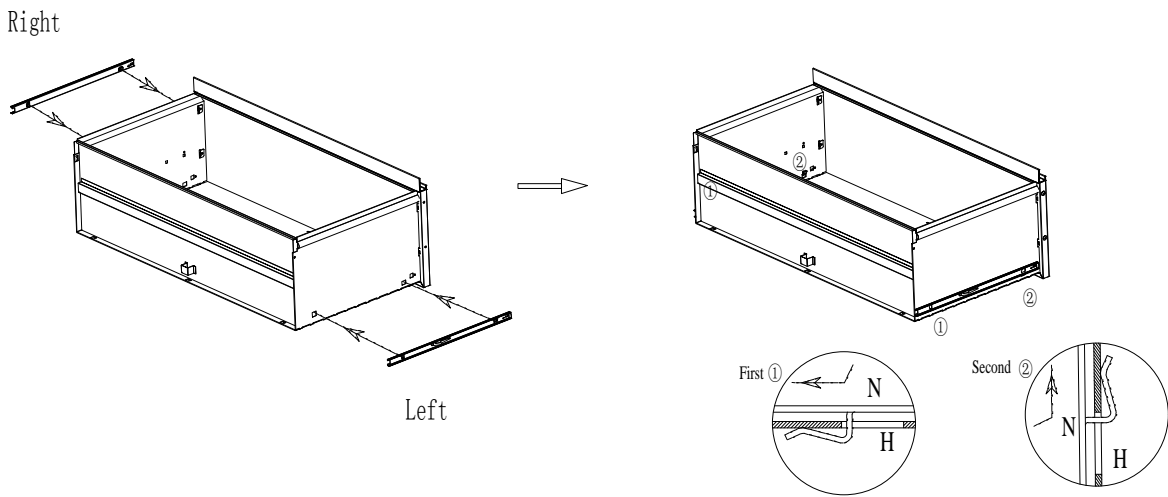


Need



Part N 4PCS

Step 13 Put part (Q)on the right side of drawer, using screw (V) to fixed.

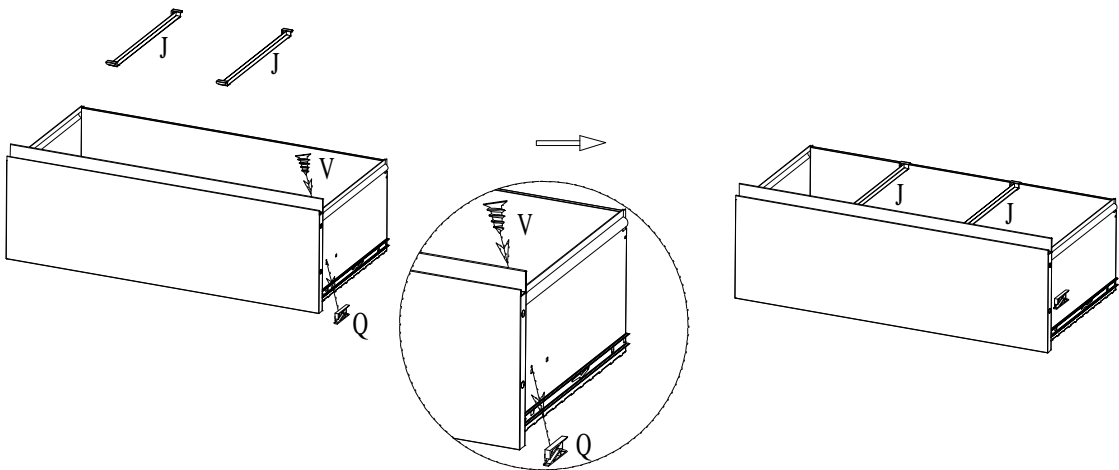


Need



Part J 4PCS
Part V 2PCS
Part Q 2PCS

Step 14 Slide the drawers into the body frame.
1. Pulls slide rail out of cabinet.
2. Put inner rail into outer rail, then push and pull test.

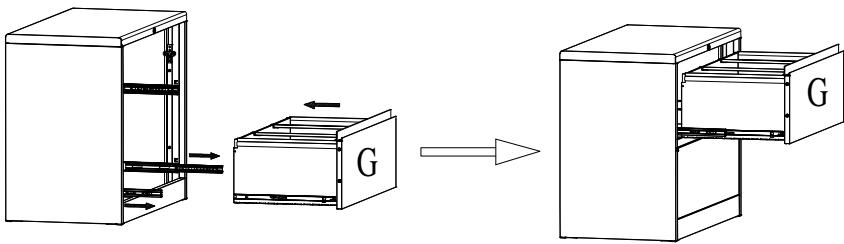

Need

