




Assembly Instruction

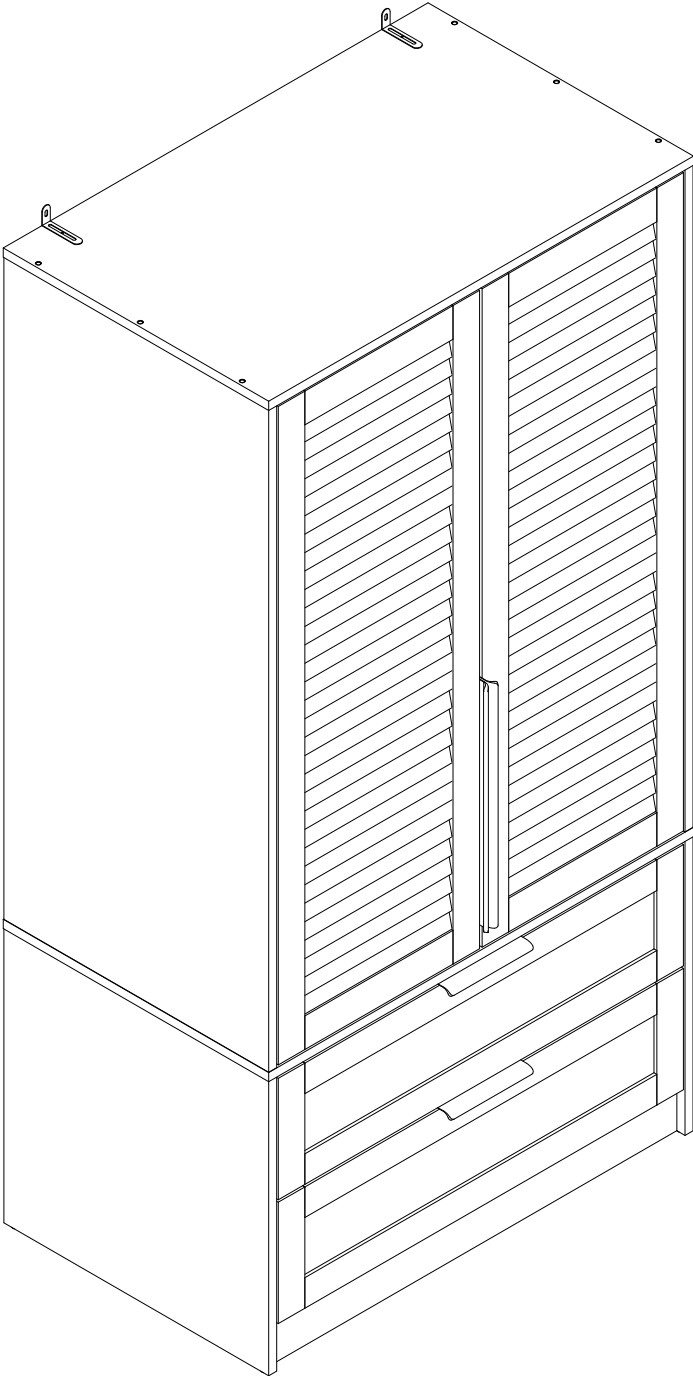


HINGE INSTRUCTIONS

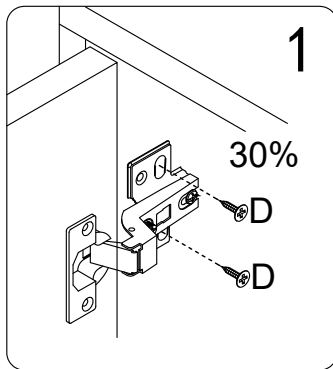


Tighten the screws only 30% as long as the door can be secured.

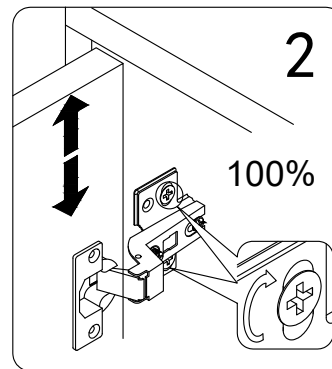


Move the door up and down until it is centred, then tighten the screw 100%.

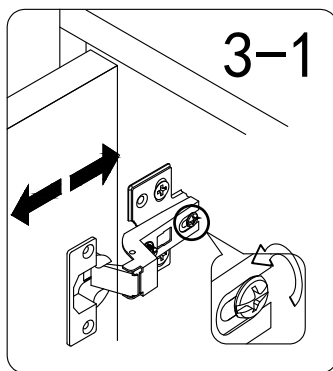


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's aligned to side board.

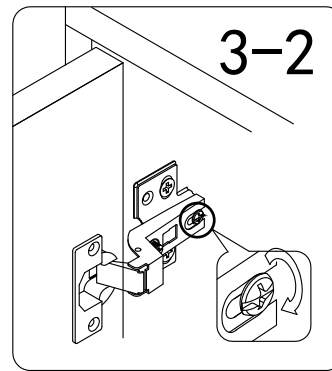


Tighten the screw **clockwise** once the door is **aligned**.

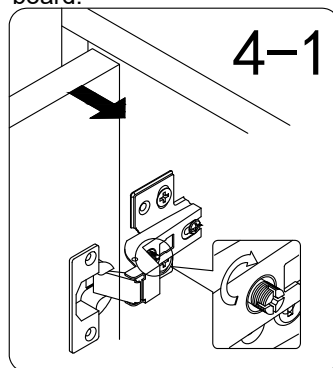

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

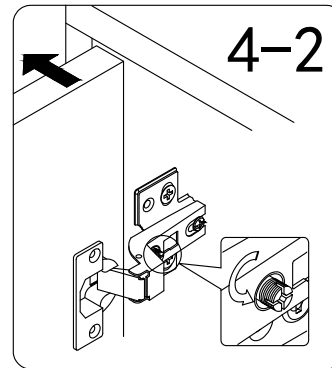

To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.


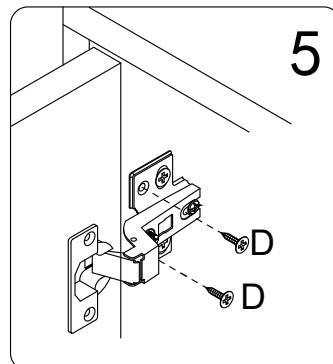





















After adjusting the doors properly above, finally tighten these two screws and secured the door.

A	X38	B	X38	C	X2	D	X48	E	X1	F	X12	G	X13	H	X2
															
M6x35mm		Ø15x9mm				M3.5x14mm		4mm		M5x40mm		Ø8x30mm			
I	X2	J	X8	K	X12	M	X2	N	X2	O	X6	P	X2	Q	X1
															
				M4x35mm				Ø6x30mm				M4x12			
S	X2	T	X18	U	X16	V	X2	W	X20	L	X2	R	X2		
															
M3x12mm		M3x16mm						M3.5x12mm							


Cam Lock Fastening System

Insert the cam bolt into the hole first,then insert the cam lock and lock it.

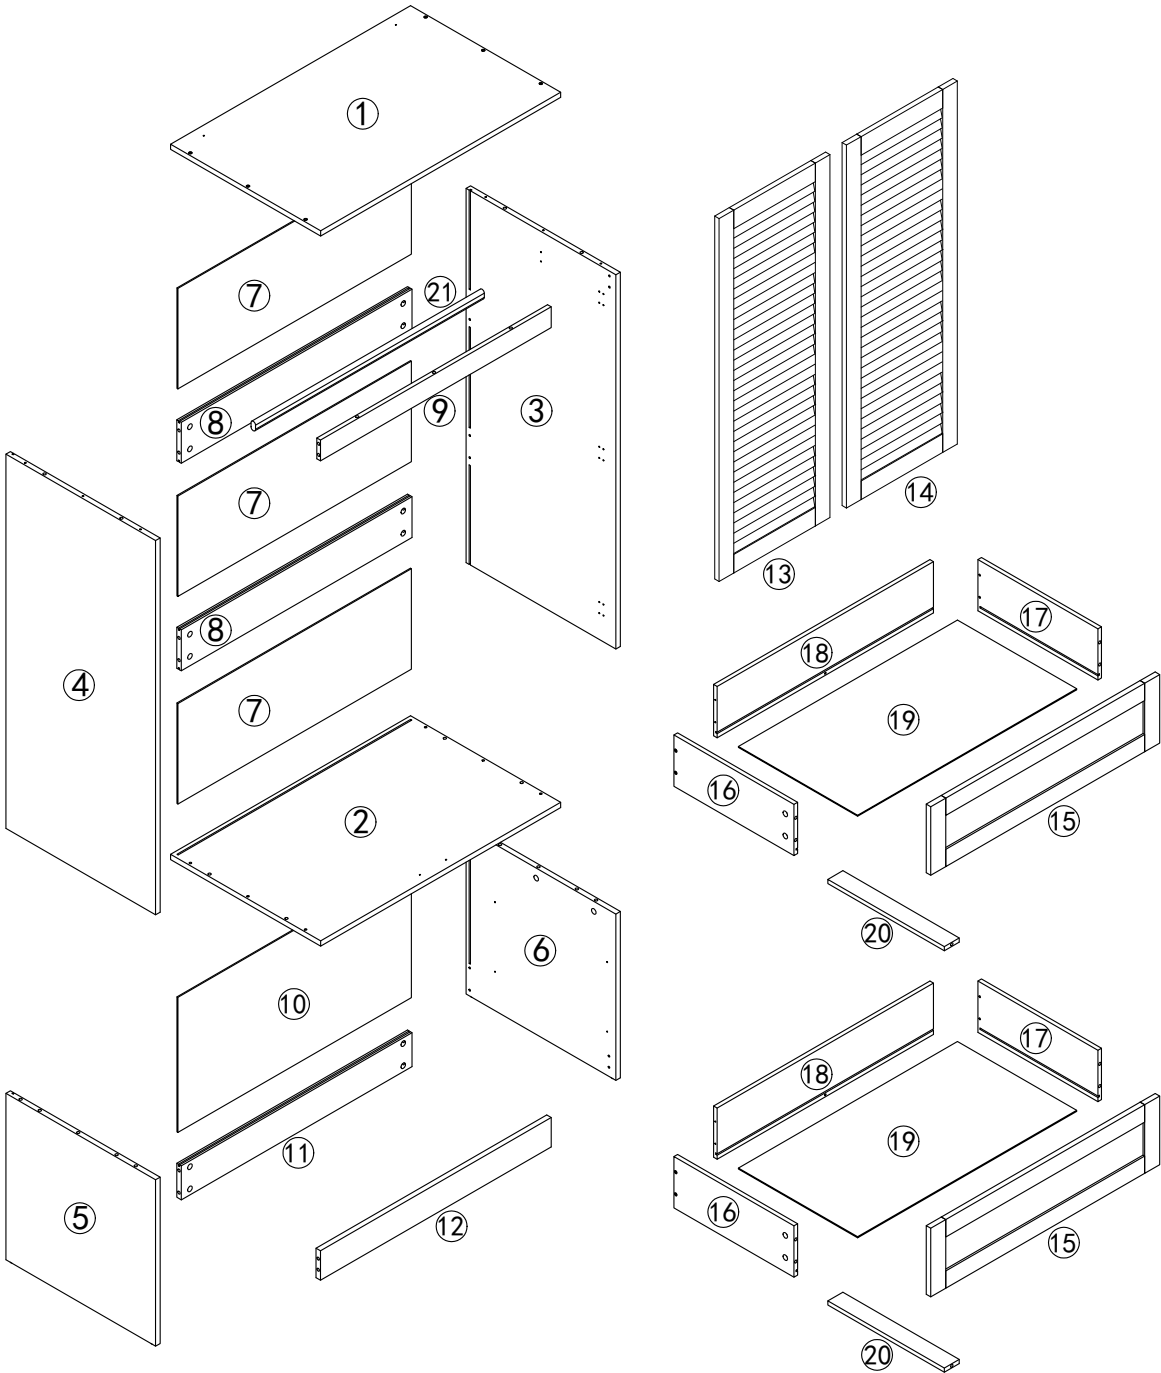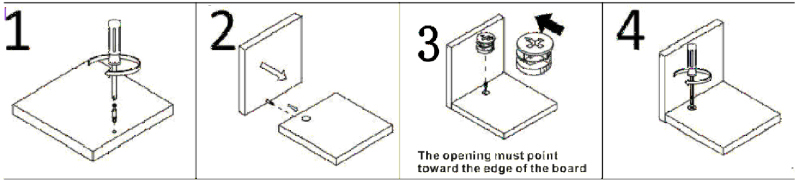


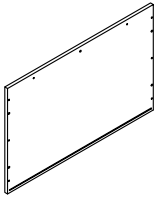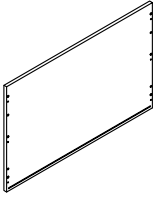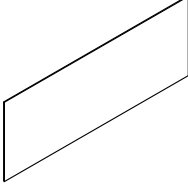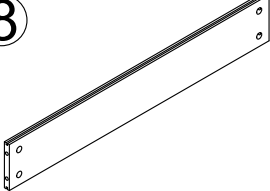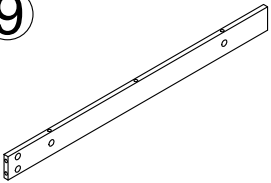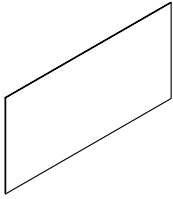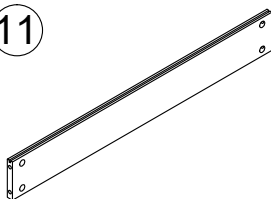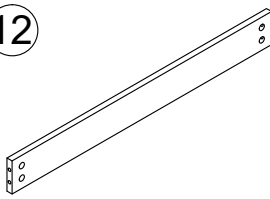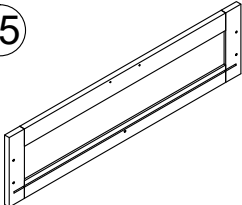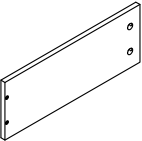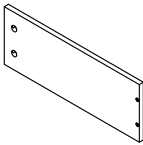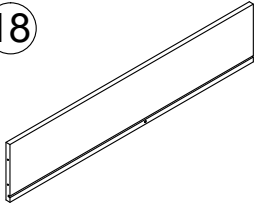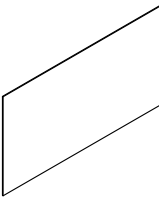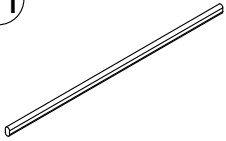① 	② 	③ 	④ 
1PC	1PC	1PC	1PC
⑤ 	⑥ 	⑦ 	⑧ 
1PC	1PC	3PCS	2PCS
⑨ 	⑩ 	⑪ 	⑫ 
1PC	1PC	1PC	1PC
⑬ 	⑭ 	⑮ 	⑯ 
1PC	1PC	2PCS	2PCS
⑰ 	⑱ 	⑲ 	⑳ 
2PCS	2PCS	2PCS	2PCS
㉑ 			
1PC			


1

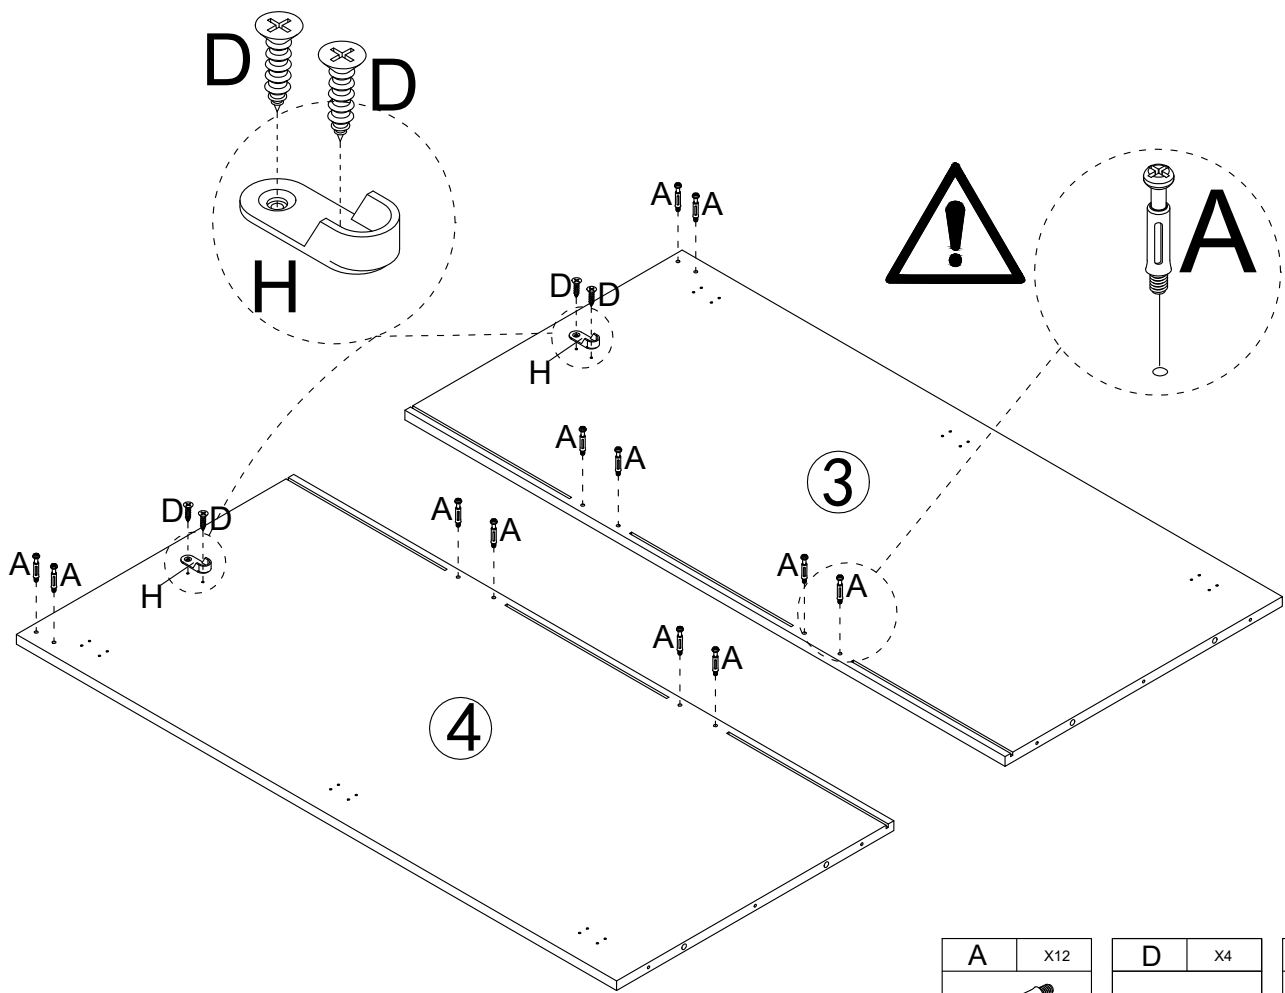



2

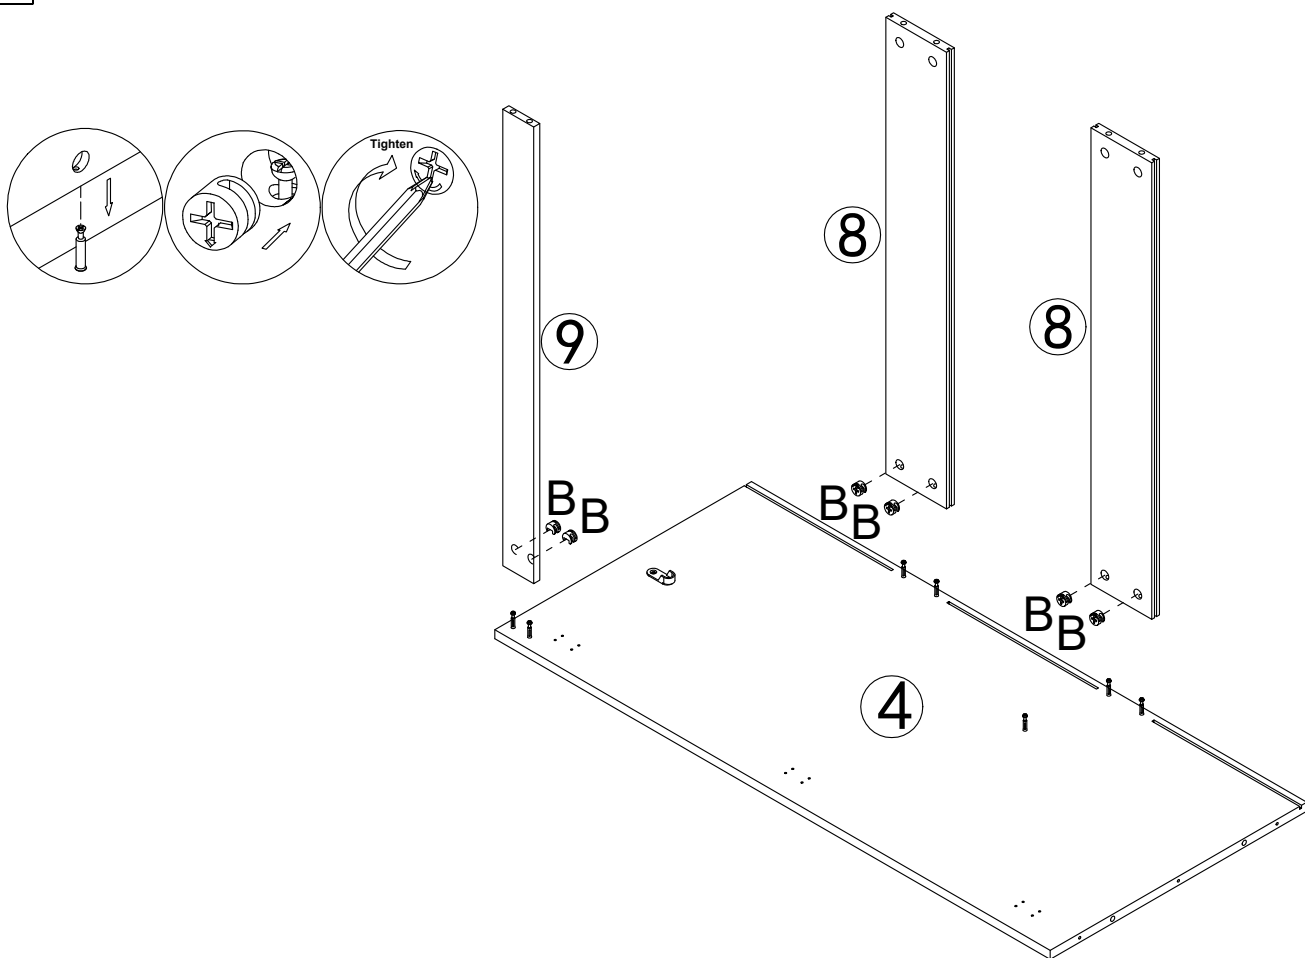

3

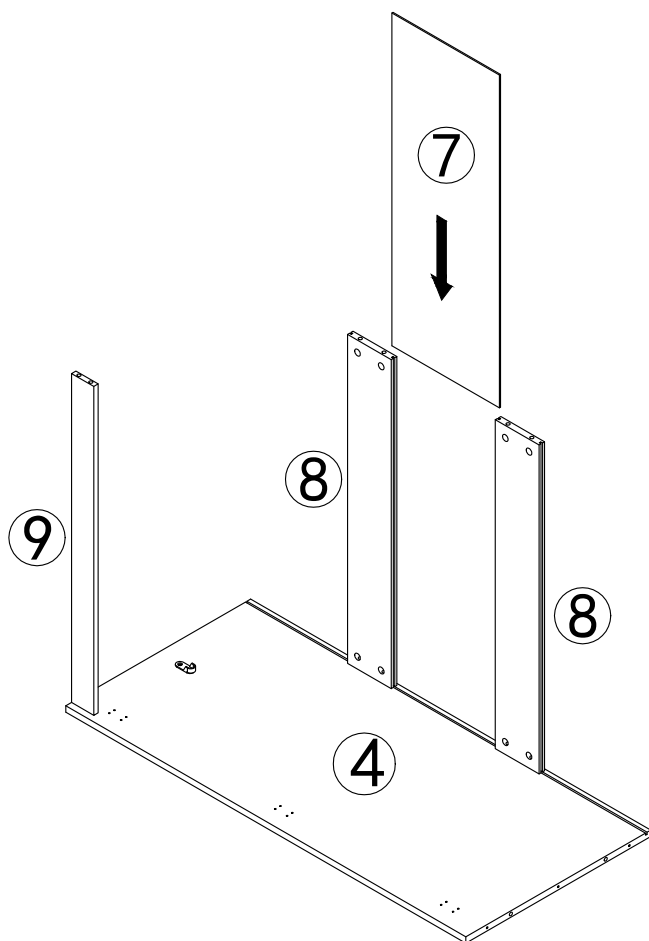


4

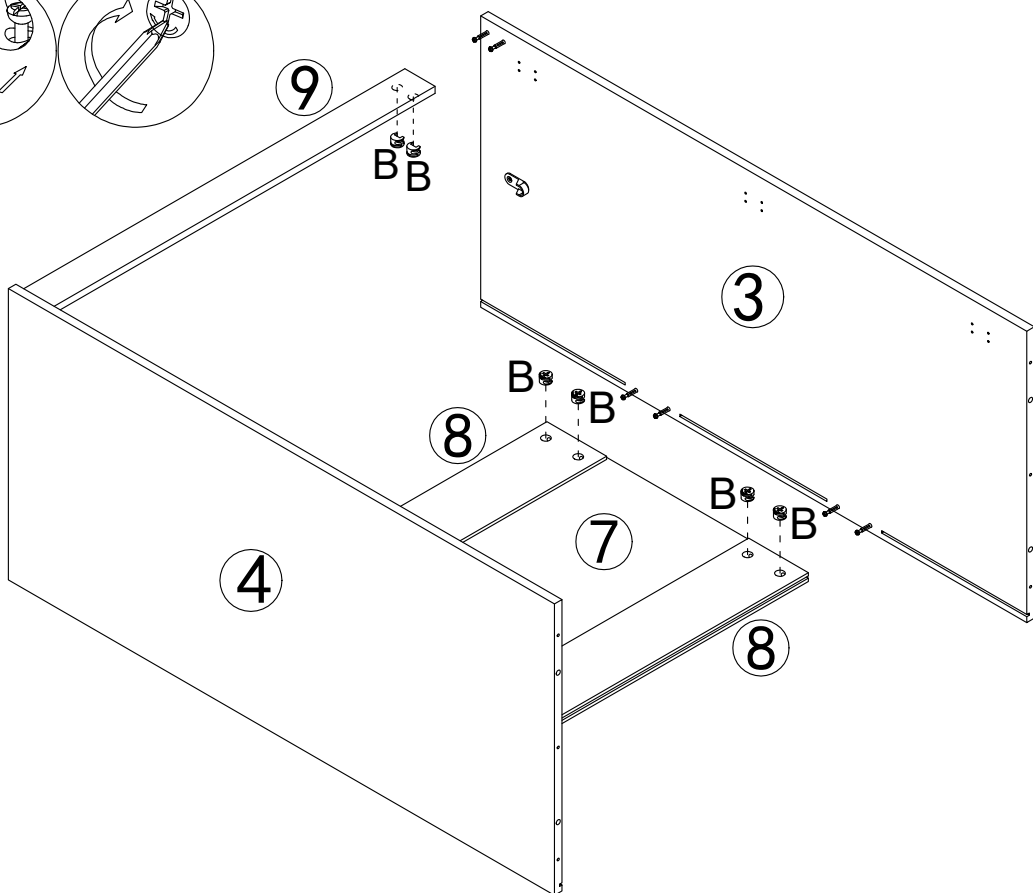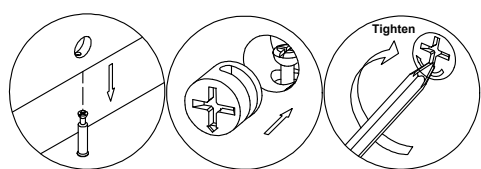


B	X6
	
Ø15x9mm	

5

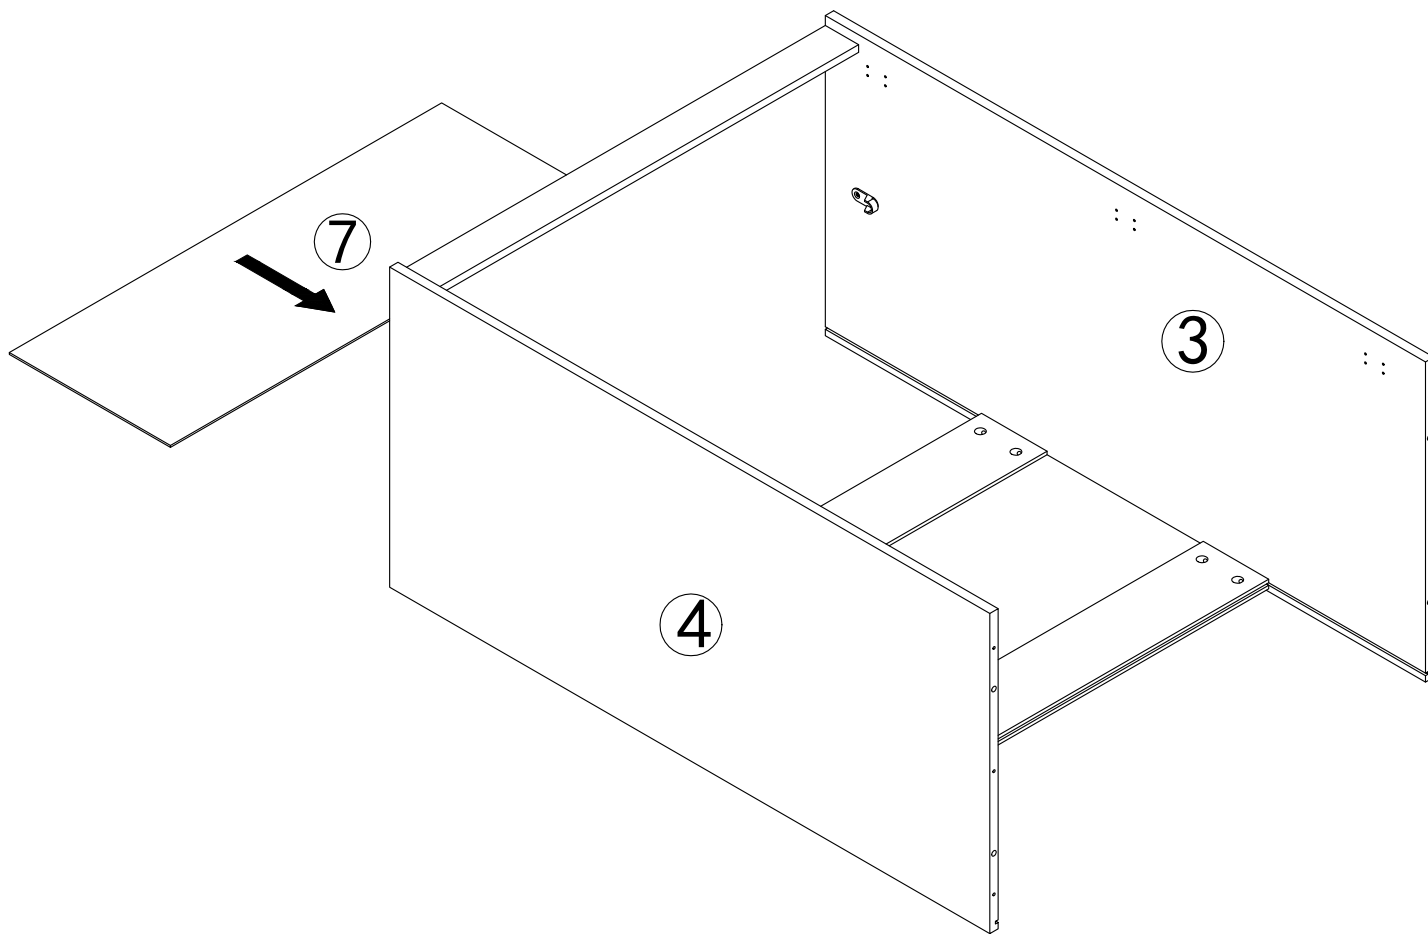


6

Flip the board over to the other side to screw A.

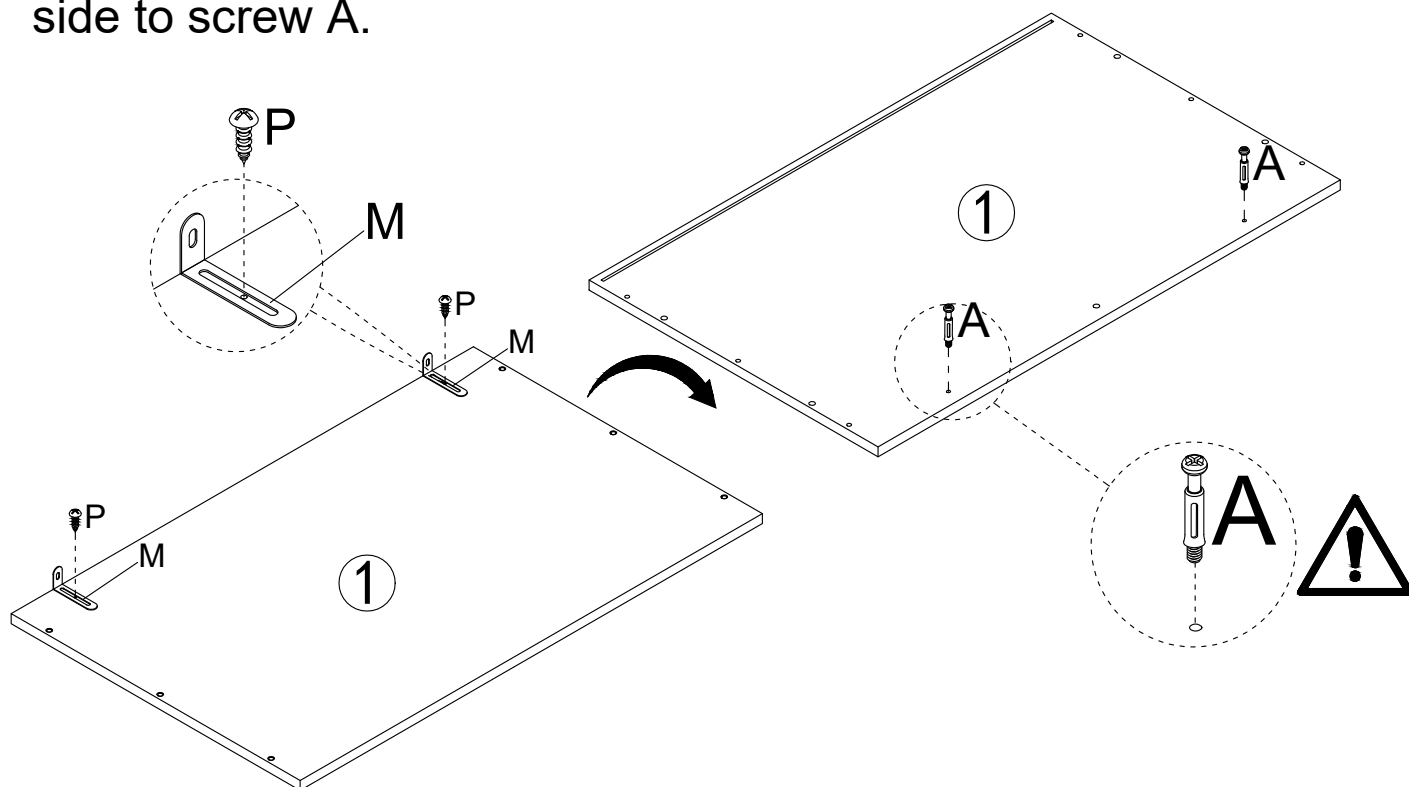

A	X2	M	X2	P	X2
					
M6x35mm				M4x12mm	


7

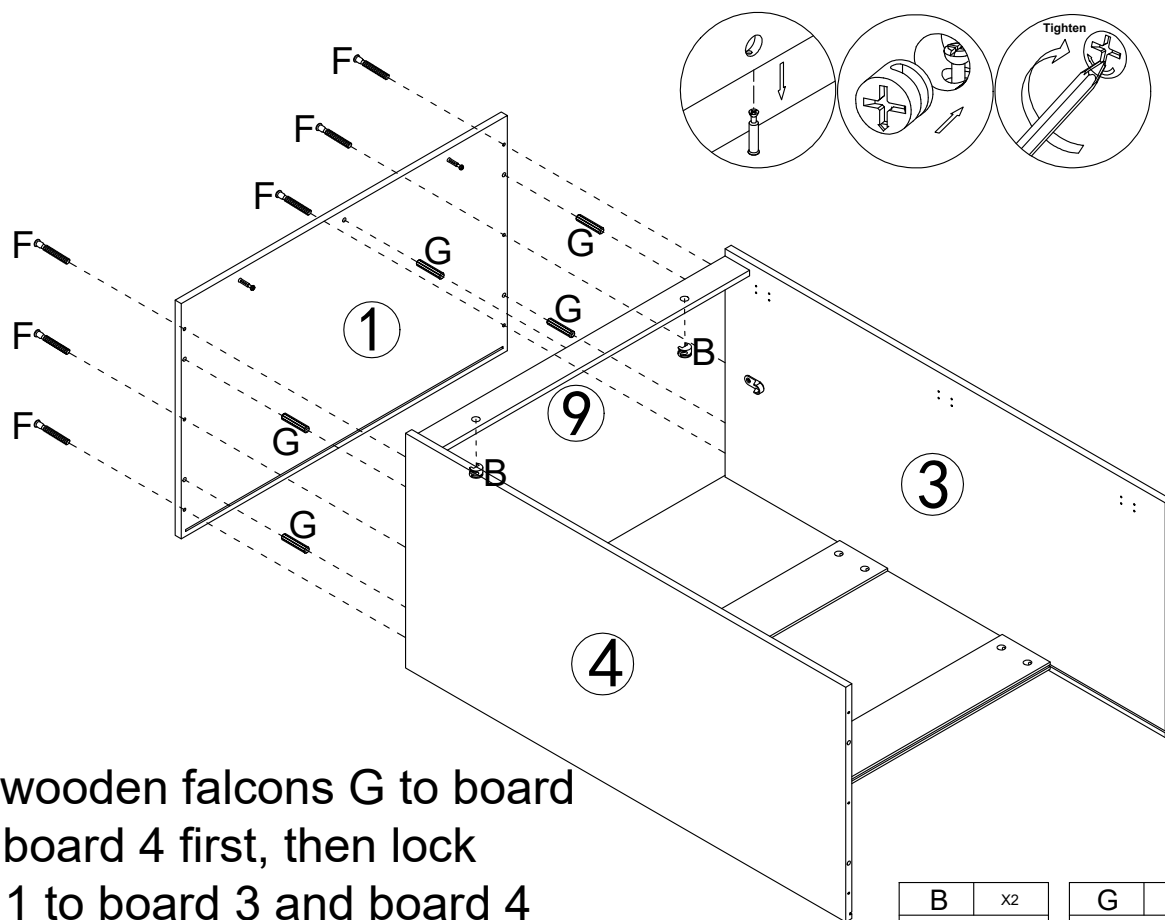

Insert wooden falcons G to board 3 and board 4 first, then lock board 1 to board 3 and board 4 with screw F.


B	X2	G	X5	F	X6
Ø15x9mm		Ø8x30mm		M5x40mm	

8

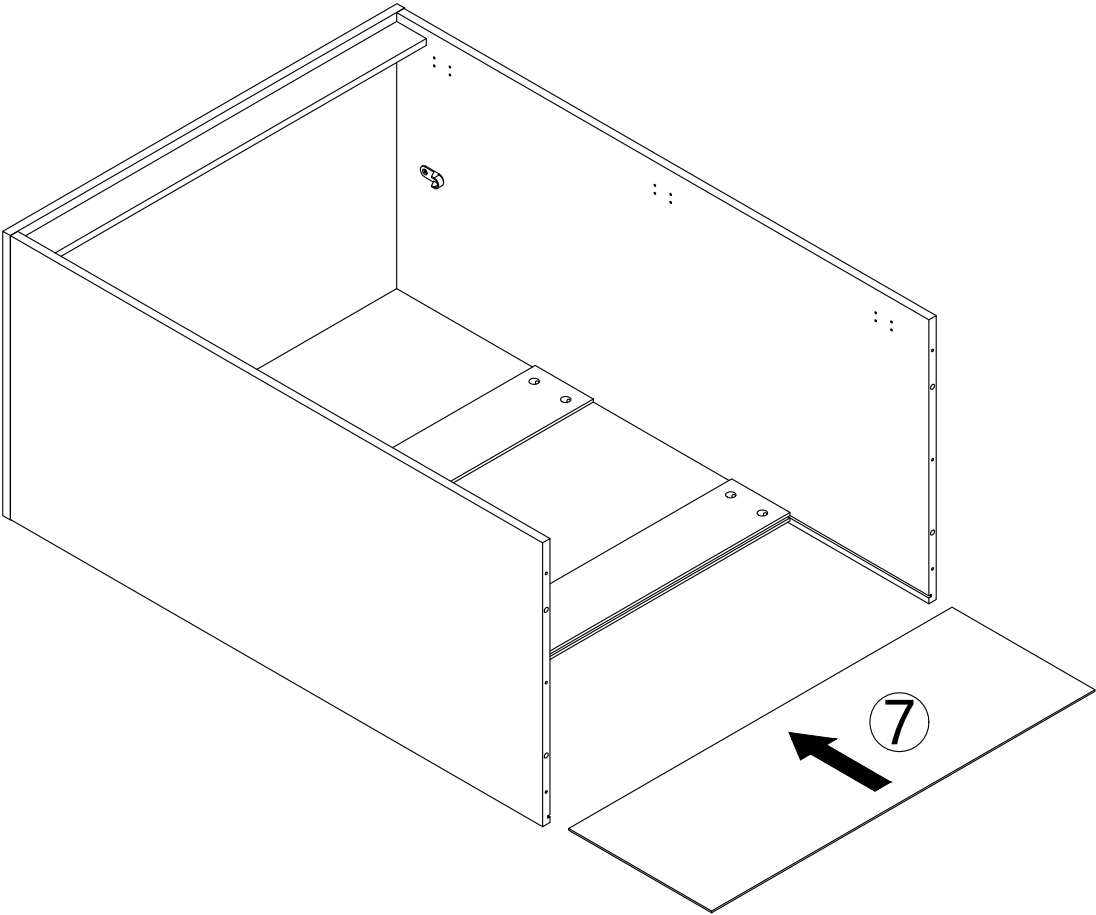


9

Once lock sparepart Q, flip the board 2 over to the other side for screw A.

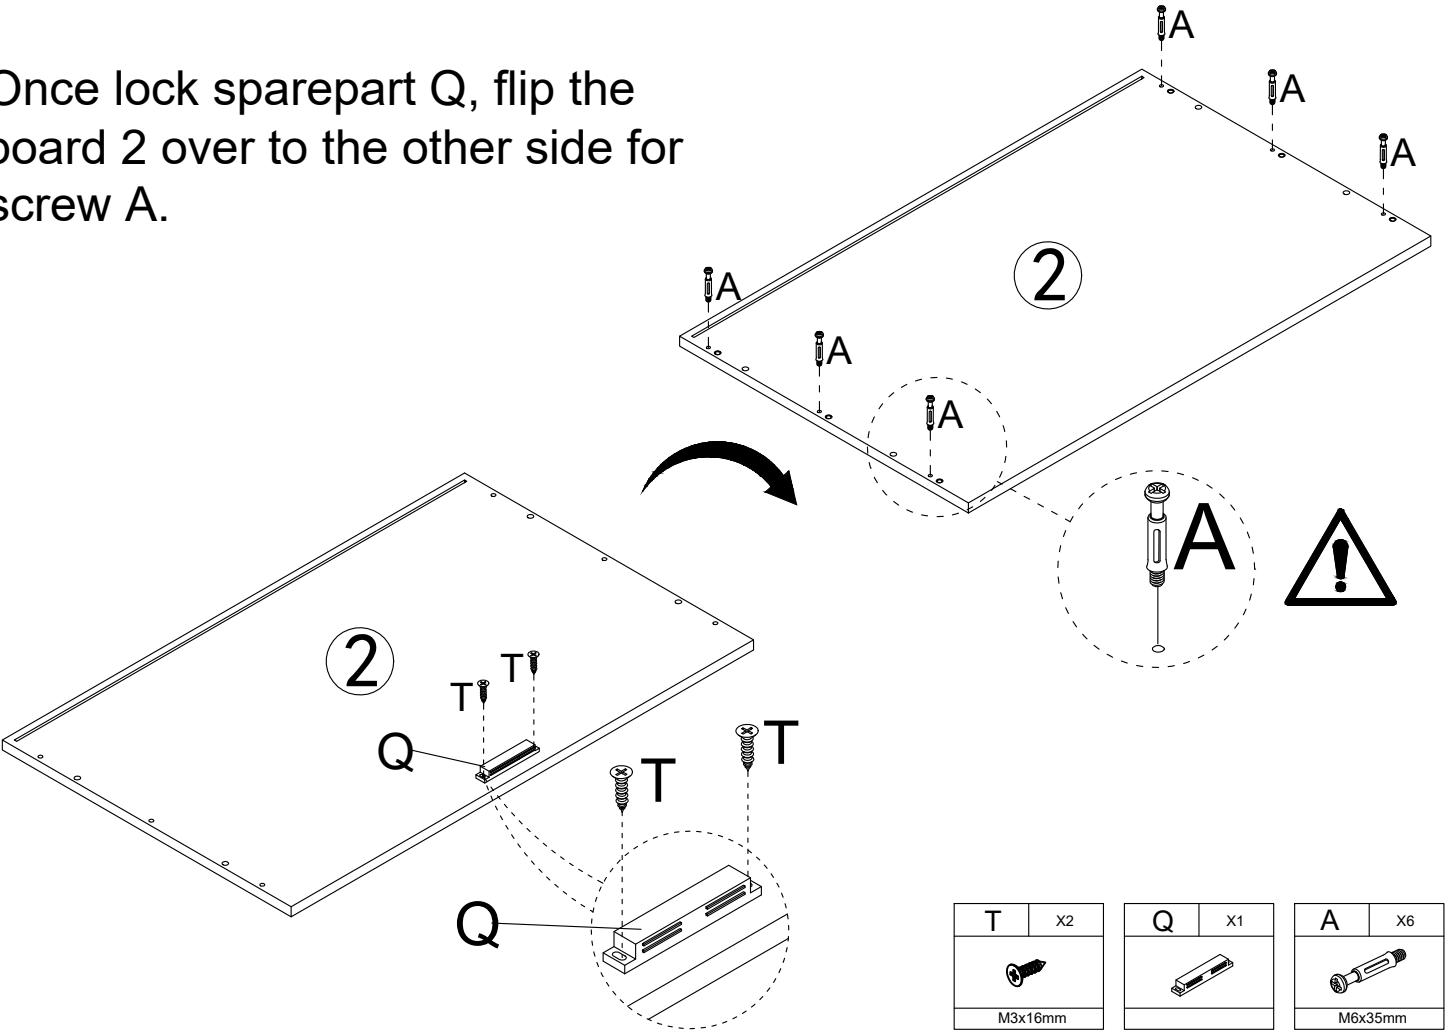


10


Insert wooden falcons G to board 3 and board 4 first, then lock board 2 to board 3 and board 4 with screw F.

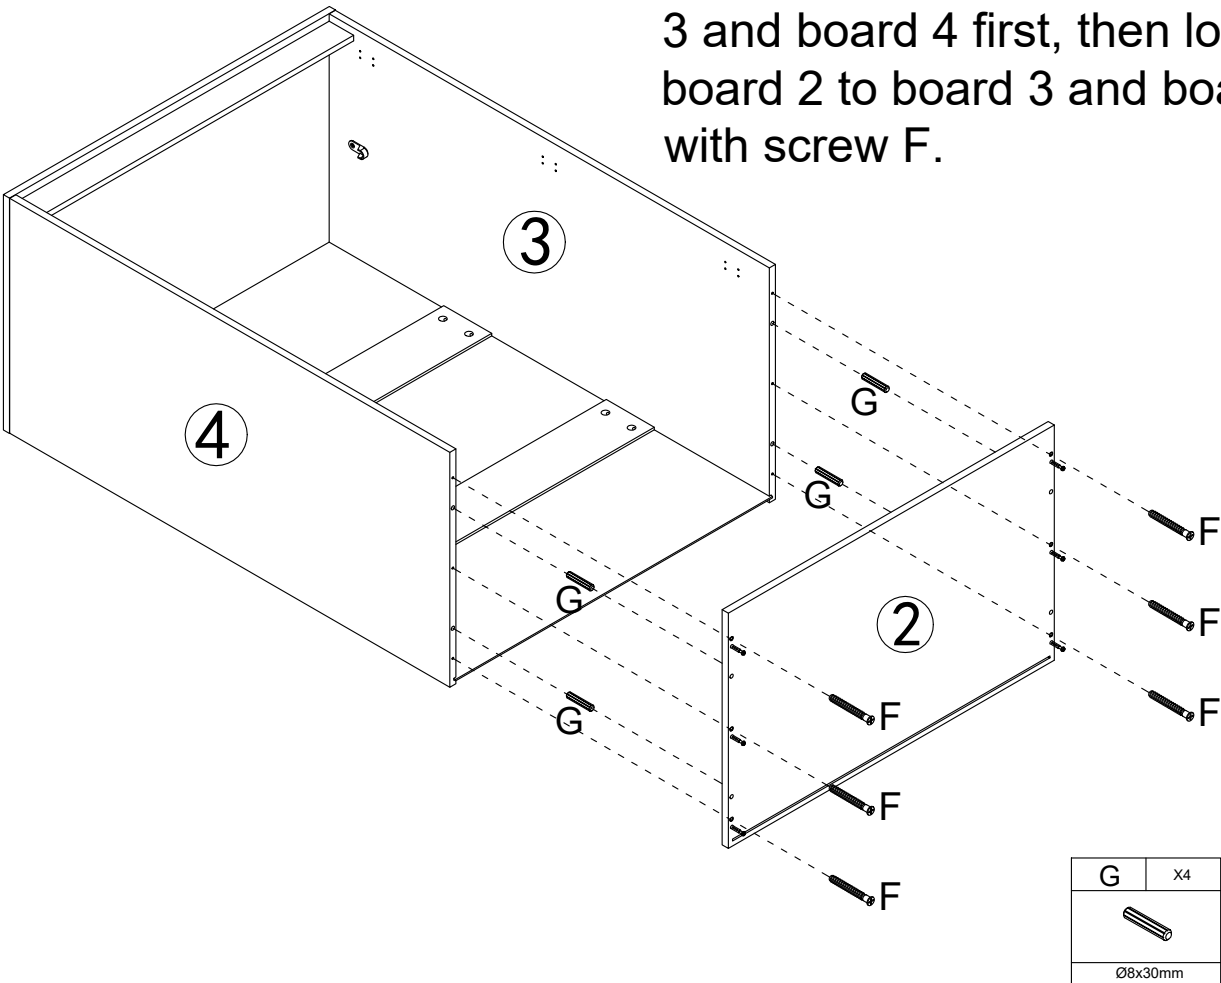


11

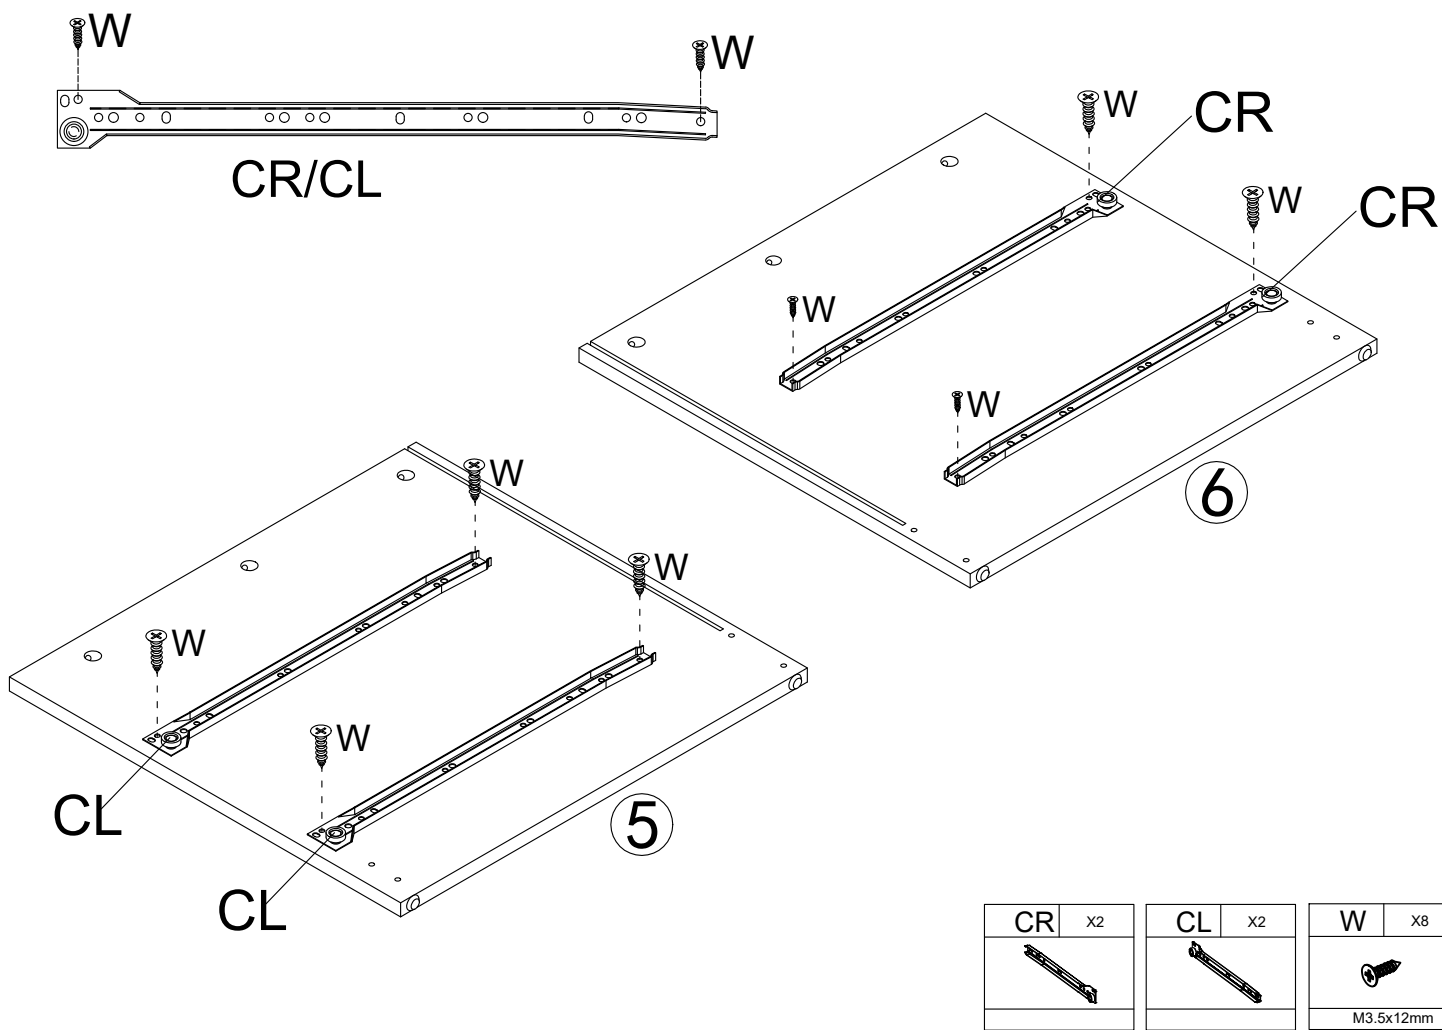

12

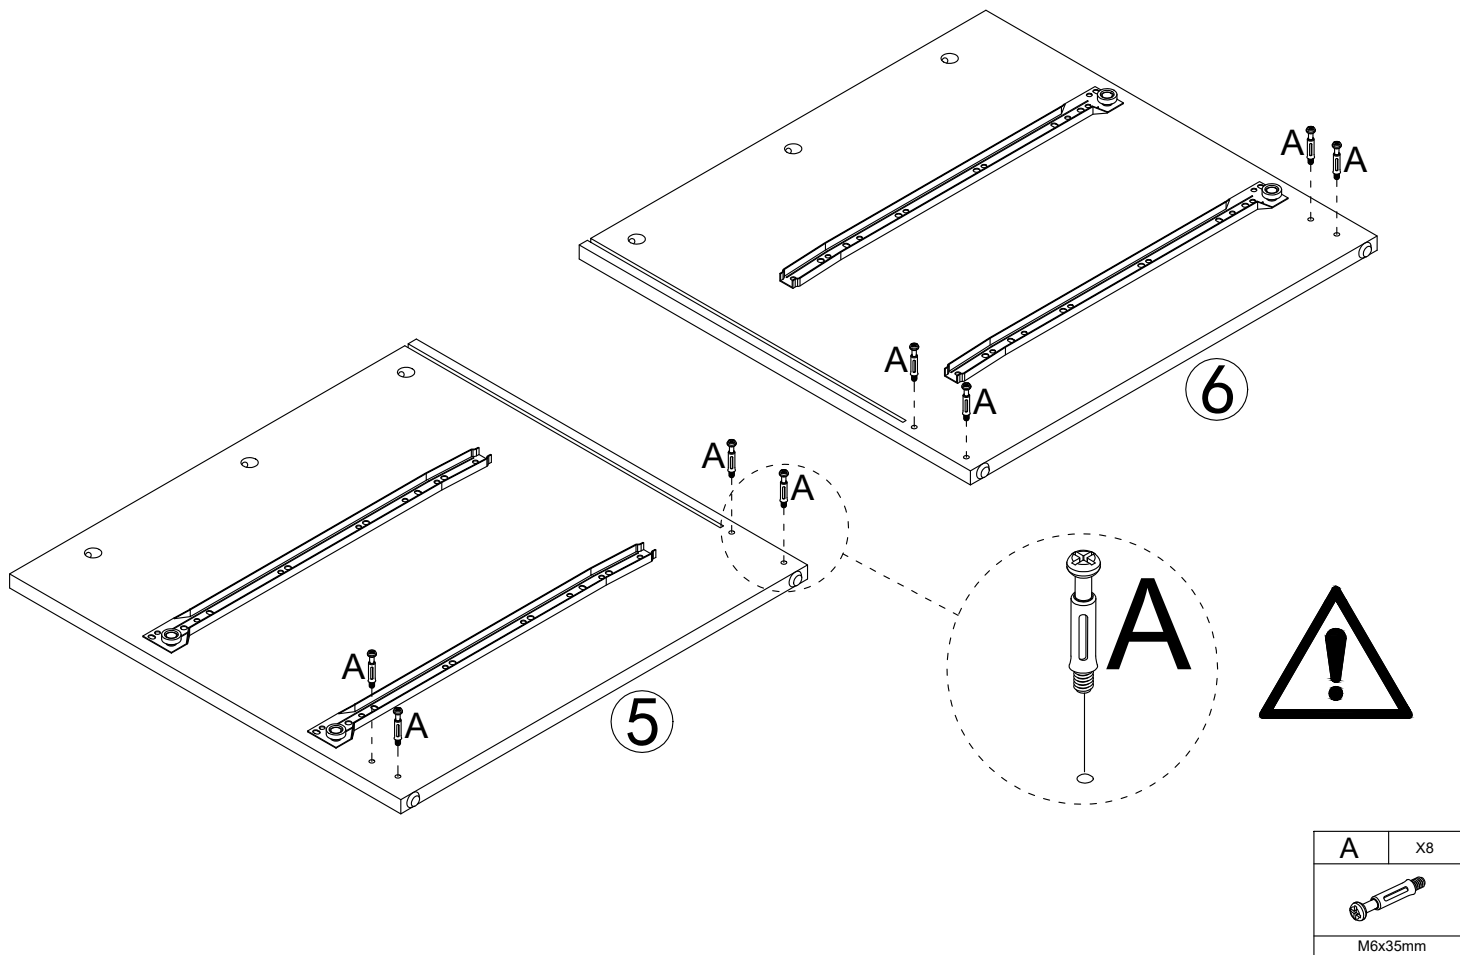


13

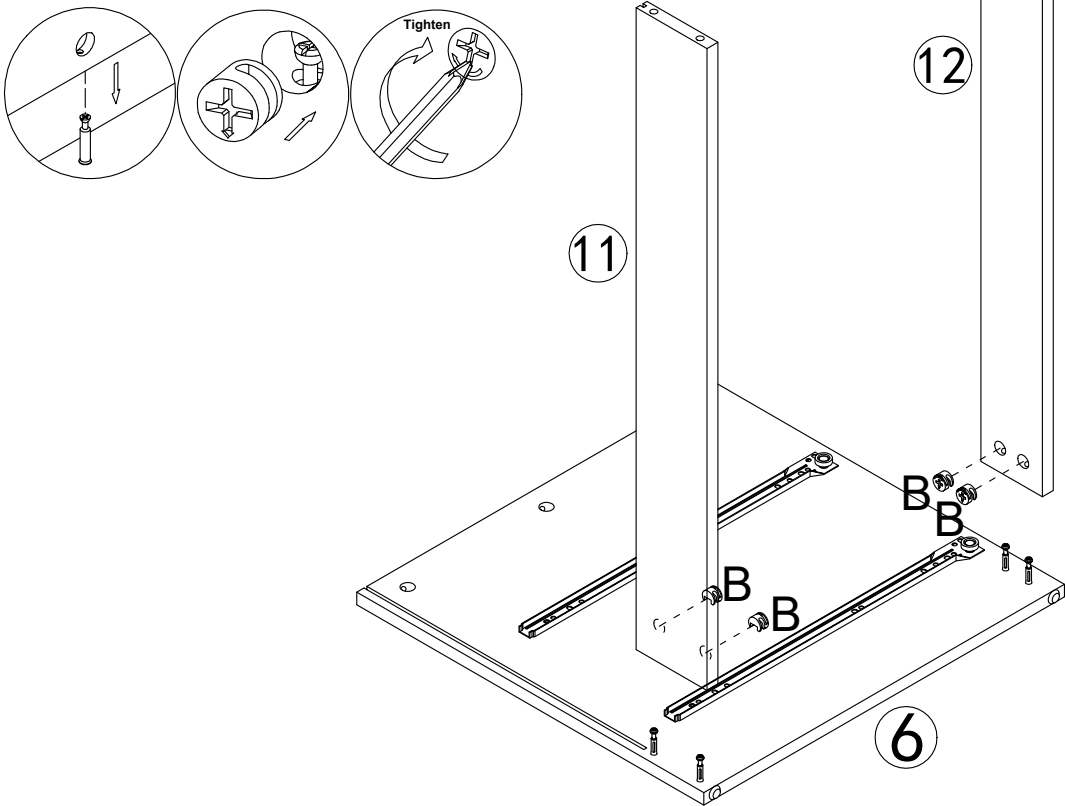


B	X4
	
Ø15x9mm	

14

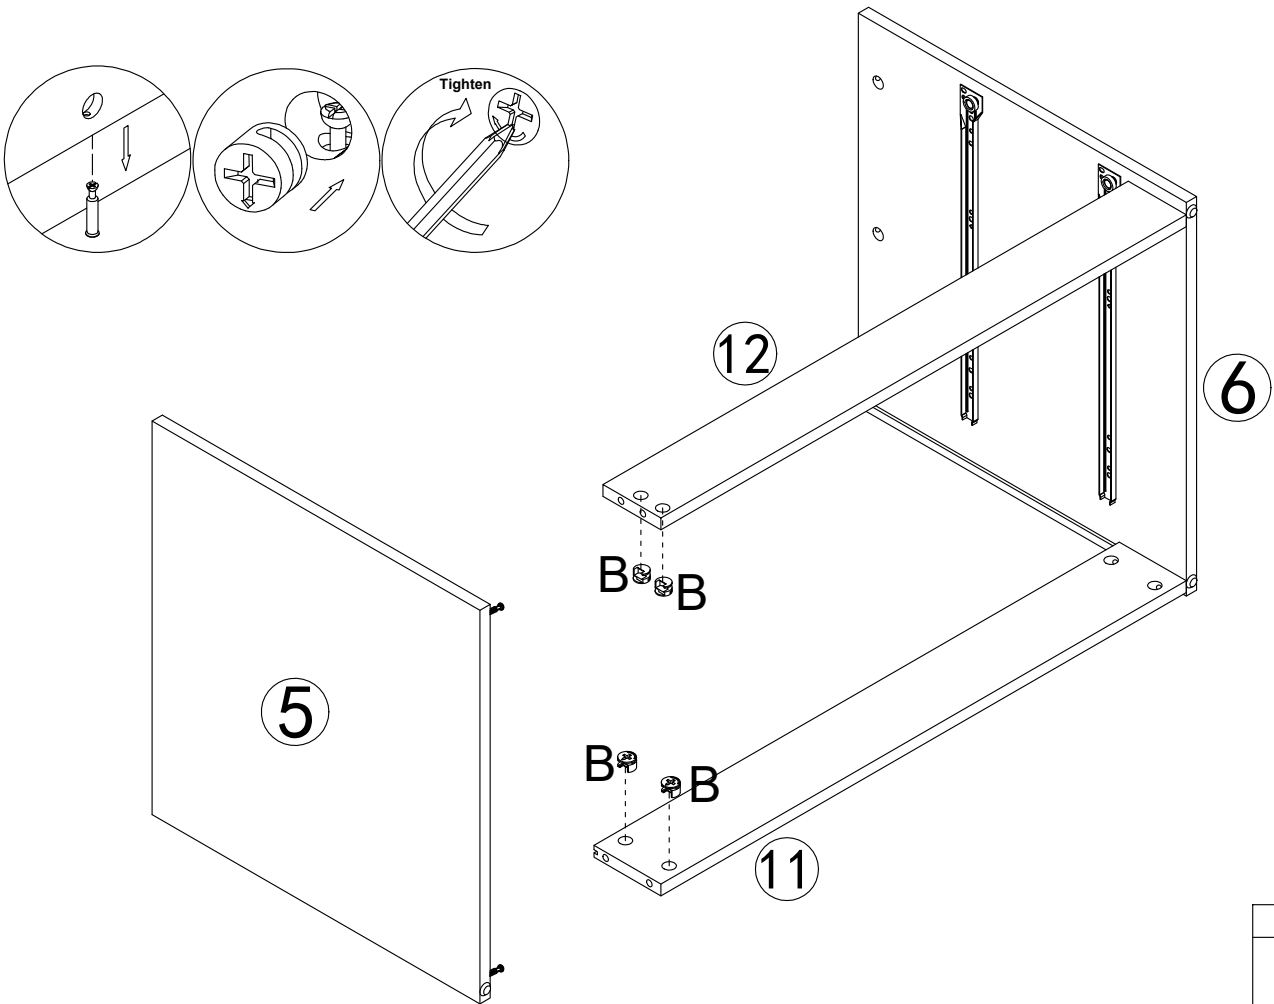


B	X4
	
Ø15x9mm	

15

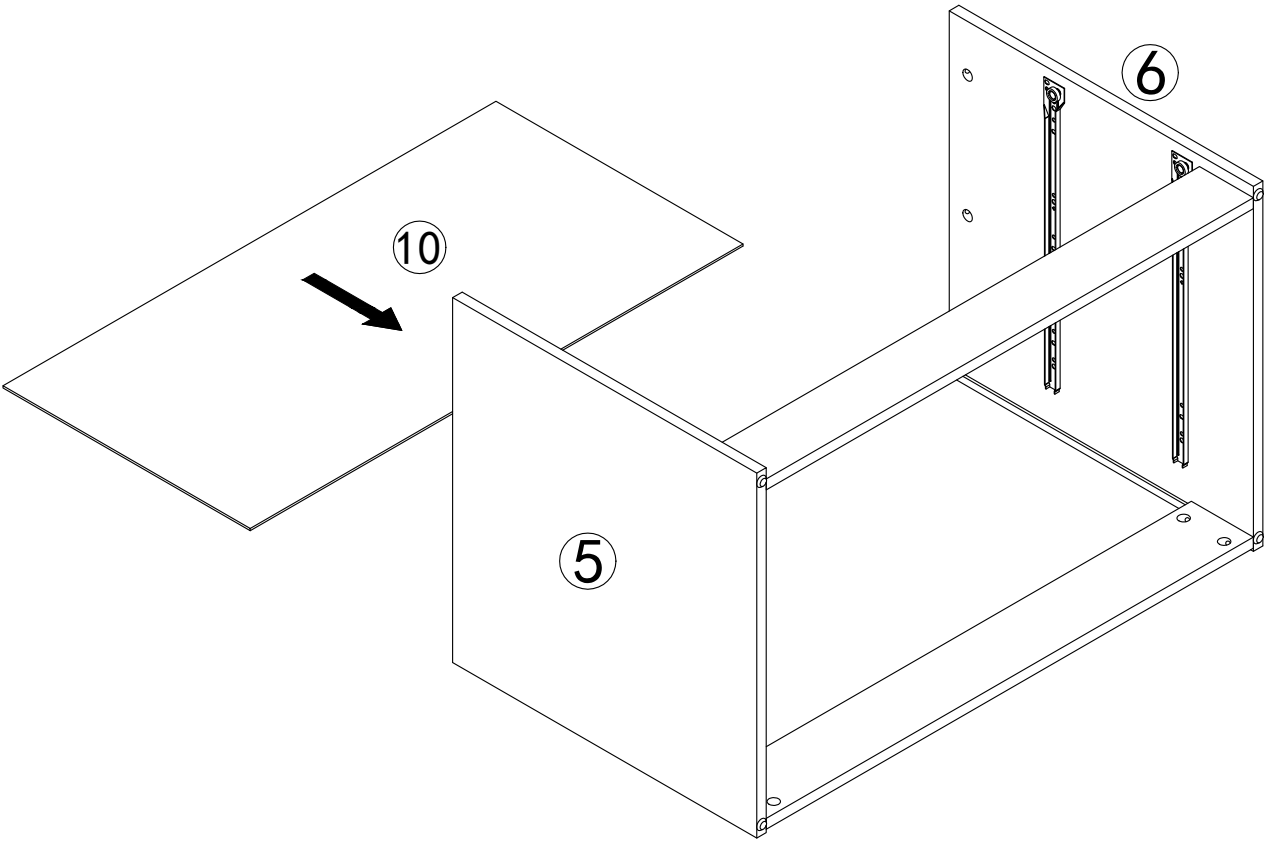


16




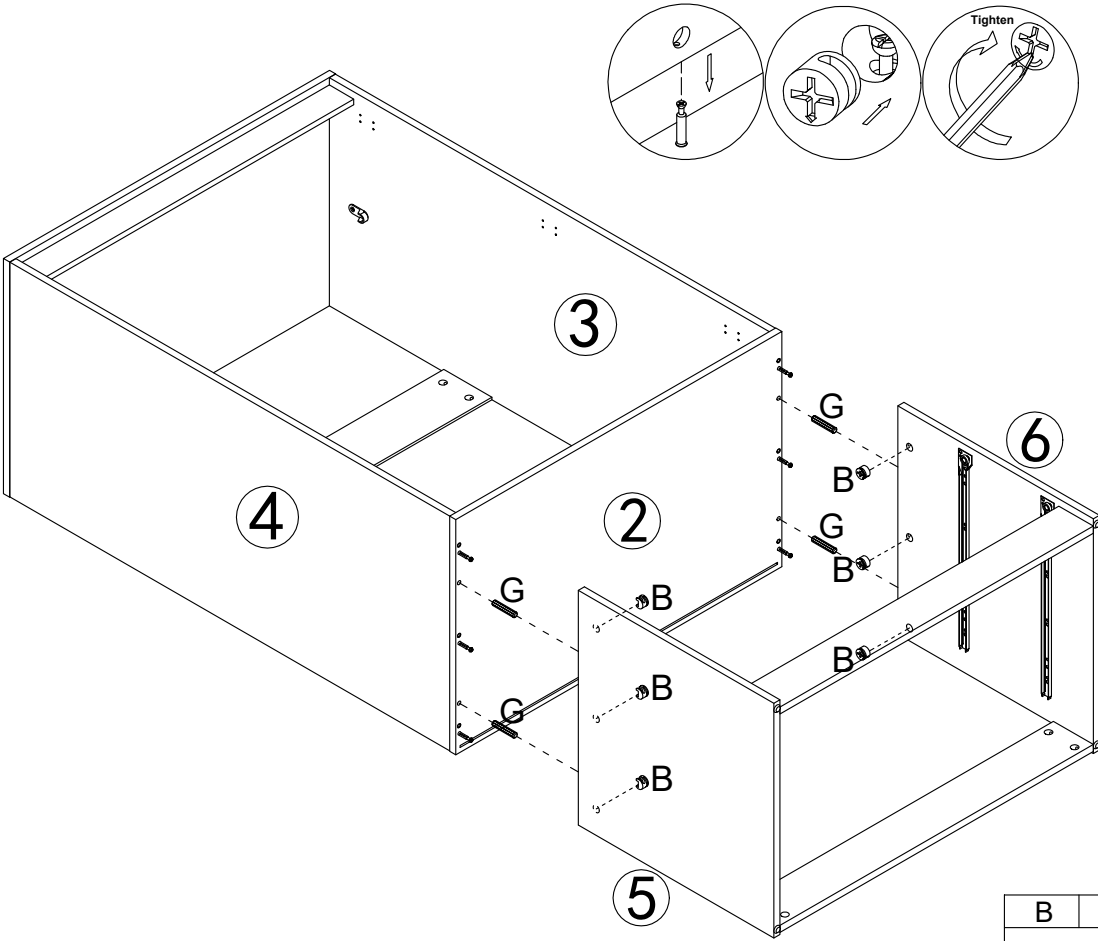


B	X6
	
Ø15x9mm	

G	X4
	
Ø8x30mm	


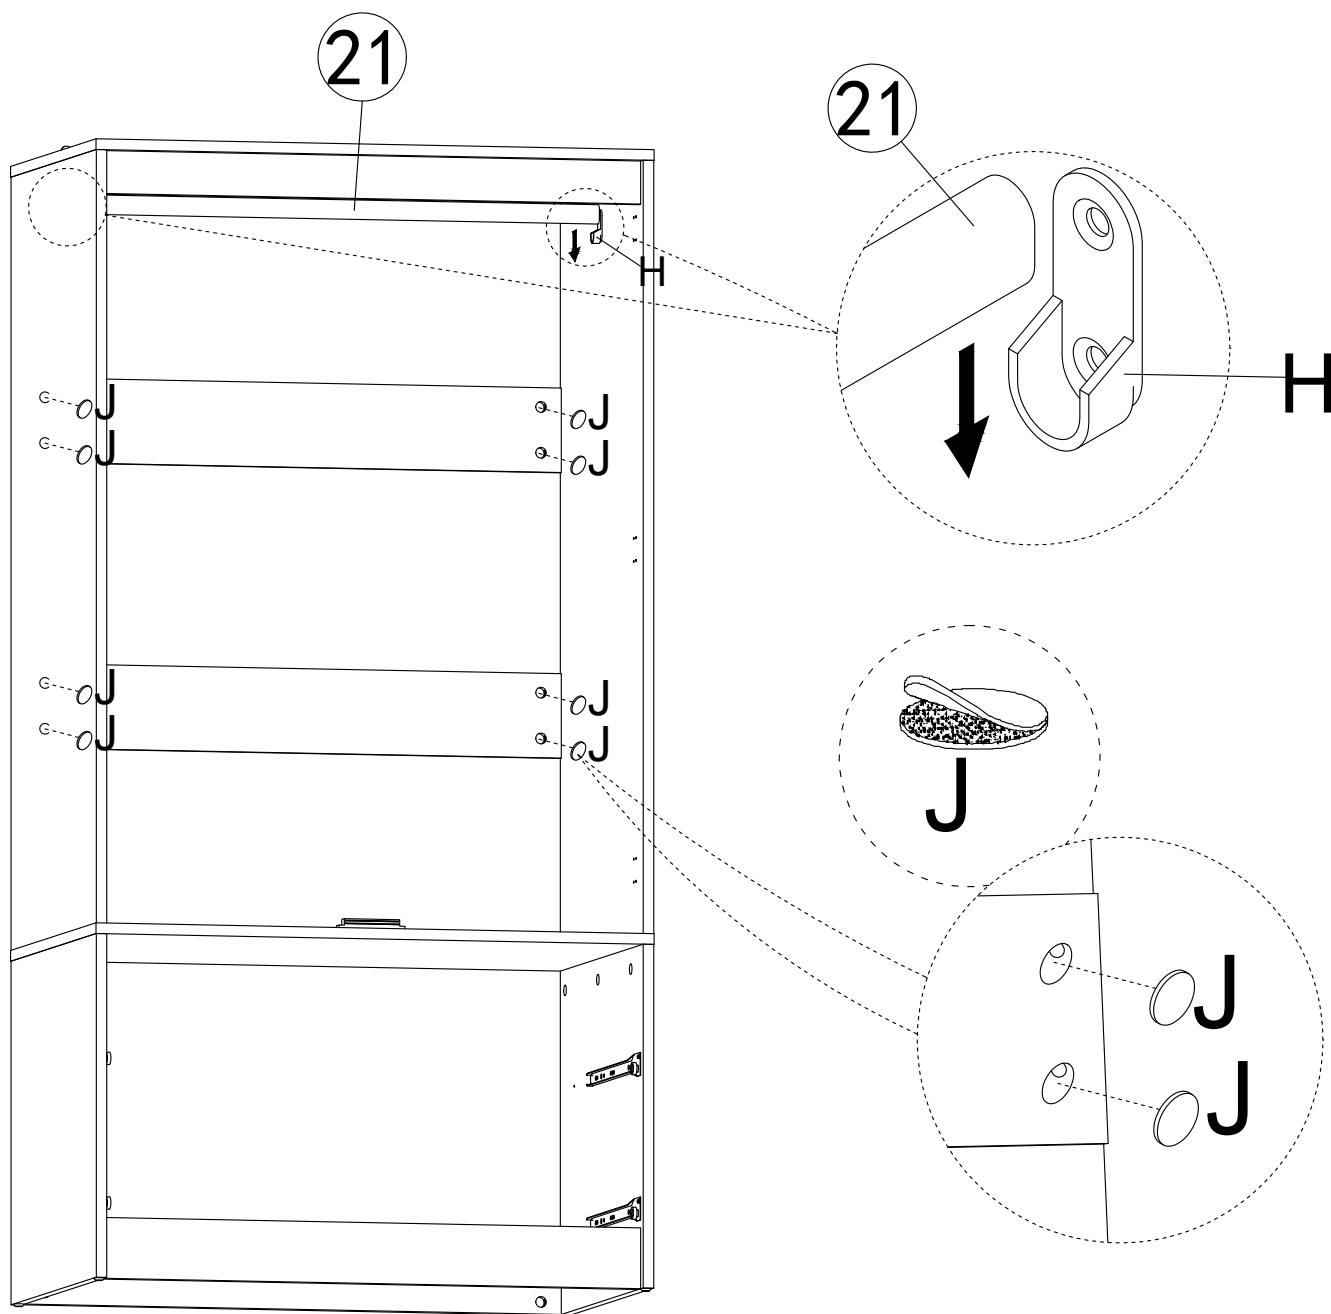


J	x8

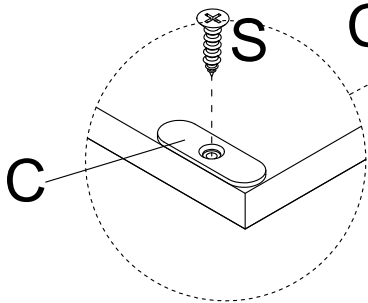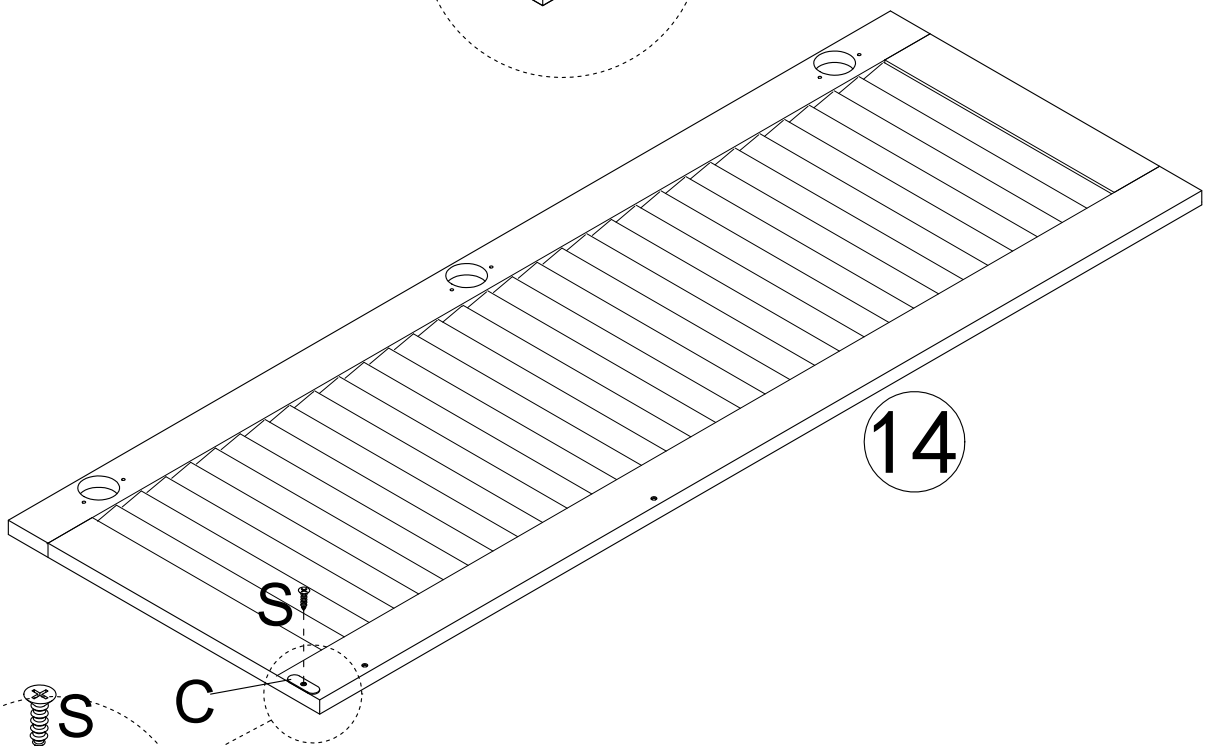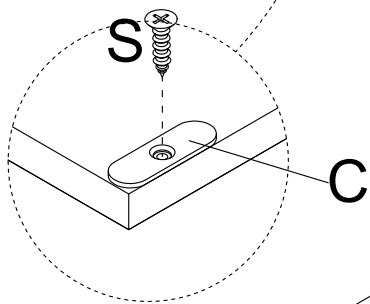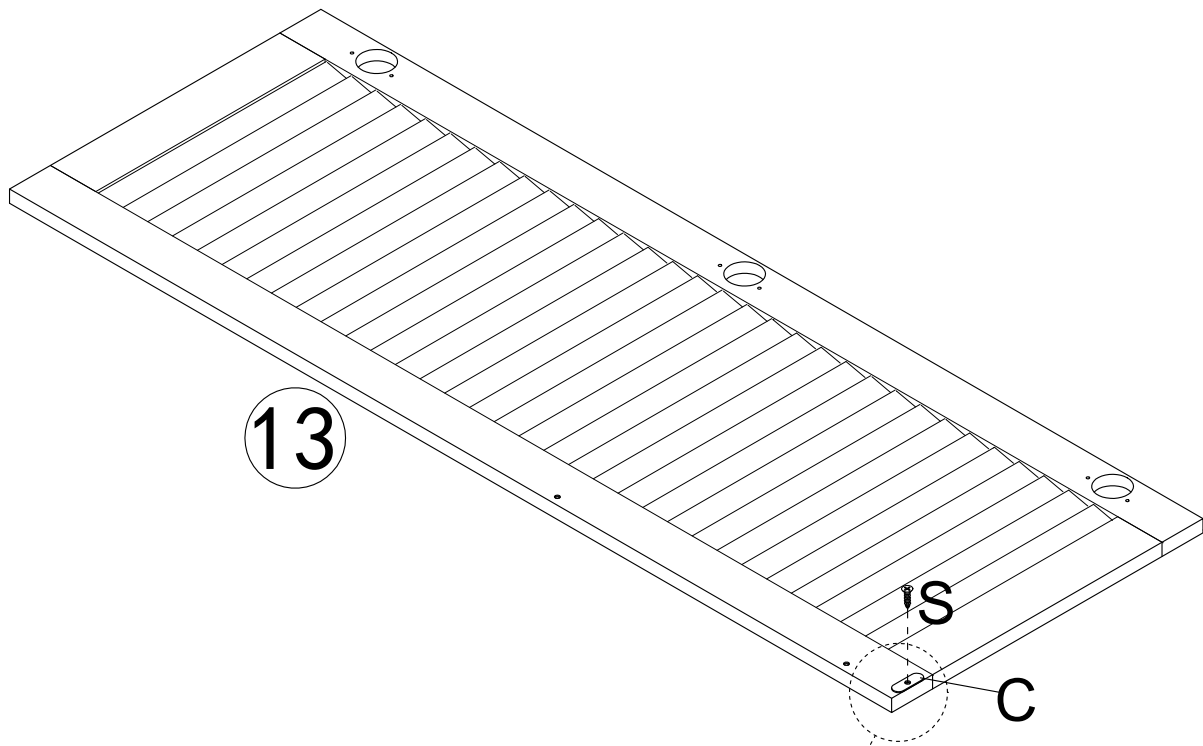



C	x2

S	x2
M3x12mm	

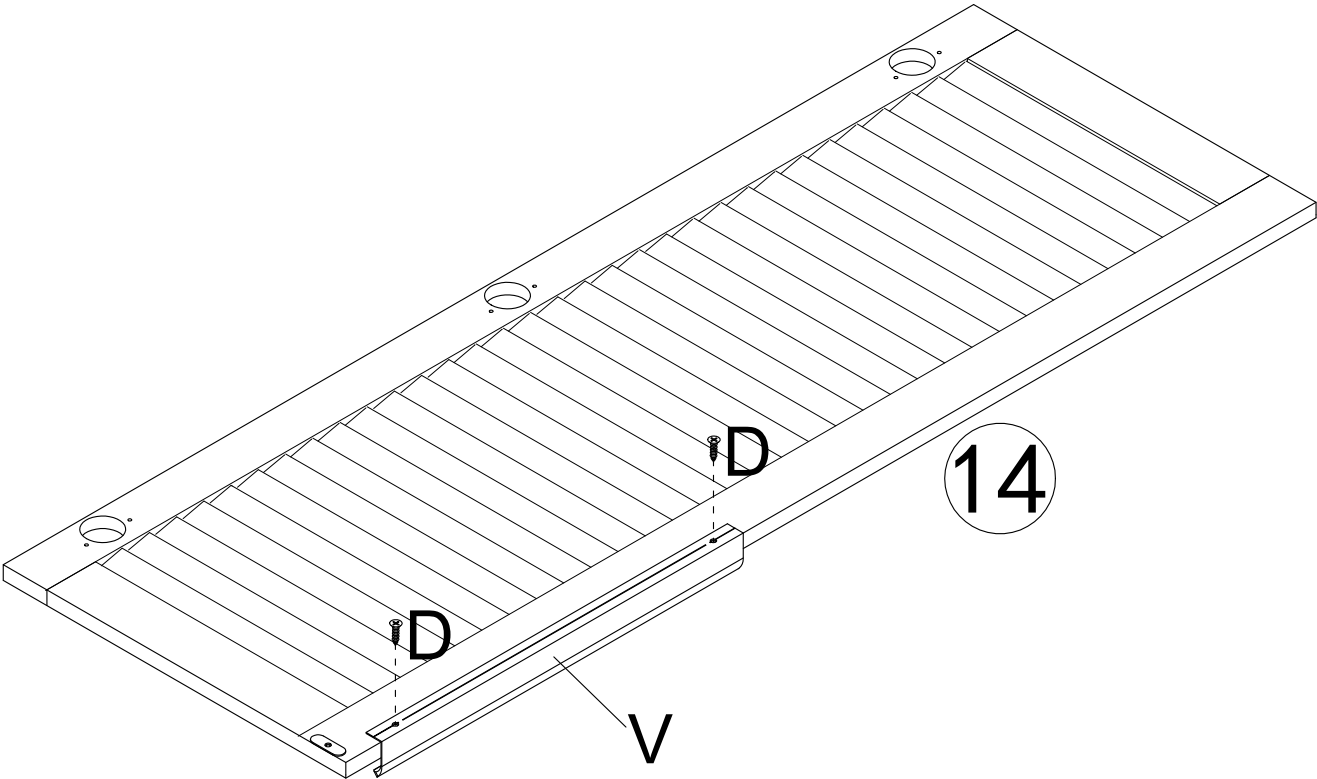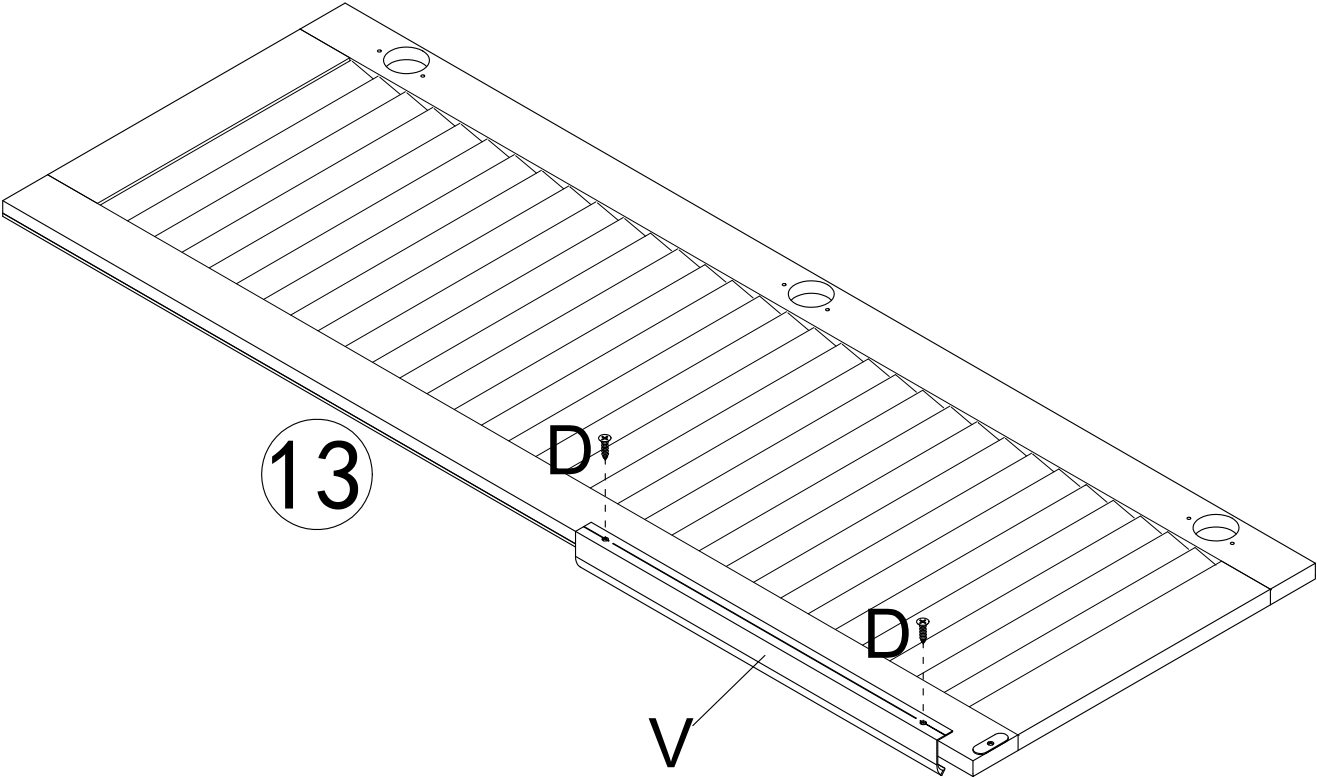



V	x2
	

D	x4
	
M3.5x14mm	

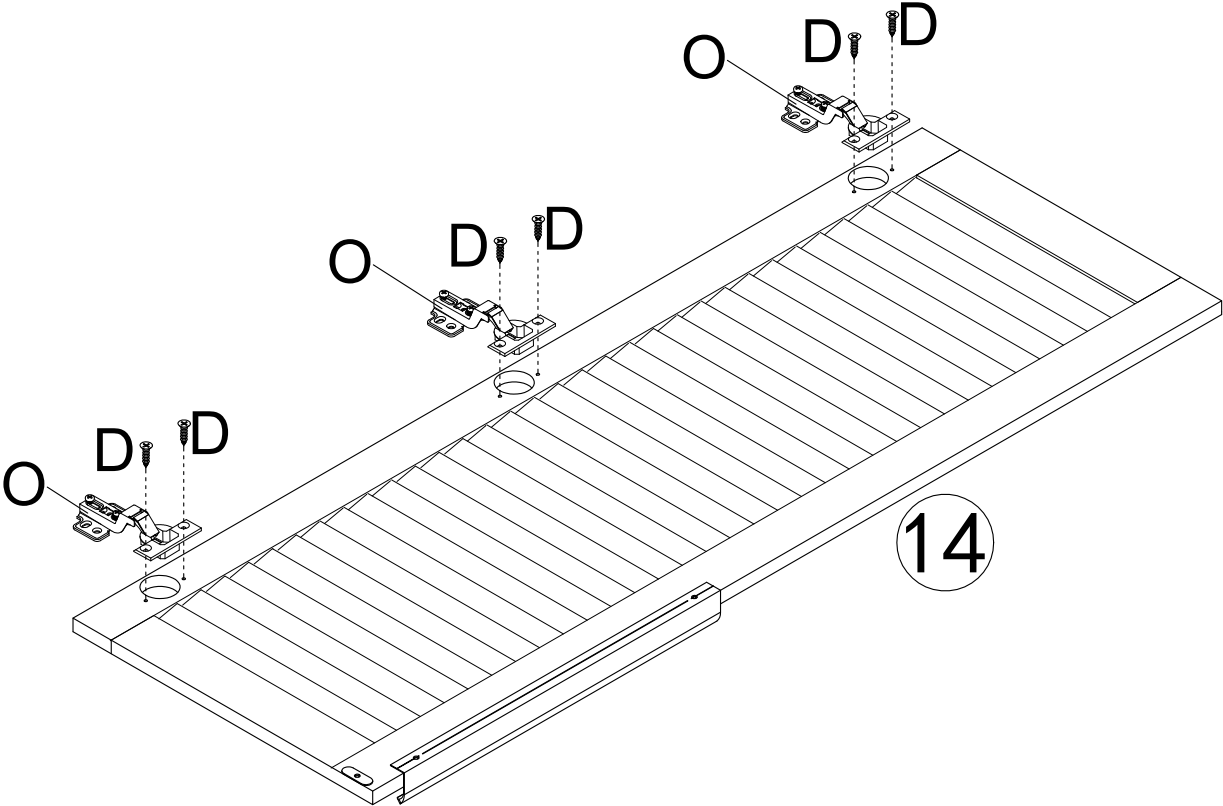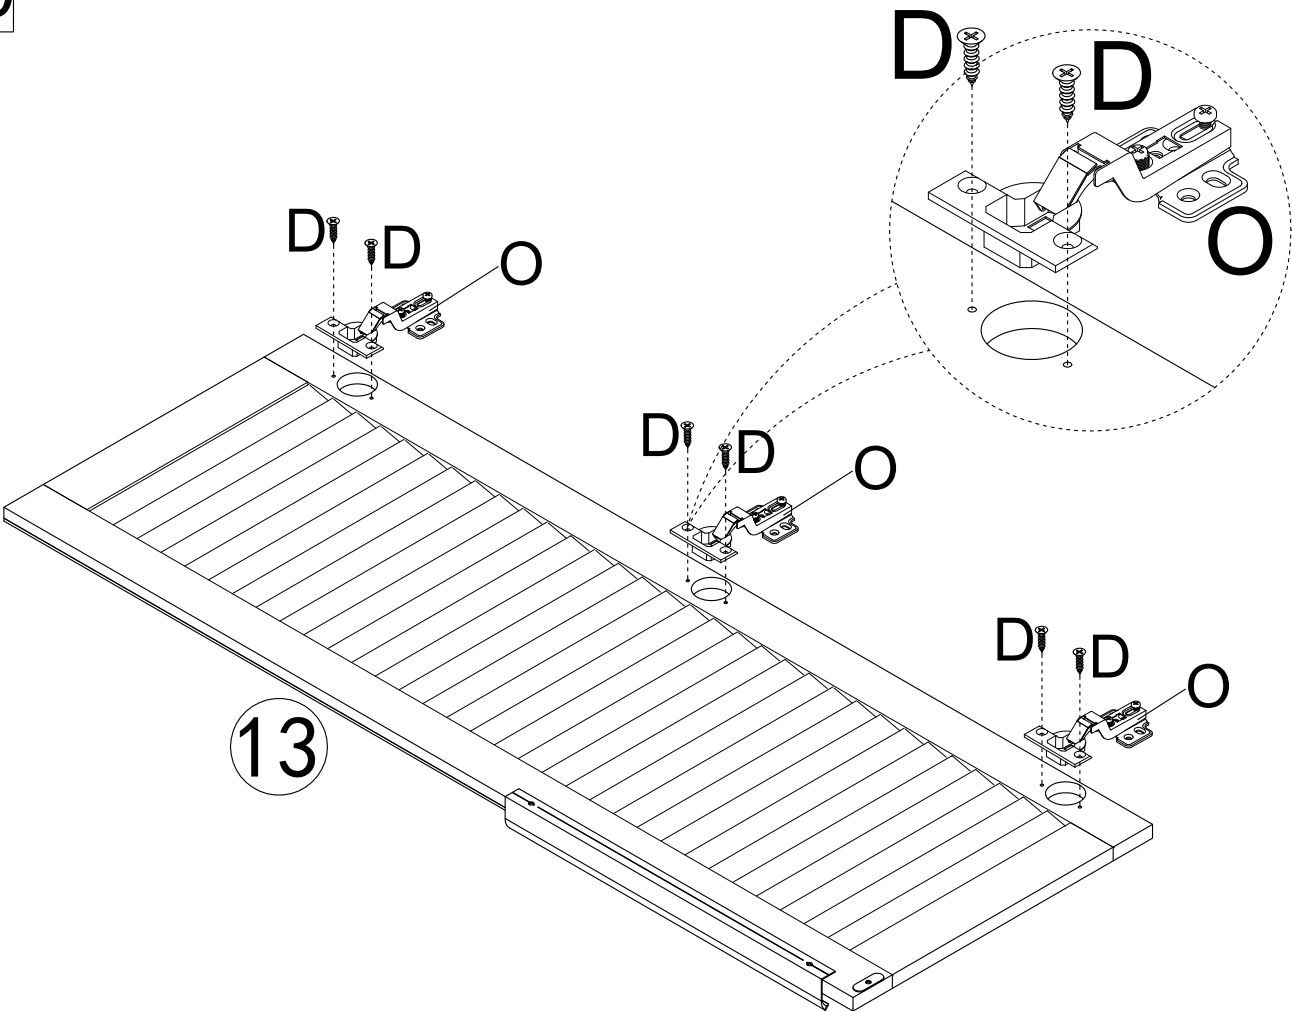


O	X6	D	X12
			
		M3.5x14mm	


Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

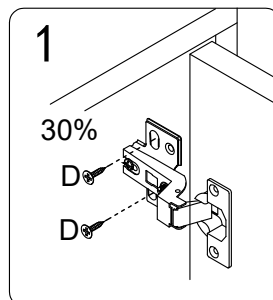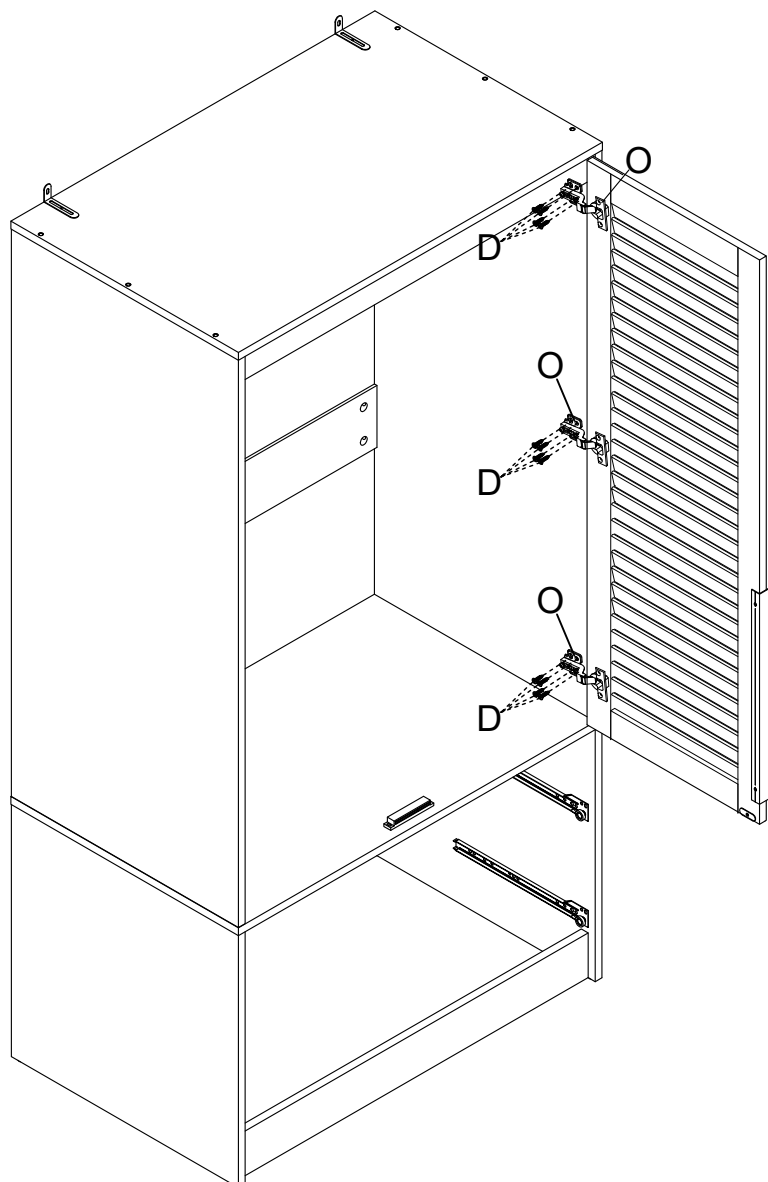


Tighten the screws only 30% as long as the door can be secured.

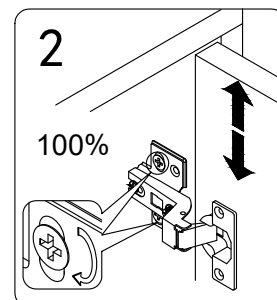


Move the door up and down until it is centred, then tighten the screw 100%.

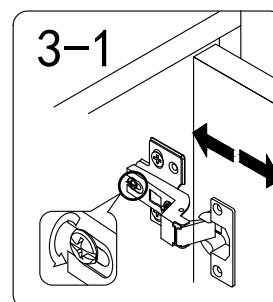


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's **aligned** to side board.

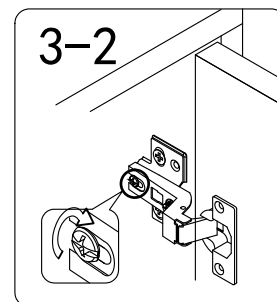


Tighten the screw **clockwise** once the door is **aligned**.

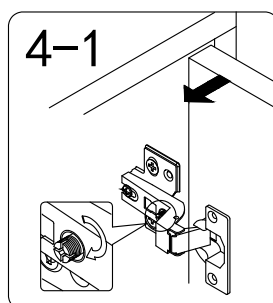

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

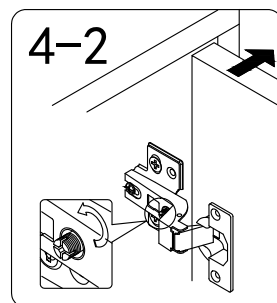



To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.

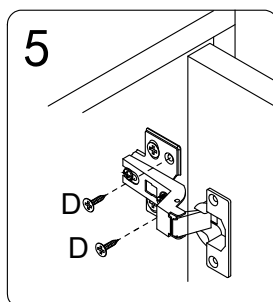


After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	X12
M3.5x14mm	


Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

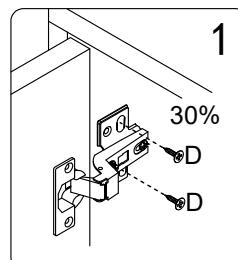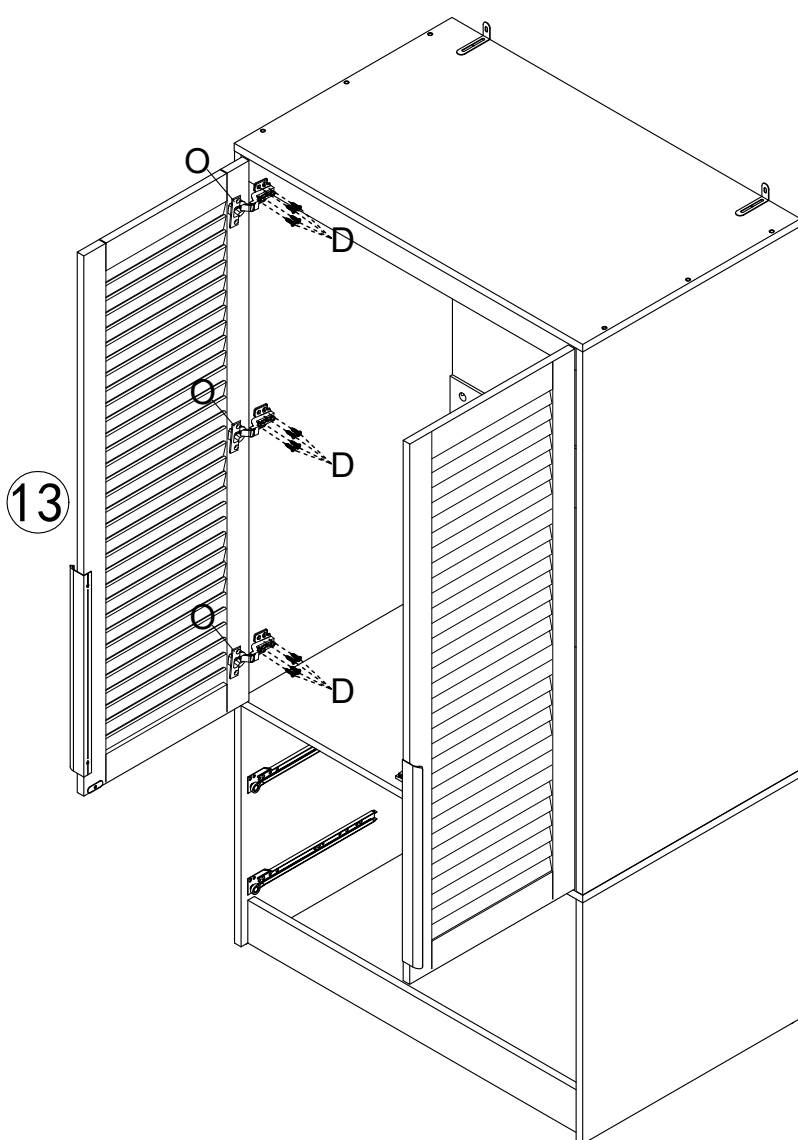


Tighten the screws only 30% as long as the door can be secured.

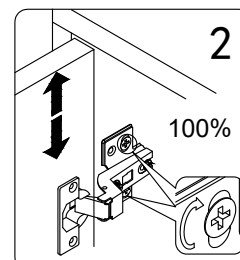


Move the door up and down until it is centred, then tighten the screw 100%.

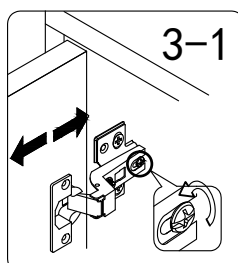


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's **aligned** to side board.

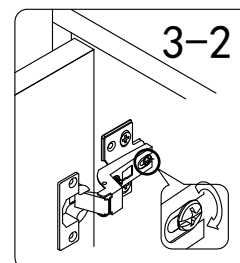


Tighten the screw **clockwise** once the door is **aligned**.

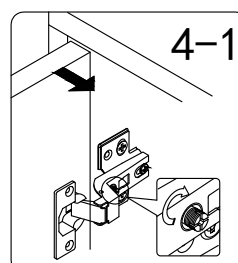

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

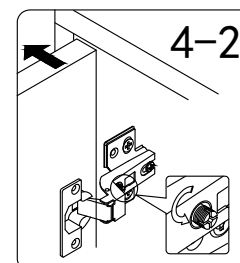


To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.

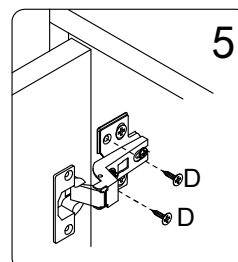

After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	X12
M3.5x14mm	


23

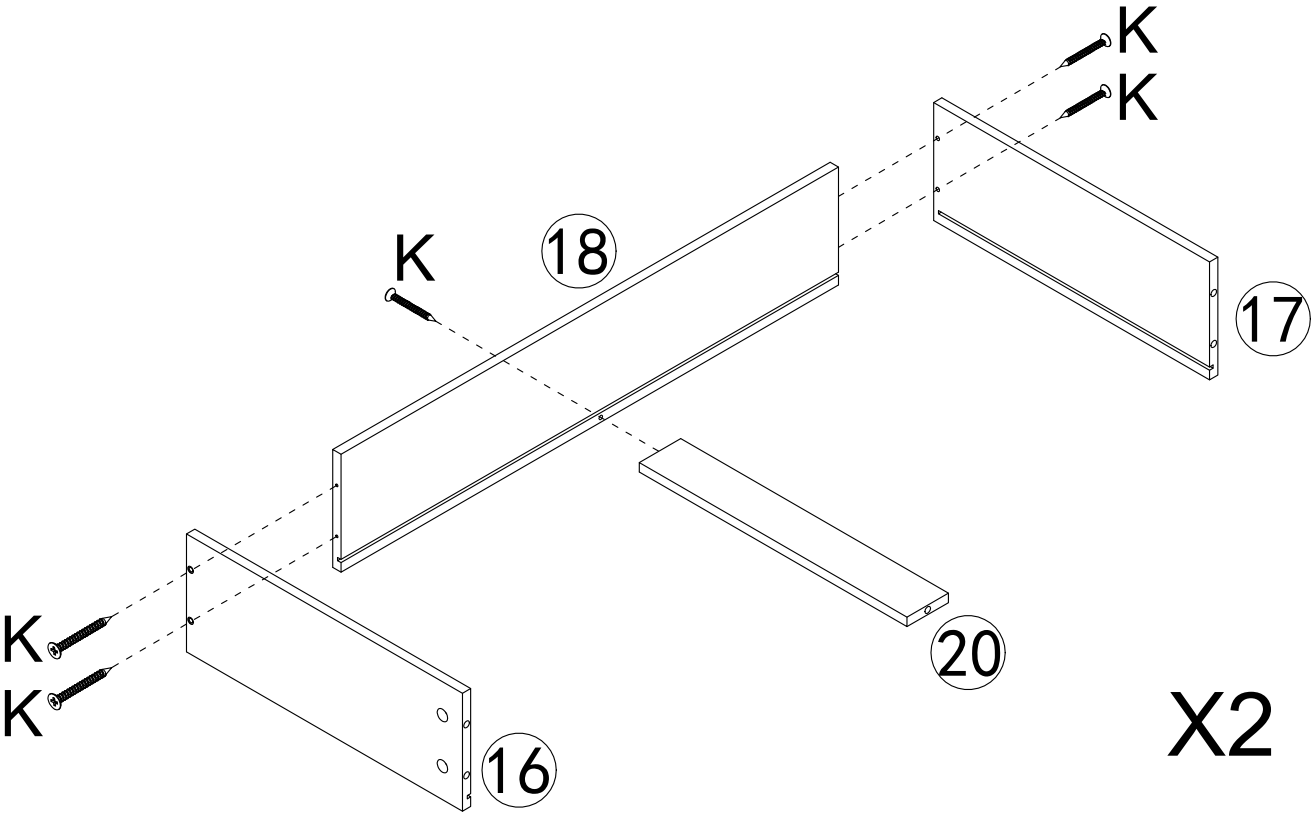

X2



K	X10
	
M4x35mm	

24

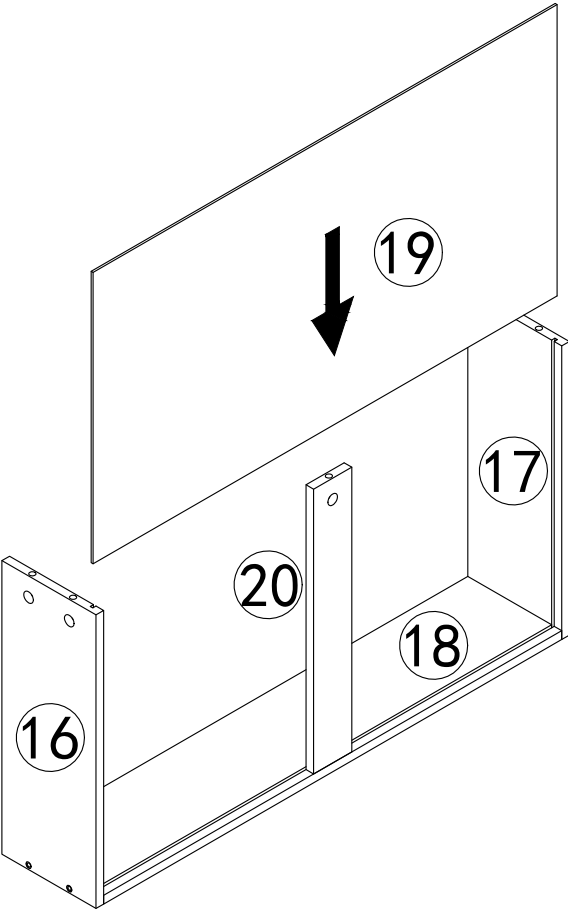

X2



25

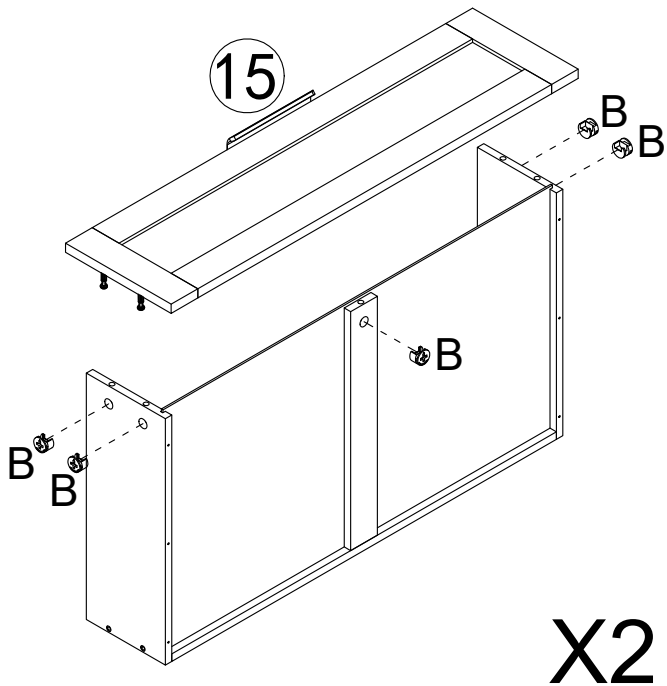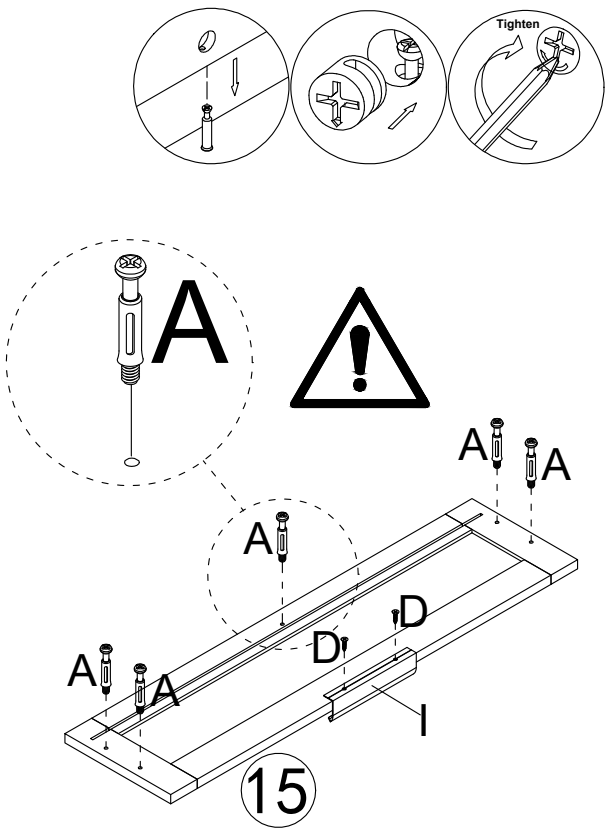

X2

I	X2	D	X4	A	X10	B	X10
		M3.5x14mm		M6x35mm		Ø15x9mm	


26

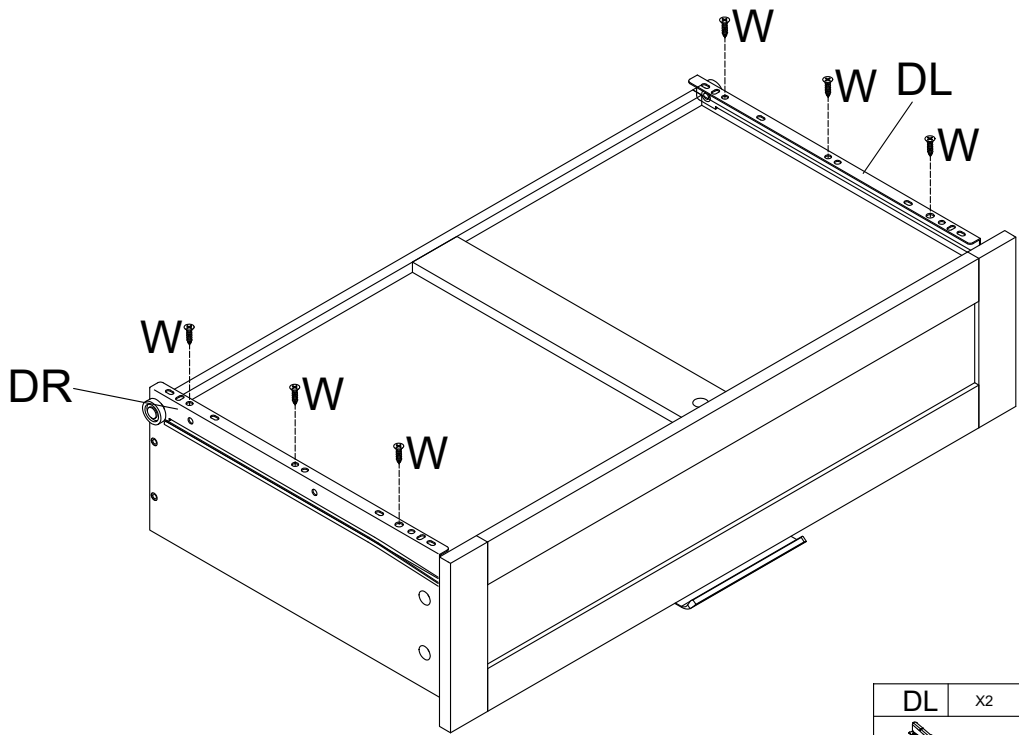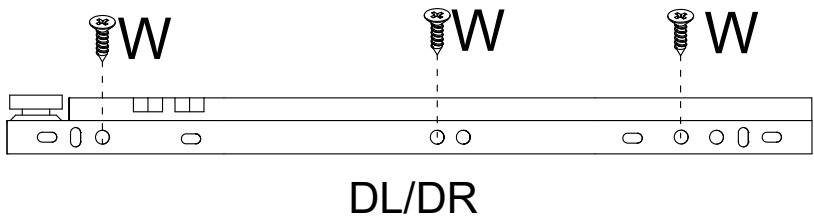


X2

DL	X2	DR	X2	W	X12
				M3.5x12mm	


27

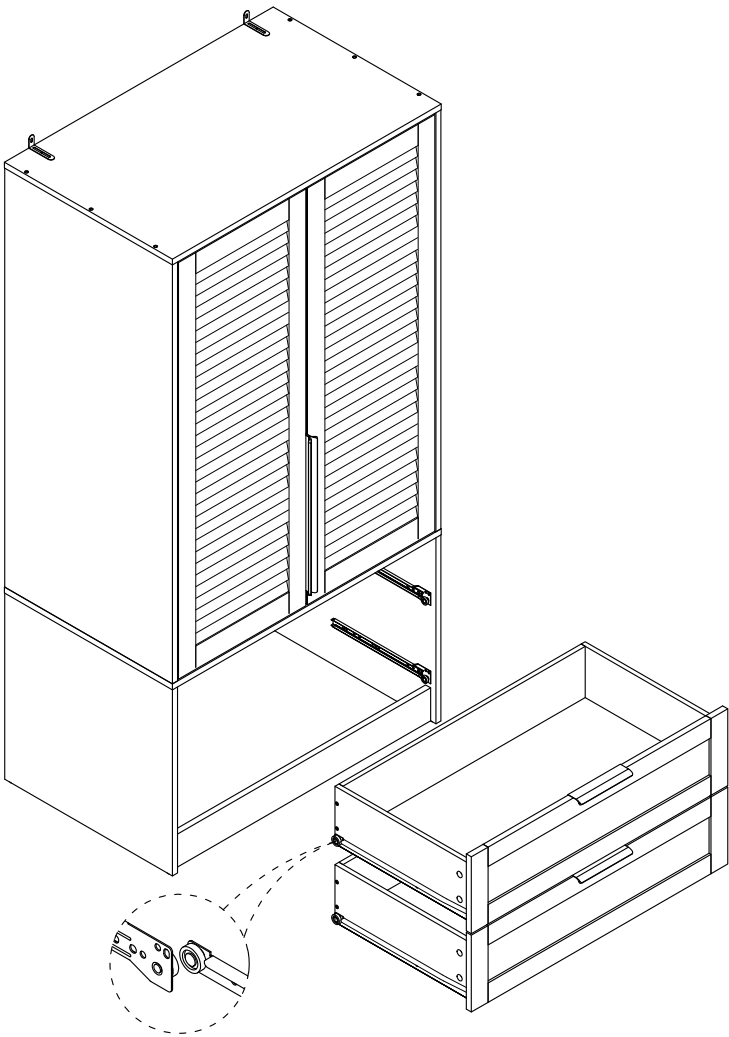

28

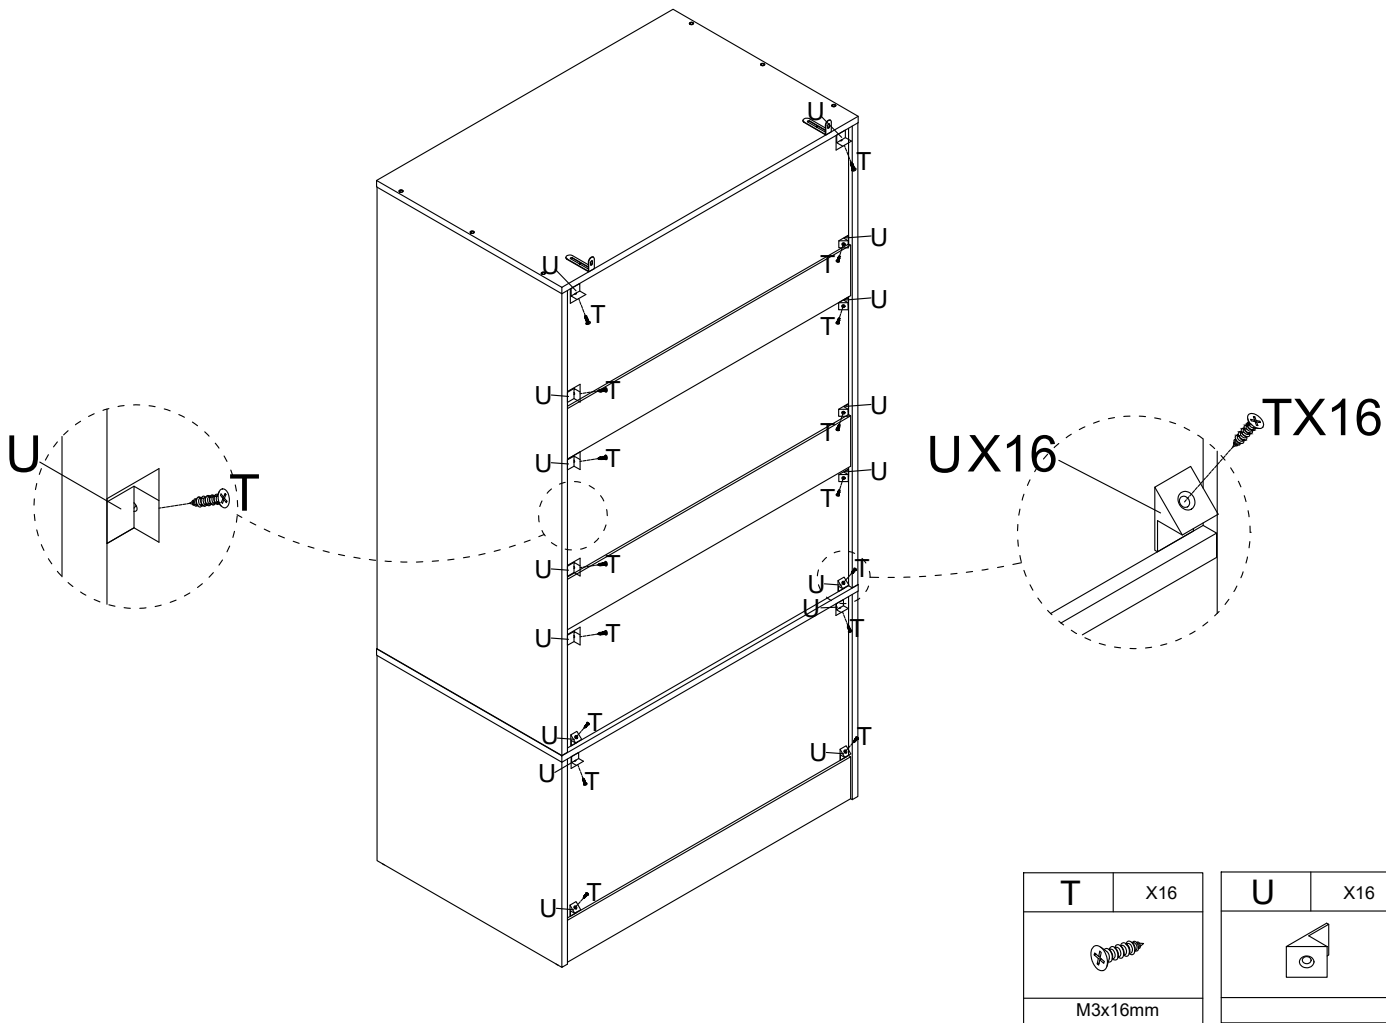

29

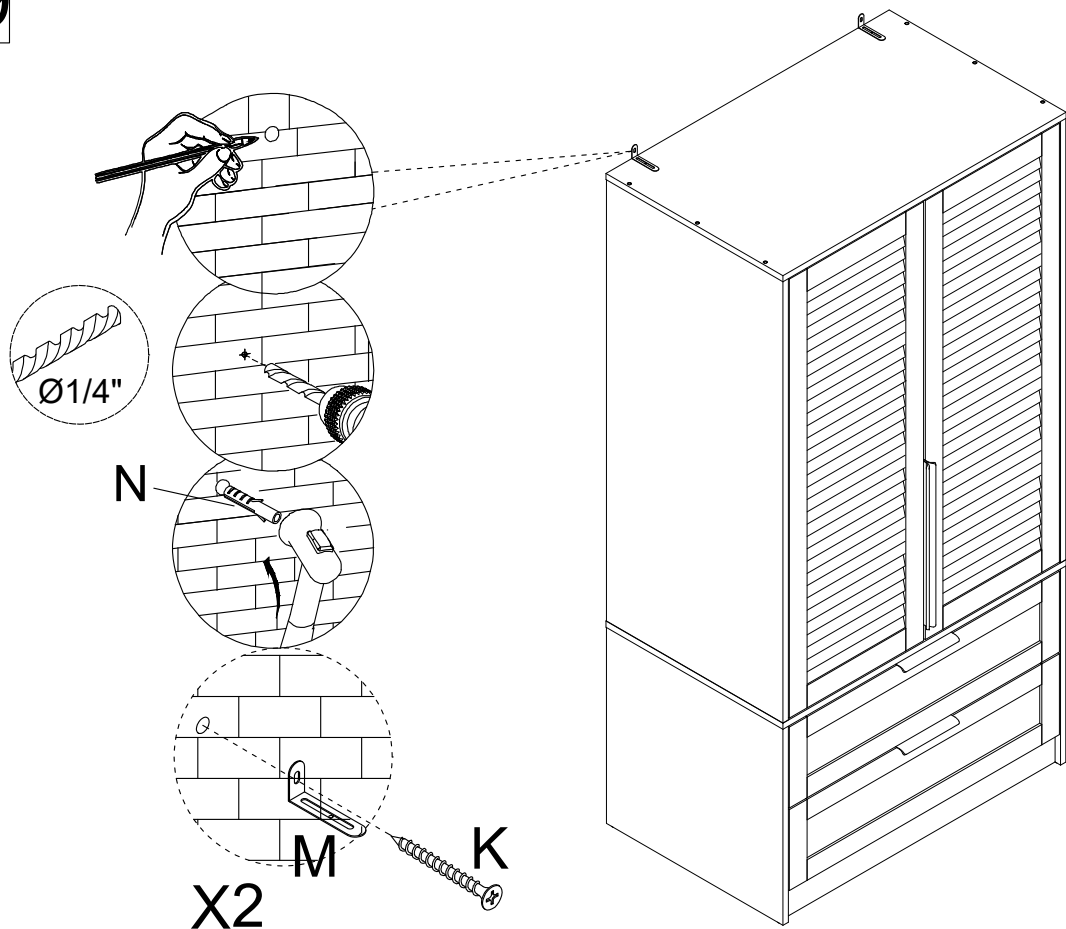

N	X2
$\text{Ø}6 \times 30\text{mm}$	

K	X2
M4x35mm	

30

