

# TWIN SIZE METAL HEADBOARD

## ASSEMBLY INSTRUCTION



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### Warning !

1. Don't attempt to repair or modify parts that are broken or defective . Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION

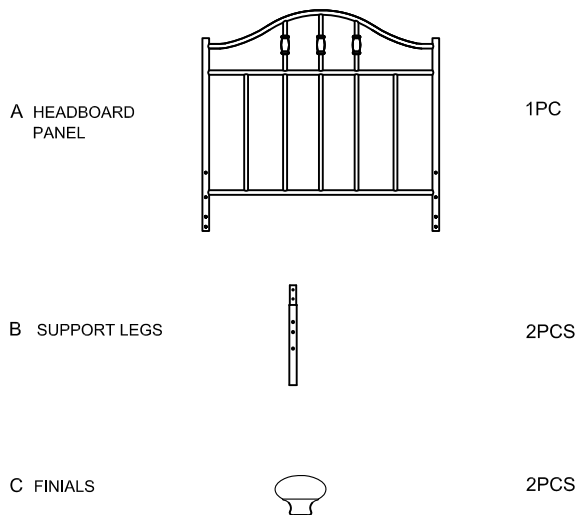


## Z HARDWARE PACKAGE


NO	DESCRIPTION	FIGURE	QTY
1	BOLT 1 1/4"x2"		4PCS
2	BOLT 2 1/4"x1/2"		4PCS
3	METAL WASHER		4PCS
4	RUBBER WASHER		4PCS
5	NUT 1/4"X8L		4PCS
6	ALLEN WRENCH		1PC
7	WRENCH		1PC
8	FLOOR PROTECTOR φ28mm		2PCS
9	BOLT 3 1/4"x2"		2PCS
10	FINIAL BASE		2PCS

ASSEMBLY INSTRUCTION



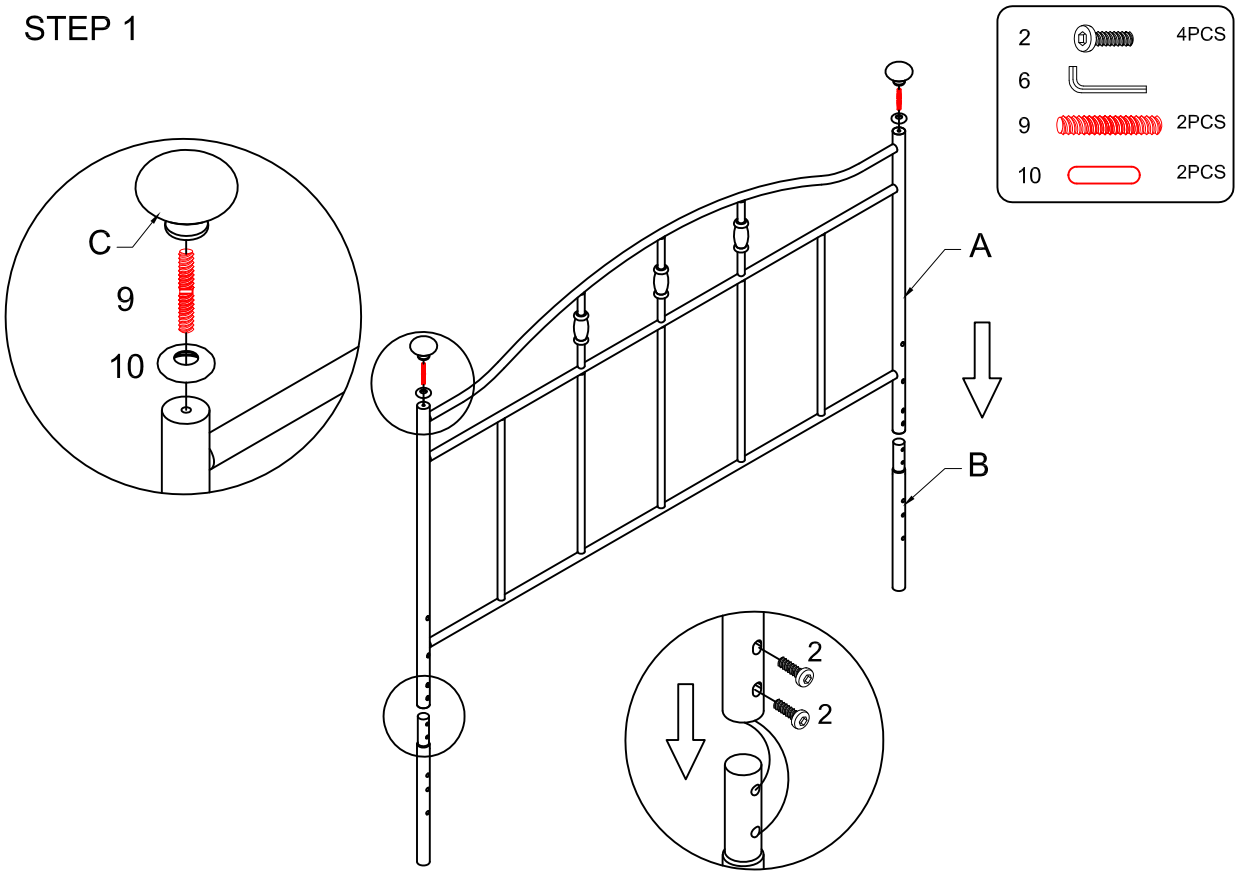

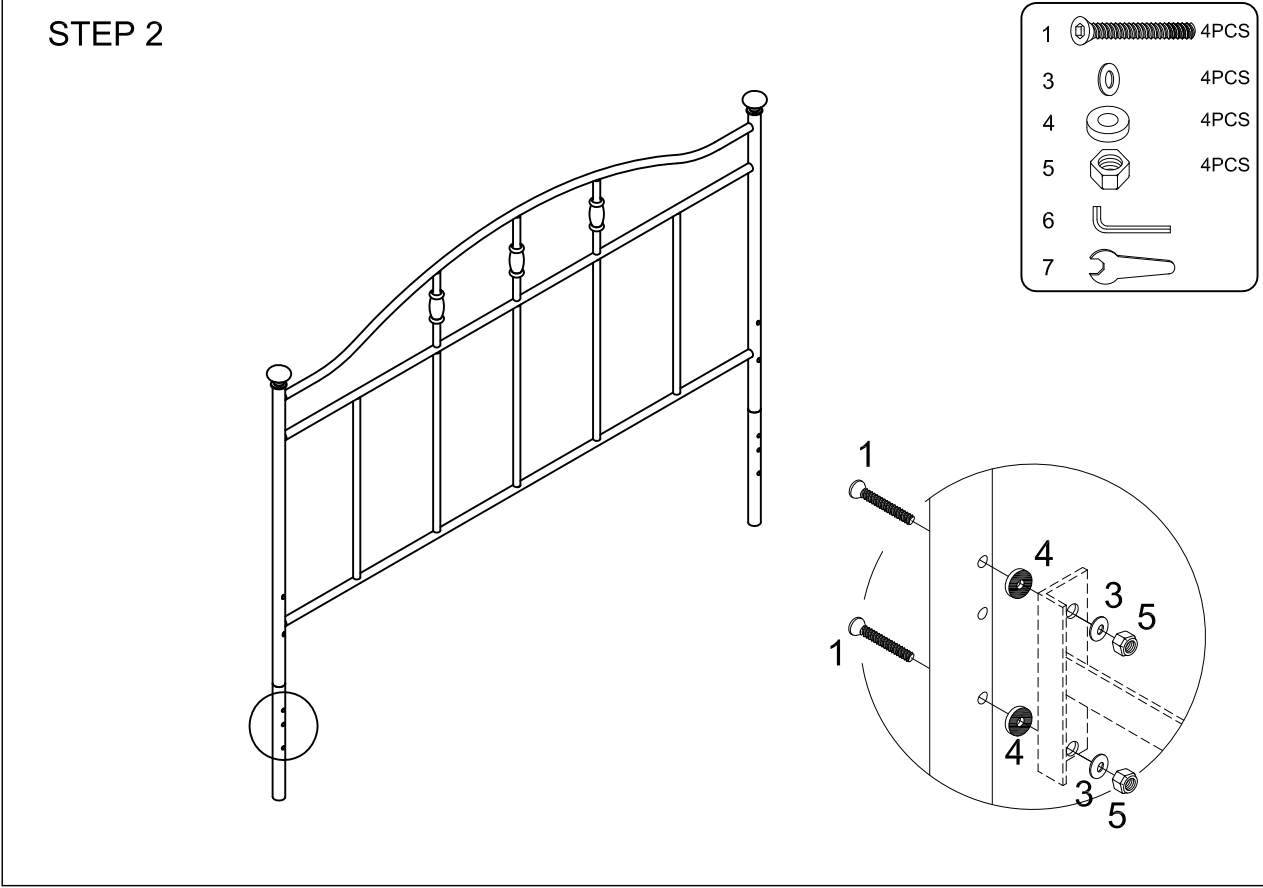


STEP 1



STEP 2



STEP 3

1		4PCS
3		4PCS
4		4PCS
5		4PCS
6		
7		
8		2PCS

