
WLIVE



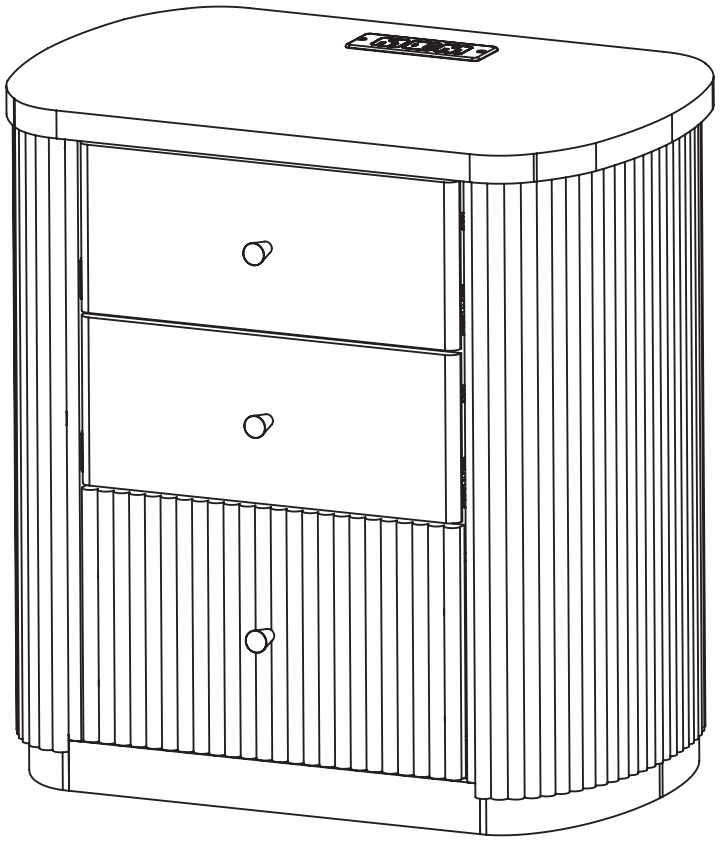

V5.1.0


ACTG046

Night Stand

IMPORTANT INFORMATION
READ CAREFULLY.
KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

Please read the following instruction carefully and use the product accordingly.
Please keep this manual and hand it over when you transfer the product.
This summary may not include every detail of all variations and considered steps.
Please contact us when further information and help are needed.

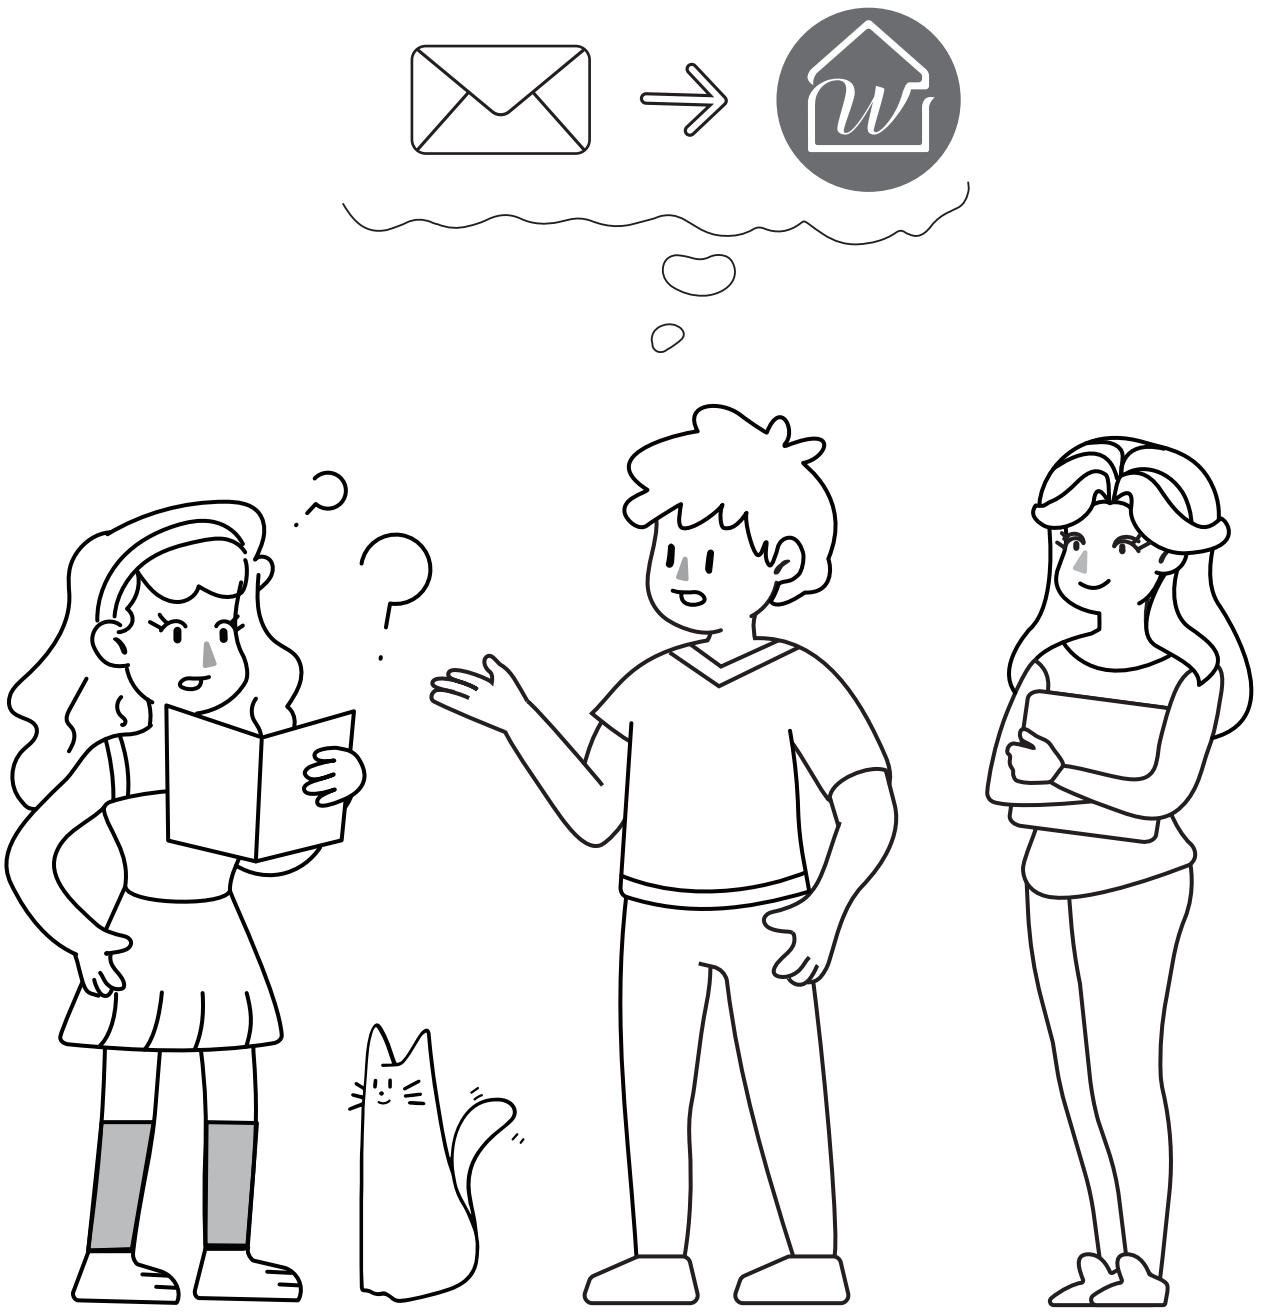

NOTES

Please follow the assembly instructions precisely and only use the product as intended.

If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.Please follow the assembly instructions precisely and only use the product as intended.

Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur;
Please contact us for assistance and replacement.

It is suggested you regularly check the products bolts and connections to ensure safe use.

Assemble the item on a soft flat and clean surface to avoid scratches and damage.


It is recommended that two people assemble this product.During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.

WARNINGS

During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.


Avoid sharp objects or corrosive chemicals to prevent damage to the product.

Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.

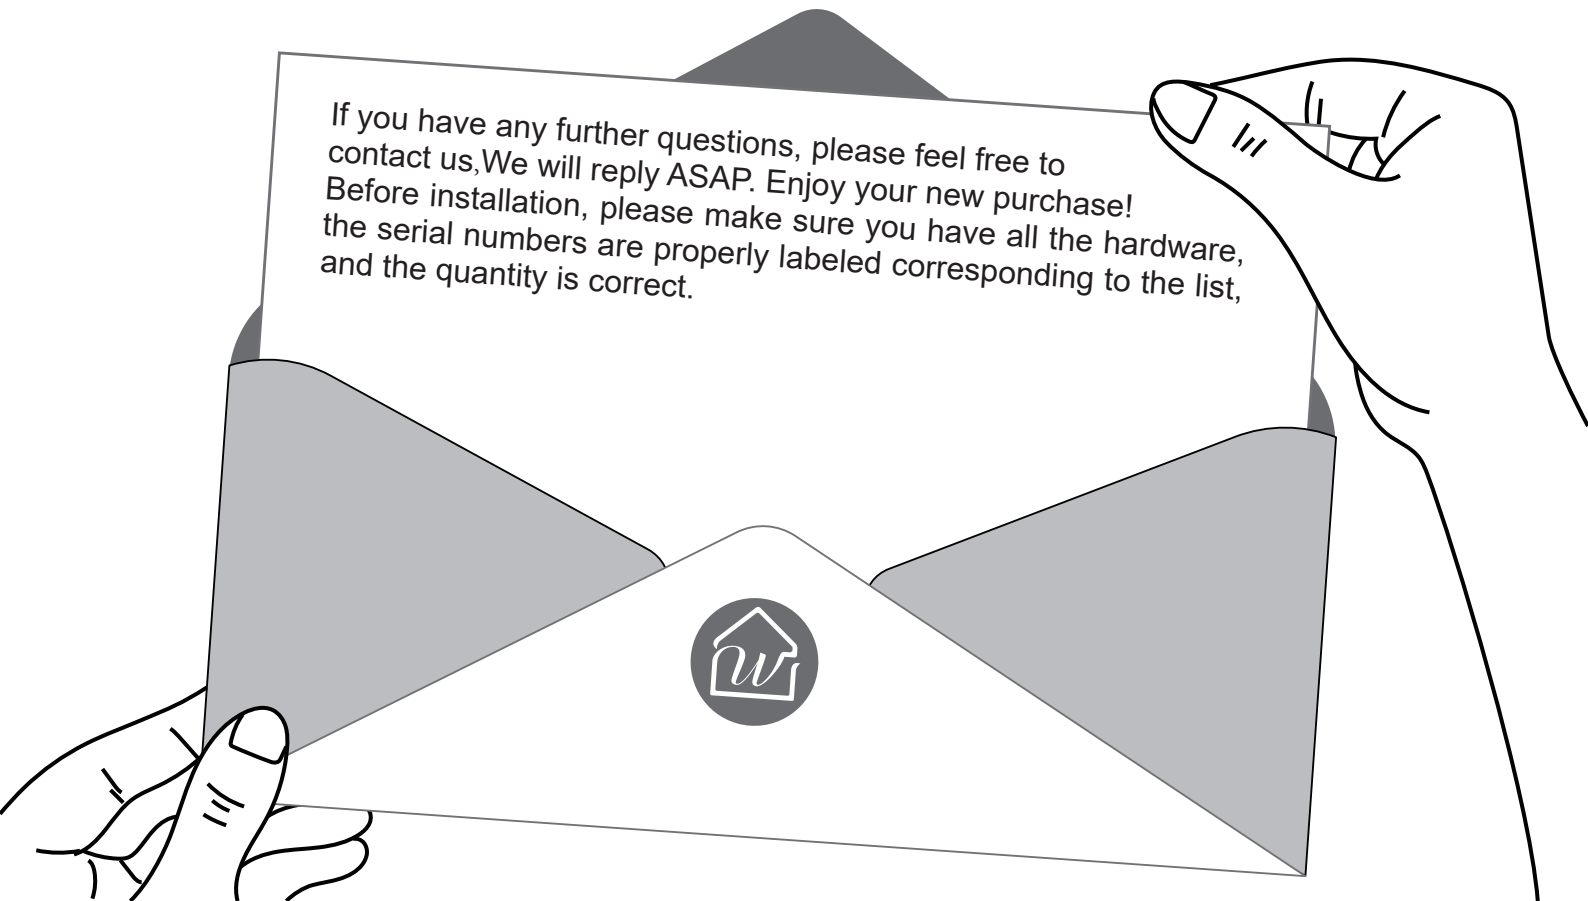


INSTRUCTIONS


❶

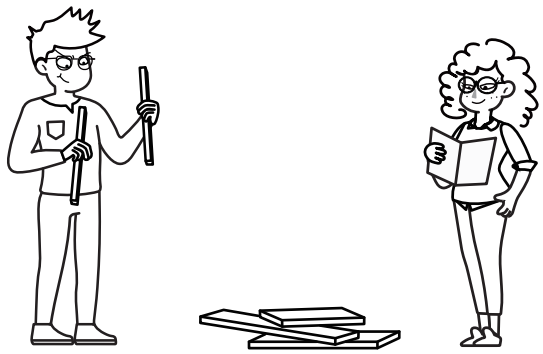

❷

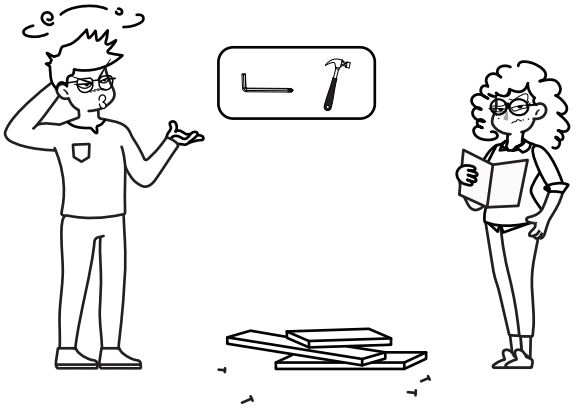


❸

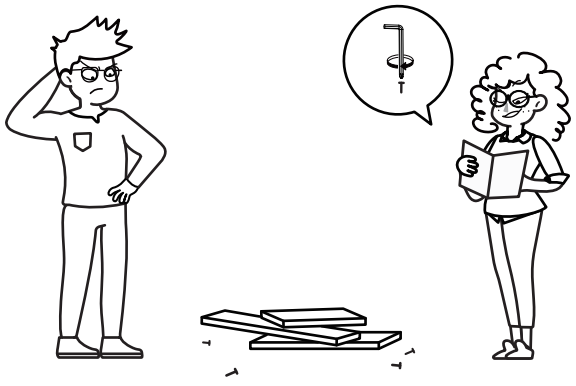

❹




❺

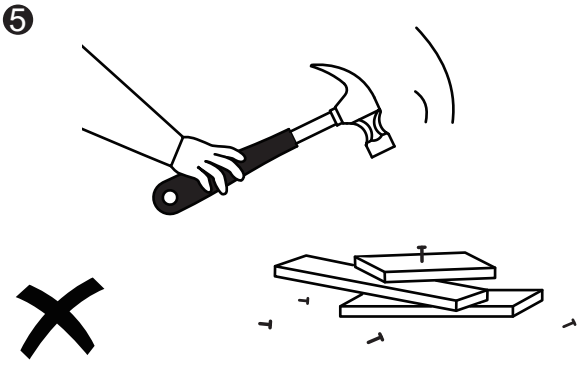





❻

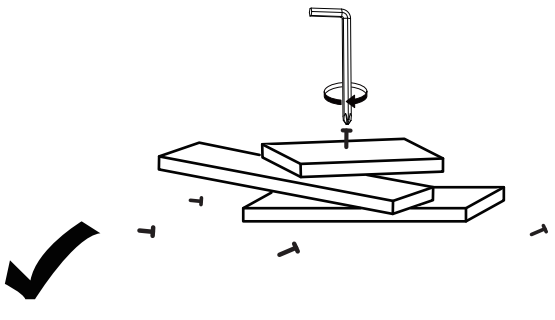



EXPLODED DRAWING

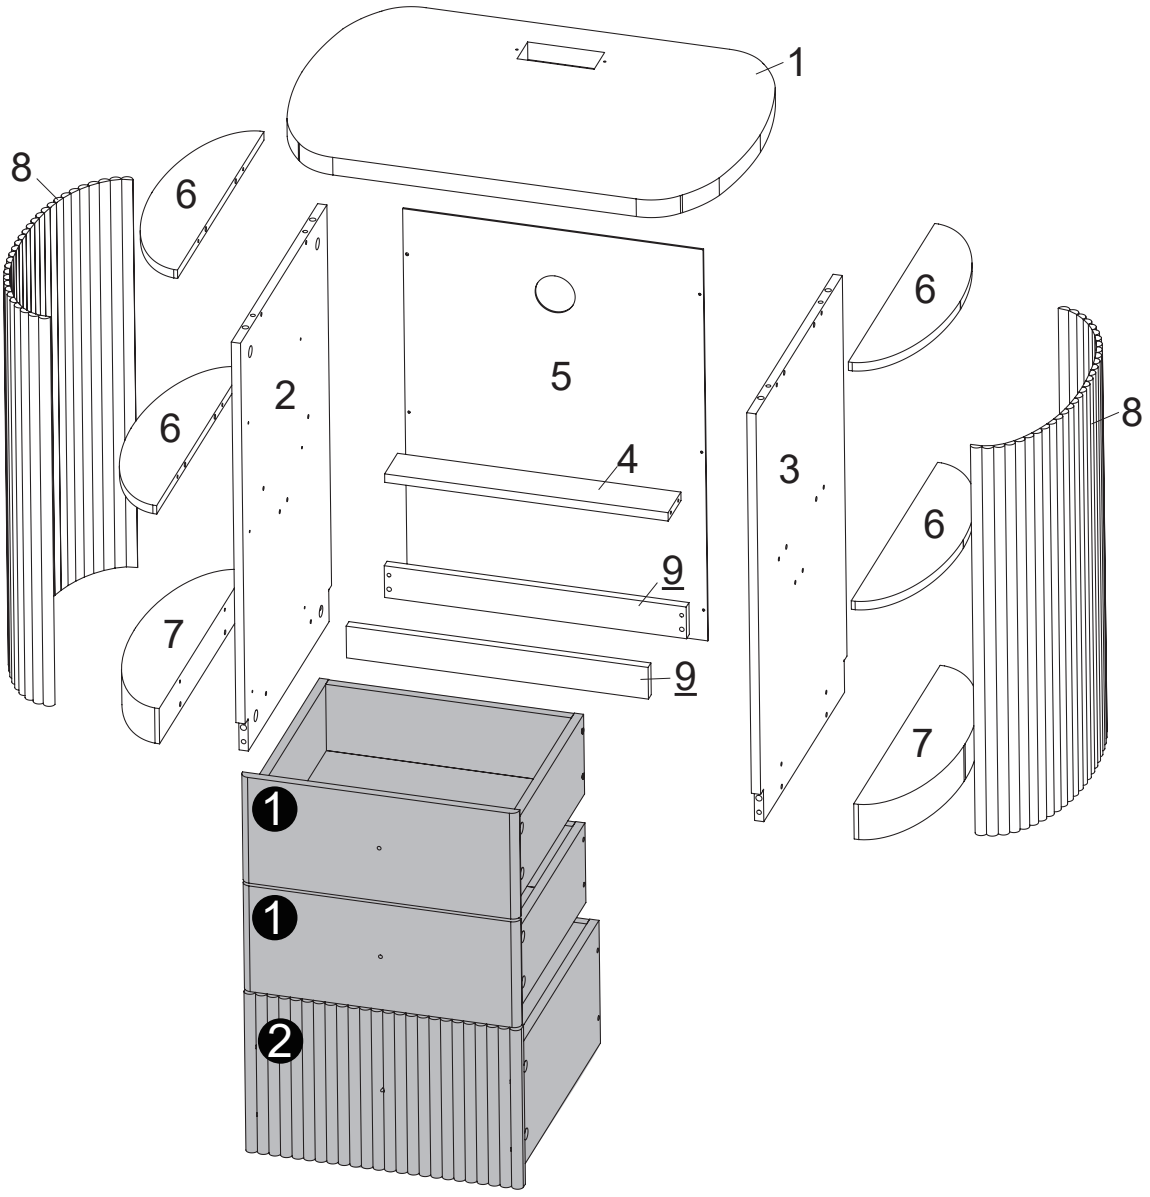

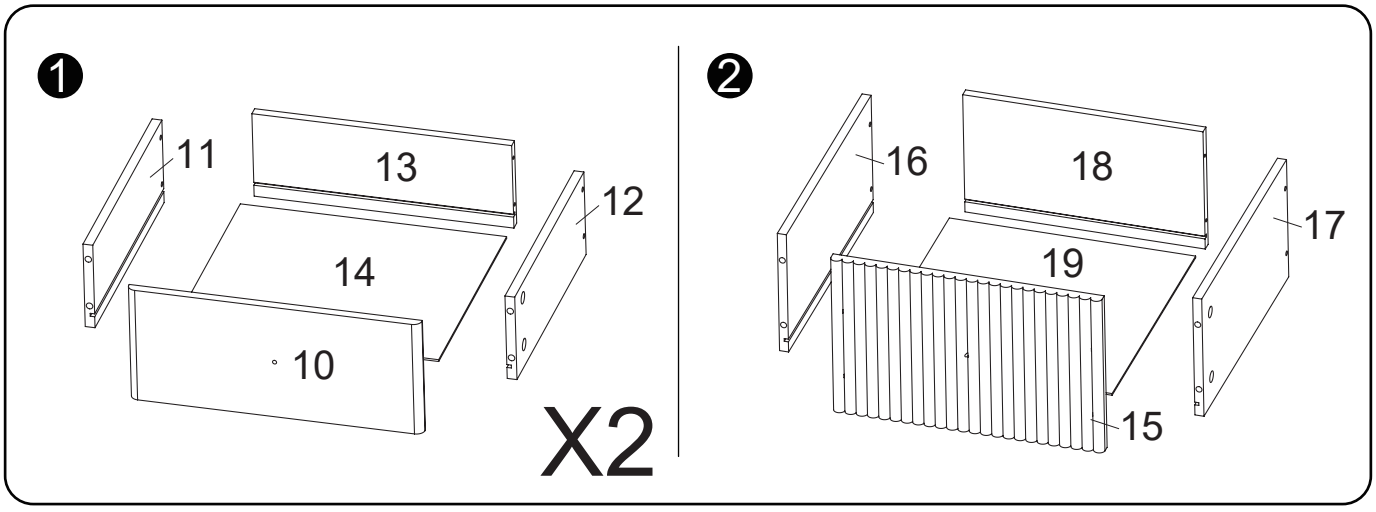


PARTS

A X20




B X20




C X20




D X1
Long

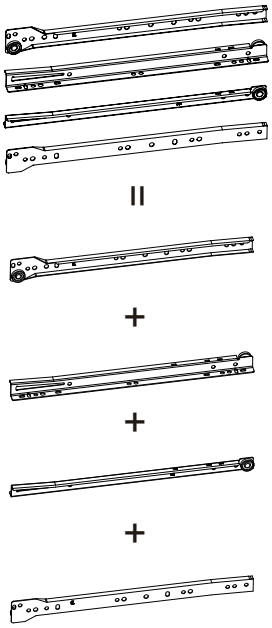

E X2
Short

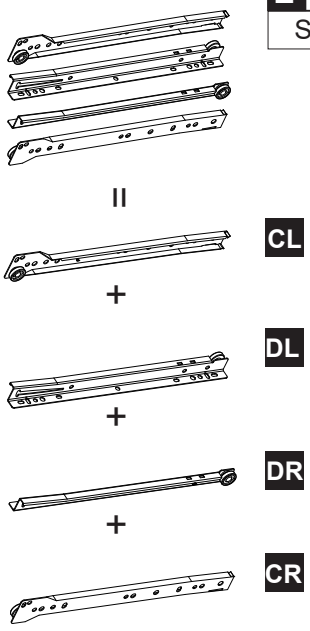


F X26
M4x11




G X28
M5x38




H X6
M4x12




I X3




J X3
M4x20



K X1



L X1



M X4





N X20



REMARK


MINIFIX POSITION

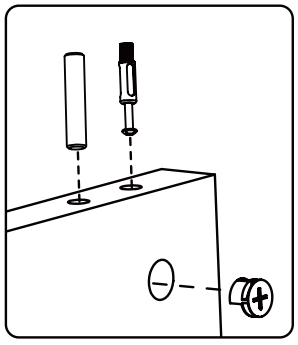

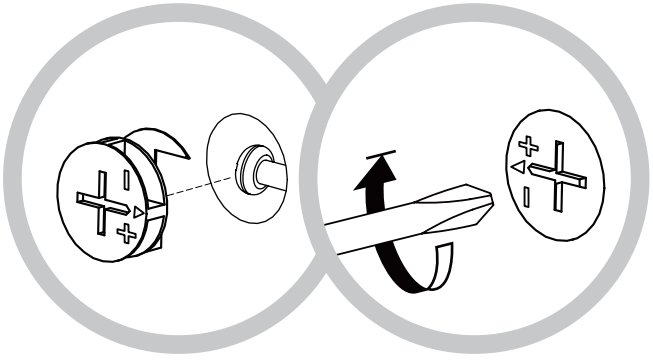

Step 1


Put a blanket under the product to avoid scratch or damage.

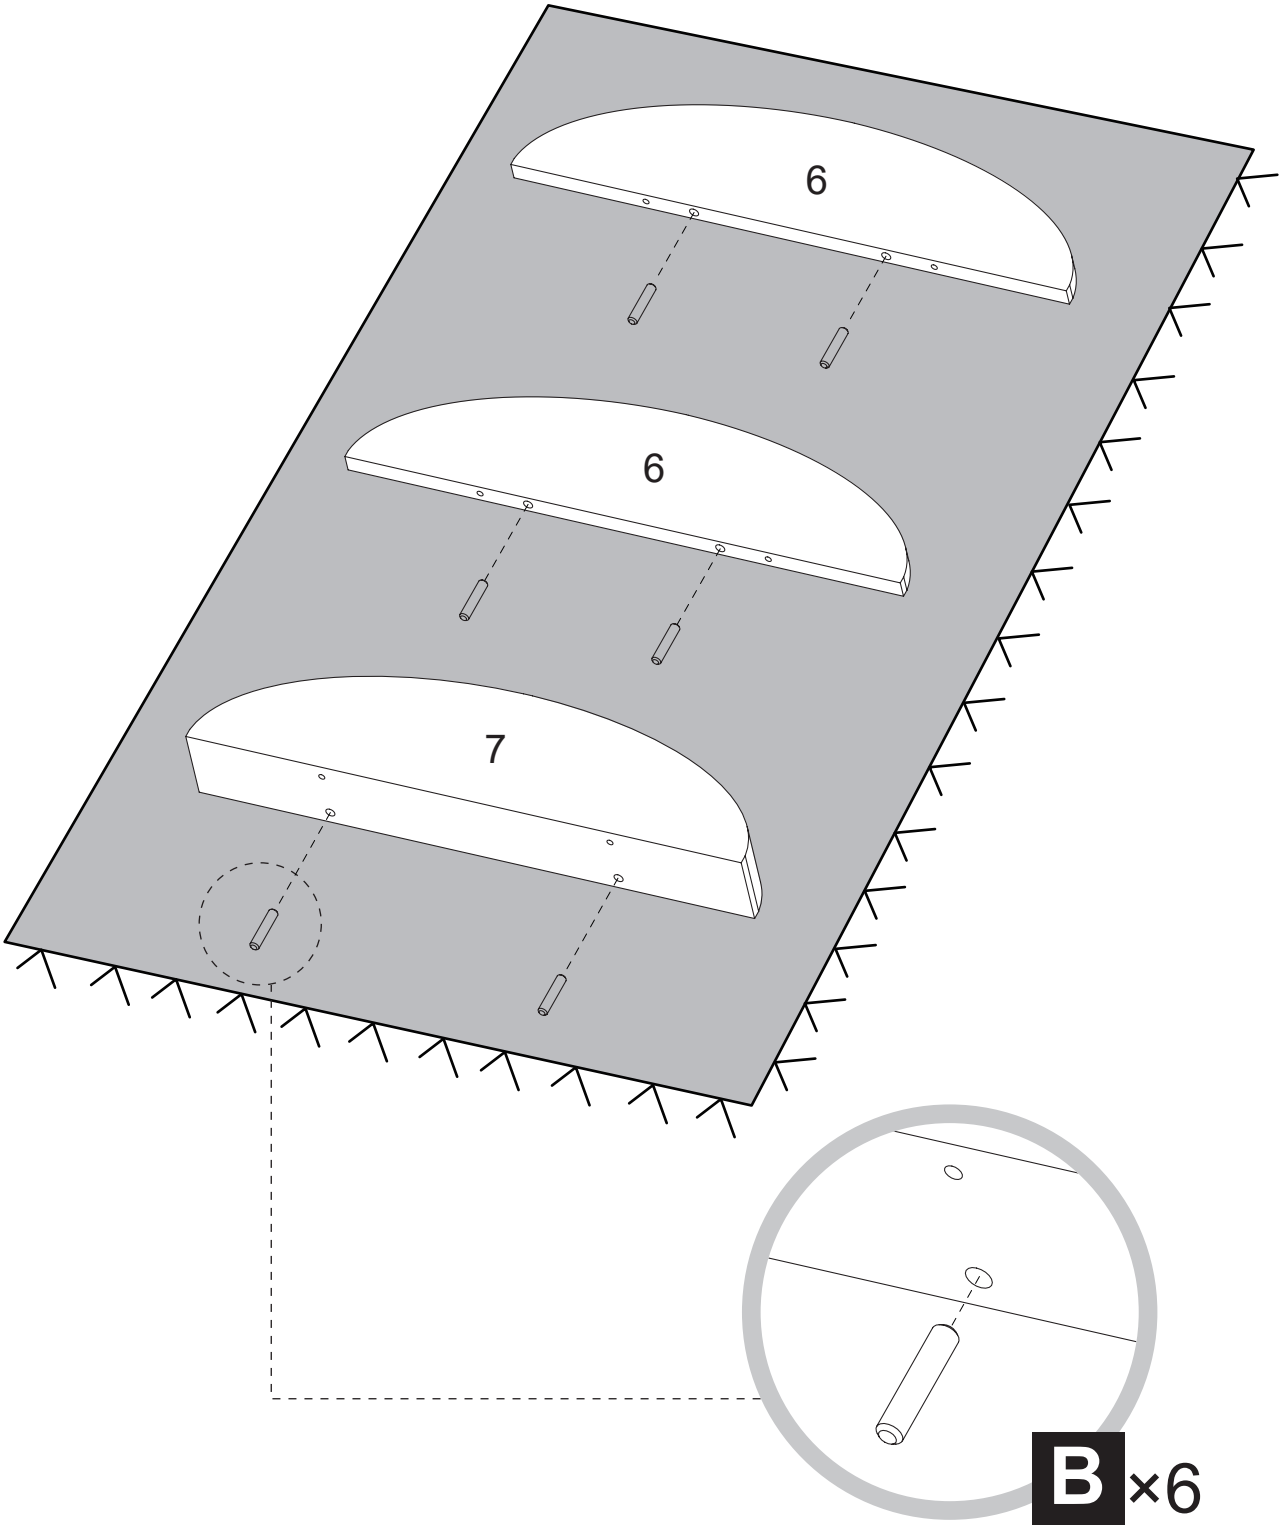


×2

Step 2


When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

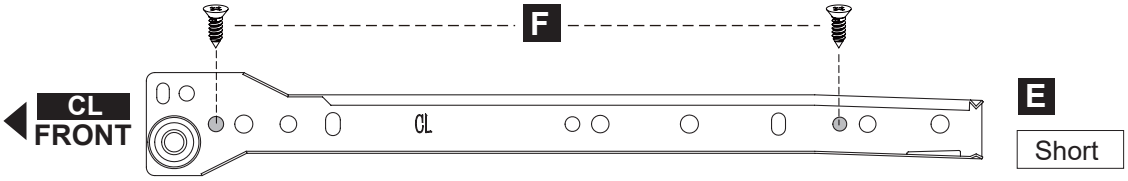


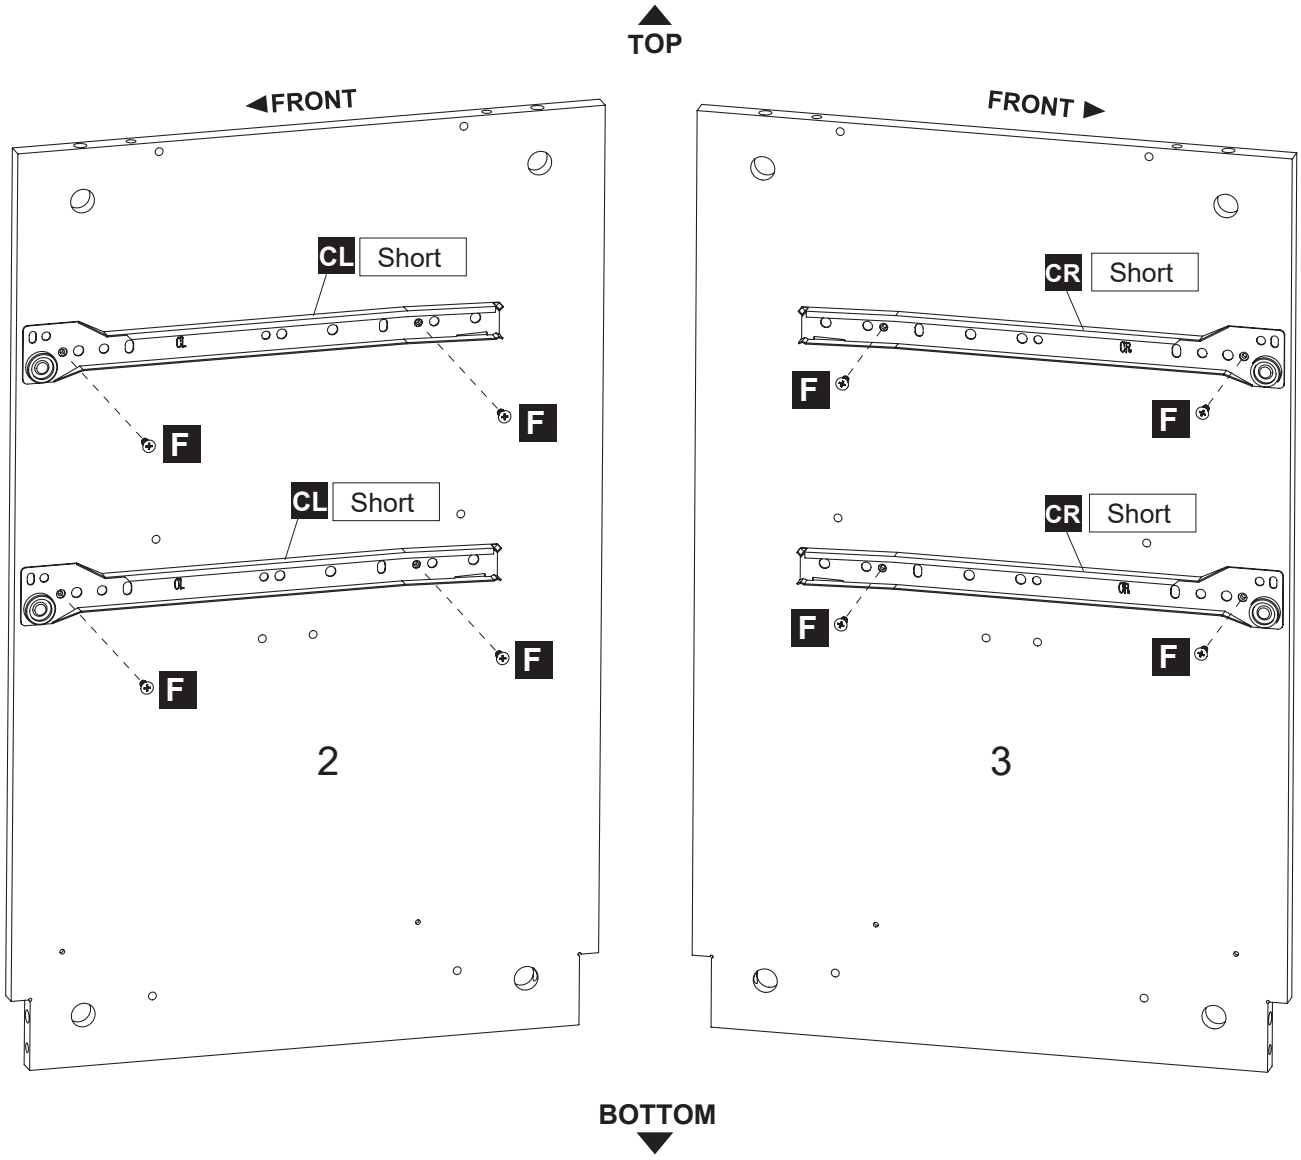

Step 3


When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

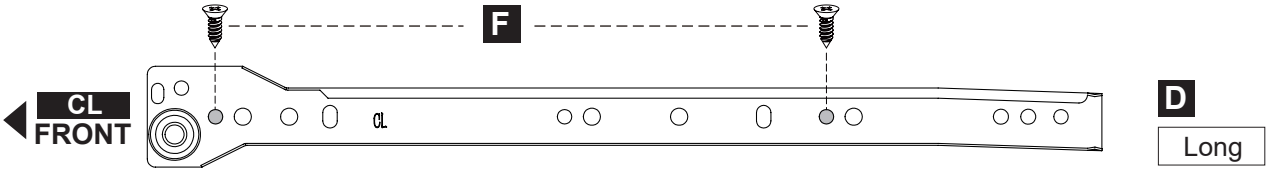

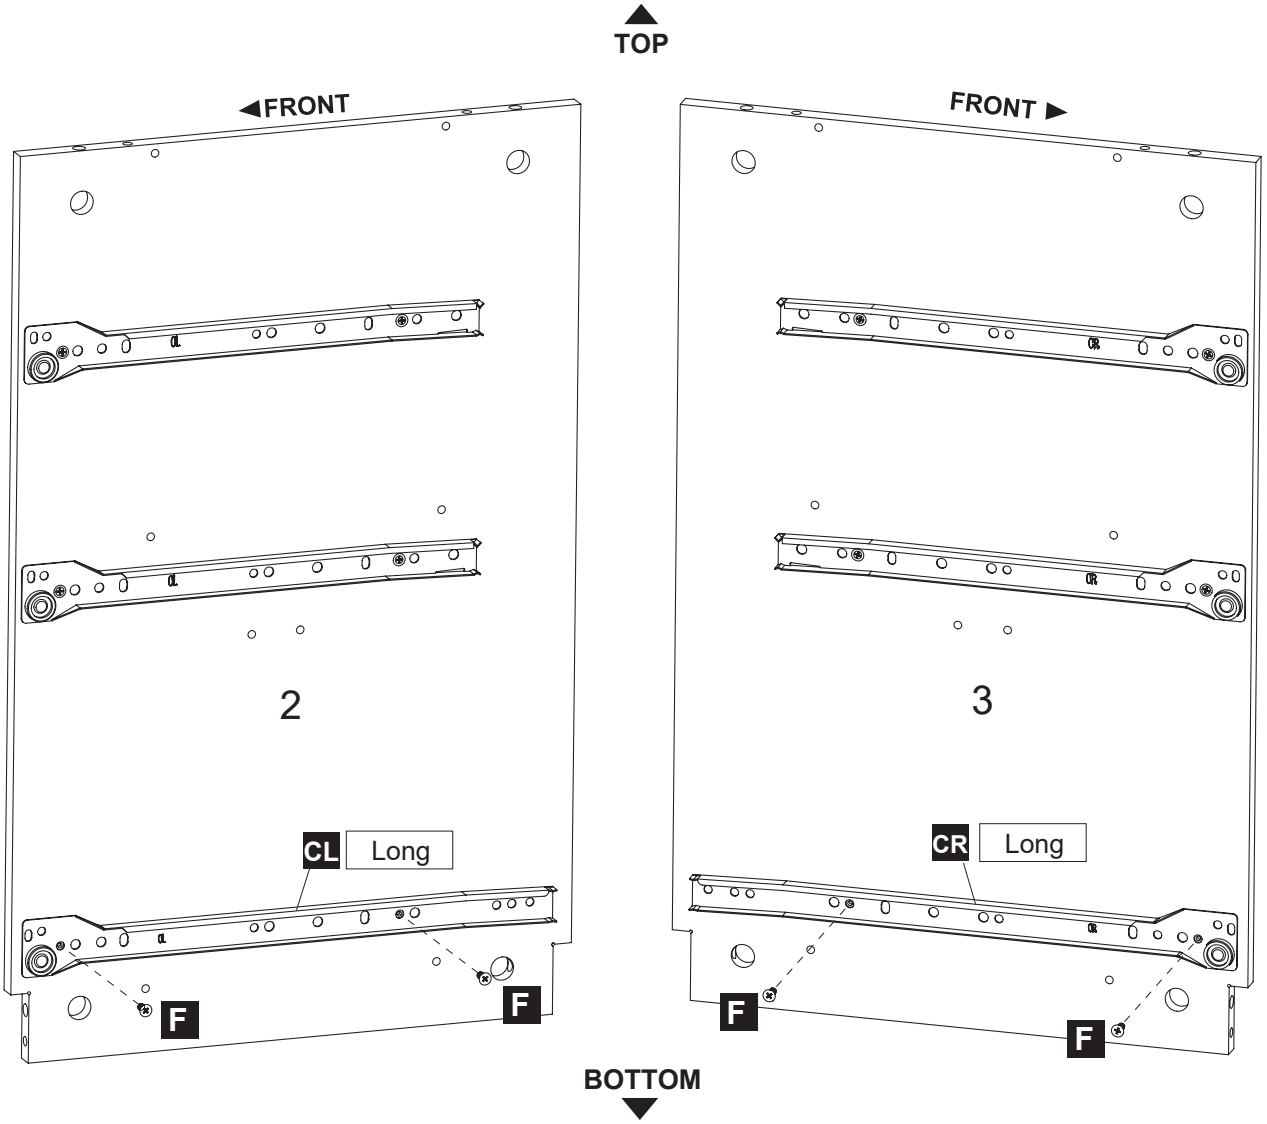


Step 4

Please fully tighten all the screws after they are in right place.

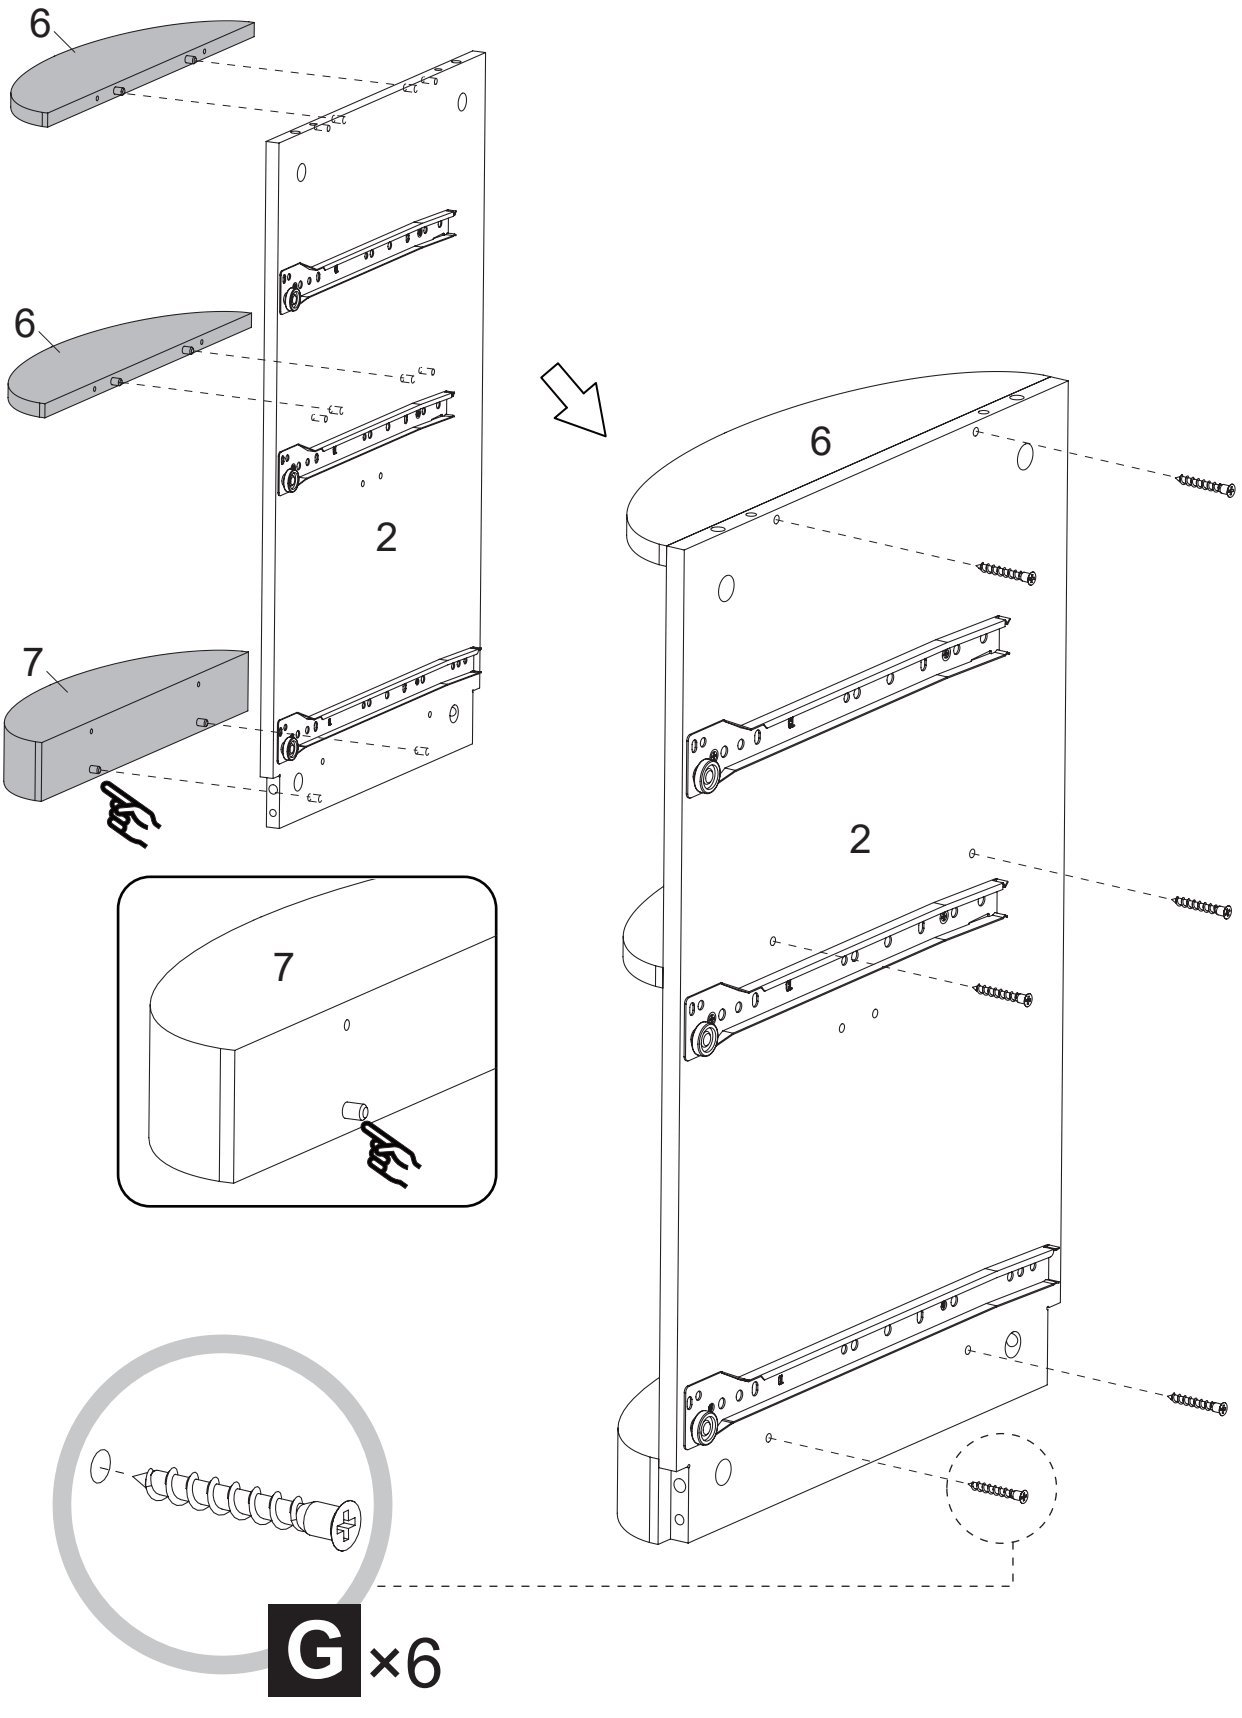


Step 5

Please fully tighten all the screws after they are in right place.

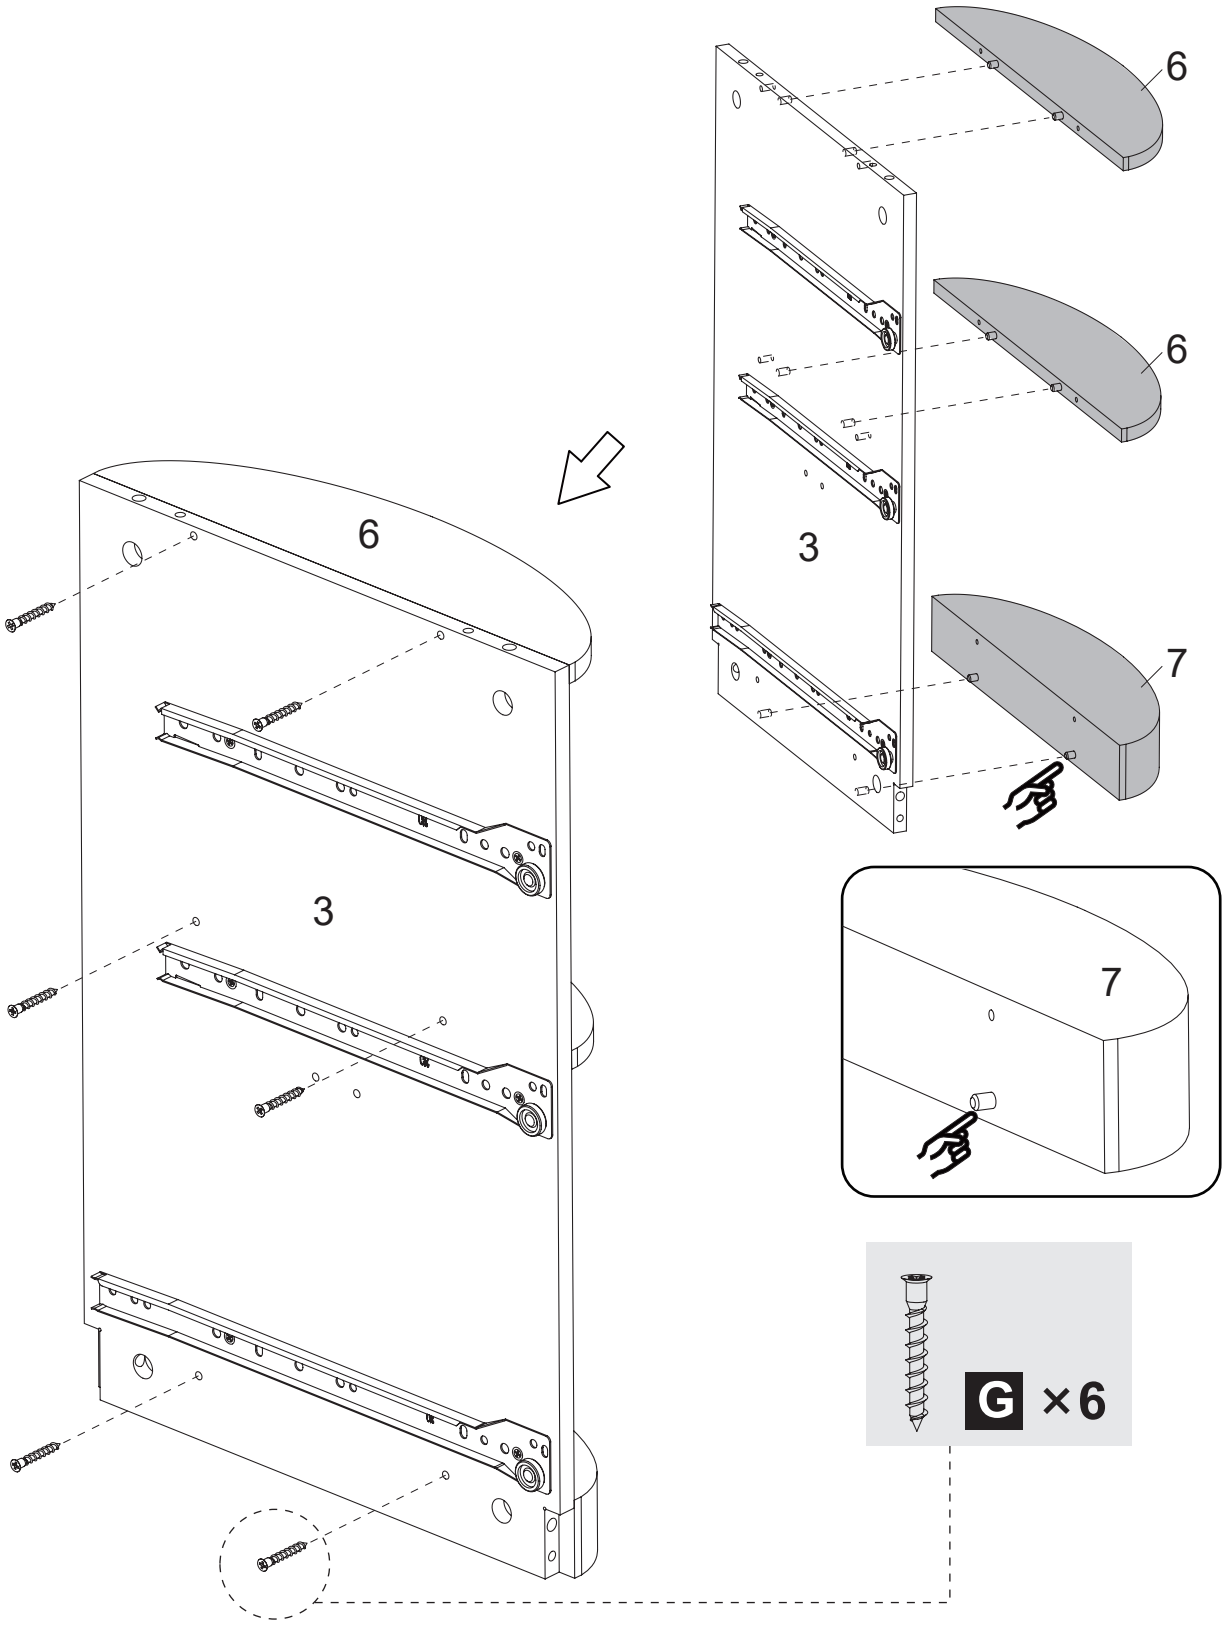


Step 6

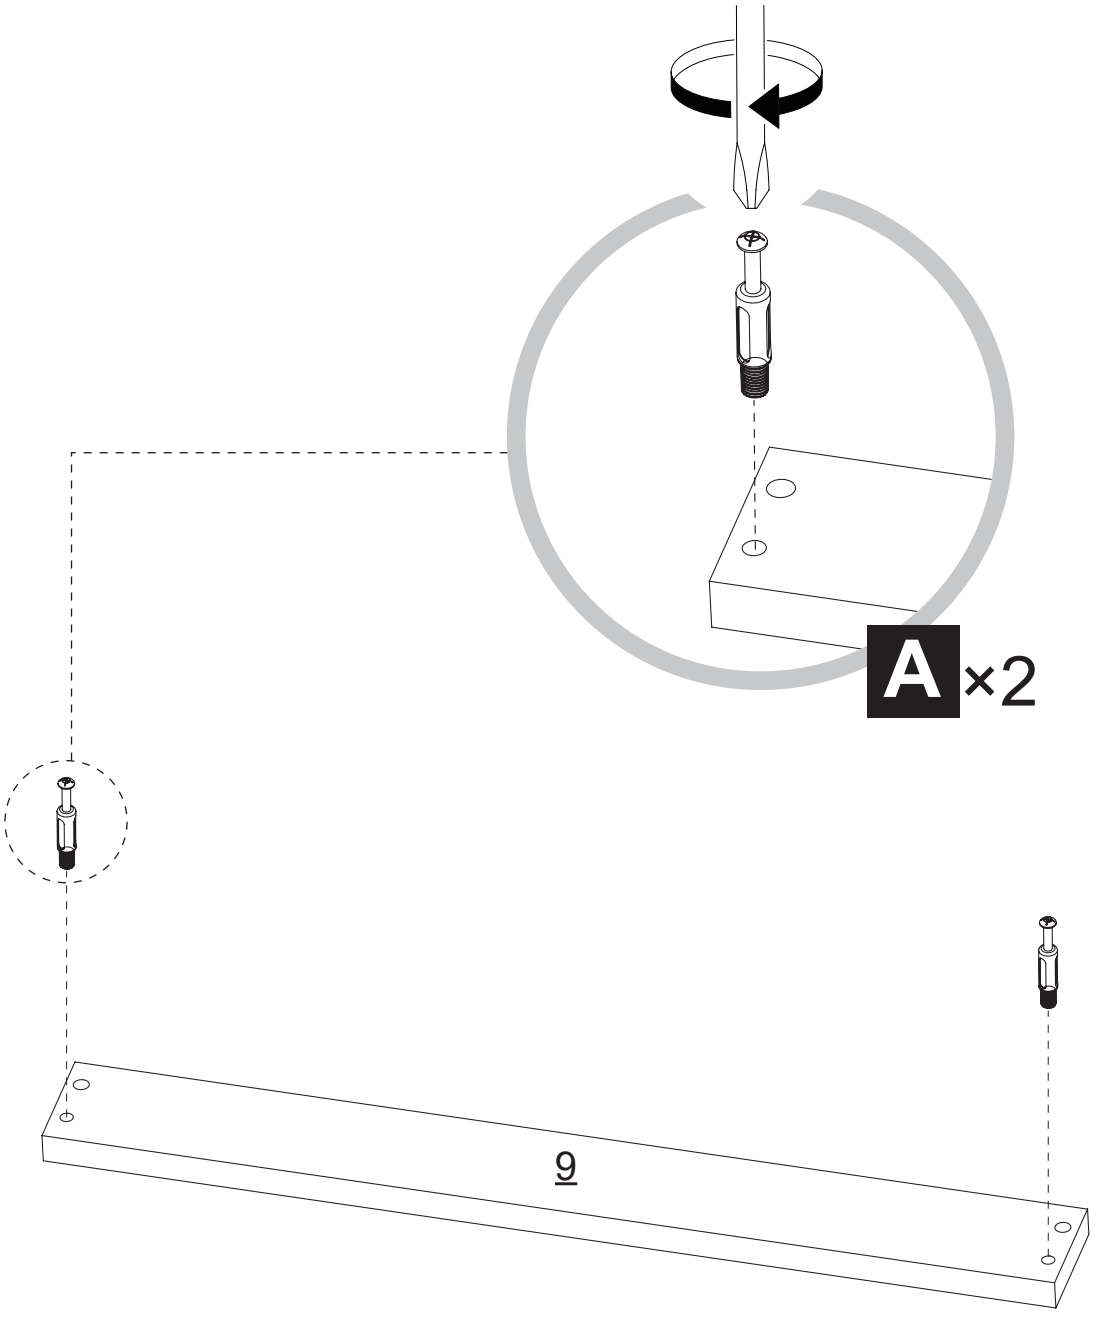


×2


Step 7

Please fully tighten all the screws after they are in right place.

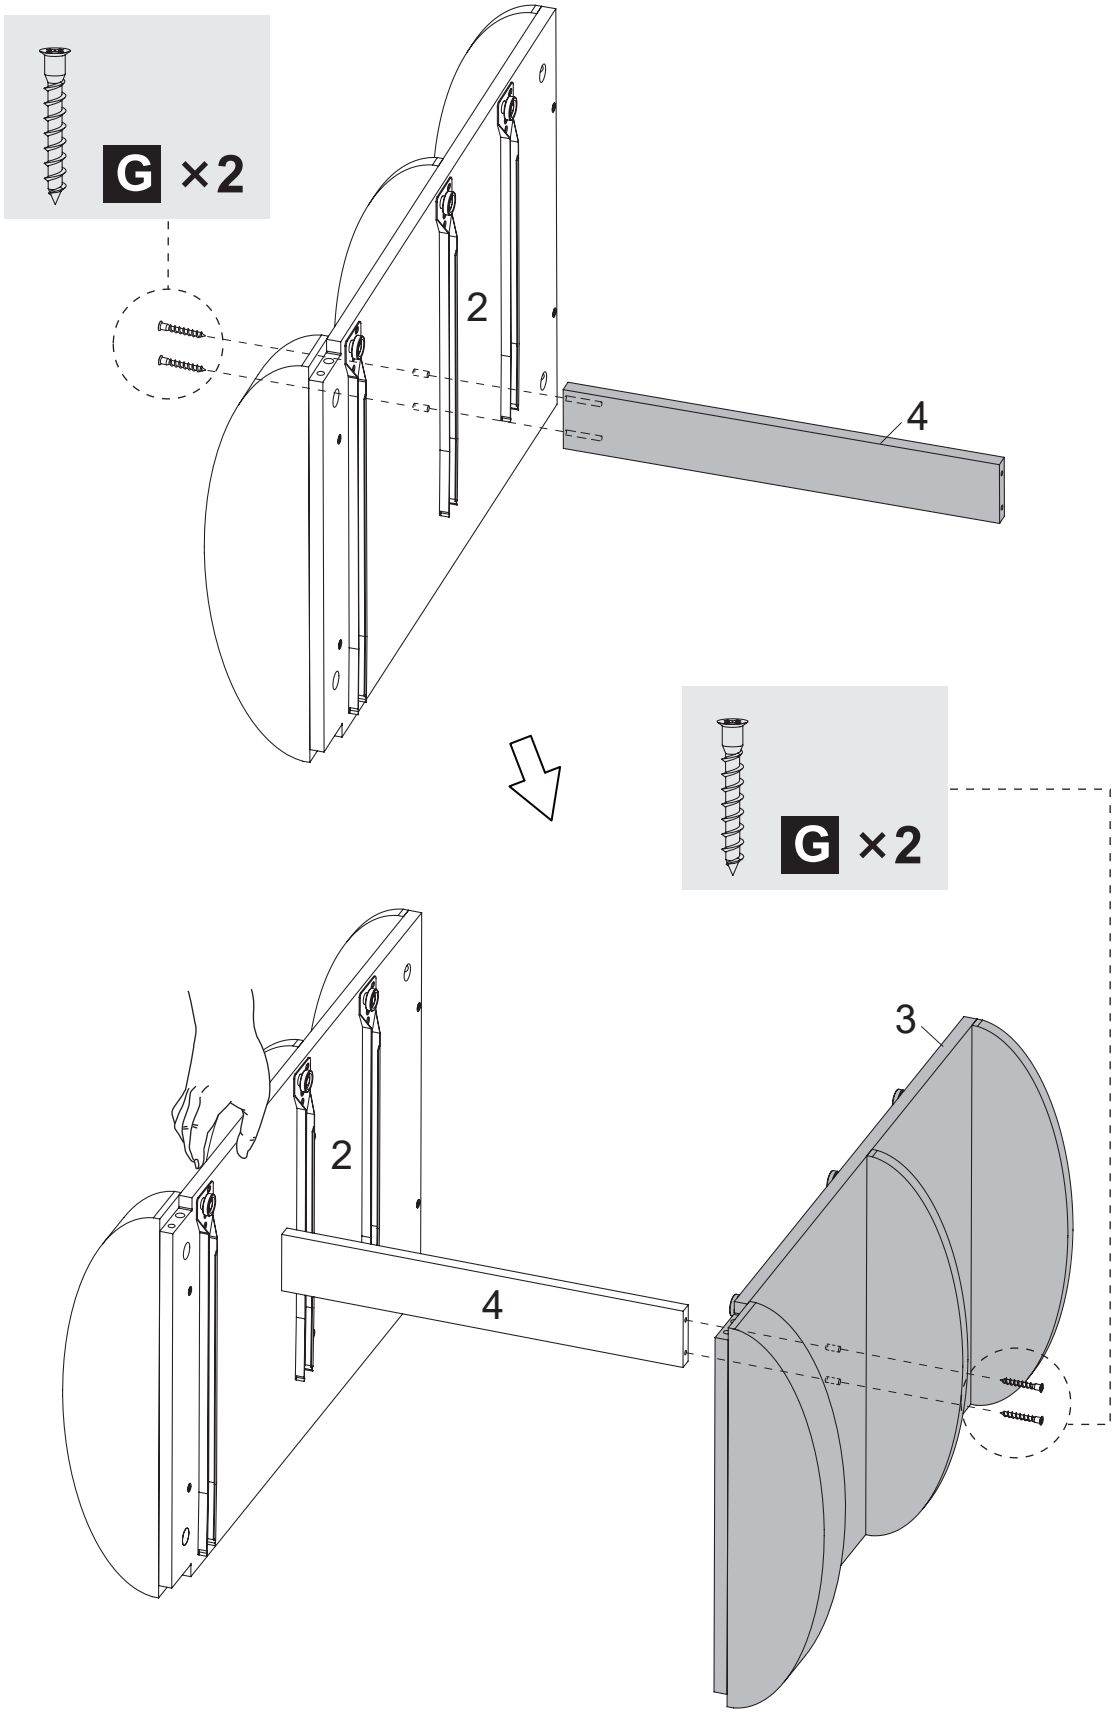


Step 8

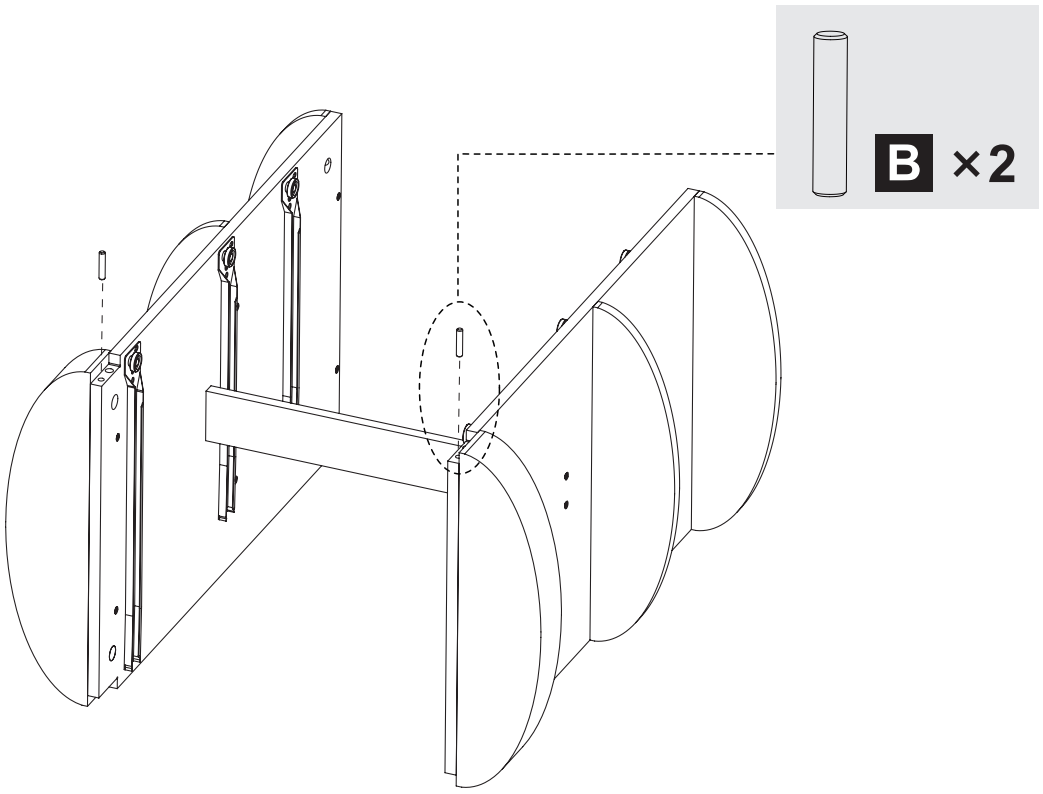

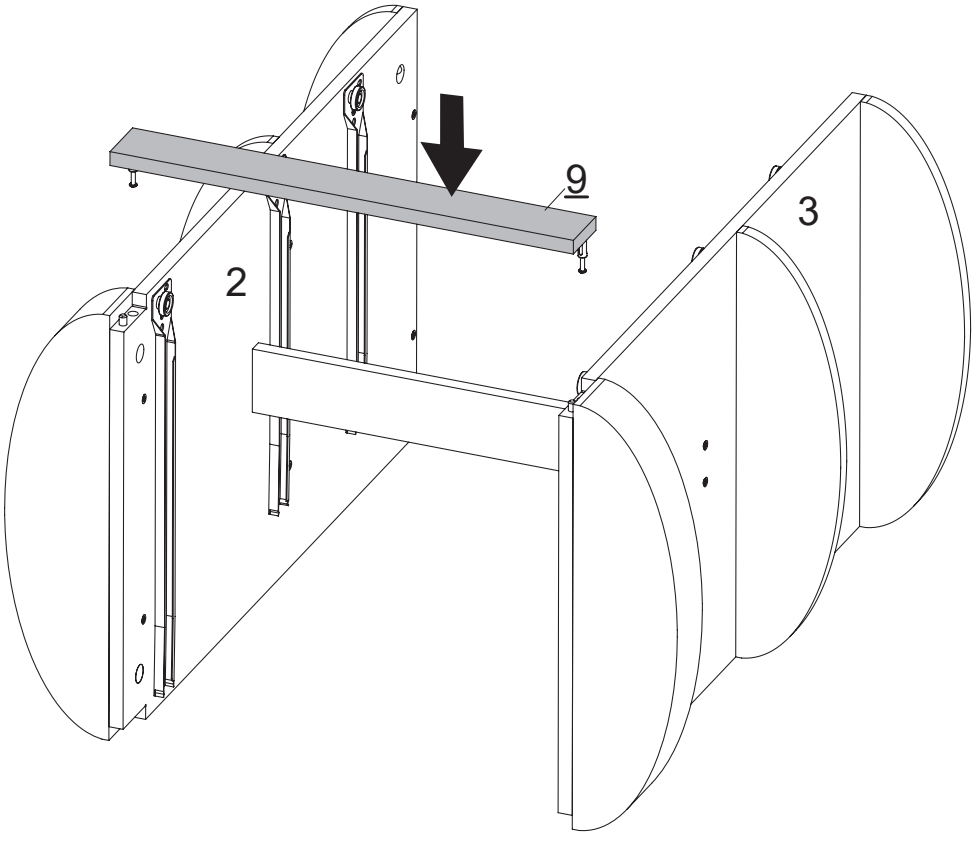



Step 9

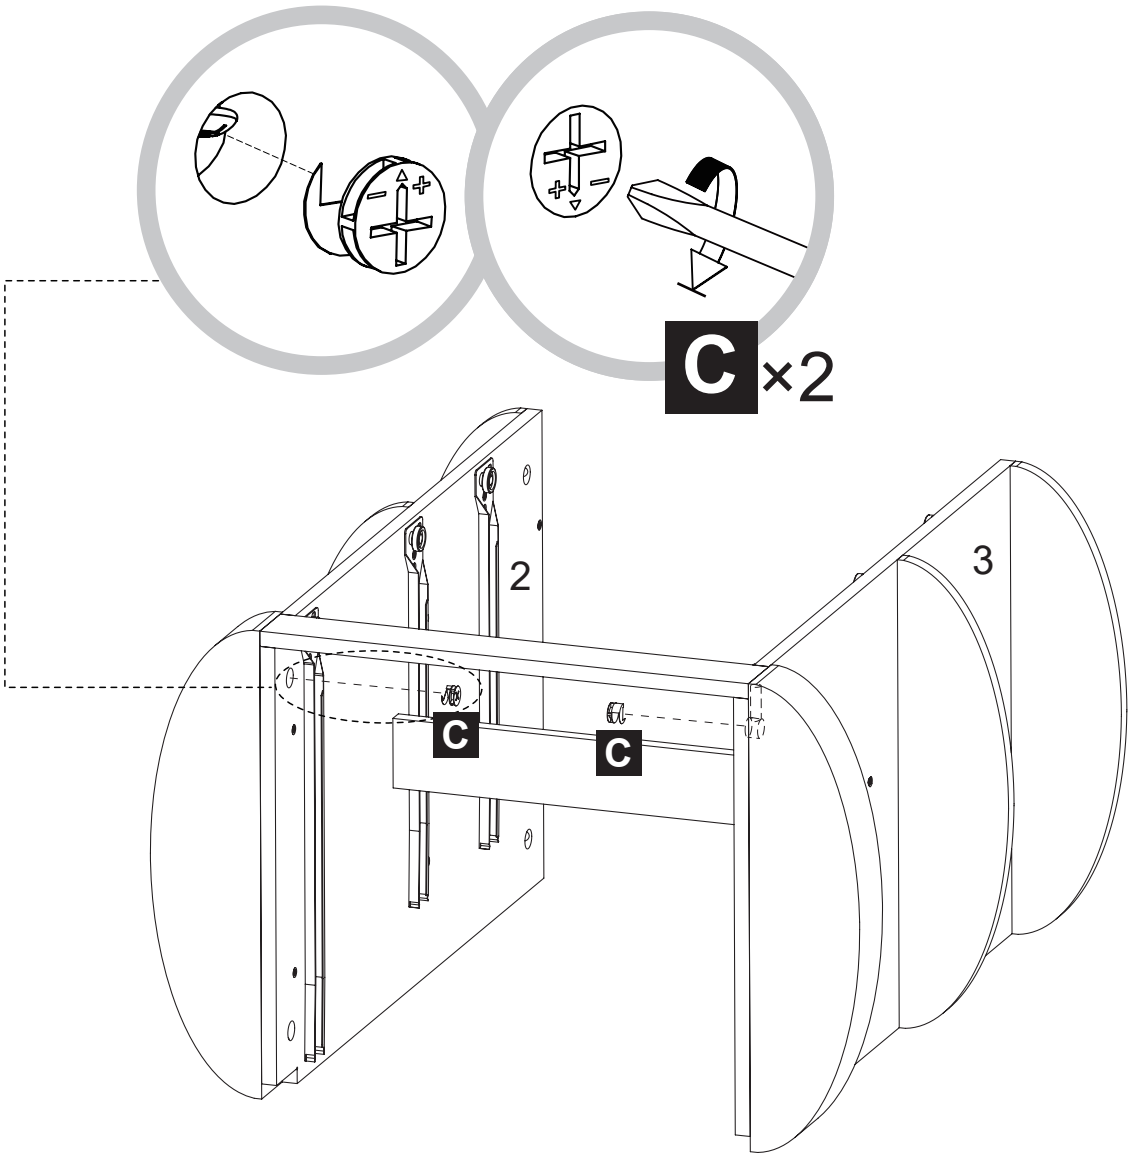


Step 10


Handle with care when turning the cabinet over.

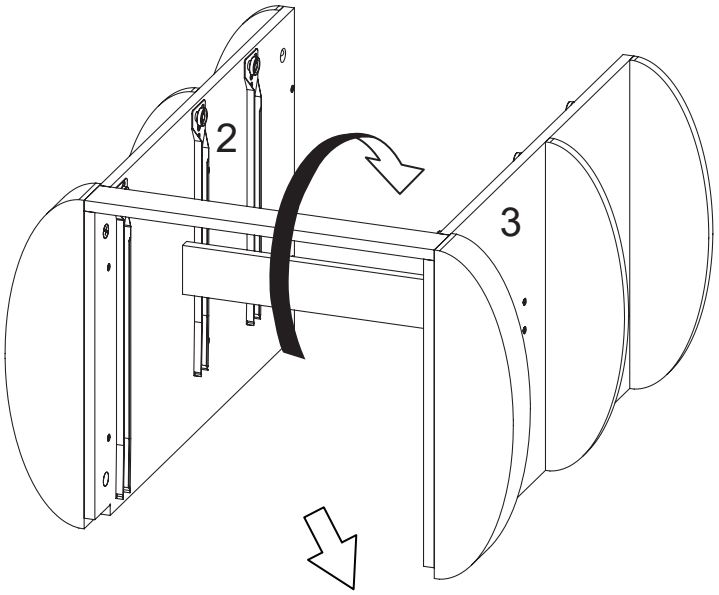


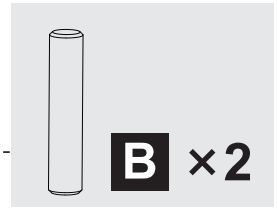

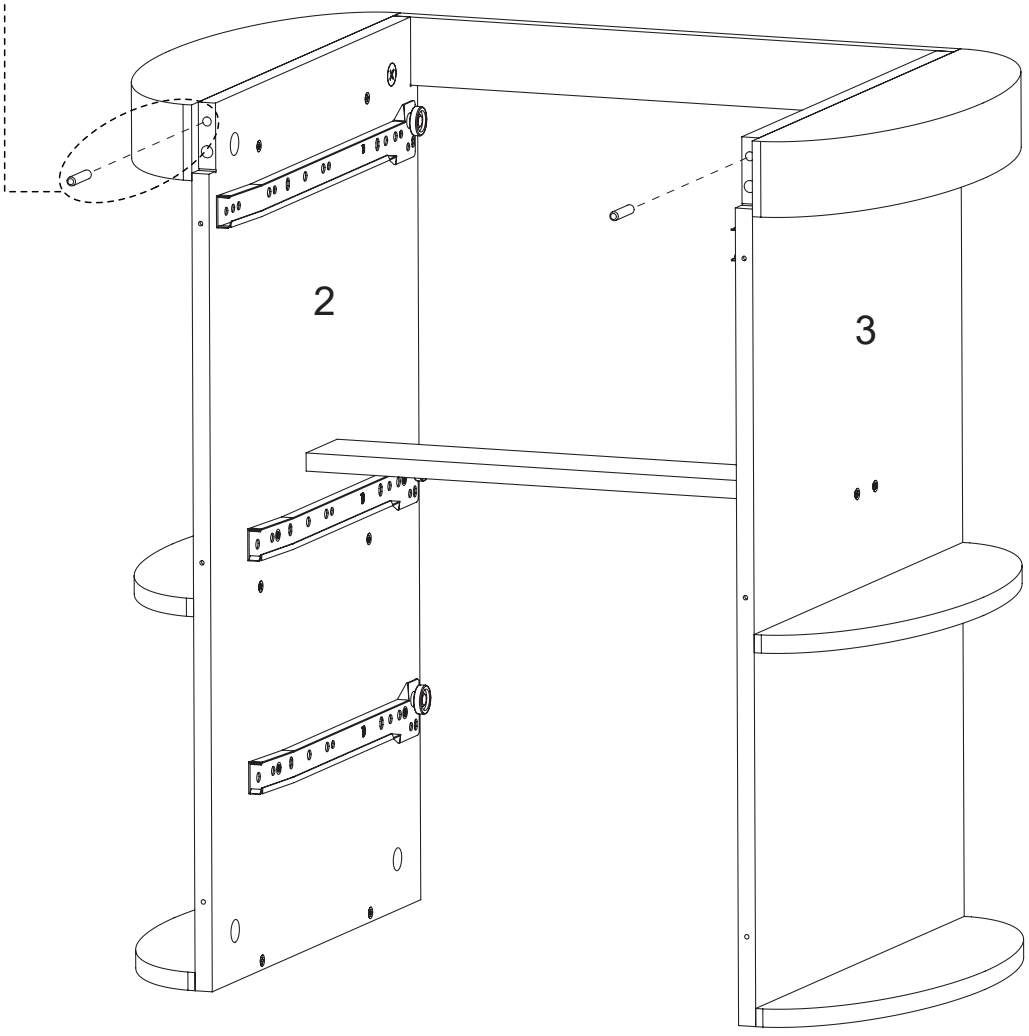


Step 11

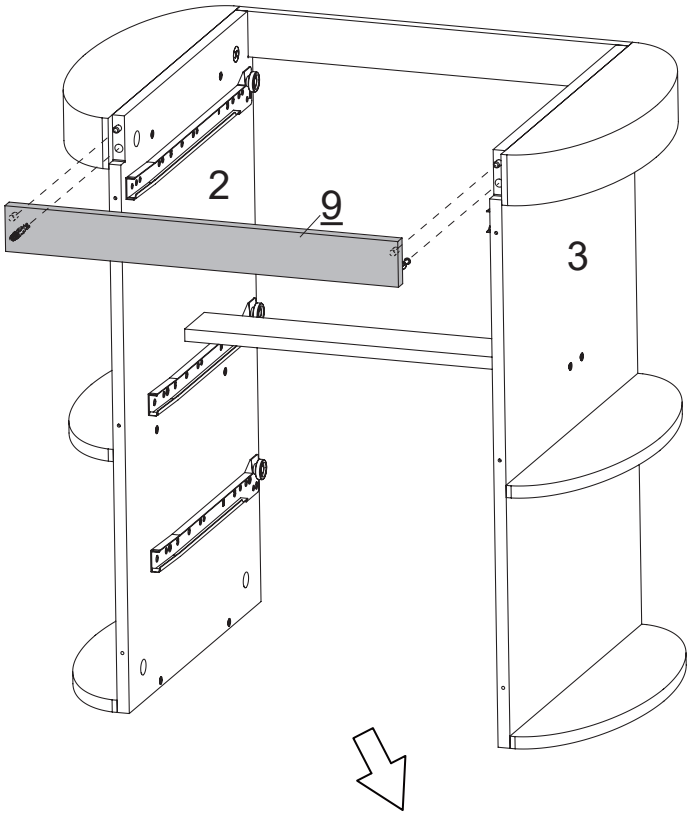


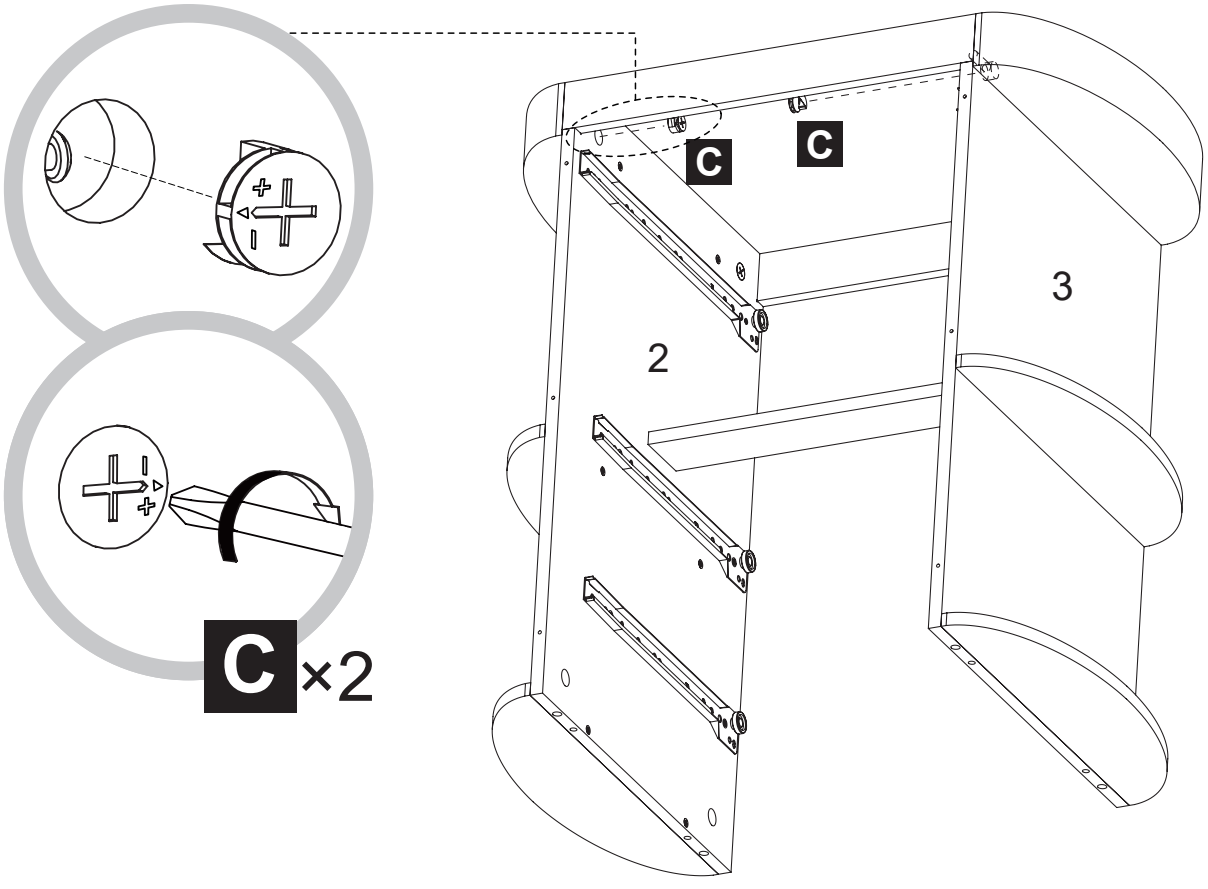


Step 12


Handle with care when turning the cabinet over.

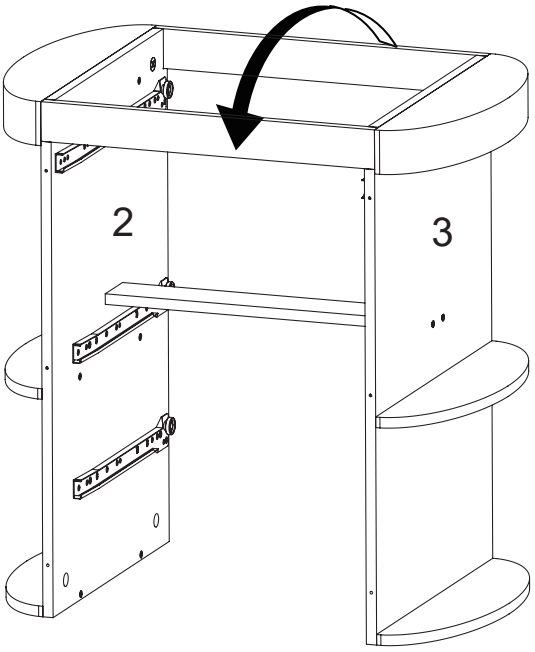

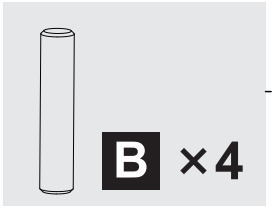


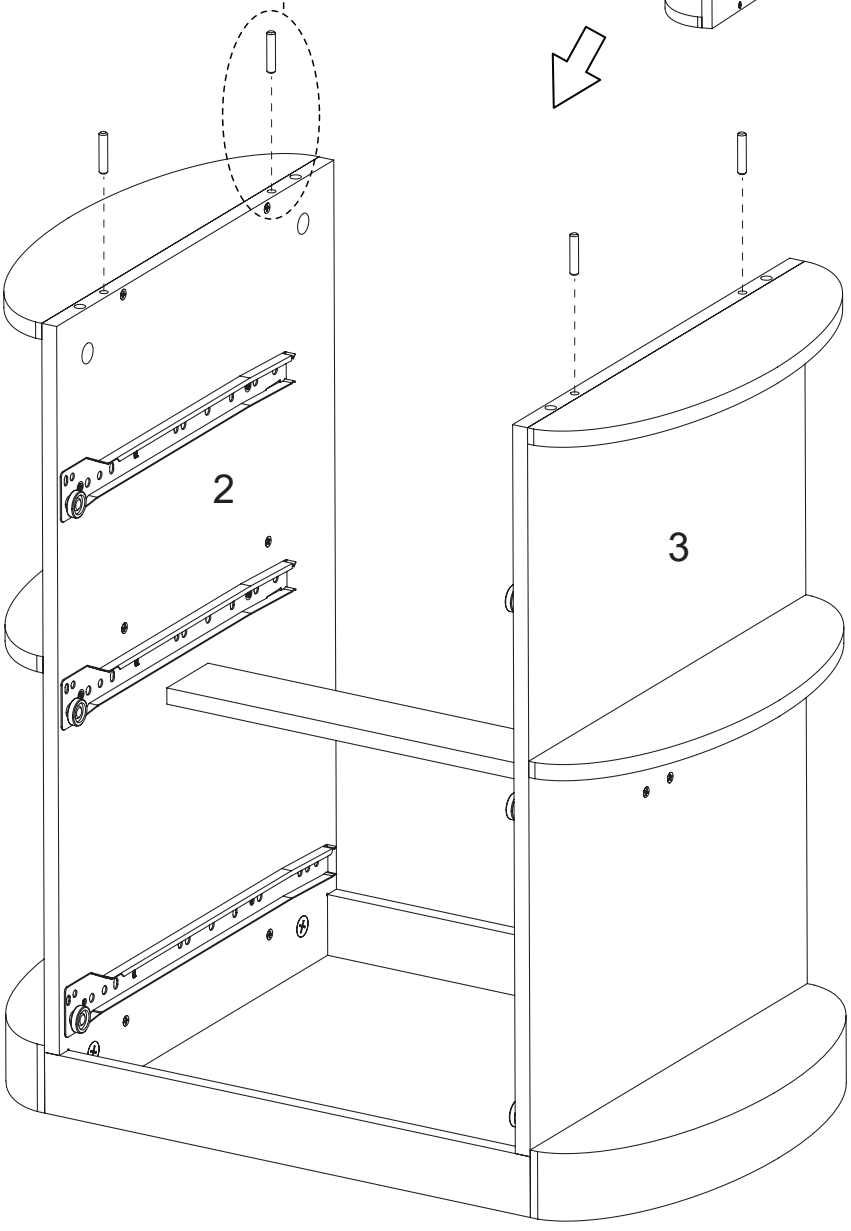


Step 13

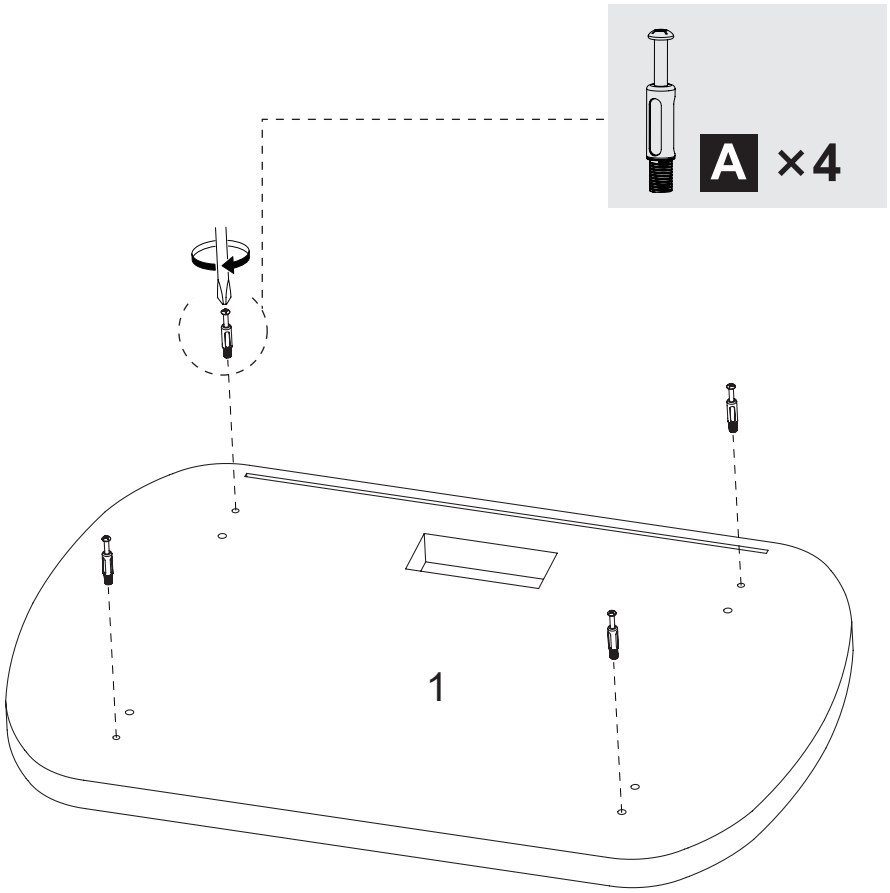


Step 14

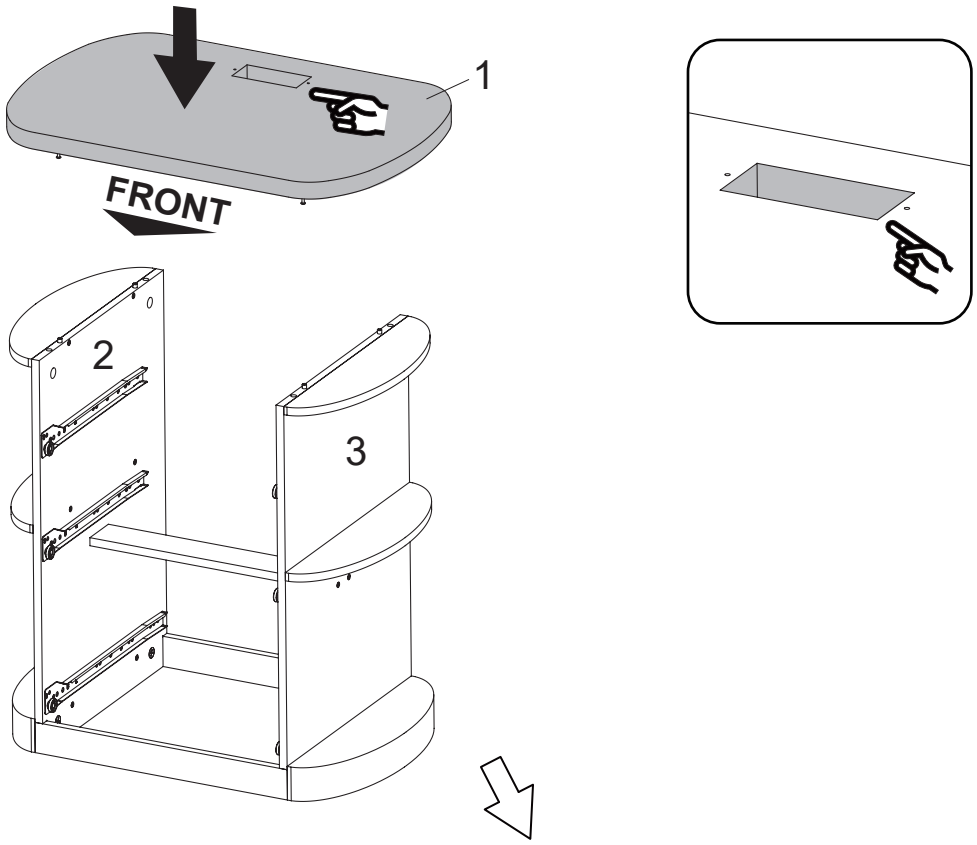

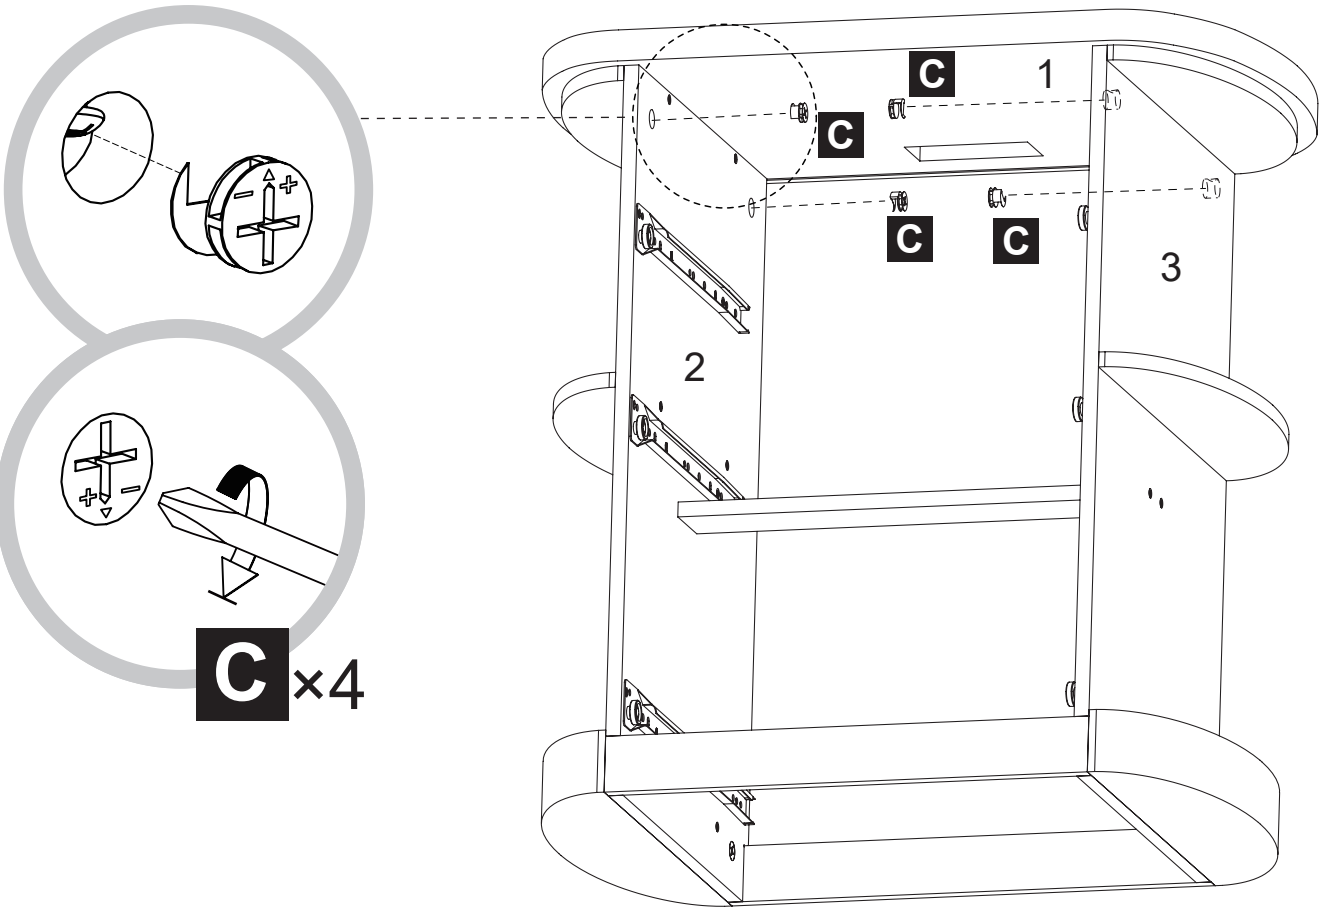


Step 15

Handle with care when turning the cabinet over.

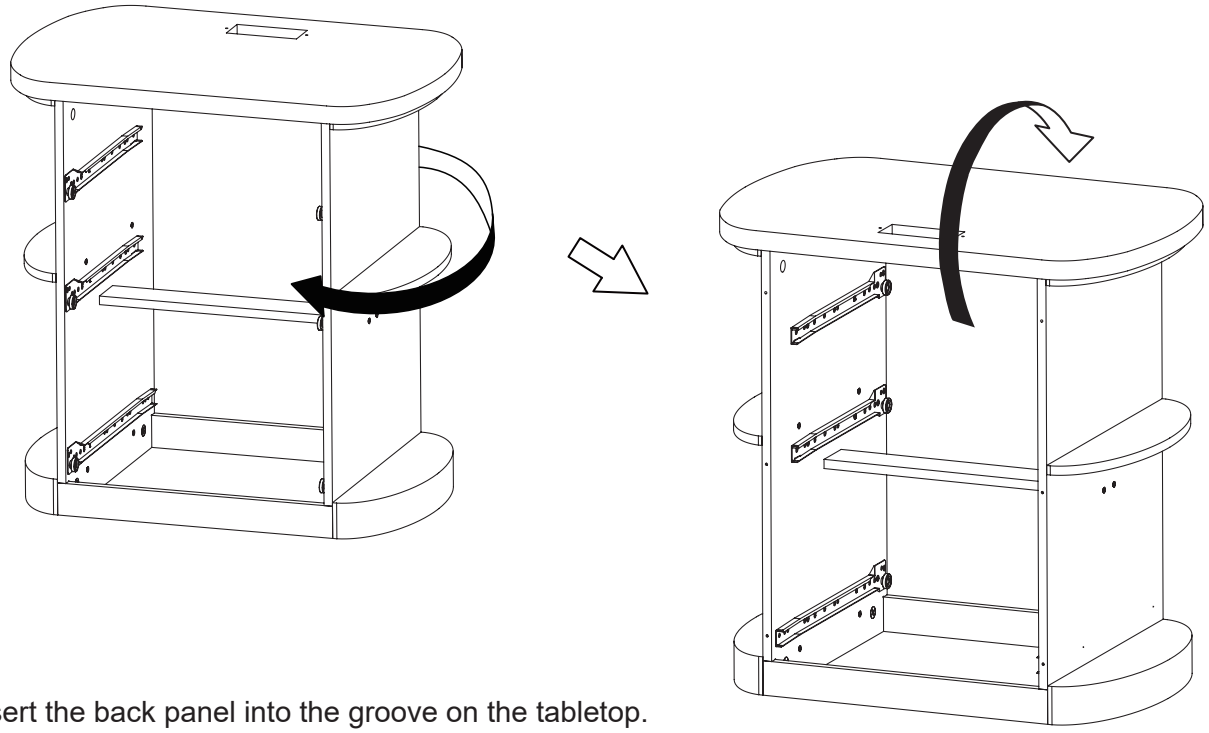


Insert the back panel into the groove on the tabletop.

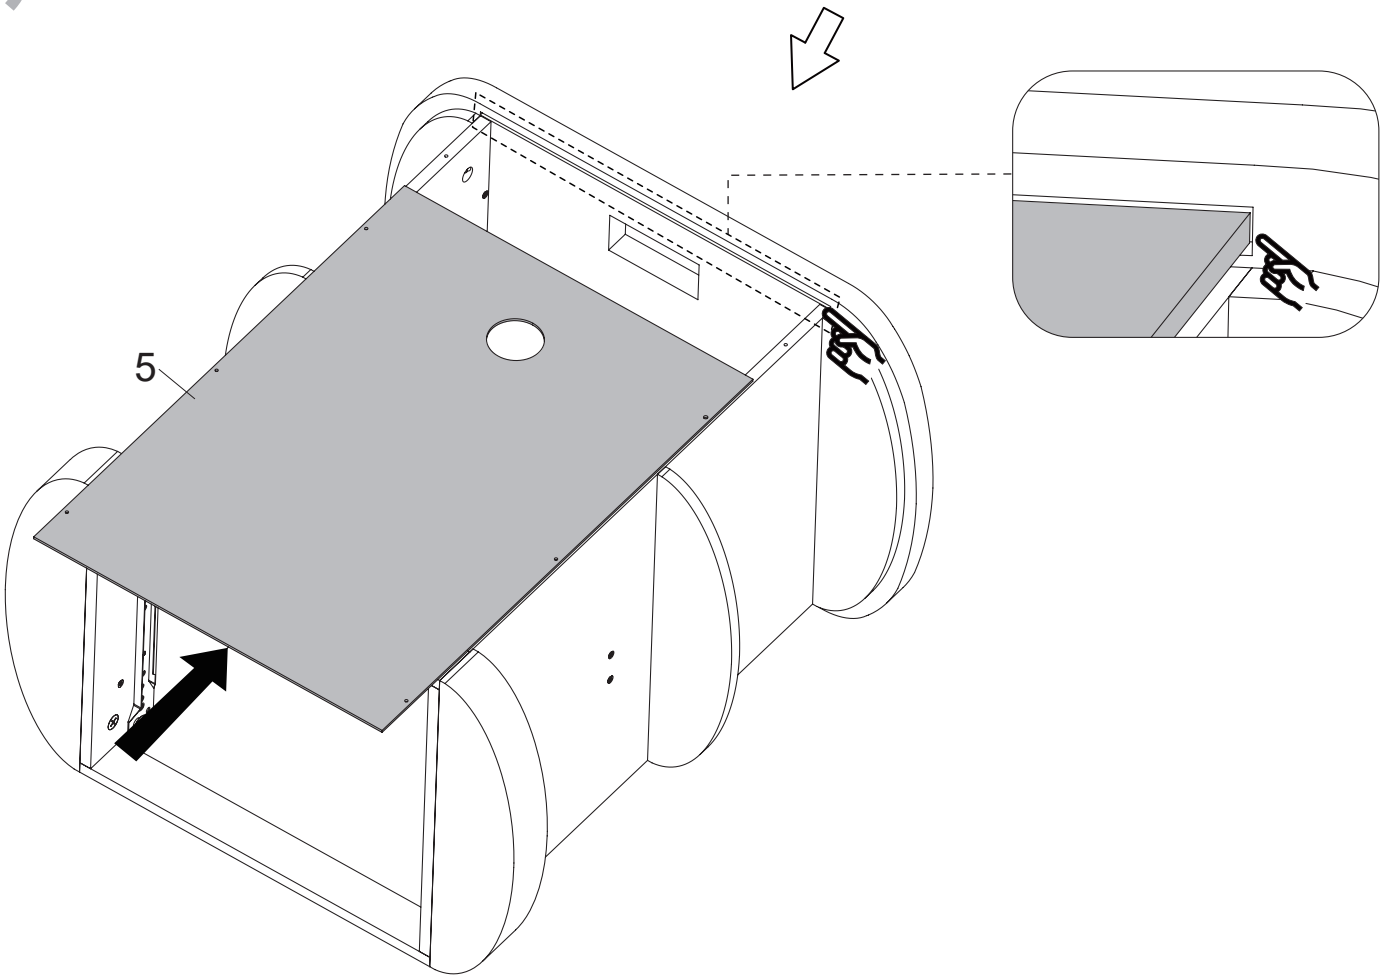


Step 16

Please fully tighten all the screws after they are in right place.

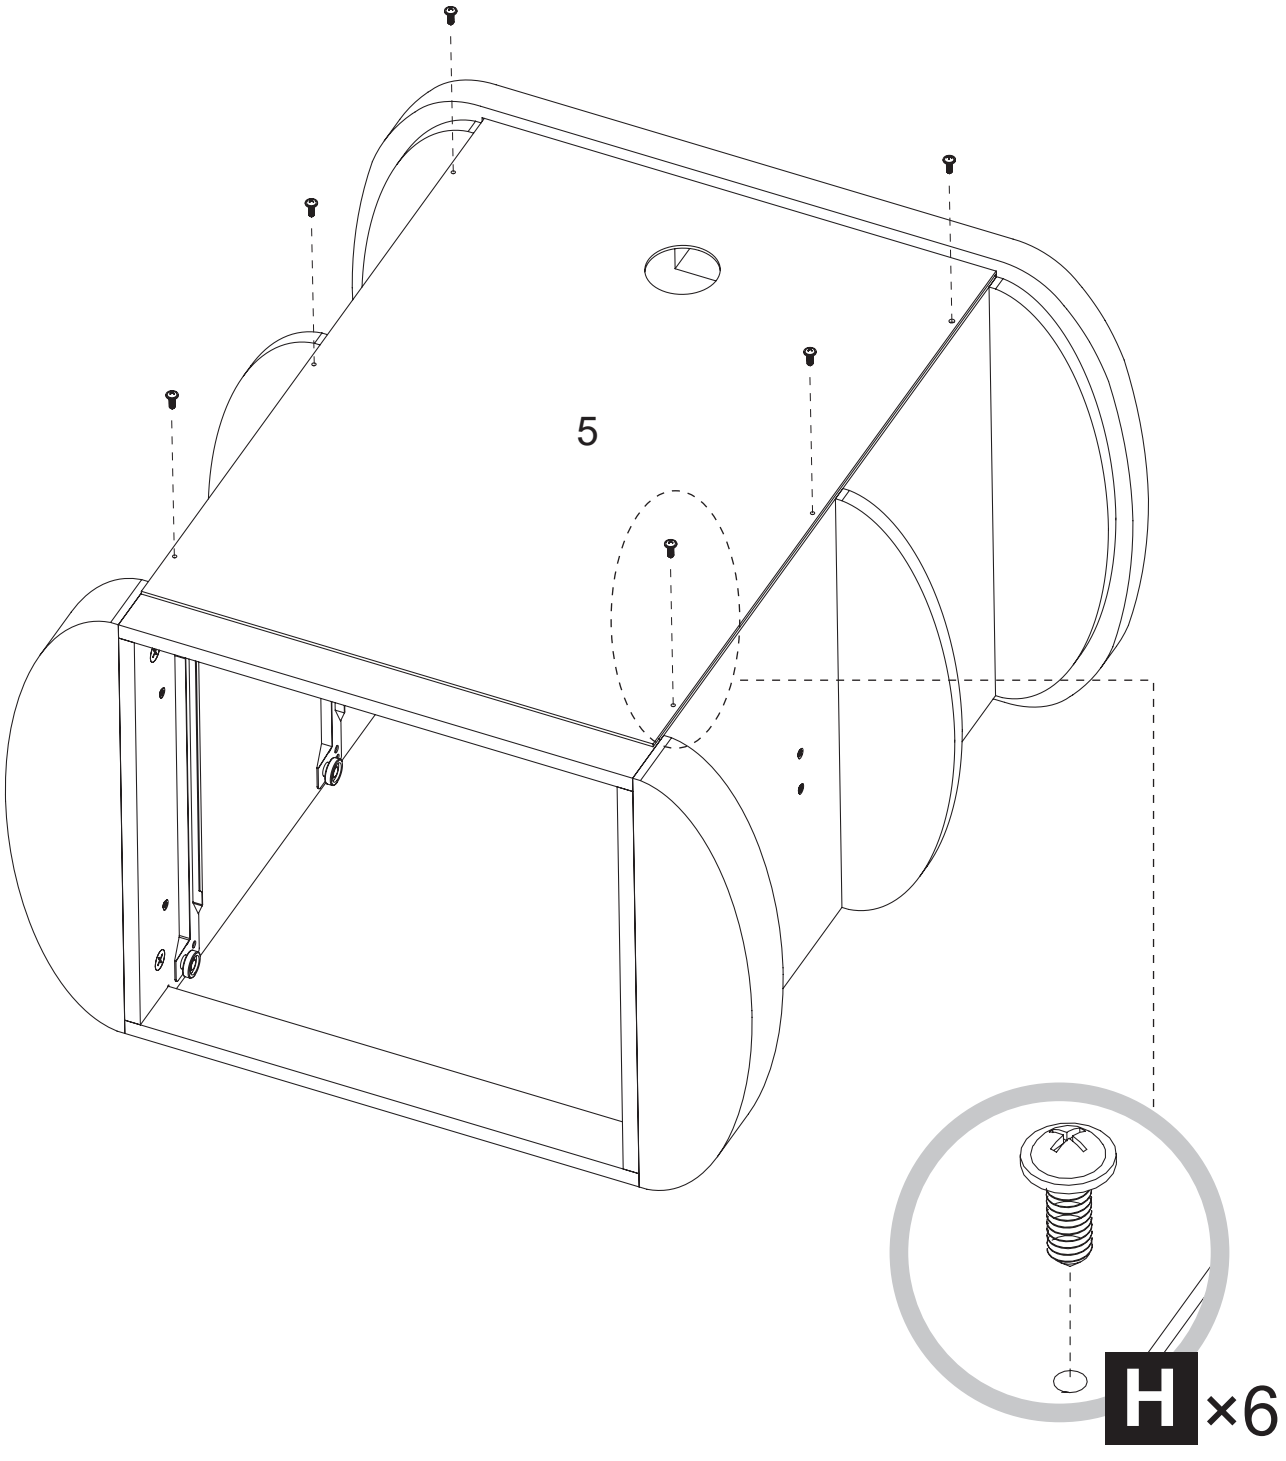


Step 17

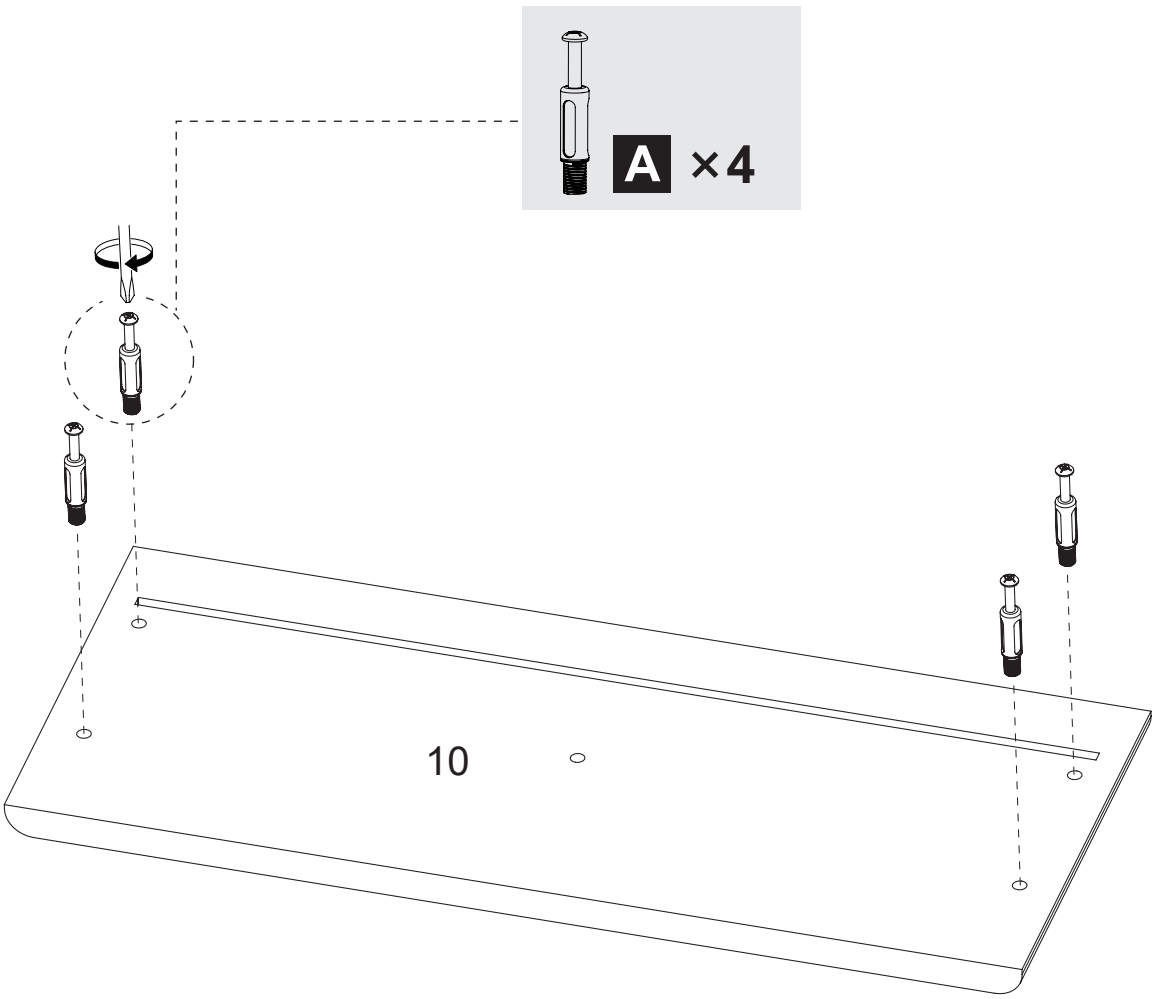

×2


Step 18

Let the grooves on part **11 12** be connected to the groove on part **10** .

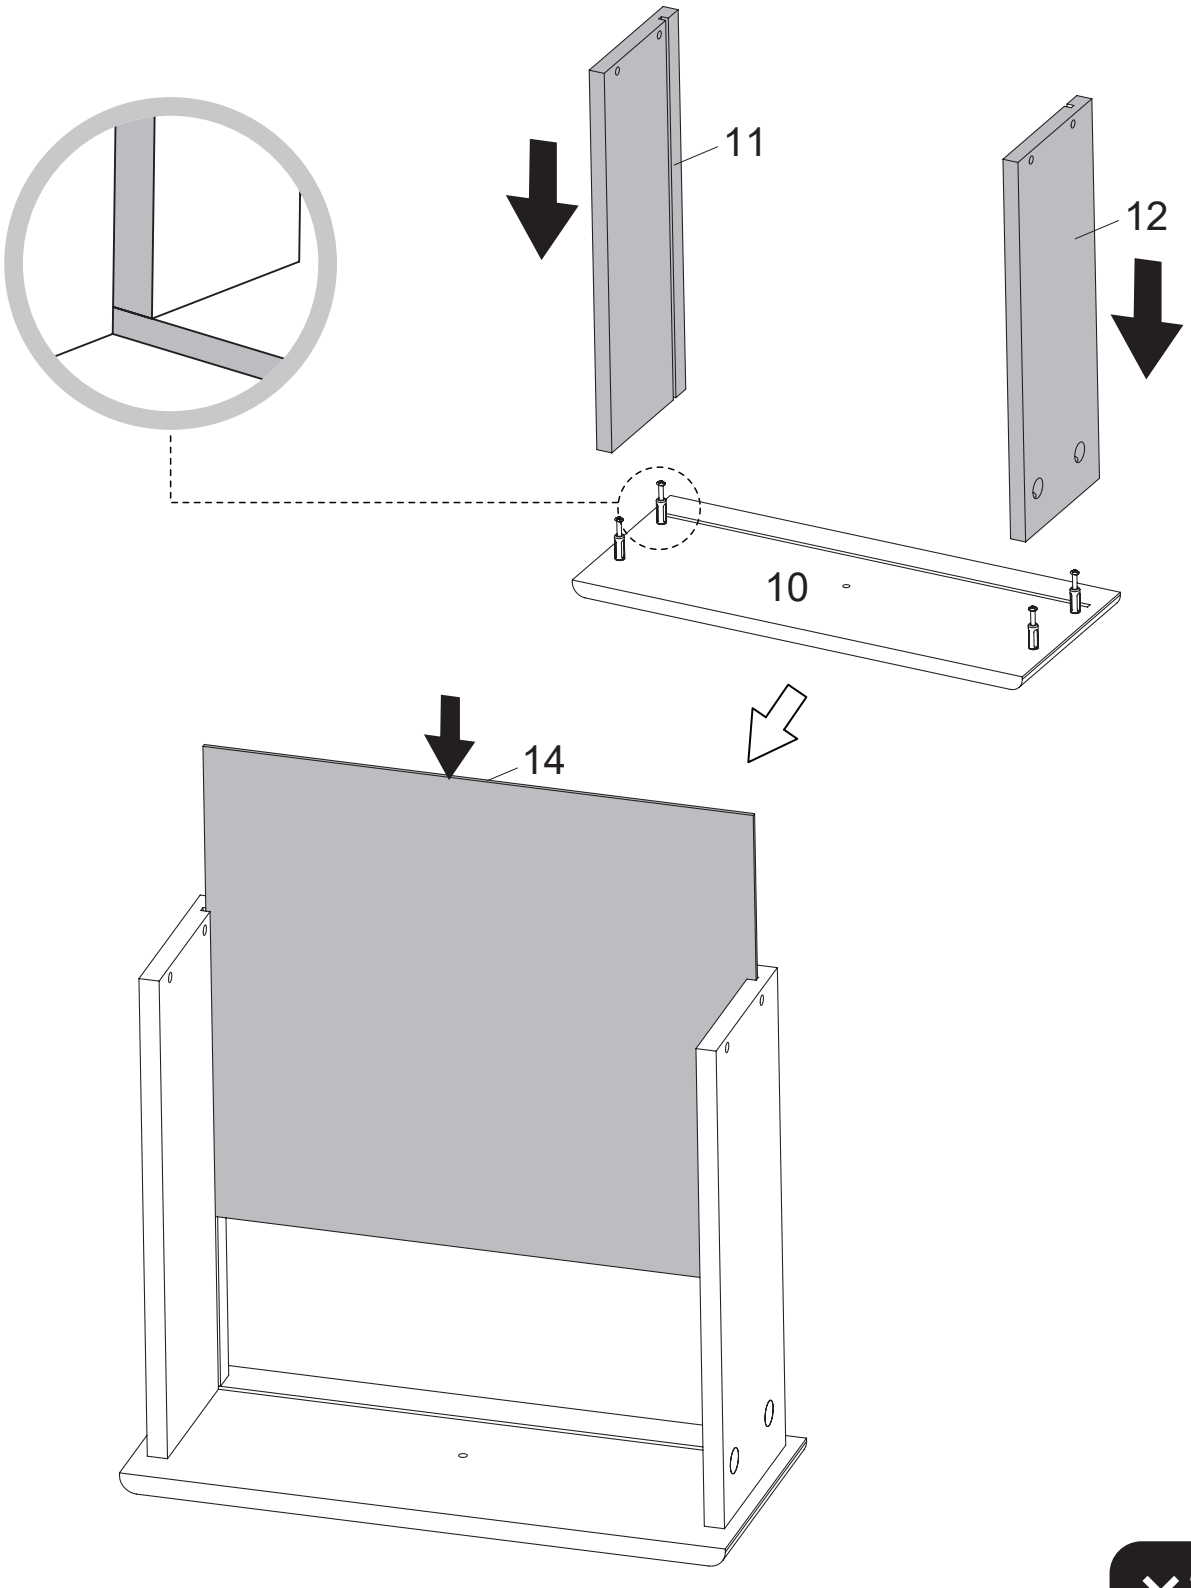


×2


Step 19

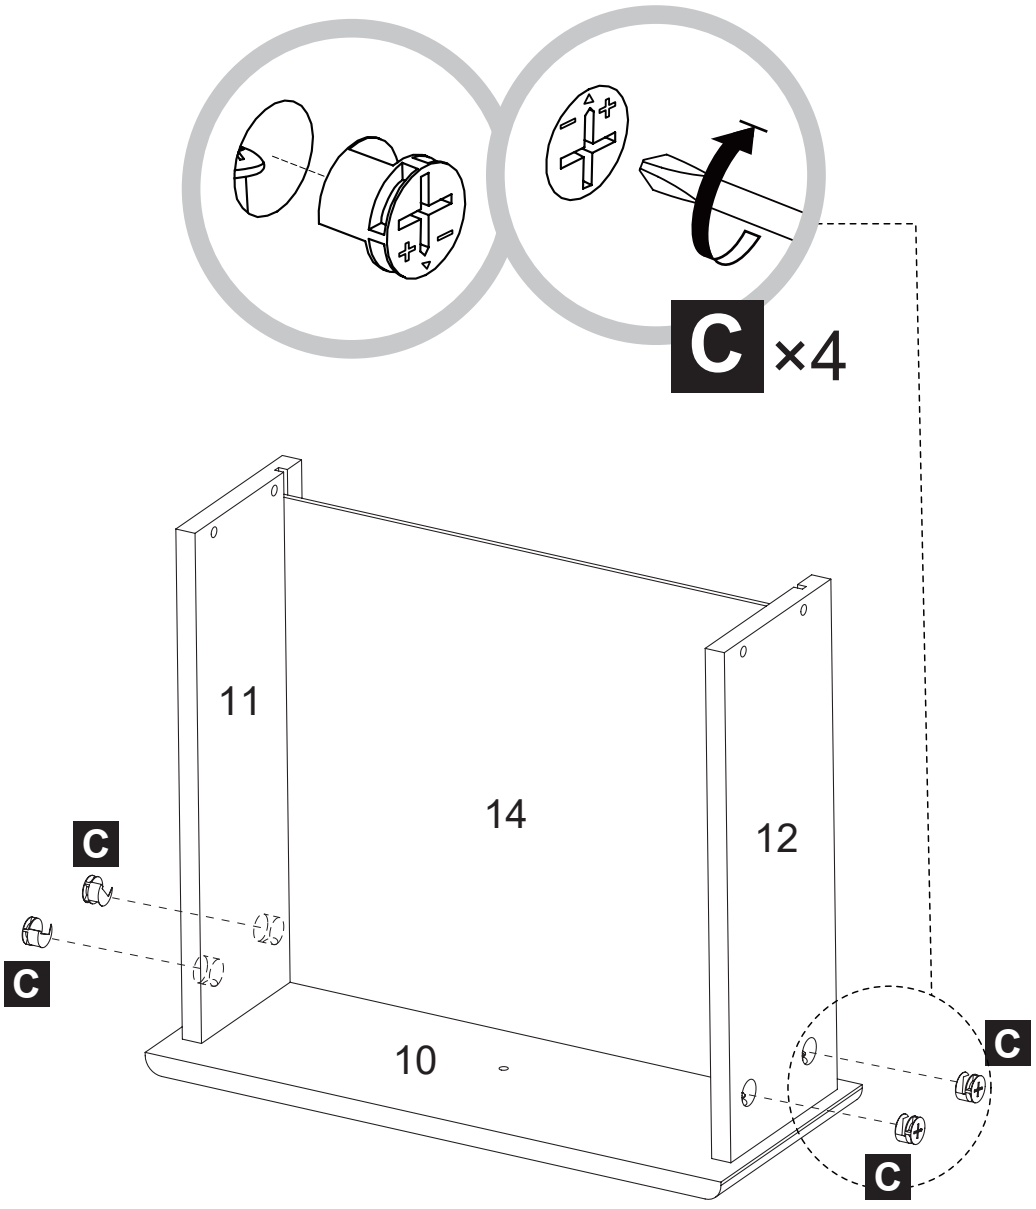


×2


Step 20

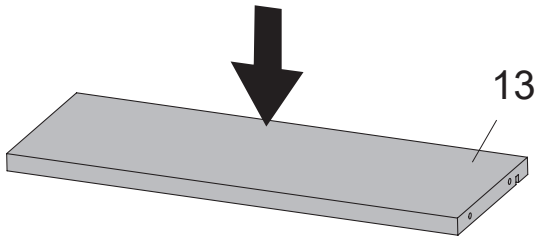

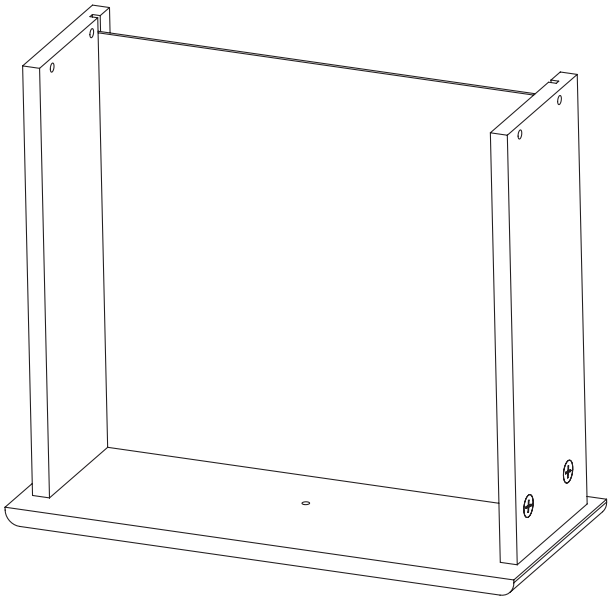

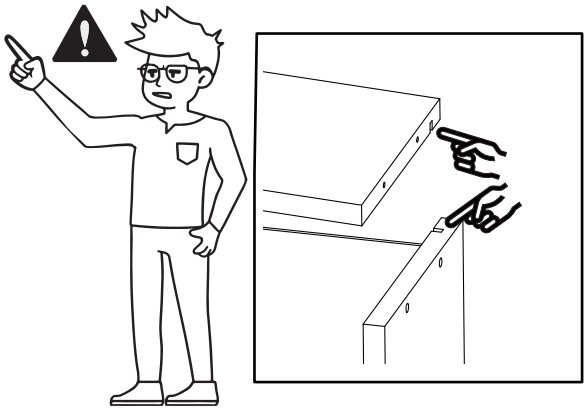


Please fully tighten all the screws after they are in right place.

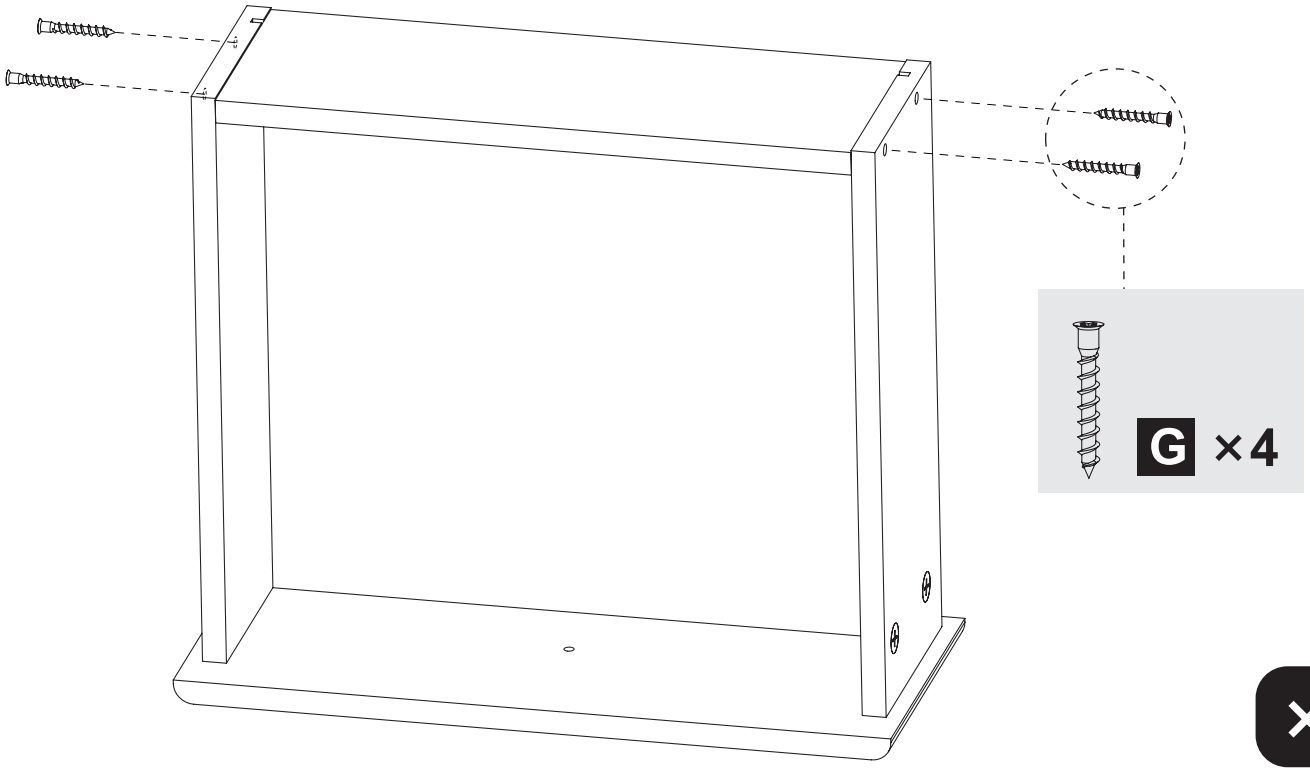


×2

Step 21

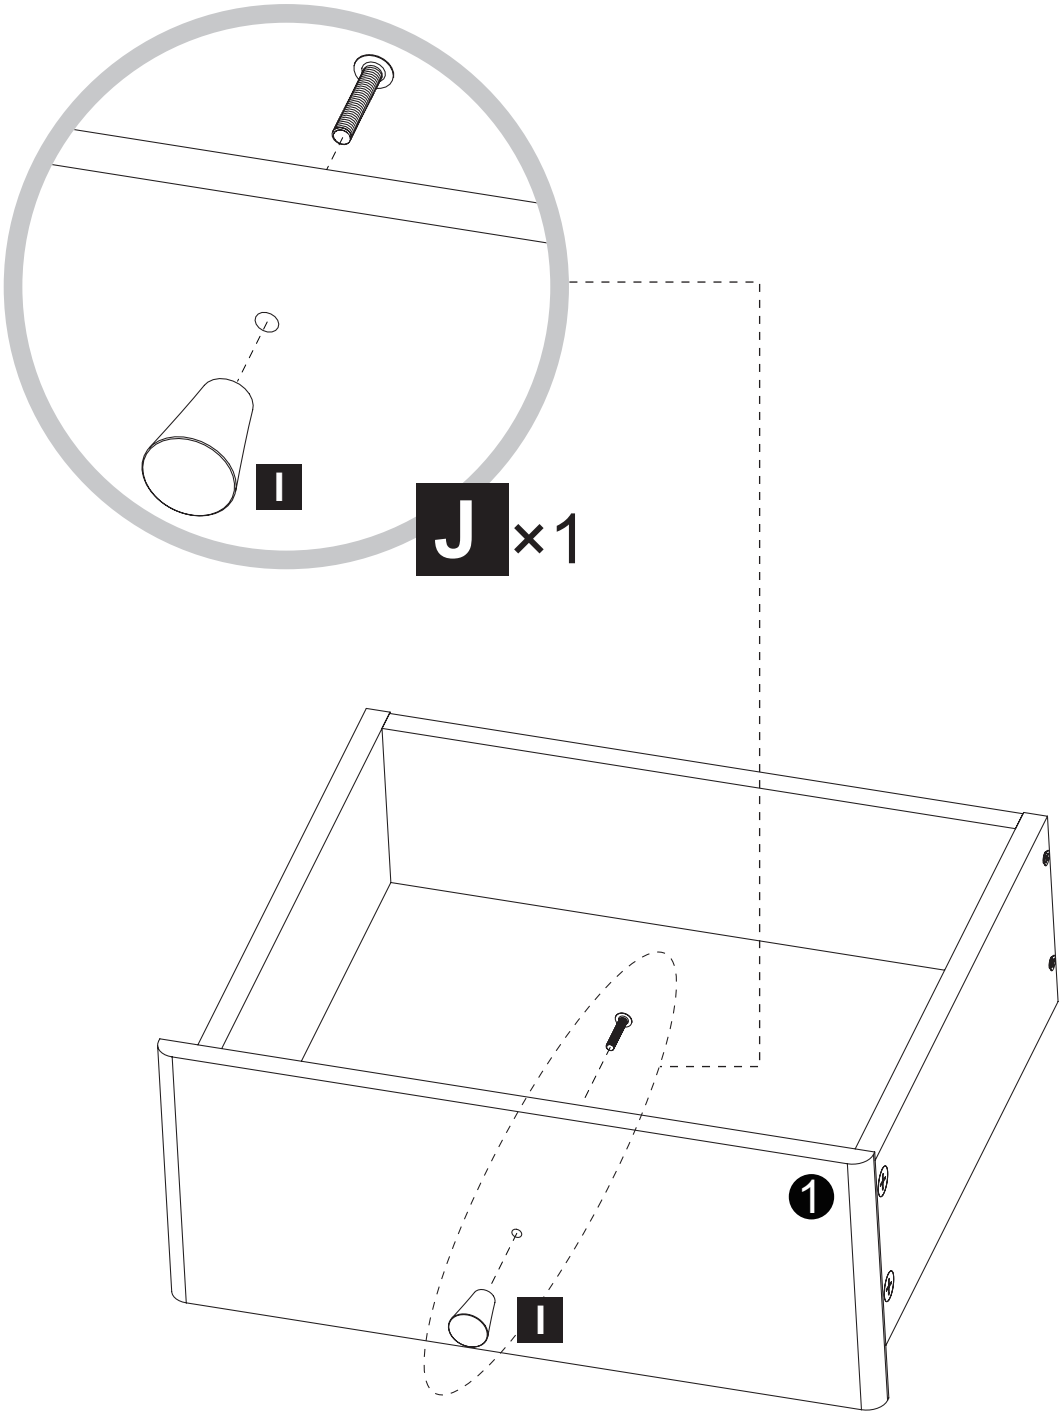


×2

Step 22

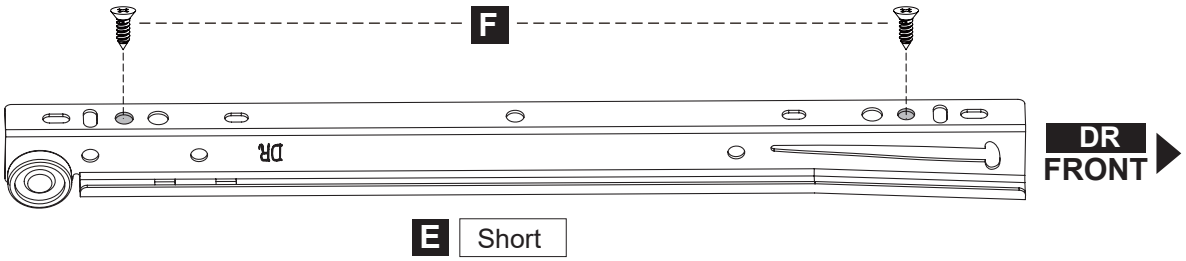


E Short

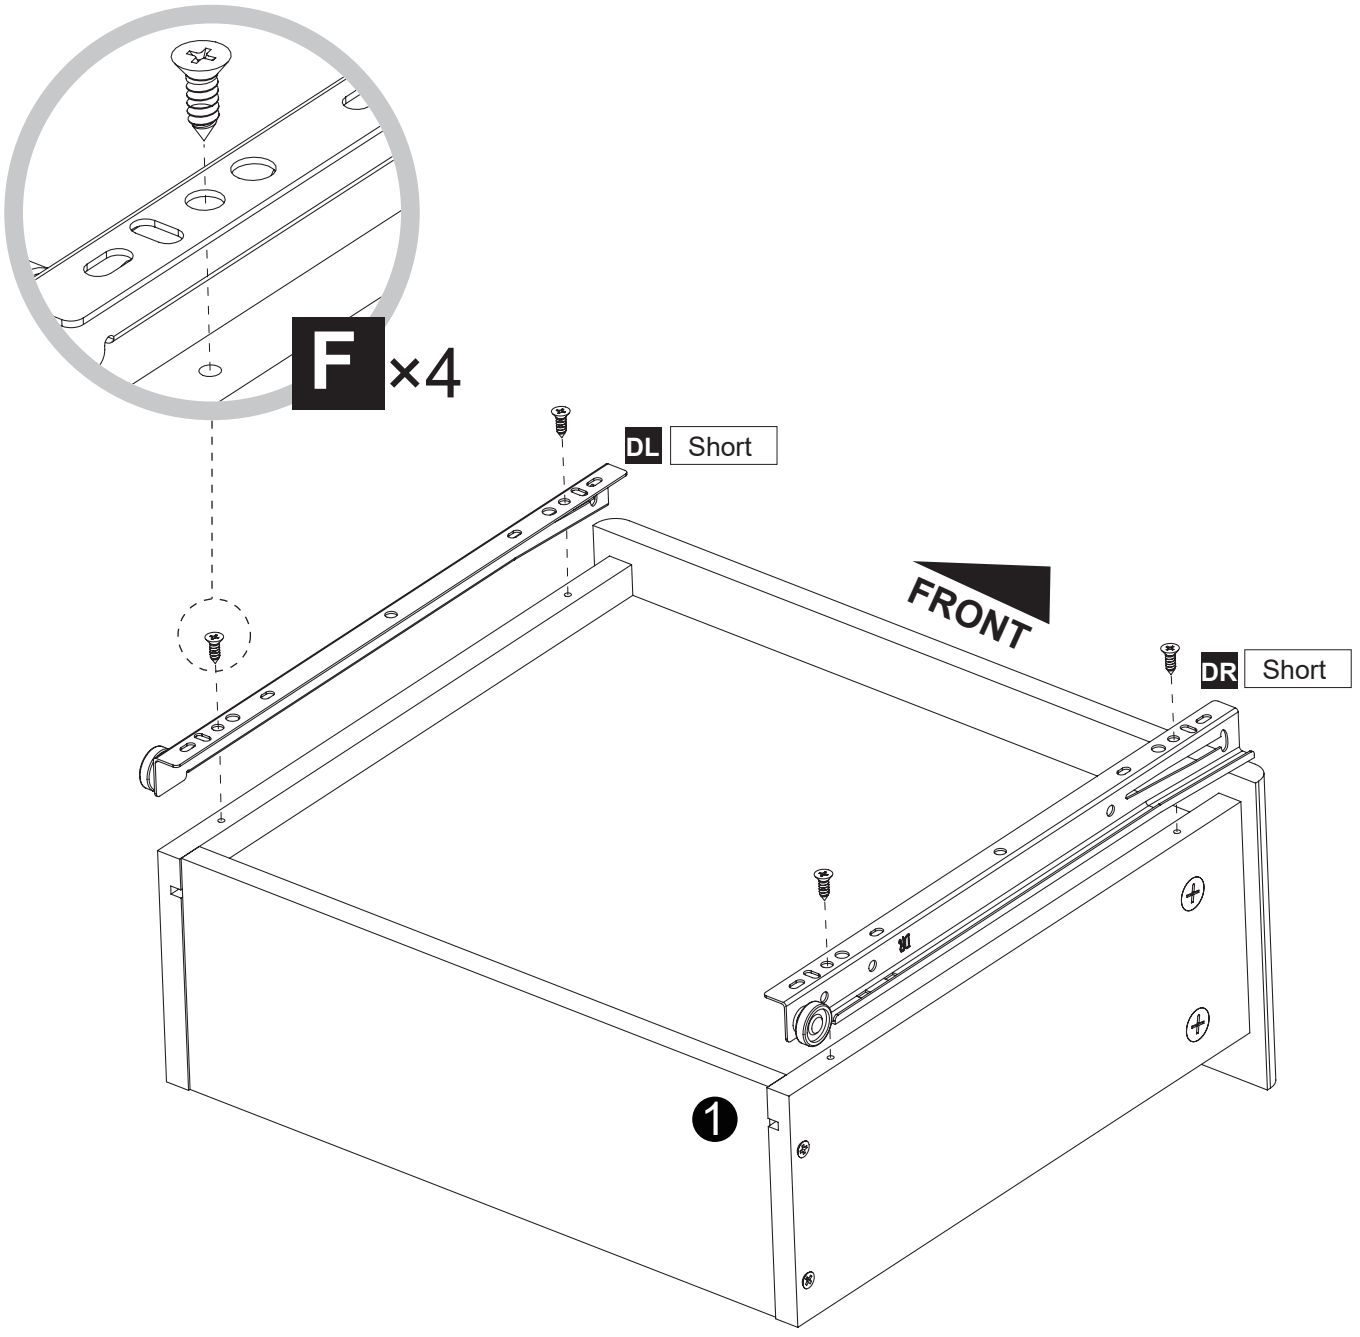


×2

Step 23

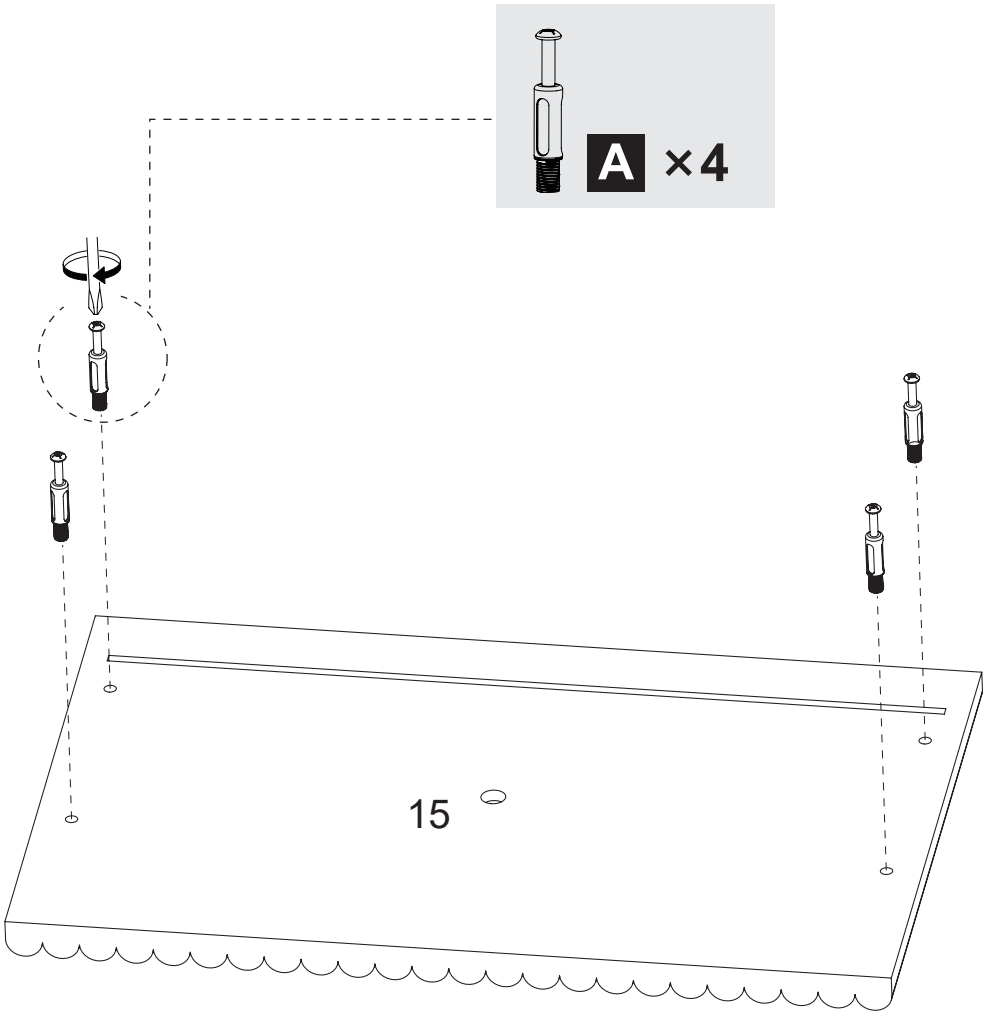


Step 24


Let the grooves on part **16 17** be connected to the groove on part **15** .

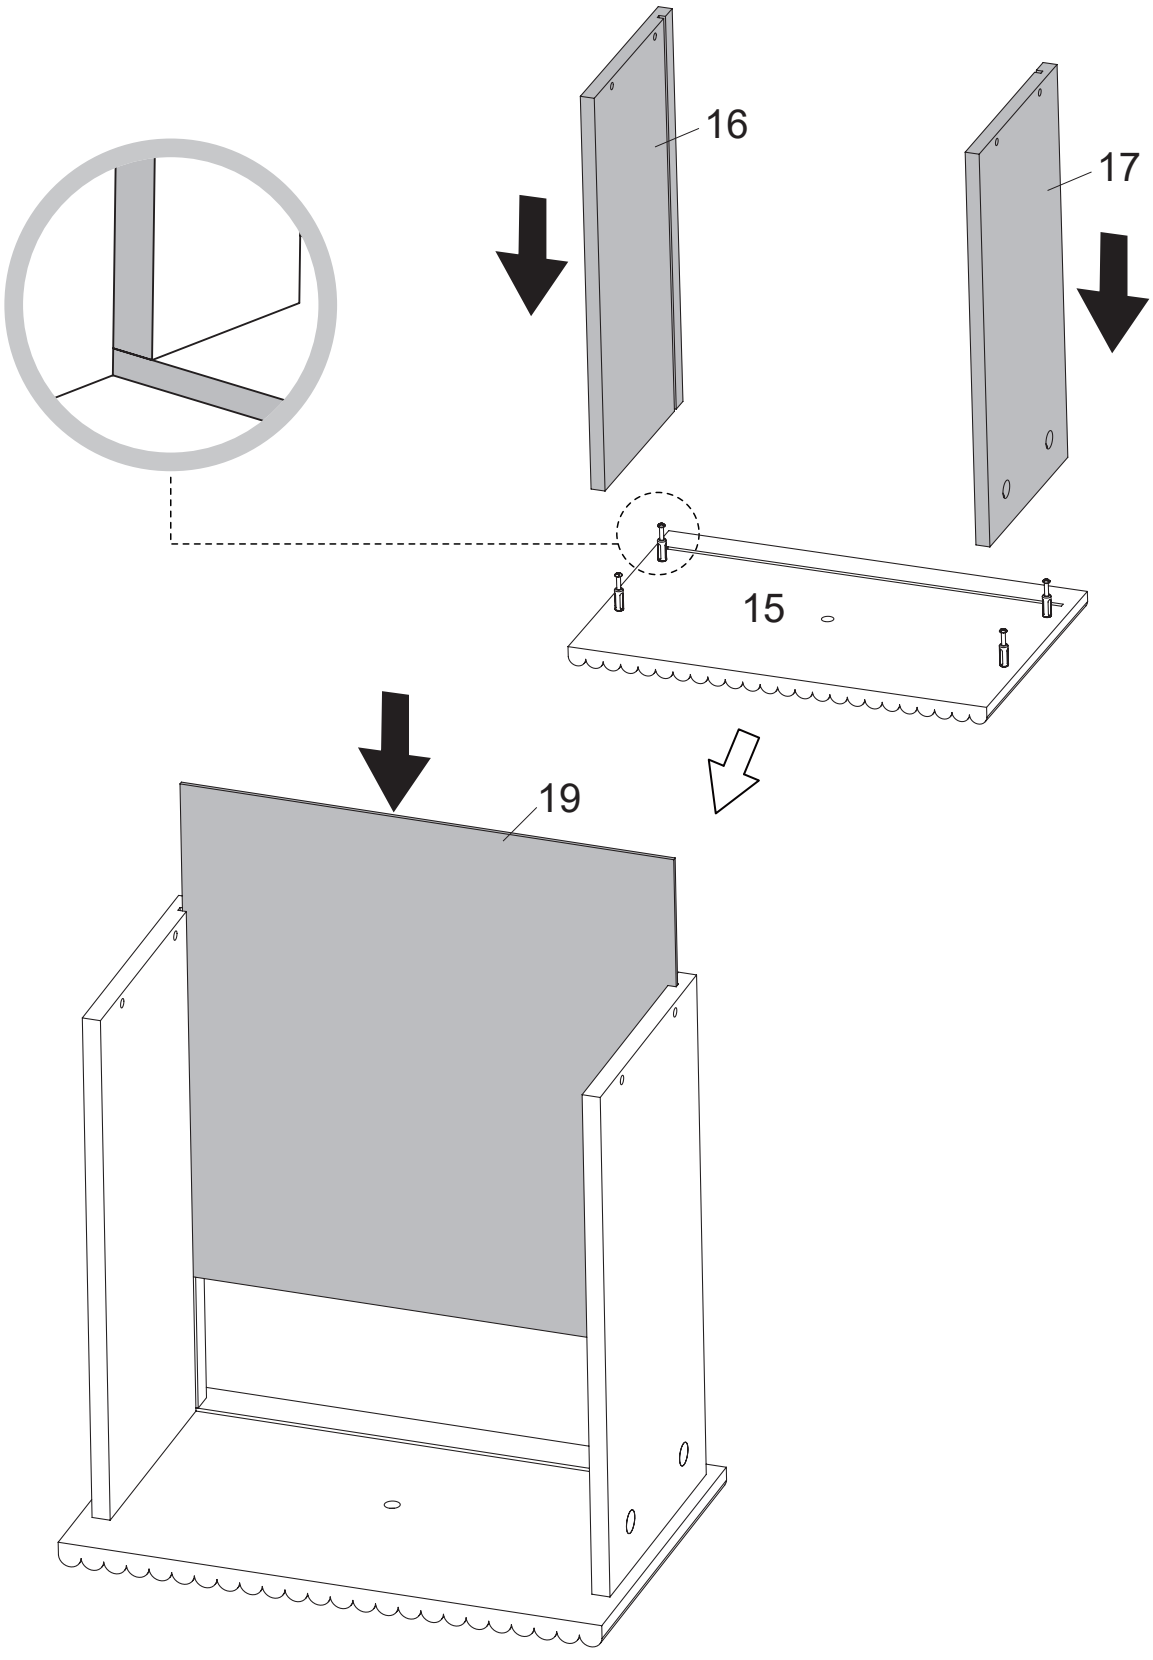


Step 25

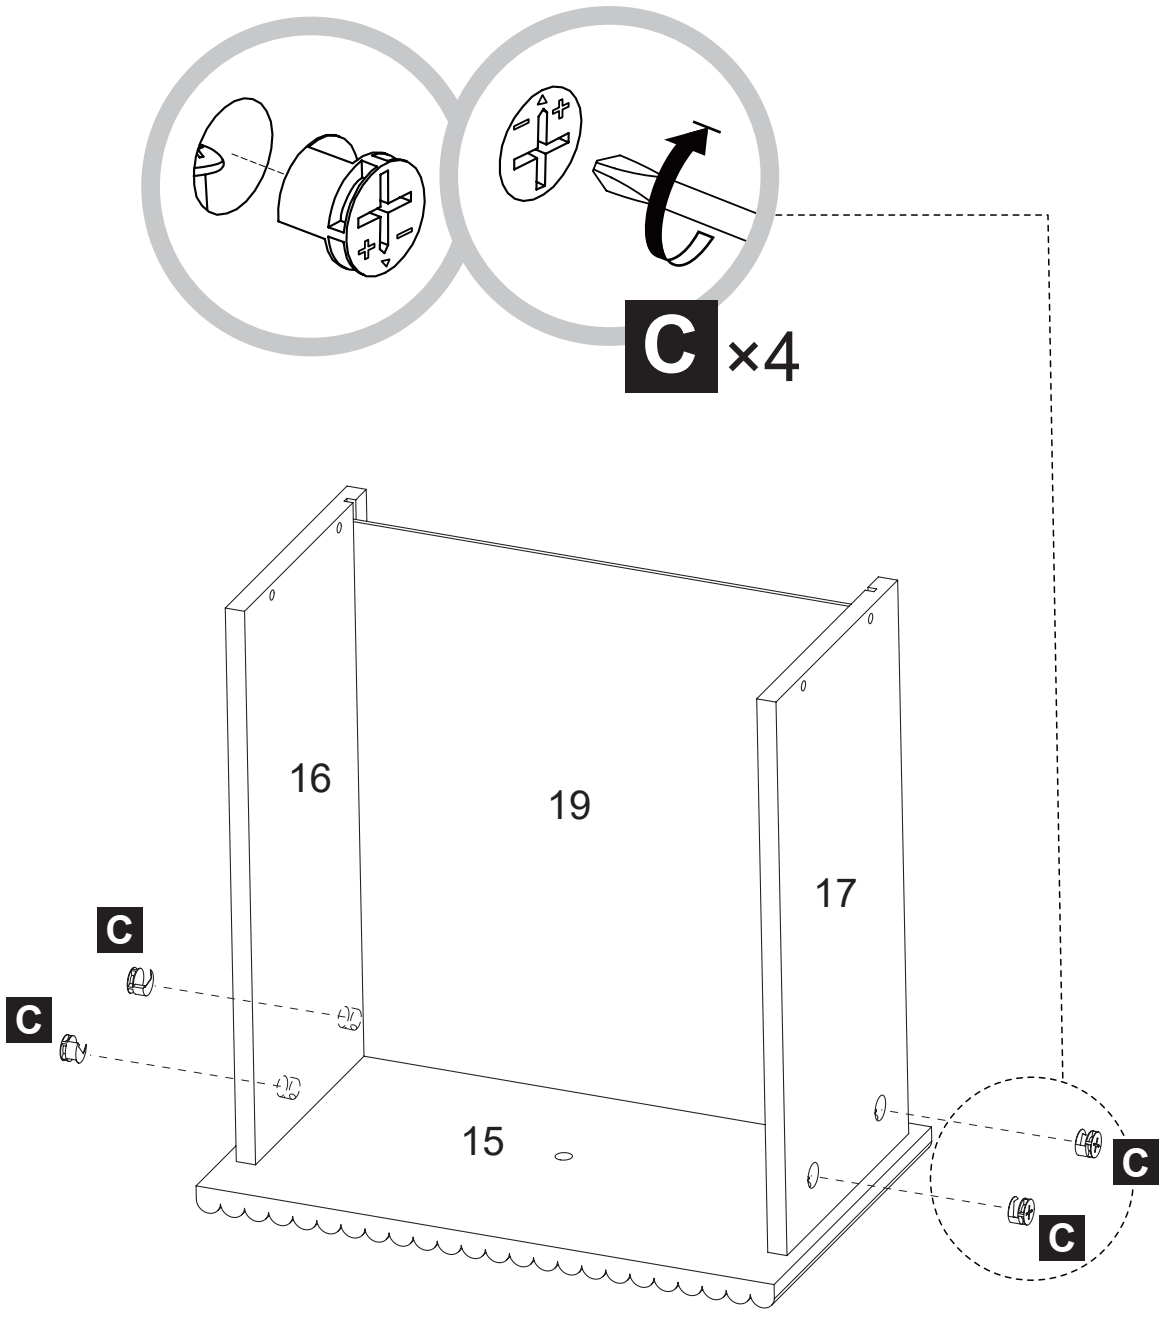


Step 26

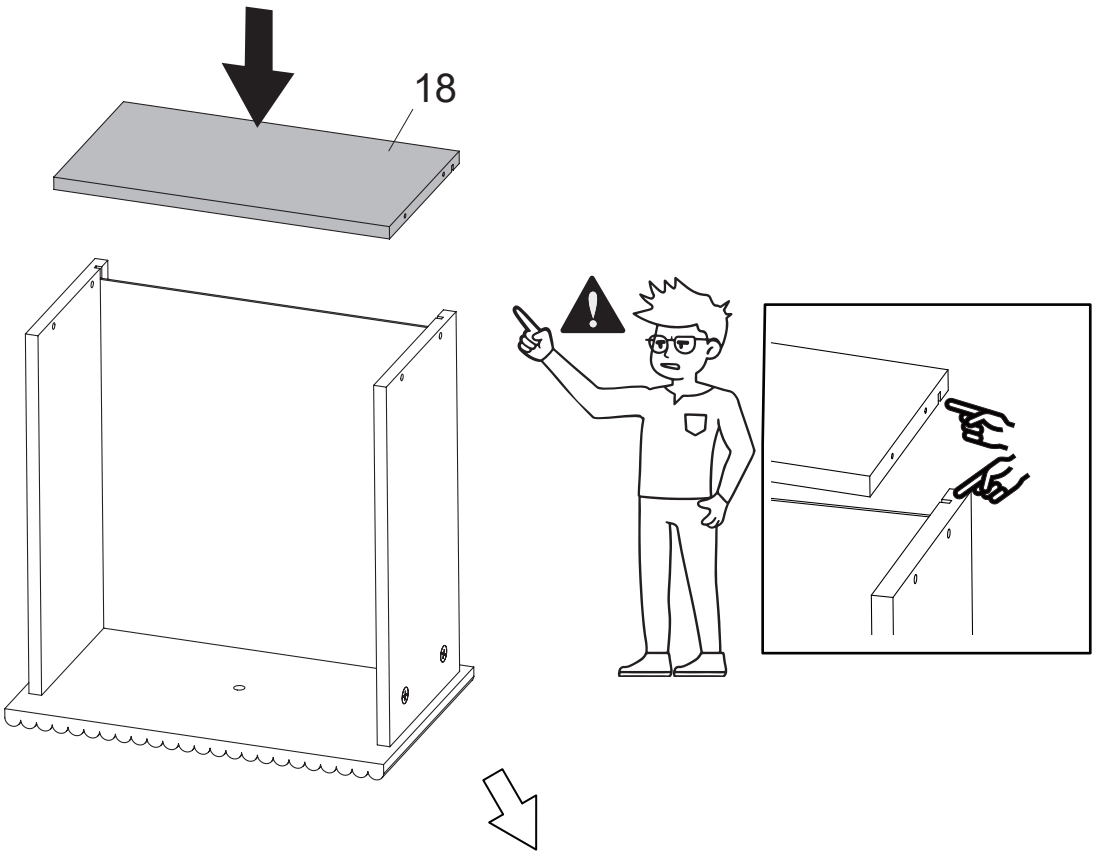


Please fully tighten all the screws after they are in right place.

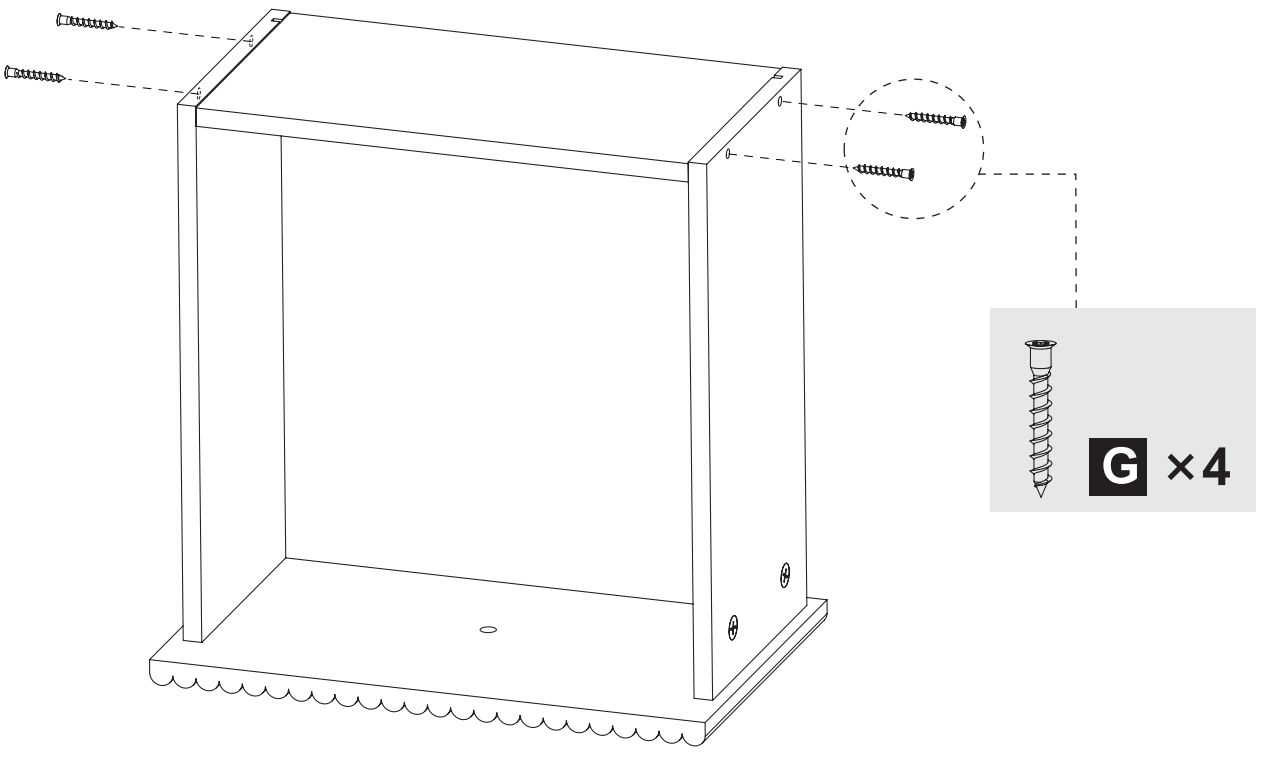


Step 27

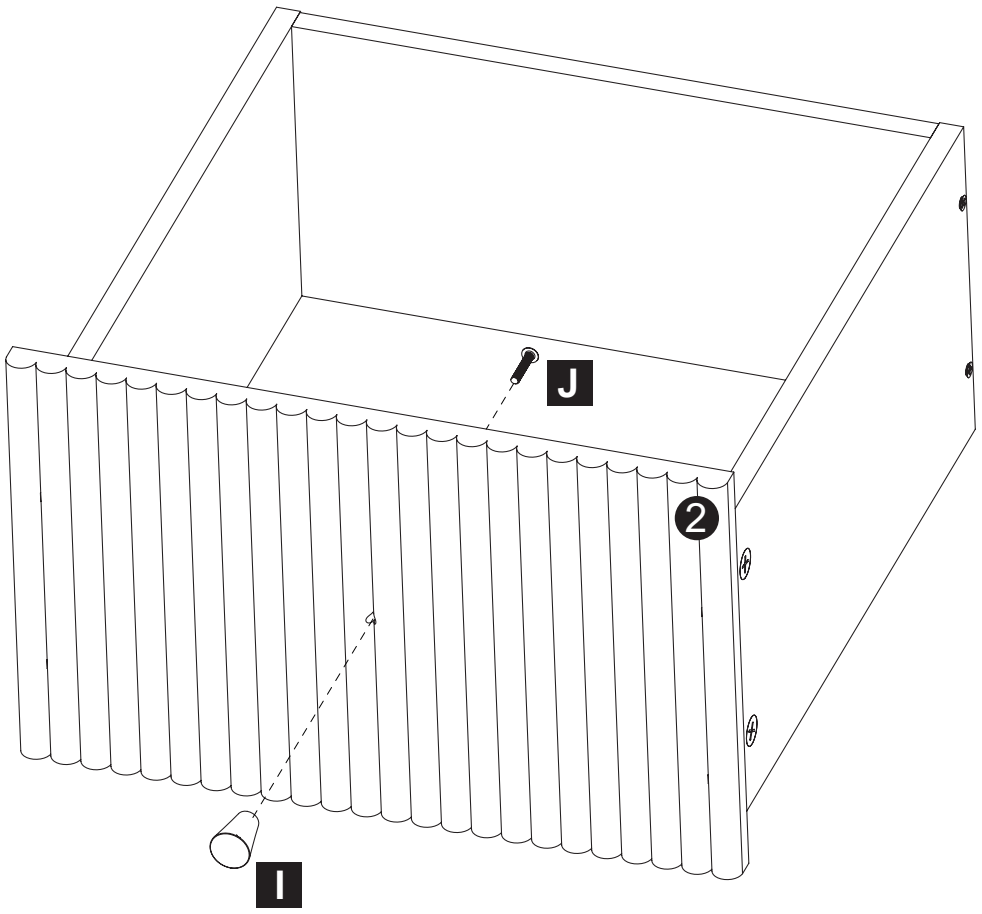

Step 28

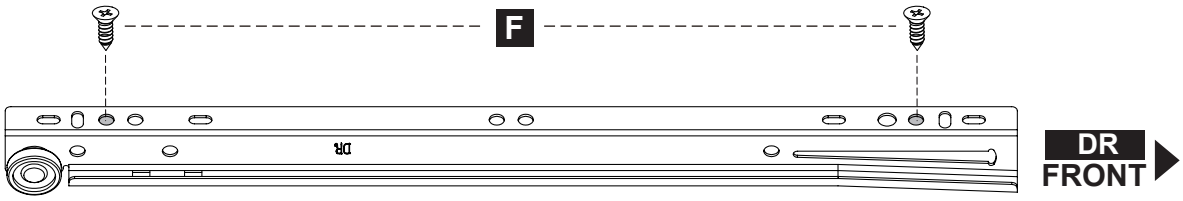


D Long

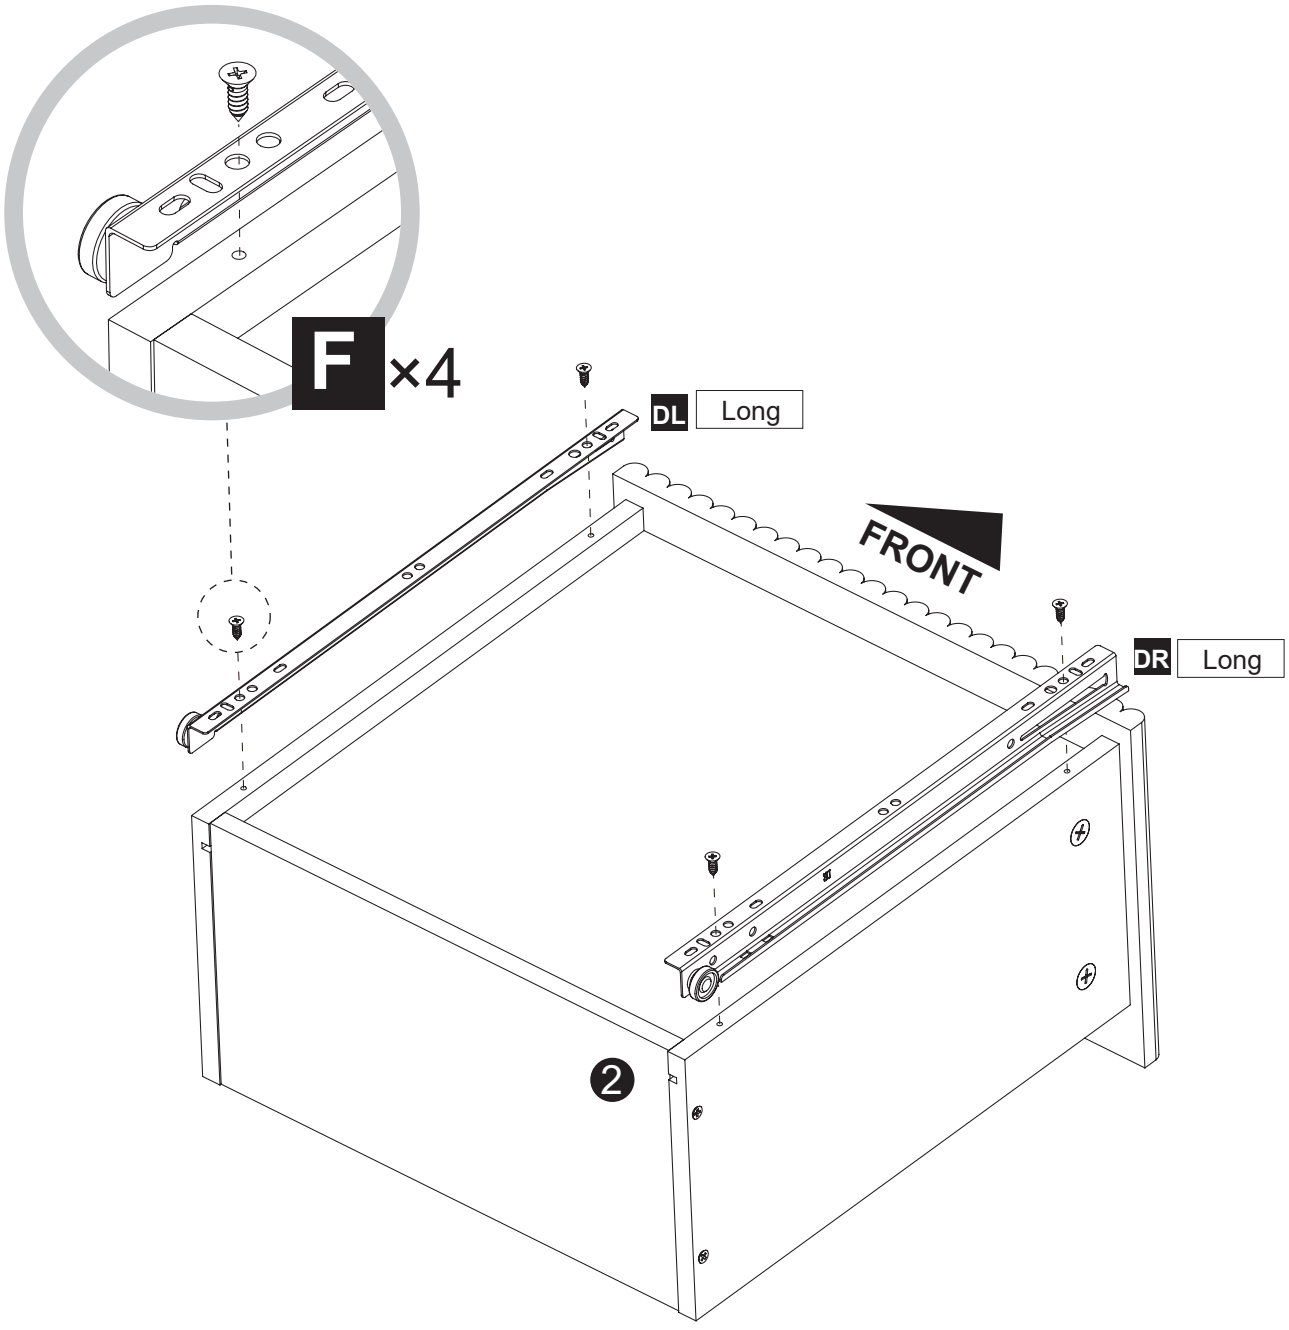


Step 29

Please fully tighten all the screws after they are in right place.

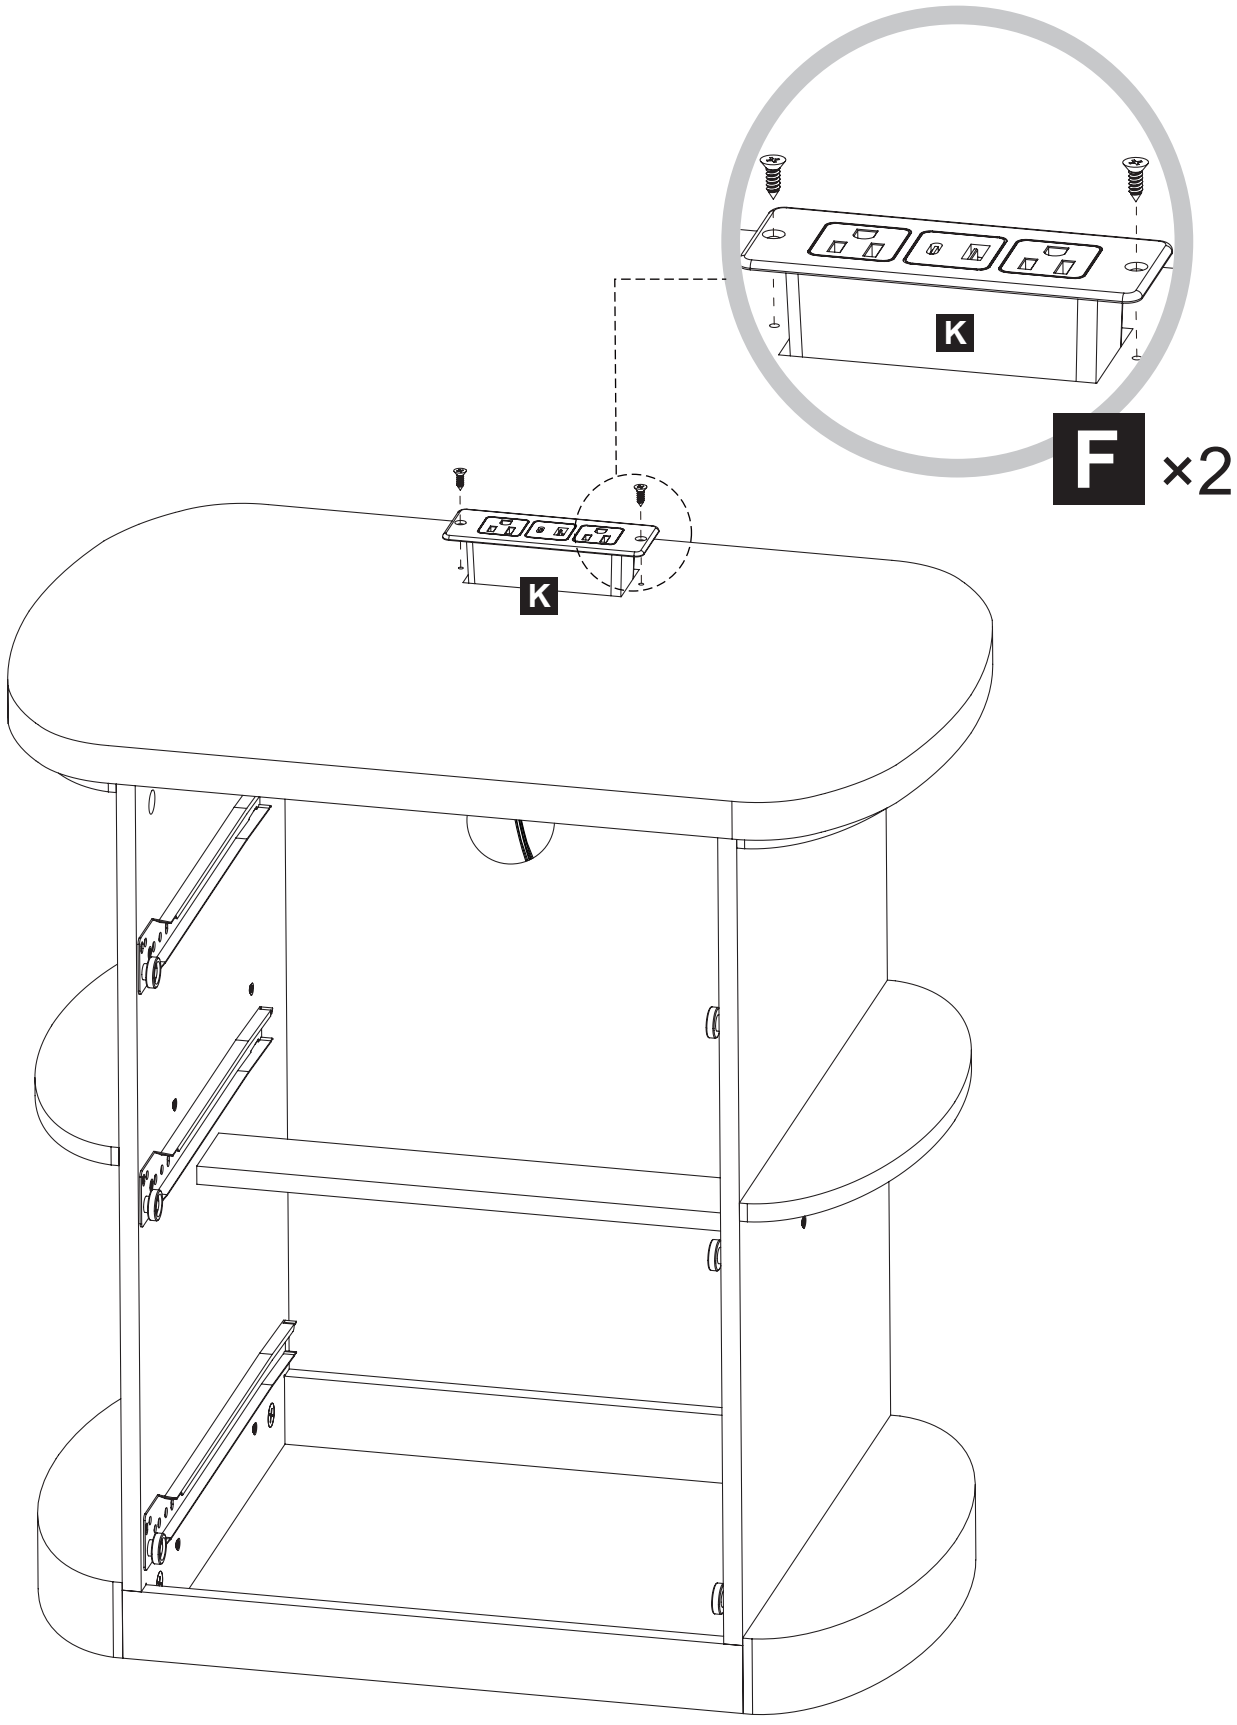


Step 30


Please paste the hole sticker according to actual needs.

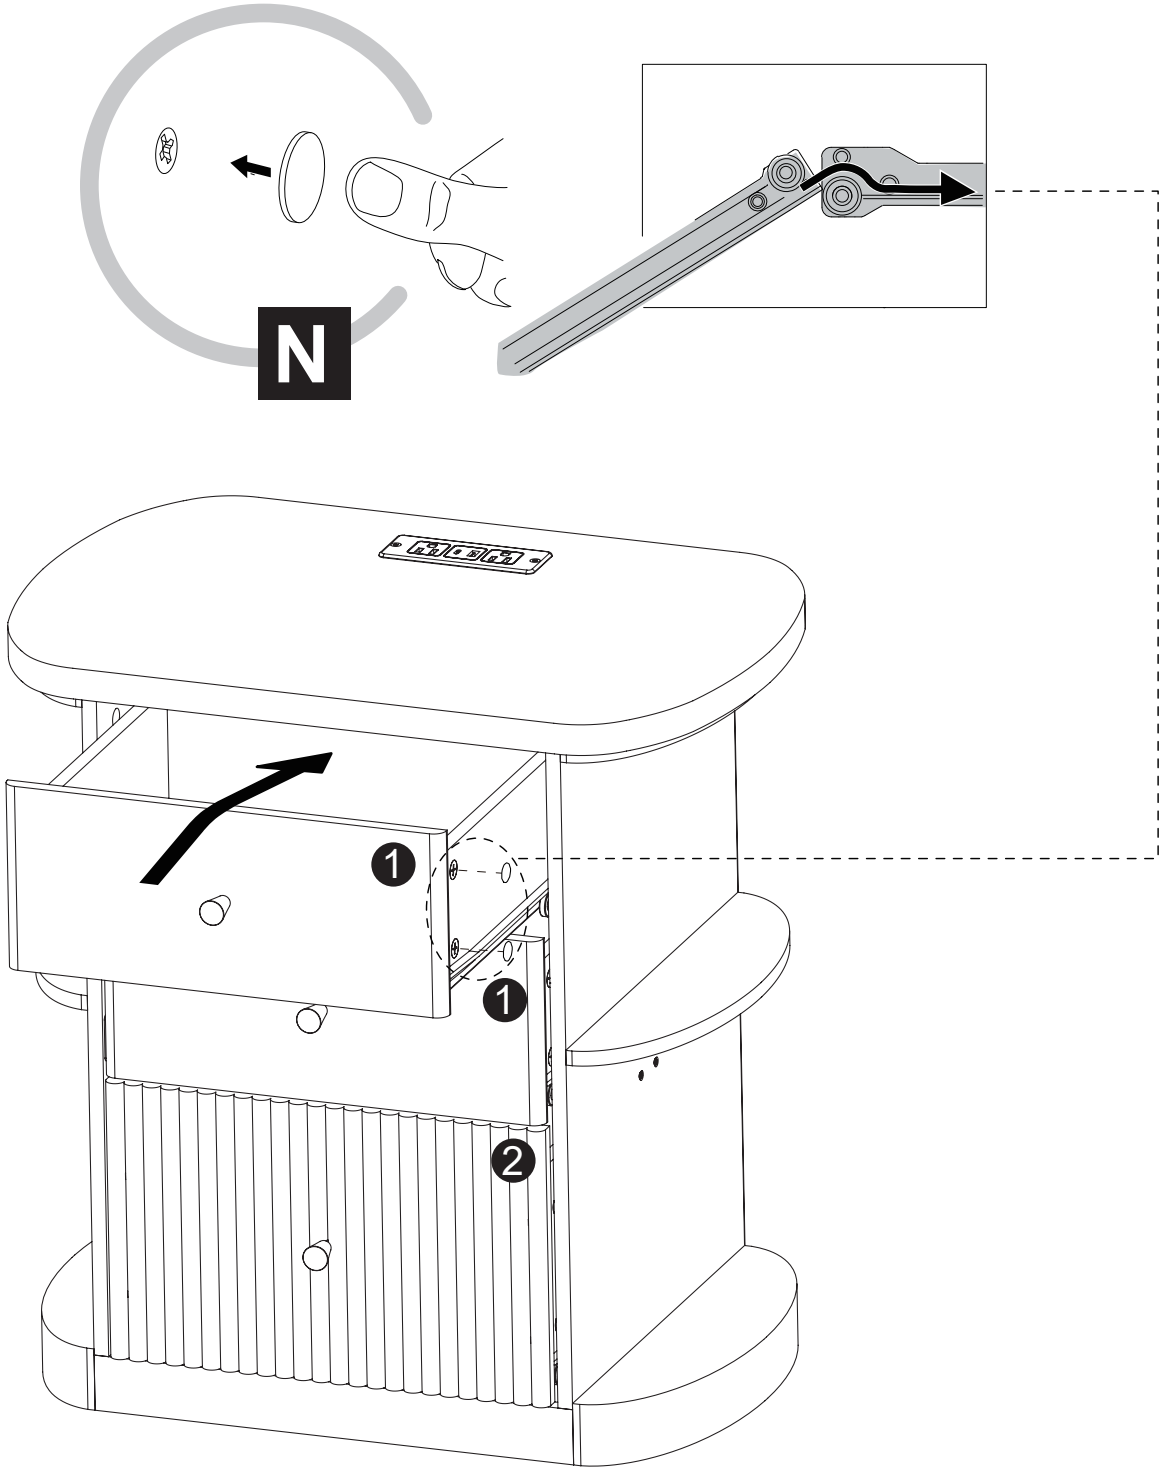

Step 31

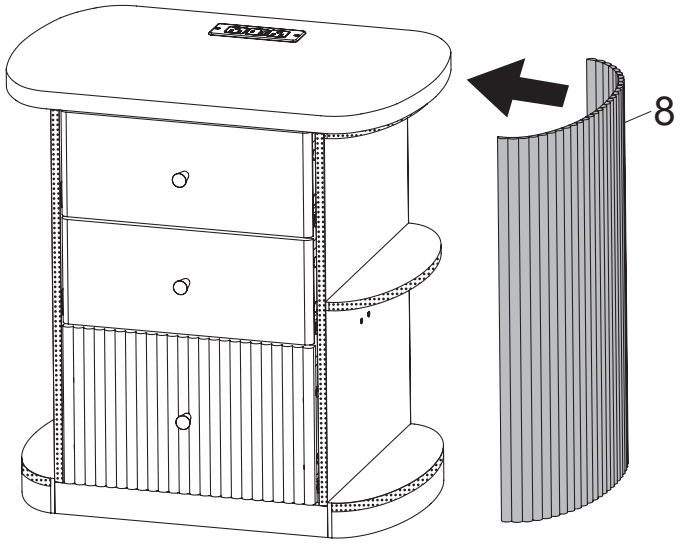



1.Start at the front of the nightstand.
2.Align the wave panel flush with the side edge.
3.Push it up firmly until it fits snugly under the tabletop.
4.Press along the entire panel to secure it.

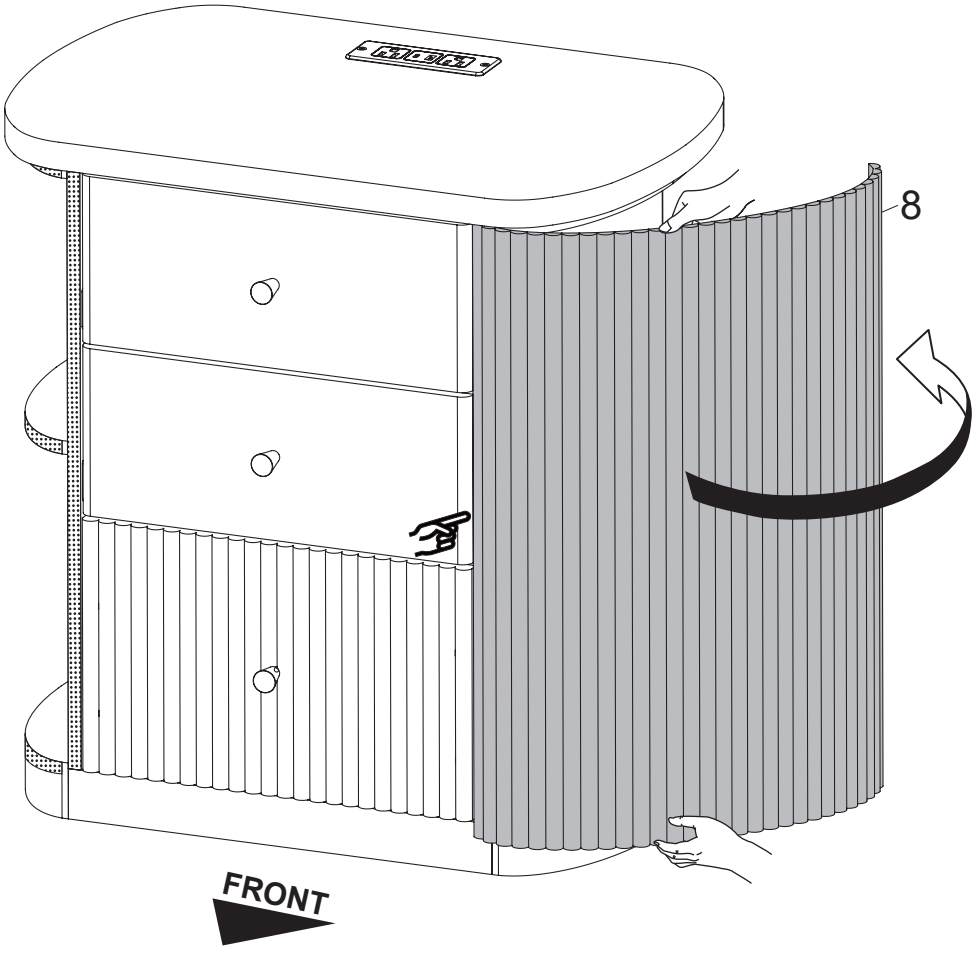


Step 32

1.If there is a gap behind the panel, use the provided adhesive strips.
2.Attach the strips to the fluted panel, then press the panel firmly against the frame behind it.

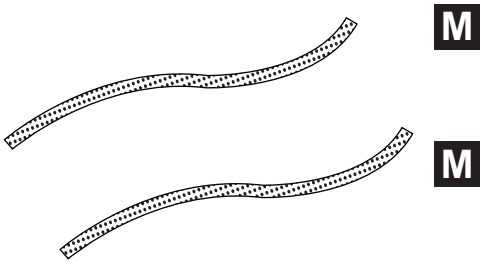


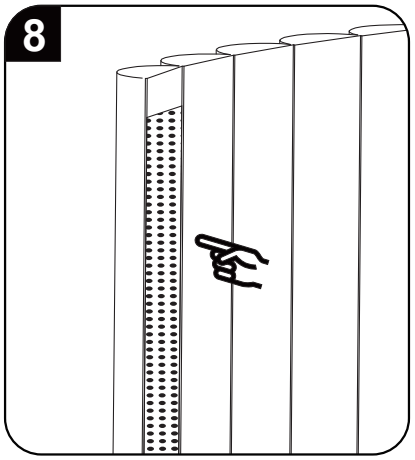

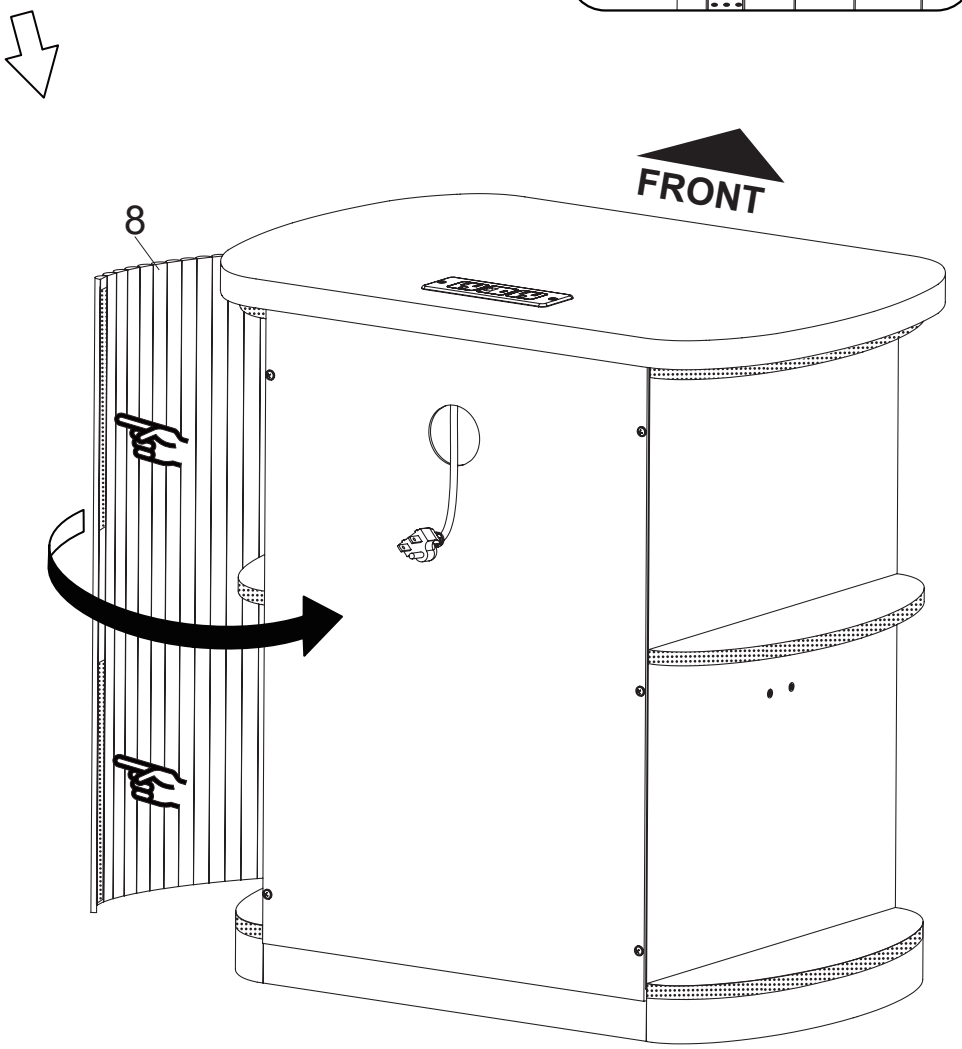


Step 33


1.Start at the front of the nightstand.
2.Align the wave panel flush with the side edge.
3.Push it up firmly until it fits snugly under the tabletop.
4.Press along the entire panel to secure it.

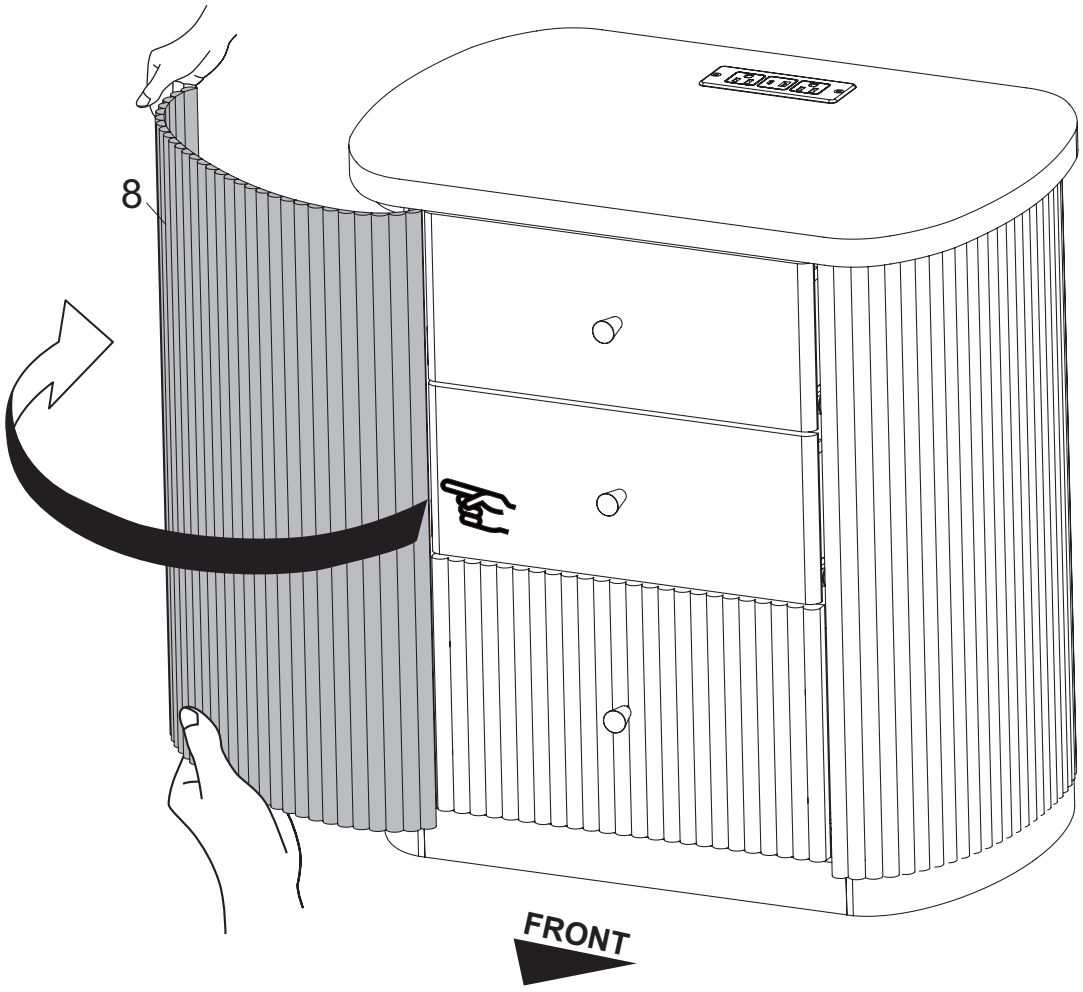


Step 34

1.If there is a gap behind the panel, use the provided adhesive strips.
2.Attach the strips to the fluted panel, then press the panel firmly against the frame behind it.

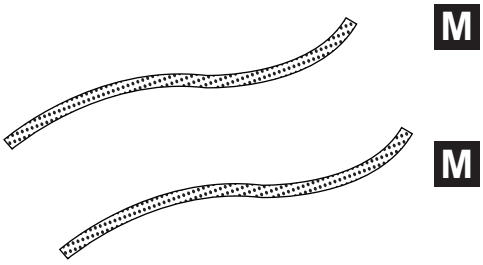

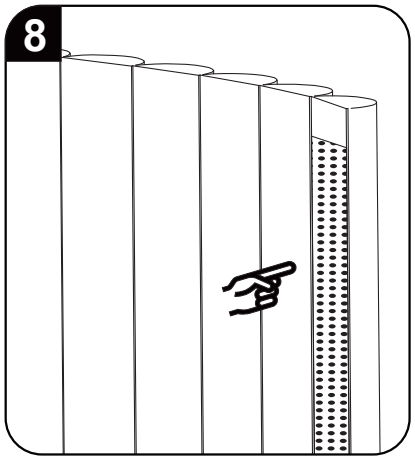

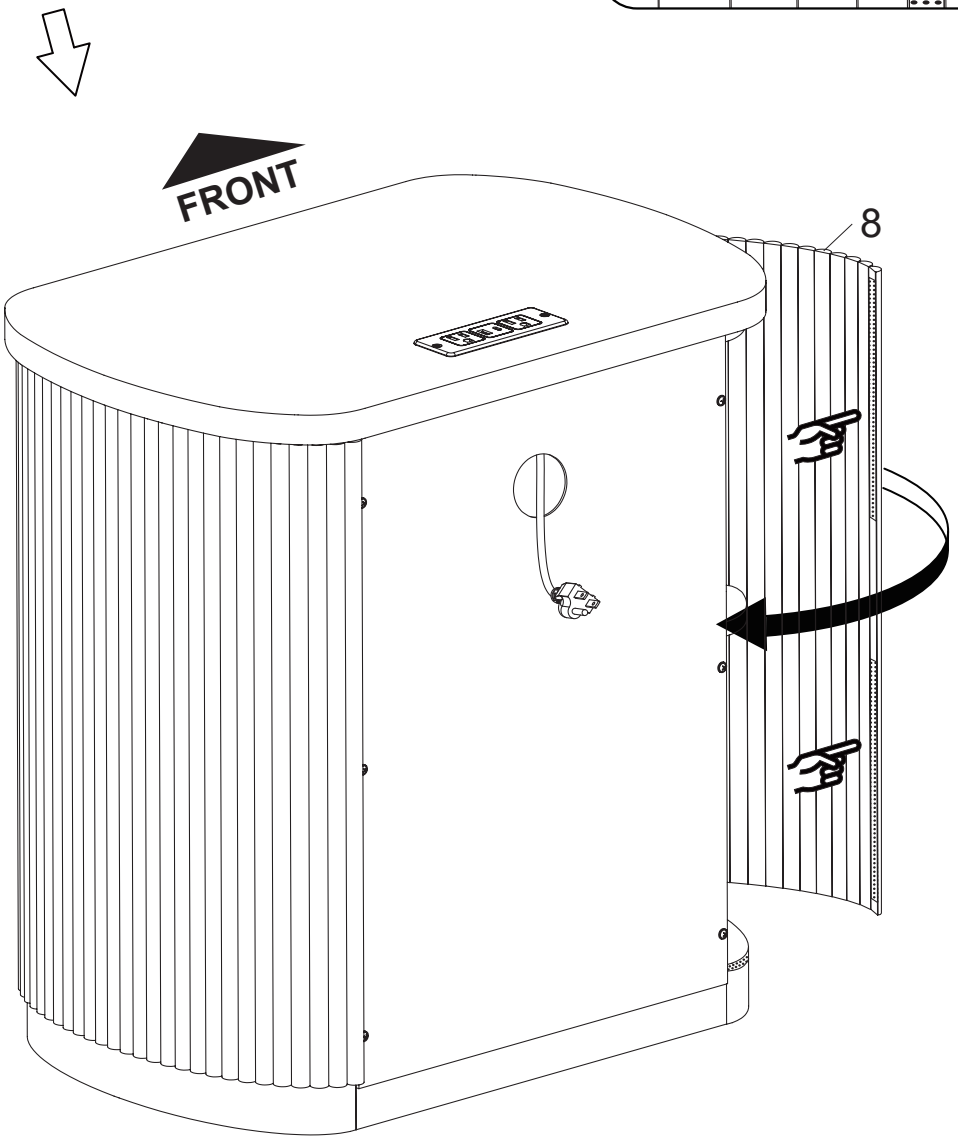

DESIGN IS IN THE DETAILS

Find **5** differences between the **2** images.



