


ASSEMBLY INSTRUCTIONS

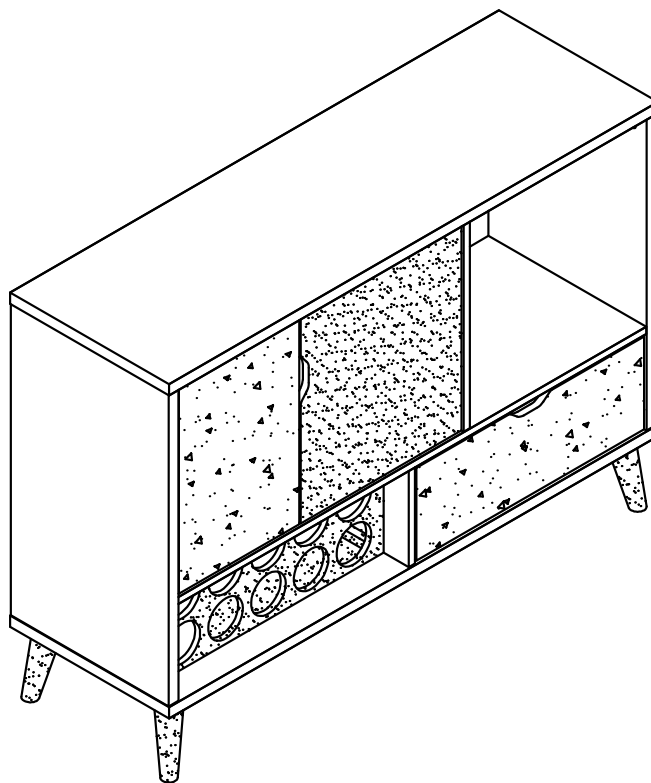

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For most products, two persons are recommended.


EASY



DIFFICULT


Tools Required for Assembly:

Phillips Screwdriver



(Not Included)

Hammer

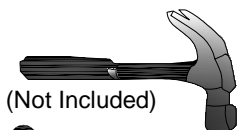

(Not Included)



2 PERSONS RECOMMENDED

Thank you for your purchase!

We hope you will enjoy your new product for many years to come. Our commitment to providing quality products does not simply end when a purchase is made. We stand behind our products and will provide any support needed in order for you to fully enjoy your purchase. Your satisfaction is the greatest recognition we could have.


Because we value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us any time. To help expedite the service, please have the assembly instructions available, along with your order receipt.




ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

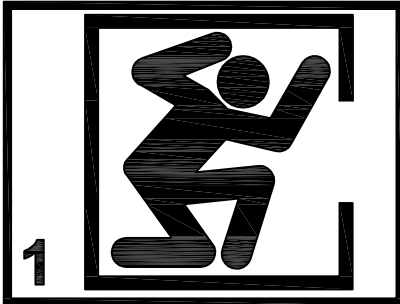


It is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly.

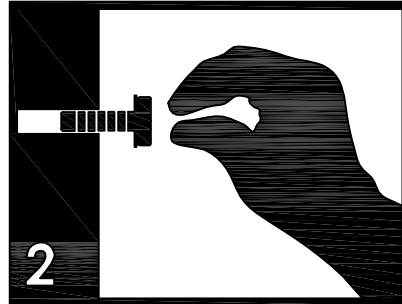


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

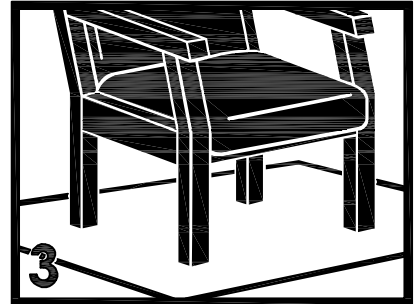


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

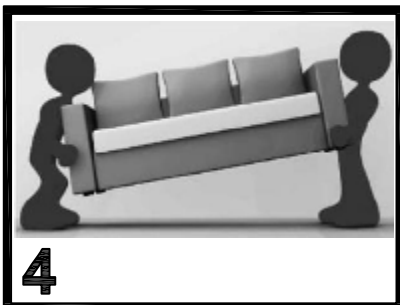

ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.

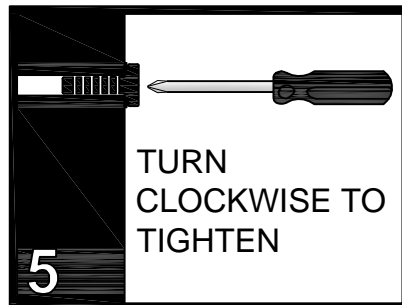


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

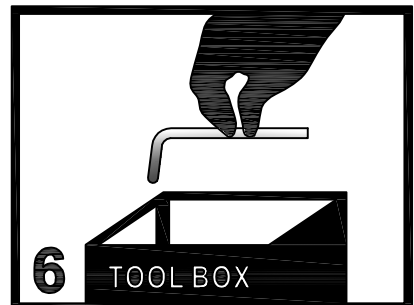

Save the instructions and store any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

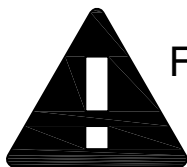

FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



PRE-ASSEMBLY INTRODUCTION

Unless you are particularly adept at assembling flat-pack/knock-down furniture, we understand building ready-to-assemble furniture can be a frustrating experience for some. To help avoid confusion and to make the assembly process quicker and smoother, we have provided some helpful tips. Before you begin the assembly, please read the following :

1. Due to the size and/or weight on most of the ready-to-assemble furniture, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling of the product to avoid any potential injury and/or damage.
2. To protect from damage, assemble the item on a clean, protective surface, such as on a carpet or cardboard.
3. Make sure you have taken all the parts and hardware out of their packaging. Do not throw away packaging material until assembly is completed.
4. Make sure all parts and hardware are accounted for by comparing the actual parts and hardware to the list provided in the assembly instructions. Also check for any irregularity such as crack, flaw or improperly drilled hole. If there is any problem or missing piece, please contact the manufacturer or the supplier. Please have the model number, part number and a brief description of the problem ready will help expedite the replacement process.
5. Read the entire instruction manual and view the diagrams first before assembling. Arrange your parts in order of use and group the identical hardware together to make it easier to grab each piece as you begin to assemble.
6. During the assembly process, make sure parts are properly aligned before tightening with the tool provided or required for the assembly. Do not use power tools and do not over tighten.
7. When applying glue to the wood dowels to bond the parts together, please be **ABSOLUTELY** certain that the parts are correct and lined up with each other (refer to diagrams and take notice of the various pre-drilled hole locations). When in doubt, assemble the parts together first and if the parts fit right, then apply glue to the wood dowels.




CAMLOCK FASTENER ASSEMBLY INSTRUCTIONS

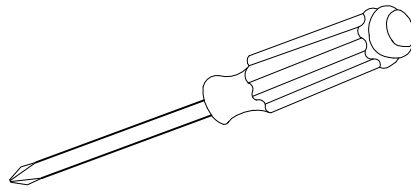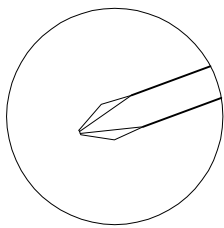


Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

- (1) Secure the threaded end of the cam bolt by using a screwdriver.




Turn right (clockwise) to tighten.

Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.

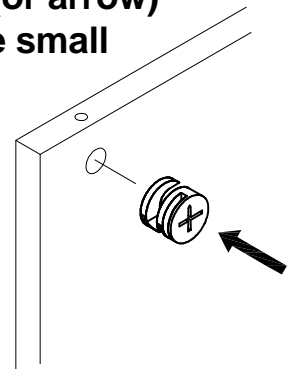

(2)

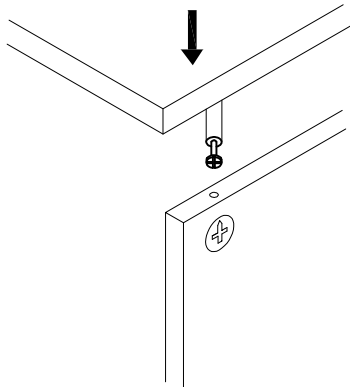


Insert the cam lock bolt into the pre-drilled hole above the cam connector.




(3)

Two parts should fit snugly against each other.

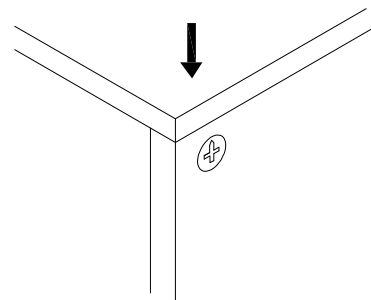

(4)

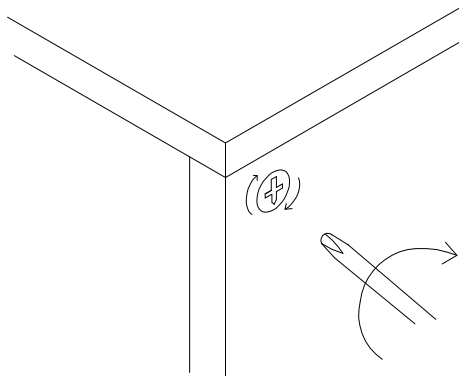


Turn right (clockwise) to tighten.

Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.



PARTS LIST

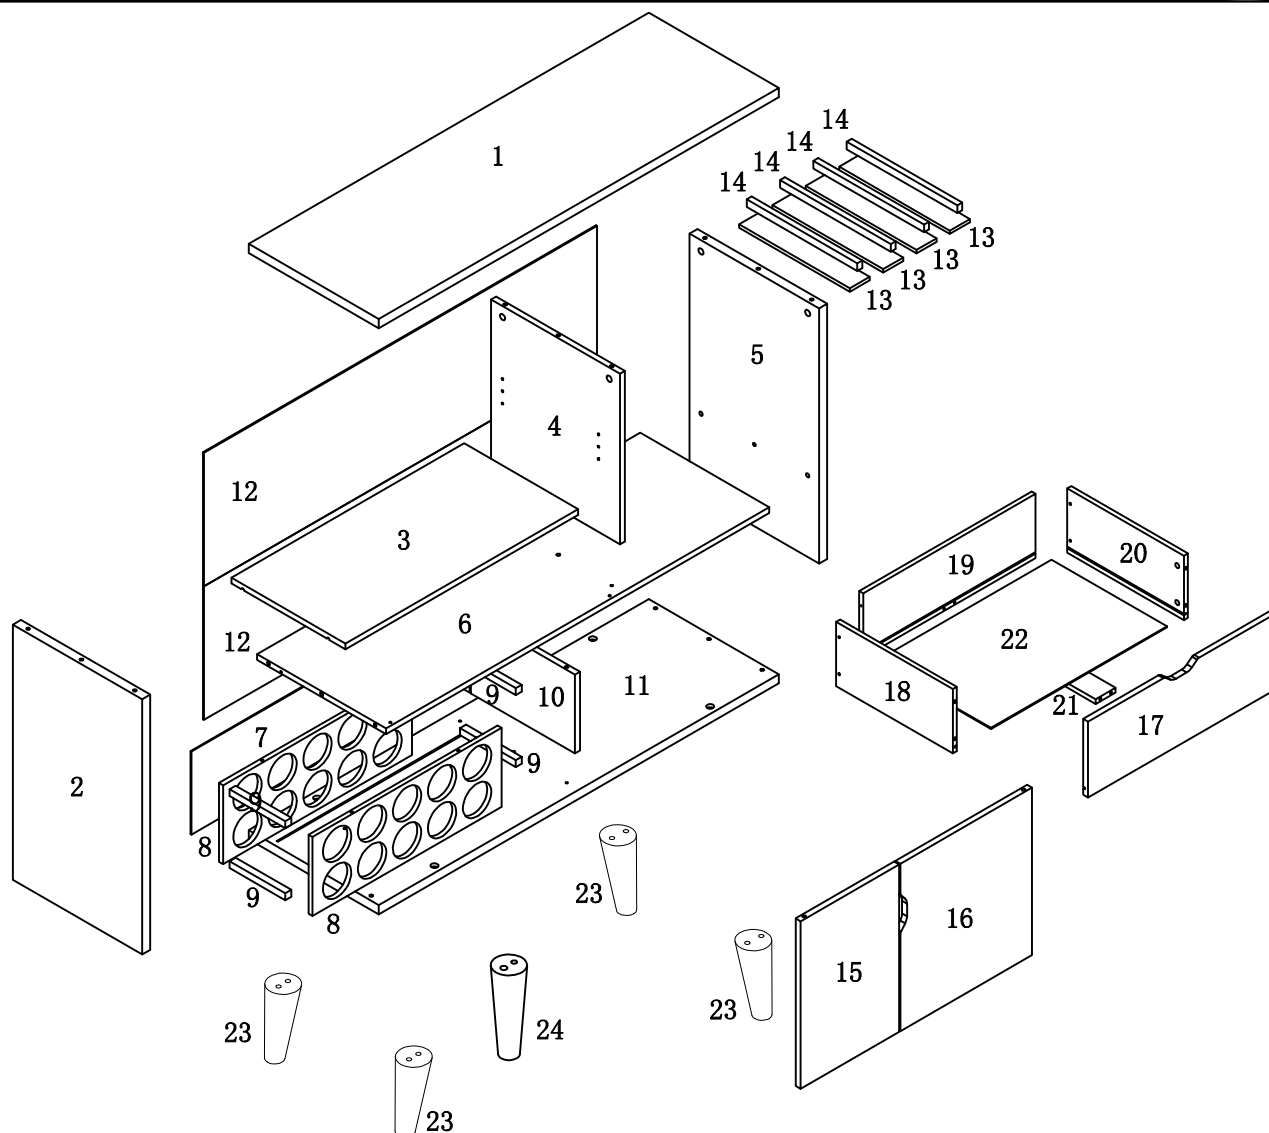





















(1) 1pc	(8) 2pcs	(15) 1pc	(22) 1pc
(2) 1pc	(9) 4pcs	(16) 1pc	(23) 4pcs
(3) 1pc	(10) 1pc	(17) 1pc	(24) 1pc
(4) 1pc	(11) 1pc	(18) 1pc	
(5) 1pc	(12) 2pcs	(19) 1pc	
(6) 1pc	(13) 4pcs	(20) 1pc	
(7) 1pc	(14) 4pcs	(21) 1pc	



Before you begin, please read "Assembly and Care Advice", "Pre-Assembly Introduction" and "Cam Lock Fastener Assembly Instructions".











HARDWARE LIST

A		L29	12pcs
B		Ø15	12pcs
C		L20	4pcs
D		Ø12	4pcs
E		Ø8x25	21pcs
F		Ø6x30	2pcs
G		Ø4x20	2pcs
H		Ø4x30	8pcs
I		Ø4x40	2pcs
J		Ø3x16 (BLACK)	4pcs
K		Ø3x14 (BLACK)	4pcs
L		M7x48	4pcs
M		M8x35	5pcs
N		M5	1pc
O		Ø8xØ16x2	9pcs
P		M6x35	8pcs
Q		BROWN	2pcs
R		BLACK	2pcs
S		Ø5x15	4pcs
T		WHITE	2pcs



Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage

HARDWARE LIST


U			32pcs
V		Ø16	5pcs
W		Ø22 (BLK3)	16pcs
X		Ø13 (BLK3)	8pcs
Y		197×5×1	1pc
Z		Ø4x25	1pc
A1		12×12×1	2pcs
B2		Ø5x40	1pc
C3		Ø8x40	1pc
D1		Glue: For securing please apply to wood dowel first before inserting into panel	1pc



Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage

ASSEMBLY INSTRUCTIONS

HOW TO





Cam Bolt





Cam Lock



	1	2	3	4
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

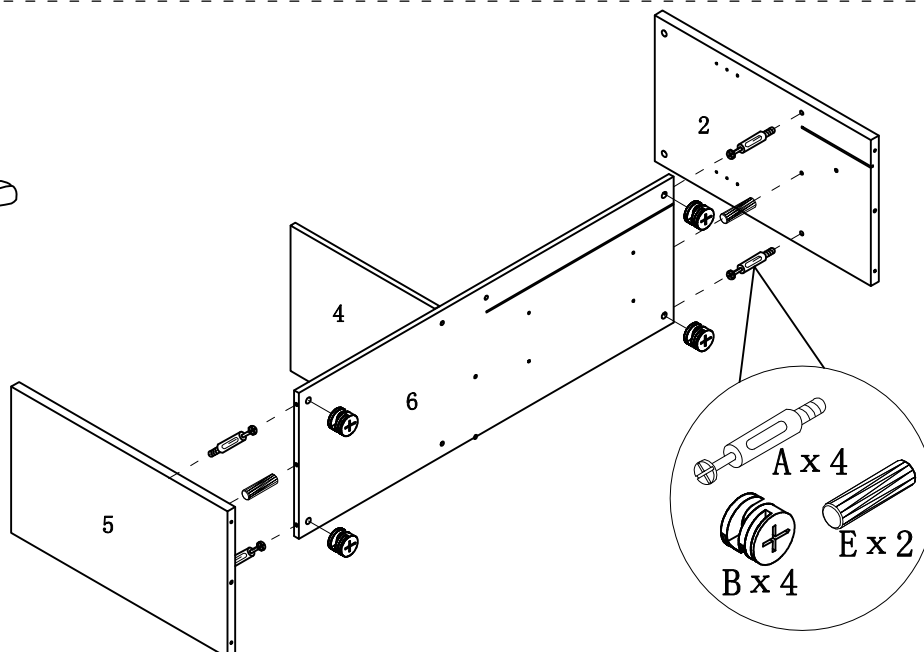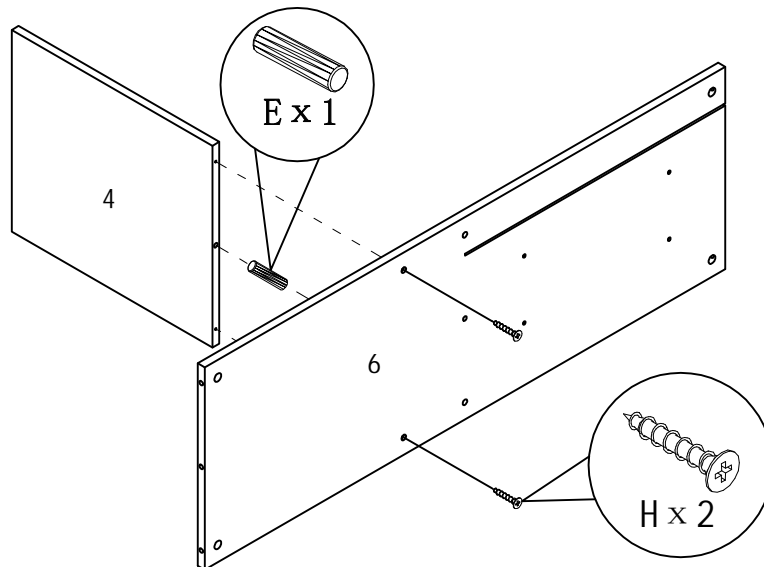



ASSEMBLY INSTRUCTIONS

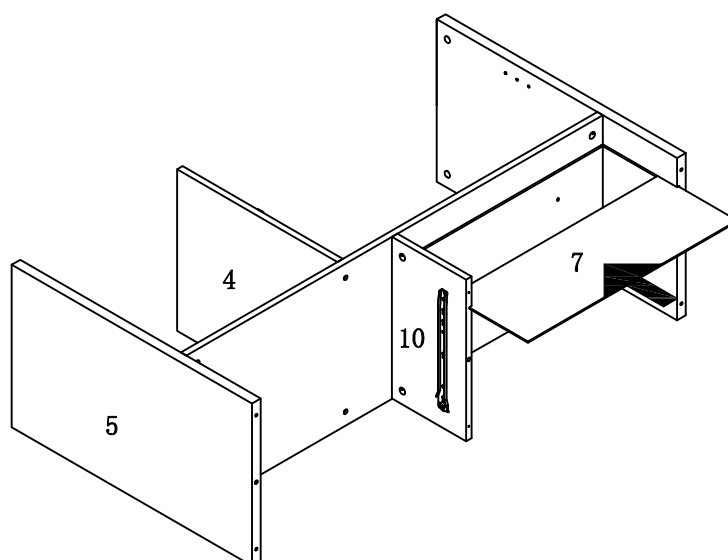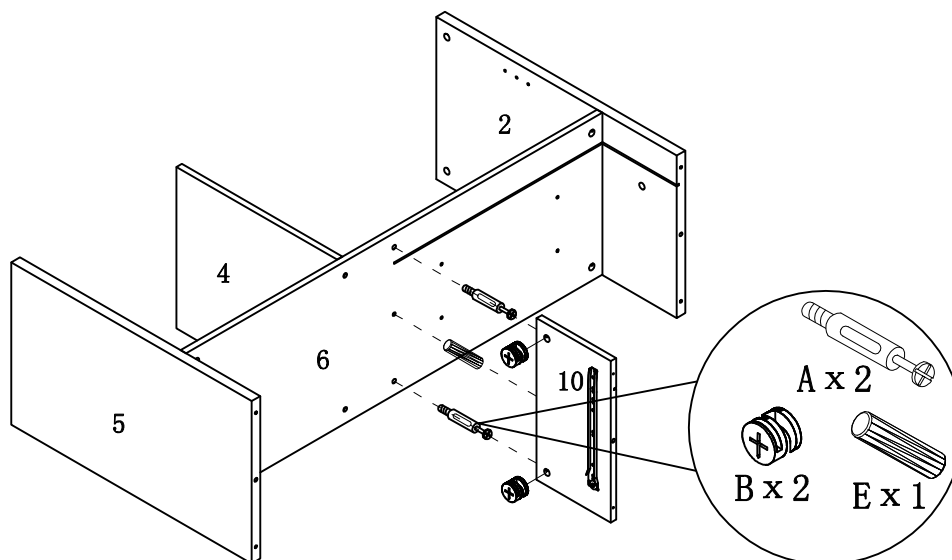



ASSEMBLY INSTRUCTIONS

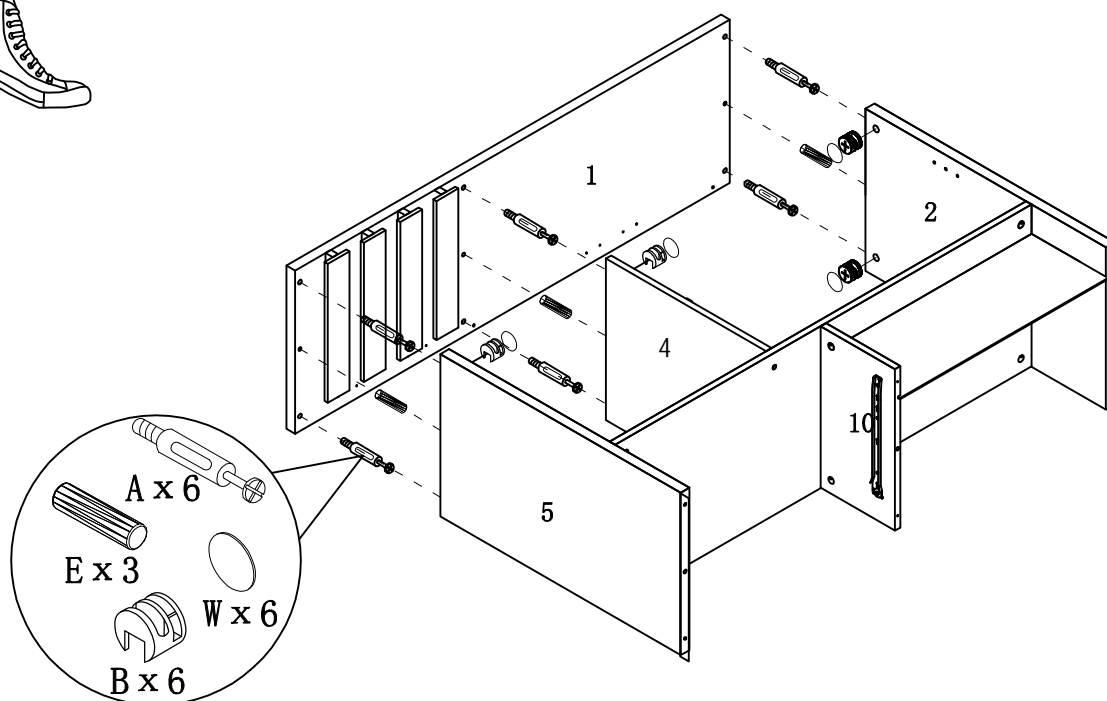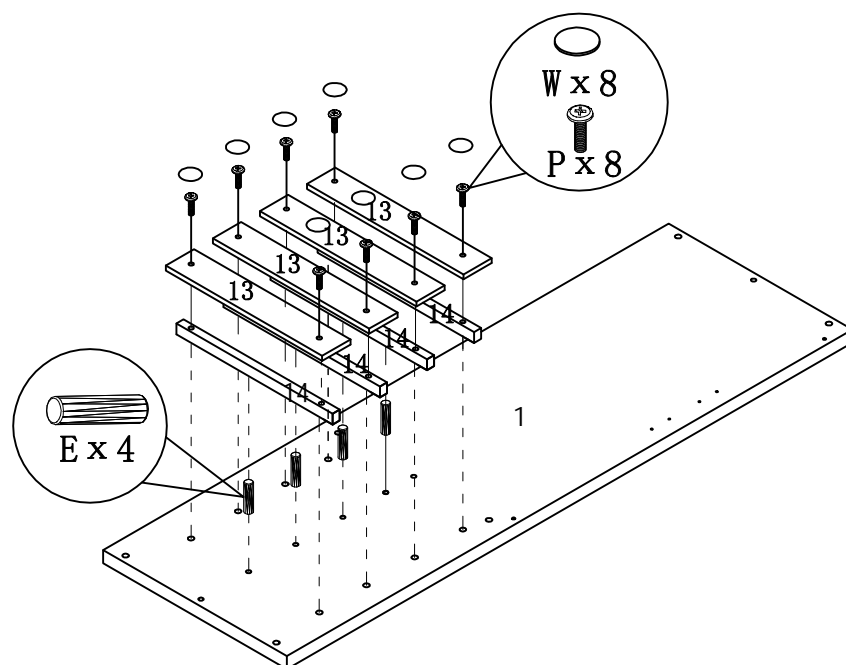



ASSEMBLY INSTRUCTIONS

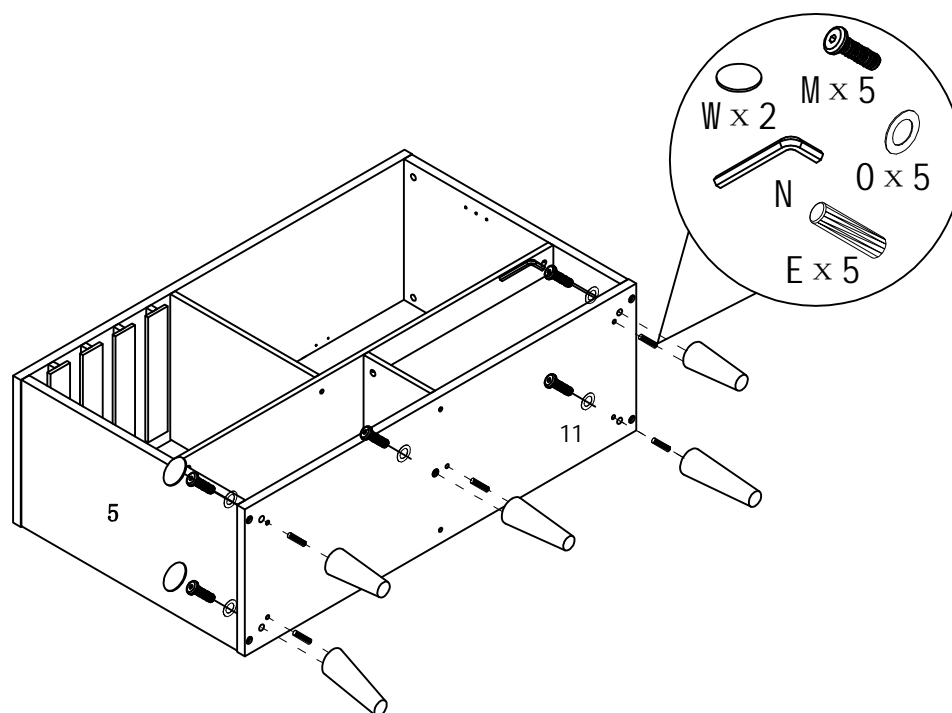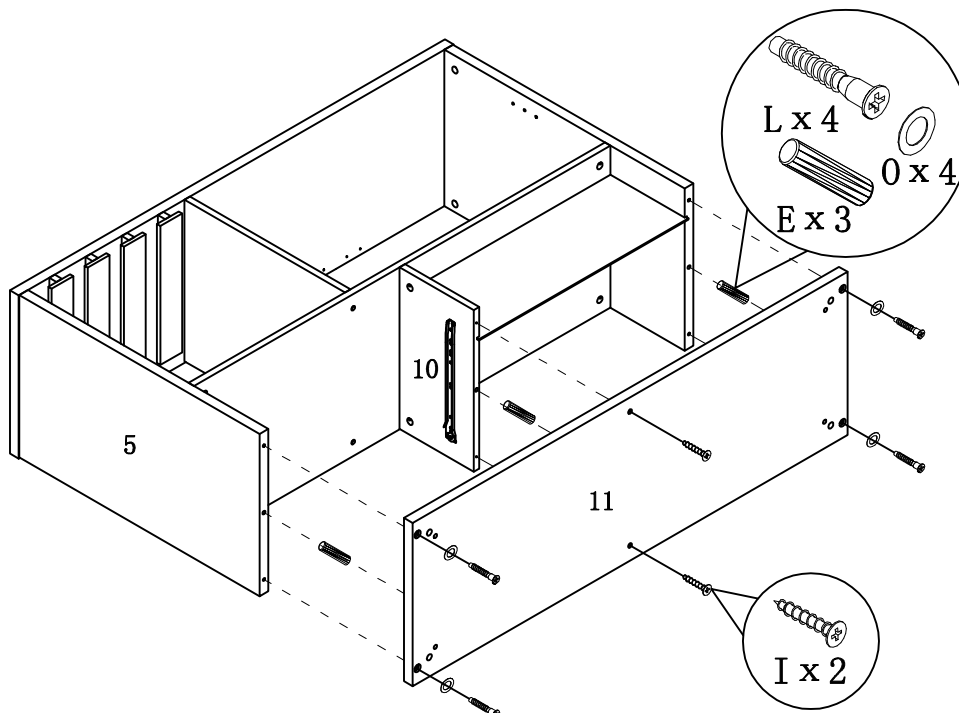

ASSEMBLY INSTRUCTIONS

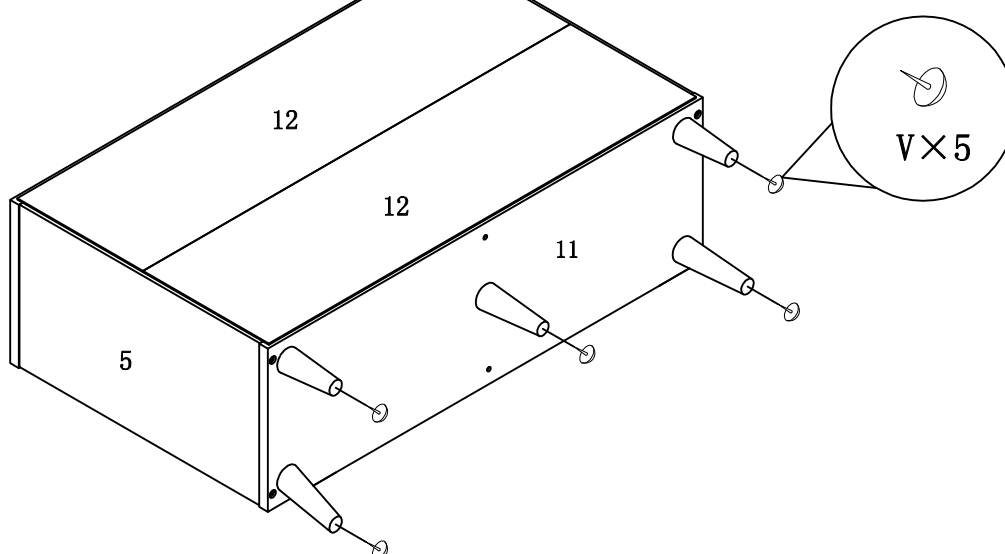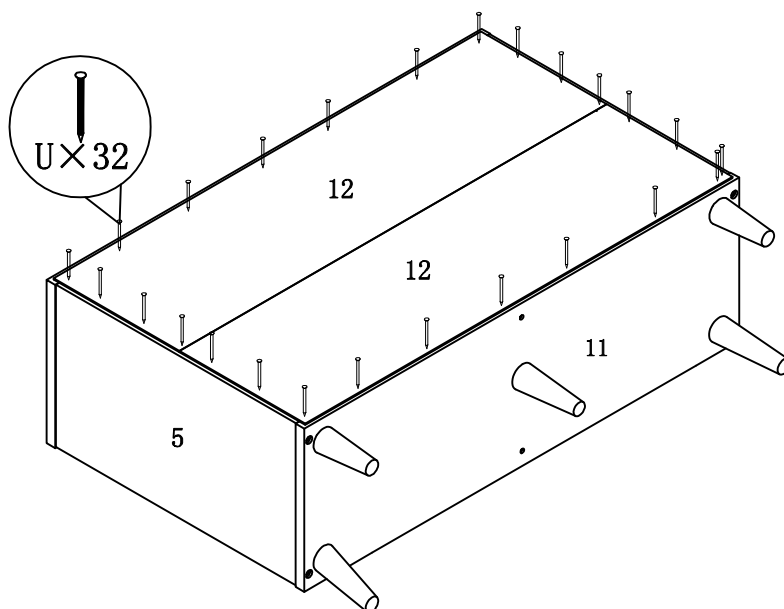


ASSEMBLY INSTRUCTIONS

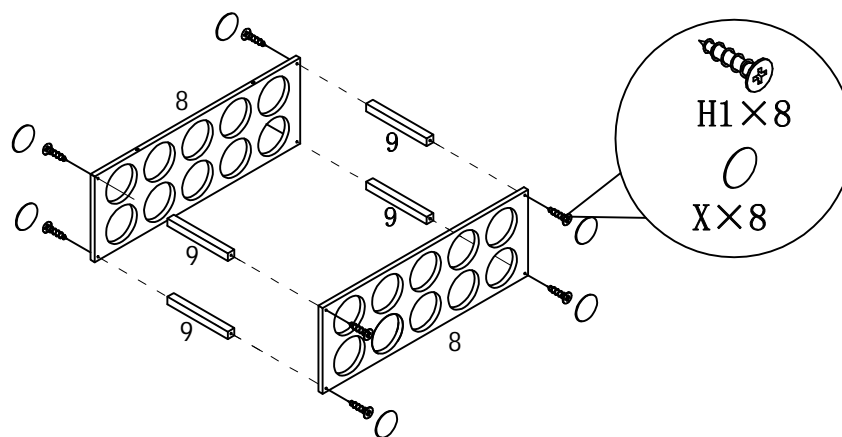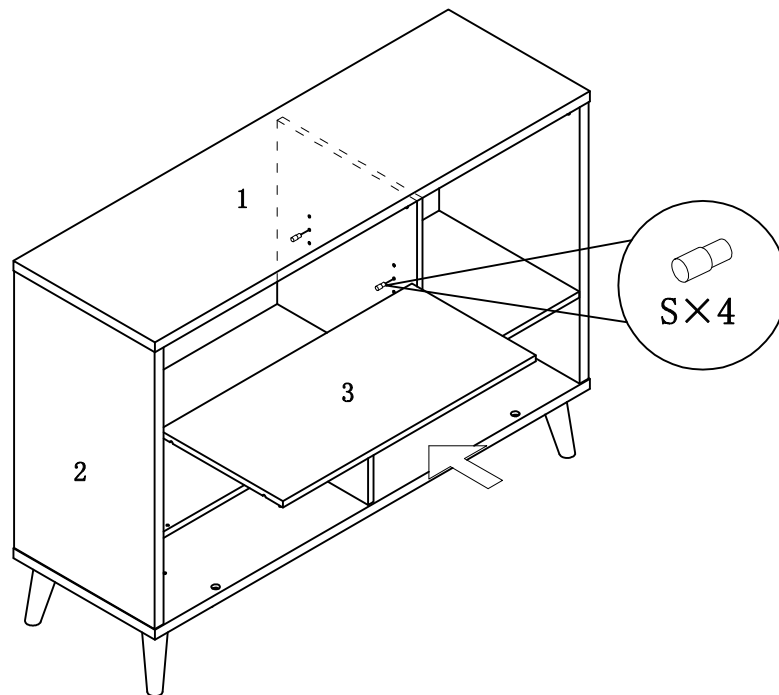


ASSEMBLY INSTRUCTIONS



#13

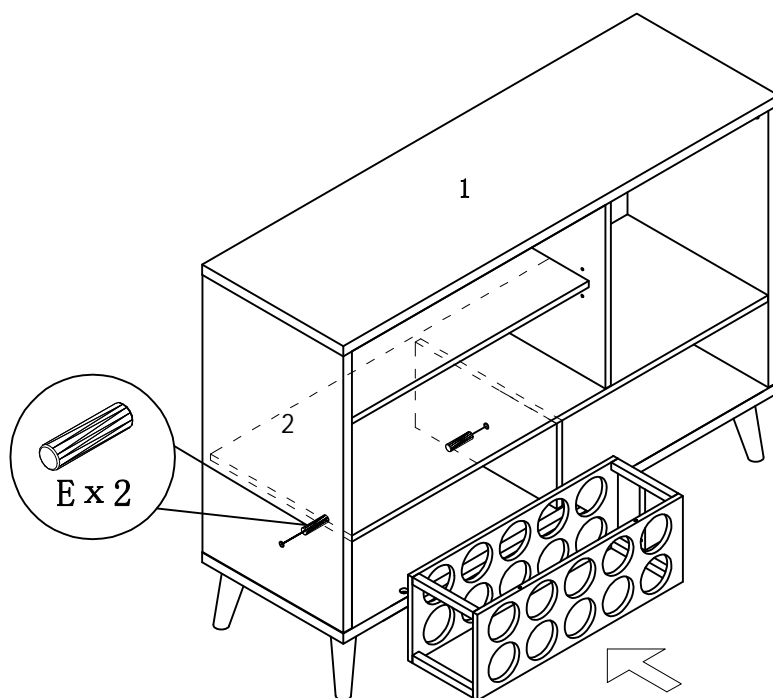




#14

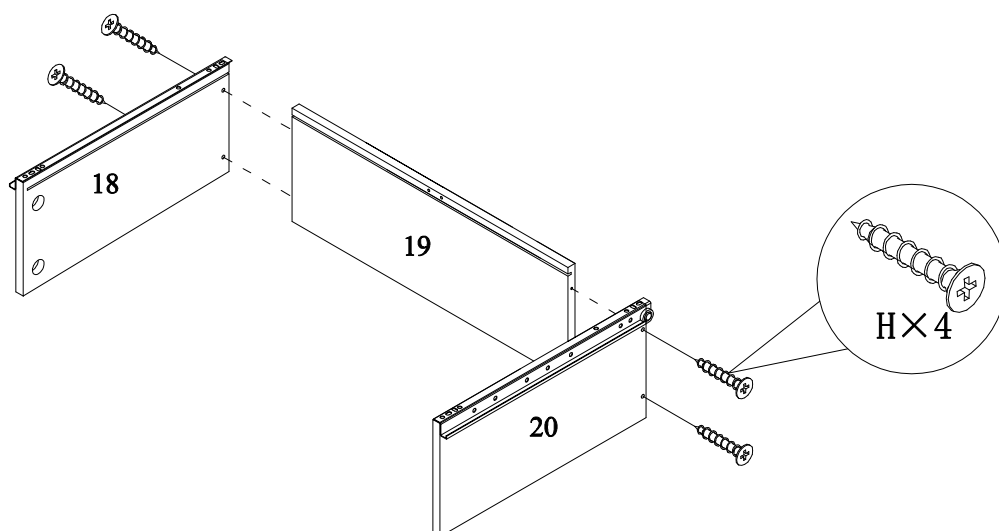

ASSEMBLY INSTRUCTIONS

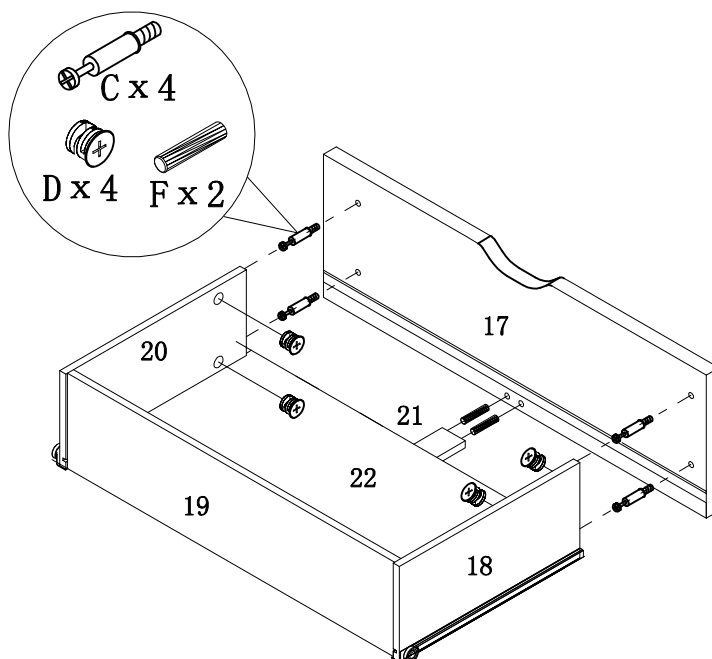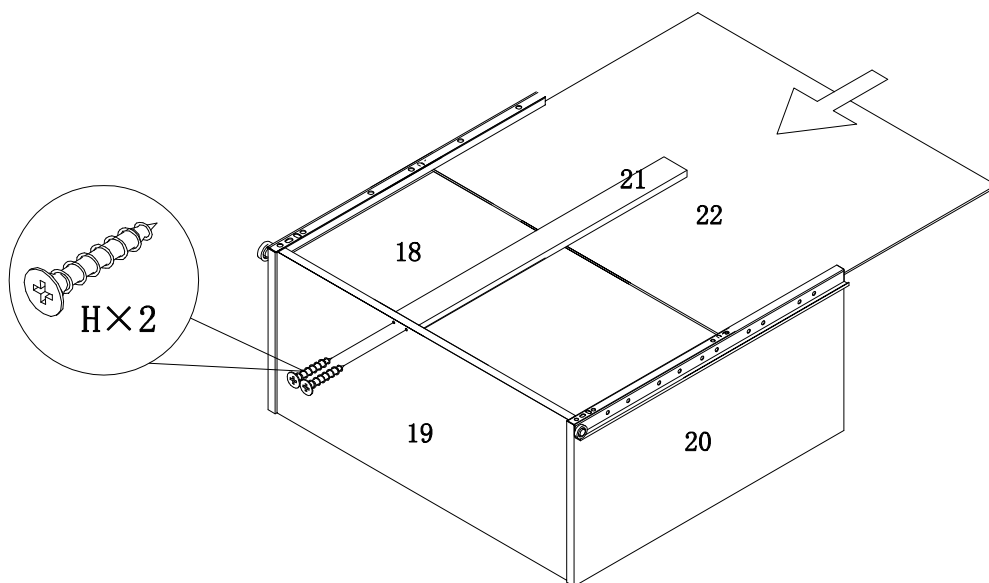

ASSEMBLY INSTRUCTIONS

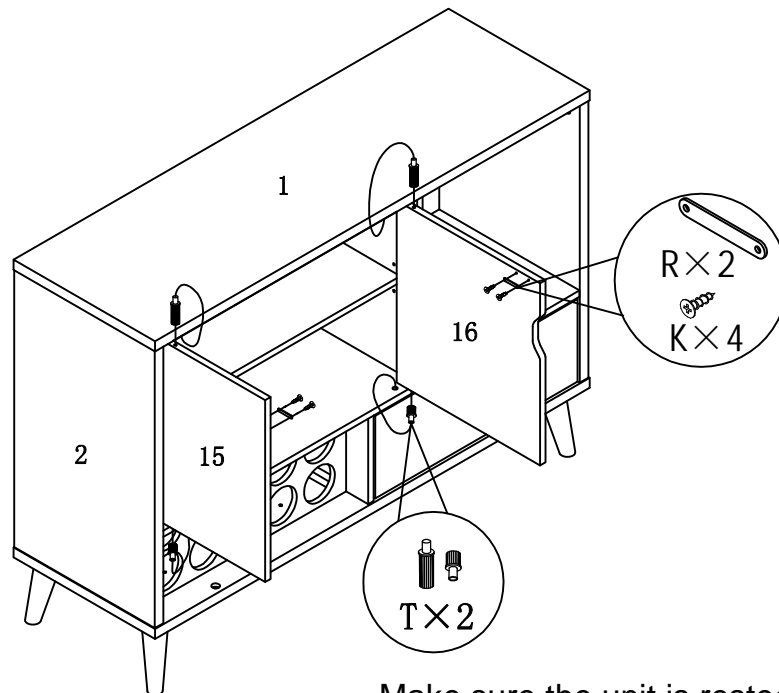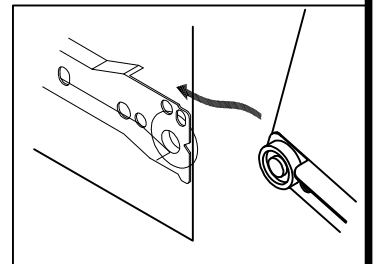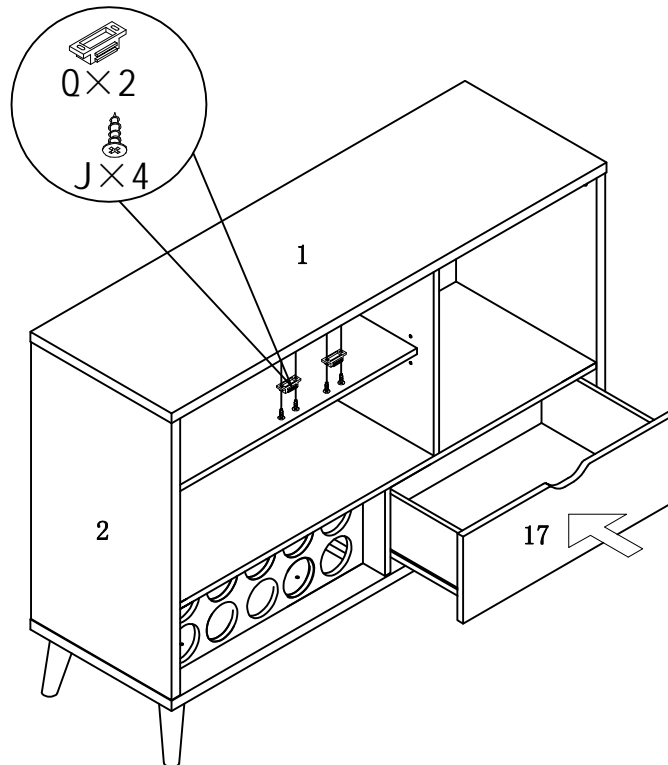


Make sure the unit is rested on a flat surface and does not feel loose or wobbly
If it does, double check that the bolts/screws are secured and properly tightened


ASSEMBLY IS COMPLETED

Anti-Tipping strap Instruction

Hardware List (Included):



Drywall Anchor 1PC



Metal Brackets 2PC



Drywall screw 1PC




Strap 1PC



Flathead Screw 1PC

Tools(Not Included):

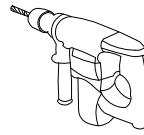


Drill & Drill Bit



Light Hammer


Note: Hardware included only compatible with standard drywalls.

STEP 1

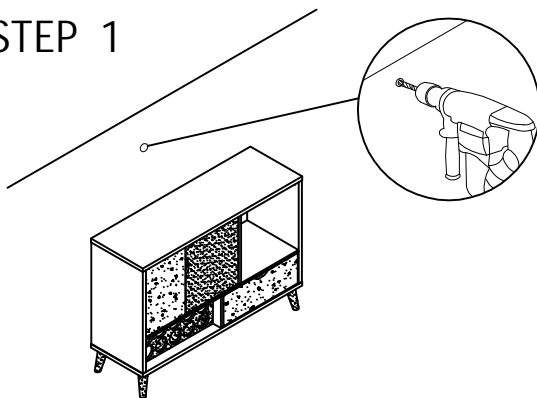


- 1.Find spot on wall 1" below top of item.
- 2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

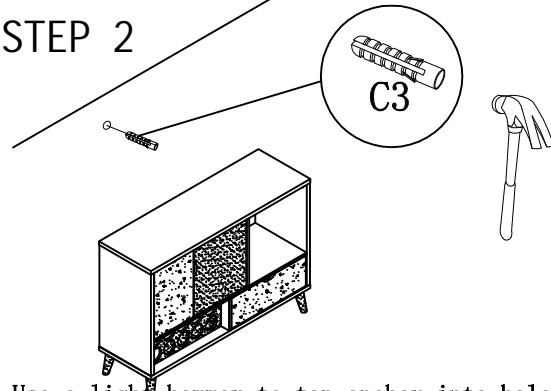


- 1.Use a light hammer to tap anchor into hole.
- 2.Anchor should fit snugly.If hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

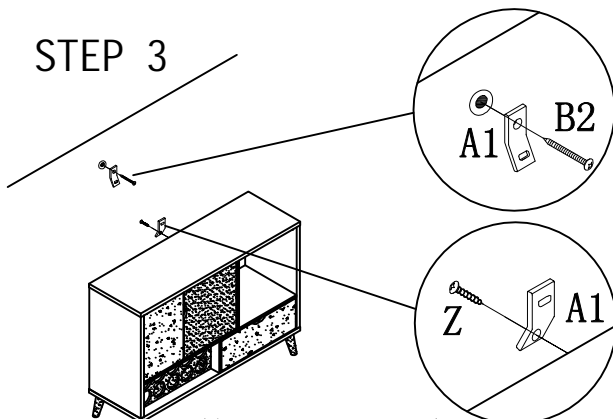

- 1.Insert drywall screw into metal bracket and into drywall anchor.
- 2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

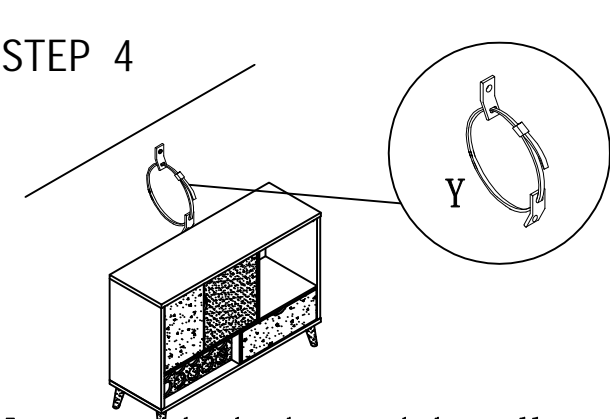

- 1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
 - 2.pull lightly til strap stops.
- Assembly is complete.**