

I. SAFETY GUIDELINES

 WARNING

For your own safety, please strictly follow the instructions in this manual, otherwise personal injury may result!

Before you proceed, please read the following safety precautions:

- Separate and count all parts and hardware.
- Canopies can be attached to one another. This requires two people working together, positioning the two/three together from an upright position. Once the two/ three canopies have been connected to one another, screw the bracket together securely. Then affix to the wall.
- Note:If you want to continue to assemble the canopy in larger sizes, you can purchase Macrout canopy to complete your assembly requirements.

II. MAINTENANCE

- Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your window canopy.


III. ASSEMBLY INSTRUCTIONS

1. Preparation


- Before you start the installation, check your parts against the parts list.
- At the same time, you need to double check that the reserved size meets the installation of the product.

	Width	Height
6055-WP740	37.4"	7.3"
6055-WP780	74.8"	7.3"
6055-WP712	112.2"	7.3"

- Please prepare all the necessary tools.




Tapeline



Hammer



Cross Screwdriver



Drill






Open-ended Wrench (17mm)








Stairs

2. Part List

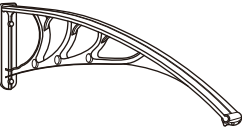
6055-WP740				
A  Board x2	B  Back Fixing Bar x1	C  Bracket x2	D  Front Fixing Bar x1	E  Expansion Bolts x4
F  Connecting Rod x1	G  Screws (M4x20mm) x4			

6055-WP740 Exploded View


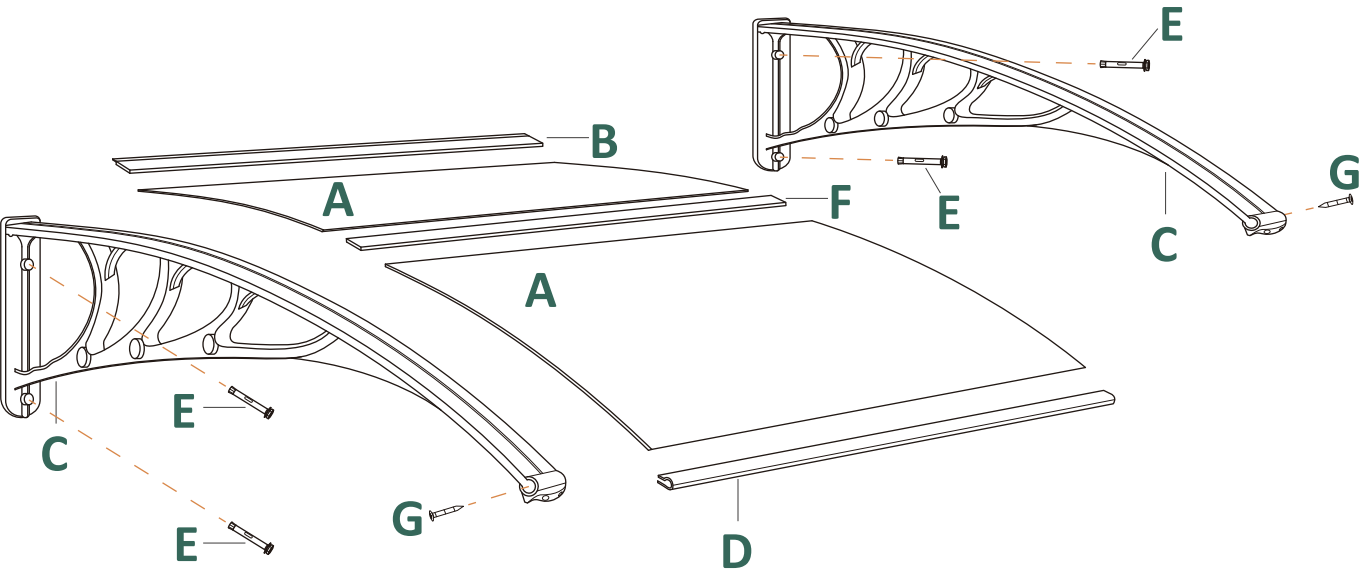


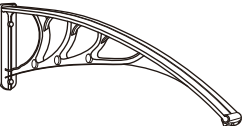6055-WP780				
A  Board x4	B  Back Fixing Bar x2	C  Bracket x3	D  Front Fixing Bar x2	E  Expansion Bolts x6
F  Connecting Rod x2	G  Screws (M4x20mm) x4	H  Screws (M4x10mm) x4		


6055-WP780 Exploded View

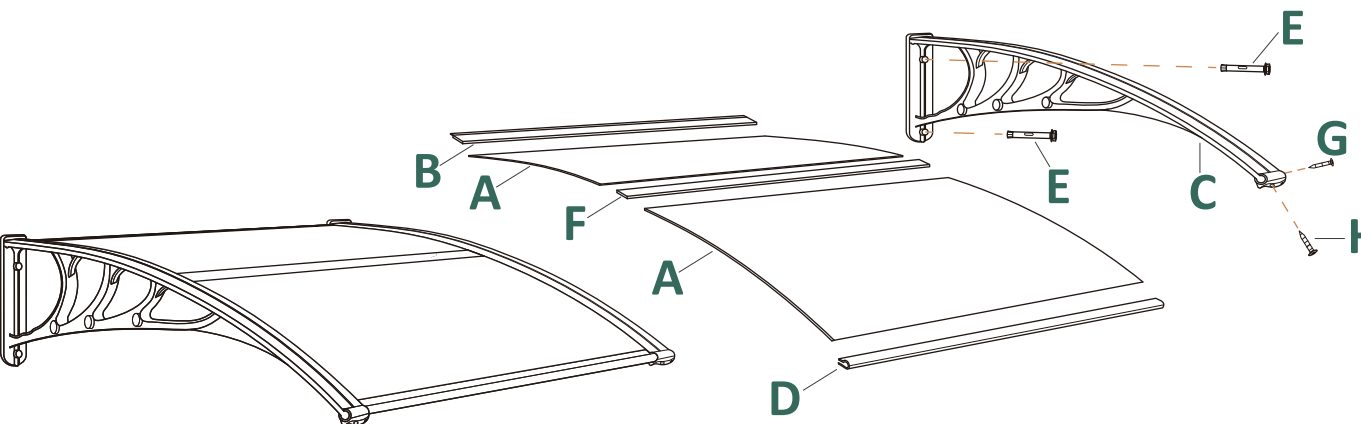

6055-WP712

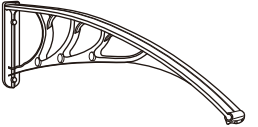A  Board x6	B  Back Fixing Bar x3	C  Bracket x4	D  Front Fixing Bar x3	E  Expansion Bolts x8
F  Connecting Rod x3	G  Screws (M4x20mm) x4	H  Screws (M4x10mm) x8		


6055-WP712 Exploded View

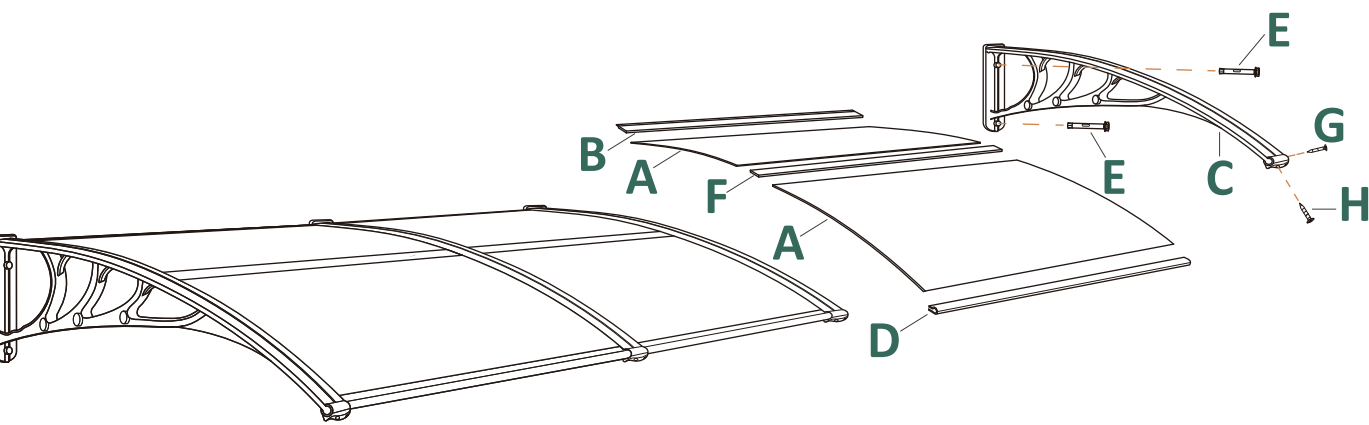


3. Assembly Steps

Step1 - Frame Assembly


- (1). Place the Boards #A on a clean surface.
Flip the Boards #A over and peel off the protective film on top.

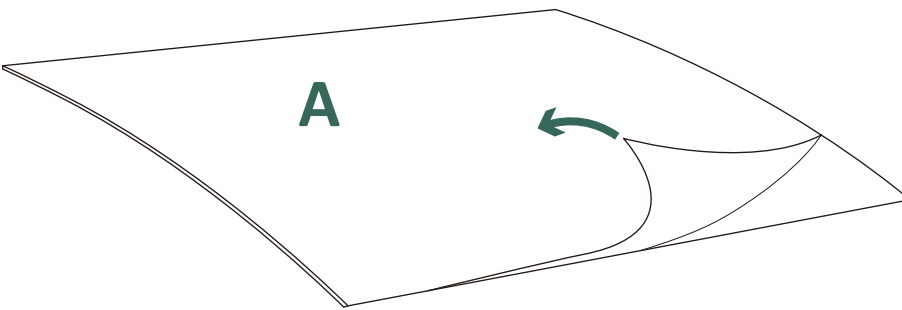


- (2). Insert the Connecting Bar #F into the long side of the Board #A.

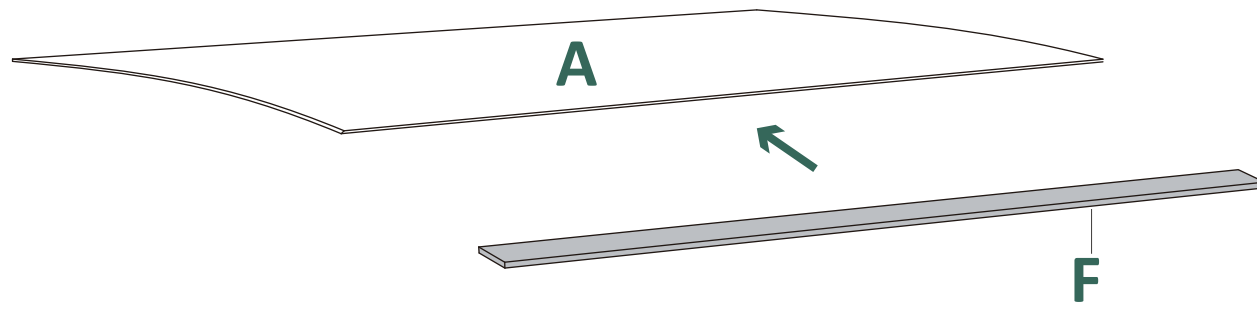

(3). Insert the Front Fixing Bar **#D** and the Back Fixing Bar **#B** into the side of the Board **#A**.

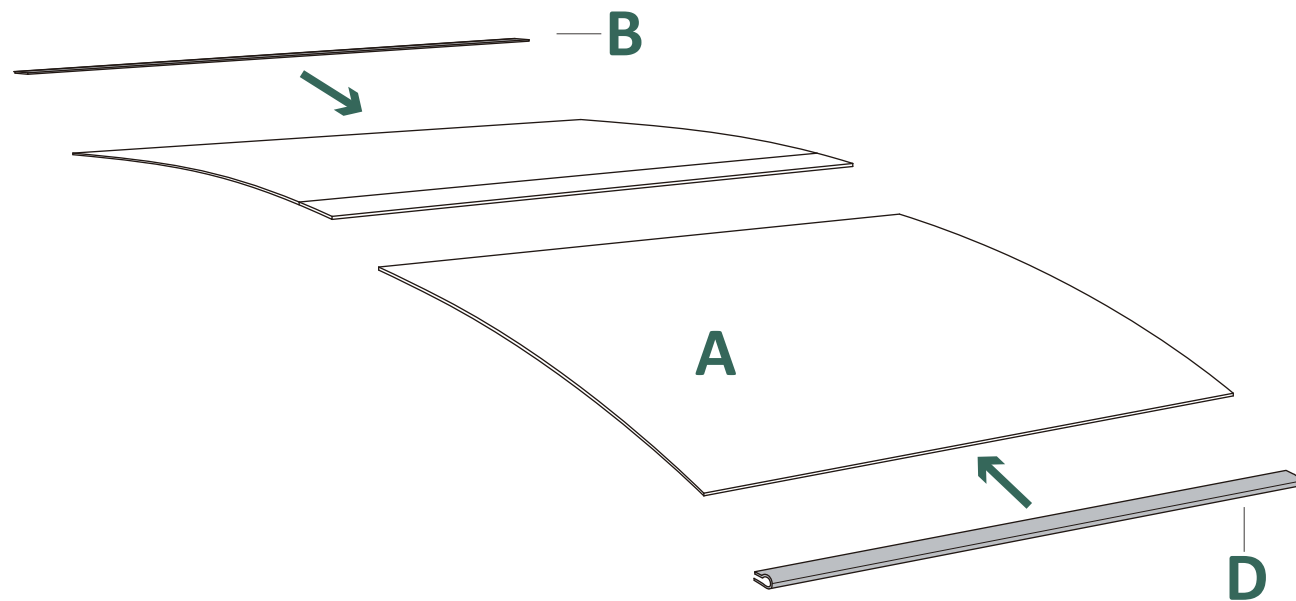


(4). Lay the Bracket **#C** on the clean and smooth floor. In the order shown in the picture, insert the Board with Front Fixing Bar **#D** towards the pointed end of the bracket, and the Board with Back Fixing Bar **#B** towards the ridges of the bracket.

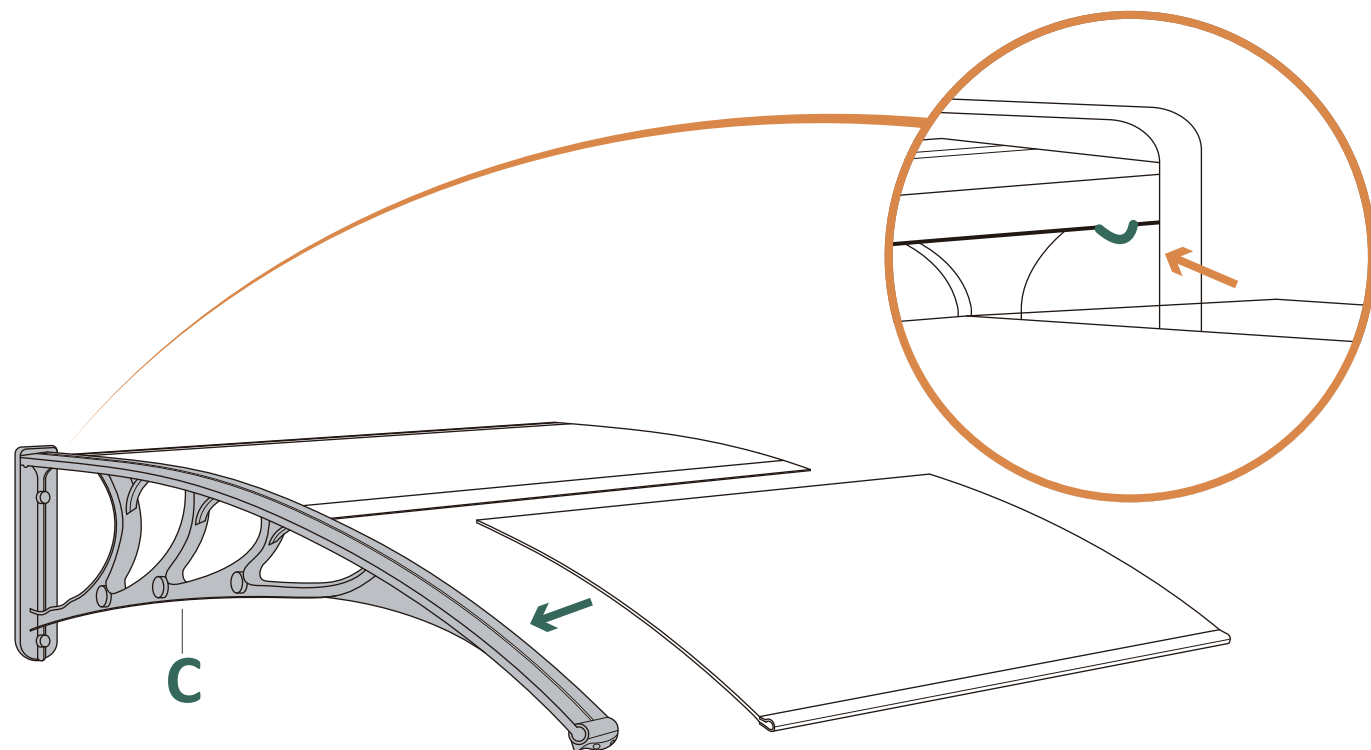


(5). Insert the other Bracket **#C** into the hole.

Strike the back sides of the Bracket **#C** with a wooden hammer until the gaps disappear.


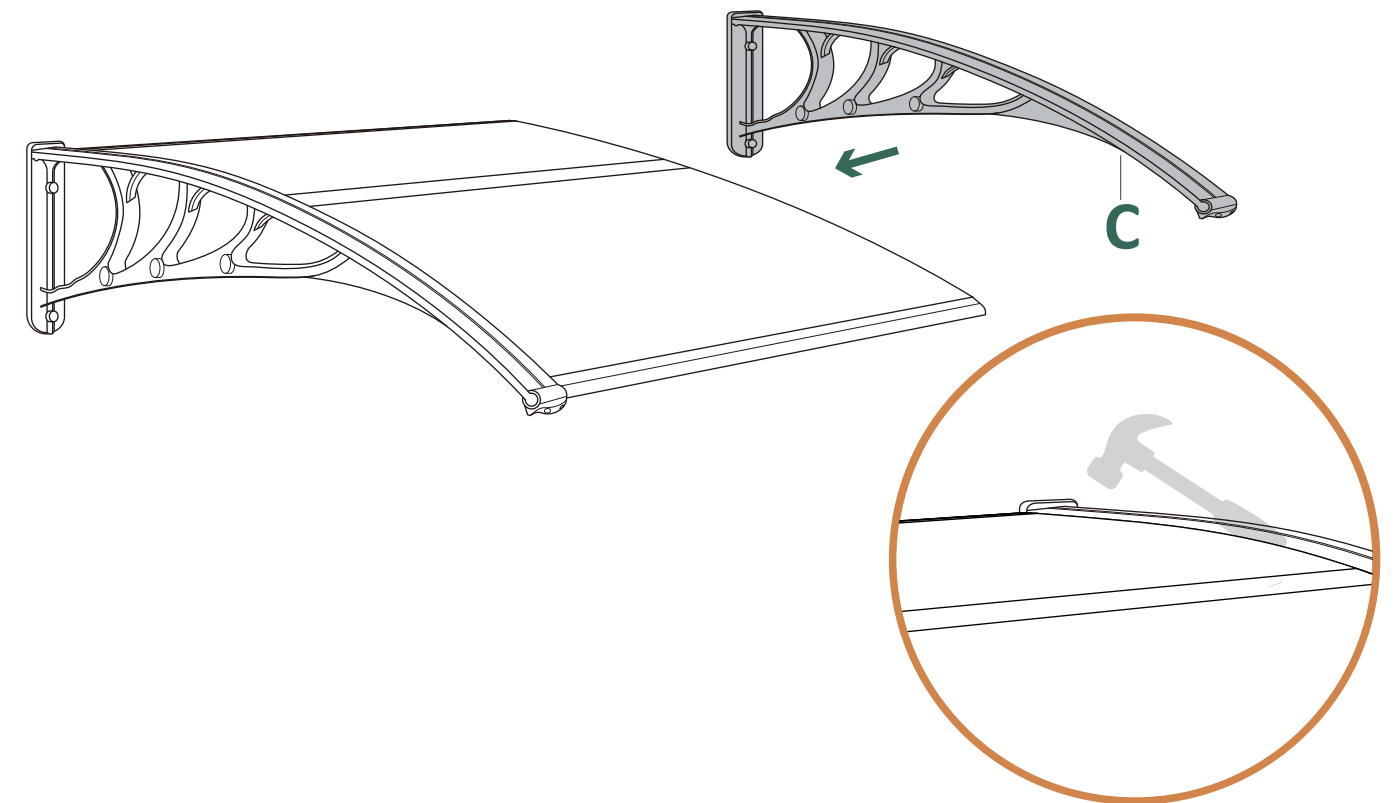


(6). Install screw **#G** to fix the two holes on both sides of the Brackets **#C**, and install screw **#H** to fix the holes on the inside of the front end of the Brackets **#C**.

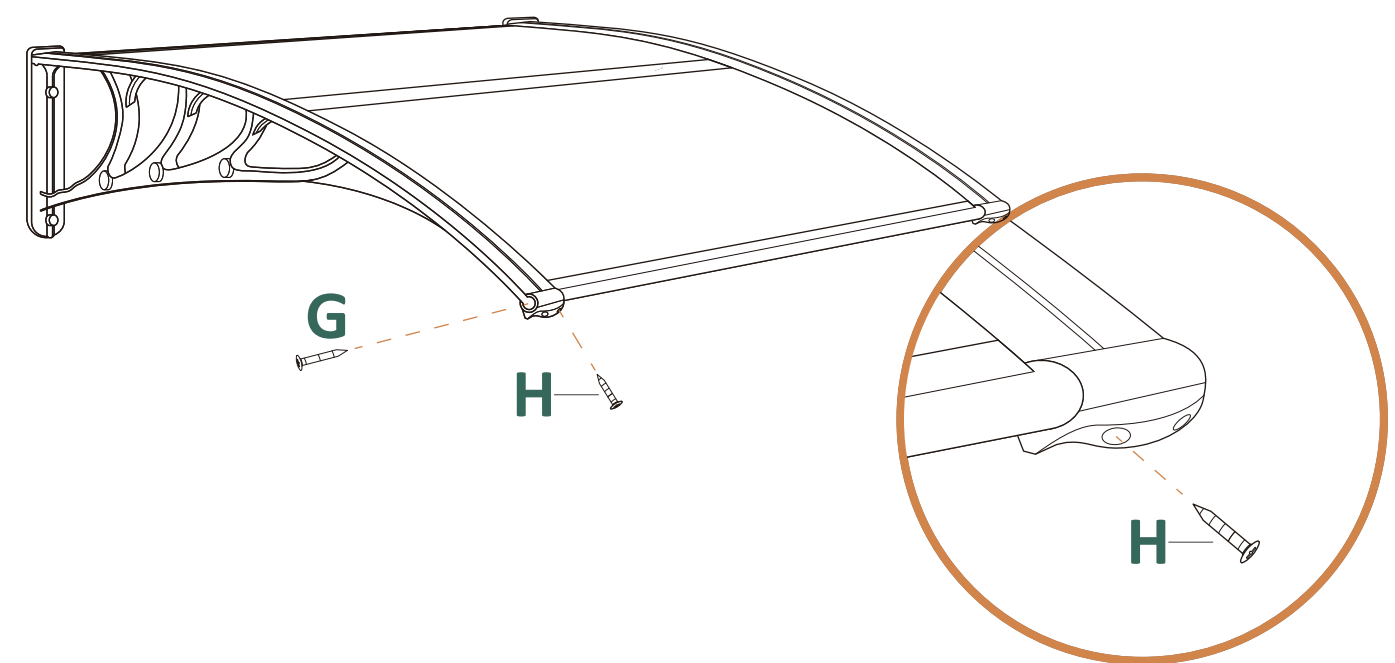


Step2 - Mounting to the wall

- (1). Referring to the following distances, measure the distance between the bracket fixing holes from the centre of the screw holes on the left and right brackets: 37.4"(WP740)) / 74.8"(WP780) / 112.2"(WP712).
Distance between upper and lower screw holes: 7.3".
Use a 10mm drill bit to drill 3.15" at the four hole marks.

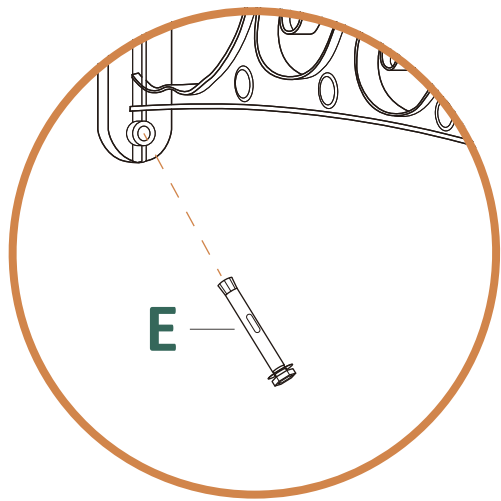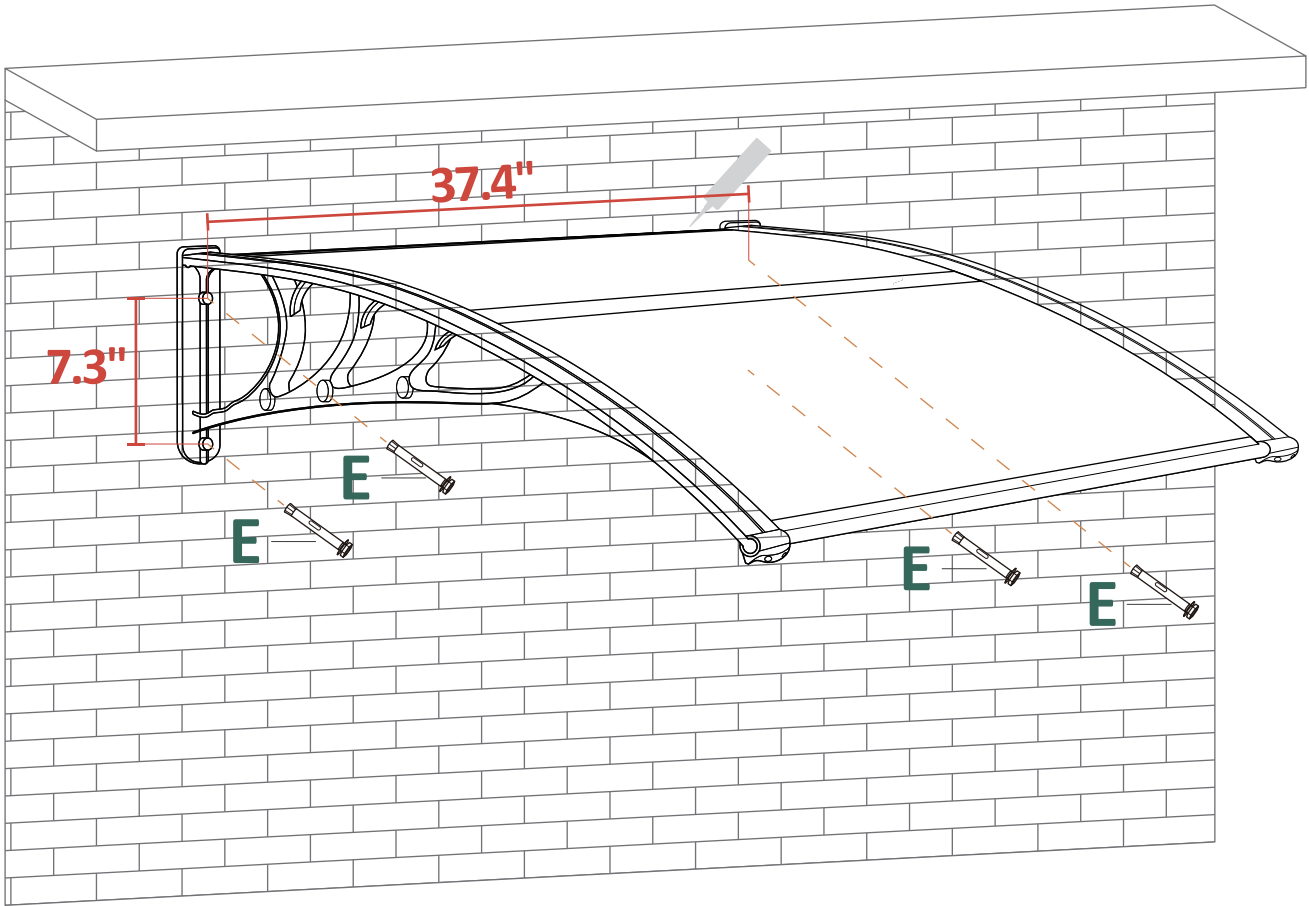

- (2). Insert Expansion Bolts #E through the Brackets #C into the drilled holes.

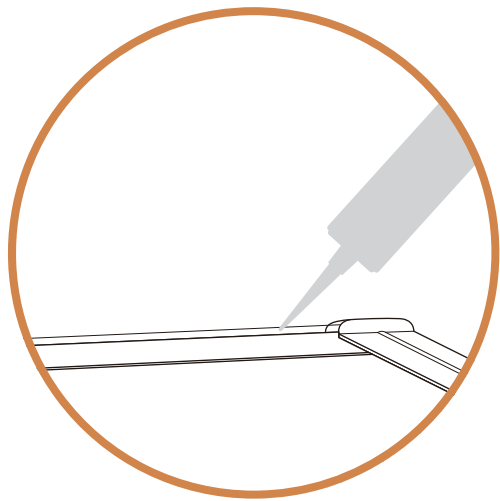


- (3). In order to improve the waterproof performance, you can use a waterproof sealant at the edge, of course it is up to you.


4. Assemble in Larger Sizes

WP780: After installing an WP740 canopy


- (1). If you need to assemble the canopy in larger sizes (WP780), you can follow the previous steps above to assemble the remaining parts.

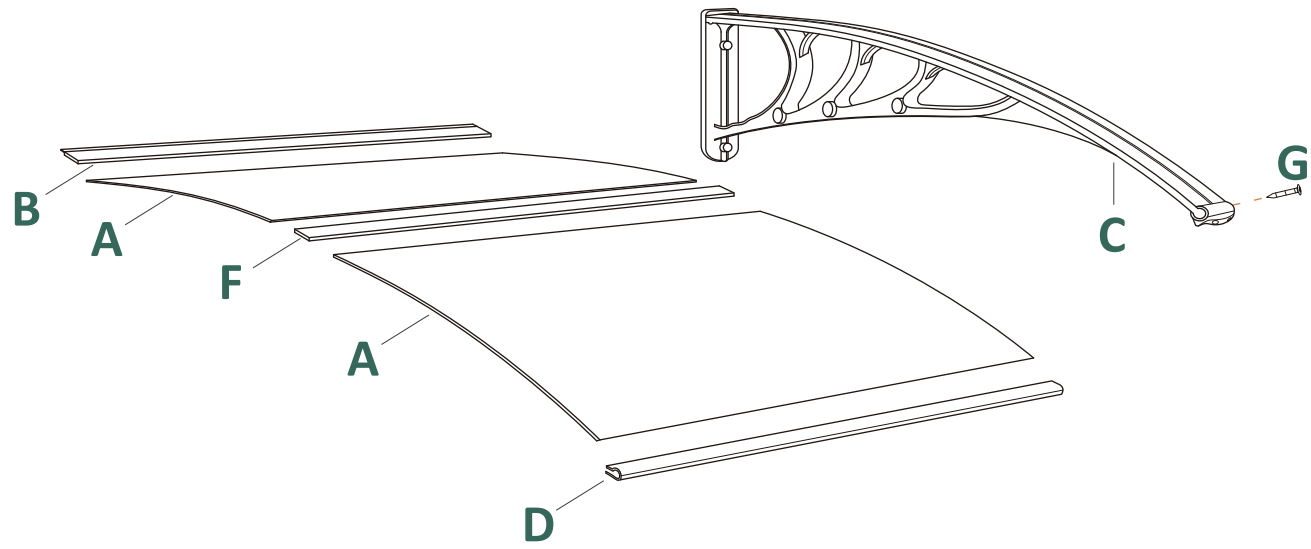

- (2). Please note that there are two small round holes in the upper back of Bracket #C.

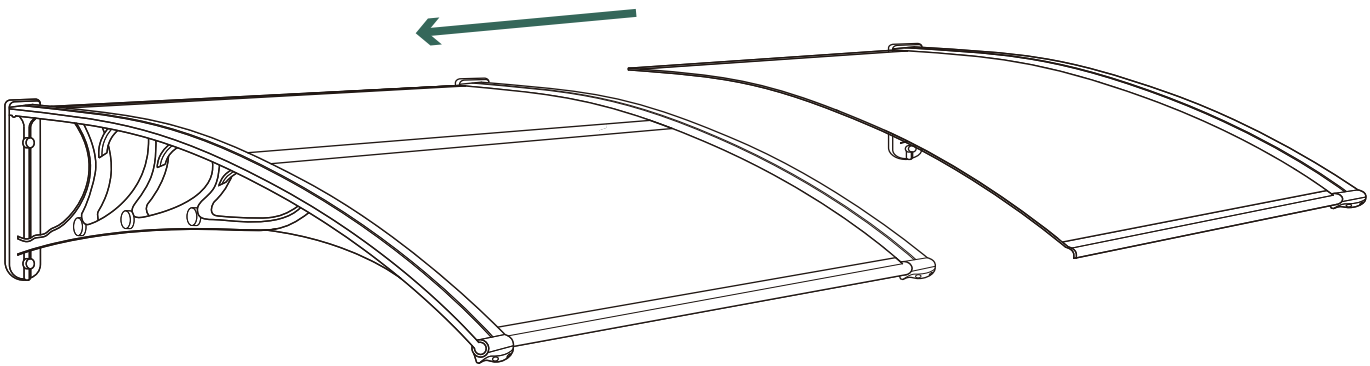


(3). The holes of the Bracket **#C** in the middle of the two awning needs to be fixed with screw **#H**.

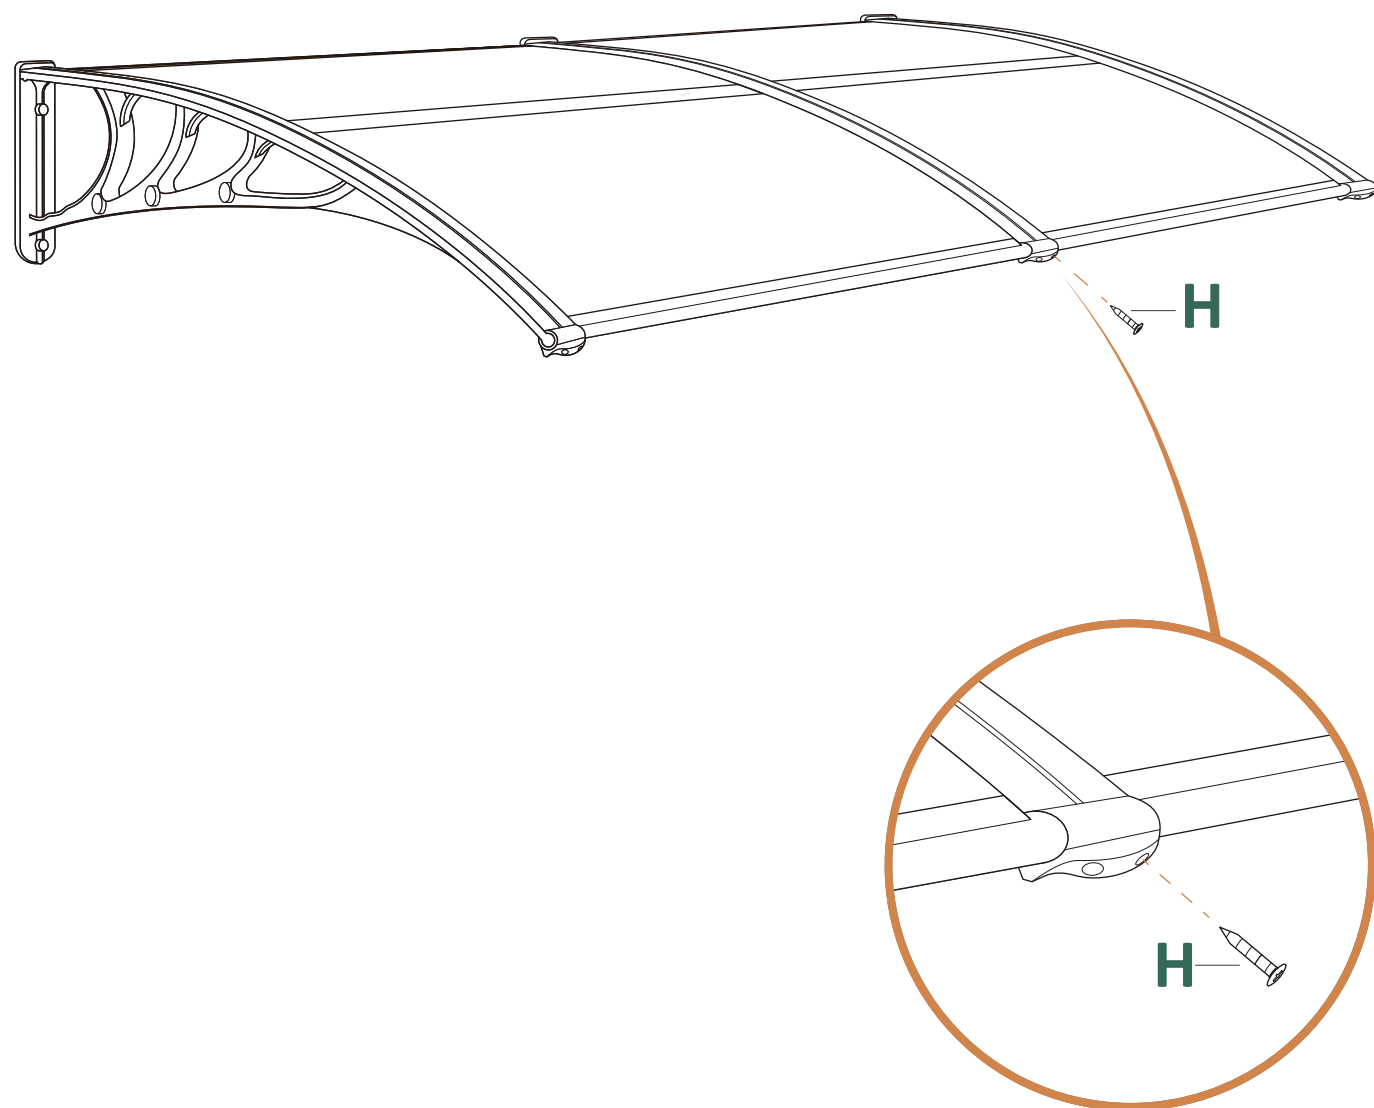

WP712: After installing an WP780 canopy

(1). If you need to assemble the canopy in larger sizes (WP712), you can follow the previous steps above to assemble the remaining parts.

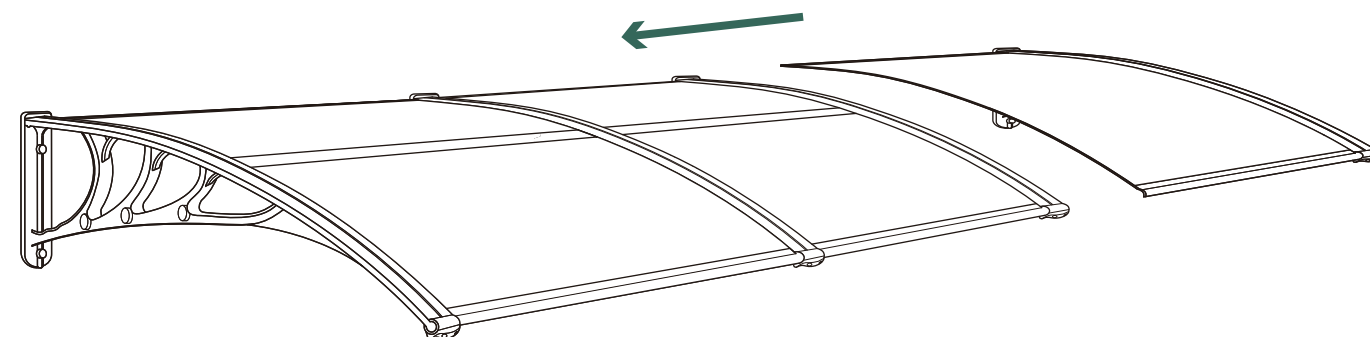

(2). Please note that there are two small round holes in the upper back of Bracket **#C**, and the holes of the Bracket **#C** in the middle of the two awning needs to be fixed with screw **#H**.

