


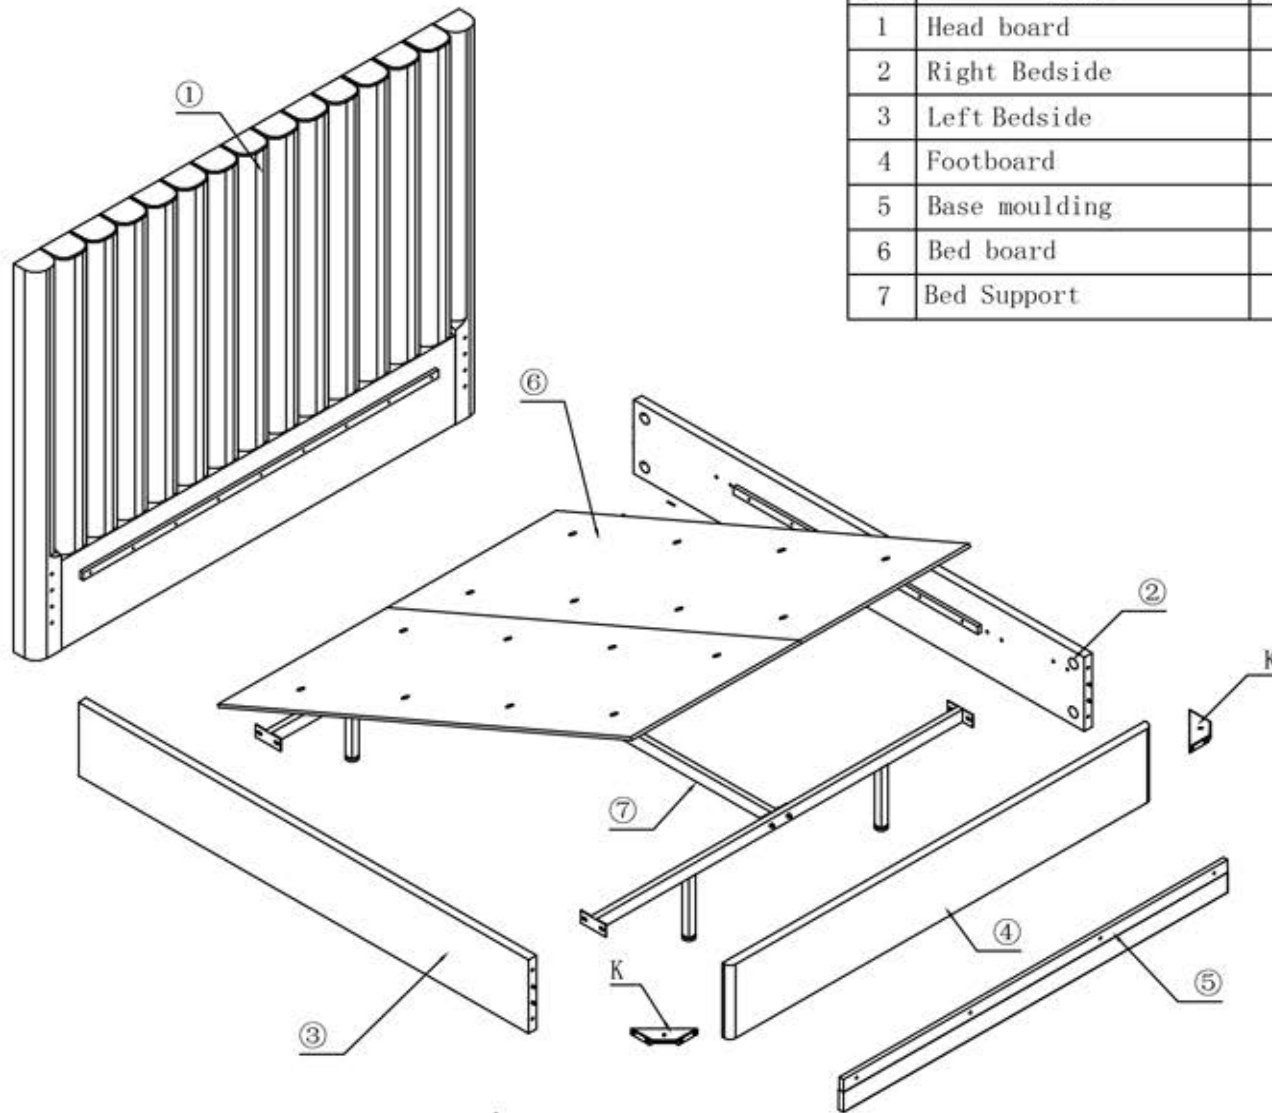


No	Part	Qty
1	Head board	1
2	Right Bedside	1
3	Left Bedside	1
4	Footboard	1
5	Base moulding	1
6	Bed board	2
7	Bed Support	1


HARDWARE FOR BED		
No	Part	Qty
A	Threaded Bolt M8x70	4
B	Maxiluna Washer Ø40x15	8
C	Nut M8	8
D	Cover Cap Ø40	8
E	Spanner M8/13mm	1
F	Screw M6X18	16
G	Screw M6X35	4
H	Gasket M8	4
I	Threaded Bolt M8x100	4
J	Spanner (5mm)	1
K	Angle Iron	2

HARDWARE FOR BEDFRAME		
No	Part	Qty
L	Gasket M6	8
M	Screw M6X45	4
N	Nut M6	4


- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.

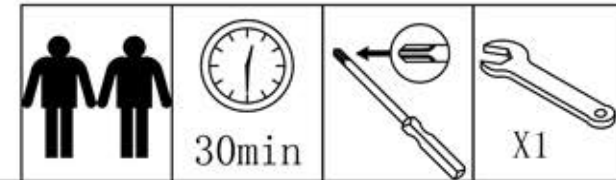


STEP1

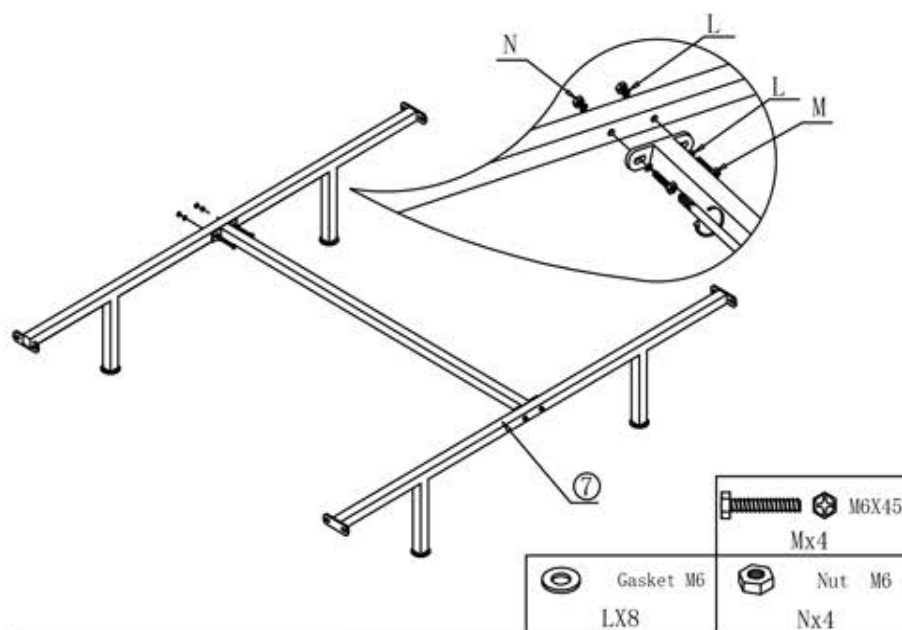


STEP2

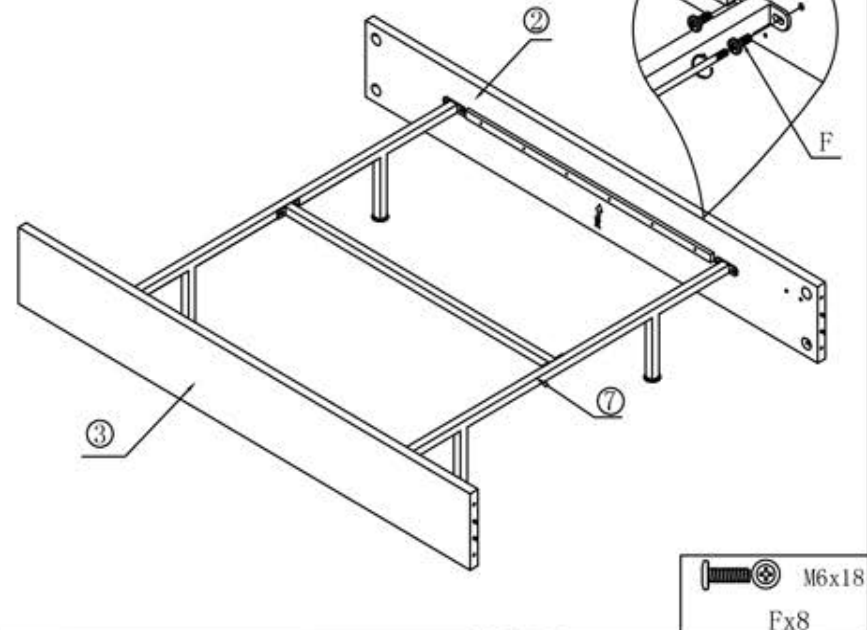


STEP3

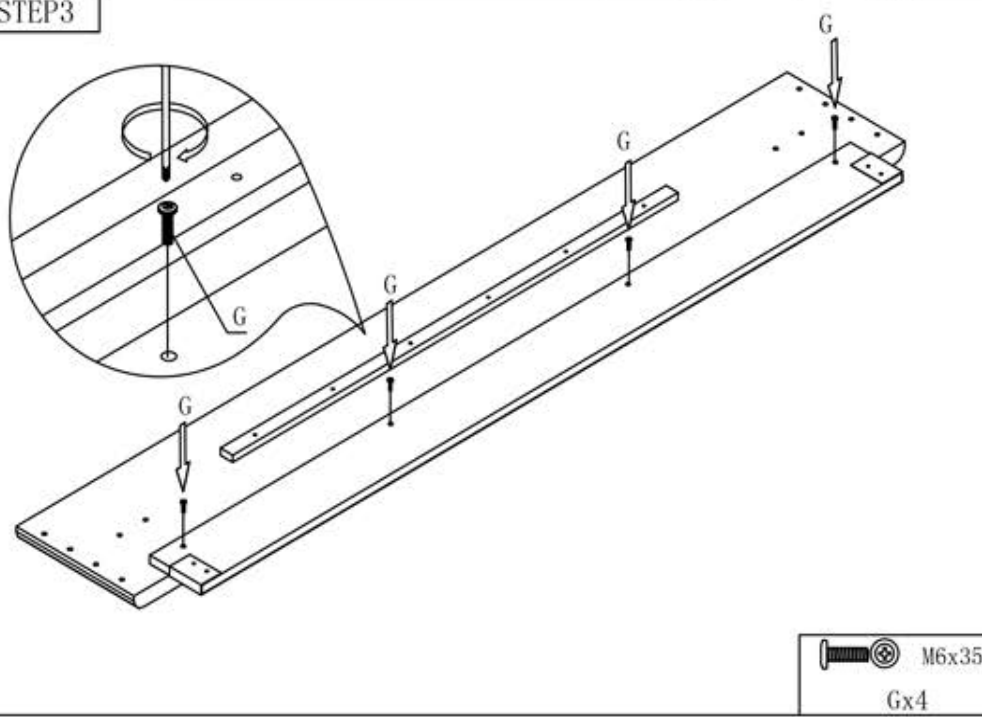


STEP 4

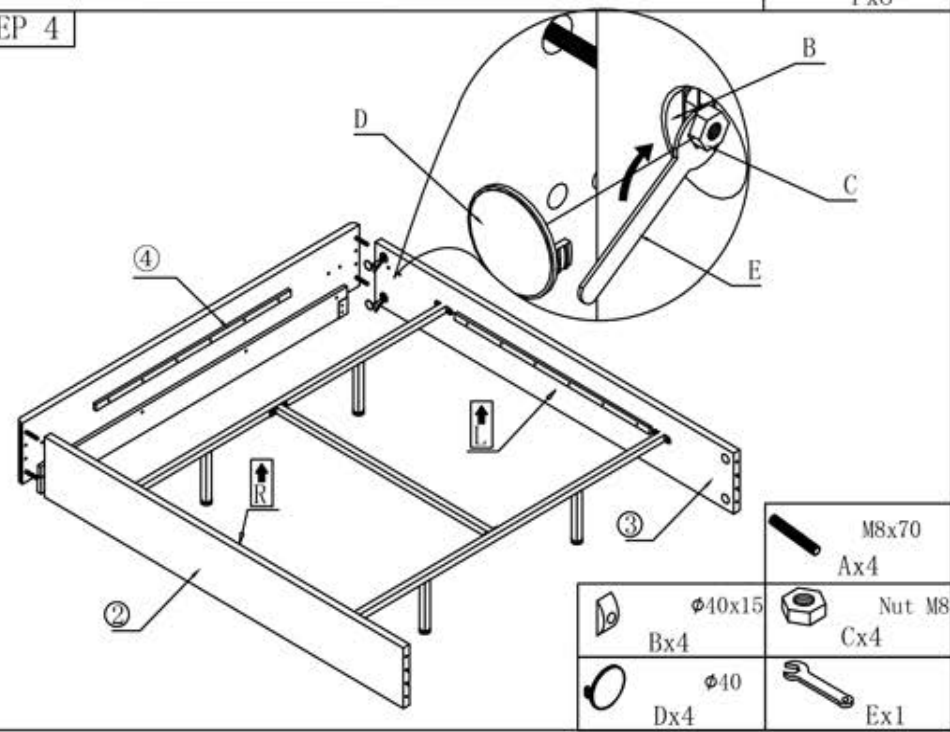

STEP 5

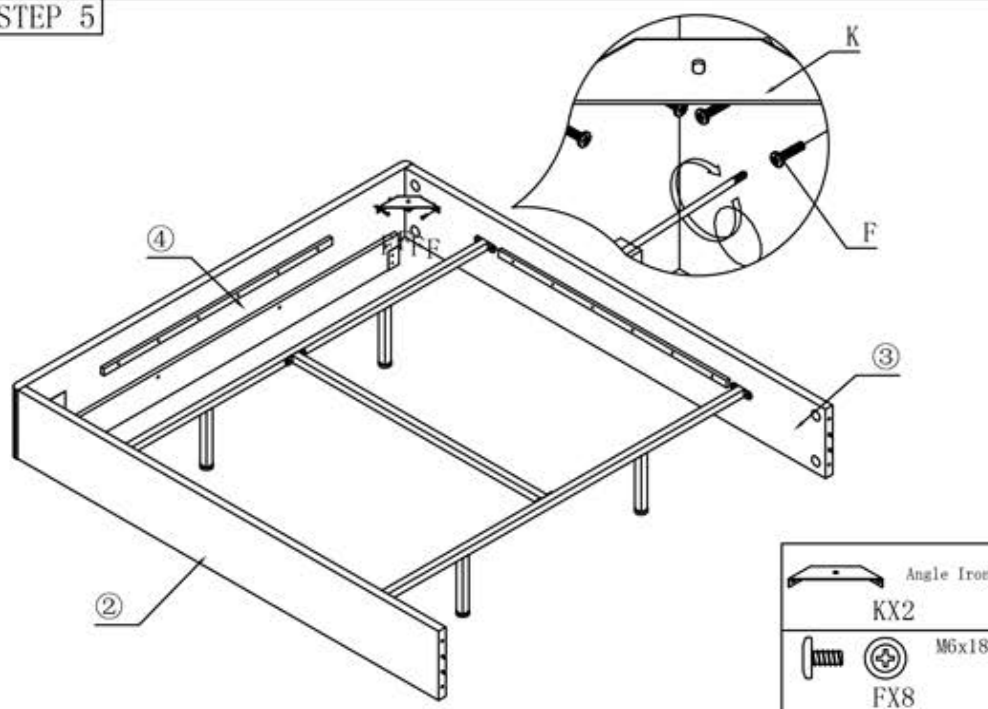

STEP 7

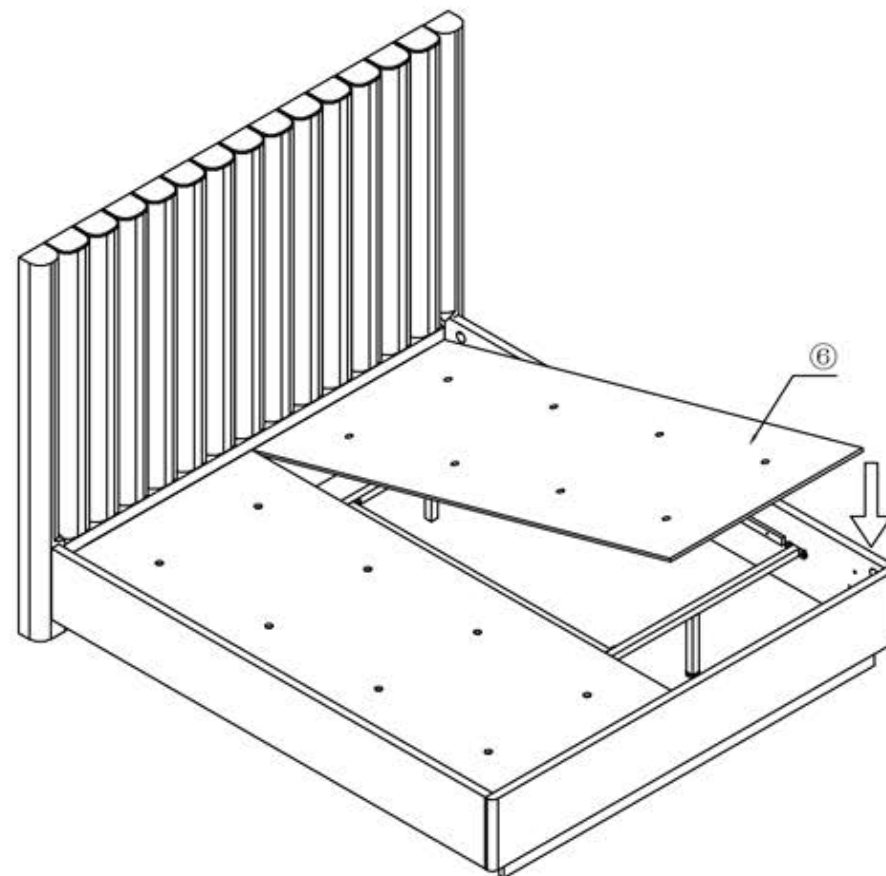

STEP 6

