


# ASSEMBLY INSTRUCTIONS


## Toy Chest

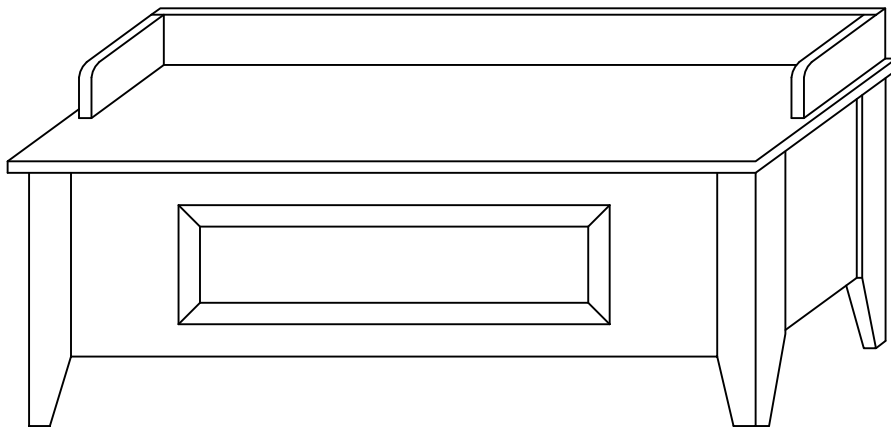


### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## Parts List:




A1: Side Apron 2PCS




A2: Back Apron 1PC




A3: Top Panel 1PC




A4(L&R): Side Panel 2PCS

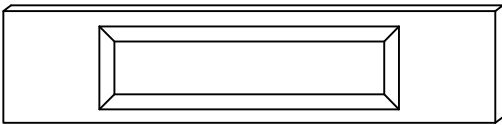

A5: Front panel 1PC

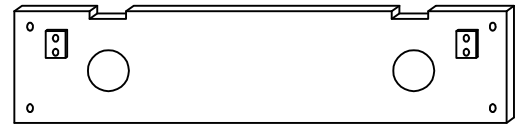

A6: Back Panel 1PC




A7: Bottom Panel 1PC

## Hardware List:




B1: Screw 7PCS



B2: Bolt 8PCS




B3: Safety Hinge with Screw  
2SETS



B4: Hinge with screw  
2SETS



B5: Wood Dowel  
12SETS



B6: Camlock  
10SETS





## Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

## To use Dowels:

1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.


## To use Cam Locks:
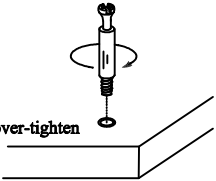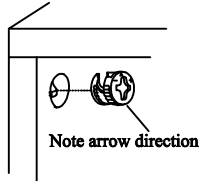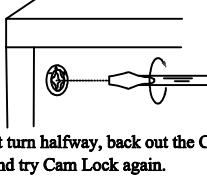
|                                                                                                                                                  |                                                                                                                 |                                                                                                                                          |                                                                                                                                                                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Insert Cam Pin until snug</p>  <p>Do not over-tighten</p> | <p>2. Set boards together</p>  | <p>3. Insert Cam Lock</p>  <p>Note arrow direction</p> | <p>4. Turn Cam Lock clockwise (half a turn)</p>  <p>if it won't turn halfway, back out the Cam Pin <math>\frac{1}{4}</math> turn and try Cam Lock again.</p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## Assembly instructions


Step 1: Assemble Back Apron A2 to Top Panel A3 using Screws B1 and Wood Dowels B5.

|    |                                                                                       |      |
|----|---------------------------------------------------------------------------------------|------|
| B1 |  | 3pcs |
| B5 |  | 2pcs |

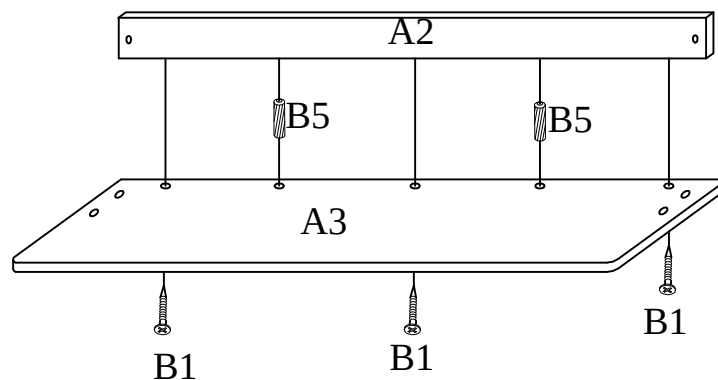


Step 2: Assemble Side Aprons A1 to Top Panel A3 using Screws B1 and Wood Dowels B5.

|    |                                                                                     |      |
|----|-------------------------------------------------------------------------------------|------|
| B1 |  | 2pcs |
| B5 |  | 2pcs |

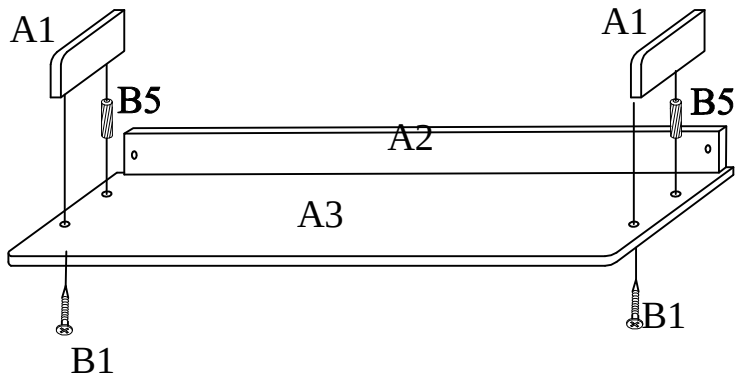


Step 3: Tighten Side Aprons A1 to Back Apron A2 using Screws B1.


|    |                                                                                       |      |
|----|---------------------------------------------------------------------------------------|------|
| B1 |  | 2pcs |
|----|---------------------------------------------------------------------------------------|------|

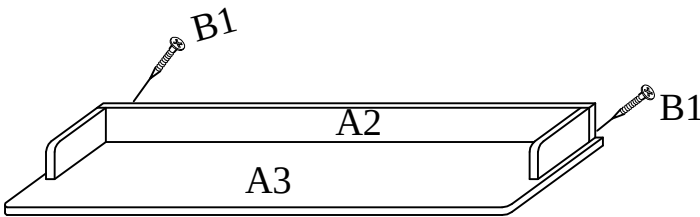


Step 4: Assemble Side Panels A4(L&R) to Bottom Panel A7 using Camlocks B6 and Wood Dowels B5. Then assemble Front Panel A5 and Back Panel A6 to Bottom Panel A7 using Camlocks B6 and Wood Dowels B5.

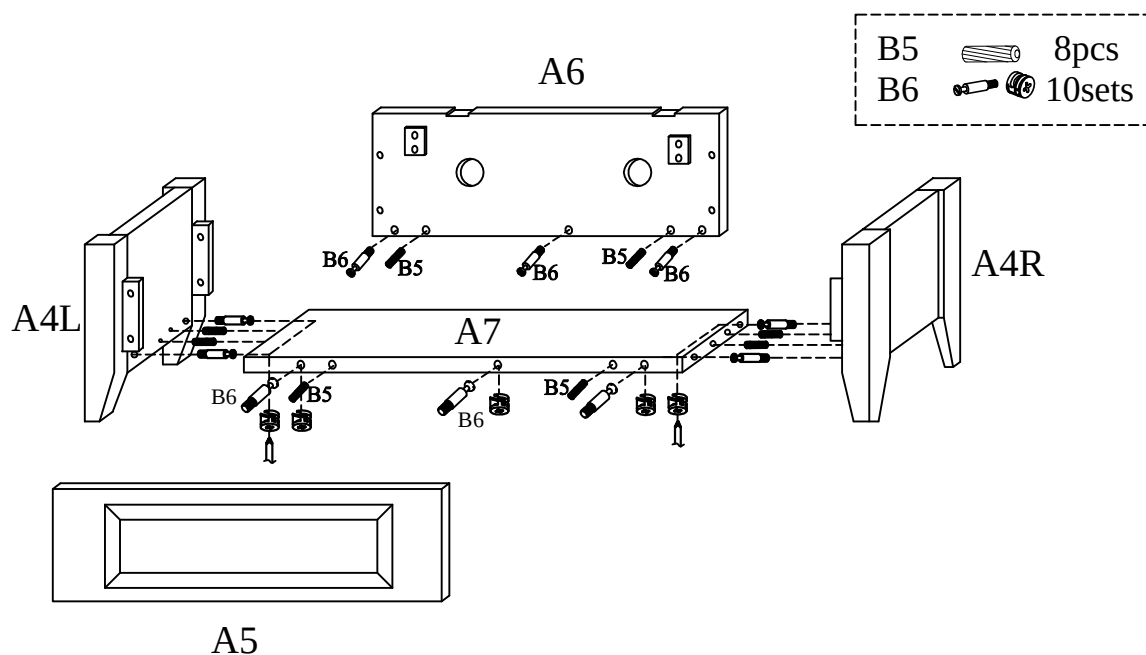

Step 5: Tighten Front Panel A5 and Back Panel A6 to Side panels A4 using Bolts B2.

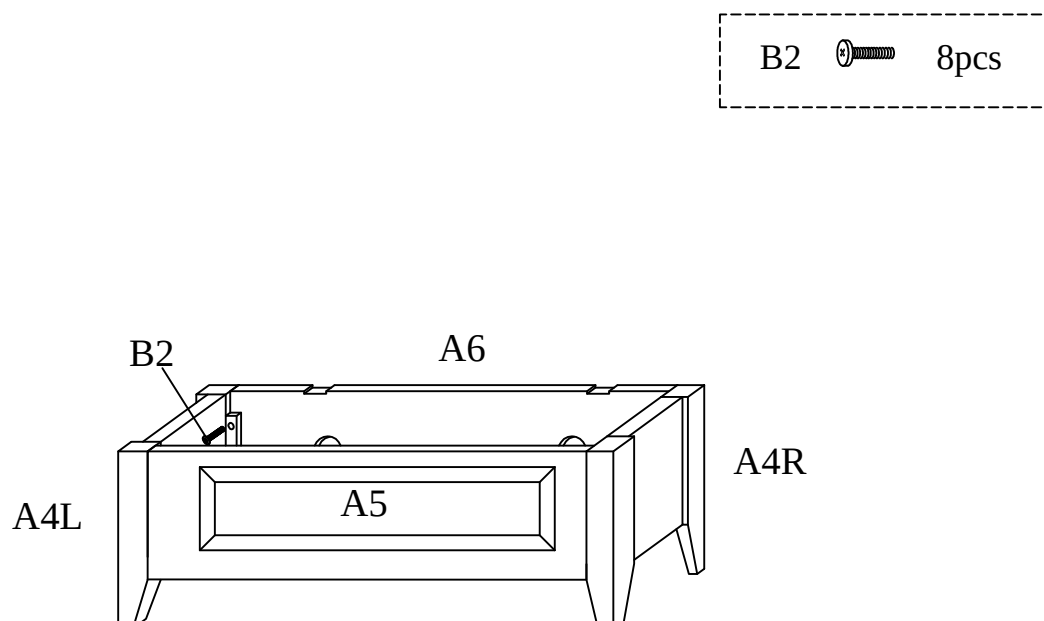

- Step 6: Assemble Hinges B4 onto the bottom side of Top Panel A3 with included Screws as below picture shown.
- Step 7: Assemble Safety Hinges B3 onto bottom side of Top Panel A3 with included Screws as below picture shown.

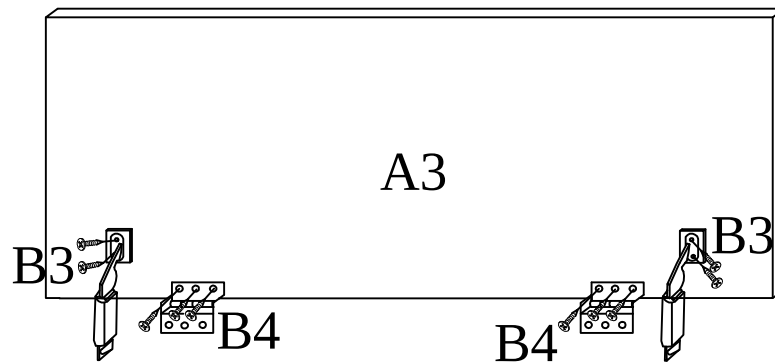

- Step 8: Place Top Panel A3 onto the storage unit. Hold it in open position then attach Hinges B4 to Back Panel A6 with included screws.
- Step 9: Hold Top Panel A3 75 degree angle open position, then attach Safety Hinges B3 to Back Panel A6 with included screws.

NOTE: It is strongly recommended that more than one person holds Top Panel A3 when screwing Hinges B4 & B3 to Back panel A6.

