



BED FRAME

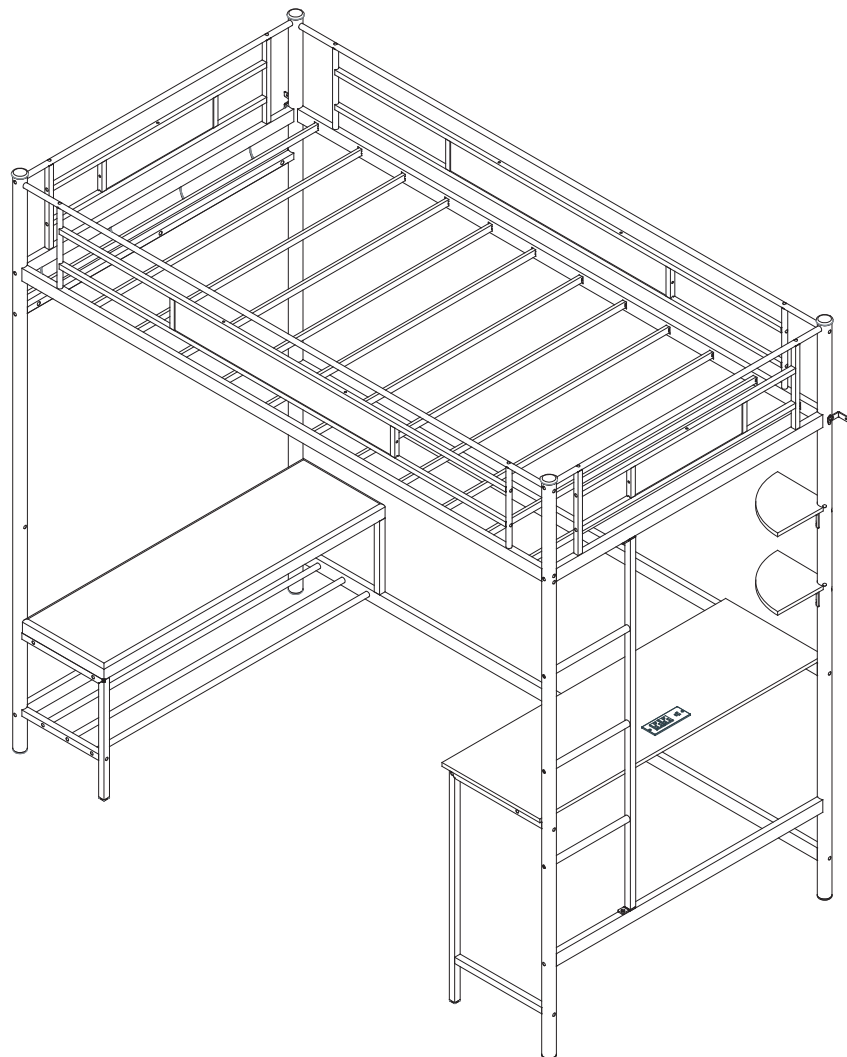

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




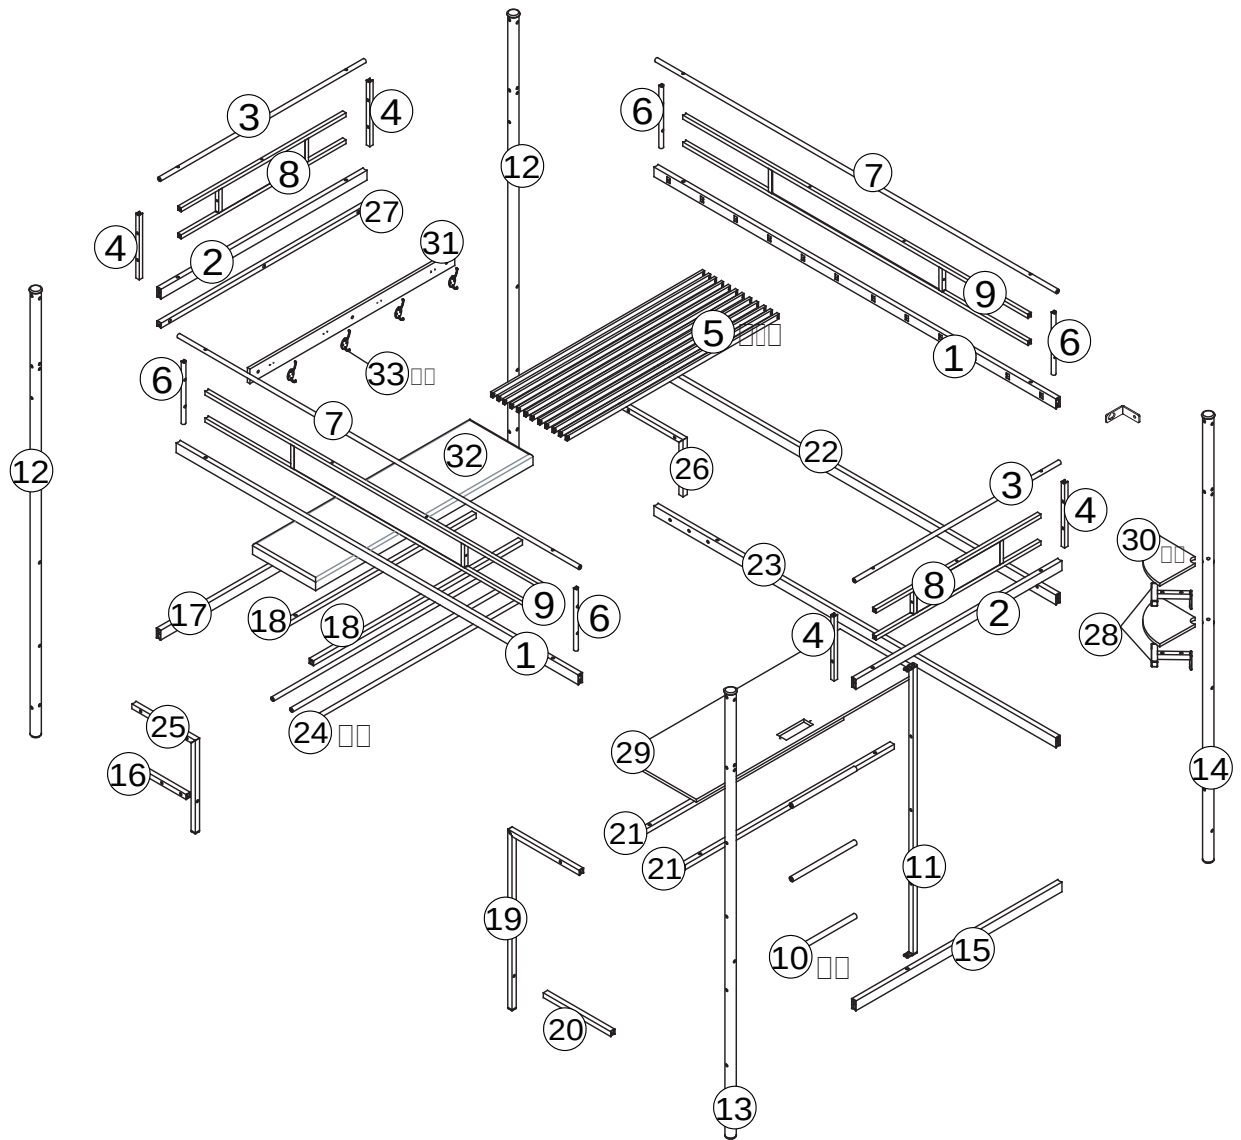






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

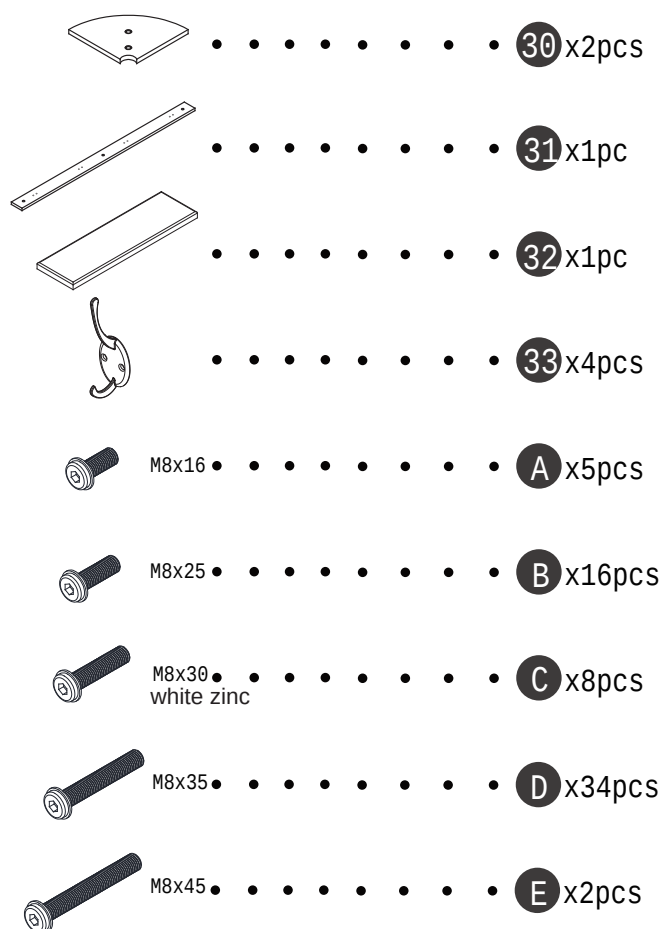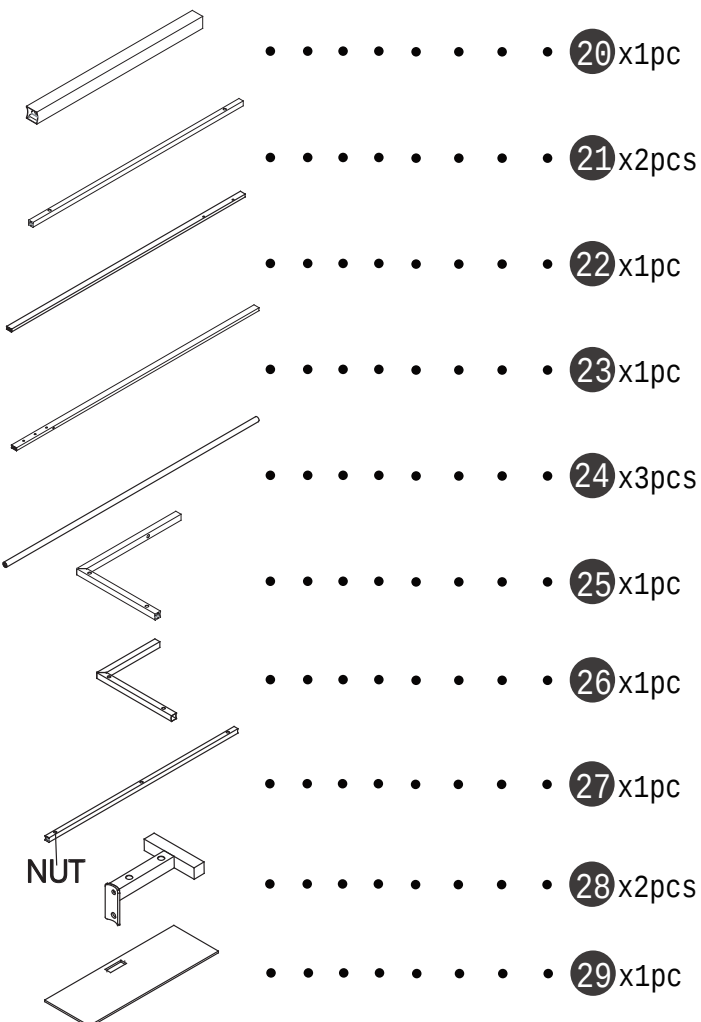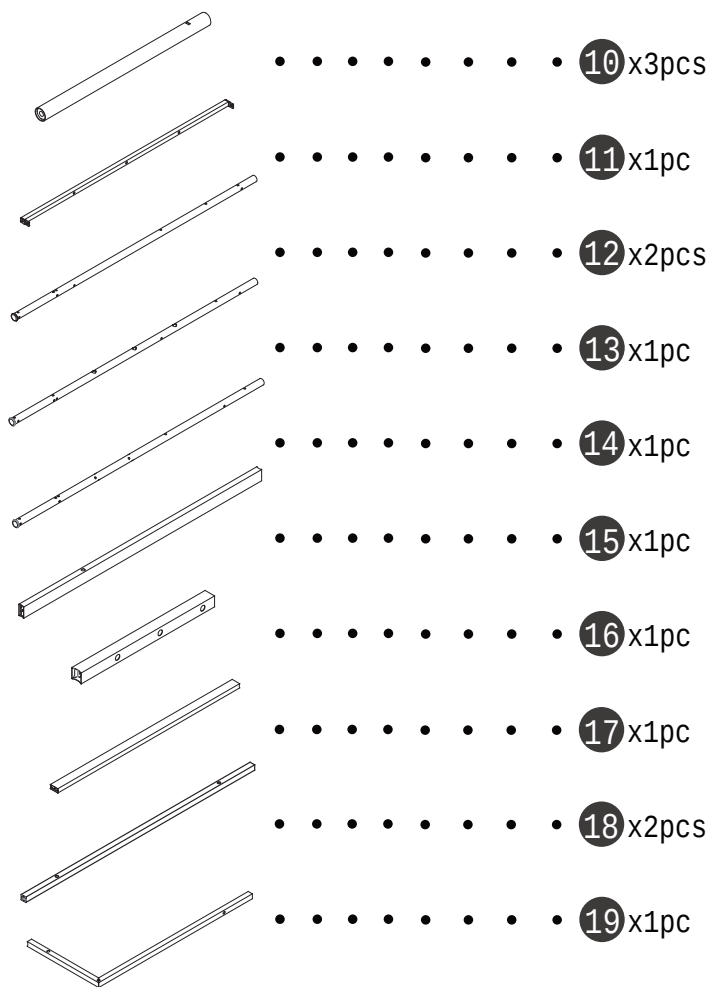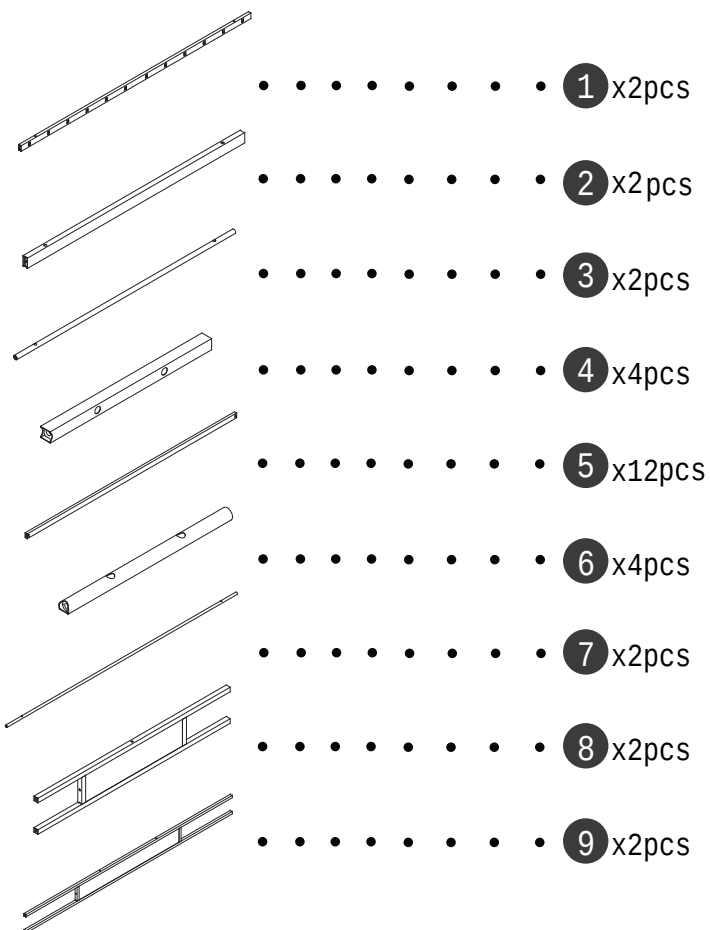


-  M8x55 • • • • • • • • • • **F** x44pcs
-  ST3x16 • • • • • • • • • • **G** x8pcs
-  ST4x14 • • • • • • • • • • **H** x2pcs
-  • • • • • • • • • • **I** x24pcs
-  M8 • • • • • • • • • • **J** x1pc
-  • • • • • • • • • • **K** x1pc
-  • • • • • • • • • • **U** x1pc
-  • • • • • • • • • • **Y** x2pcs
-  • • • • • • • • • • **Z** x2pcs


TYPE 1

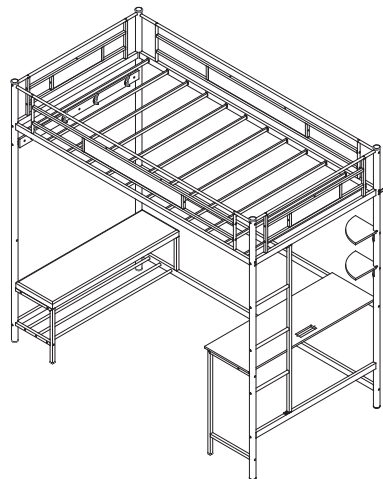


TYPE 2

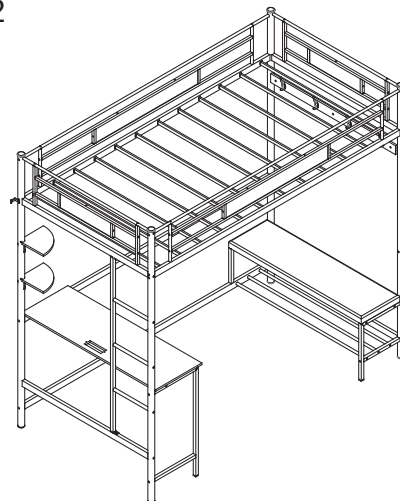

TYPE 1

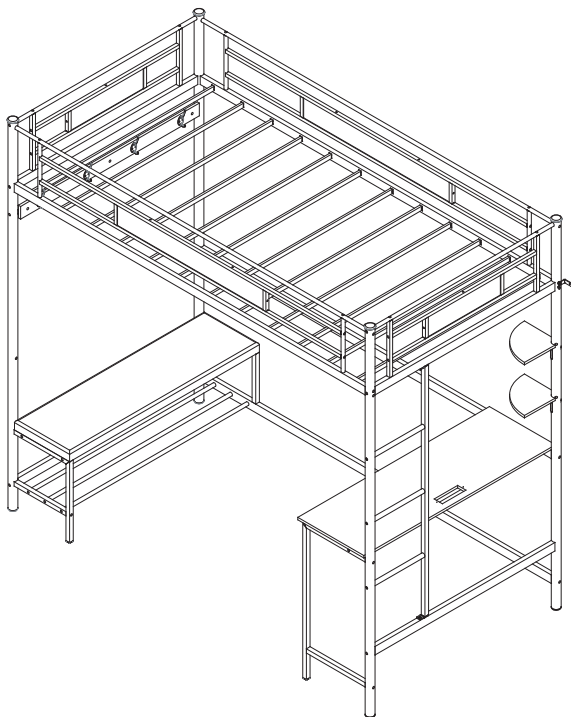


x2 **1**

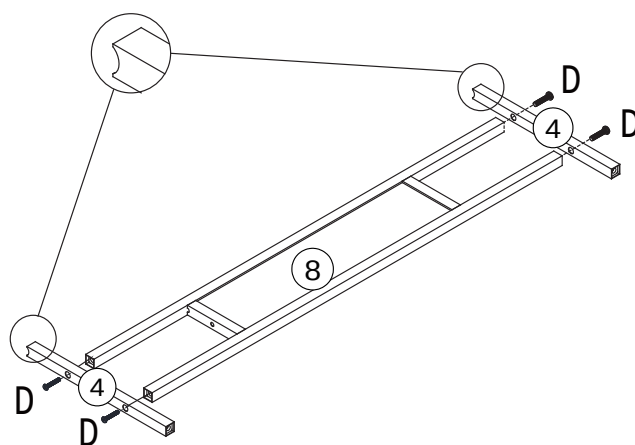


D		8pcs
M8x35		

x2 2

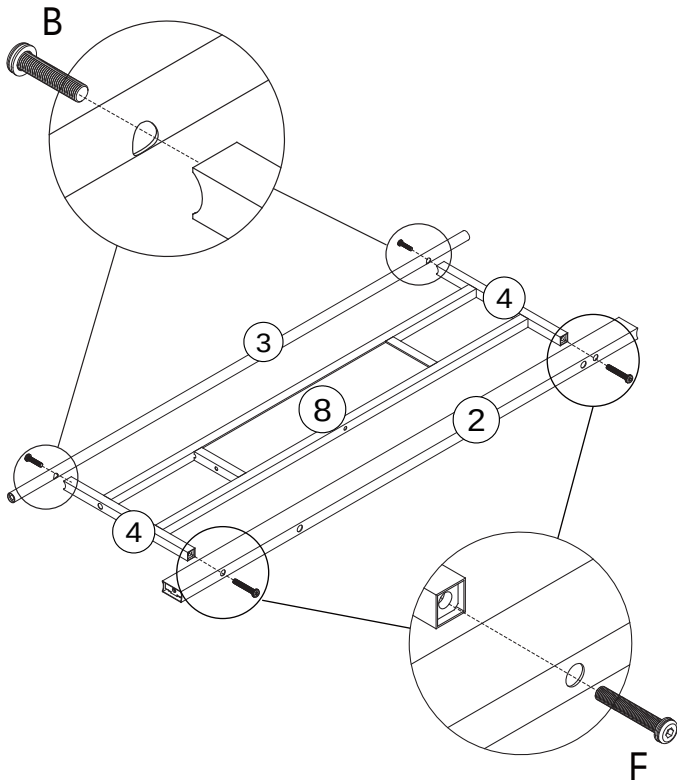


B		4pcs
F		4pcs

3

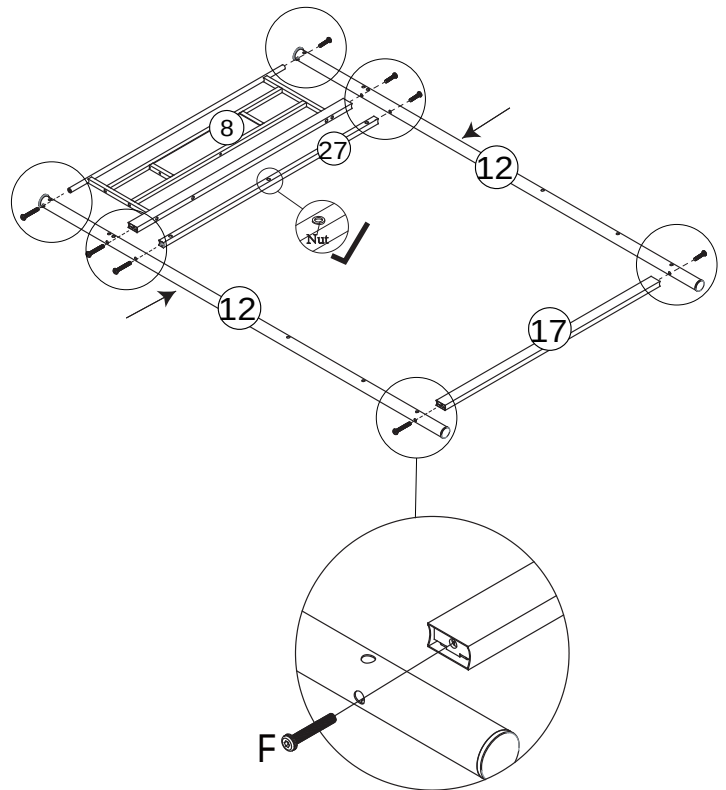


F		8pcs
---	--	------

x2 4

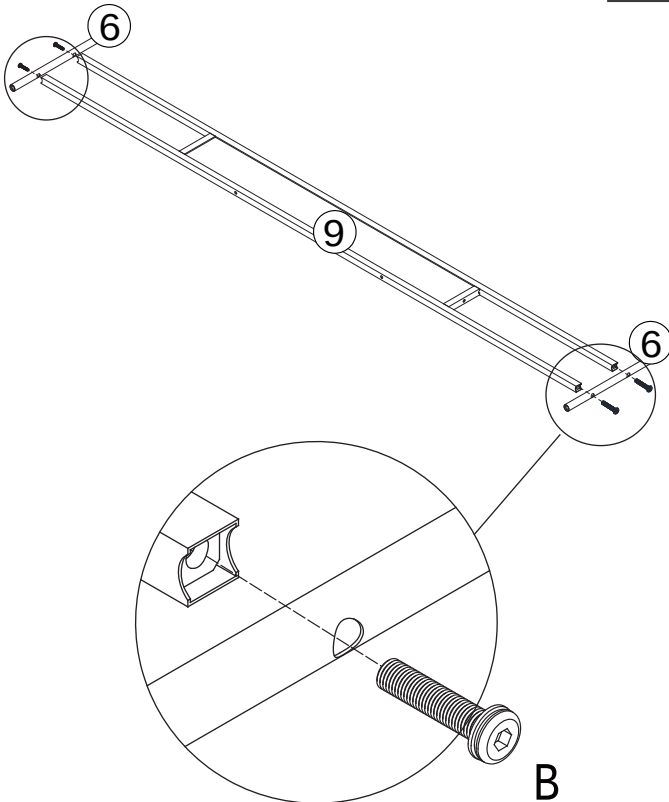


B		8pcs
---	---	------

x2 5

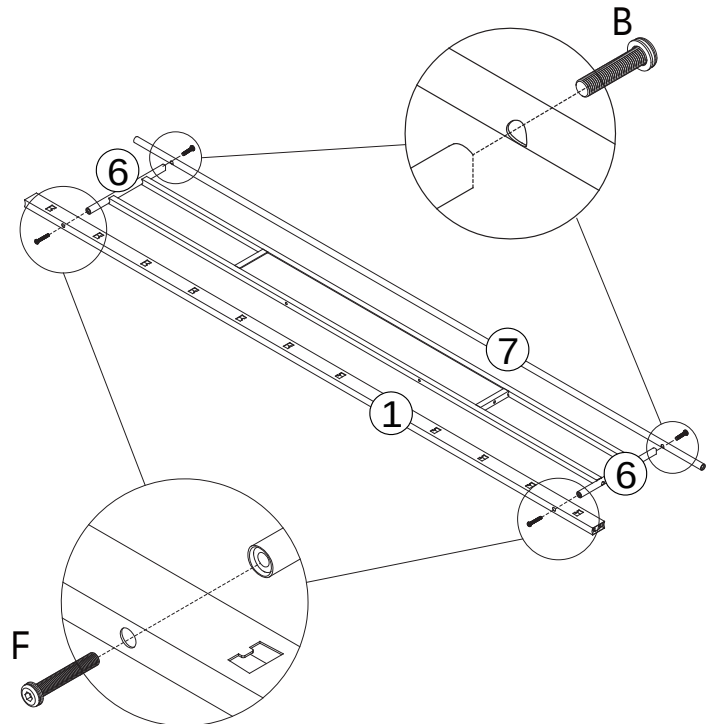


B		4pcs
F		4pcs

6

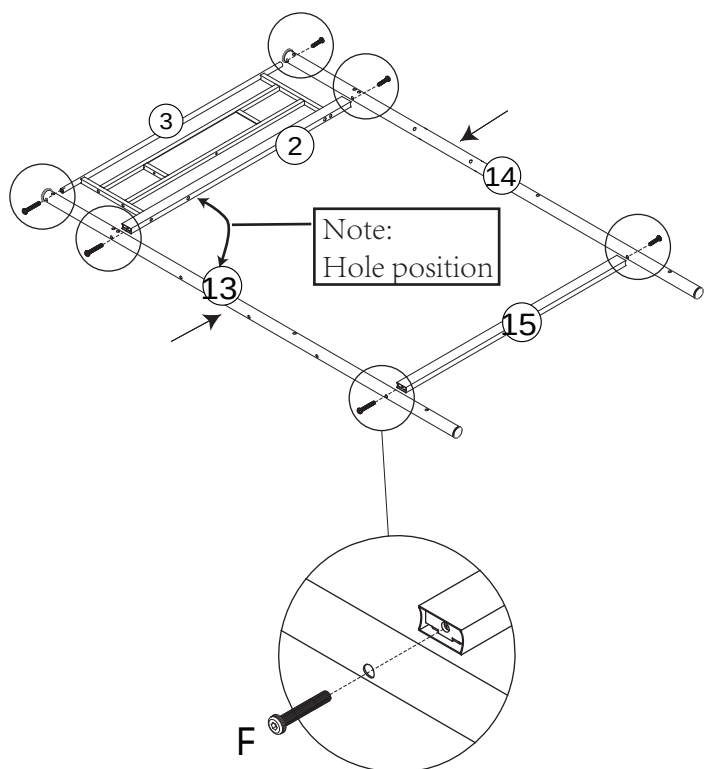


F		6pcs
---	--	------

7

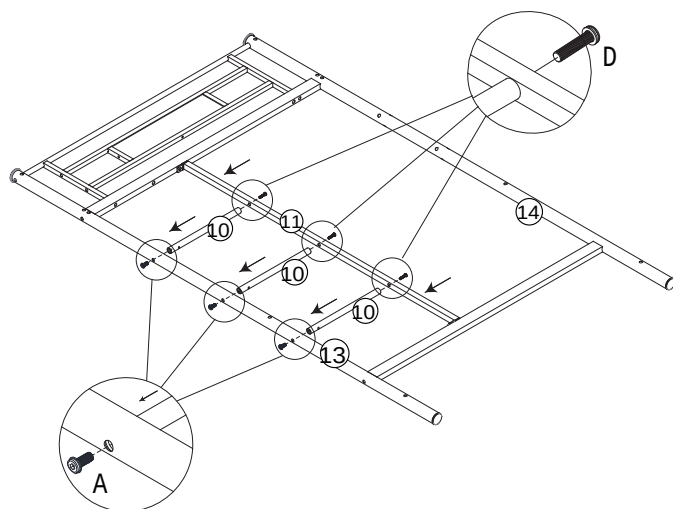

D		3pcs
A		3pcs


8

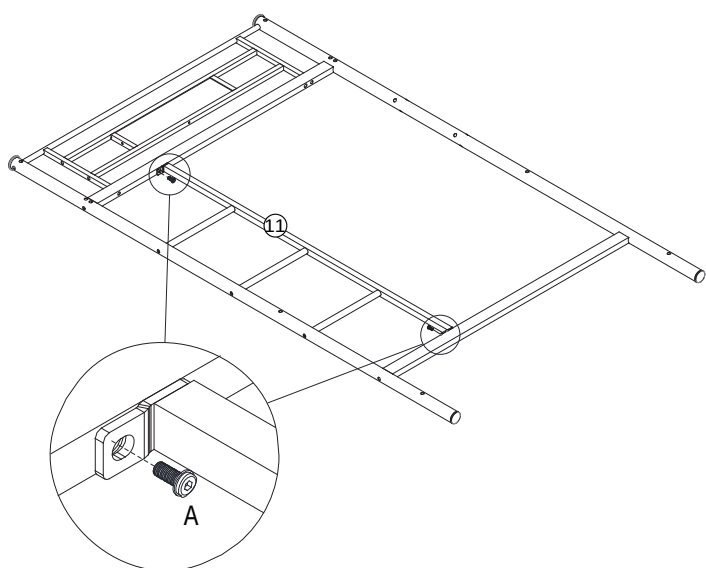

A		2pcs
---	---	------


Install screws loosely,
fully tighten

9

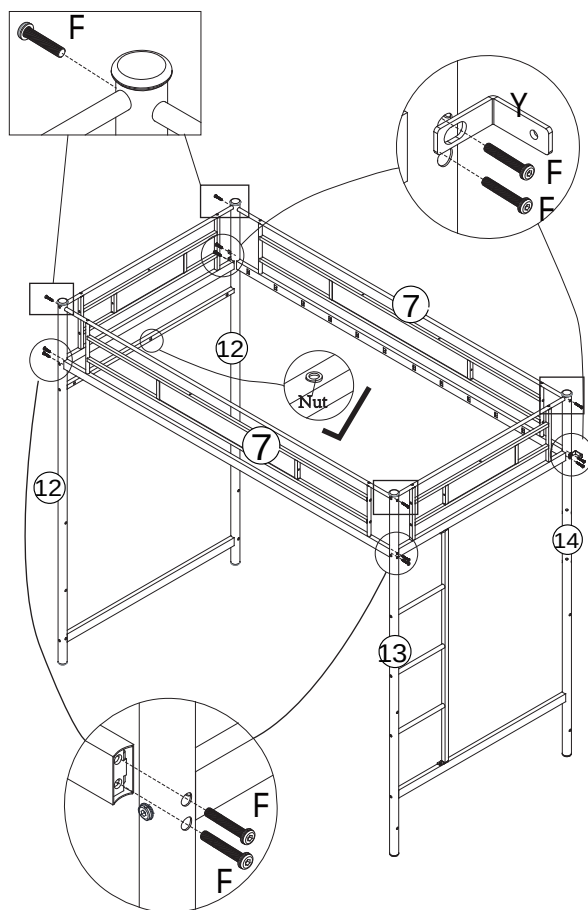


F		12pcs
---	--	-------

10

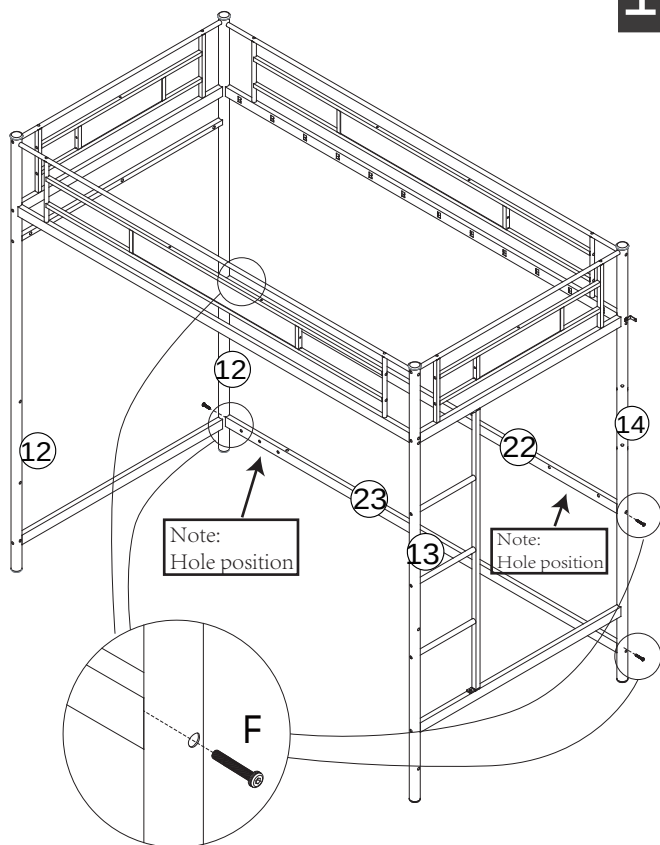


F		4pcs
	M8x55	

11

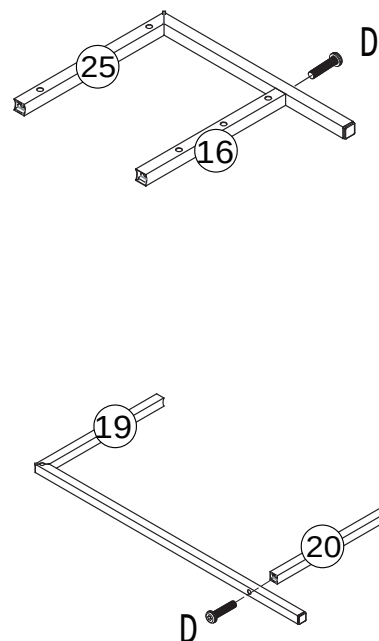

D		2pcs
	M8x35	


12

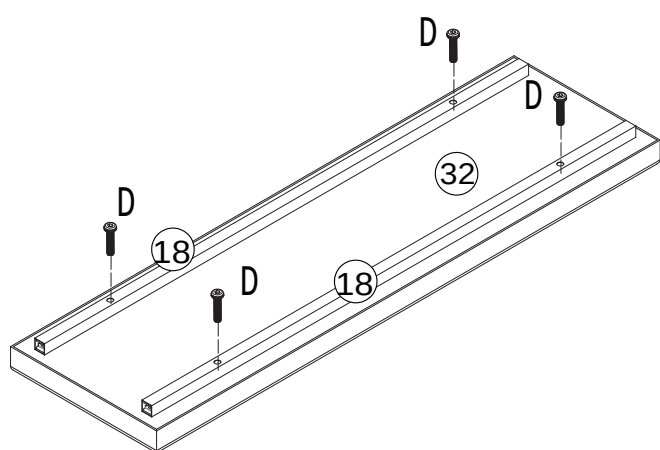

D		4pcs
	M8x35	

Install screws loosely,
don't fully tighten

13

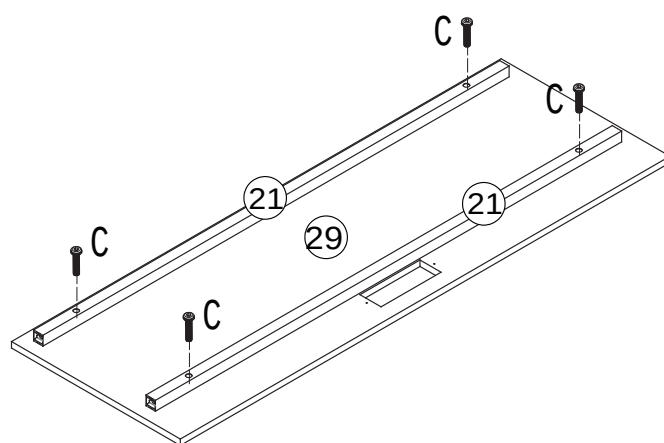


C		4pcs
	M8x30	

white zinc

Install screws loosely,
don't fully tighten


14

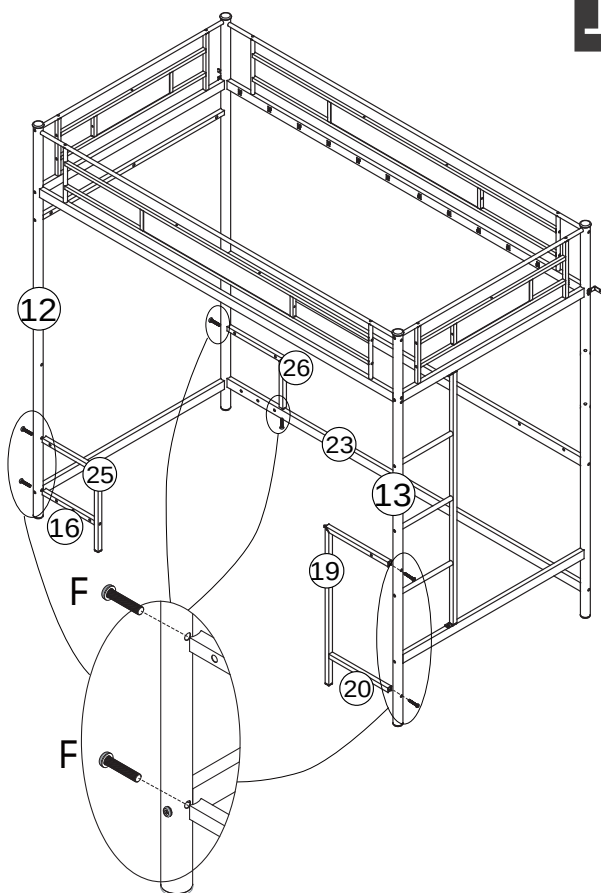

F		6pcs
---	---	------

M8x55


15

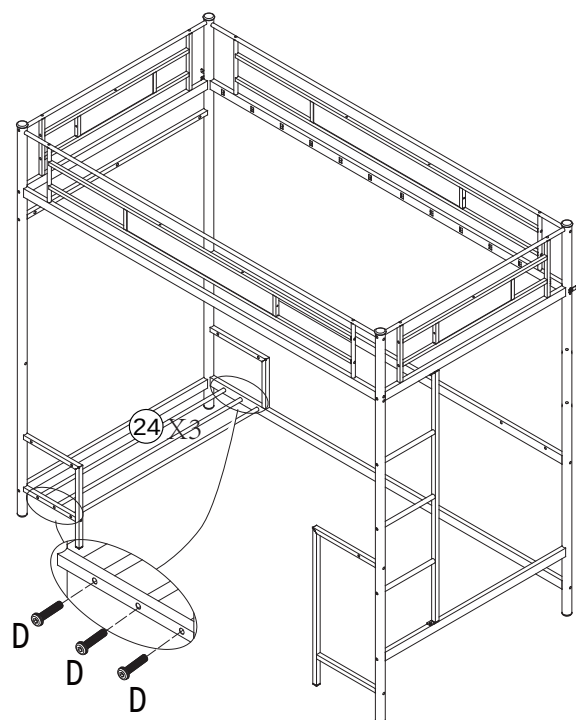

D		6pcs
---	--	------

M8x35


16

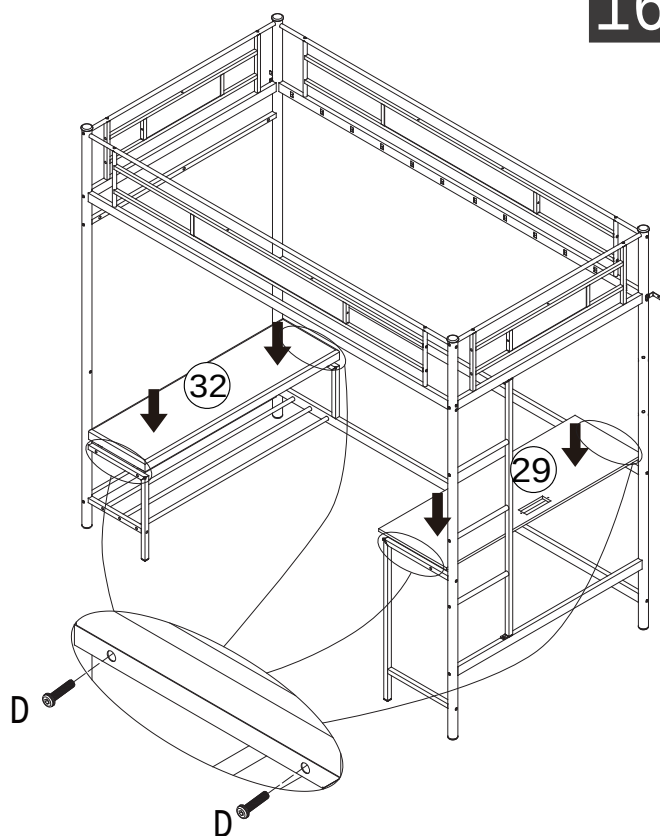

D		8pcs
---	---	------

M8x35


17

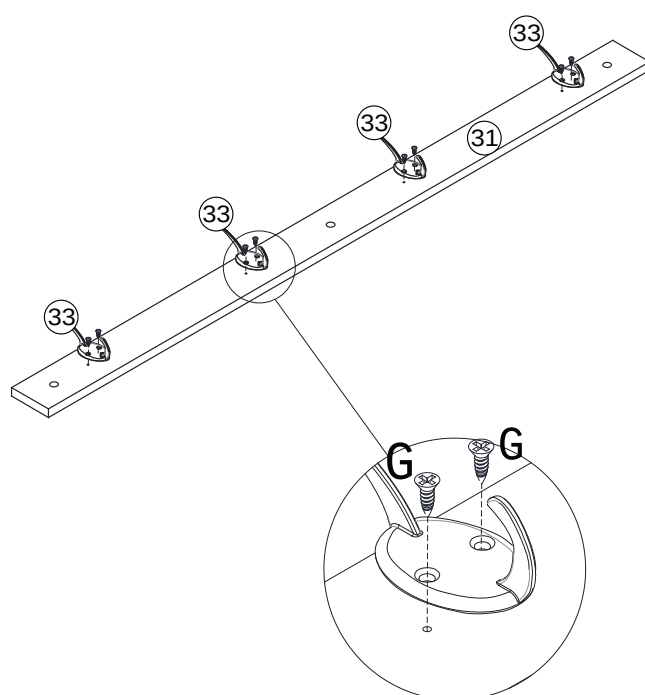

G		8pcs
---	--	------


ST3*16

18

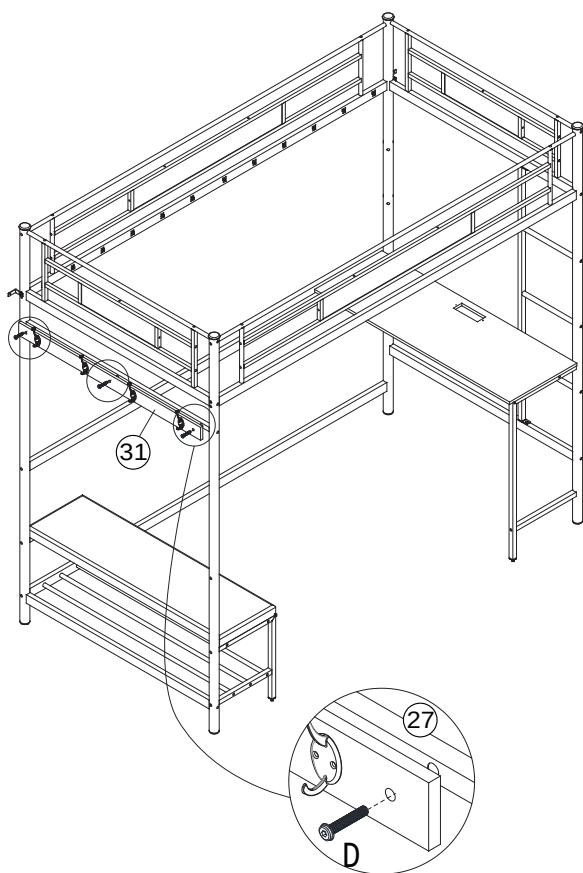


D		3pcs
M8x35		

x2 19

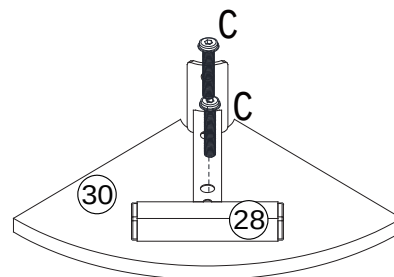


C		4pcs	white zinc
M8x30			

20

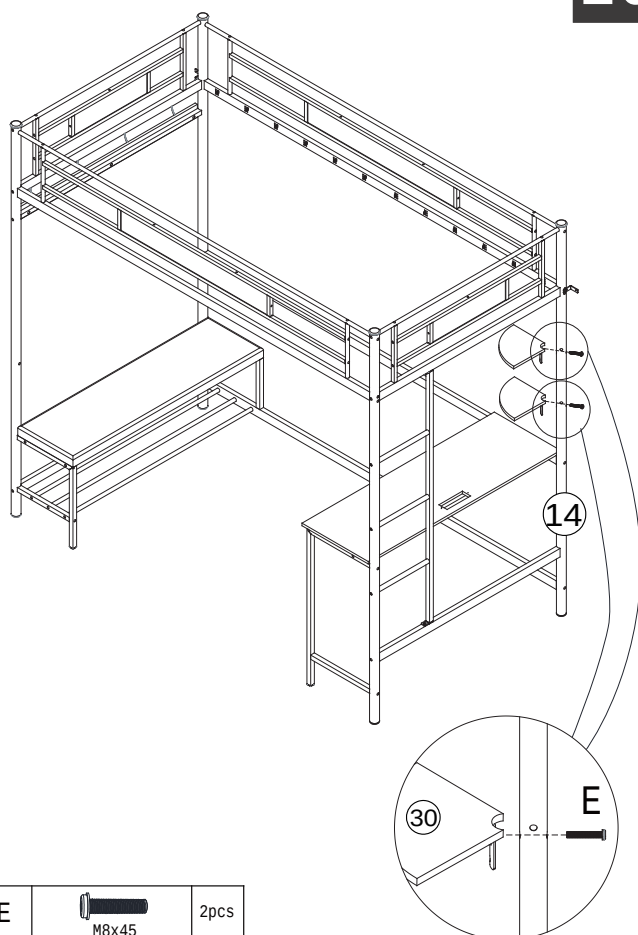



E		2pcs
M8x45		

21

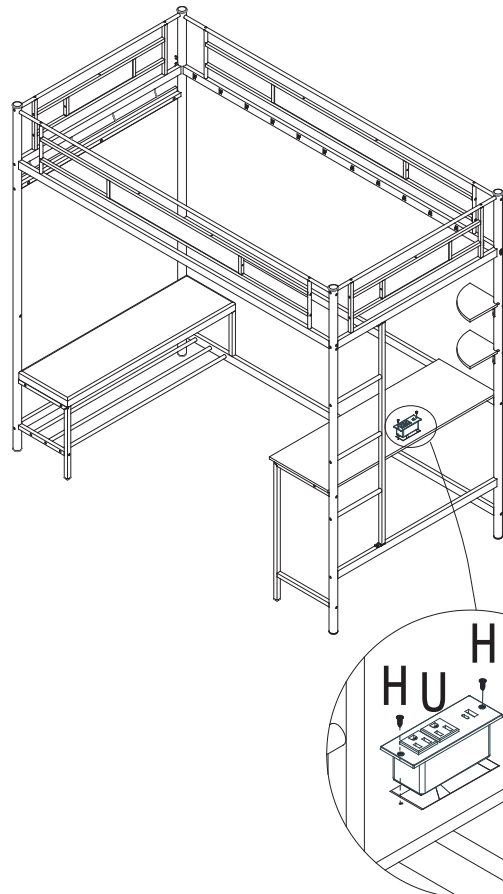

H		2pcs
ST4x14		



22

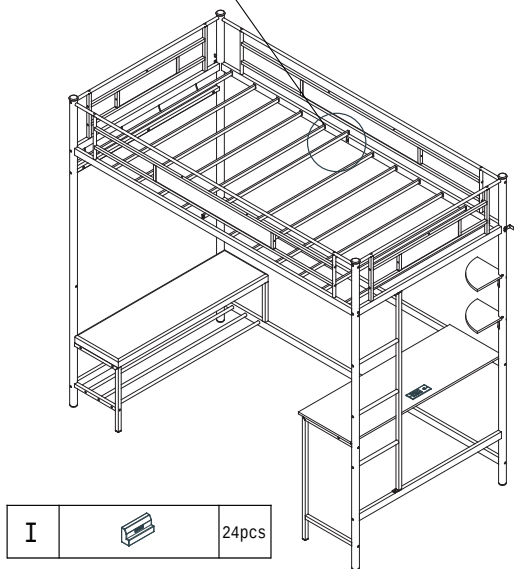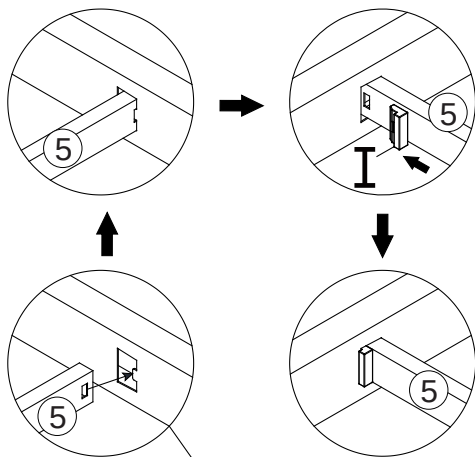

I		24pcs
---	---	-------

23


- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

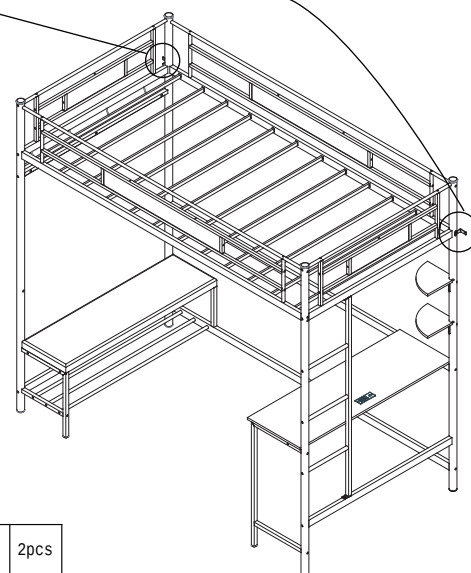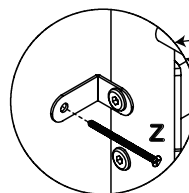

Z		2pcs
---	--	------


Finish

24

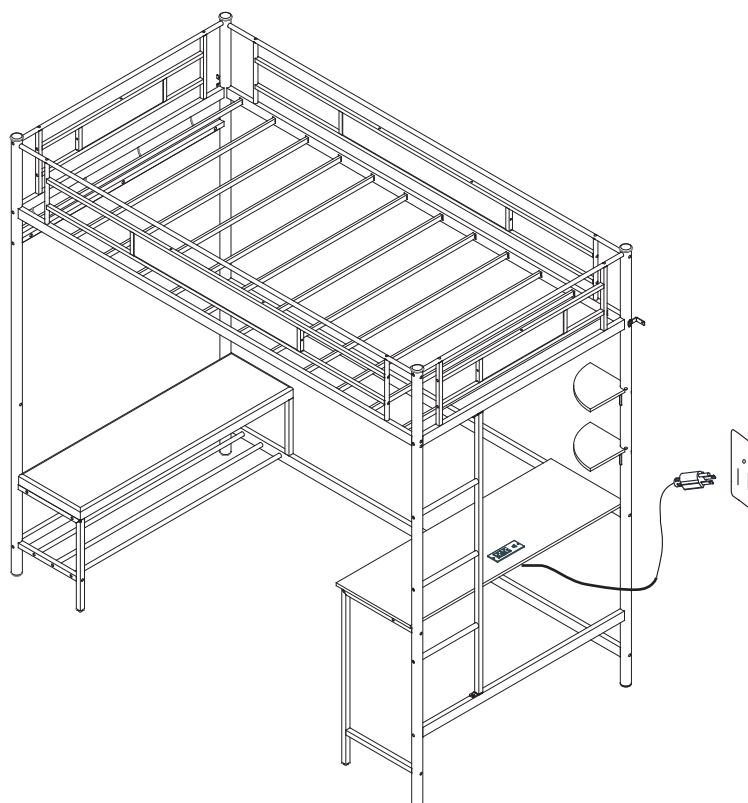


Note: Now you can tighten all the bolts.

TYPE 2

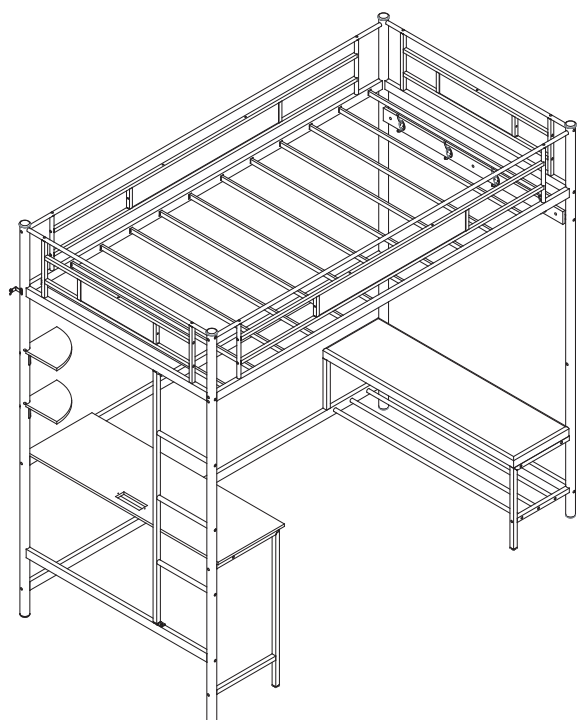


x2 1

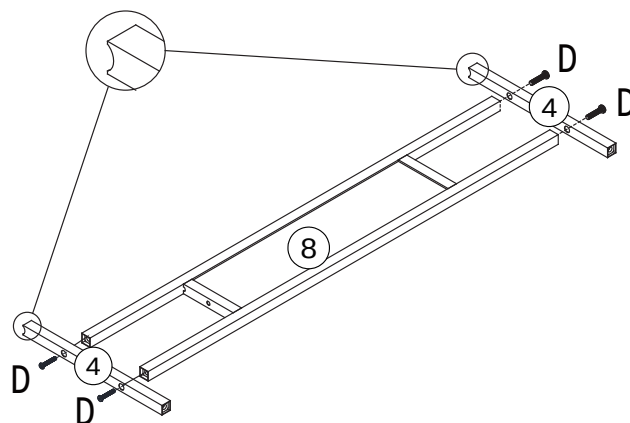


D	 M8x35	8pcs
---	--	------

x2 2

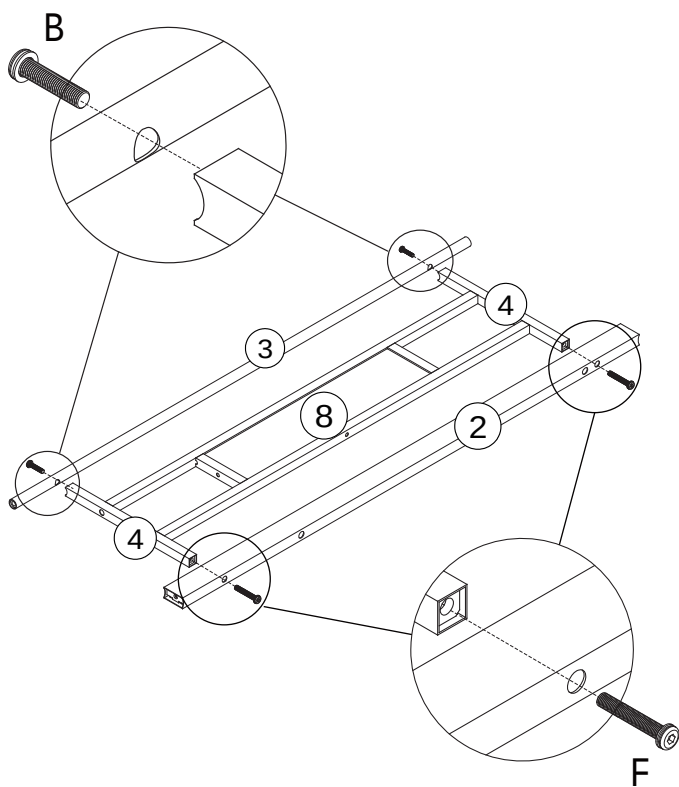


B	 M8x25	4pcs
F	 M8x55	4pcs

3

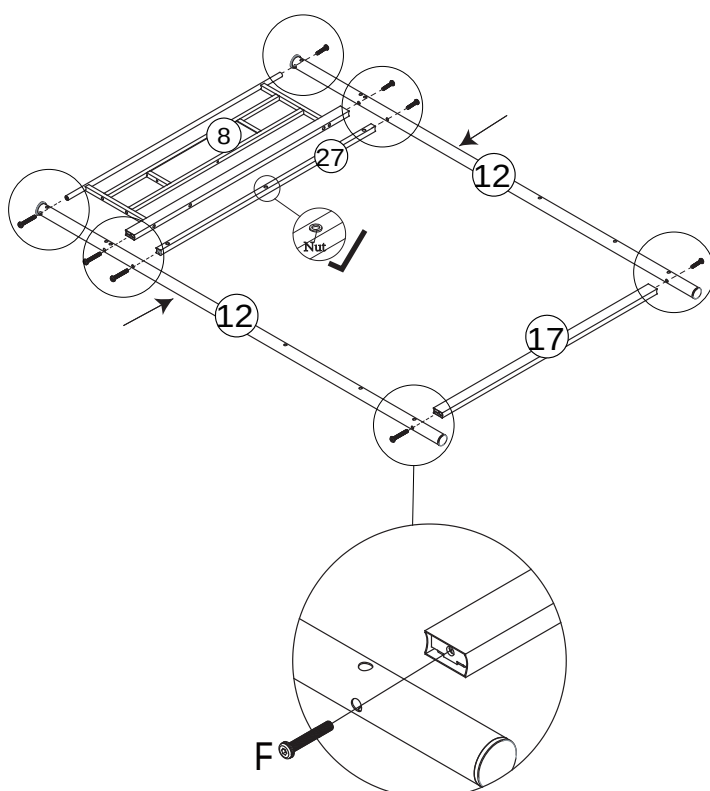


F	 M8x55	8pcs
---	--	------

x2 4

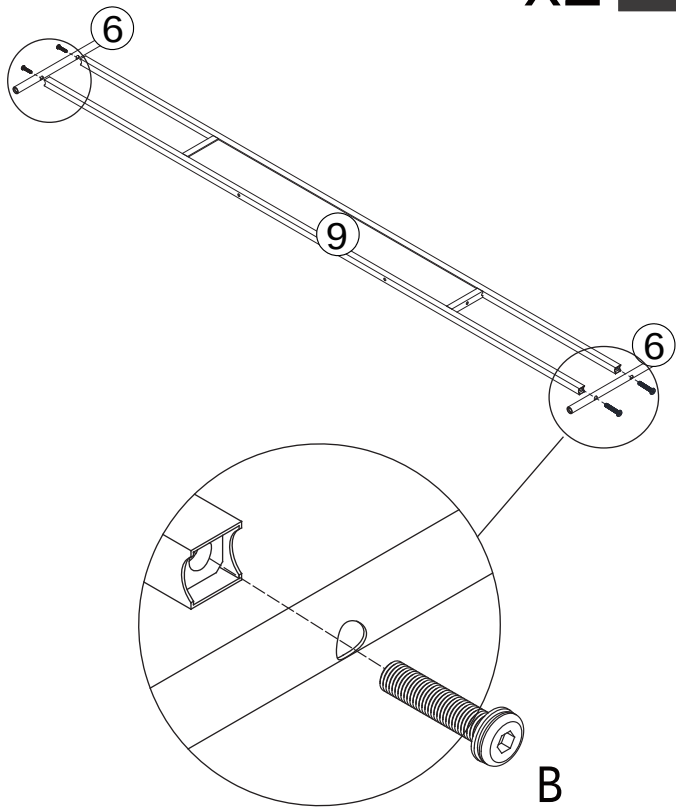


B		M8x25	8pcs
---	---	-------	------

x2 5

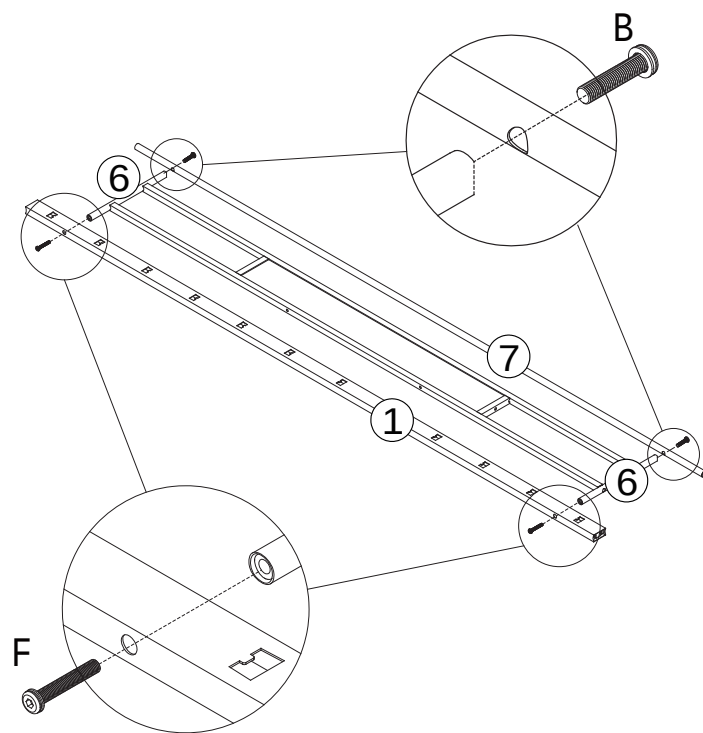


B		M8x25	4pcs
F		M8x55	4pcs

6

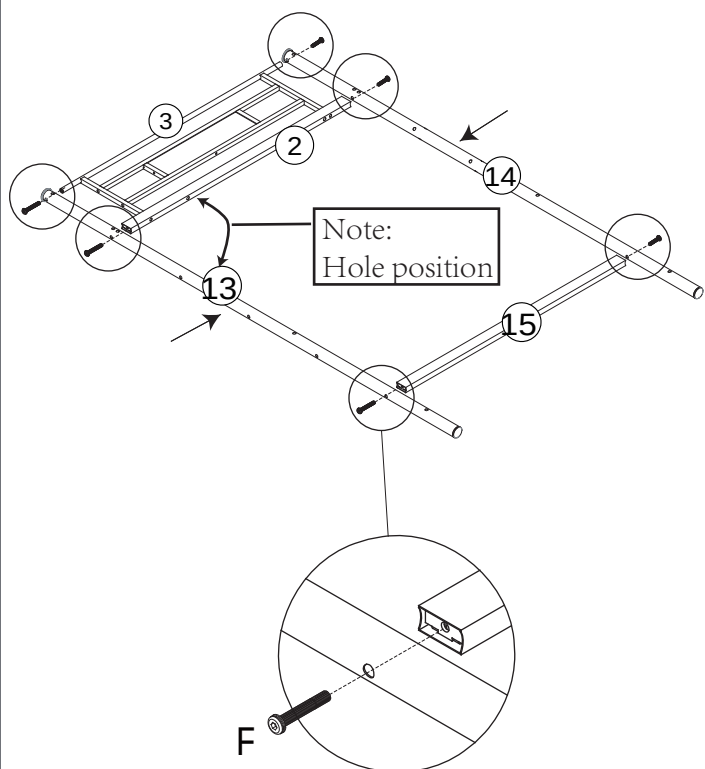


F		M8x55	6pcs
---	---	-------	------

7

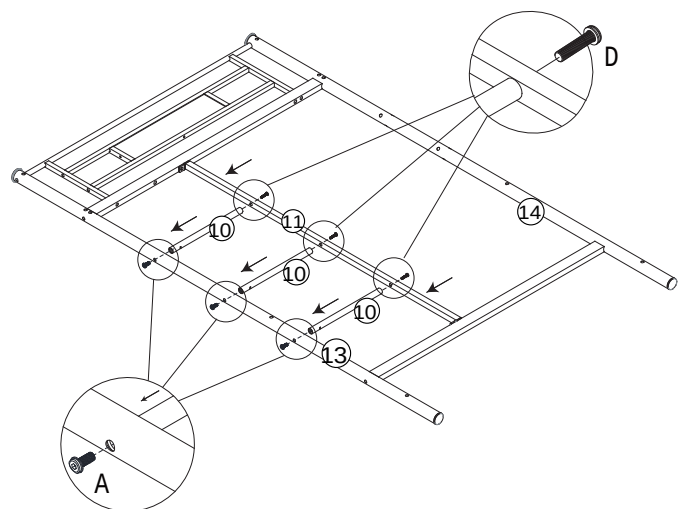

D		M8x35	3pcs
A		M8x16	3pcs


8

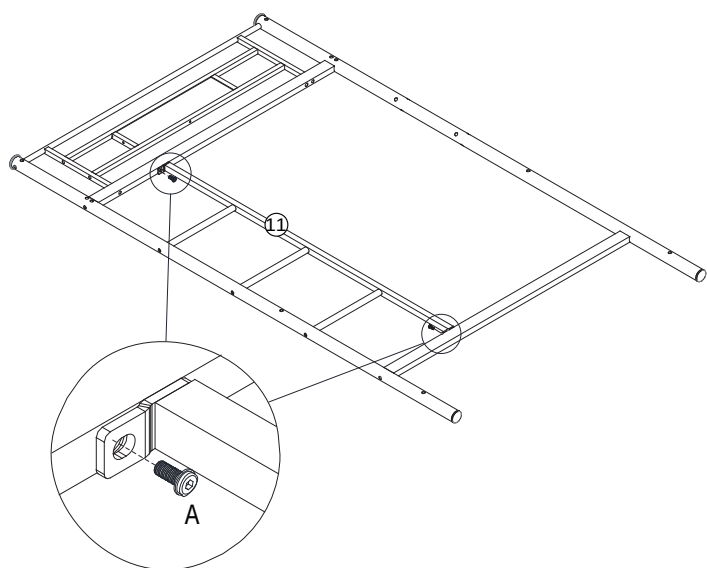

A		2pcs
M8x16		


Install screws loosely,
fully tighten

9

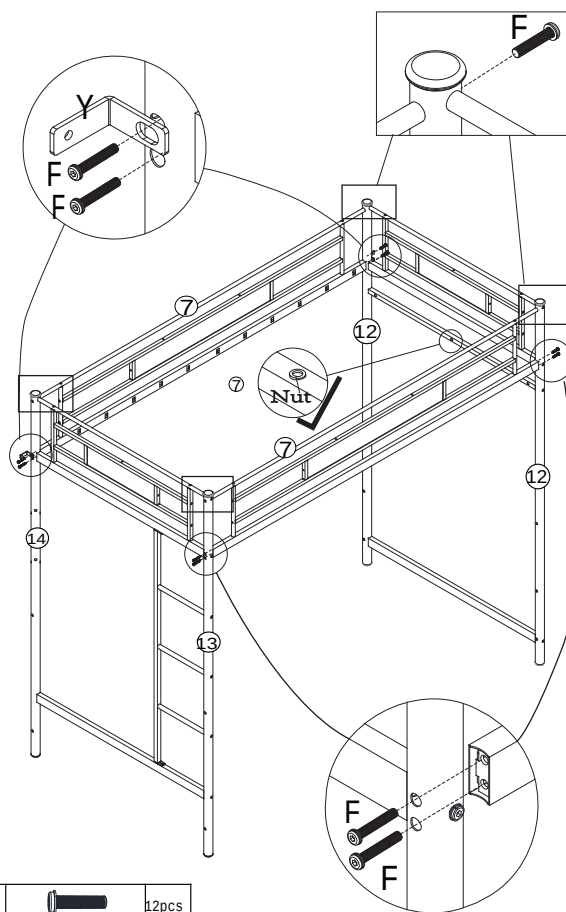


F		12pcs
M8x55		

10

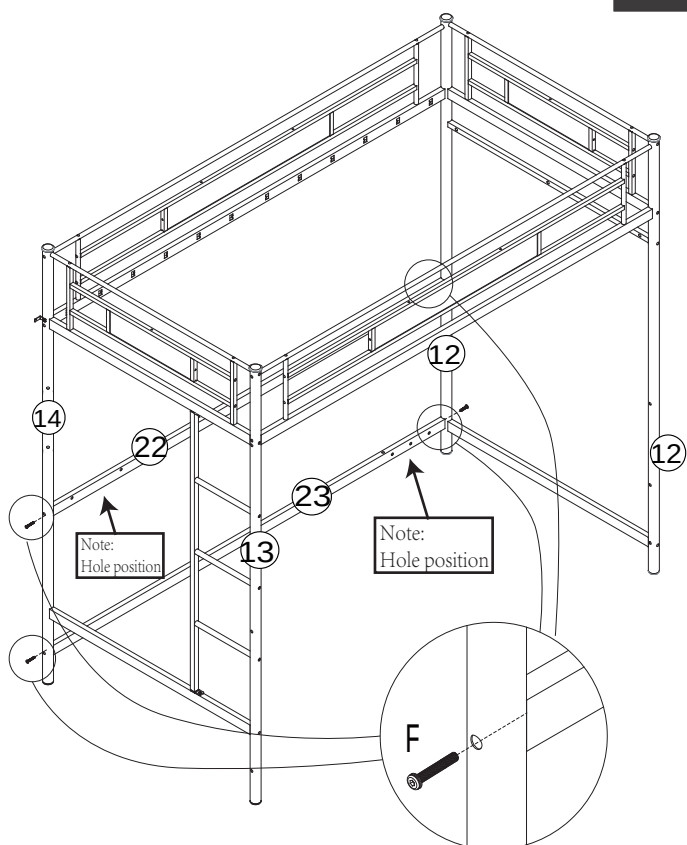


F		4pcs
M8x55		

11

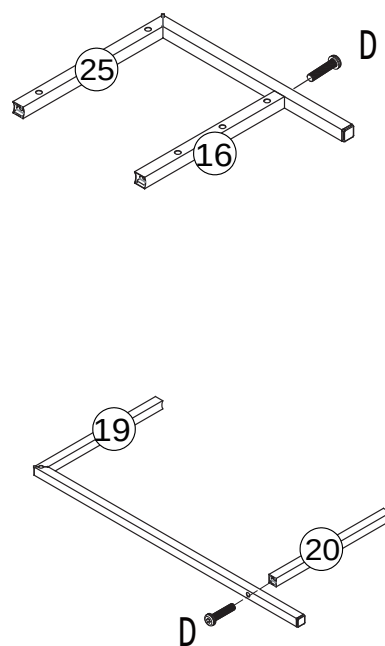

D		2pcs
M8x35		


12

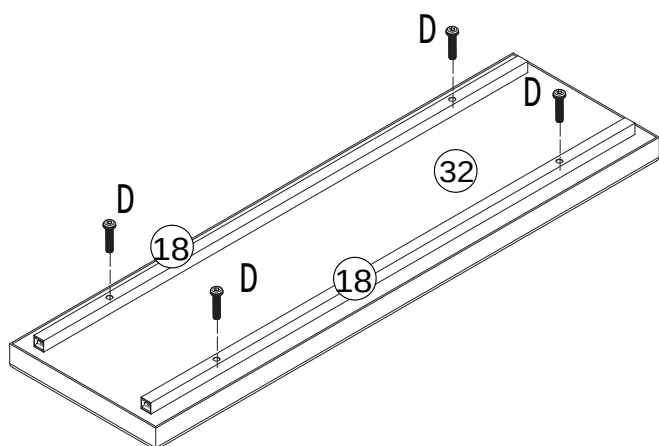

D		4pcs
---	---	------

Install screws loosely,
don't fully tighten


13

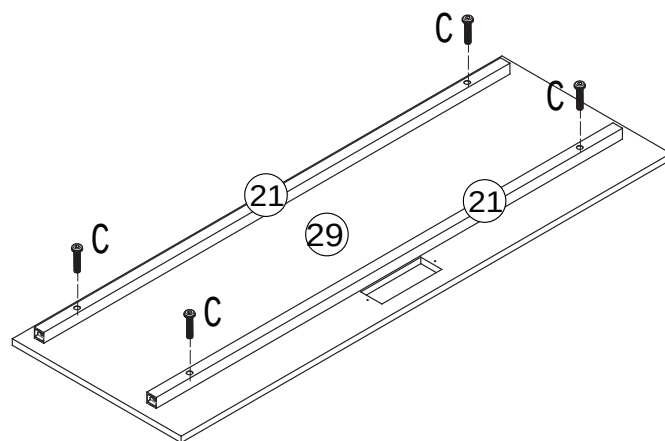

C		4pcs white zinc
---	--	-----------------


Install screws loosely,
don't fully tighten

14

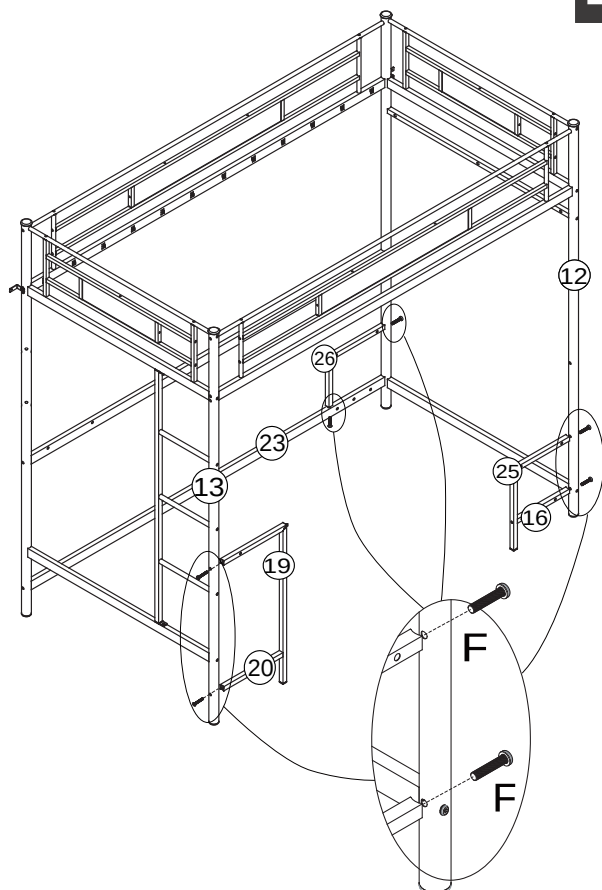


F		6pcs
---	---	------

15

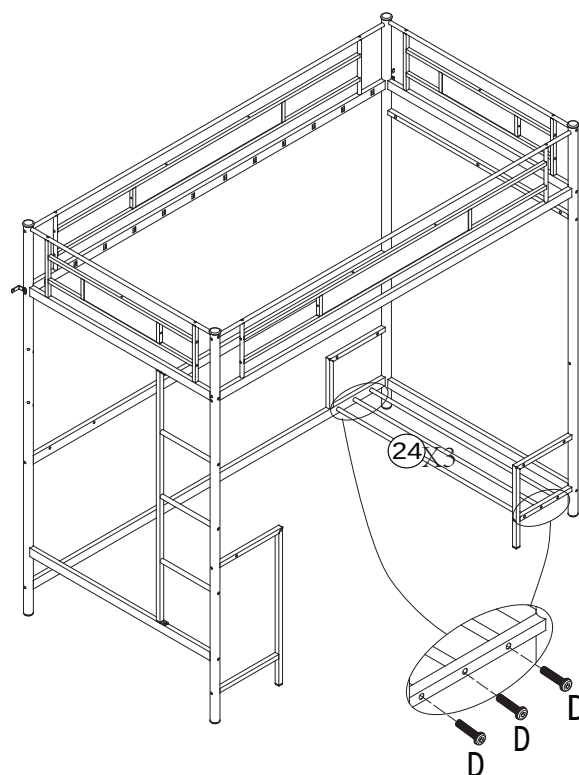


D		6pcs
---	--	------

16

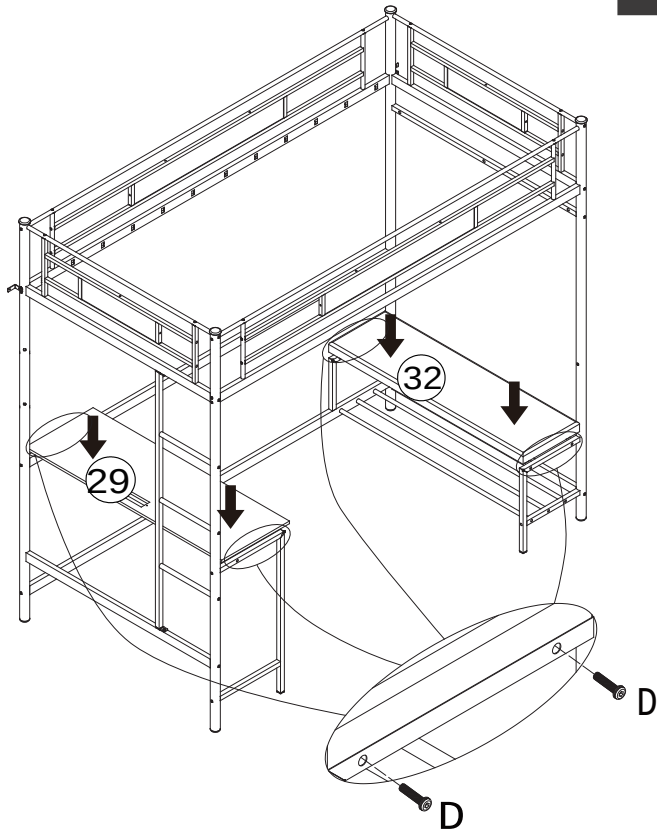


D		8pcs
	M8x35	

17

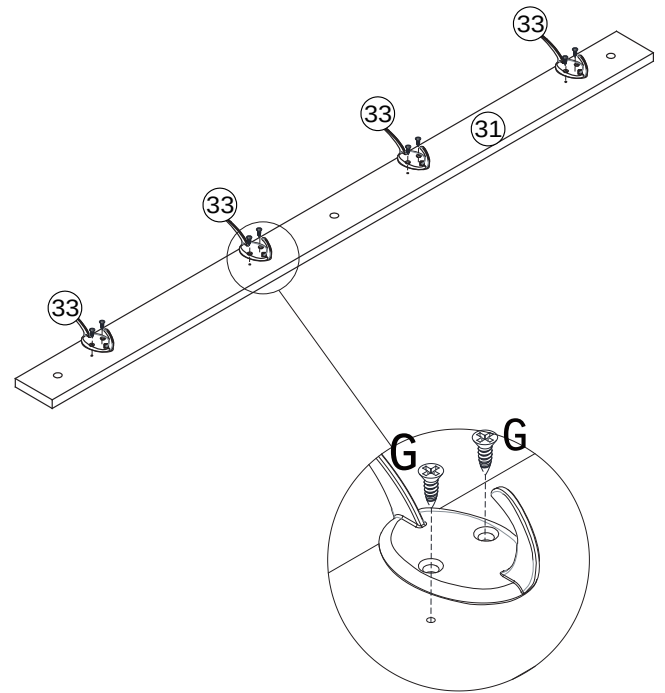


G		8pcs
	ST3*16	

18

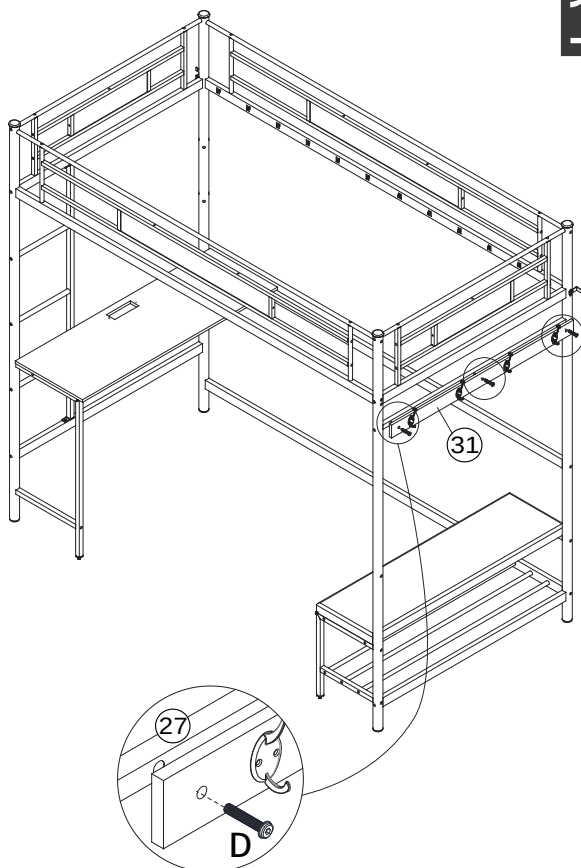


D		3pcs
	M8x35	

x2 19

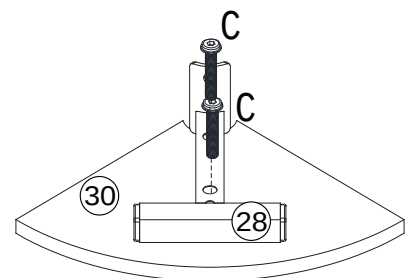


C		4pcs	white zinc
	M8x30		

20

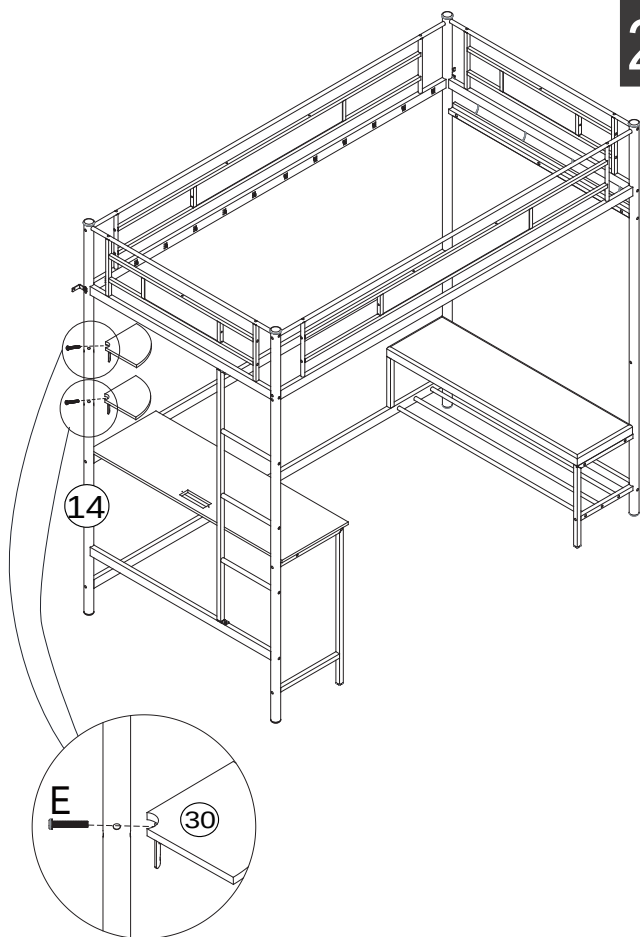


E		2pcs
M8x45		

21

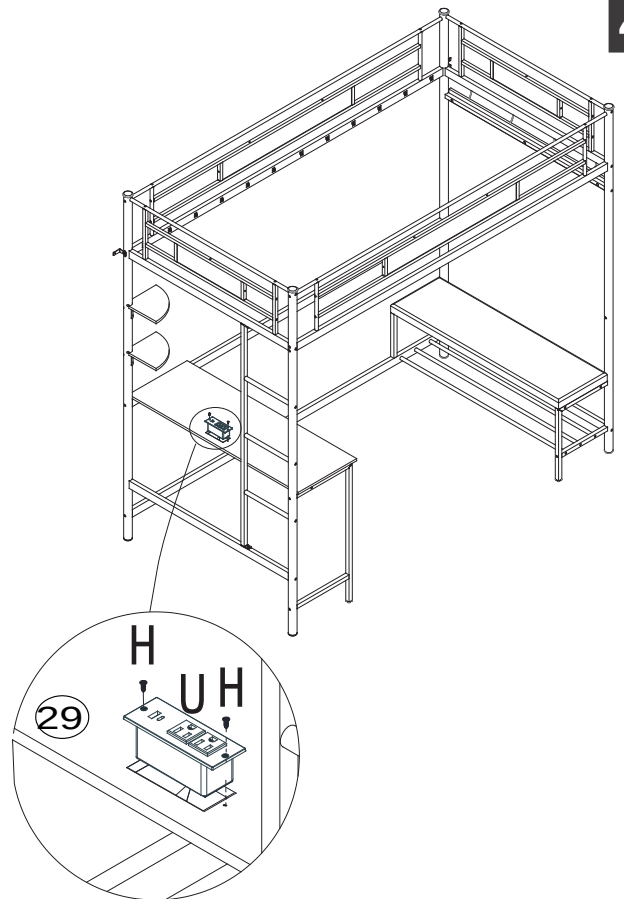

H		2pcs
ST4x14		


22

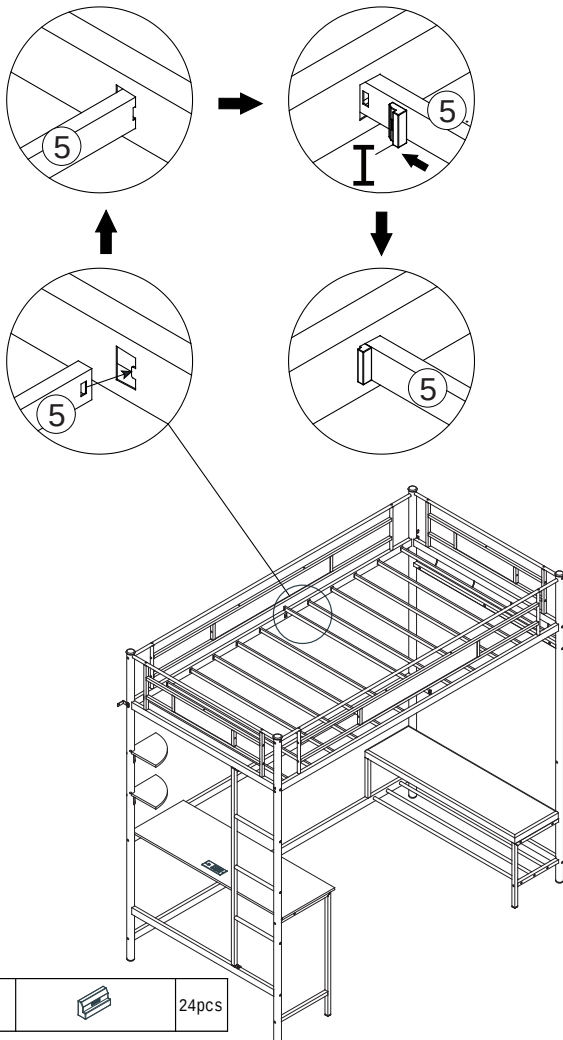

I		24pcs
---	---	-------

23


- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

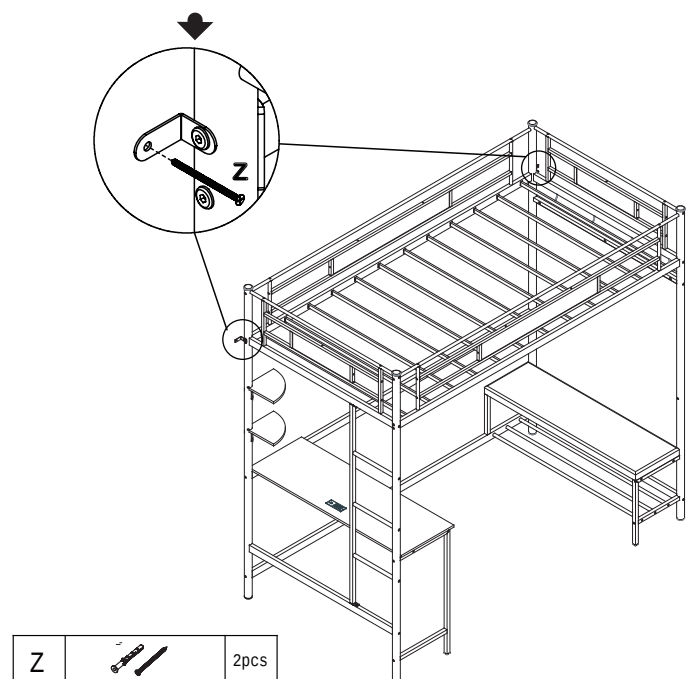

Z		2pcs
---	--	------

Finish

24

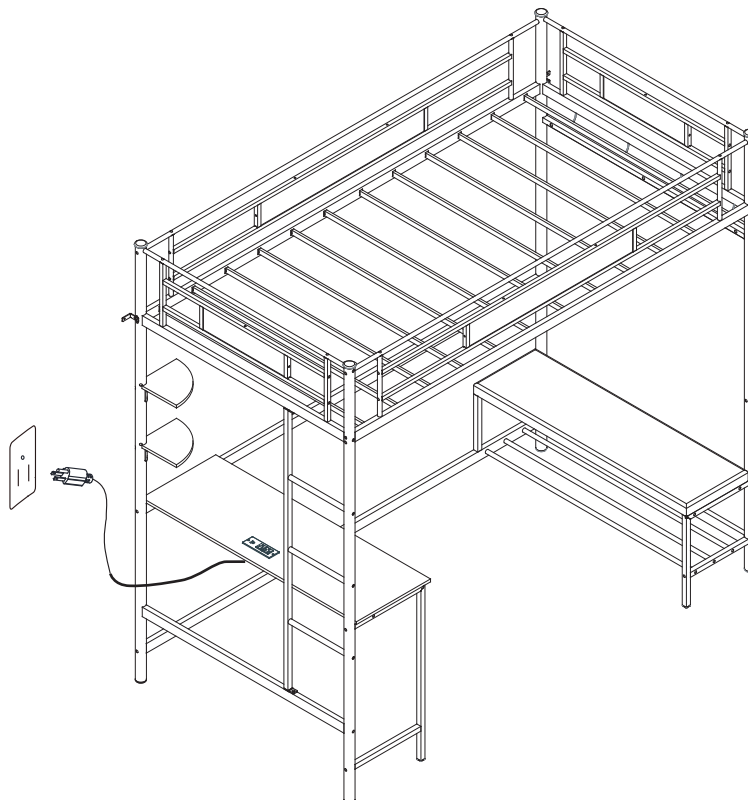

Note: Now you can tighten all the bolts.