



Installation Manual

Outdoor Grill Cart

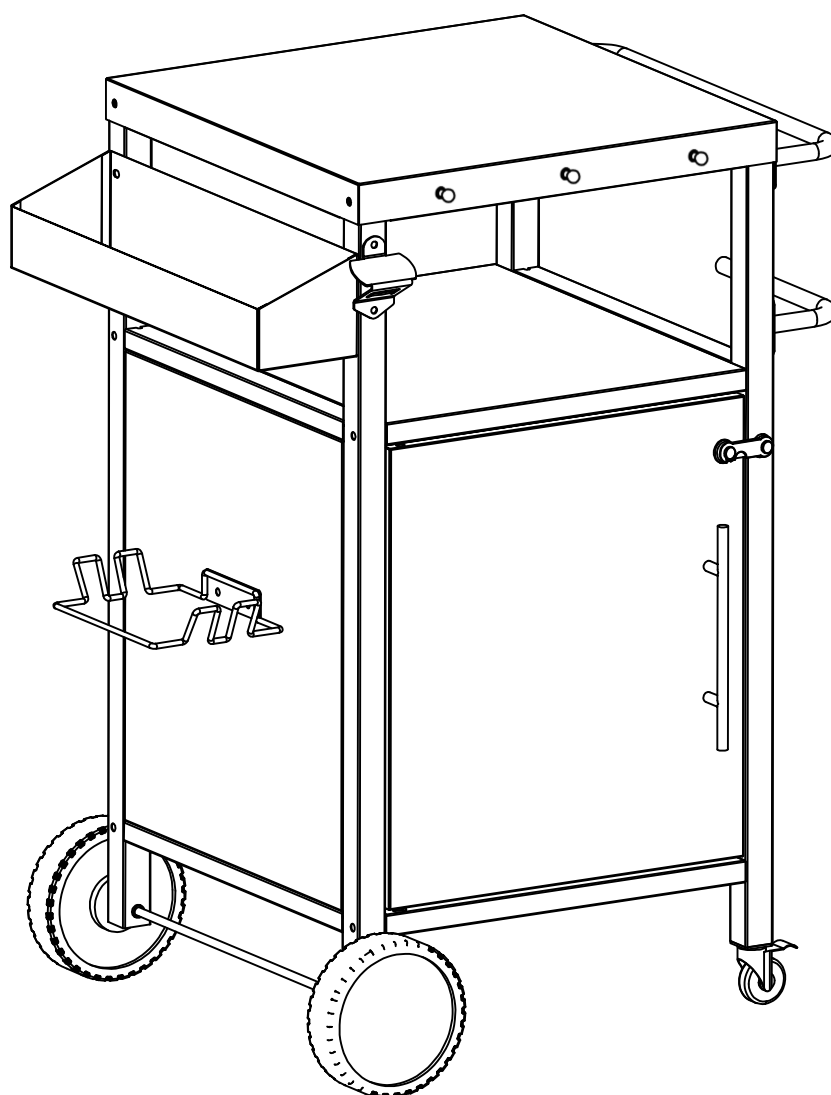







Customer Service : ahomrt@163.com


Parts List

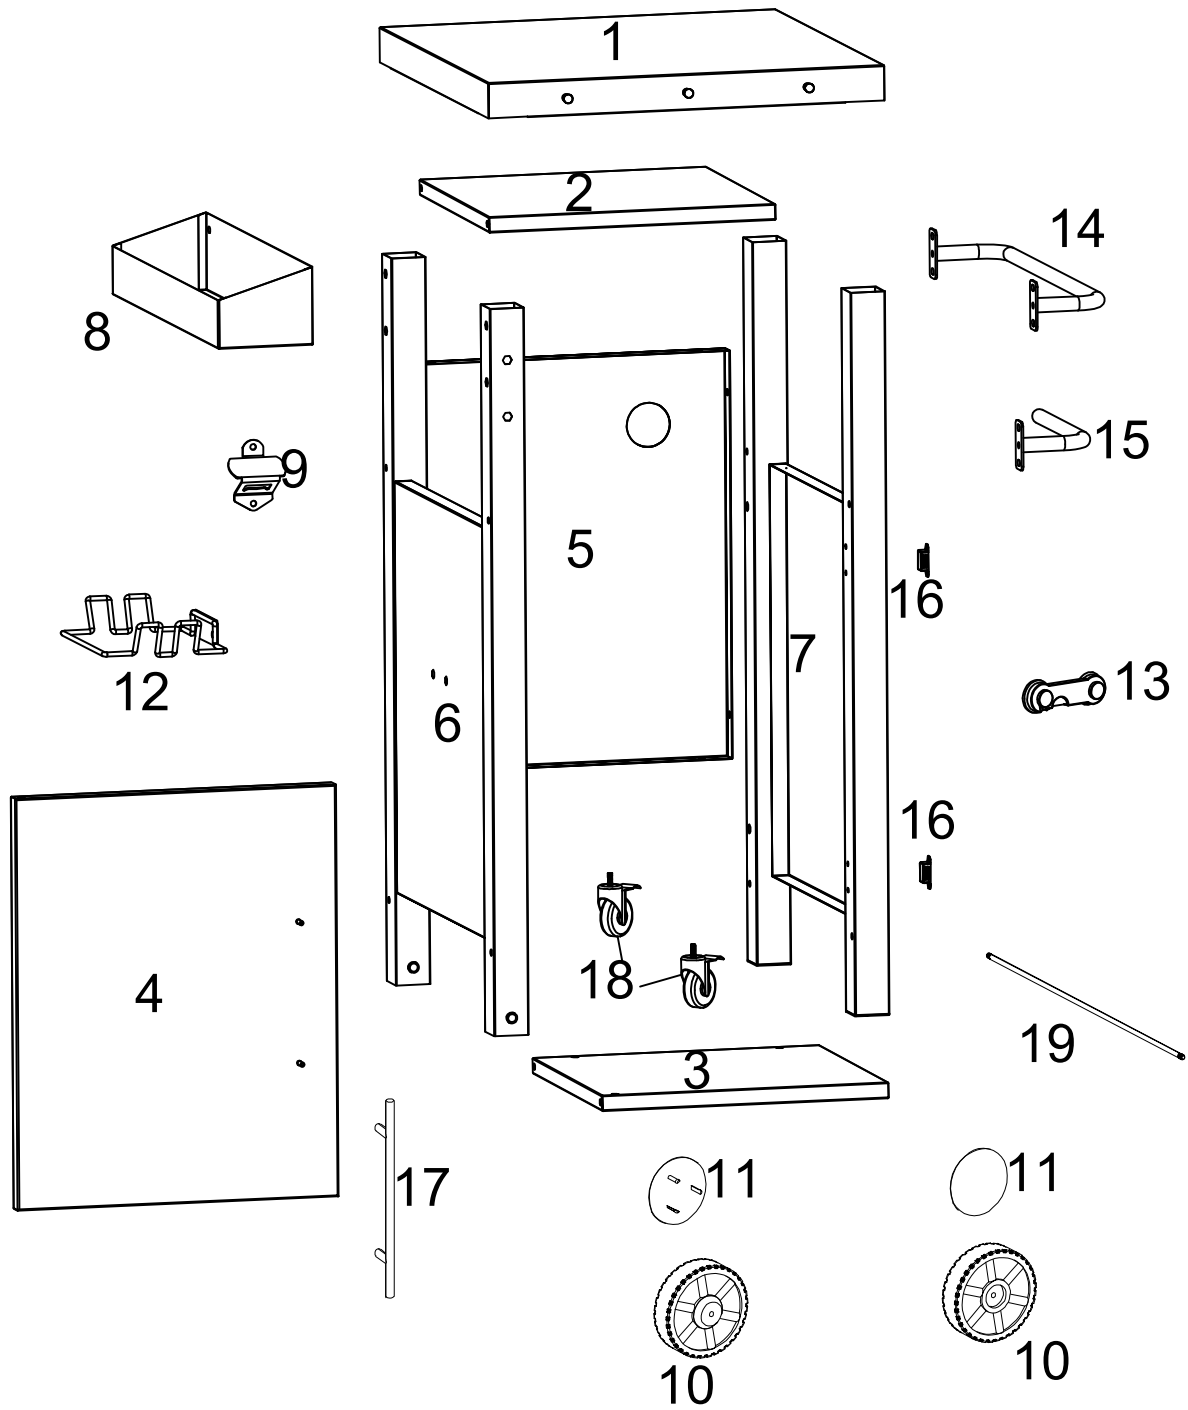

Hardware List


- Carefully remove all the parts from the carton and place them individually on a softcloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure acompleted product as designed.
- Do not tighten all the screws until each part is properly assembled.

A		M6x45mm	Bolt	8 pcs
B		M3x8mm	Bolt	4 pcs
C		M6x12mm	Bolt	22 pcs
D		M4x8mm	Bolt	2 pcs
E		M6x10mm	Bolt	2 pcs
F		M8	Wrench	1 pcs
G		M8	Lock nut	2 pcs

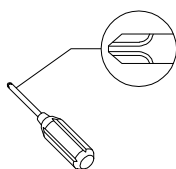

Phillips head screwdriver required for assembly
(not included)


Step 1





B x 4





16 x 2






7 x 1

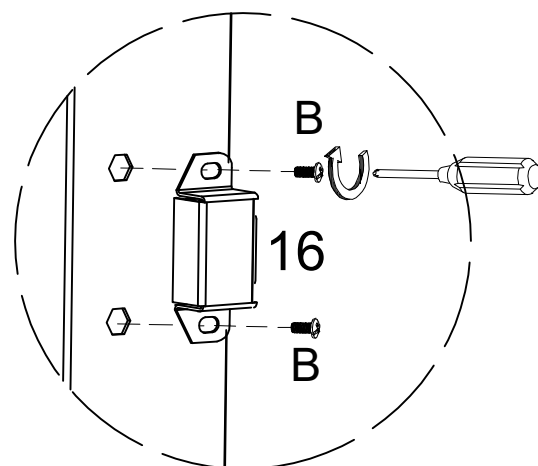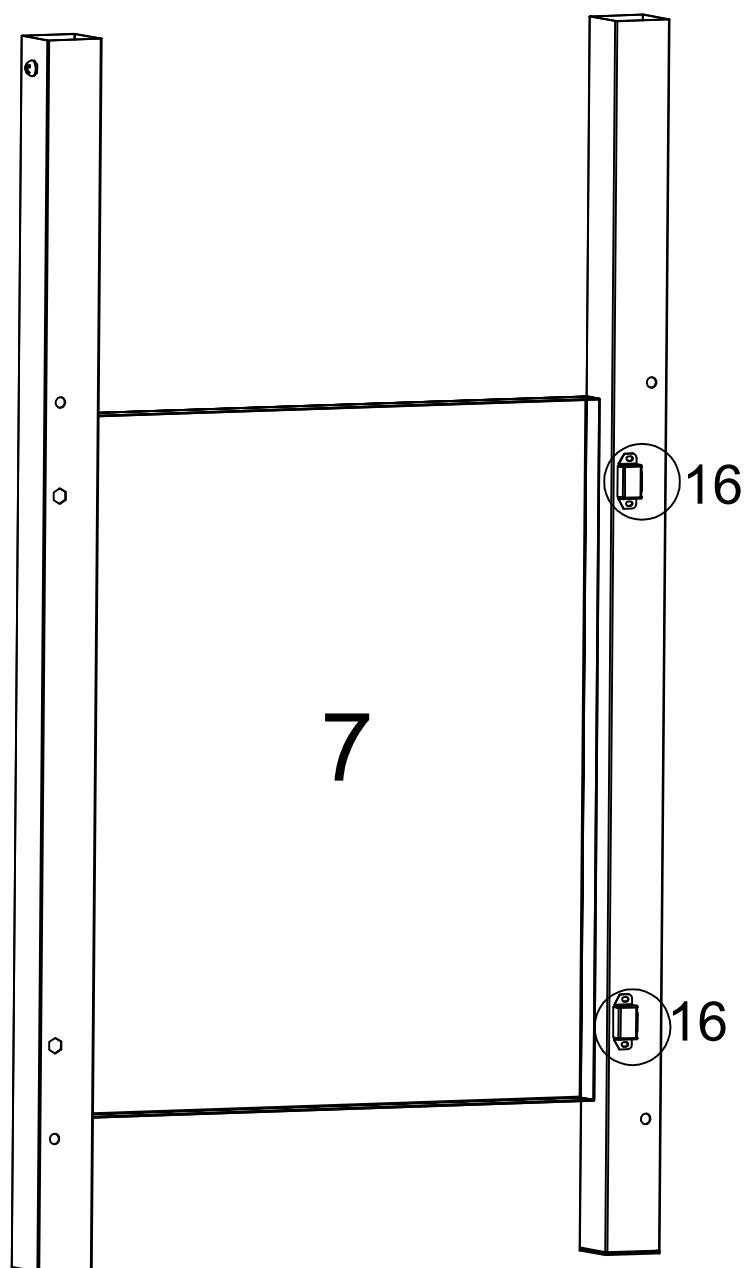


After installation,
remove the metal
gasket

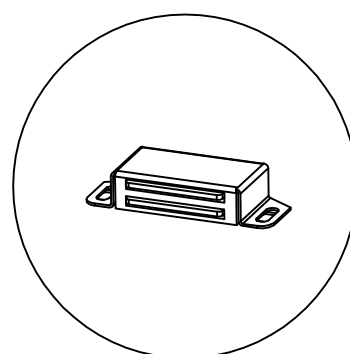
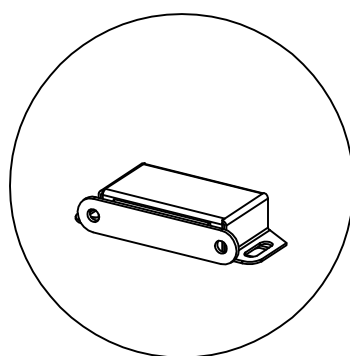



Step 2

	A x 8
	6 x 1
	3 x 1
	2 x 1
	7 x 1

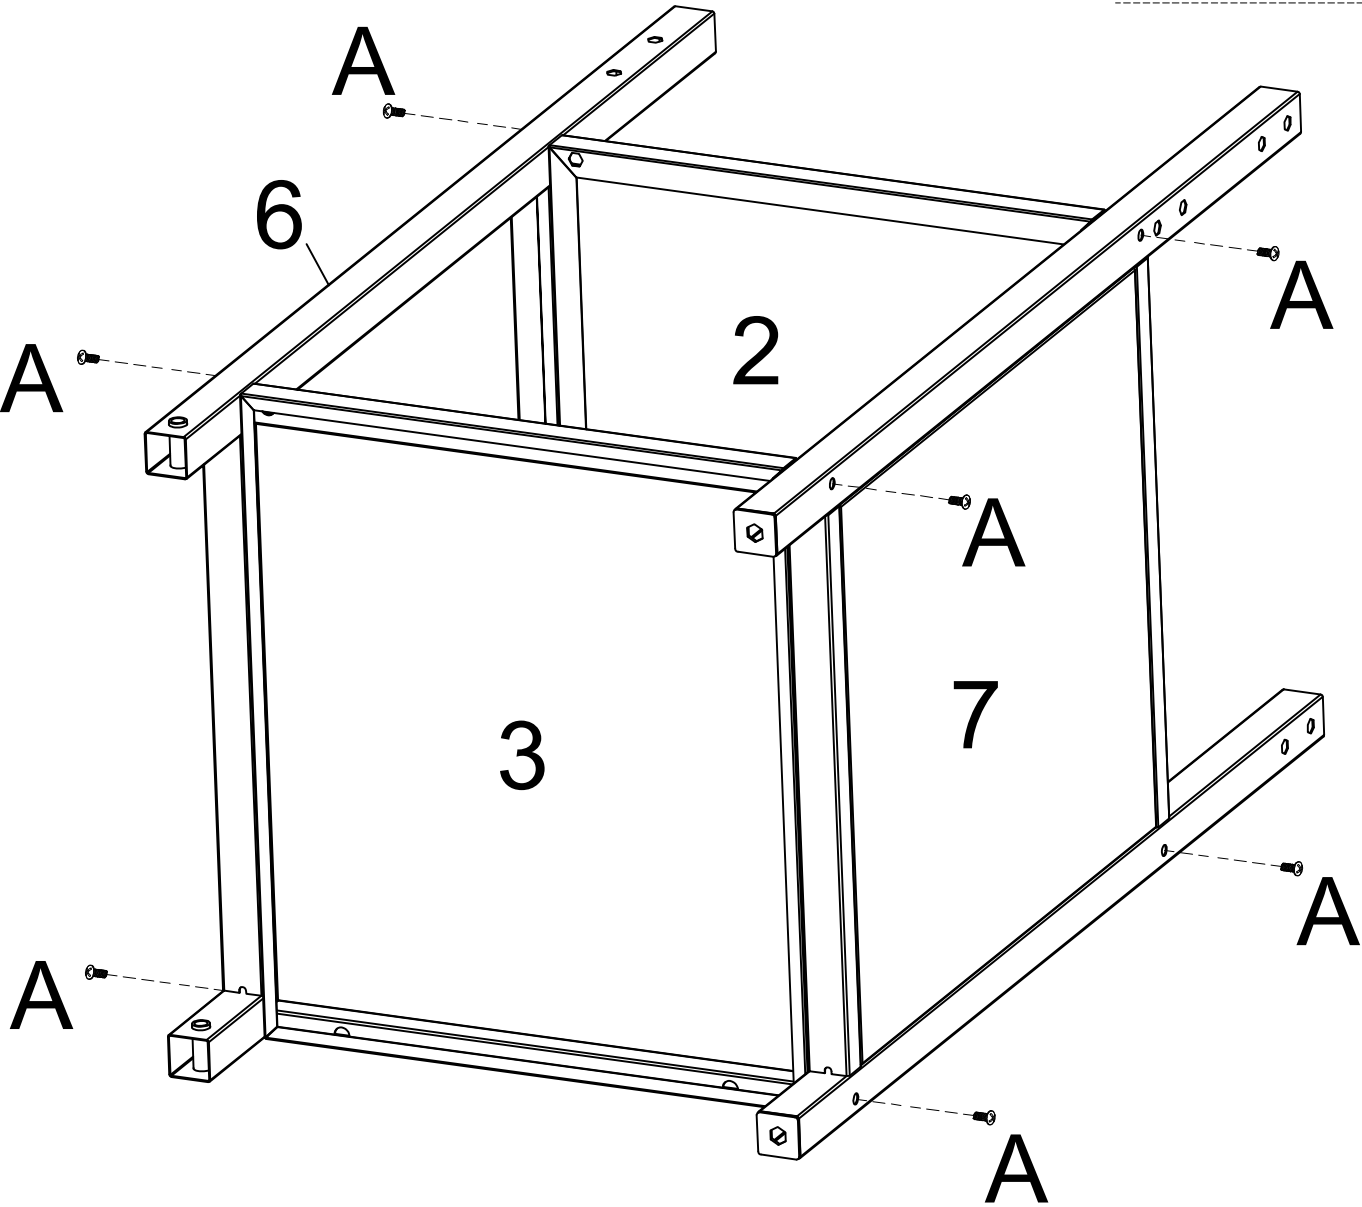


Step 3

	C x 8
	5 x 1

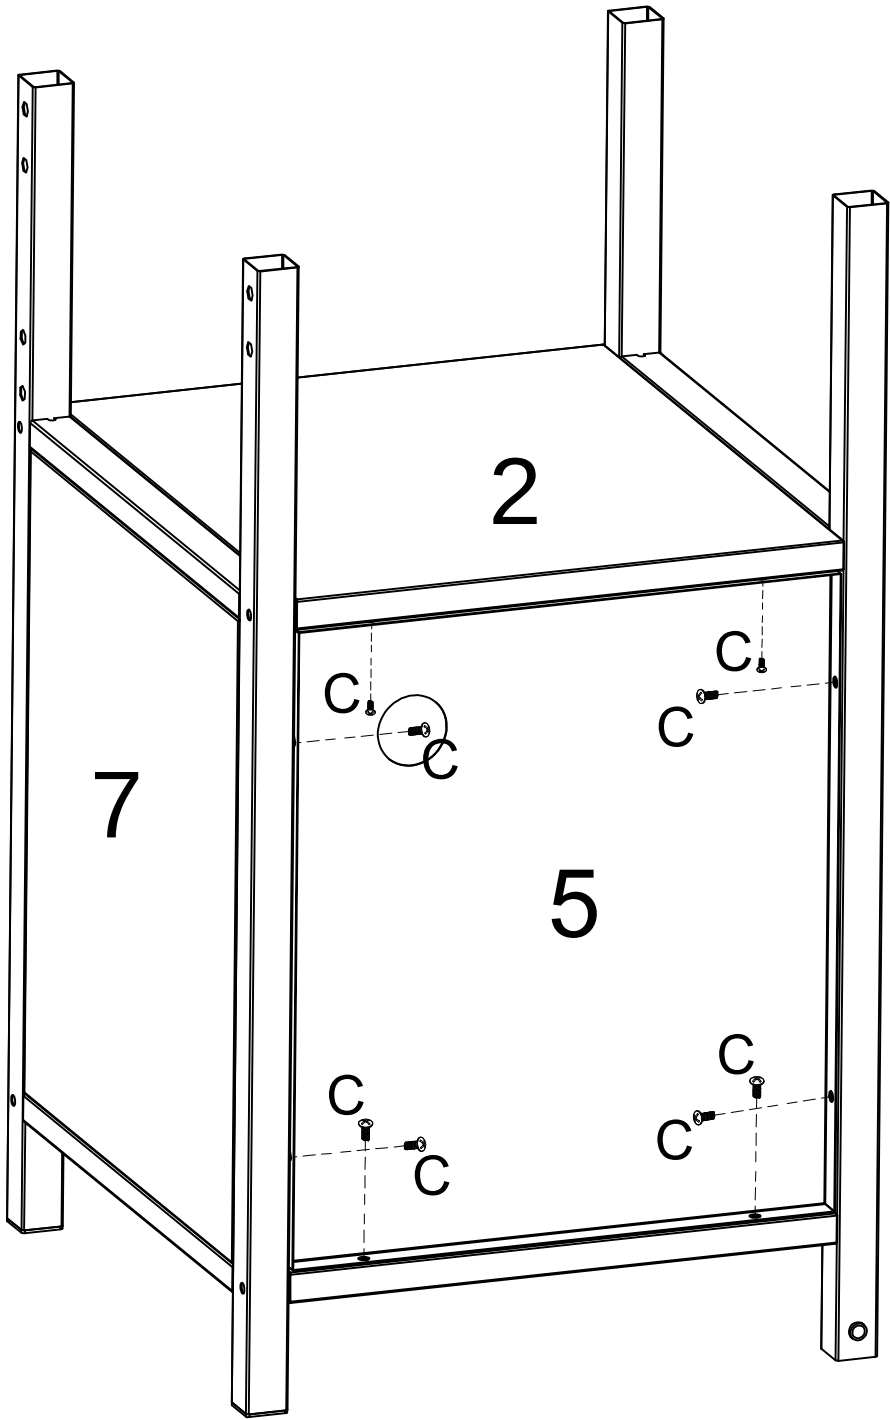


Step 4



C x 2






1 x 1



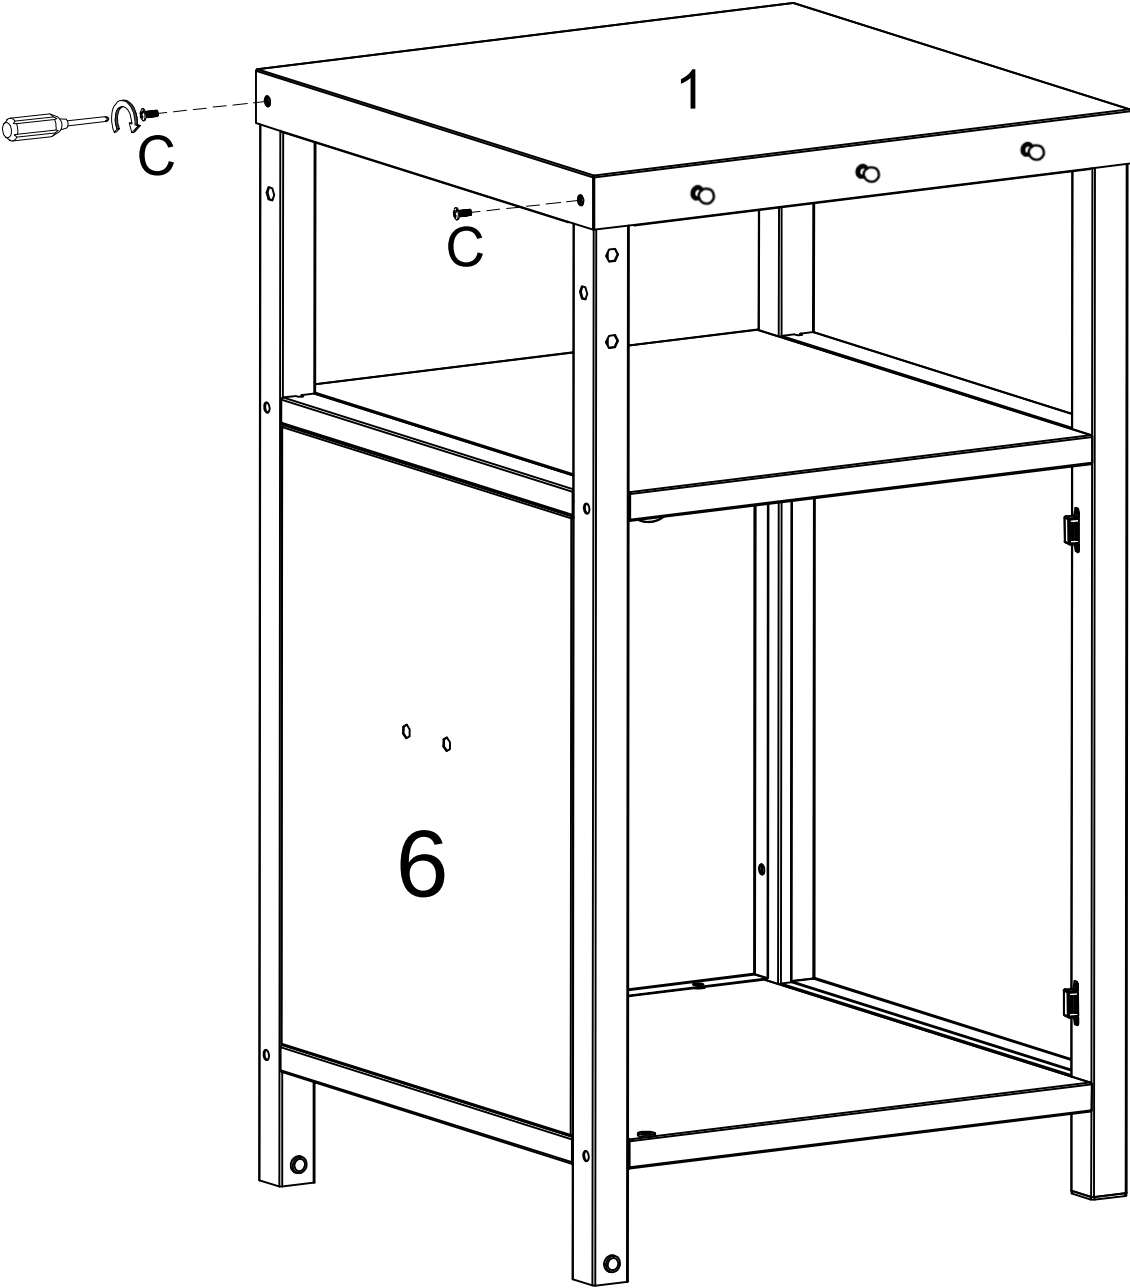



Step 5

	G x 2
	F x 1
	10 x 2
	11 x 2
	19 x 1
	18 x 2

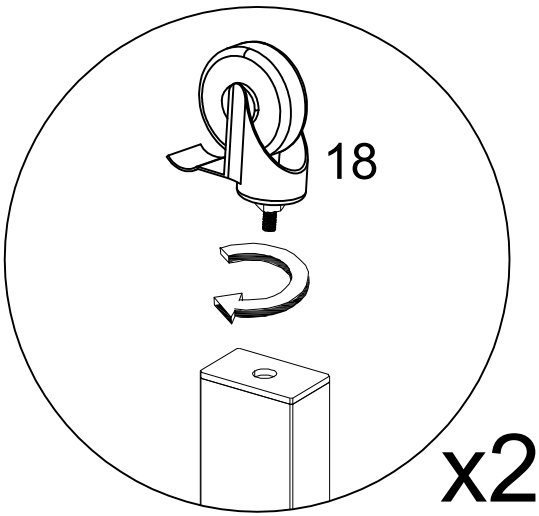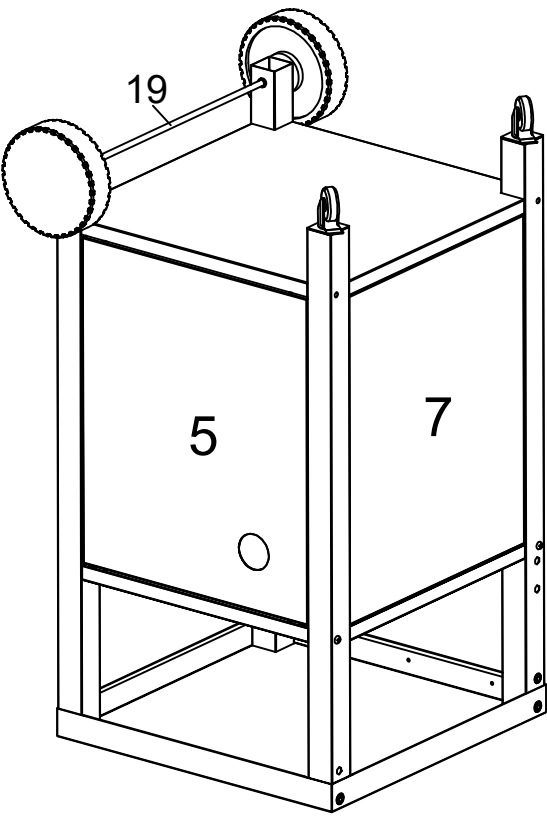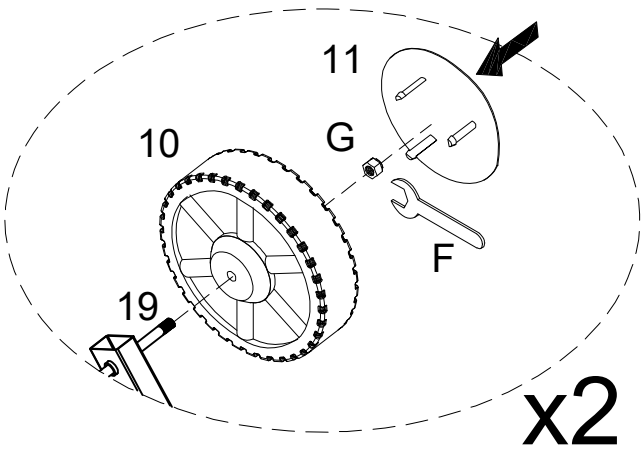

Step 6





	D x 2
	4 x 1
	17 x 1

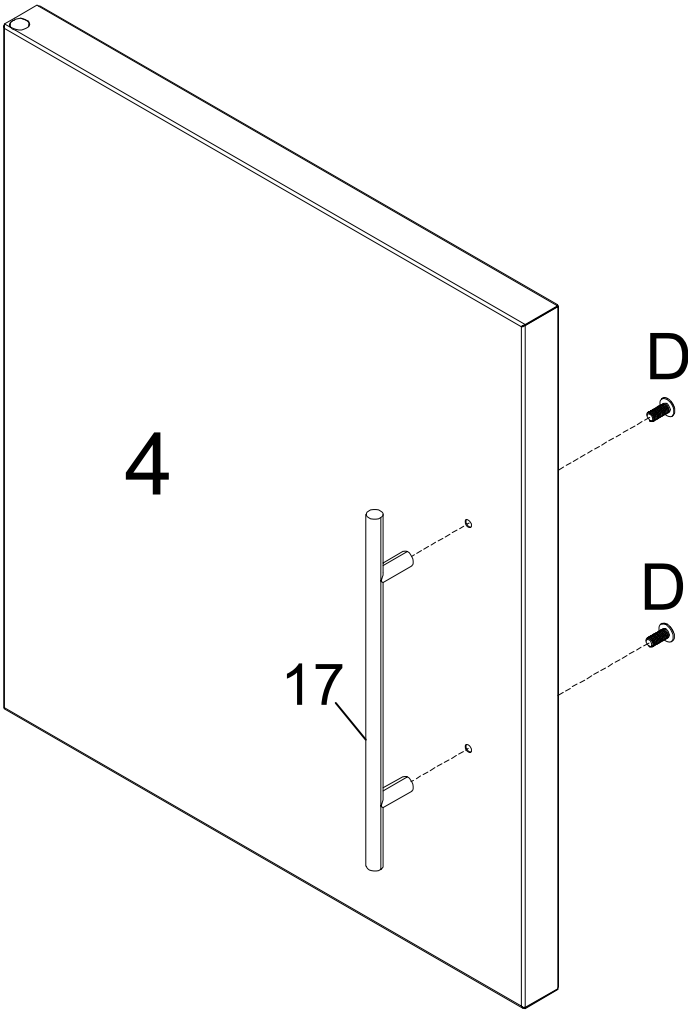


Step 7





E x 2

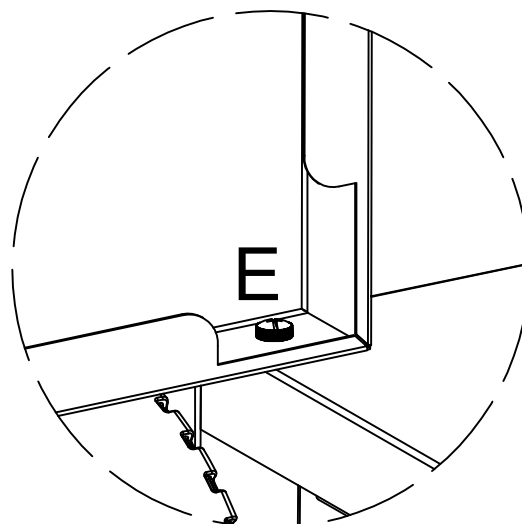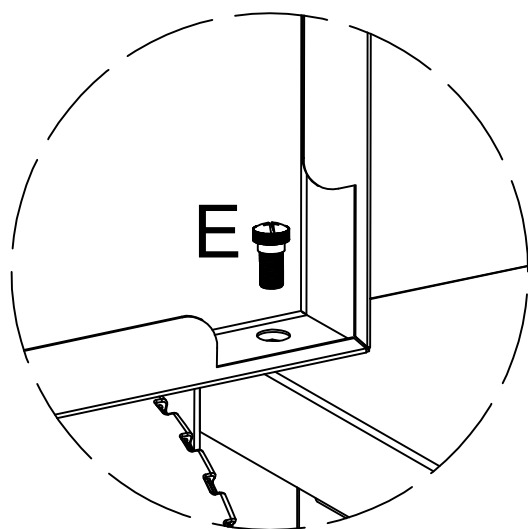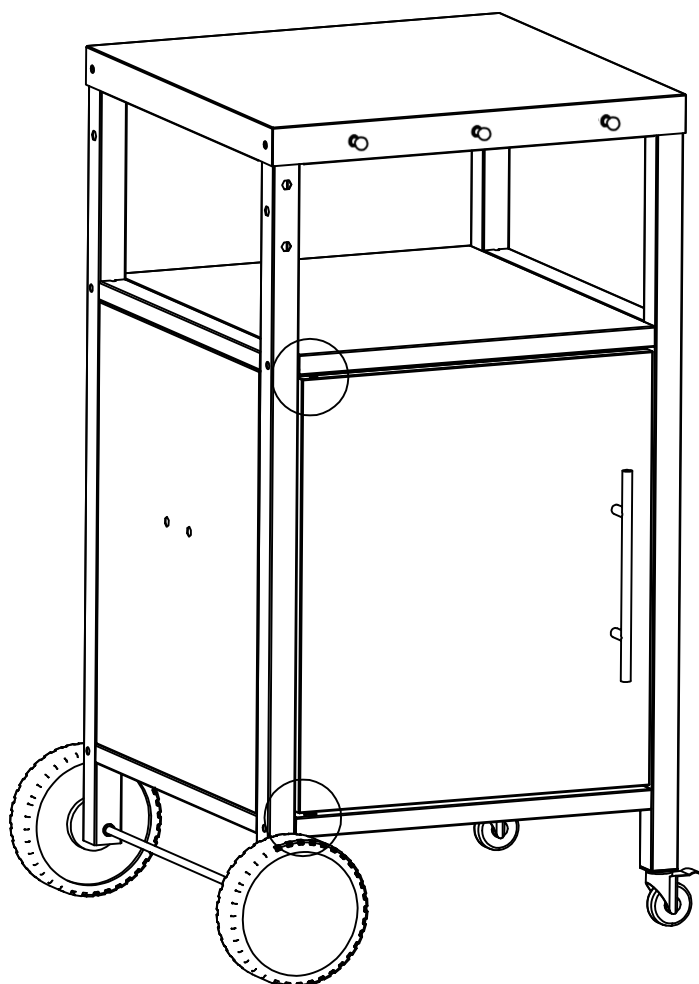

Step 8


	C x 6
	14 x 1
	15 x 1

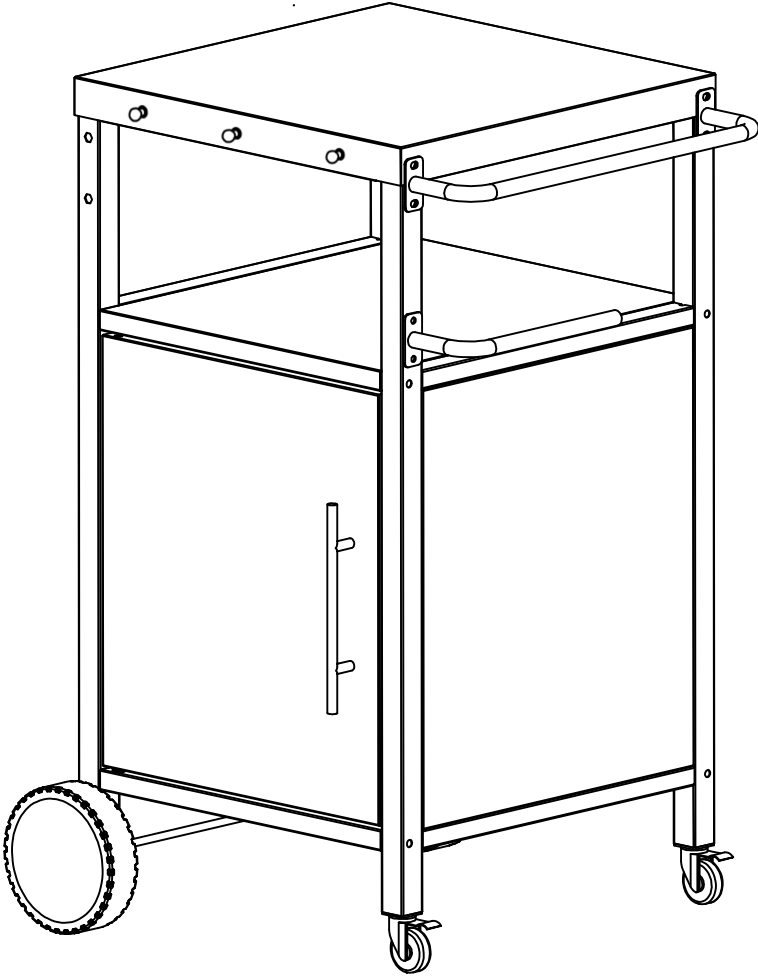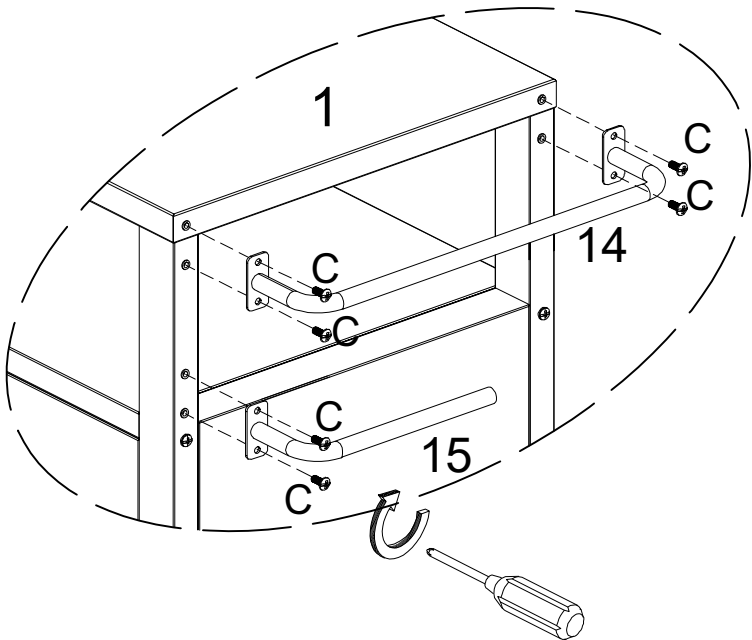



Step 9




C x 2




8 x 1

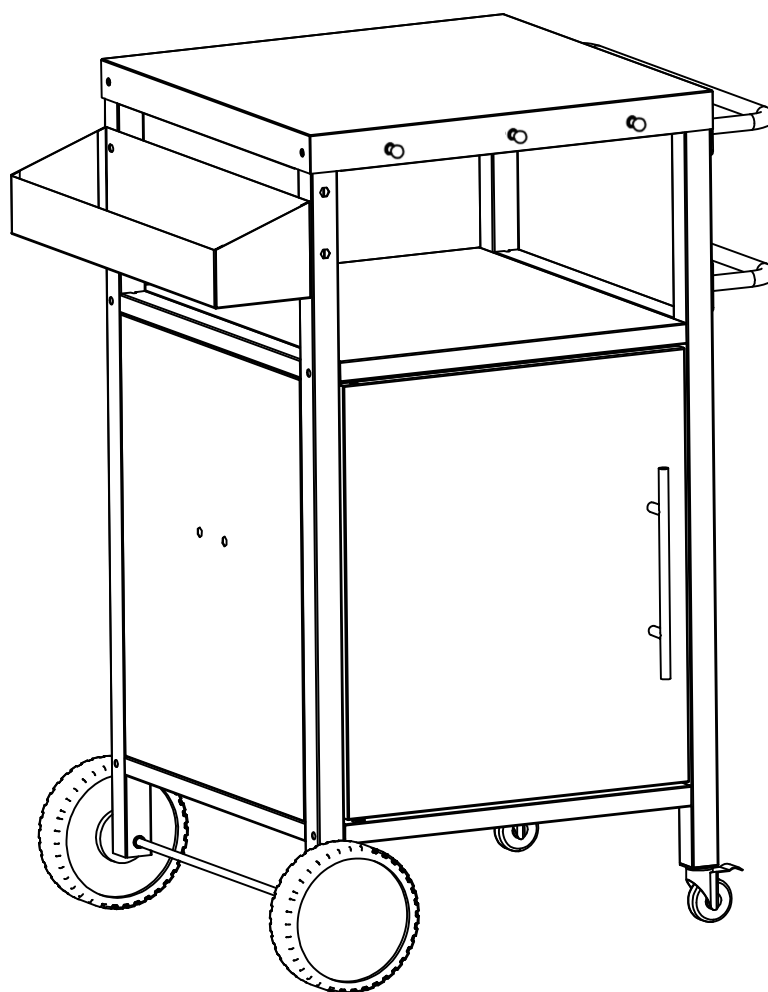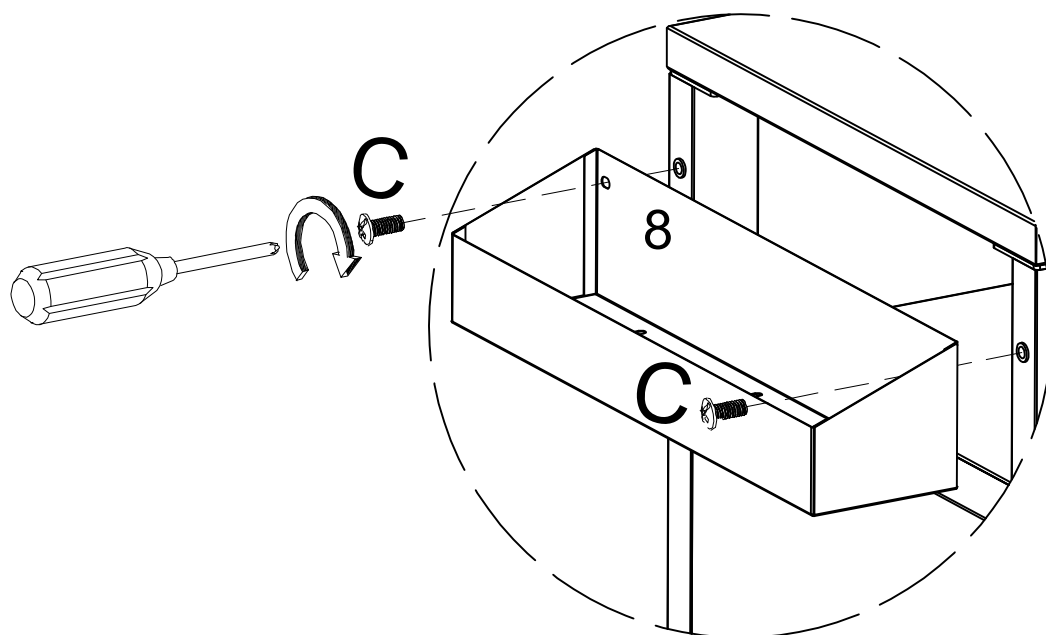



Step 10




C x 2



12 x 1

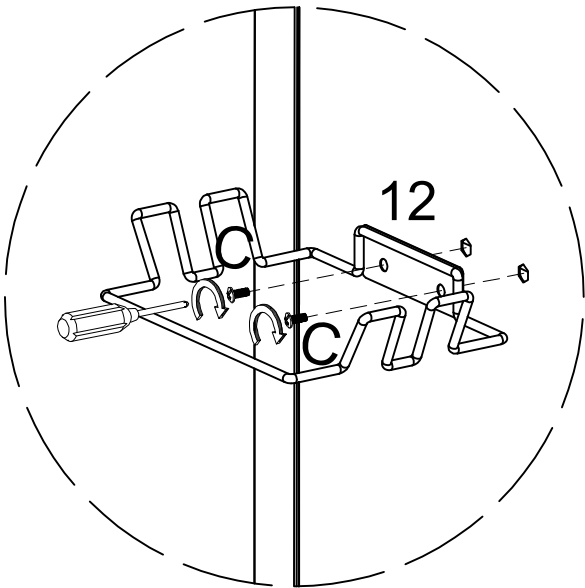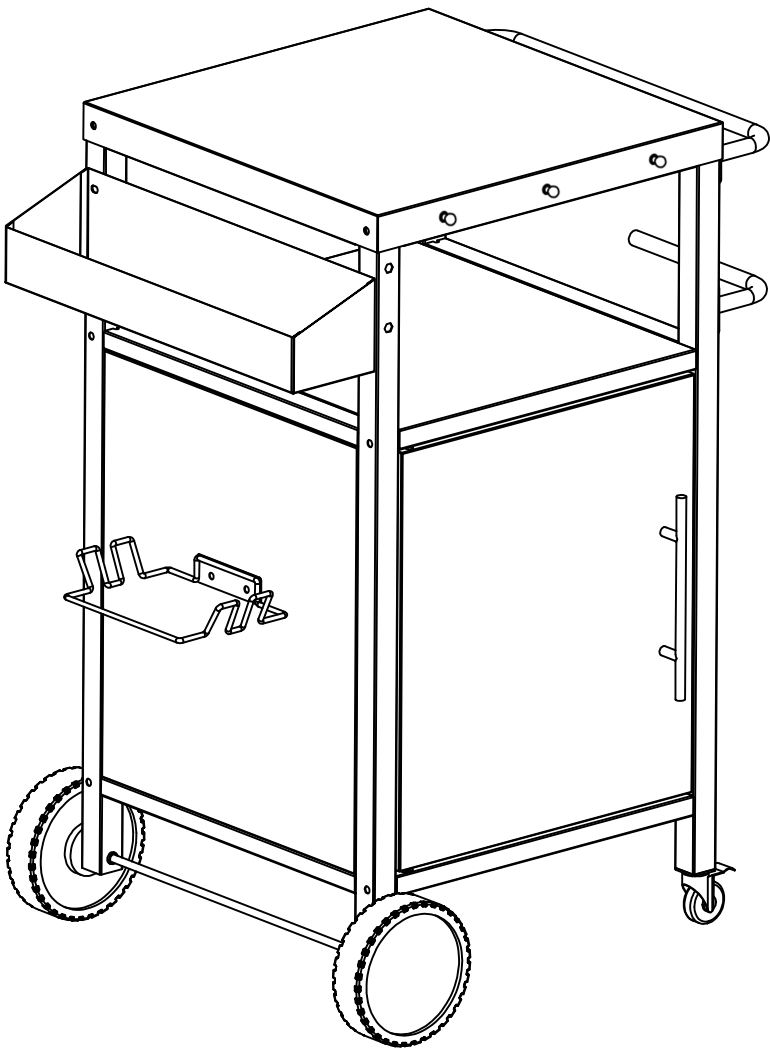



Step 11



C x 2




9 x 1

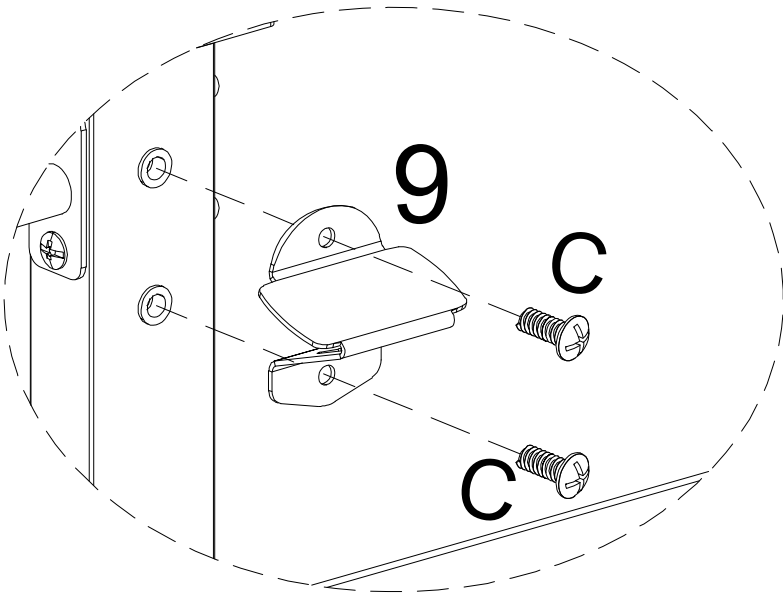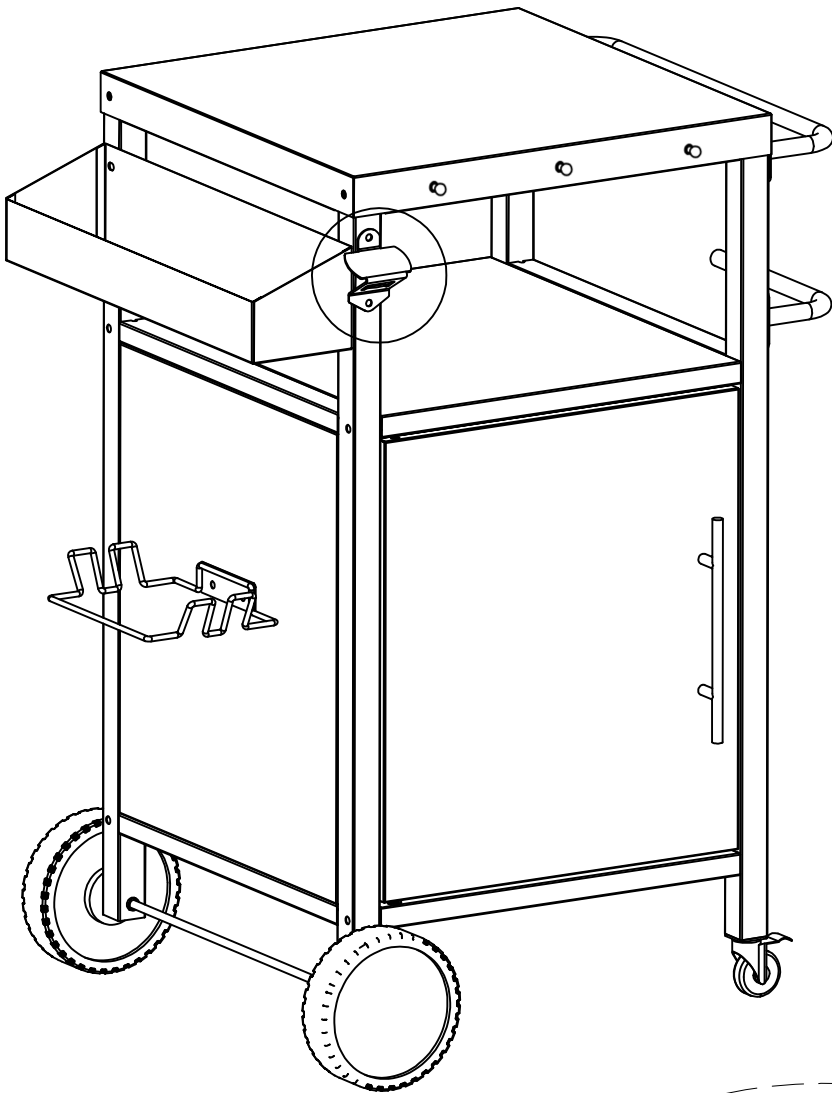

Step 12





13 x 1

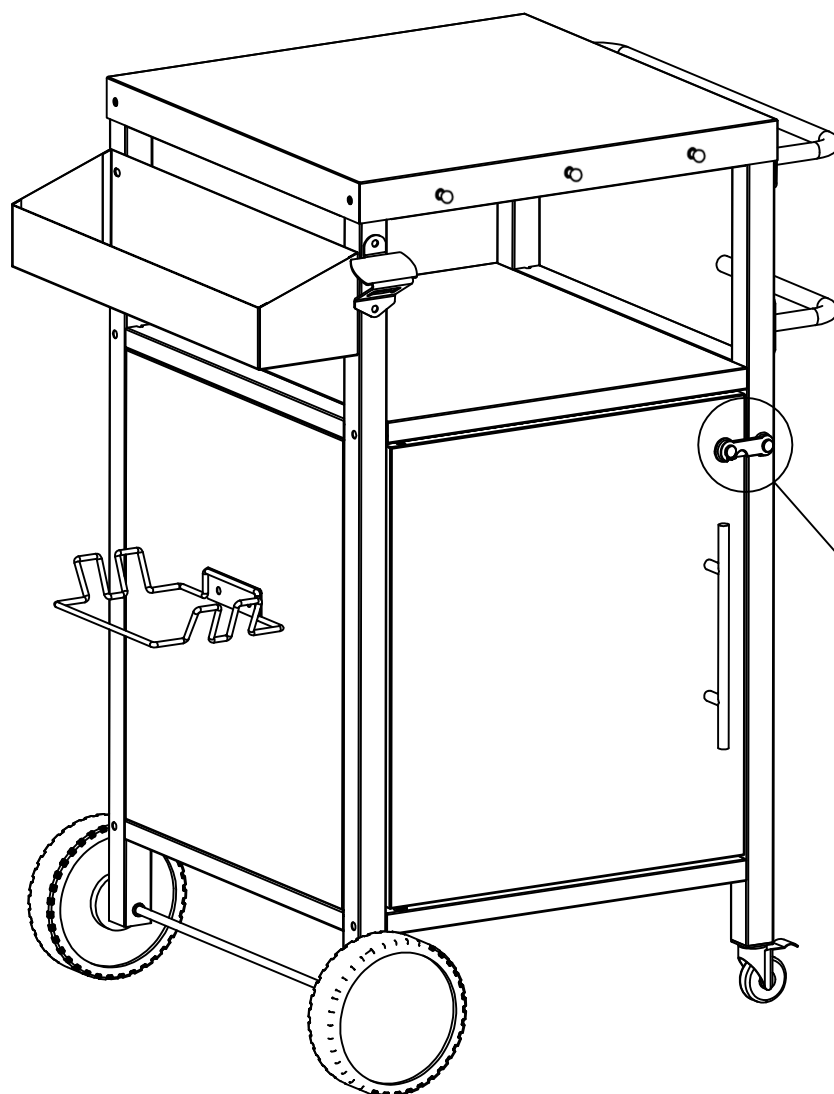


Remove the white protective film from the double-sided tape on the back.


13

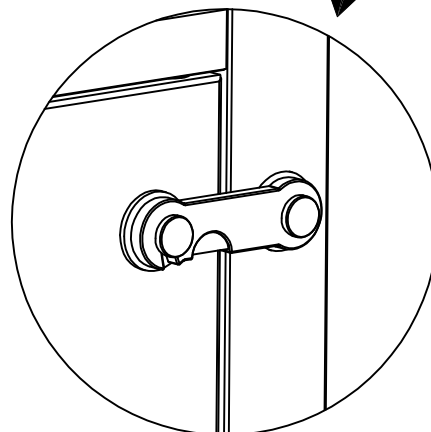

Then stick them on 4 and 13 respectively.

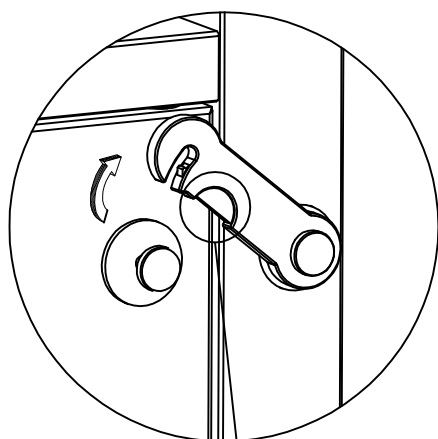

Press the switch at the notch to open

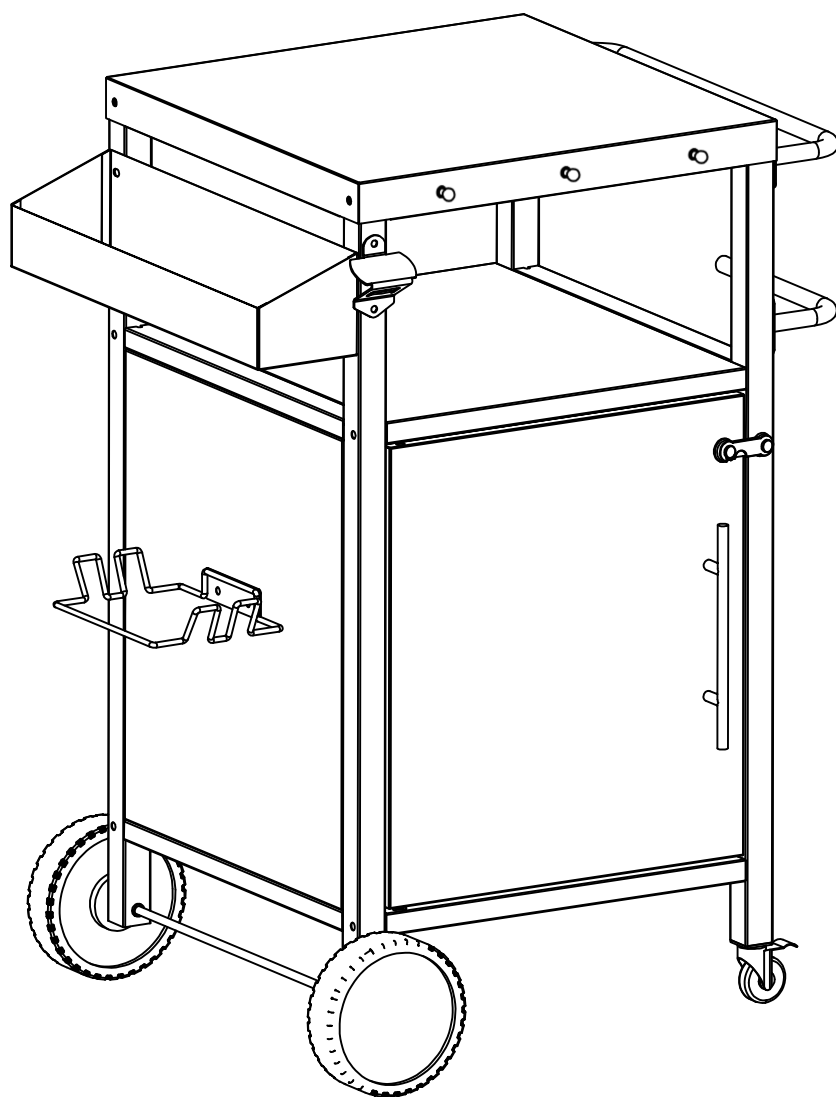

Final Assembly