




Thanks for choosing our products. Before installation, please scan the QR code below. Carefully review our installation manual or watch the installation video available on our store. If you encounter any installation issues or have other concerns, feel free to contact our after-sales team for assistance.

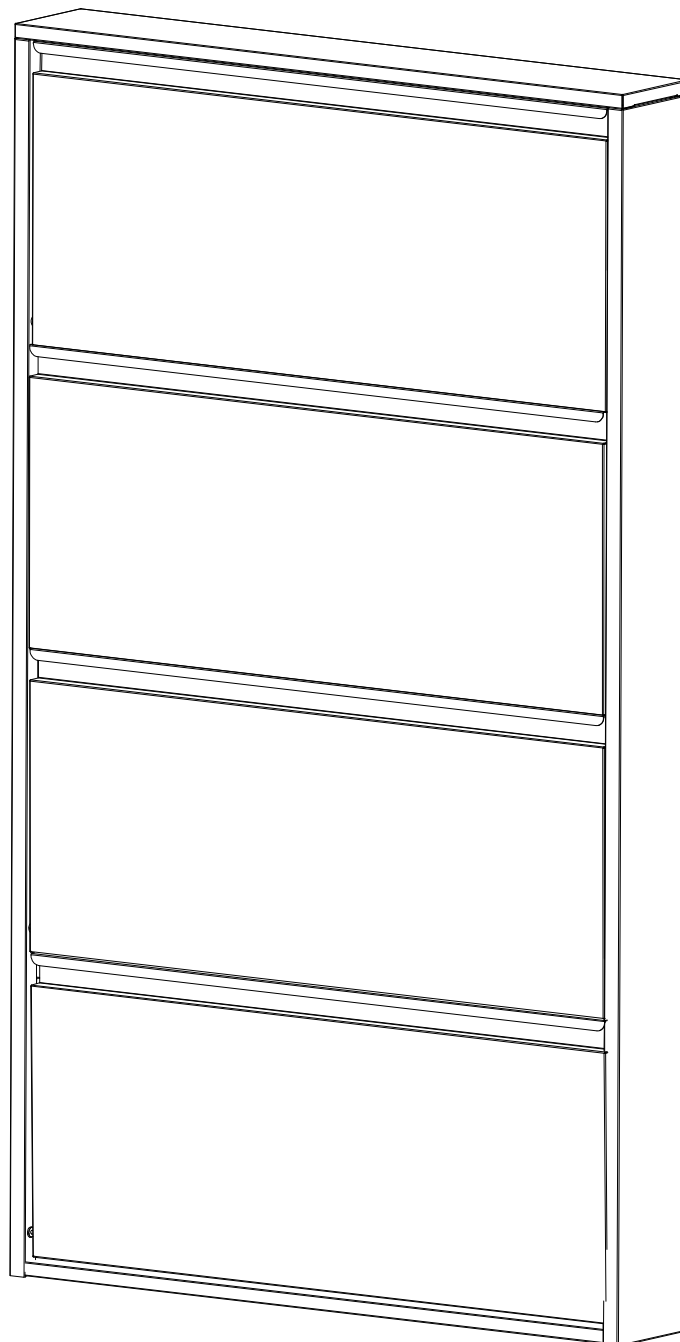


Please scan the QR code to
check the assemble video

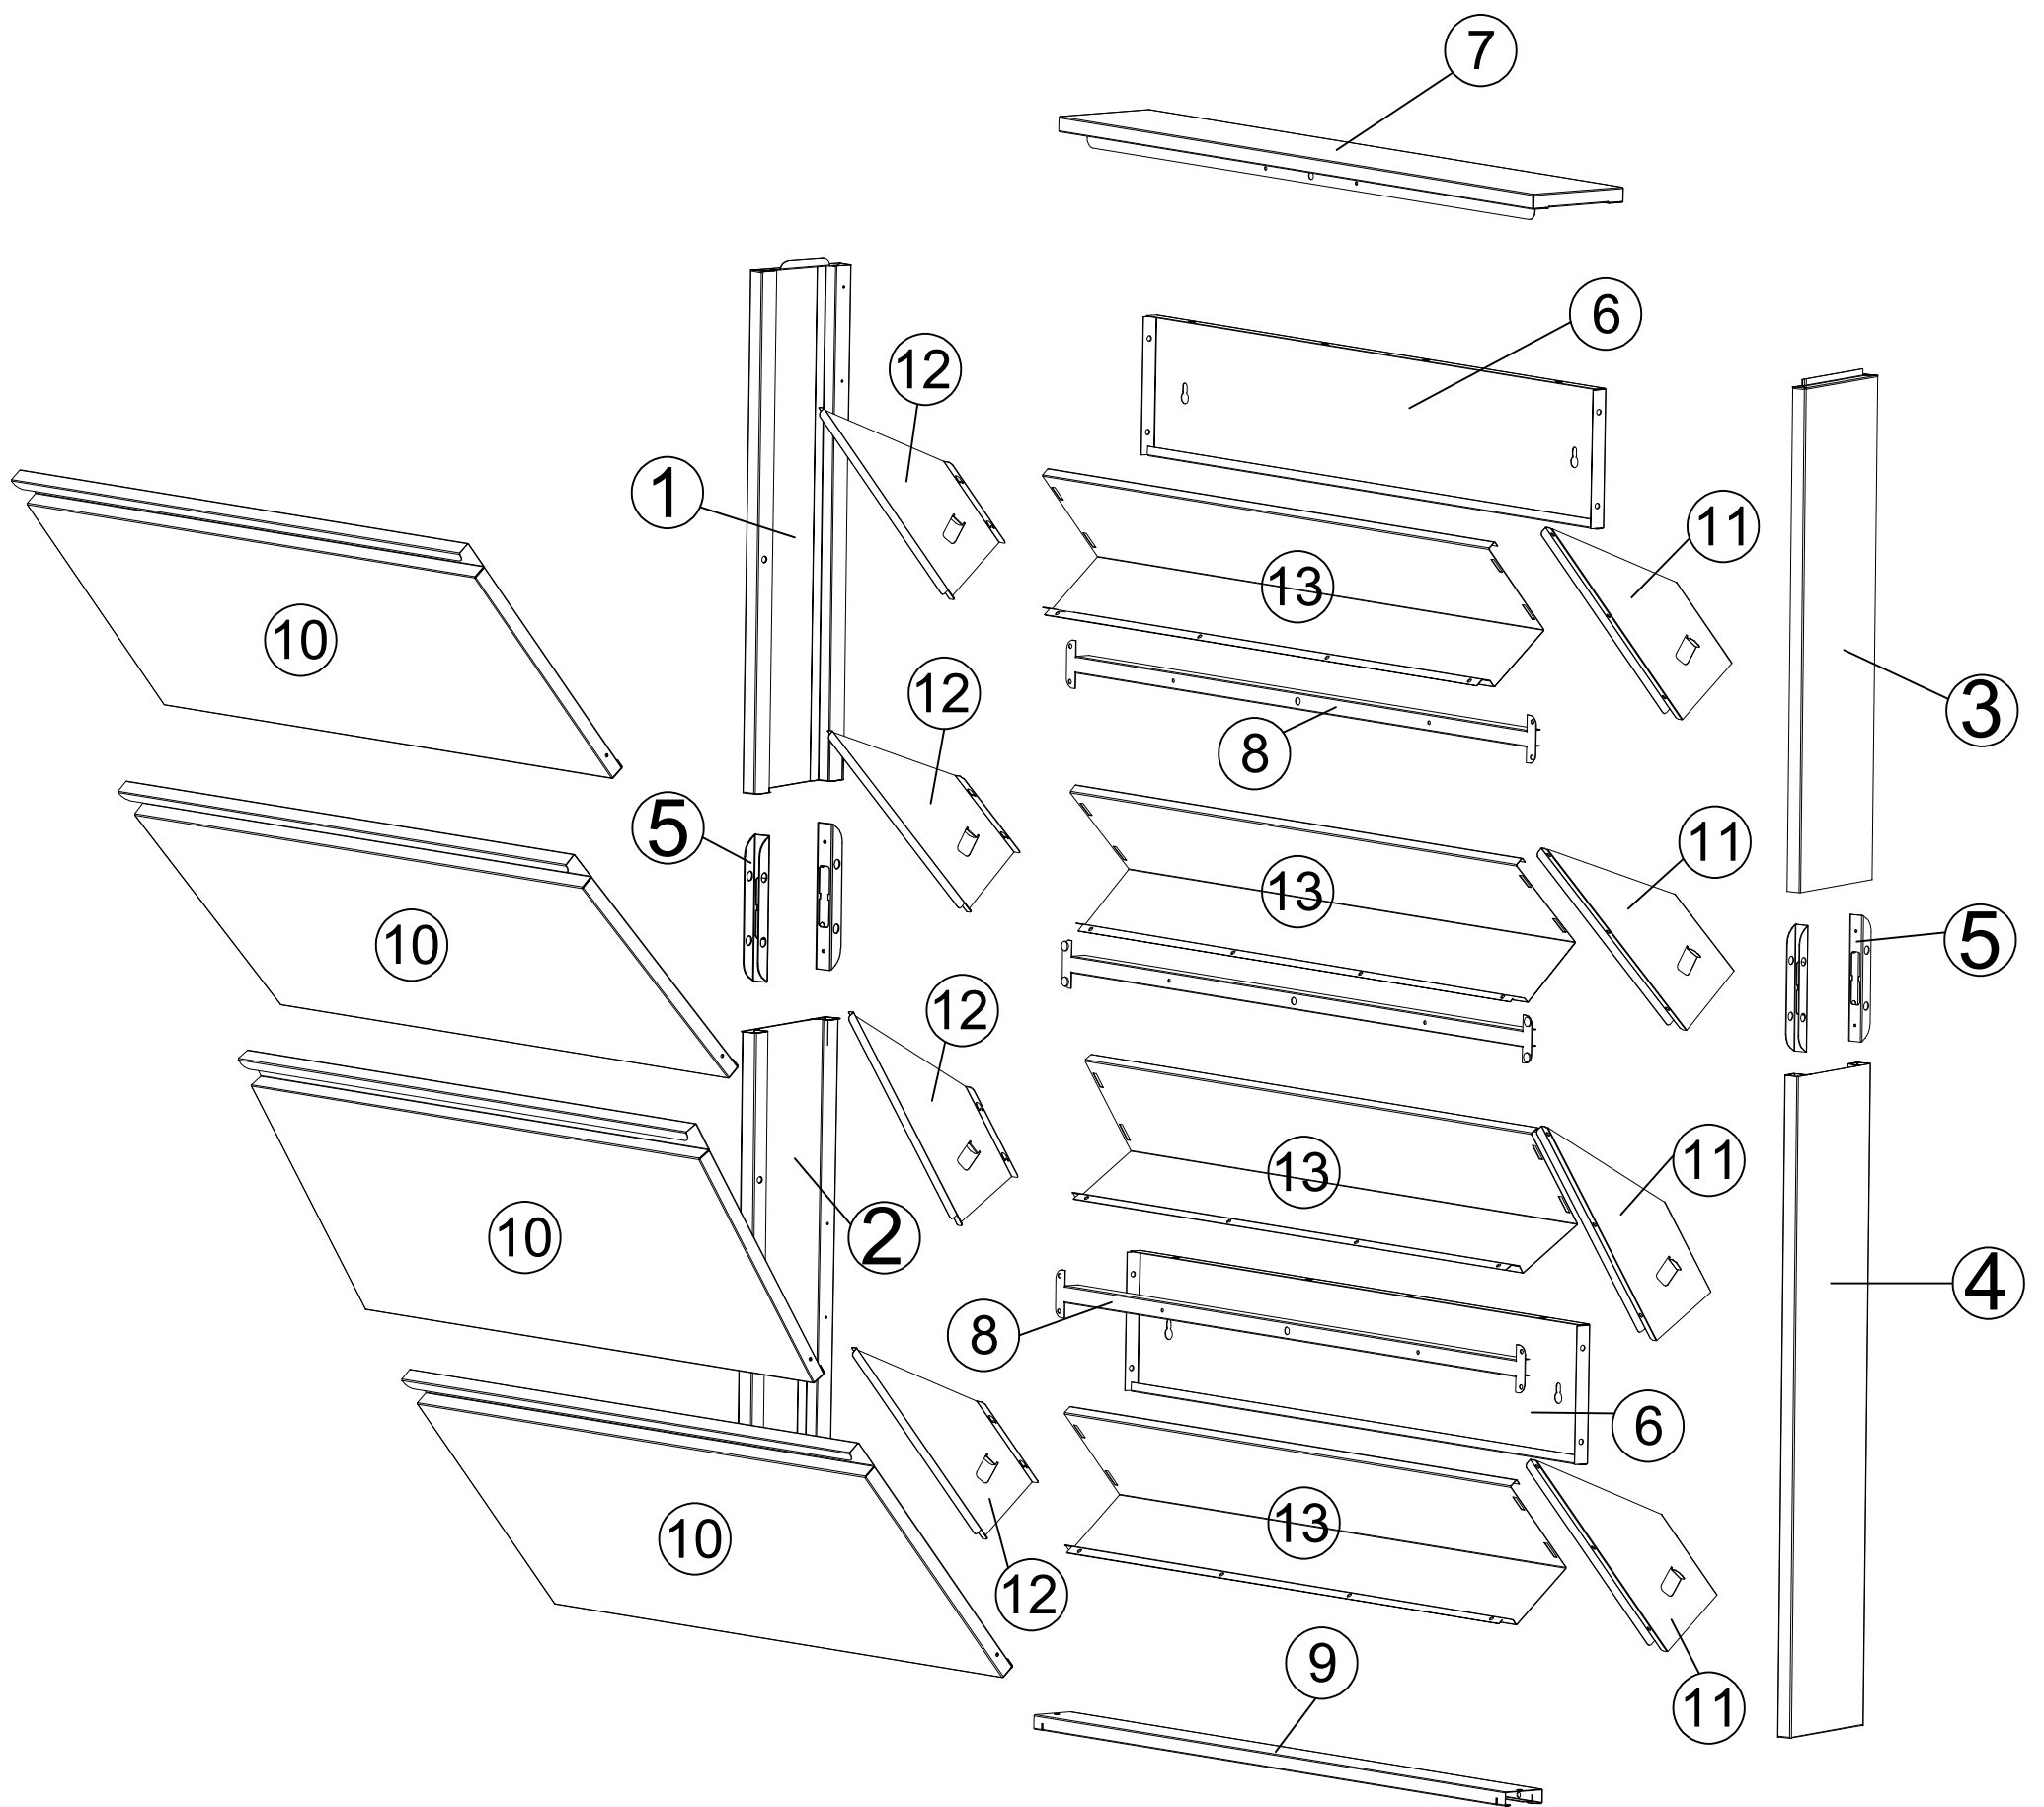


When assembling the shoe cabinet, it's recommended to use power tools first.




1.Left Side Plate-A




2.Left Side Plate-B




3.Right Side Plate-A

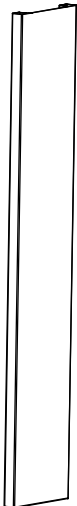


4.Right Side Plate-B

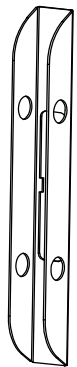


5.Link Parts *4

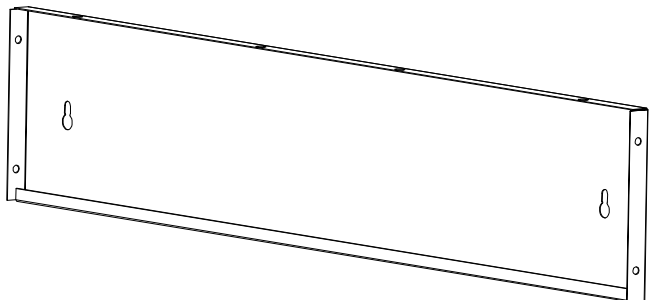


6.Back Plate *2

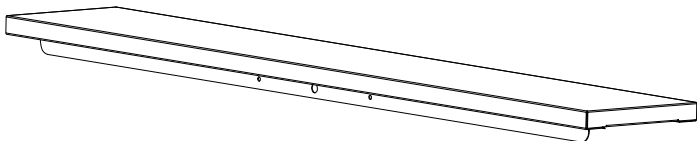


7.Top Plate

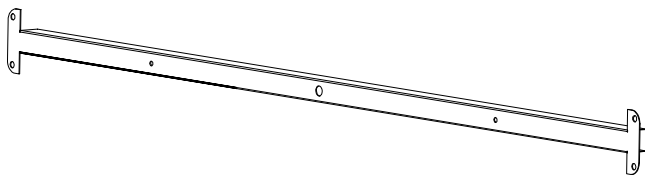


8.Pull Rod *3

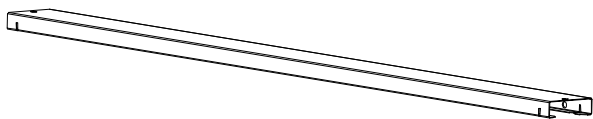


9.Bottom Plate

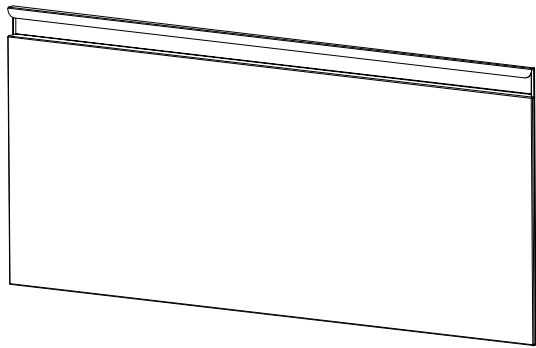


10.Drawer Panel *4

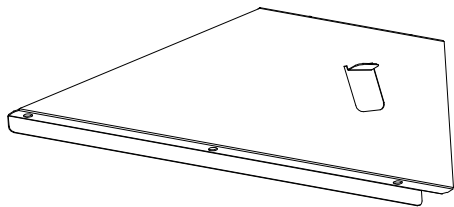


11.Right Side Plate *4

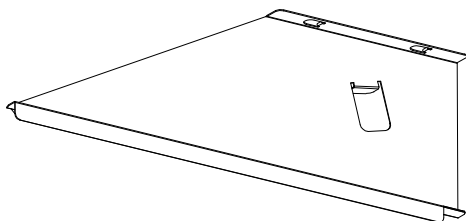


12.Left Side Plate *4

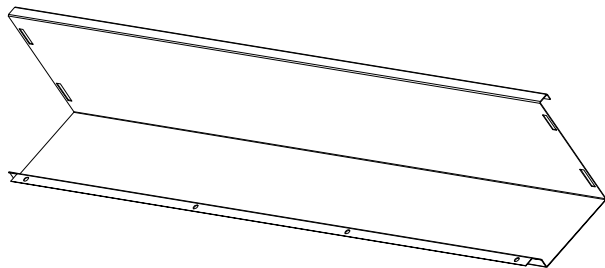


13.Drawer *4

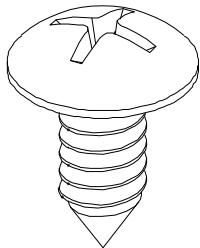


A.Screw *66

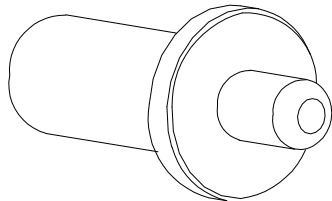


B.Door Spindle *8

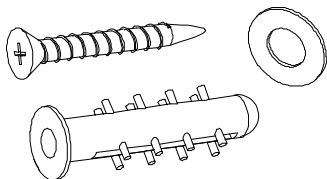


C.Expansion Screw *4

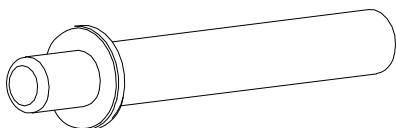


D.Door Knob *4

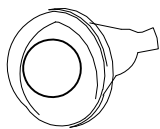


E.Magnet *8

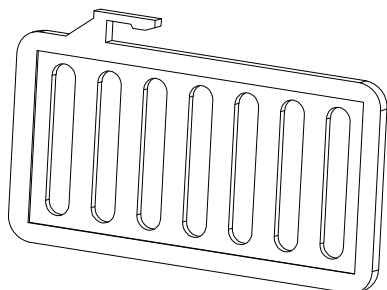





F.Divider Plate *4

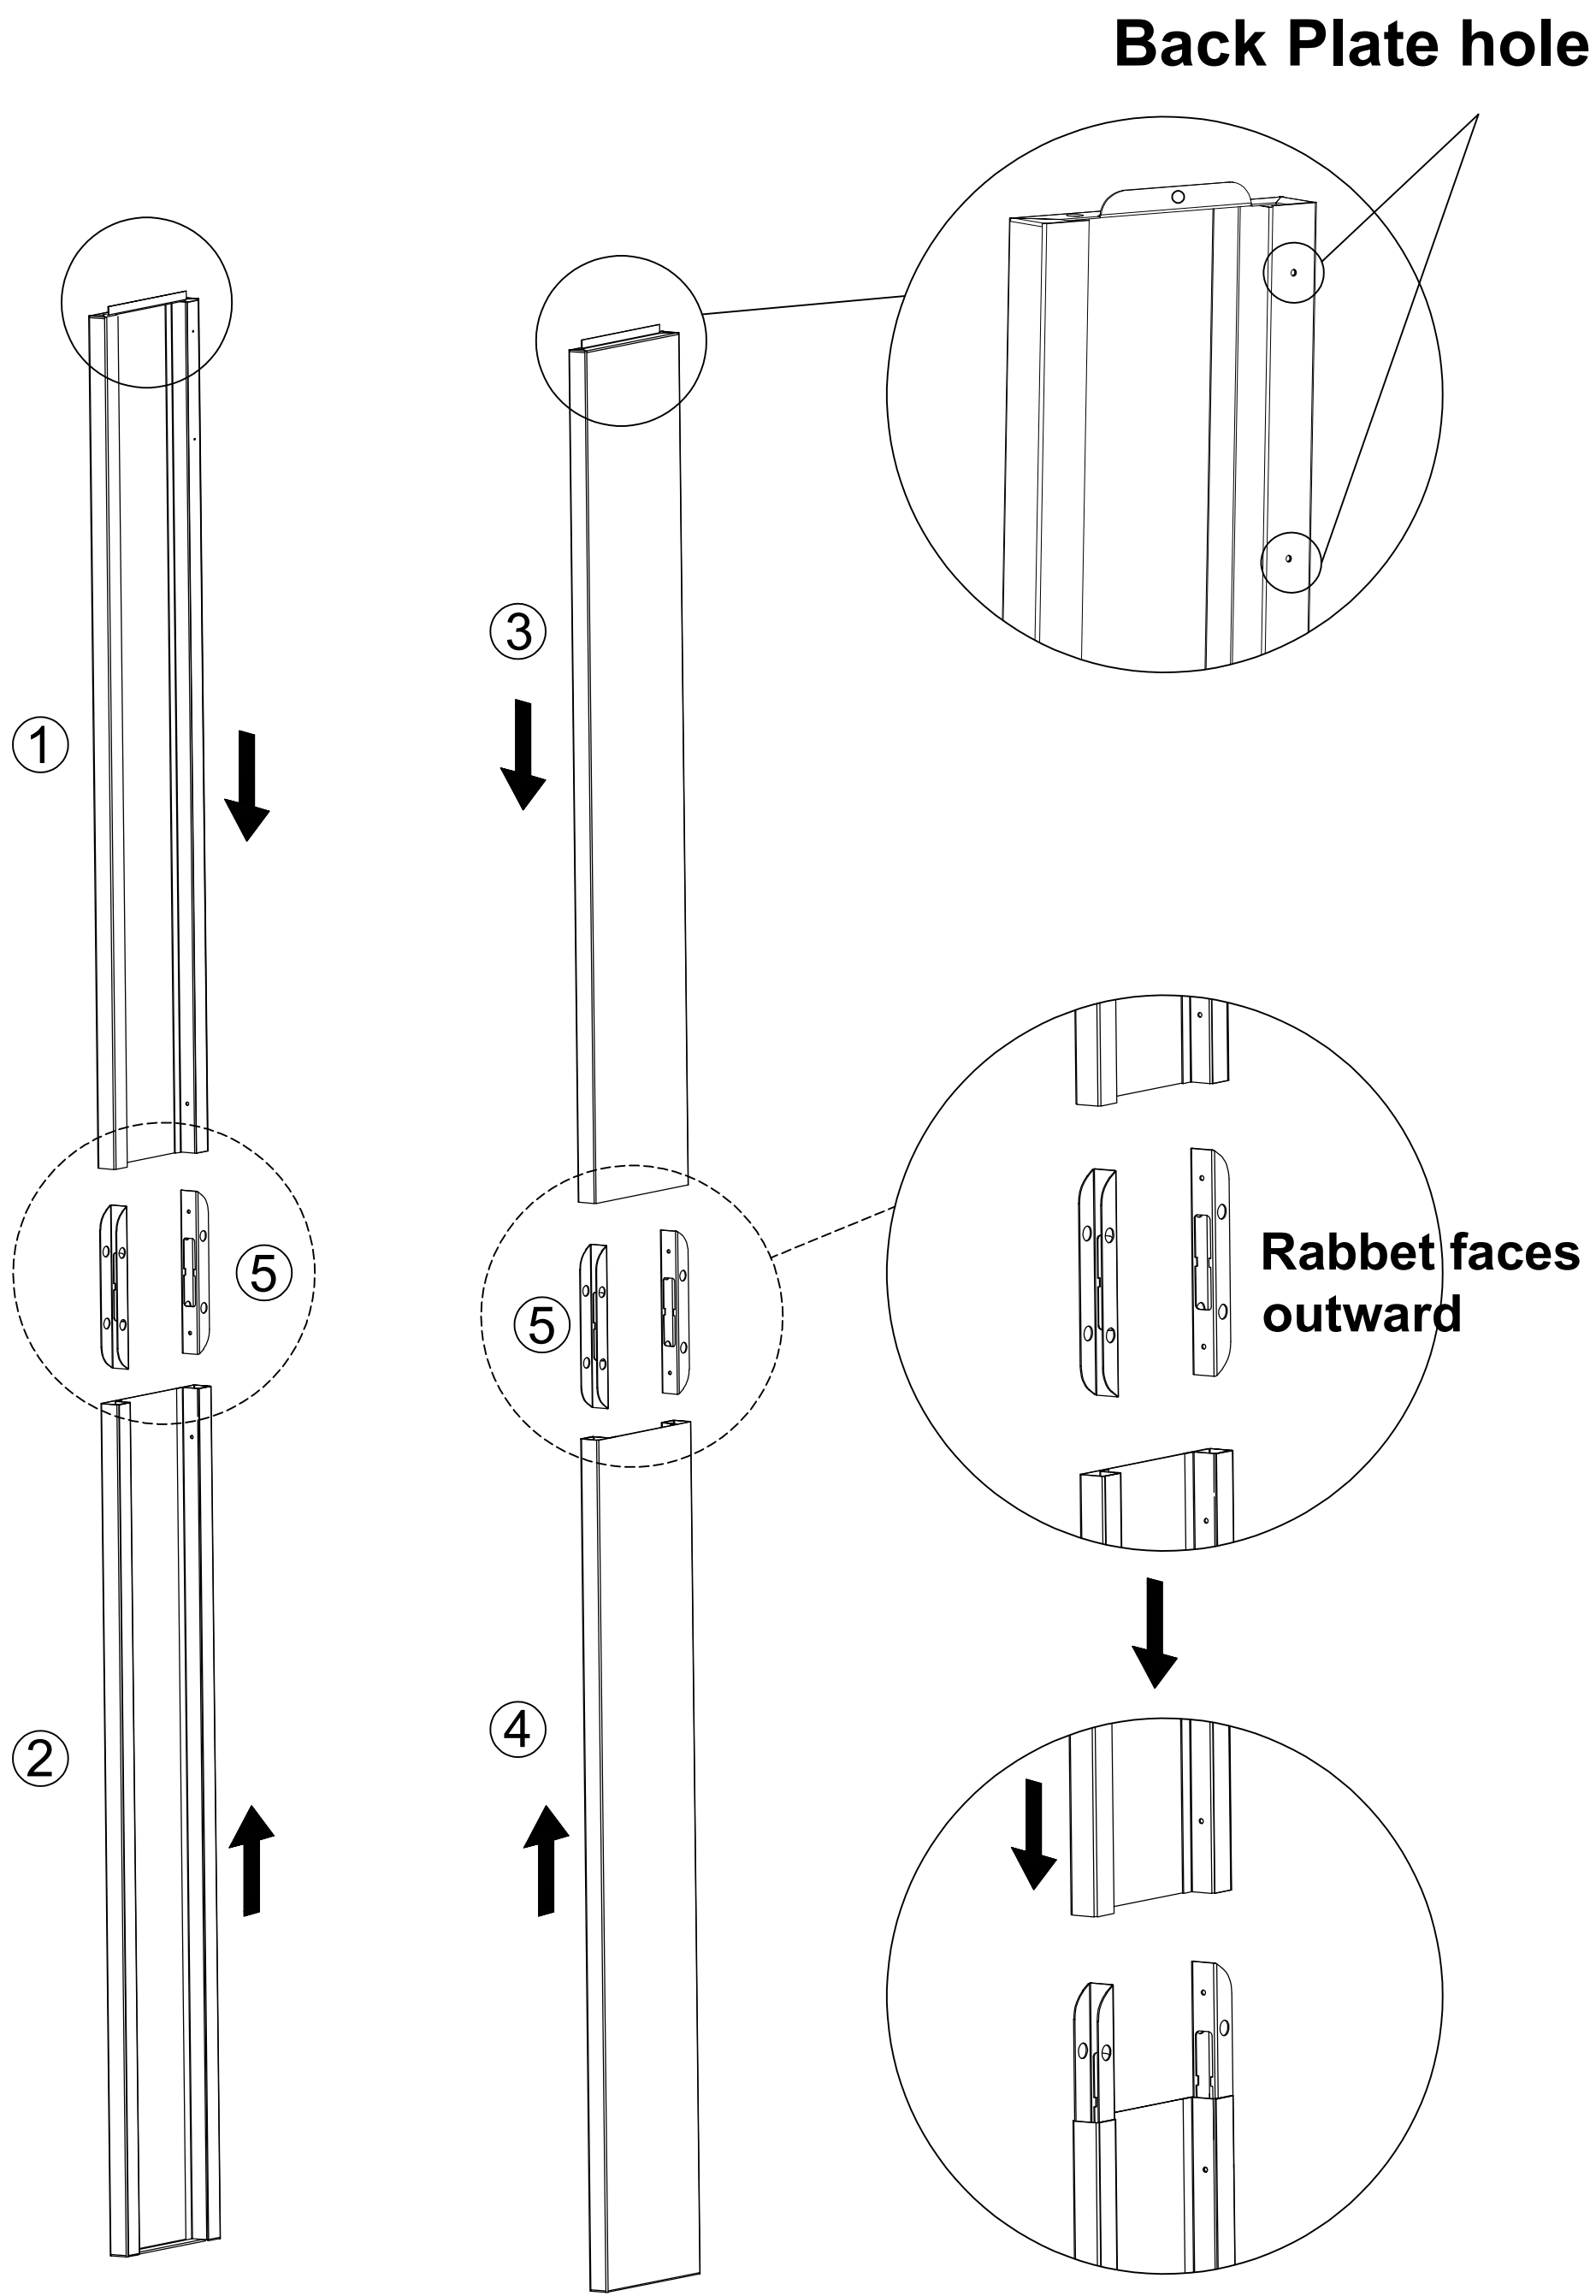


1. Assemble 1, 2, 3, 4 and 5

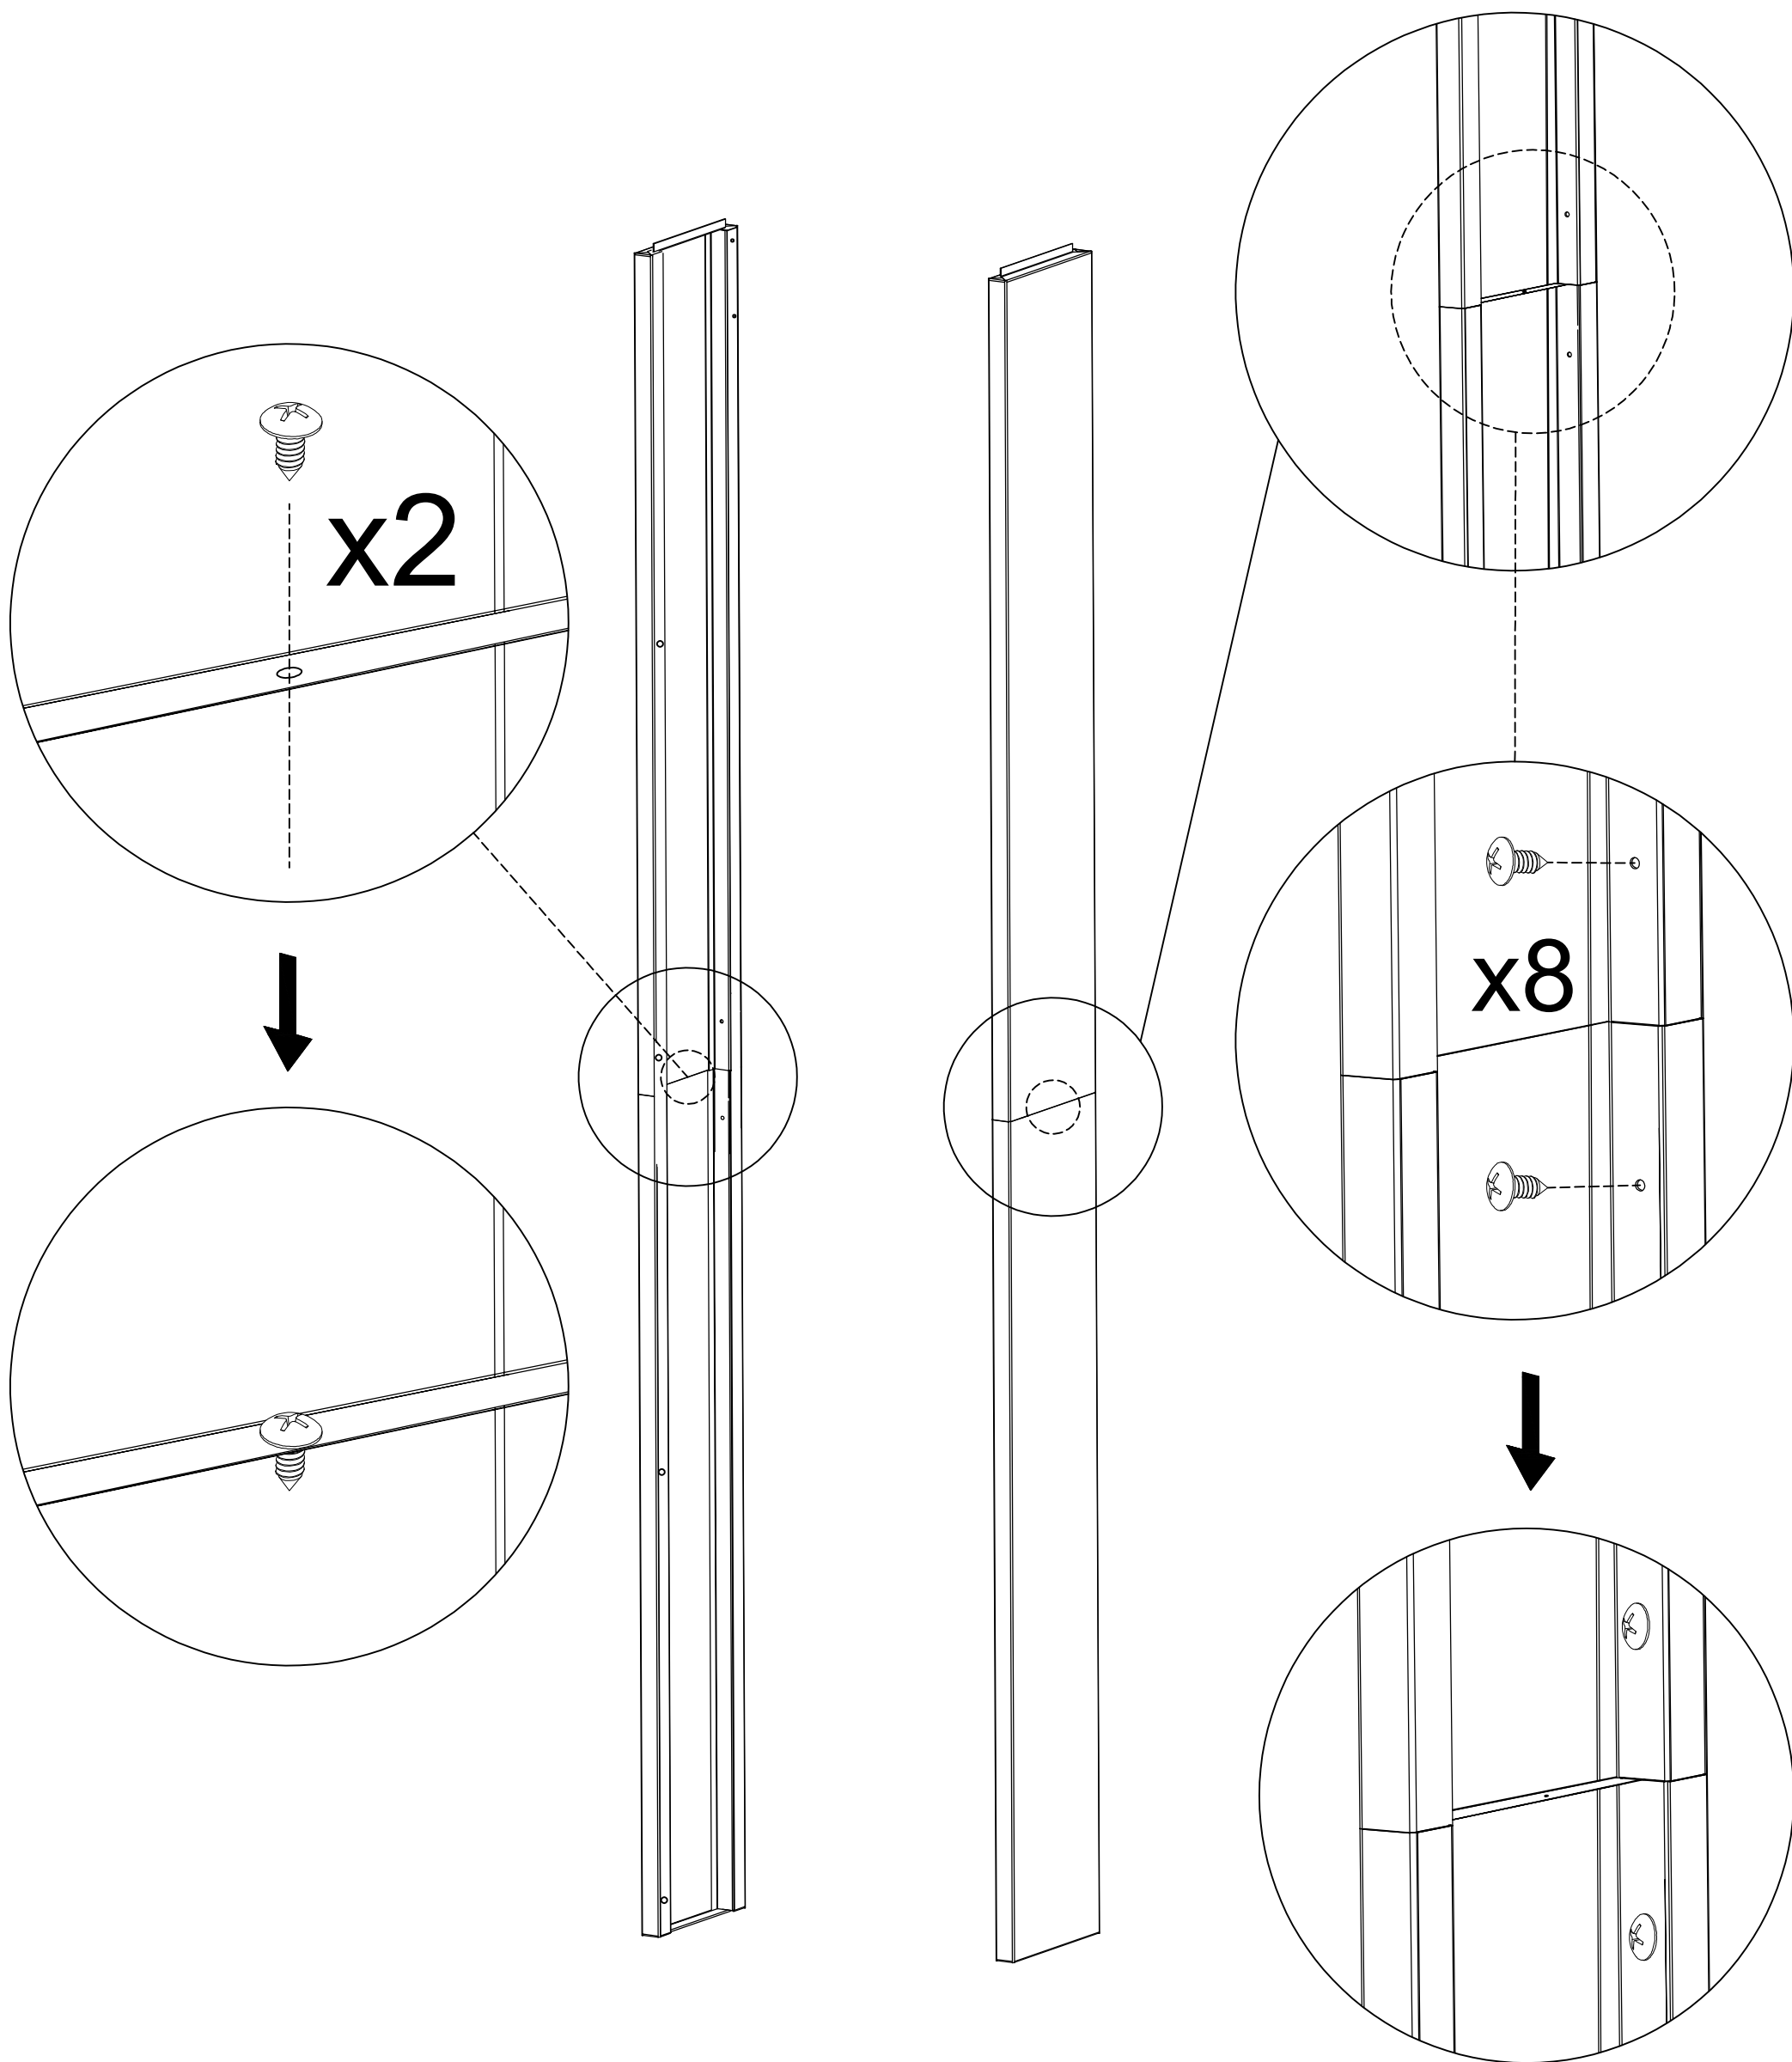


2. Secure with screw A

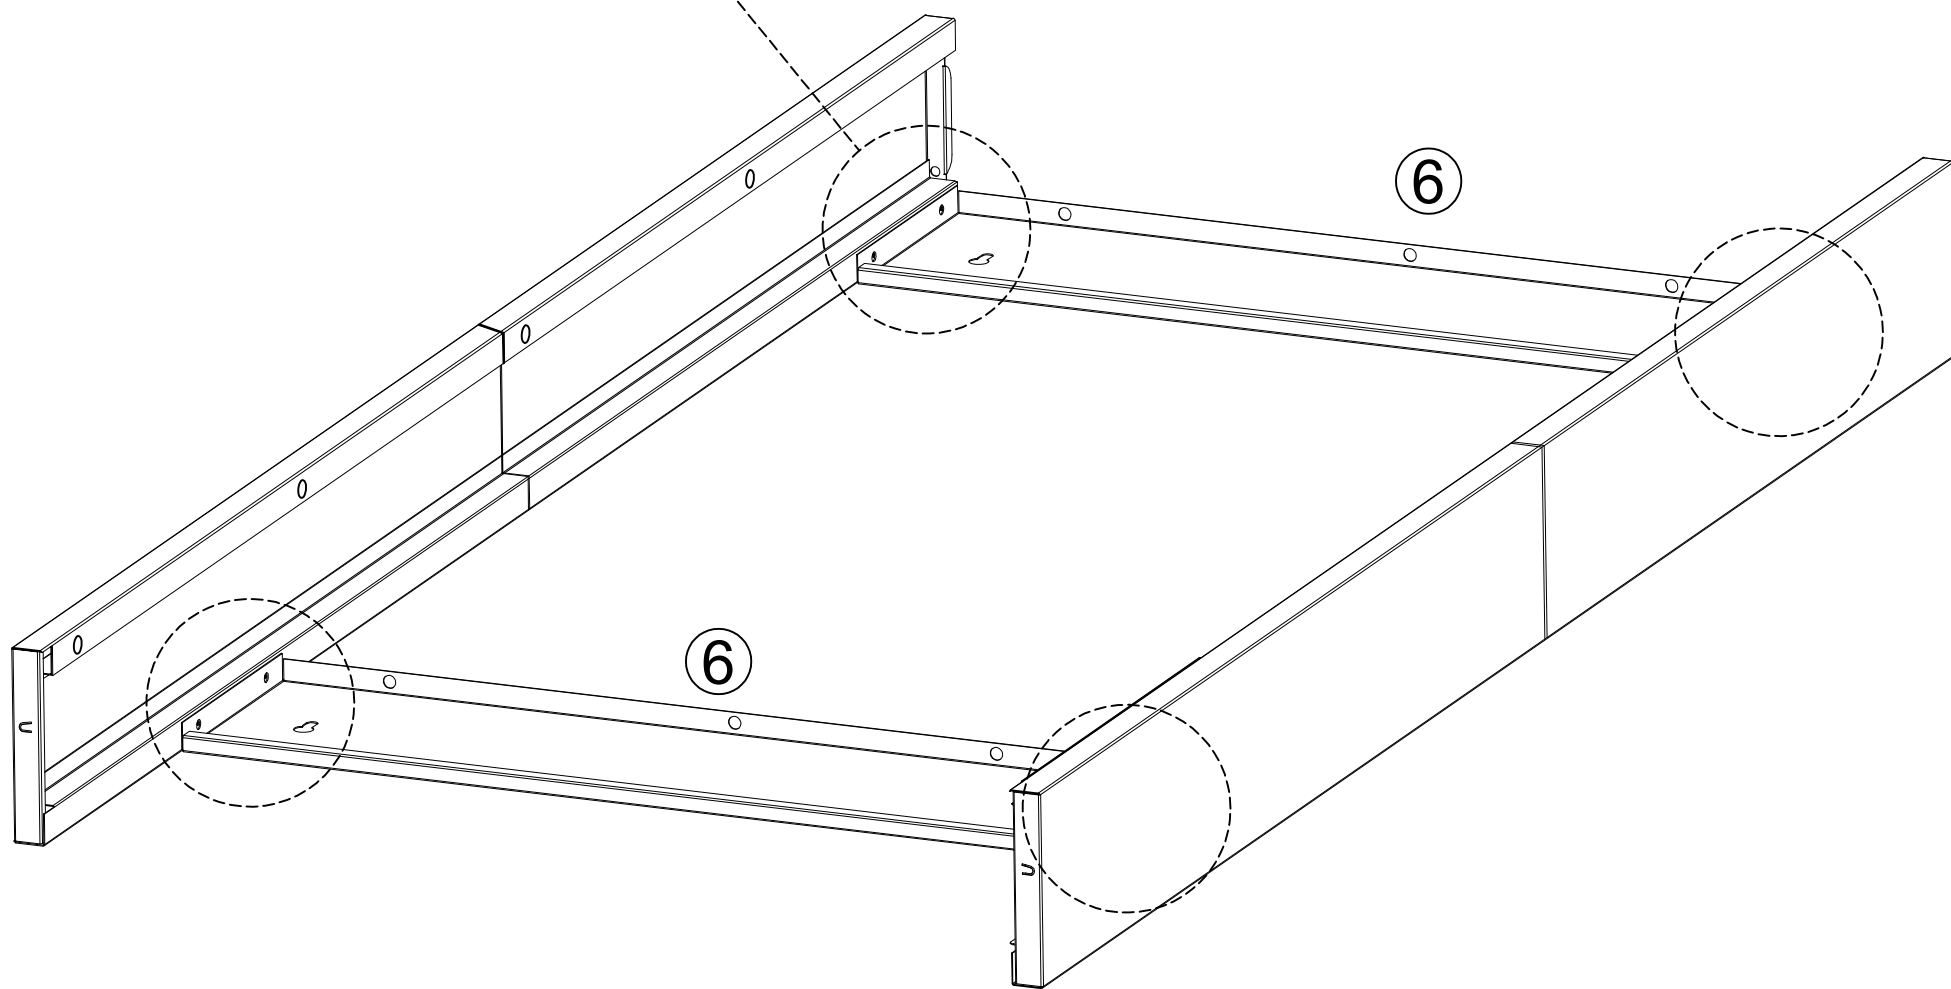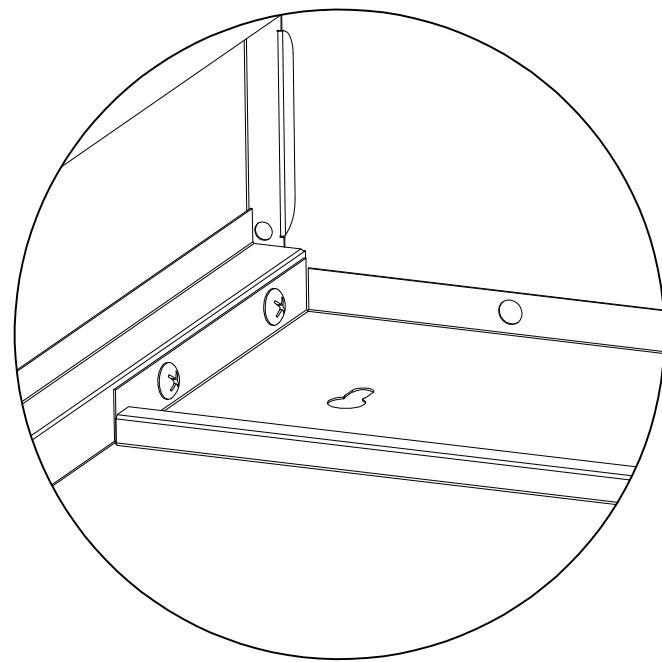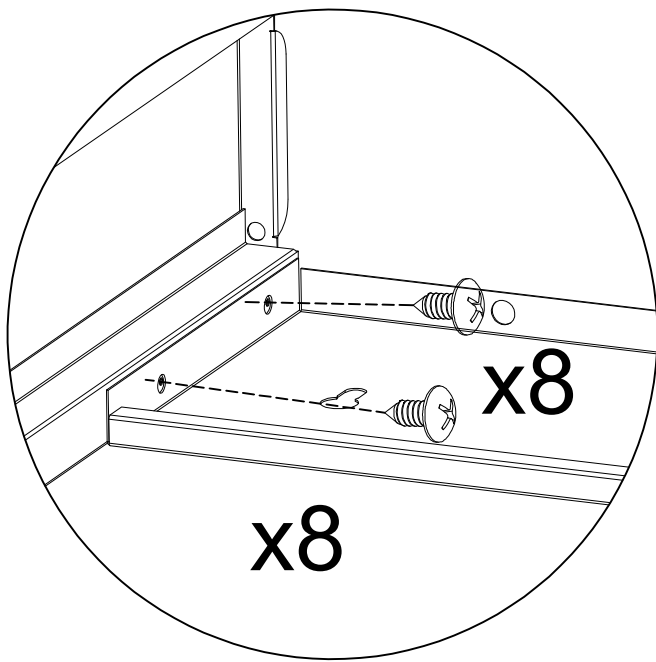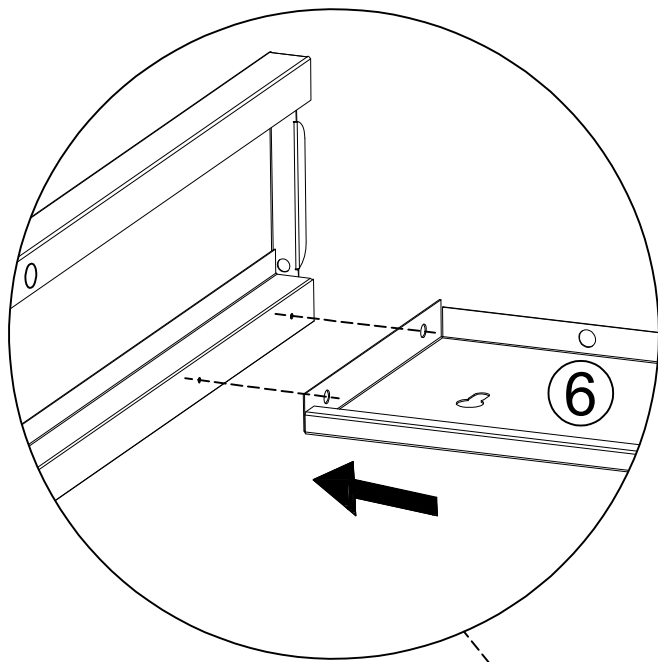


3. Install 6, secure with screw A

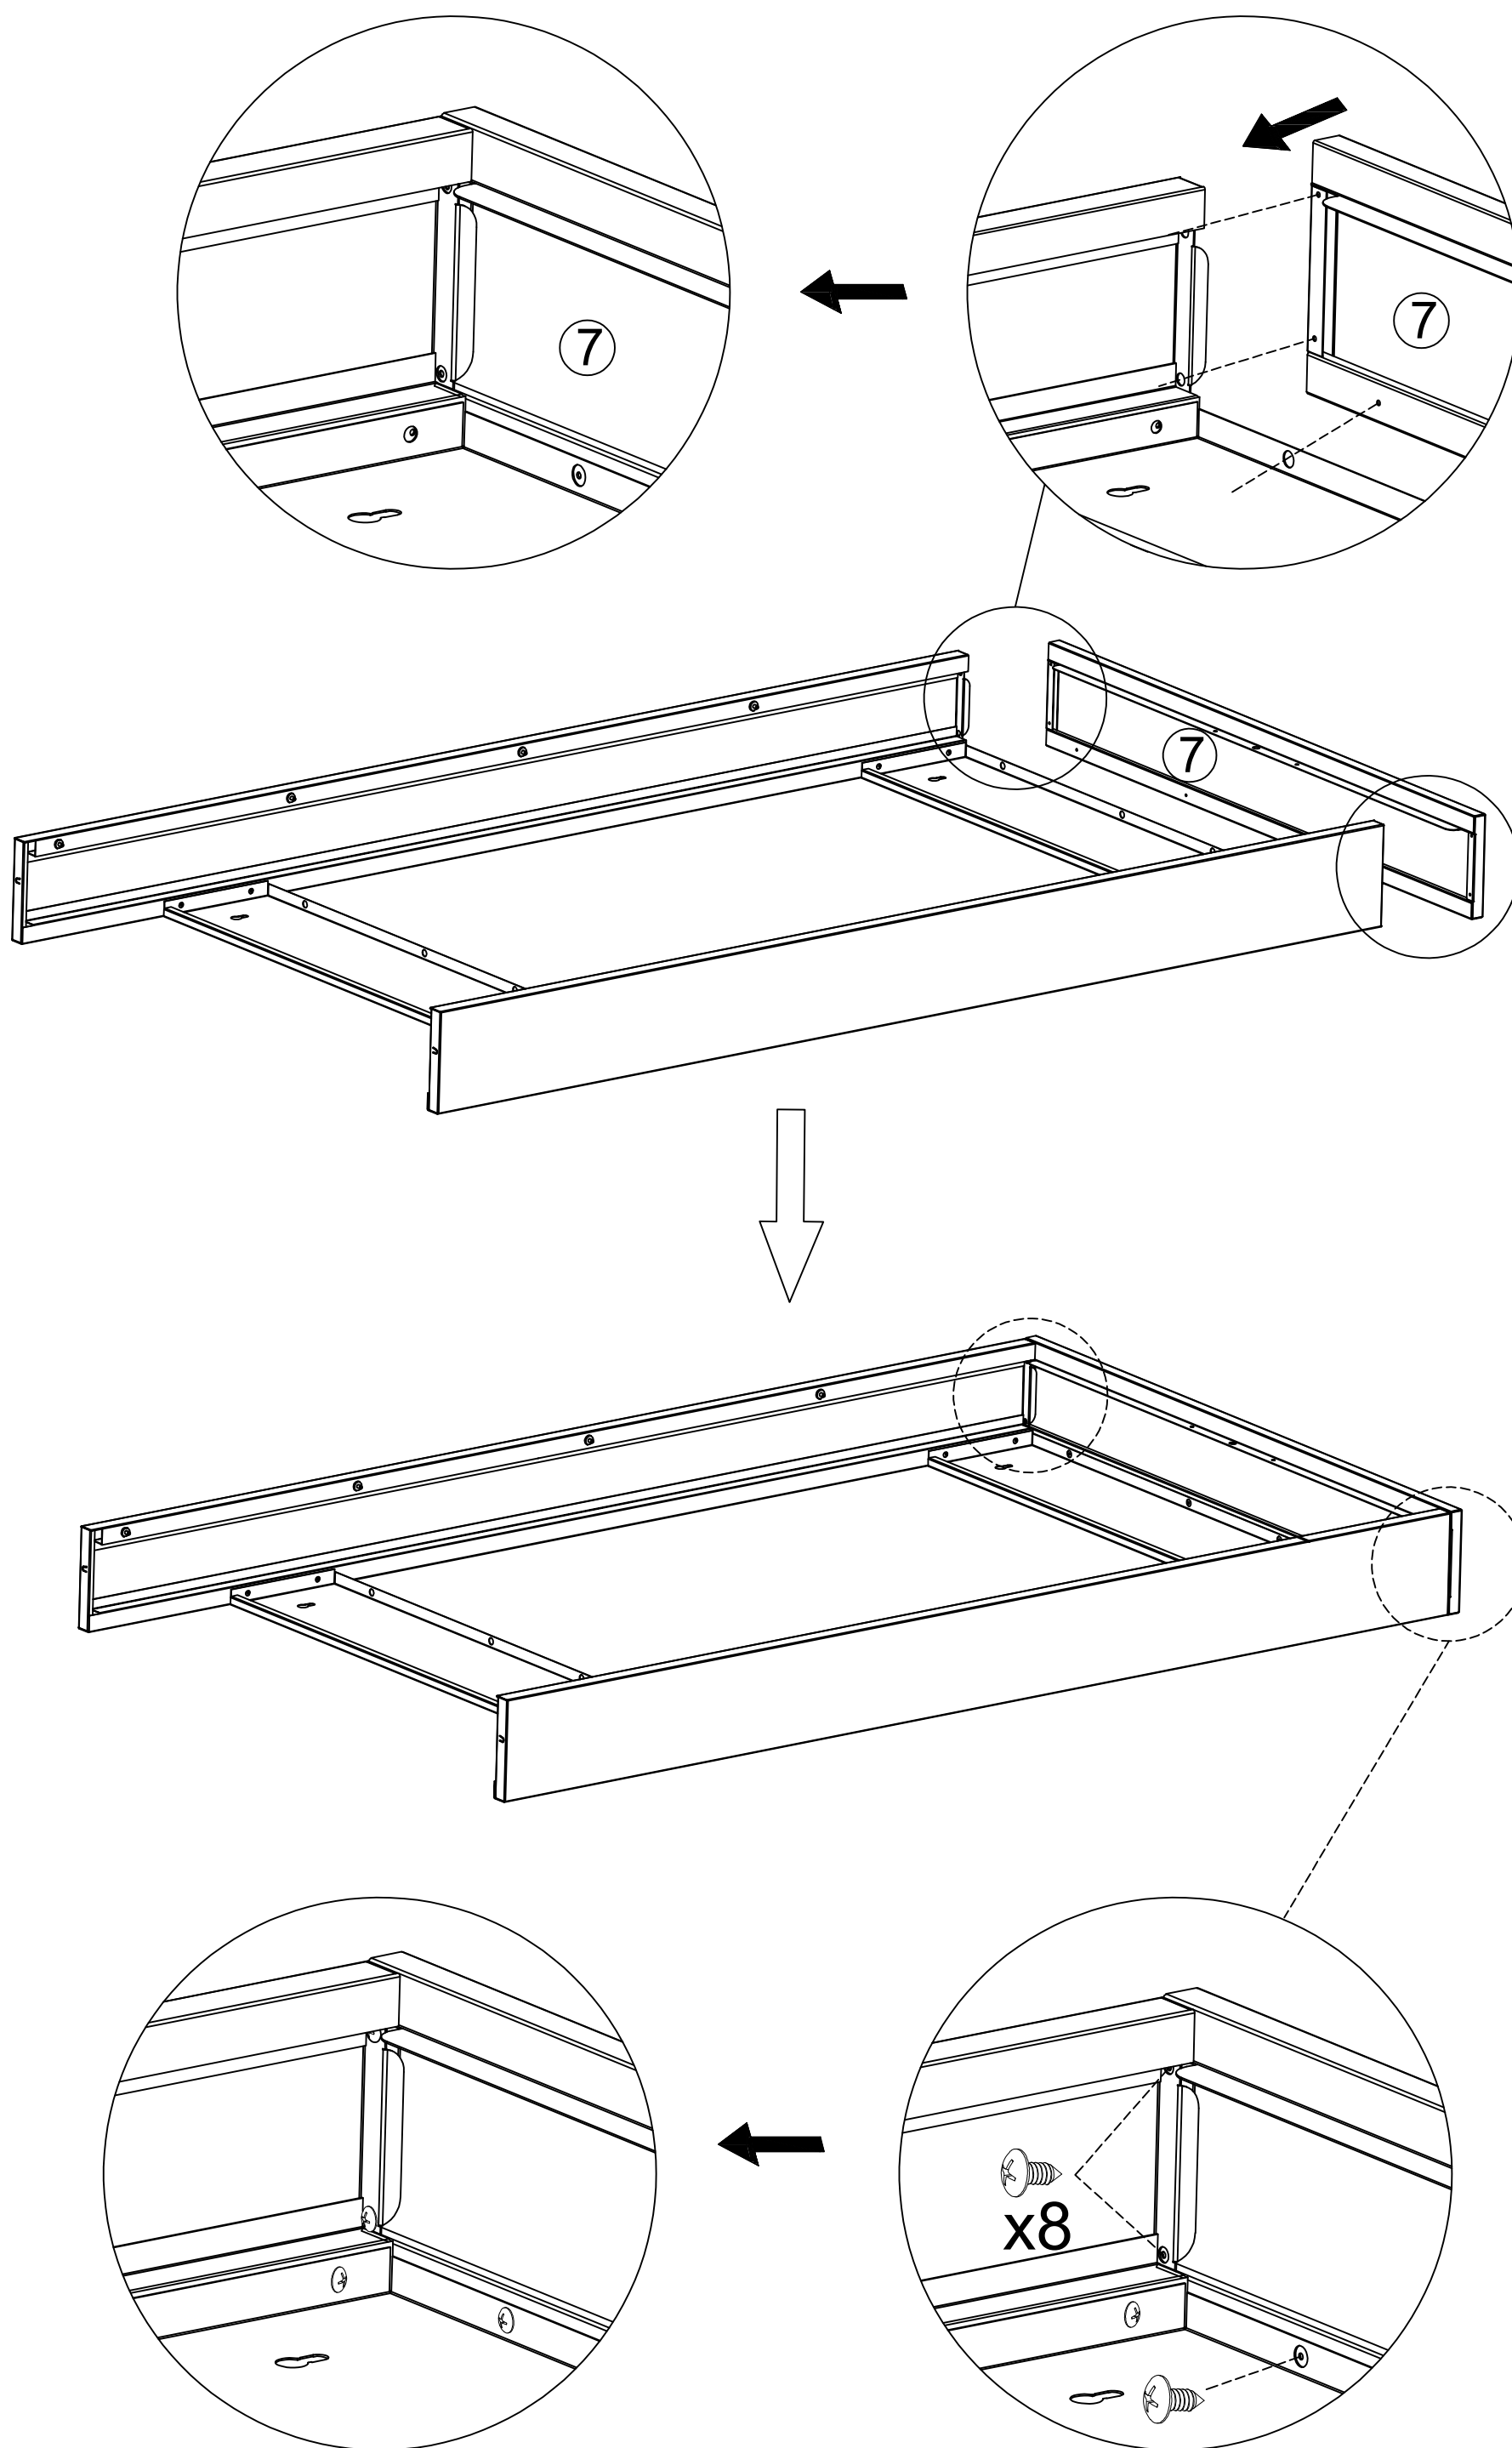


4. Install 7, secure with screw A

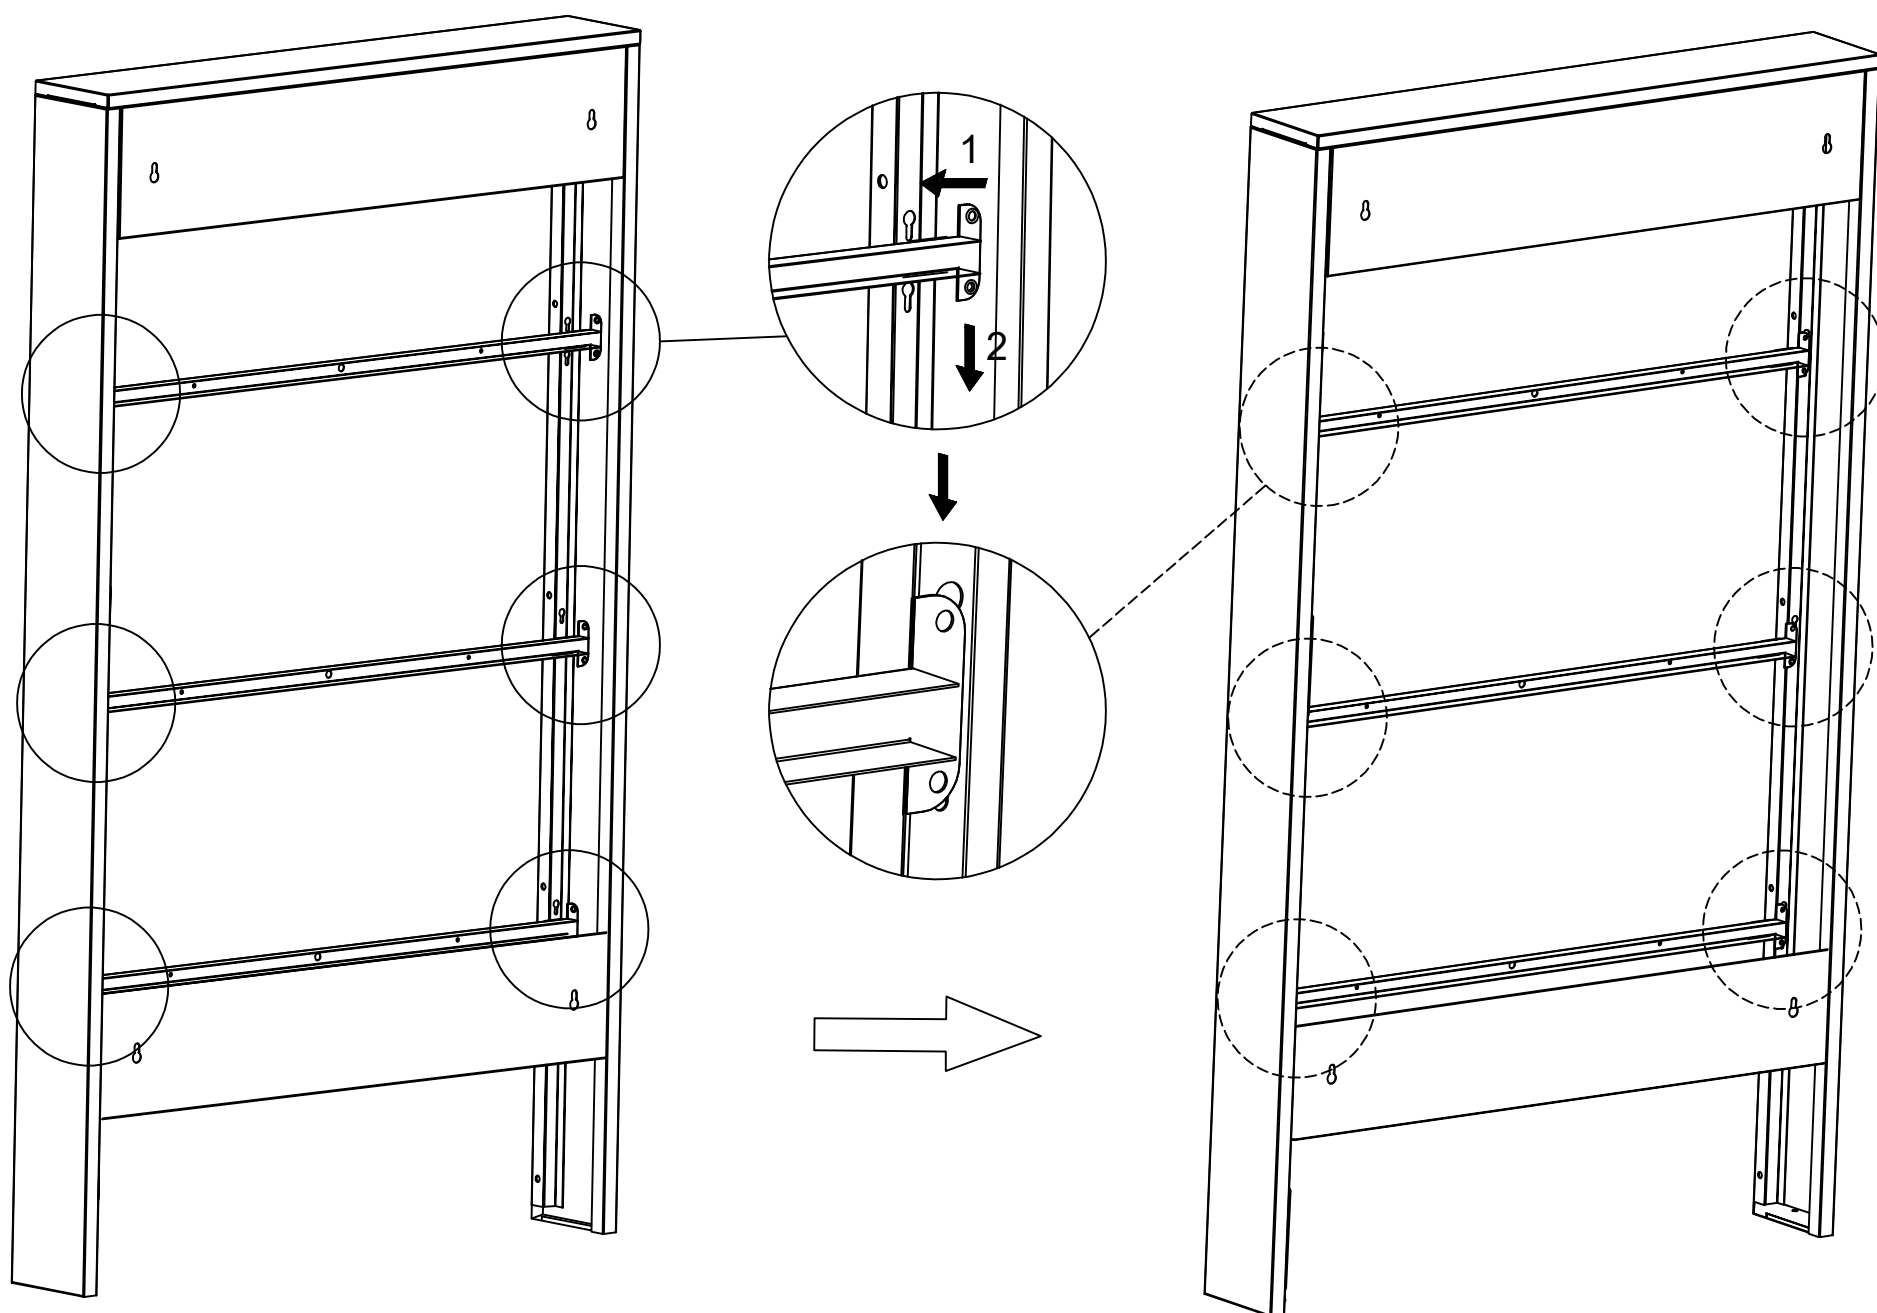


5. Install 8

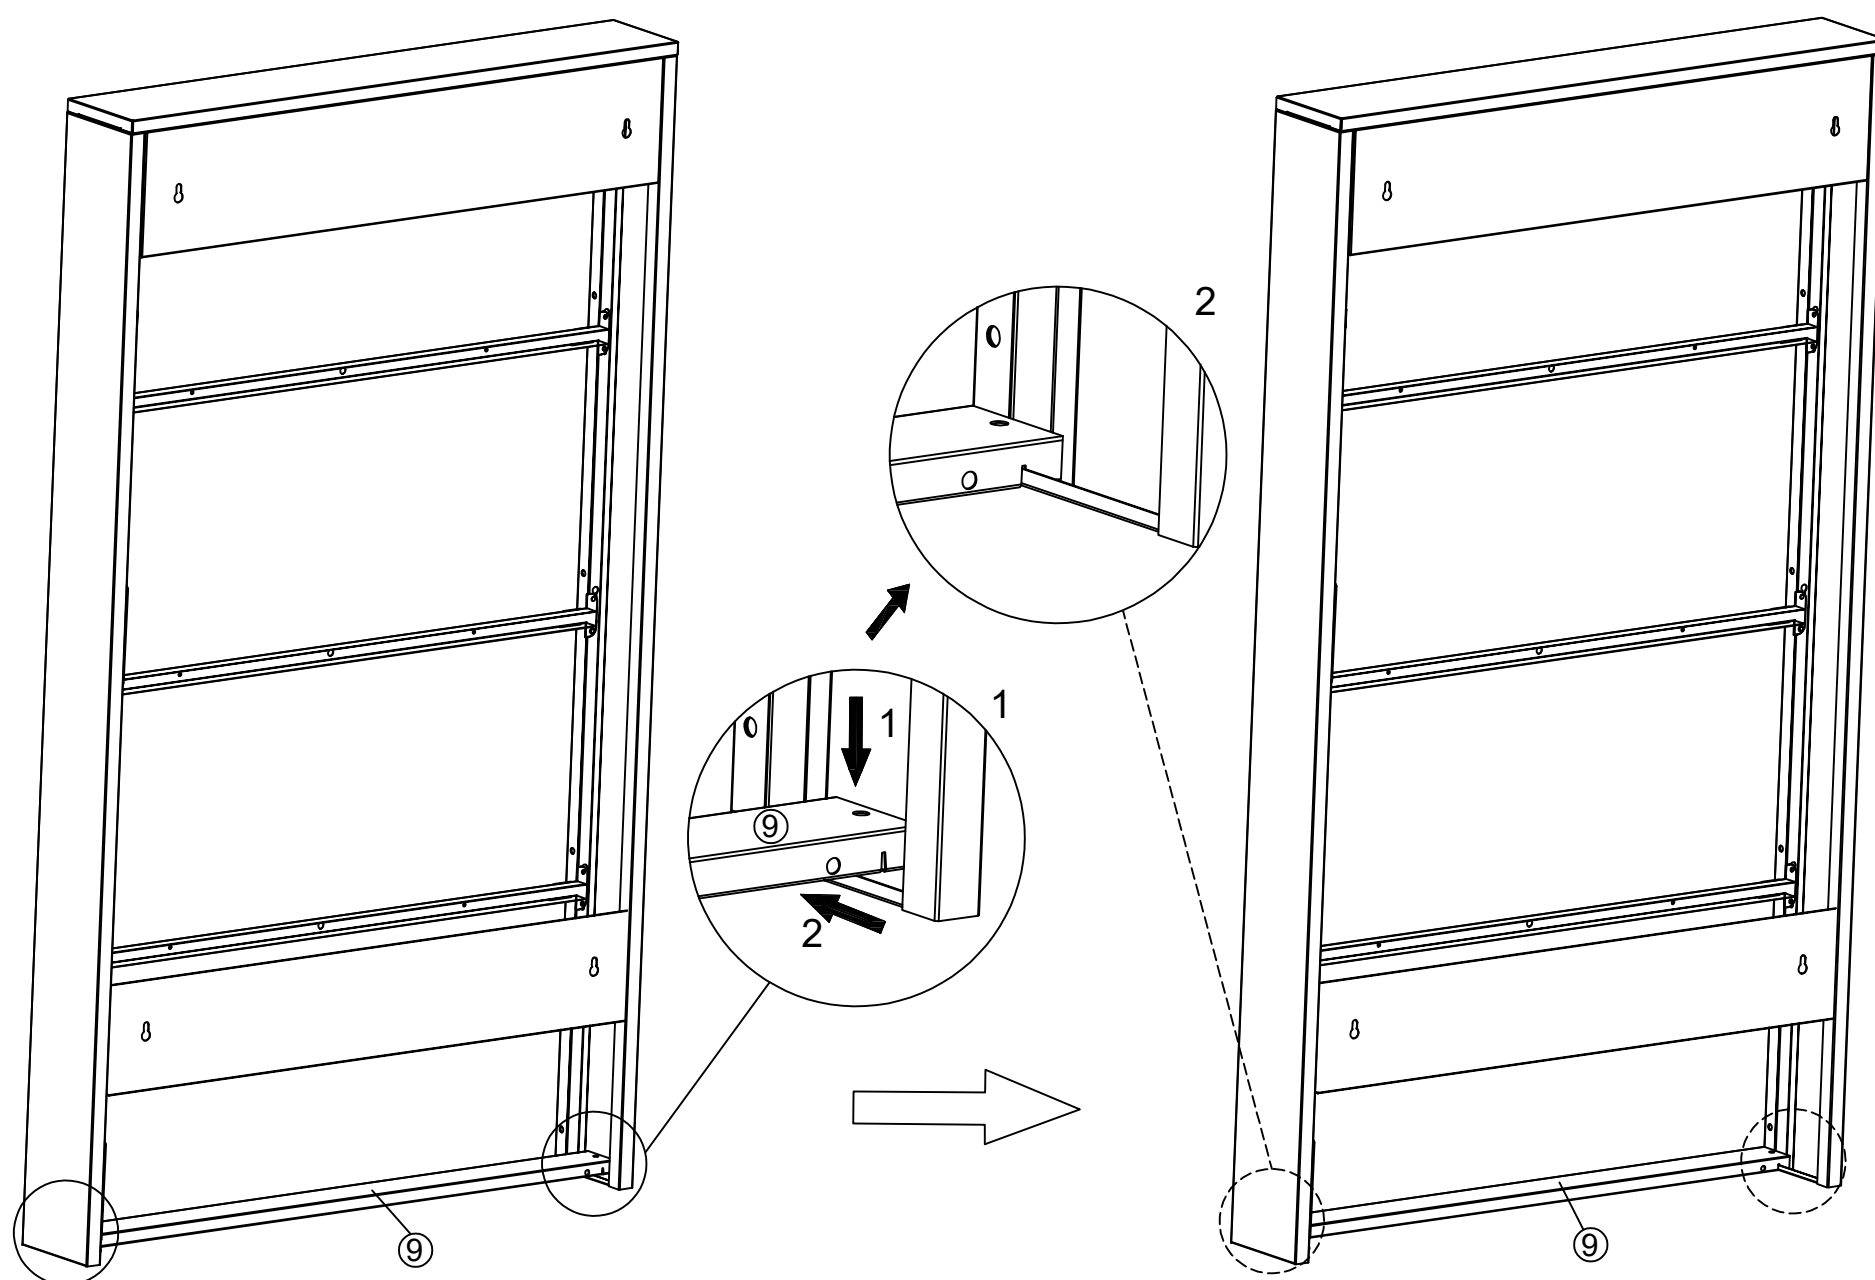



6. Install 9

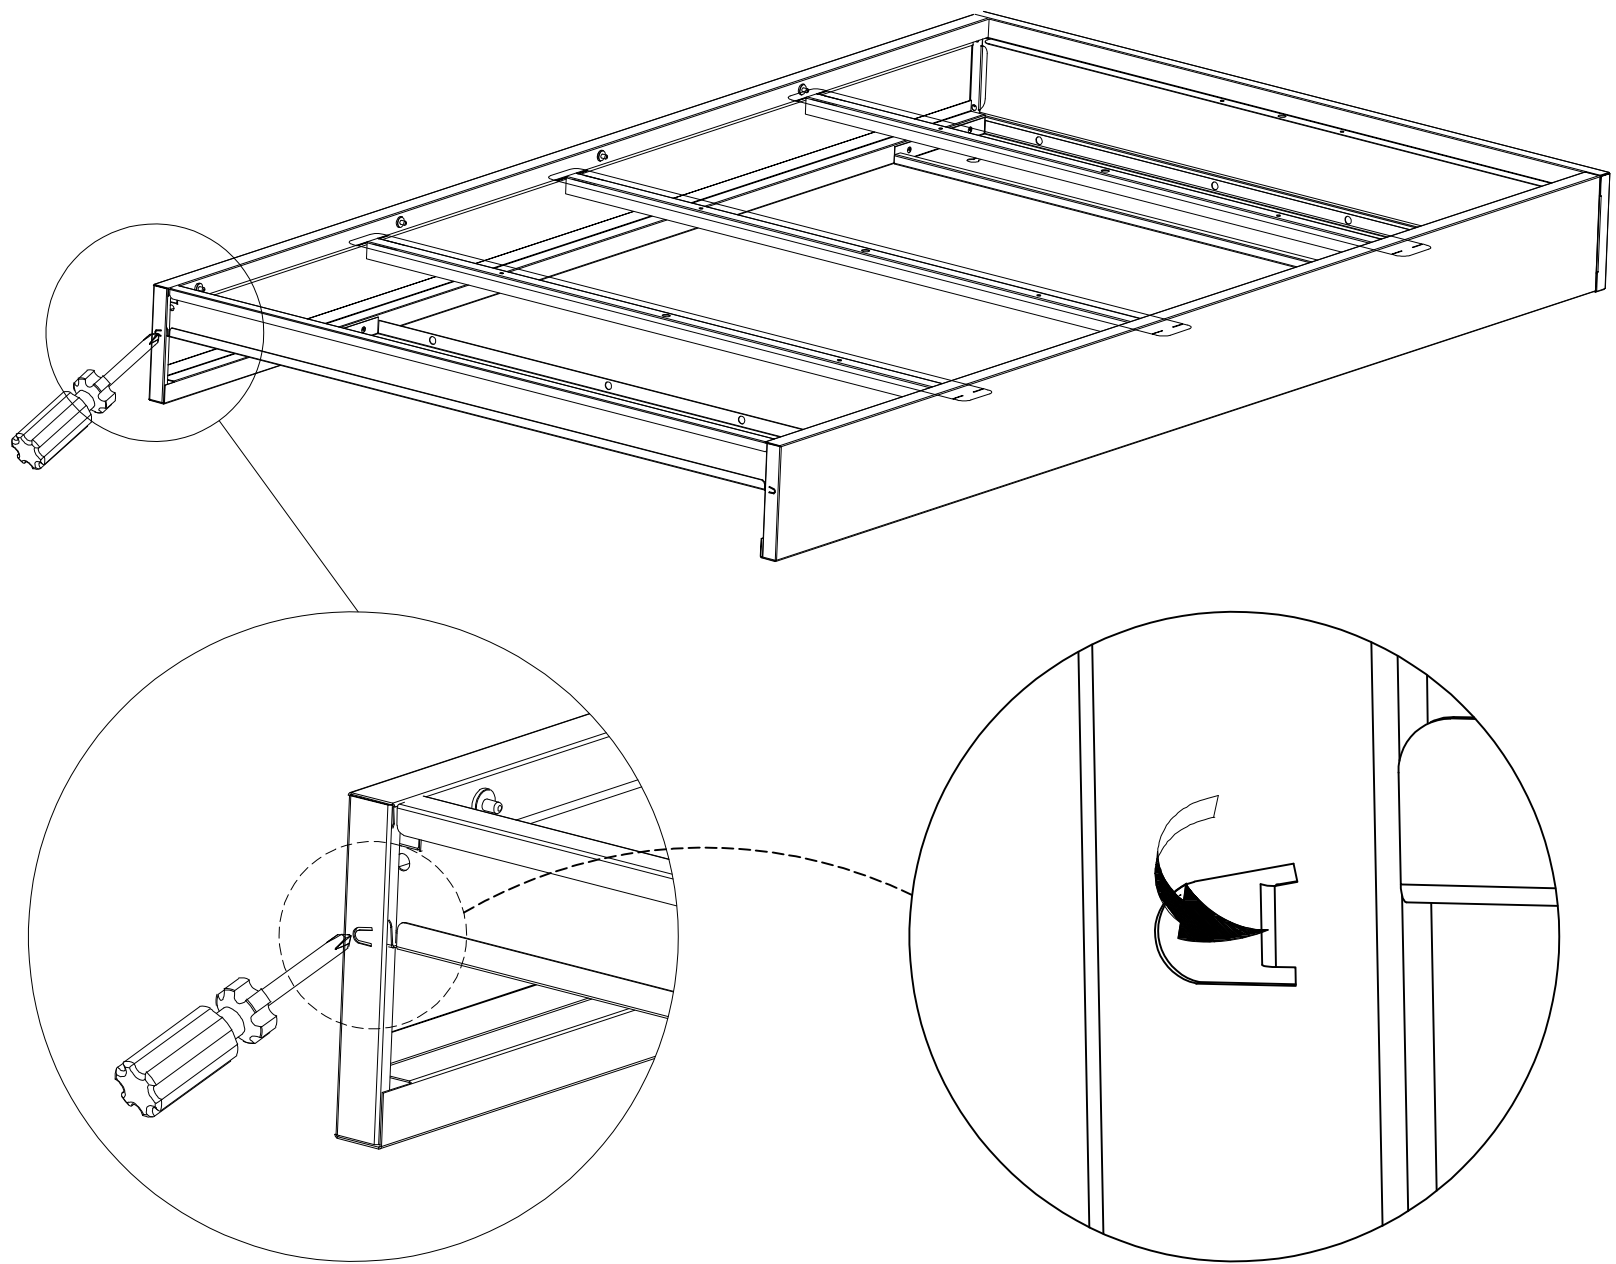


7. Open the baffles on 2 and 4.

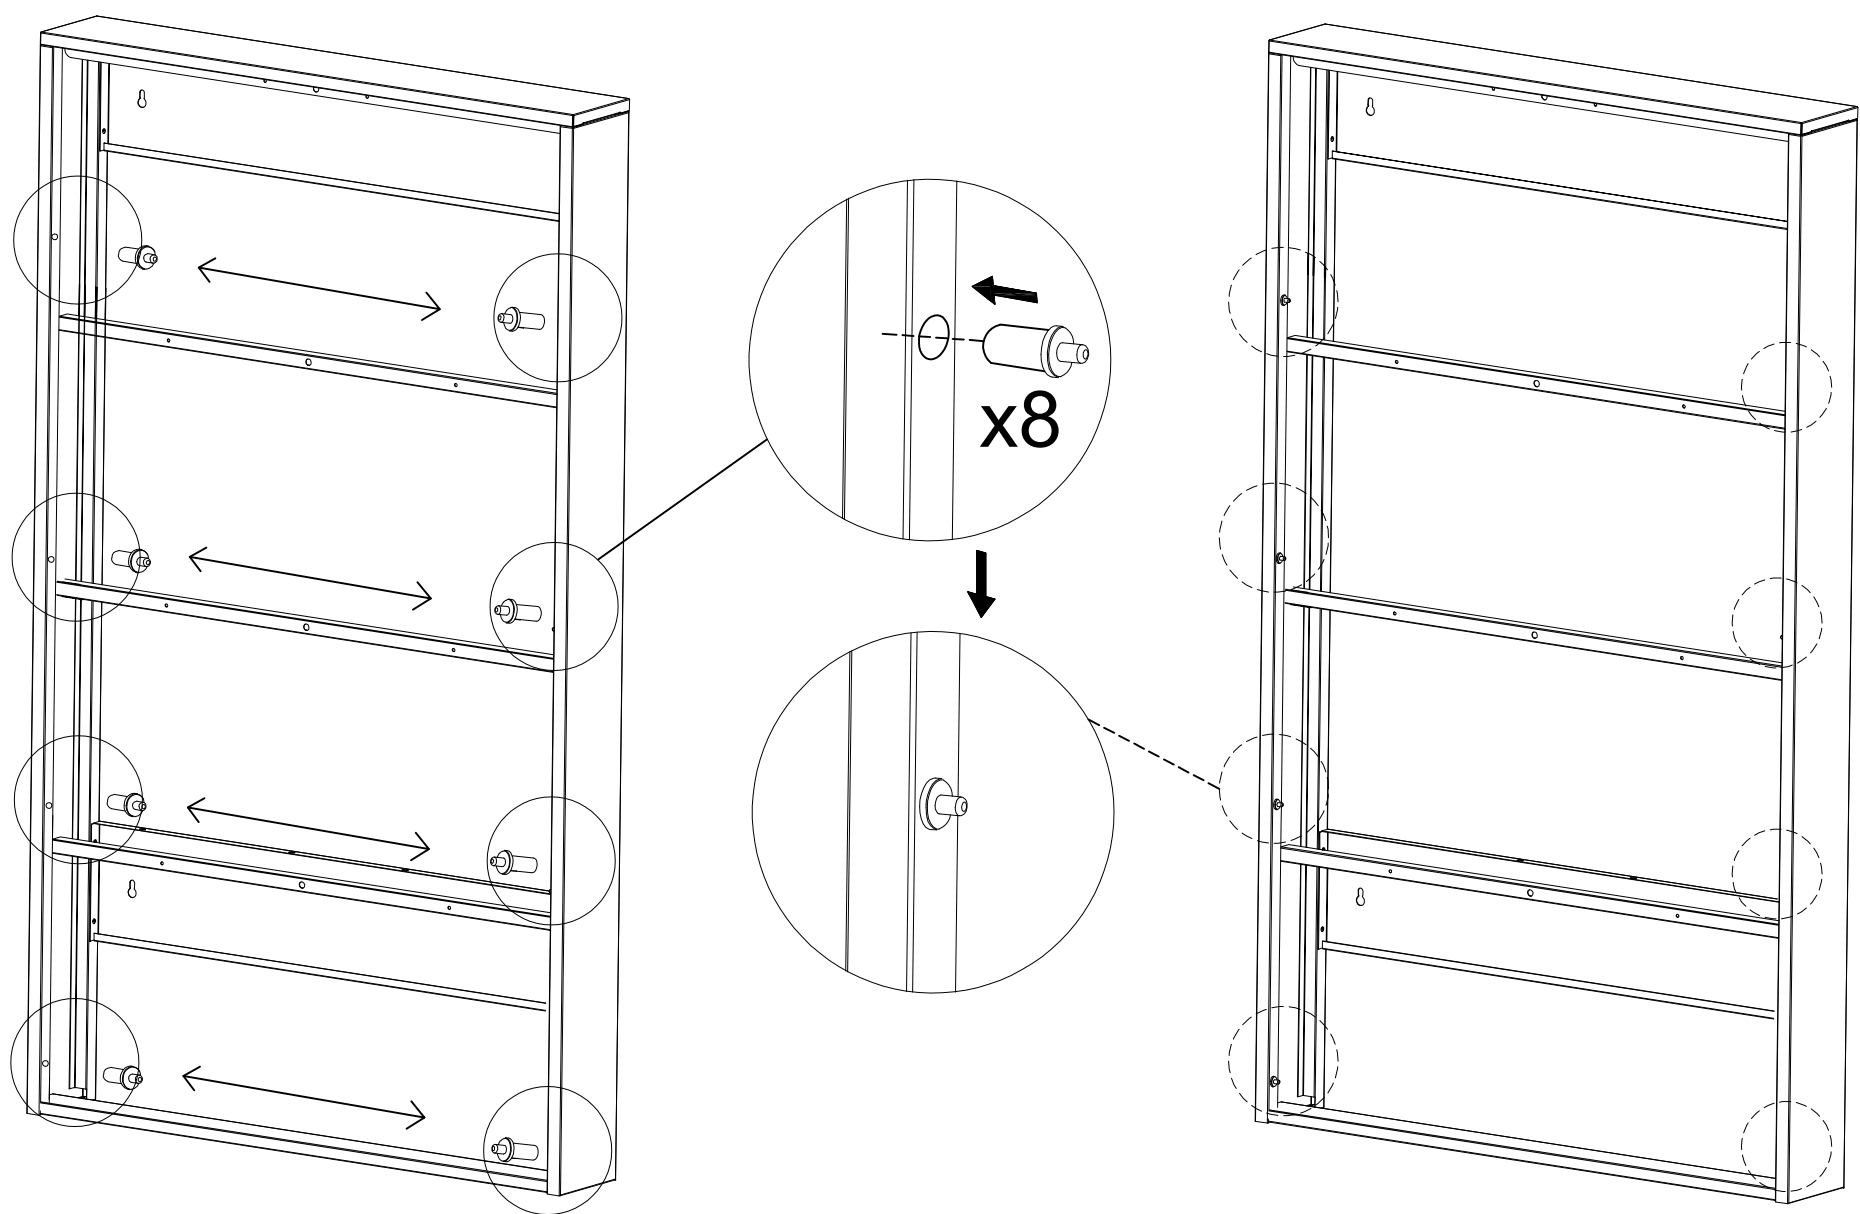


8. Install B

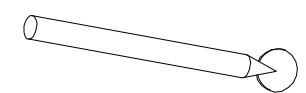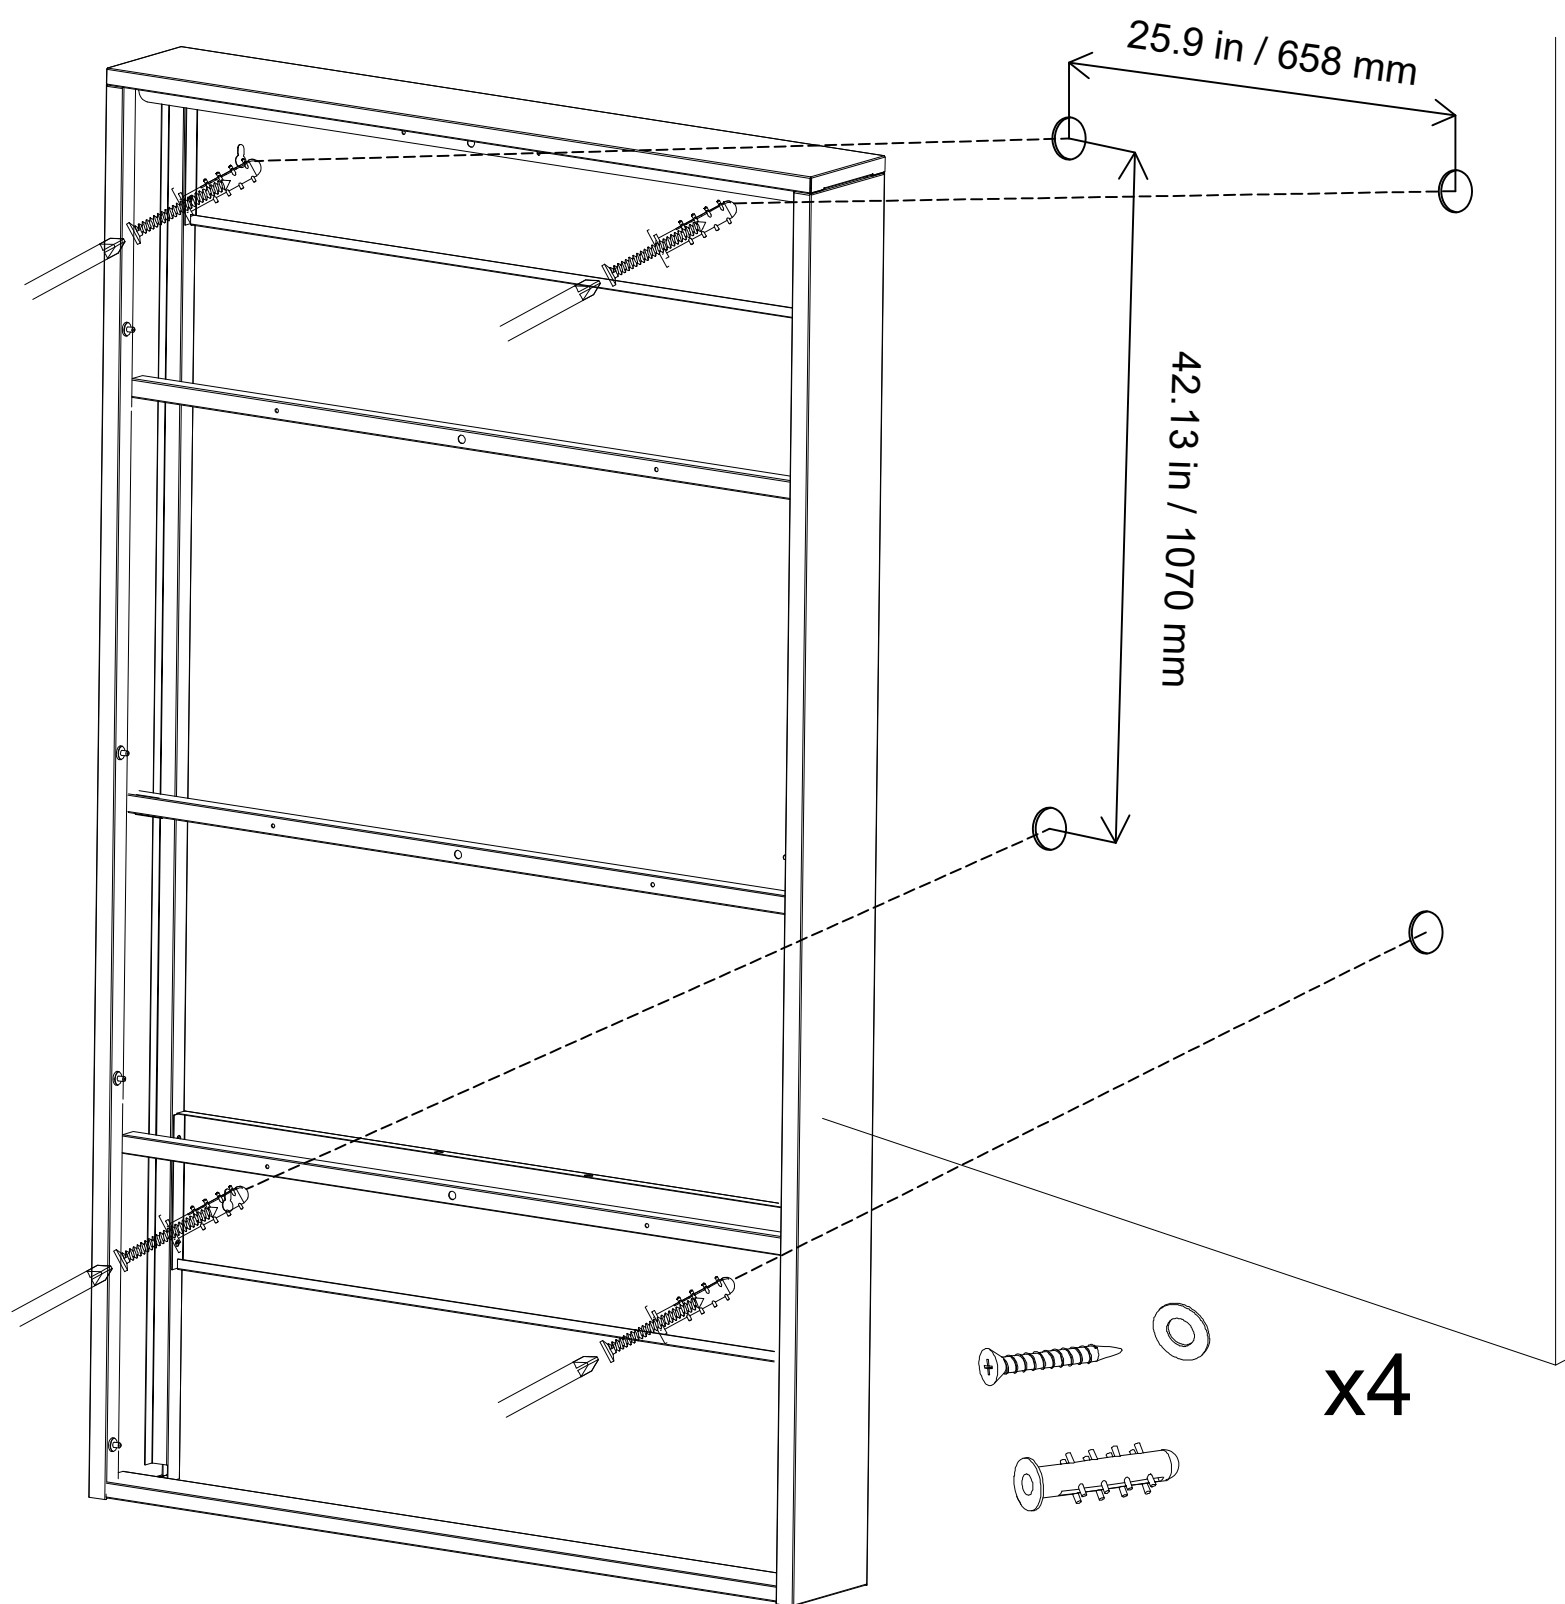


Orientation

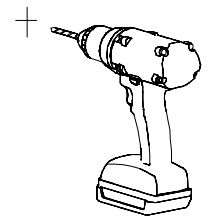


Borehole

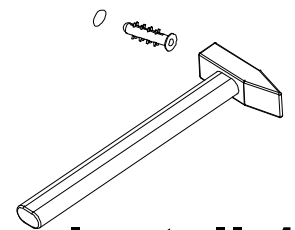


Install-1

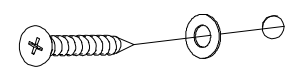


Install-2




Install-3

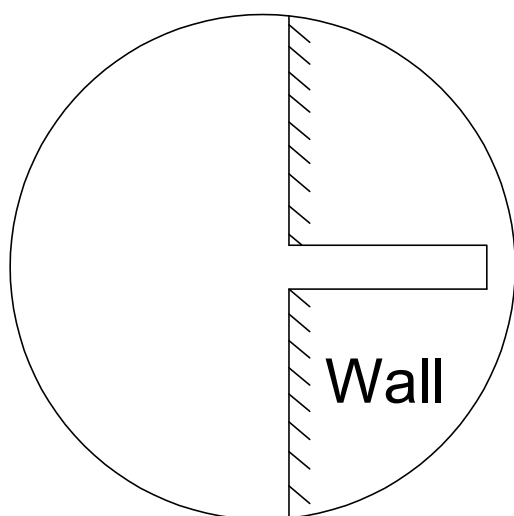


1

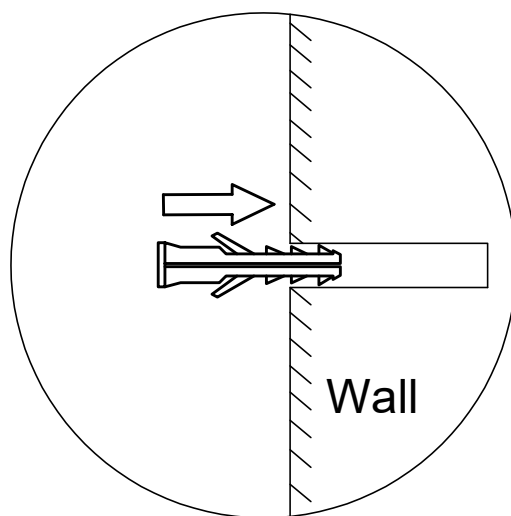

2

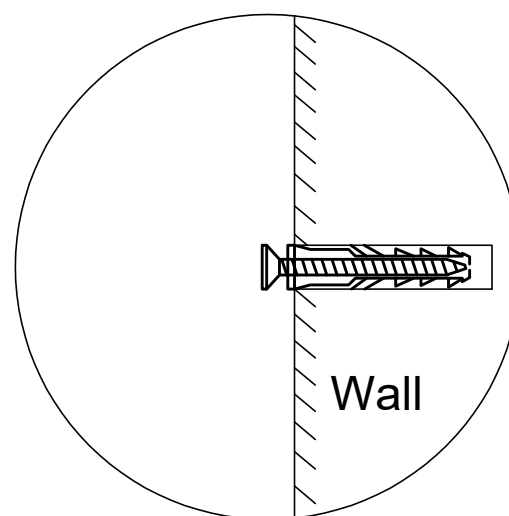

3

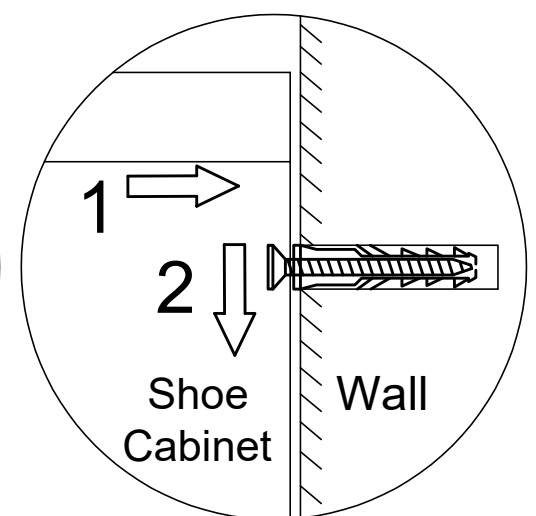

3


1. Drill holes in the corresponding positions on the wall

2. Install C in the hole


3. Install screw C

4. Hang the shoe cabinet on C





9. Attach the shoe cabinet to the wall



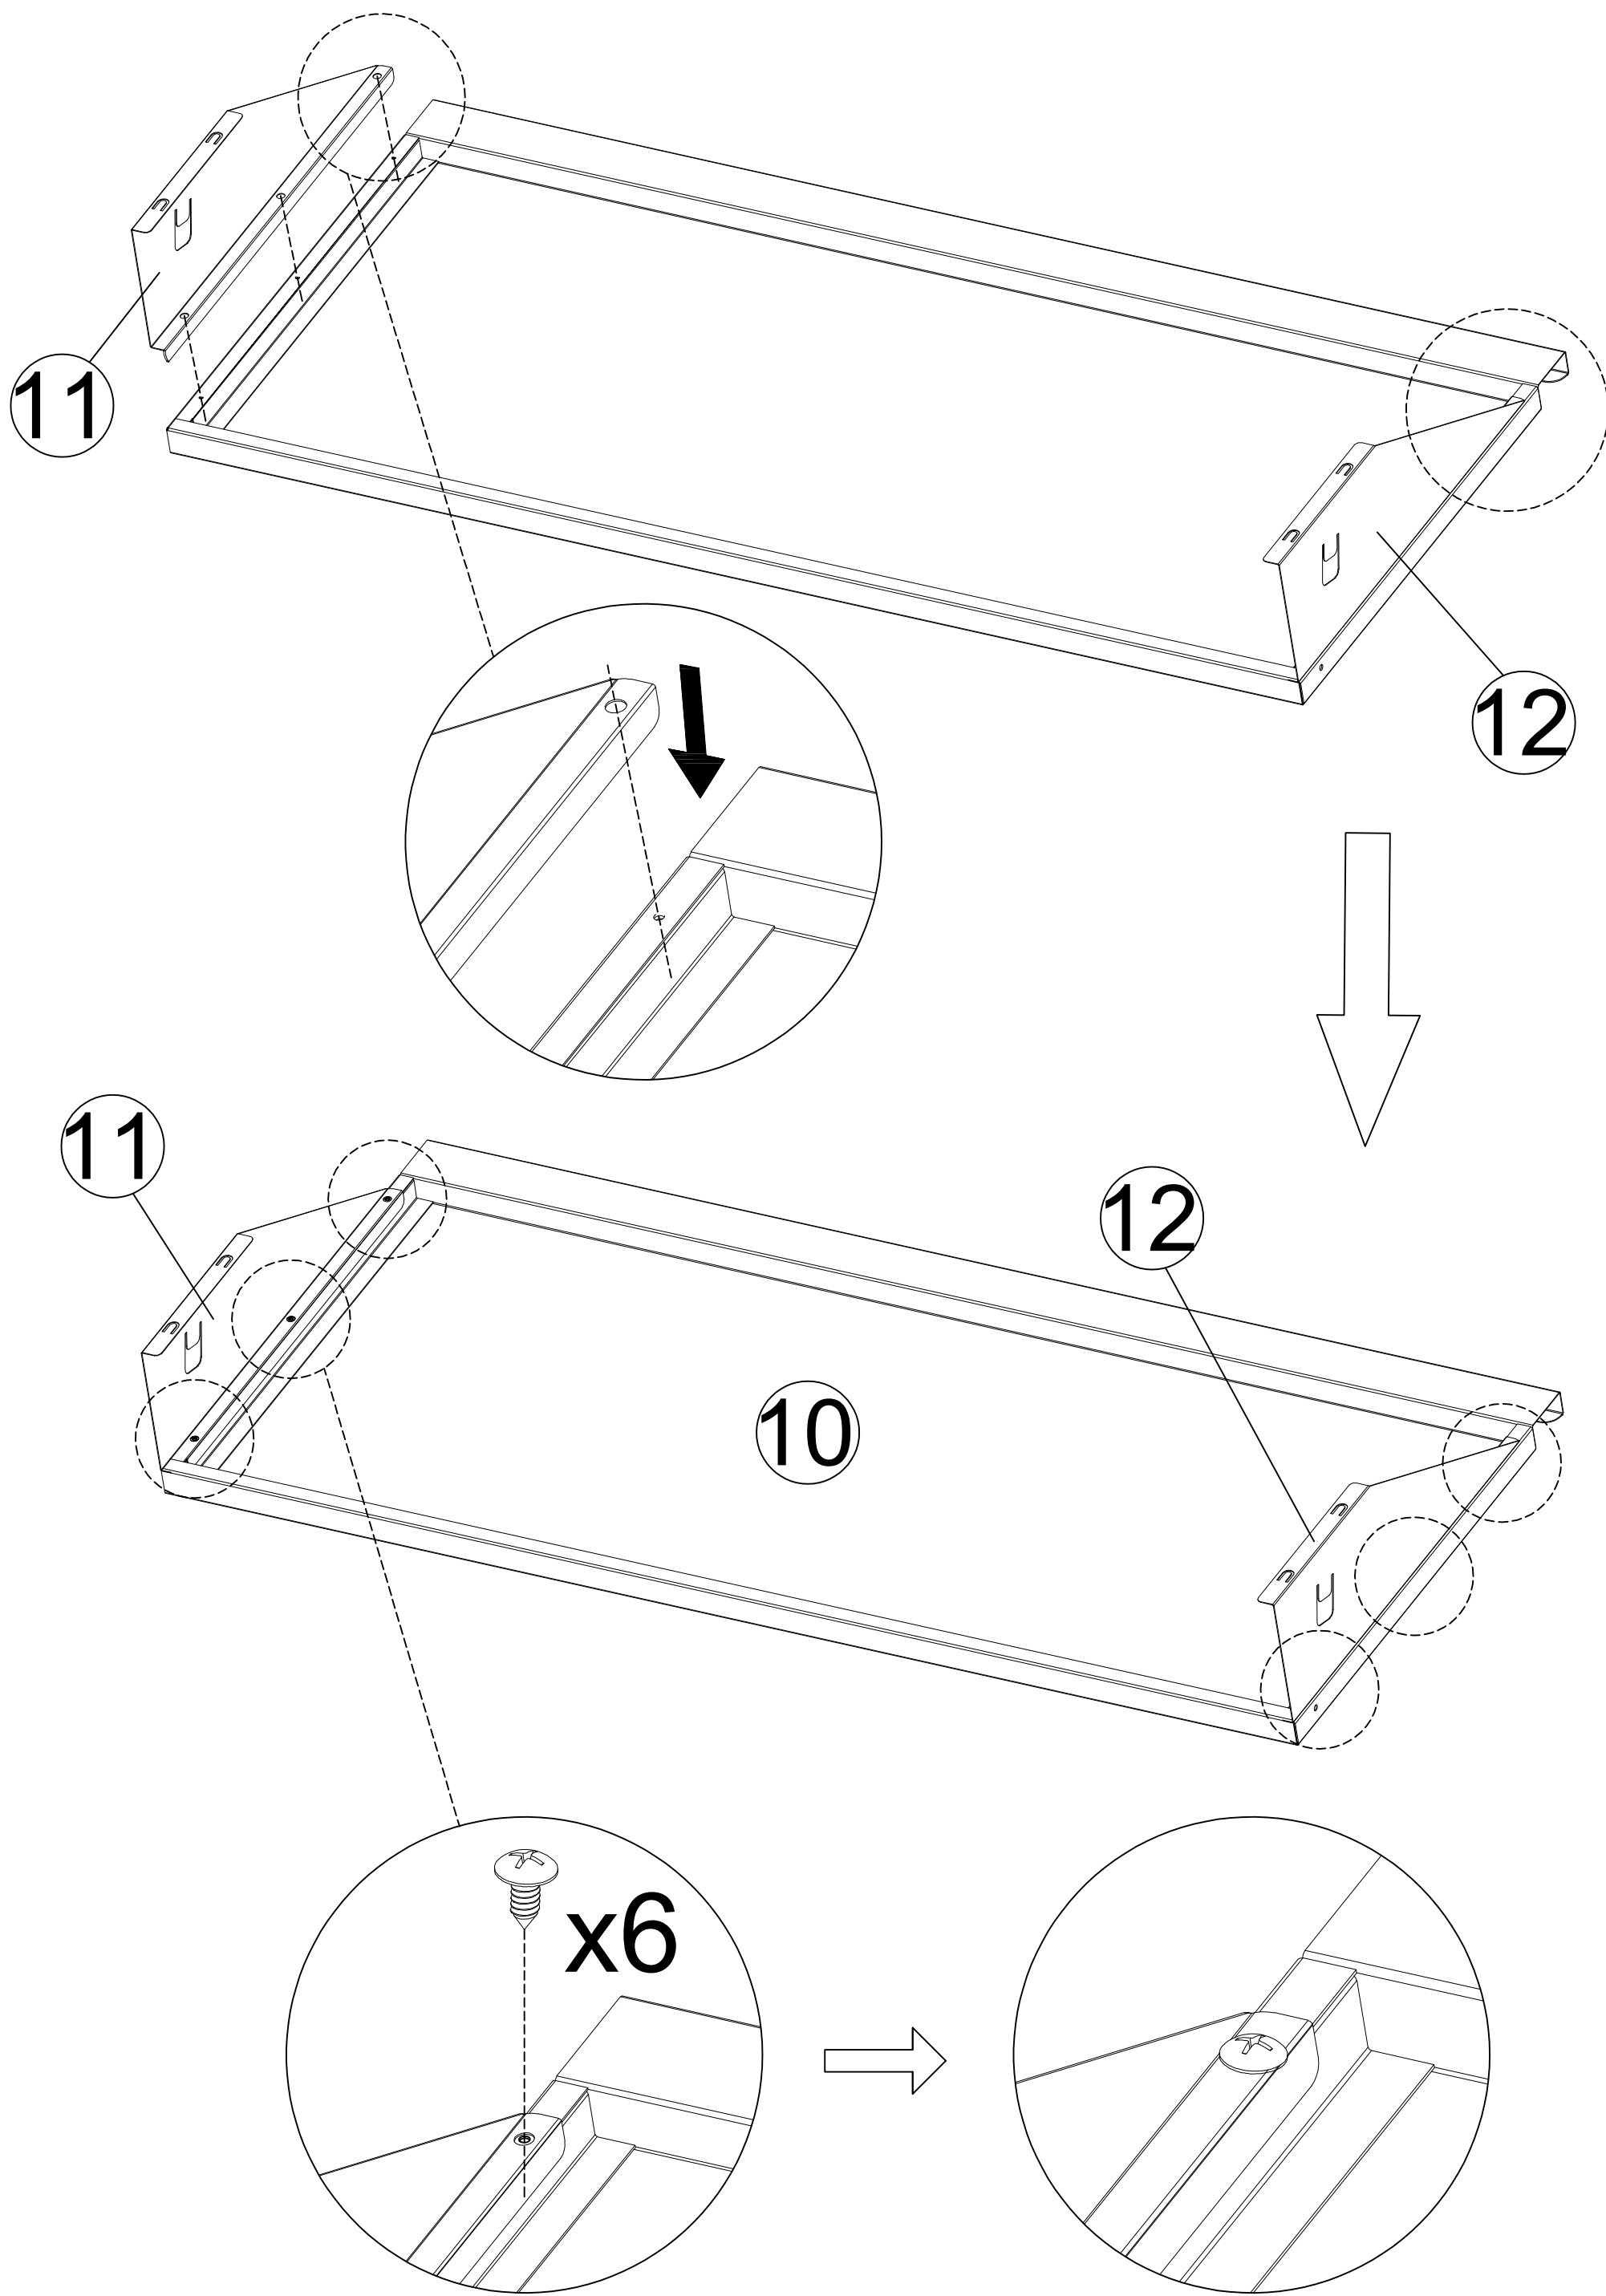



10. Assemble 10, 11, 12, secure with screw A

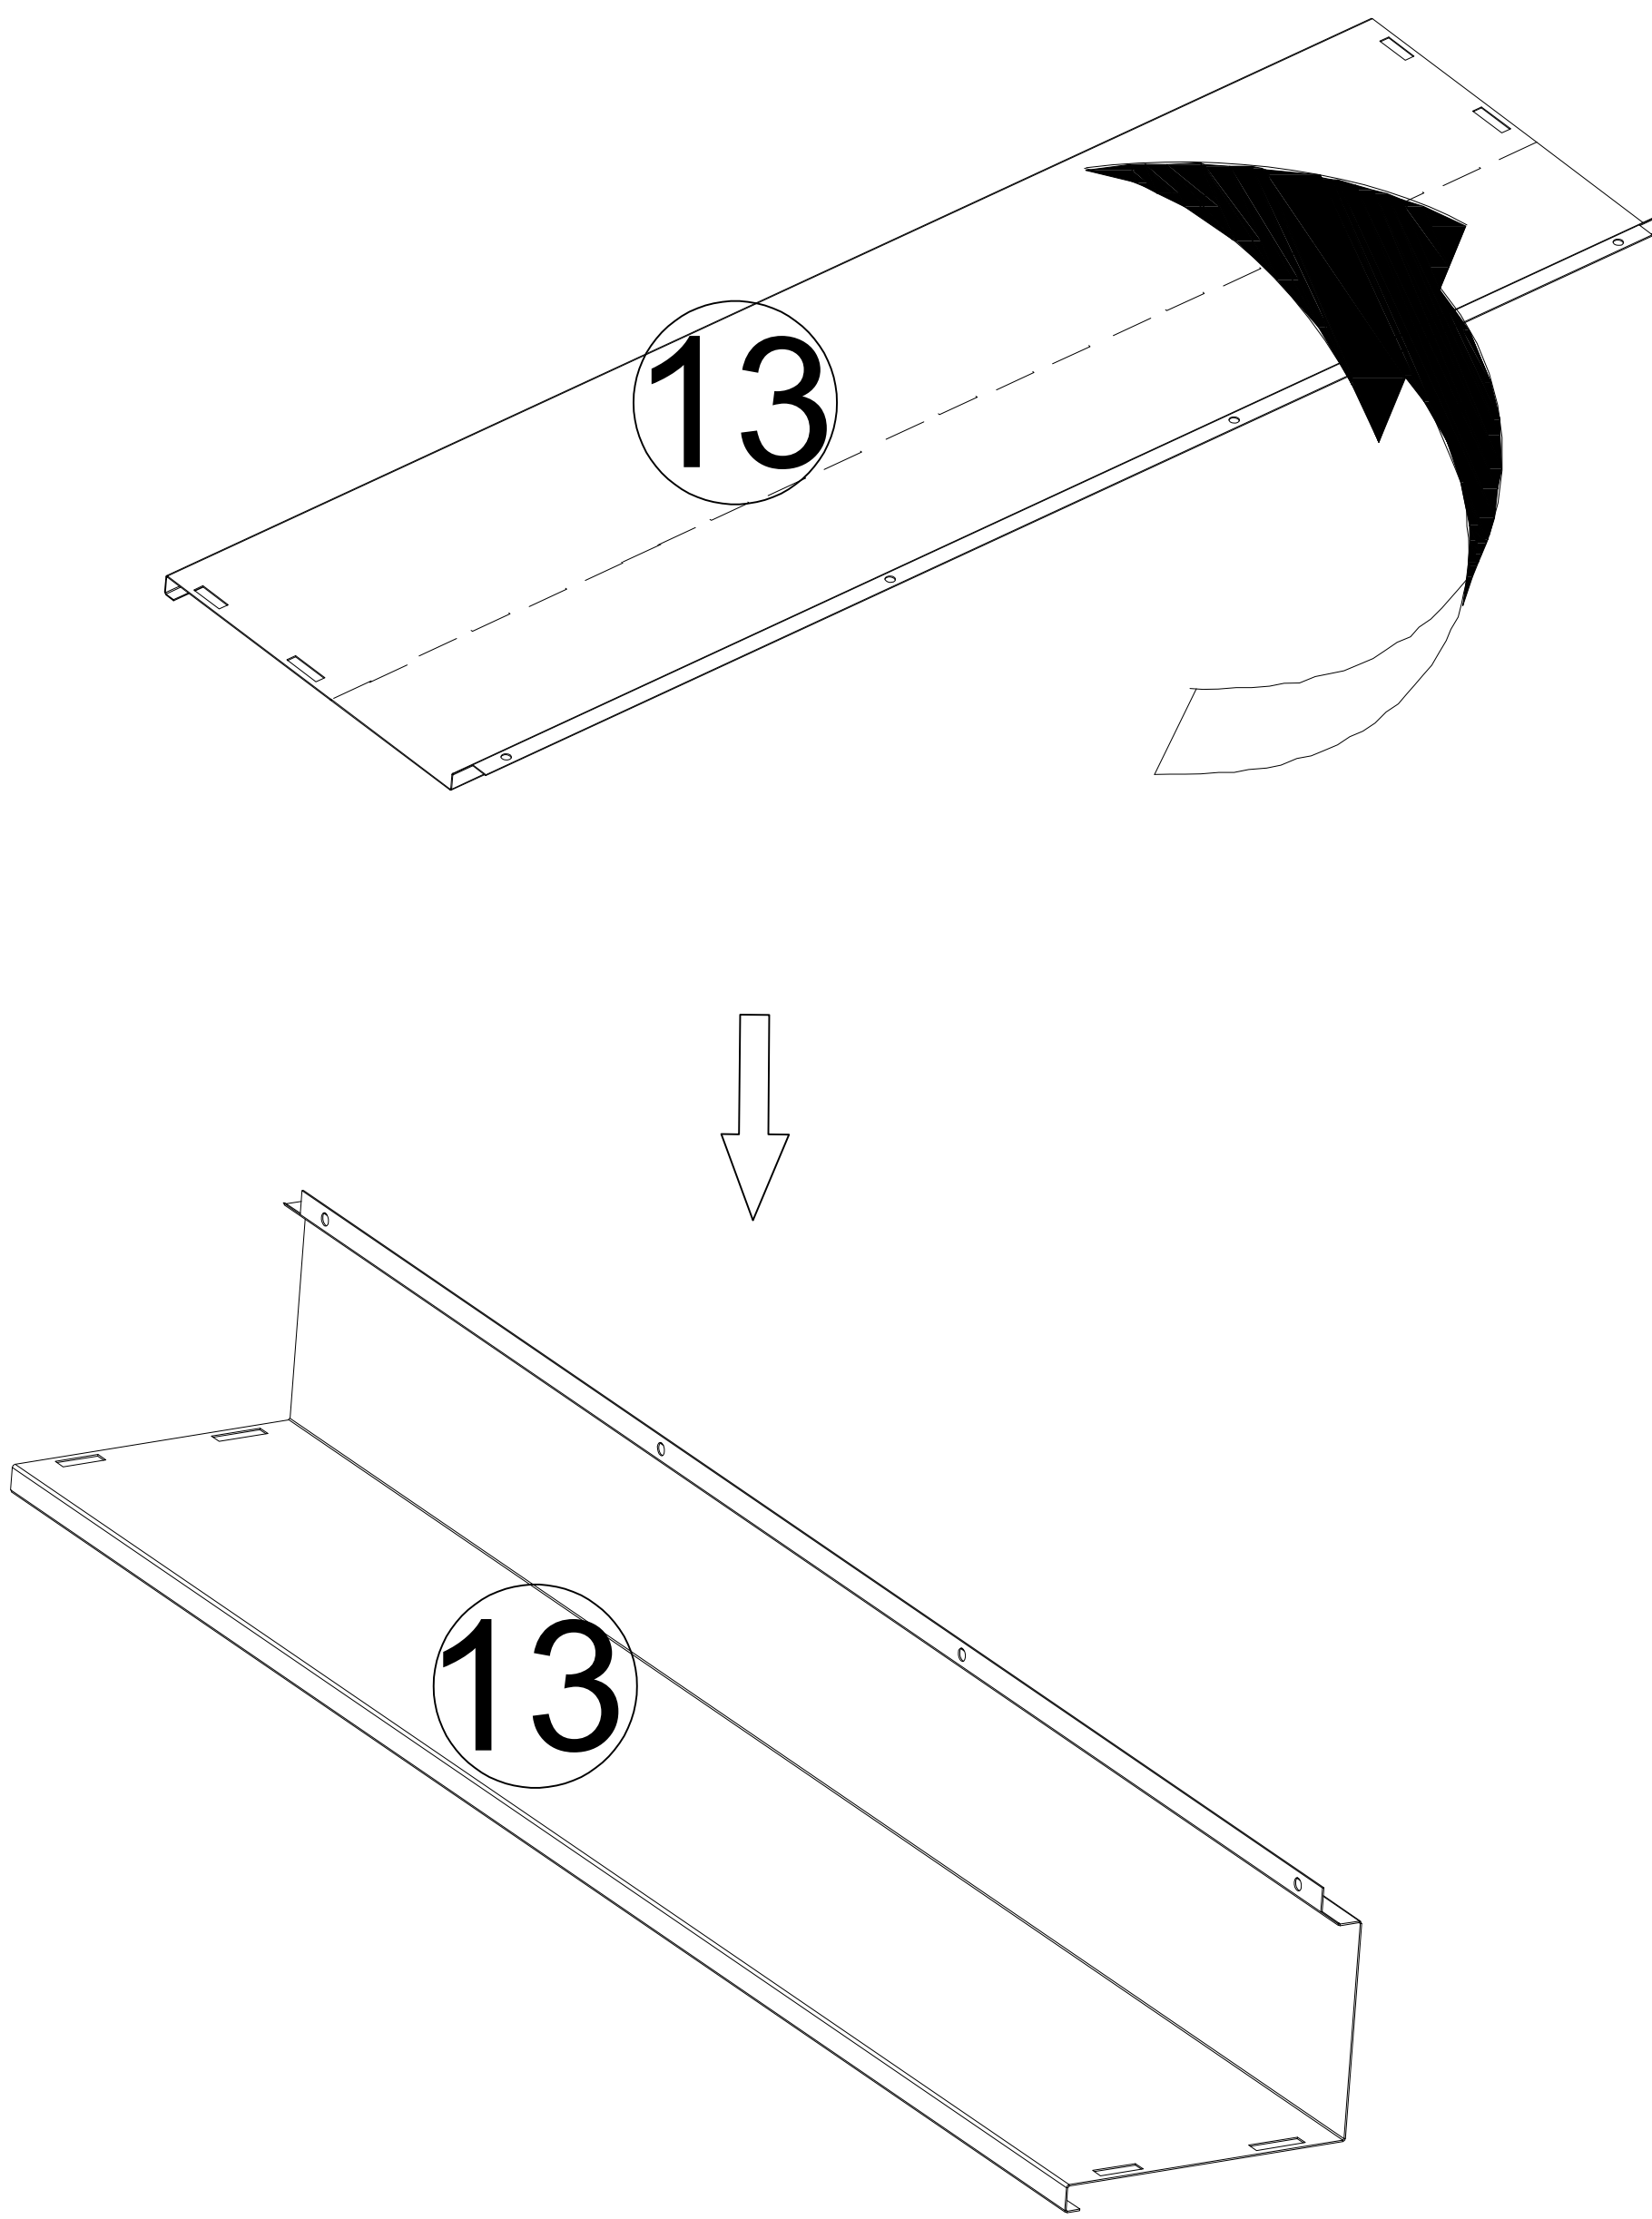


11. 90 Degrees fold 13

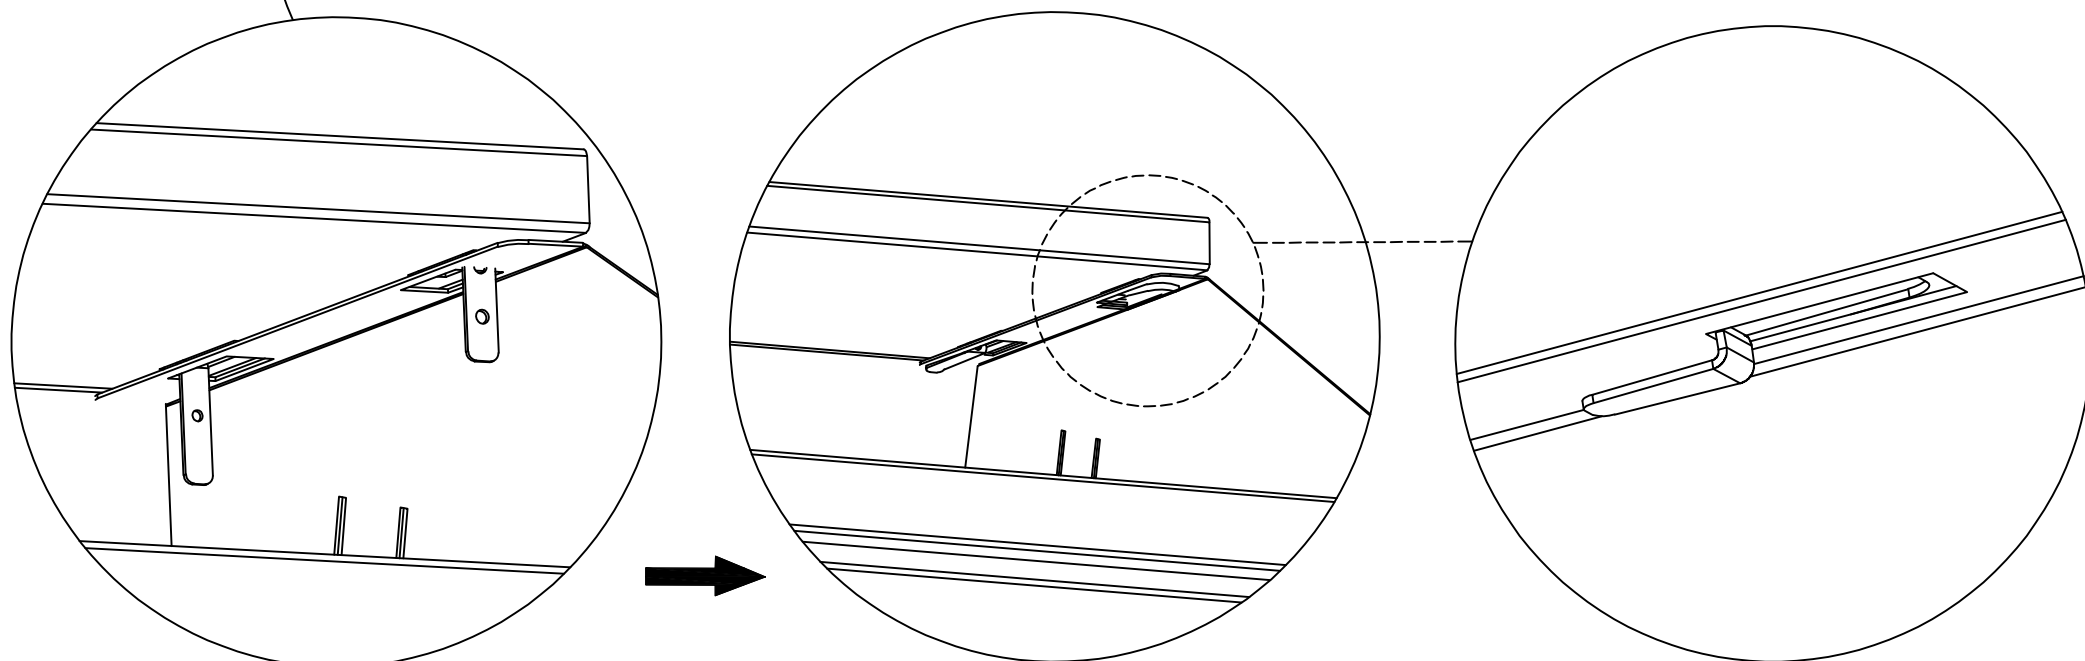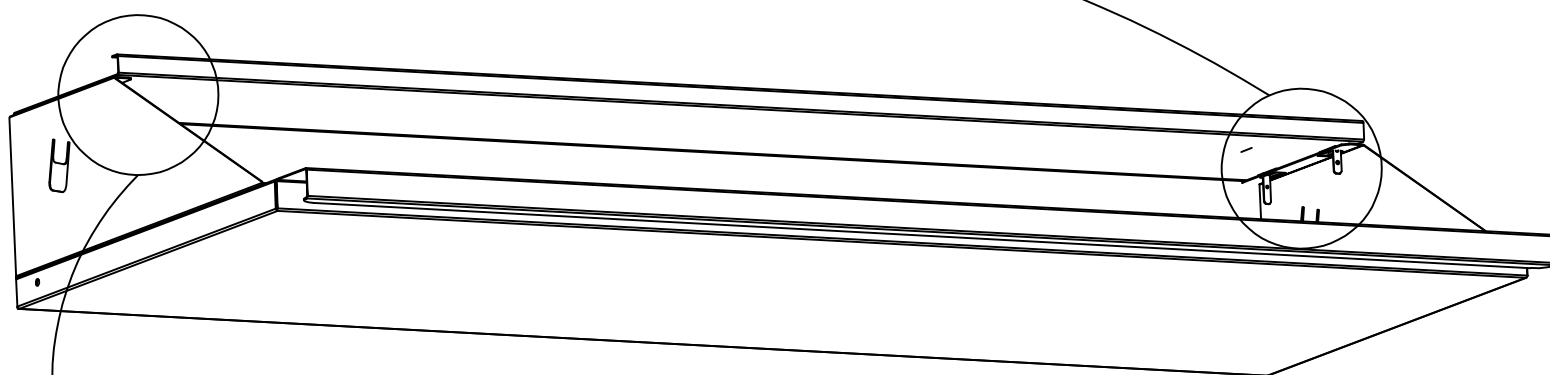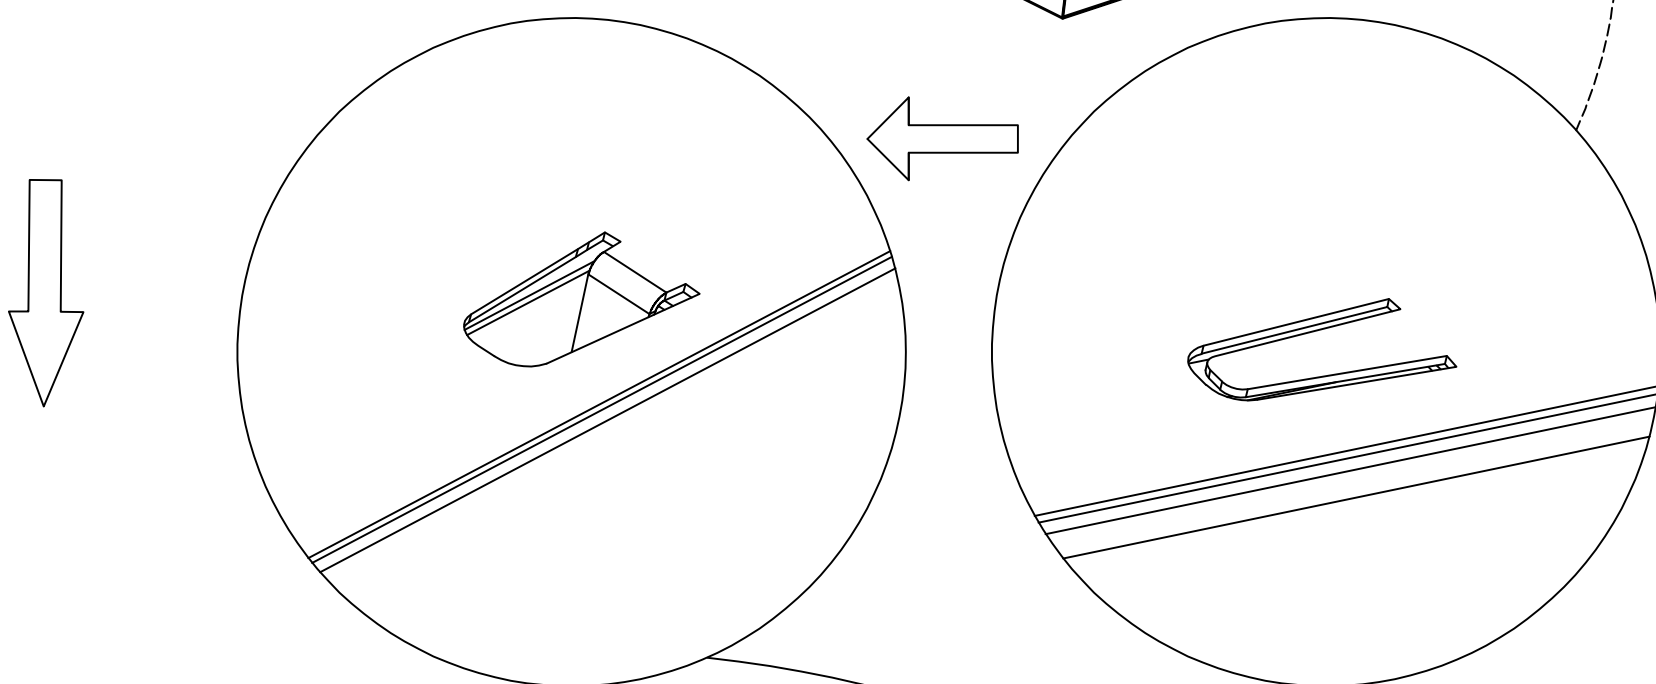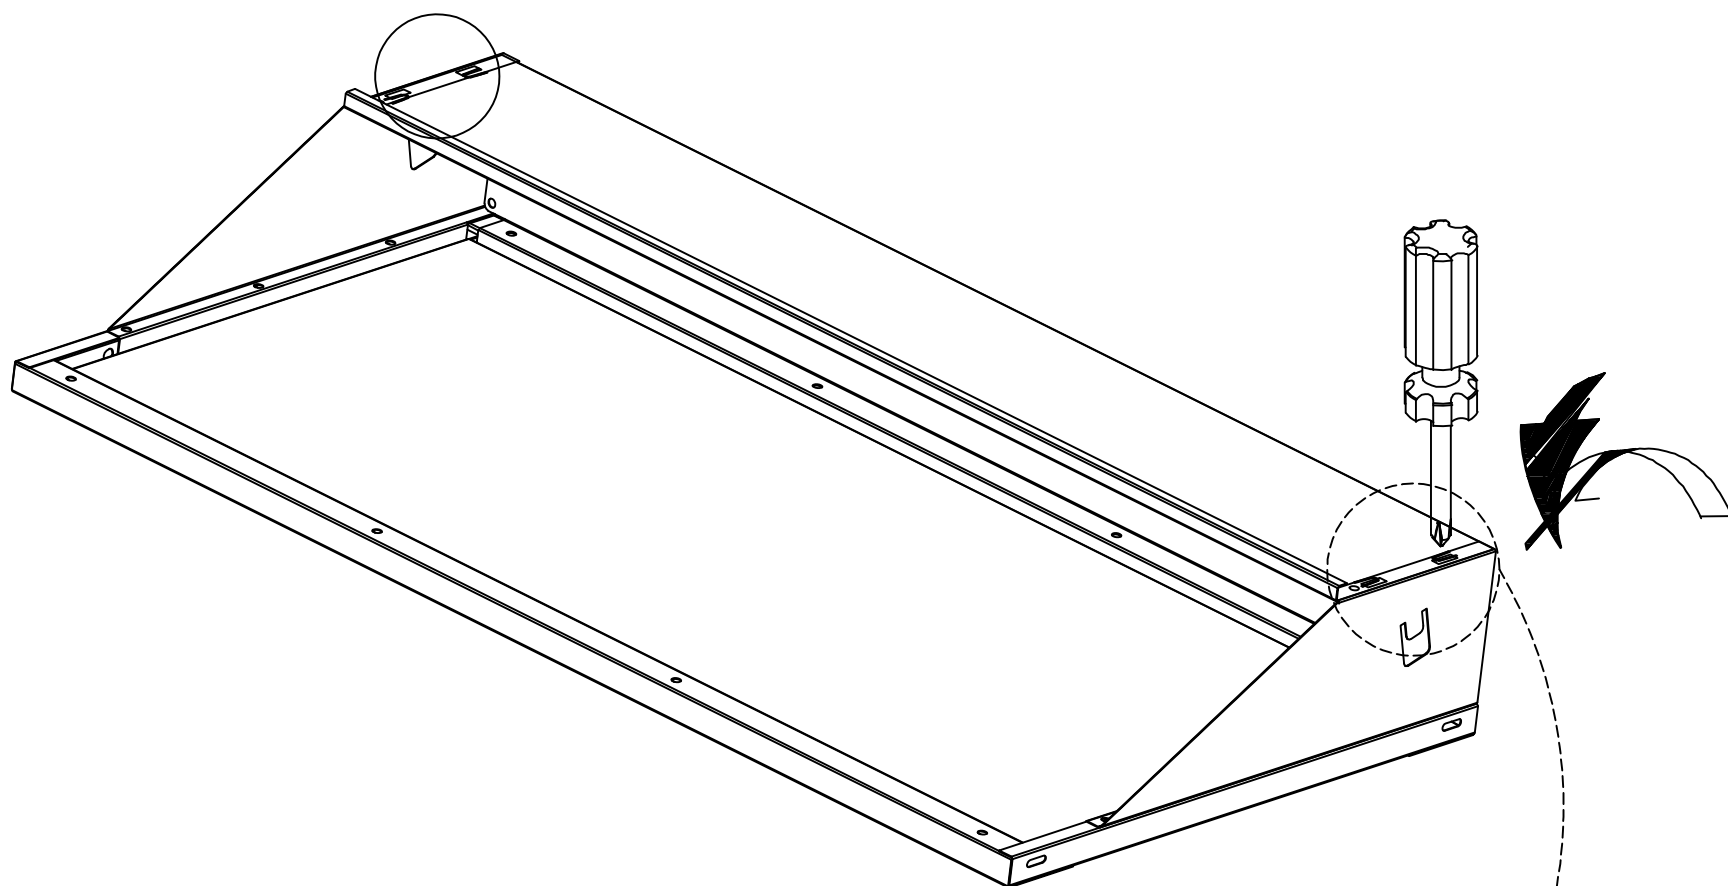

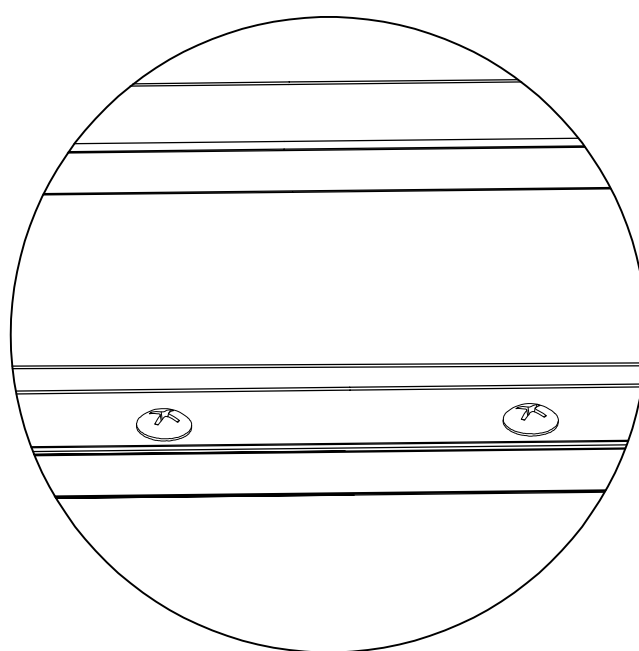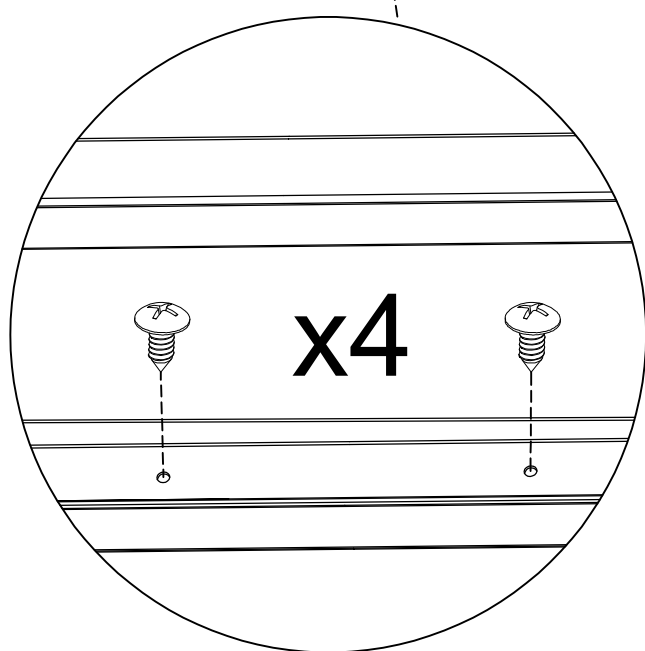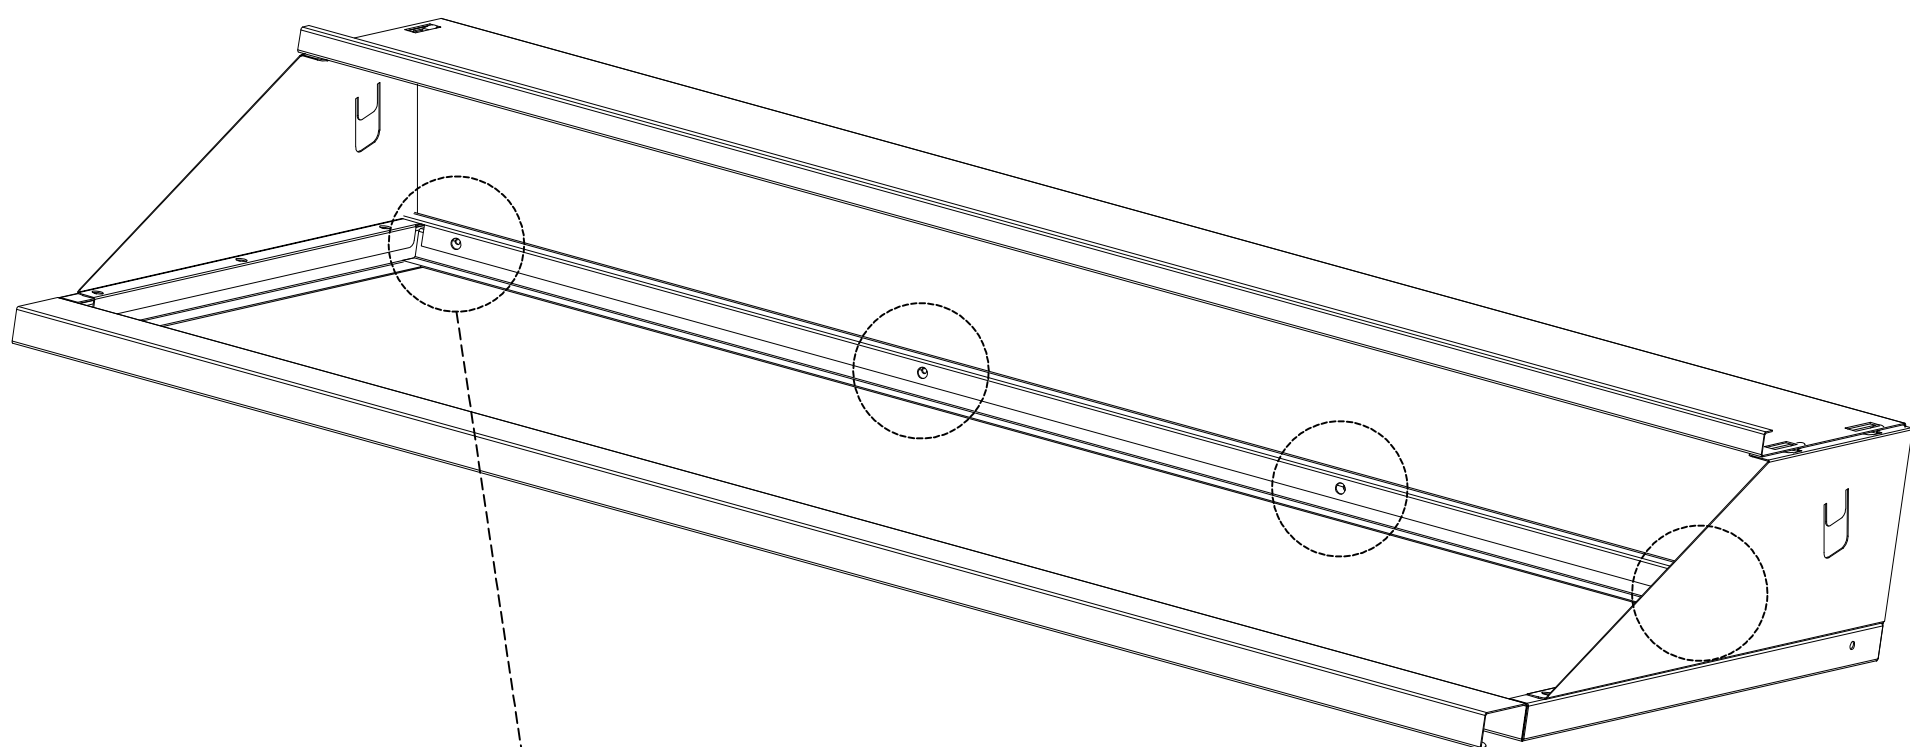


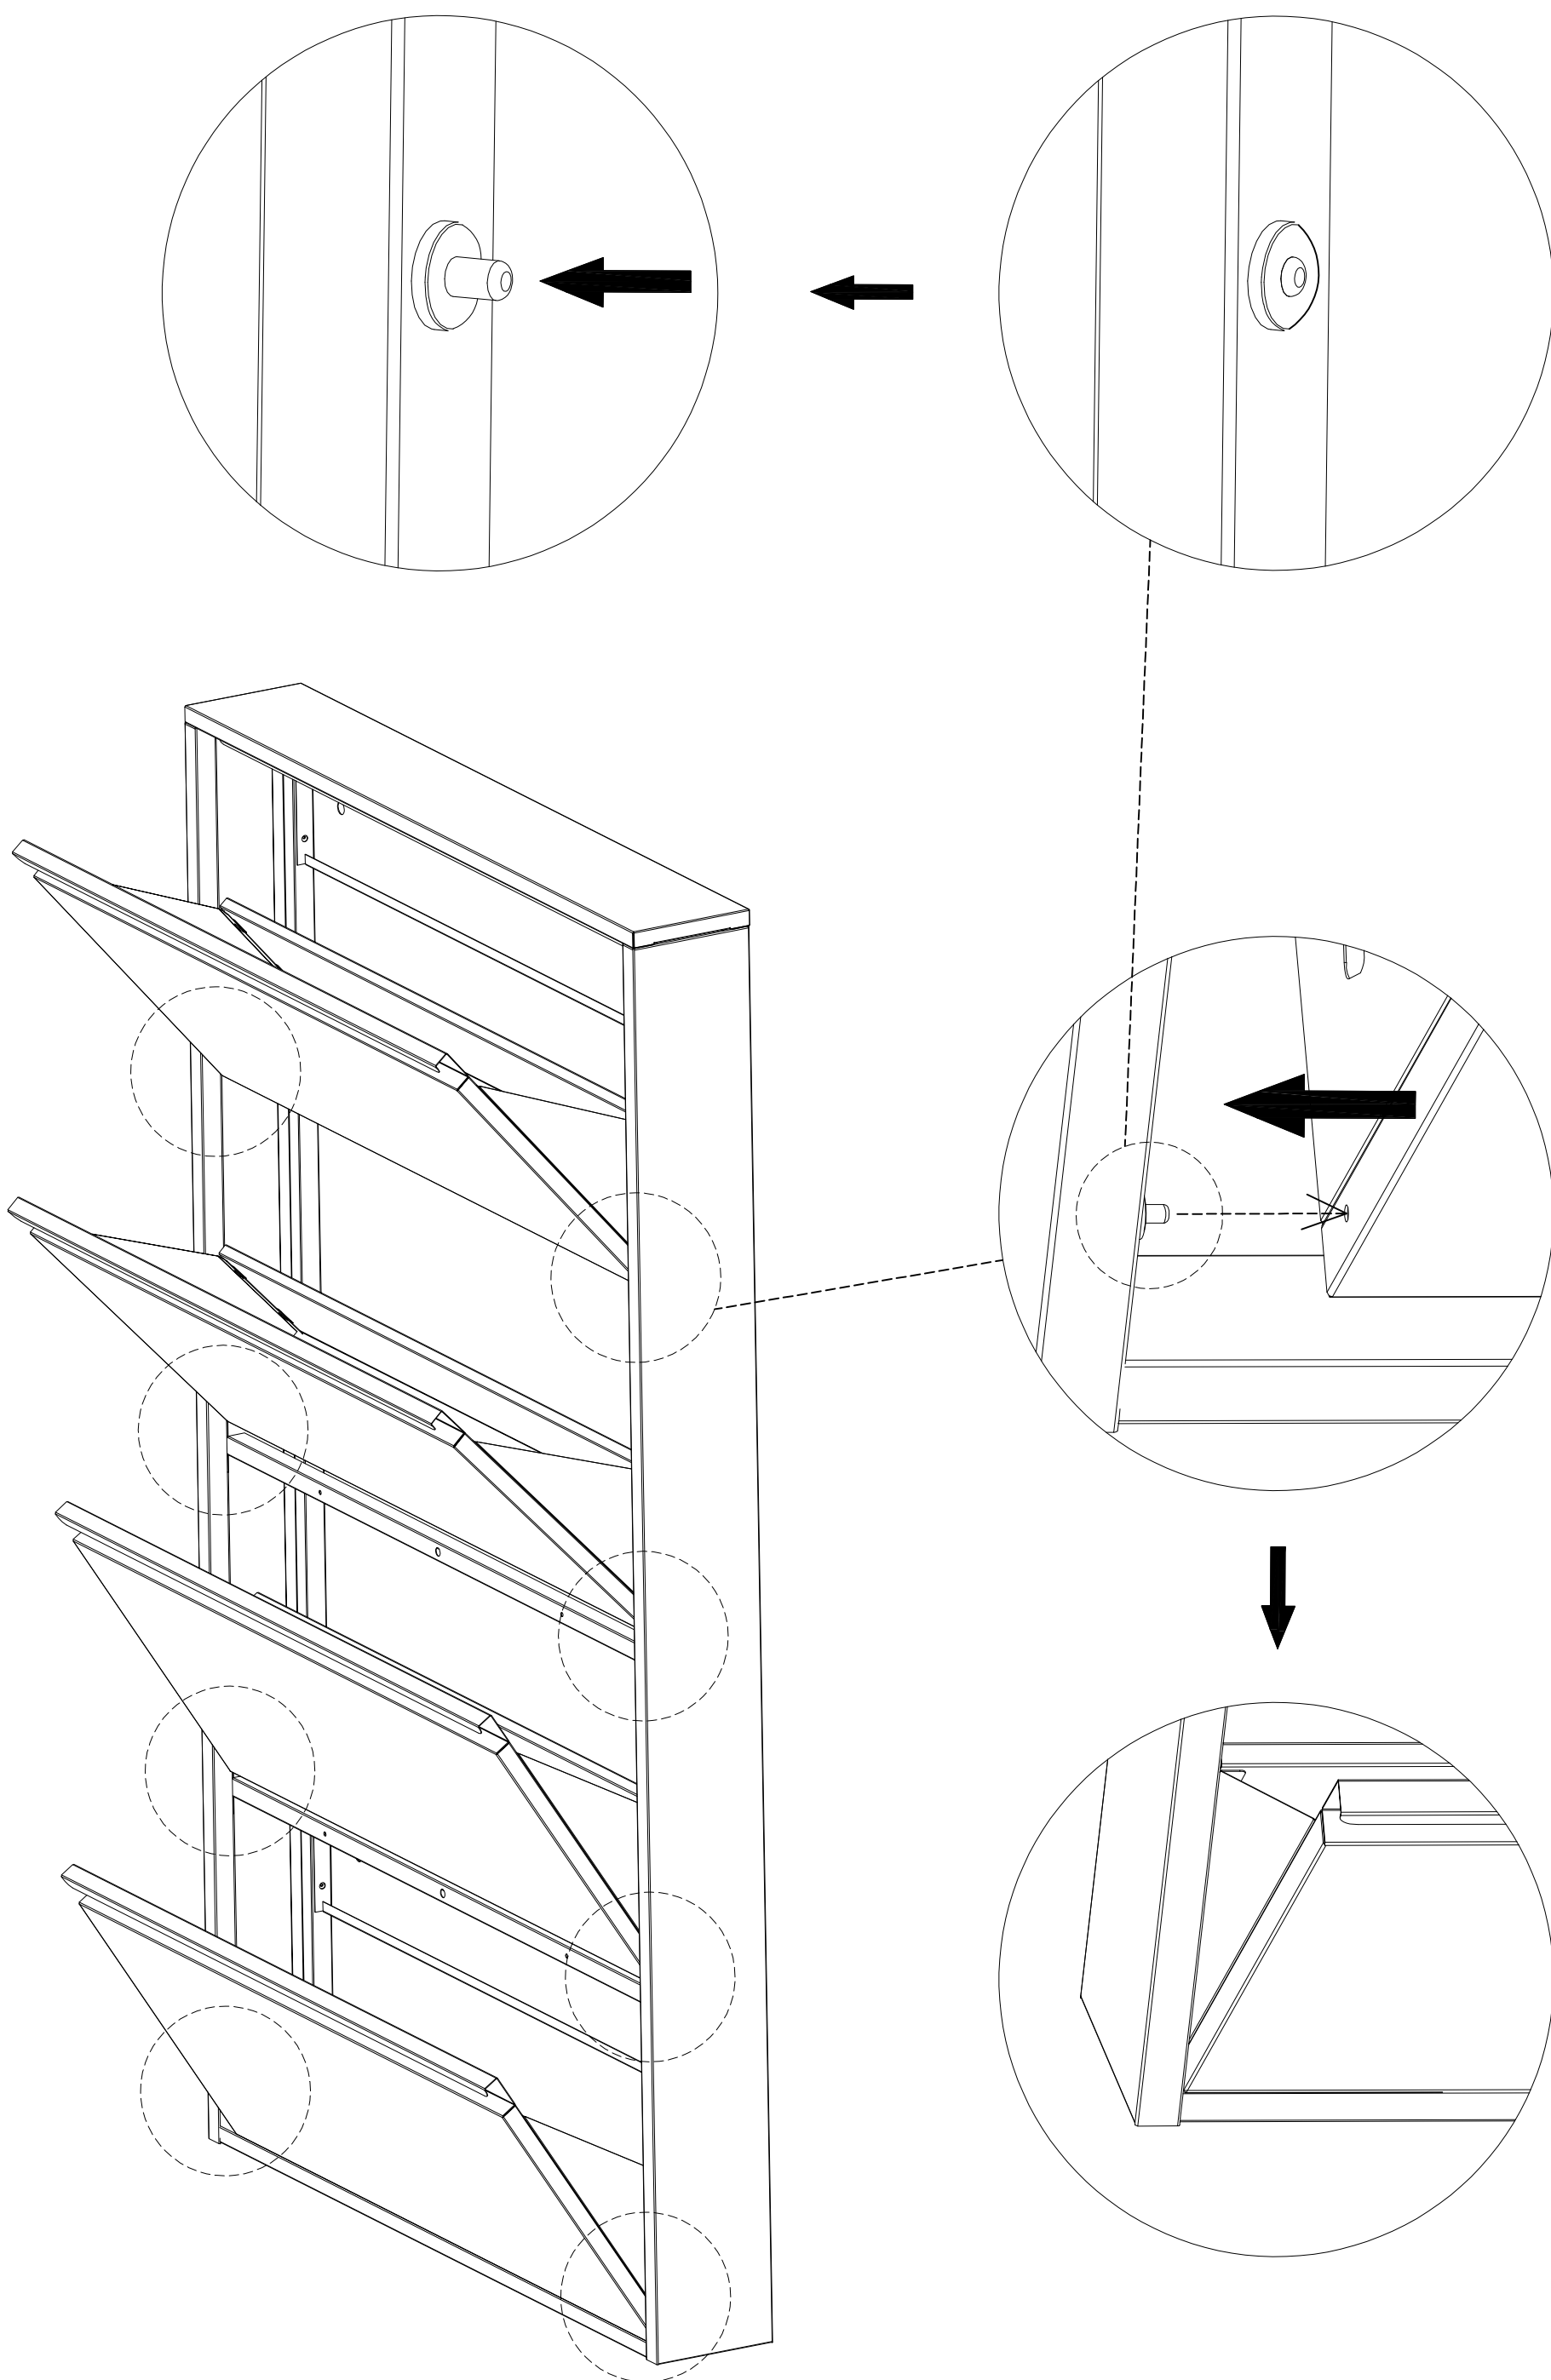

14. Mounting drawer

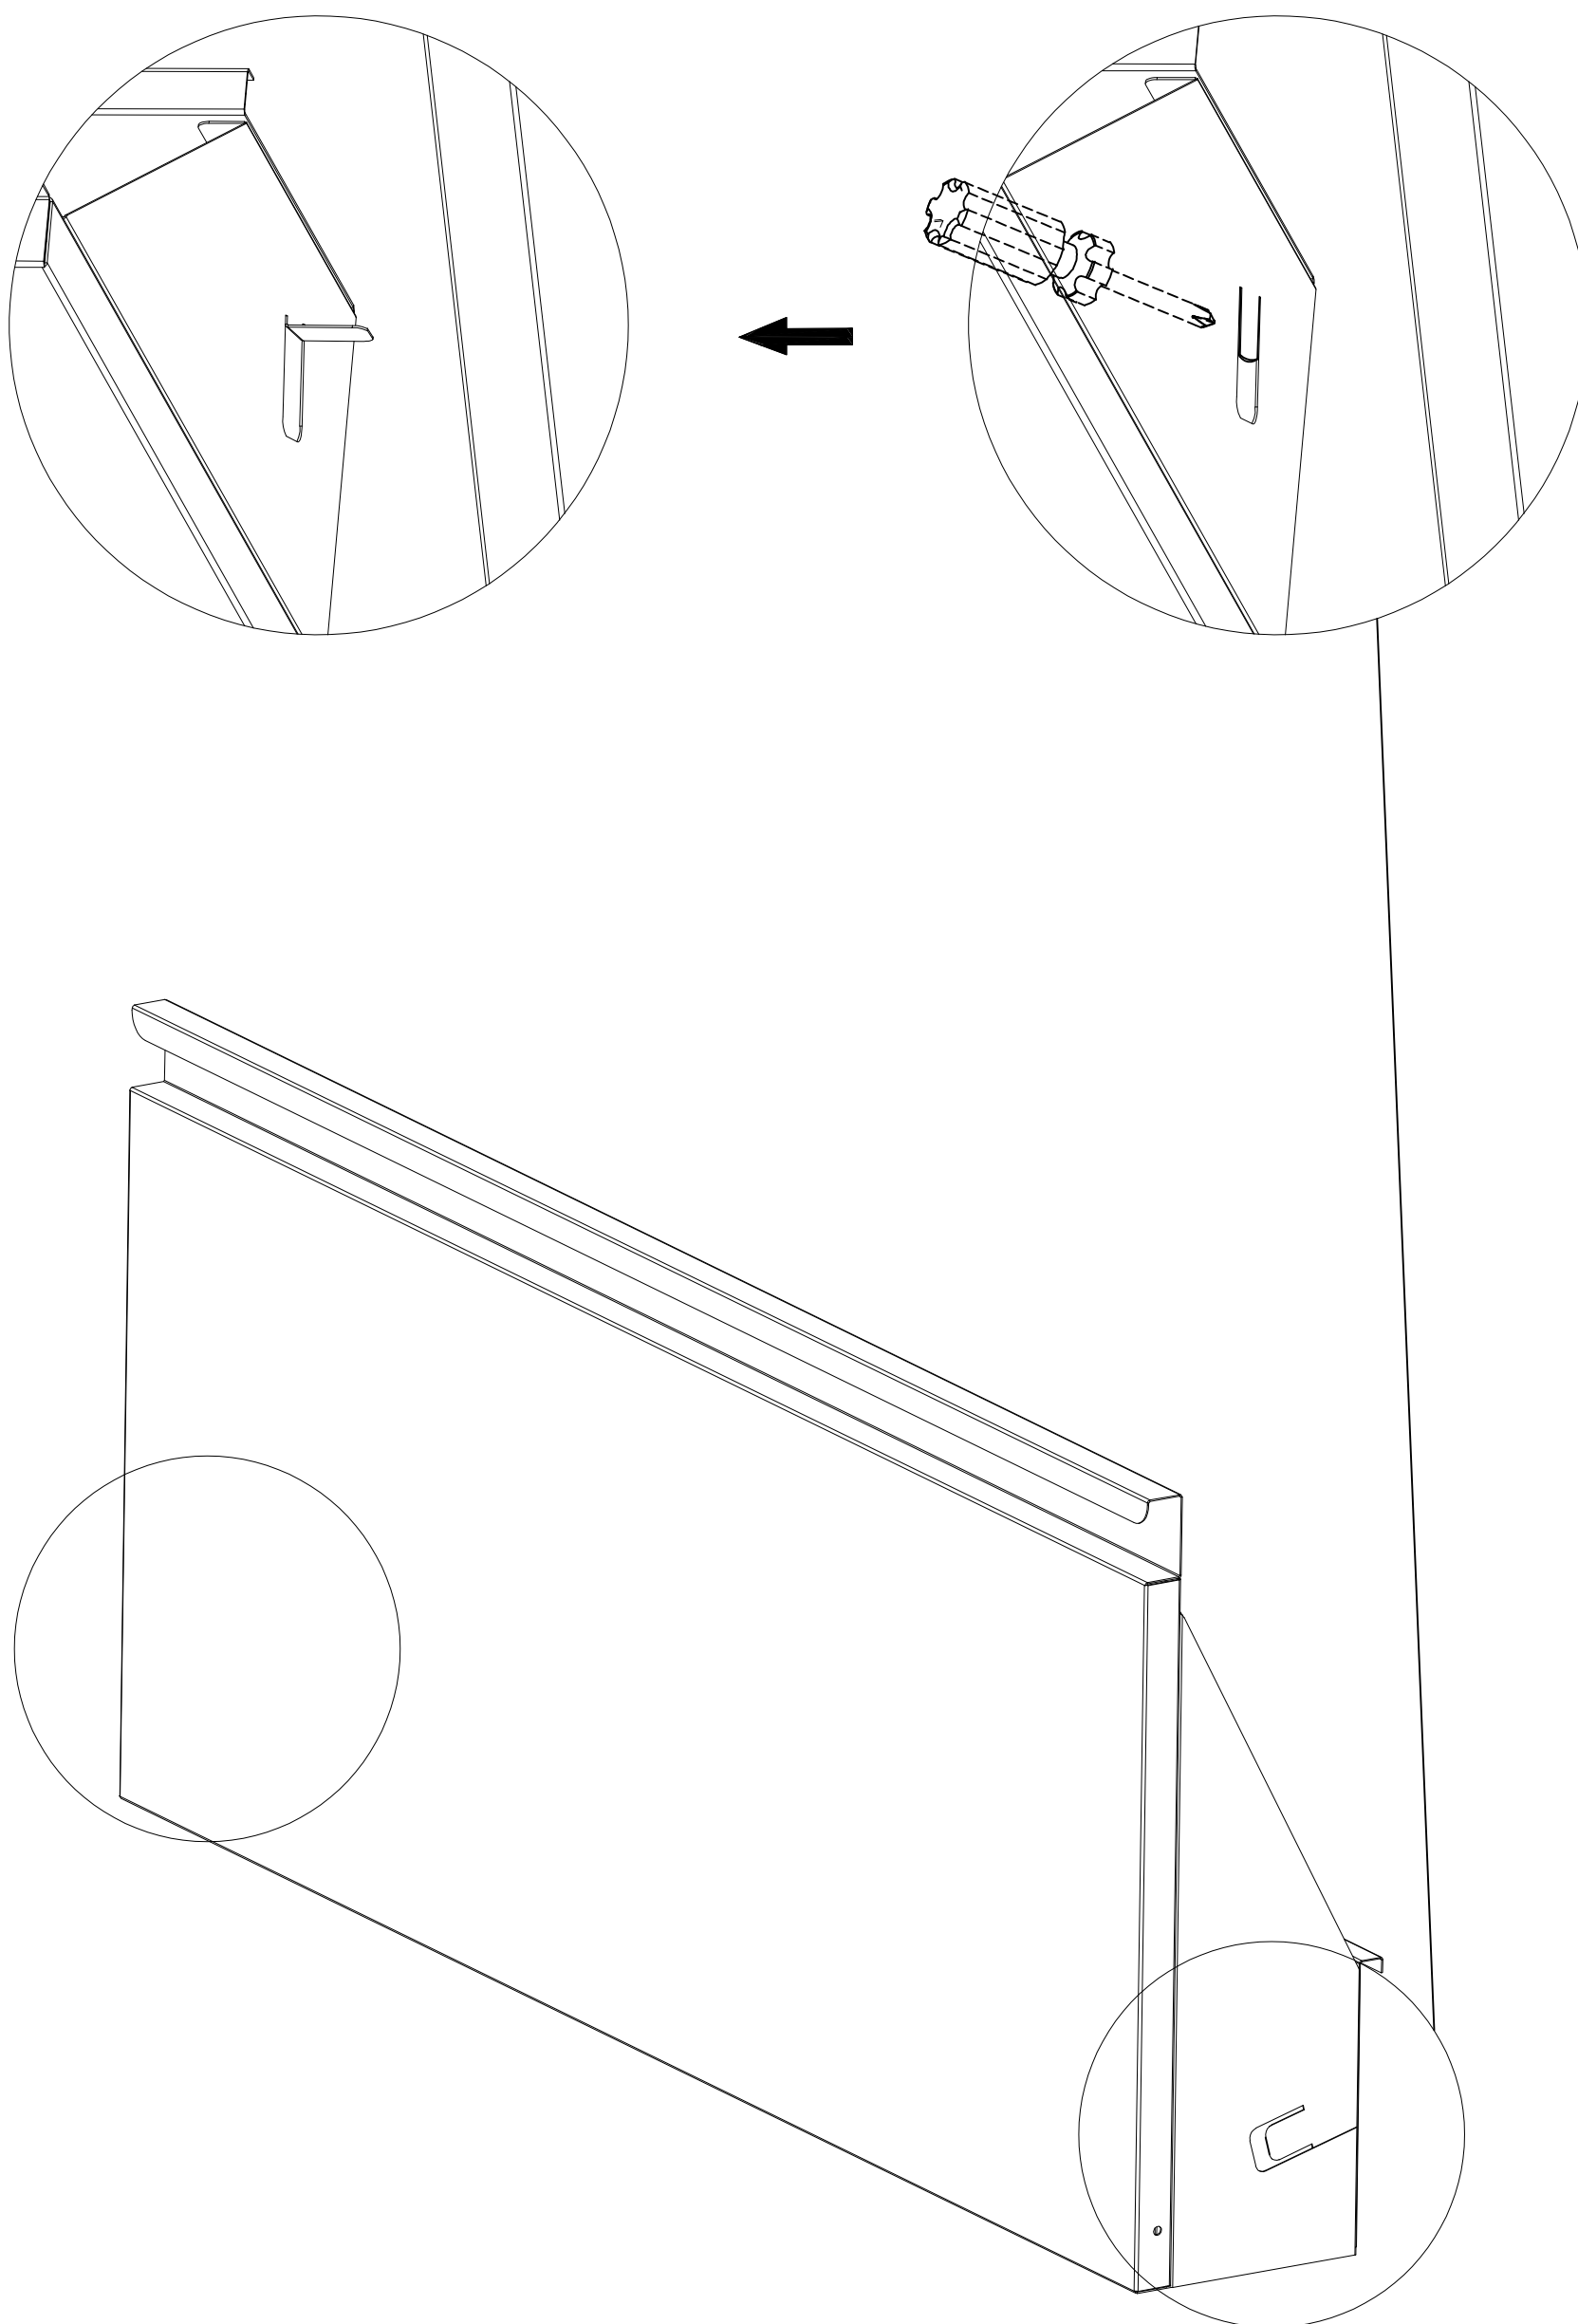

15. Open the drawer little dam-board

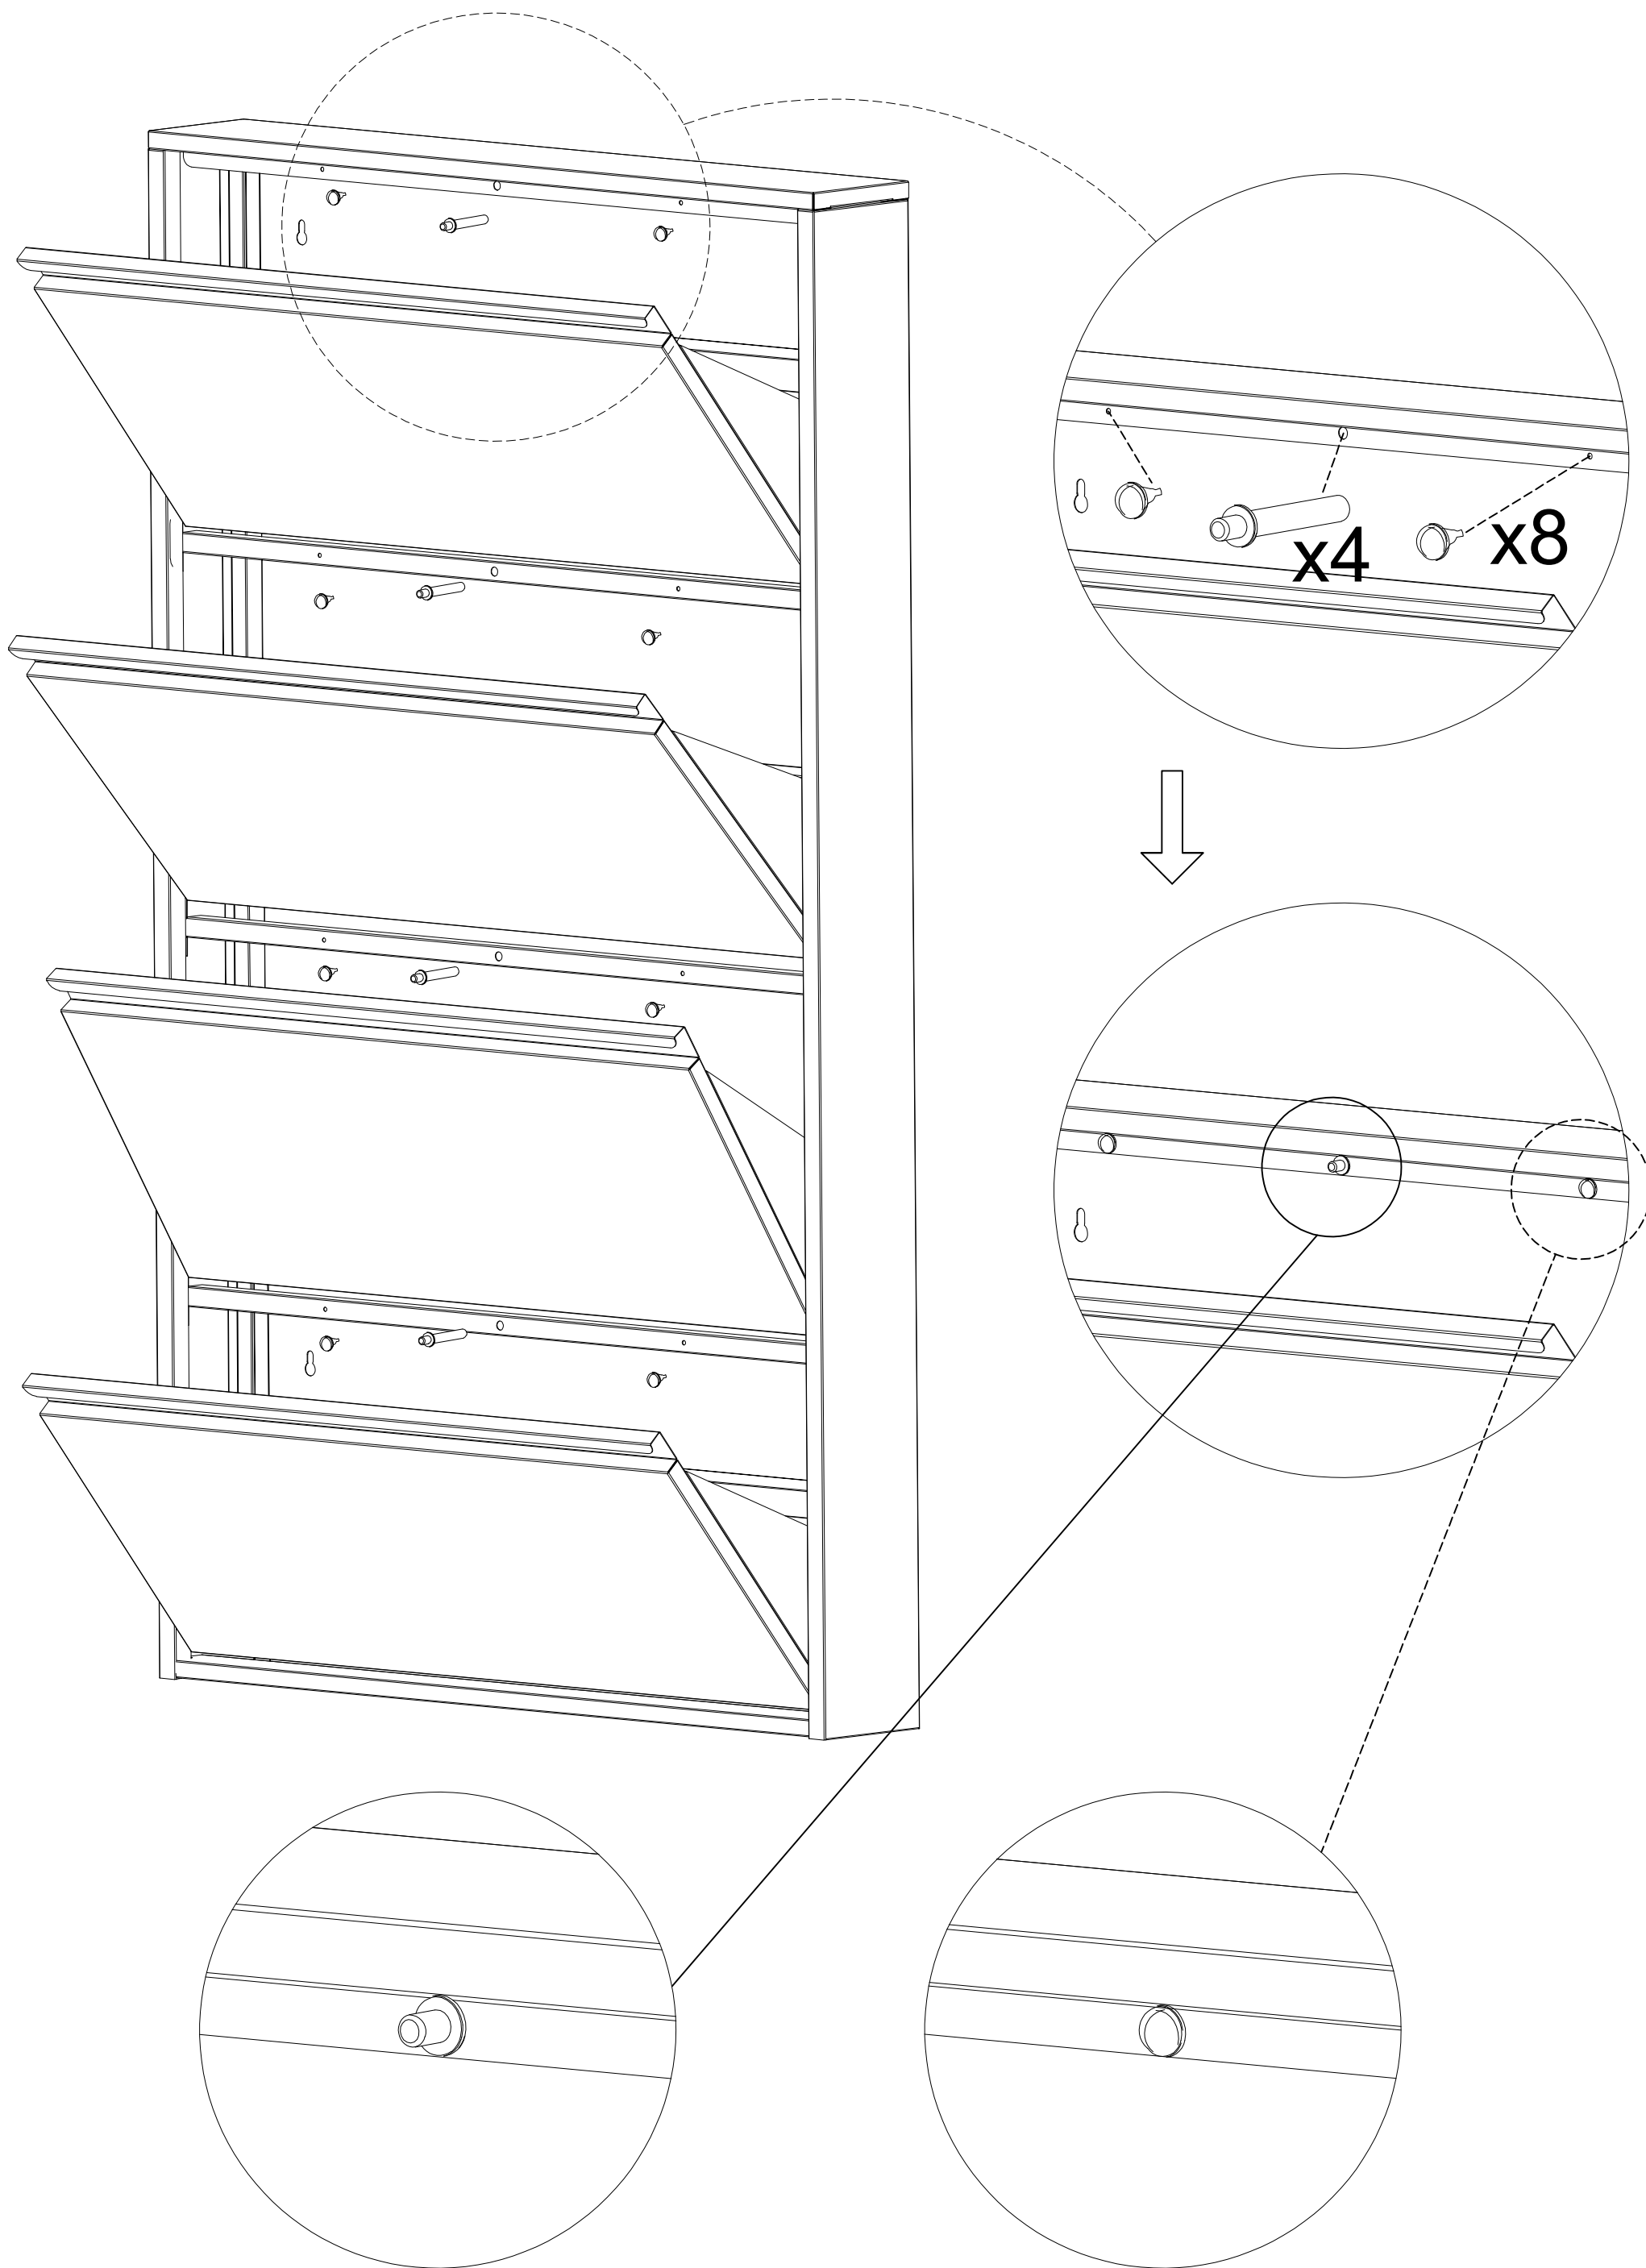

16. Install B and D

