




ORNAMENTAL GATE INSTALLATION GUIDE

2 Rails, Flat Top/Flat Bottom

Model No. EGAR5842-T2P

INSTALLATION VIDEO AVAILABLE AT: (WWW.XSELFENCE.COM)

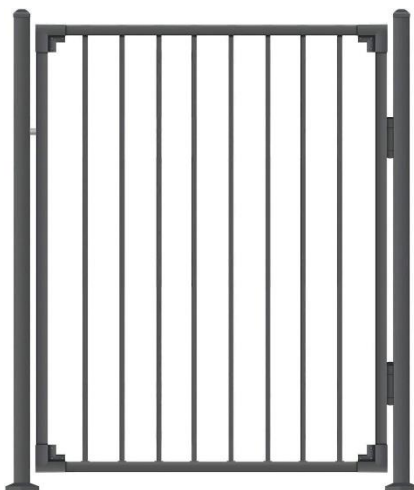

Item Description

Gate installation and assembly has never been so easy to install until now. Our non-welded component gate system allows you to assemble a gate in a matter of minutes. No welding needed, and our knocked down packaging allows you to install a gate at the job site with ease. Built from strong wrought iron, pre-galvanized inside and out, double-powder coated, black.

Features

- 2 Rails, Flat Top/Flat Bottom - Style Gate
- Package Size: 80"L x 6"W x 4-1/2"H
- Actual Gate Size: 4.1'H x 42"W
- Easy Patented Design allows for DIY Assembly with Ease
- No Welding or Painting Required (Snap together Concept/Powder Coated Black)
- On-site assembly
- Zero Maintenance
- Easily Transported/Compact Box
- Gate in a "Box"

Please read these instructions carefully before installing your XCEL gate. If you have any questions or issues installing the gate, please contact us at 866-392-0808 for assistance.

Before You Begin ...

Check your local zoning laws.

- Local zoning laws and HOA may regulate the location, type and height of your gate.
- If needed, contact local utility companies for assistance in clearing electrical, gas or water lines to avoid hitting any unseen underground utilities.


Sketch Plan and confirm materials


- Draw and sketch out your gate plan. Plan the location of corners and gates.
- Measure accurately with tape measure and identify all measurements on your drawing.
- Make sure all location of fence lines and gates are carefully planned.
- Determine total number of sections and posts needed.

Installation Tips

- Gates need to be installed on level ground.
- Gates and Fence panels should be installed so that the bottom of the panels are 2" above the ground level to allow for lawn maintenance/cutting.
- Once installed, the top of the post will be at the same height as the top of the tallest part of the fence/gate panel.

Please Follow Measurements Below

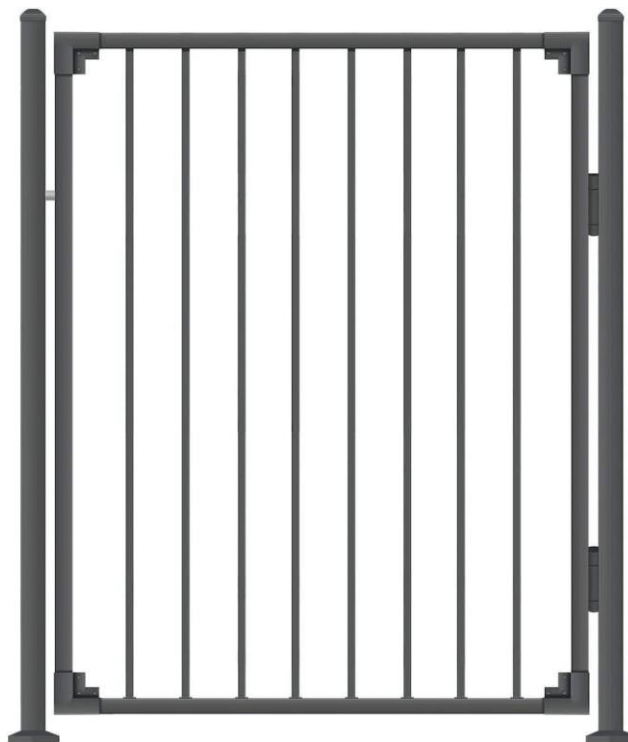

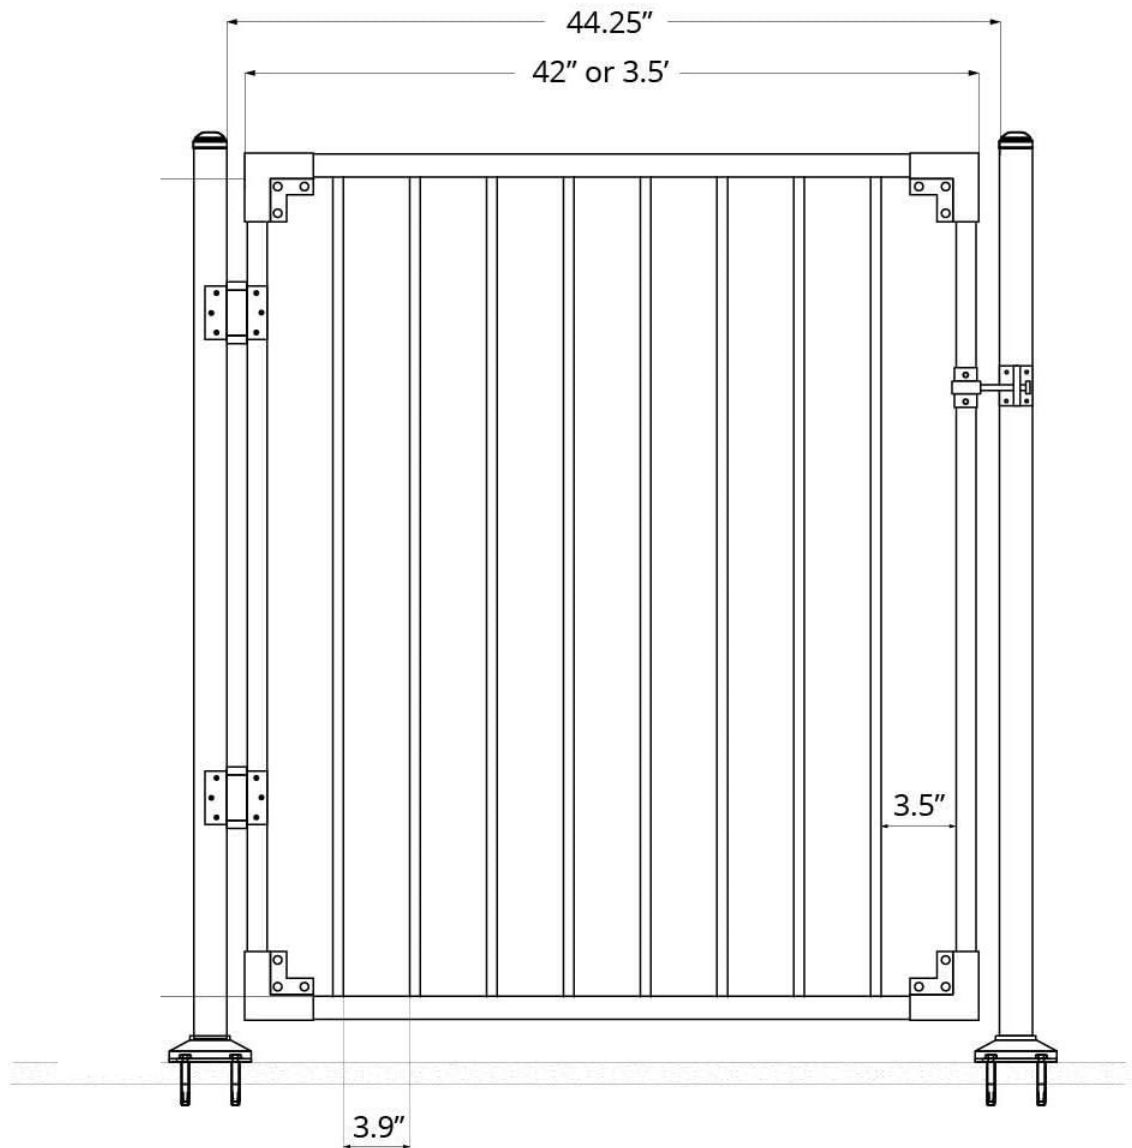

Package Contents

- 1 pc. Top Rail
- 1 pc. Bottom Thru Rail
- 8 pcs. Pickets
- 2 pcs. 5.5'H Posts
- 4 pcs. Corner Ells
- 2 pcs. Uprights
- 1 pc. Standard Latch
- 2 pcs. Self-Closing Hinges
- 32 pcs. Tek Screws
- 1 pc. Installation Instructions Manual

ATTENTION:

PLEASE MAKE SURE ALL CONTENTS ARE IN THE GATE KIT.

DO NOT ATTEMPT TO ASSEMBLE THE GATE IF PARTS ARE MISSING OR DAMAGED.

Please do not return the product to the store, for assistance or replacement parts call:

866-392-0808

Required Tools & Materials for Assembly


- Power/Hammer Drill
- Tape Measure
- String & Stakes
- Level
- Post Hole Digger
- Concrete Mix
- Socket & Wrench
- Hacksaw

Layout Installation


- Using the image as a guide, establish your fence line by staking out the areas you wish to enclose.
- Mark every 6.5' section to identify location of the posts

NOTE: If you are left with a space less than a full size panel, the rails can be cut down to fit the space by using a hacksaw.

- Attach string to each stake

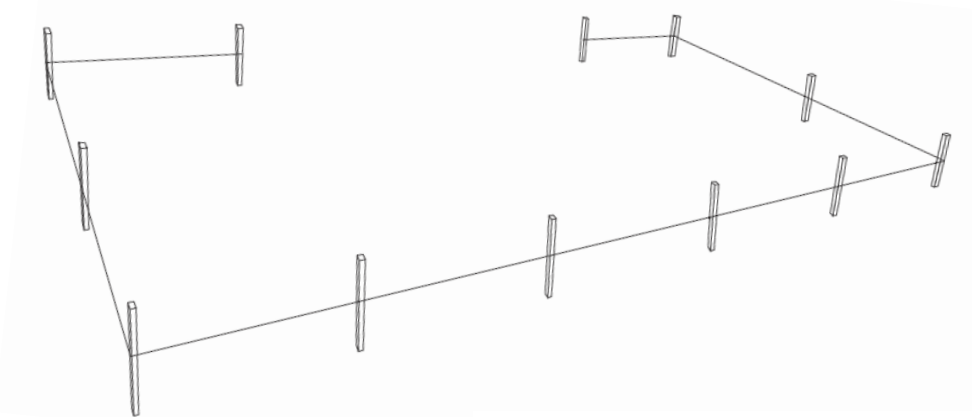


- Sketch out your fence plan to paper.
- Show the house, driveway, deck, and property lines in your diagram to estimate materials and location of your fence.
- Measure accurately with tape measure and identify those on your sketch.

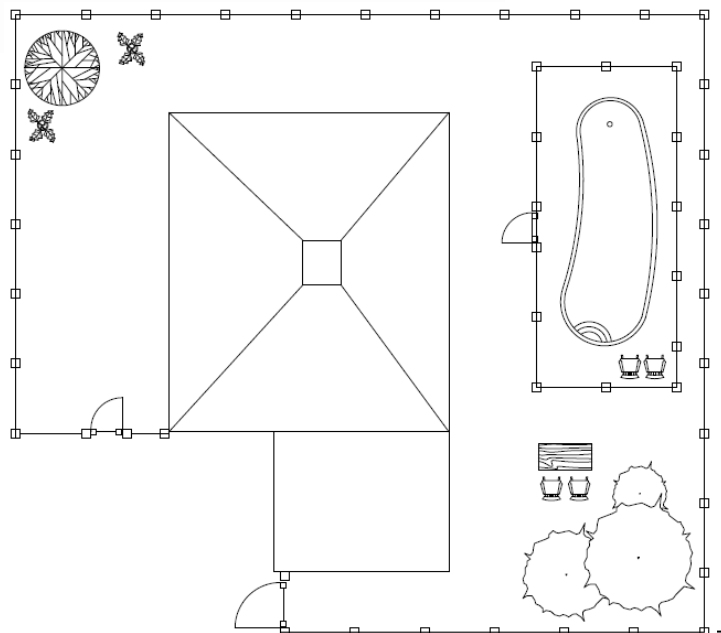

NOTE: Make sure all posts are set to have an opening of 44" wide.



Be sure all posts are leveled.

Prior to fence panel installation, make sure concrete is set and dry to avoid shifting of the posts.

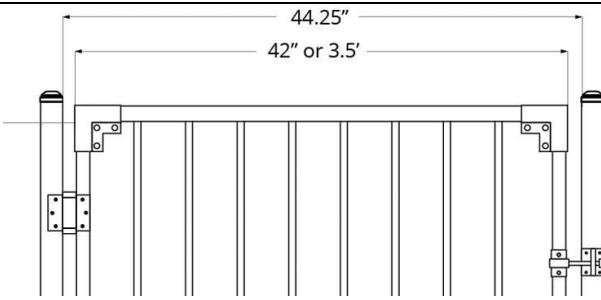


Gate Assembly

1. Locate top rail and bottom thru rail
2. Begin inserting pickets thru the bottom thru rail
 - a. Make sure the holes on Pickets are facing left/right
 - b. Continue to insert pickets into bottom thru rail
 - c. Use Closed Rail to connect to top of the Pickets
3. Insert corner ells thru uprights (please see image below)
4. Attach gate panel to both uprights and secure tightly
5. Attach included hinges on one side of the uprights
6. Attach included latch on the other upright
7. Gate installation is complete

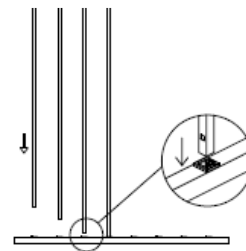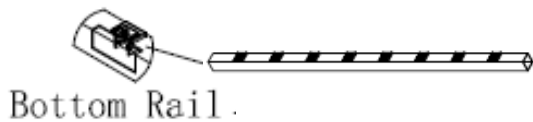


1. Locate top closed rail, , and bottom thru rail


2. Continue to insert pickets into bottom thru rail

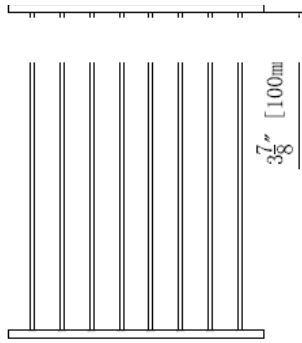


3. Adjust top rail to lock in bottom thru rail pickets

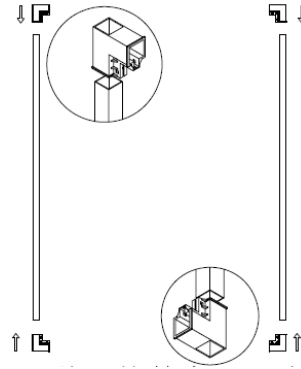

4. Insert corner ells thru uprights as shown above

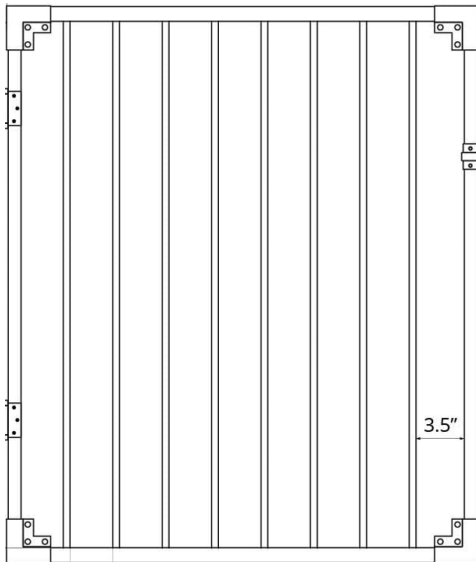


5. Attach gate panel to both uprights and secure tightly

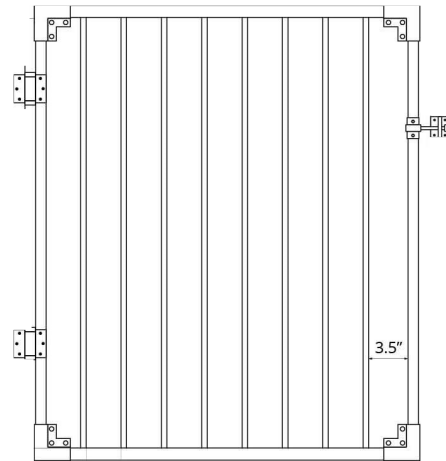

7. Attach included hinges and latch on one side of the uprights and attach to post.

Post Distance Reference

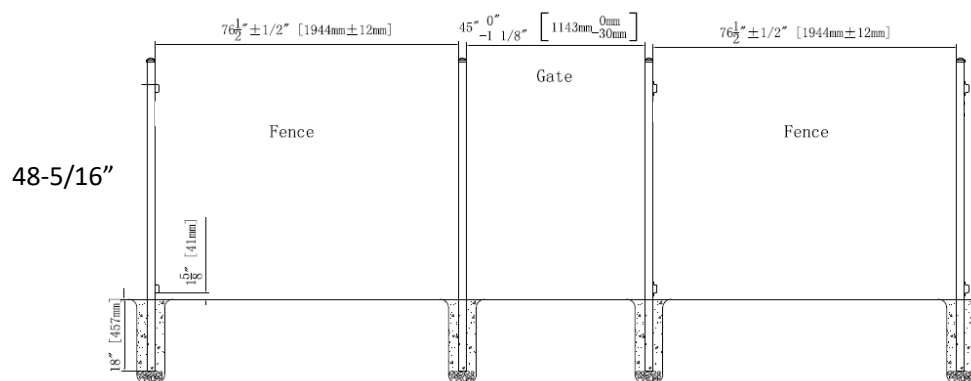



More Accessories Available at www.XSELFENCE.com

Accessories Available

 5'H Post with Flange for Concrete Floor Use Model No. SWP52-F	  Rings 15pc Pack for Fence Panel or Gate Model No. R35Q	
 6.5'H Post for Soil Ground Use Model No. ESR2065	 Drop Rod Kit for Single Swing Gate Model No. SG2118	 Drop Rod Kit for Double Swing Gate Model No. SG4118

INSTALLATION VIDEO AVAILABLE AT: (www.xcelfence.com)