

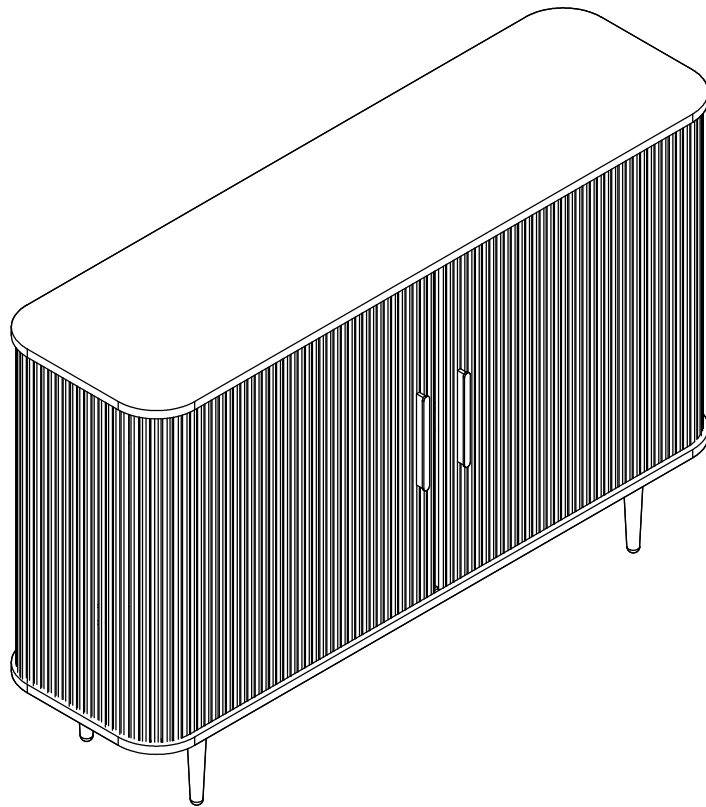
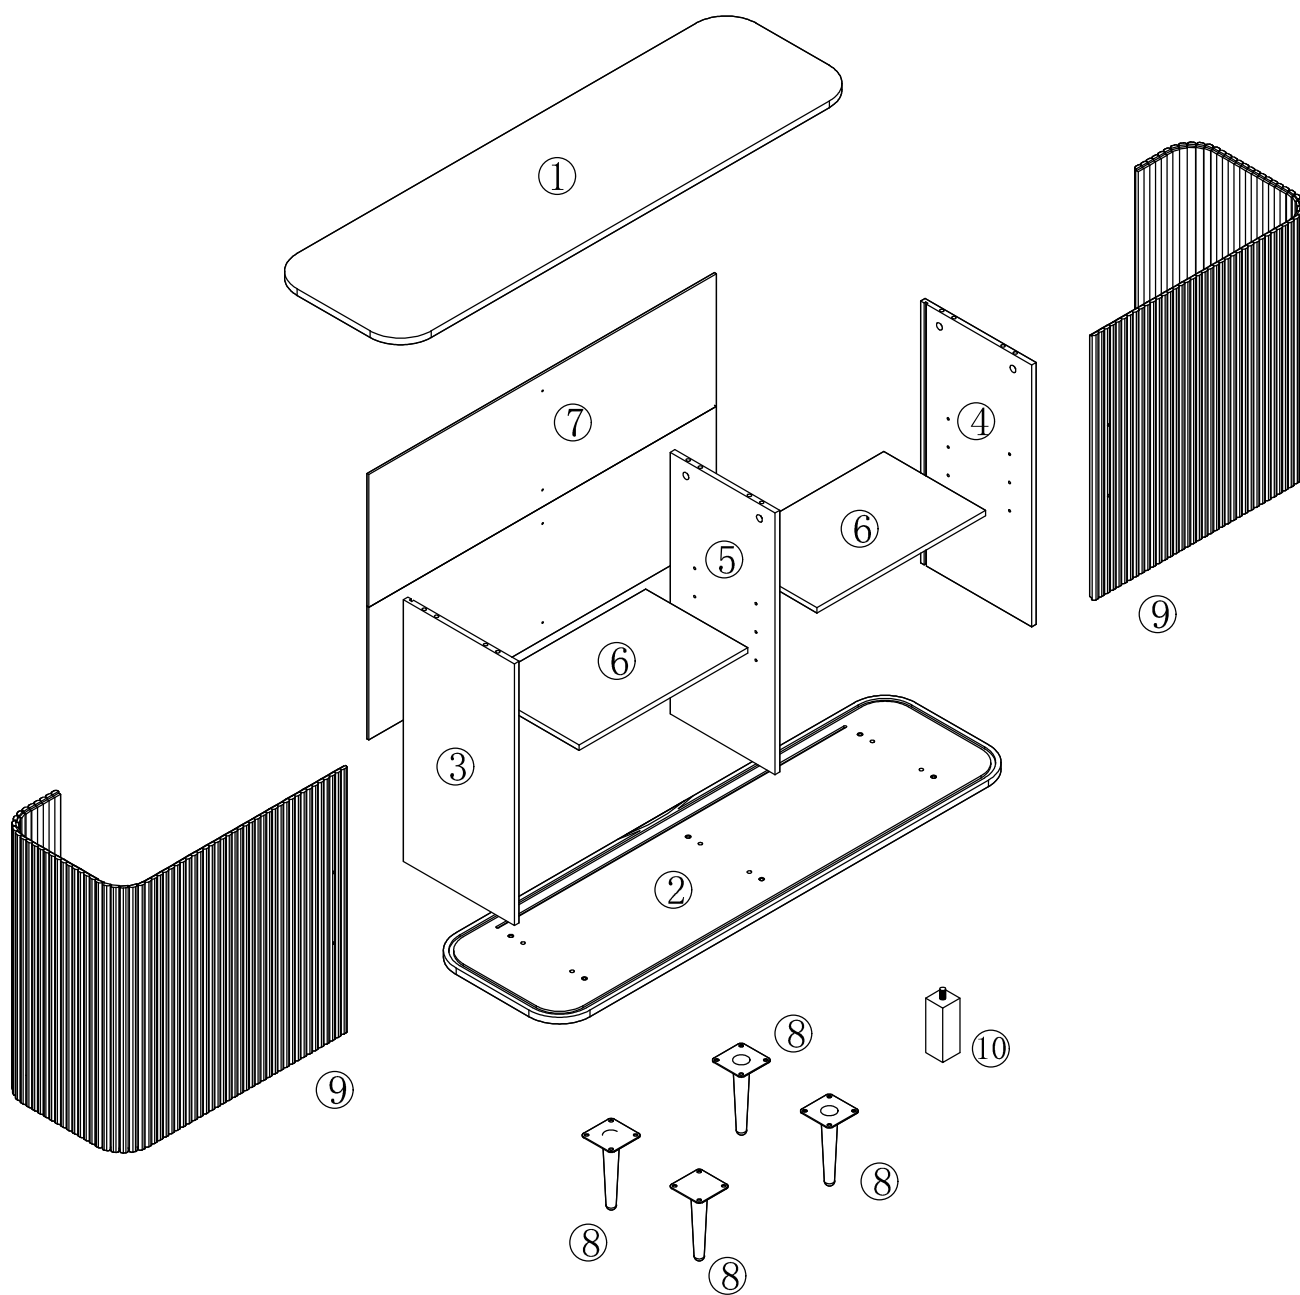
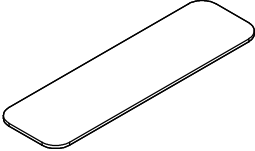
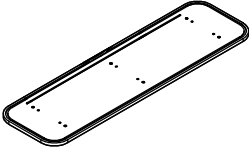



Assembly Instruction









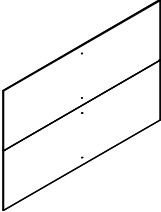










HARDWARE LIST

①  1PC	②  1PC	③  1PC	④  1PC	⑤  1PC
⑥  2PC	⑦  1PC	⑧  4PC	⑨  2PC	⑩  1PC


HARDWARE LIST

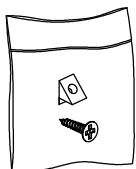A  2PCS	B  6x40mm 6PCS	C  Ø15*9.5mm 6PCS	D  8x30mm 12PCS	E  M6x50mm 6PCS
F  Ø3.5x19mm 4PCS	G  9PCS	H  M6x10mm 16PCS	I  8PCS	J  2PCS
K  1PCS	L  1PCS			



HARDWARE SPARE LIST

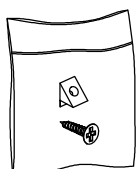B  6x40mm 1PCS	C  Ø15*9.5mm 1PCS	D  8x30mm 1PCS	E  M6x50mm 1PCS	F  Ø3.5x19mm 1PCS
G  1PCS	H  M6x10mm 1PCS	I  1PCS		


This furniture requires two people to assemble and move.
Make sure no parts missing or damaged before assembly.

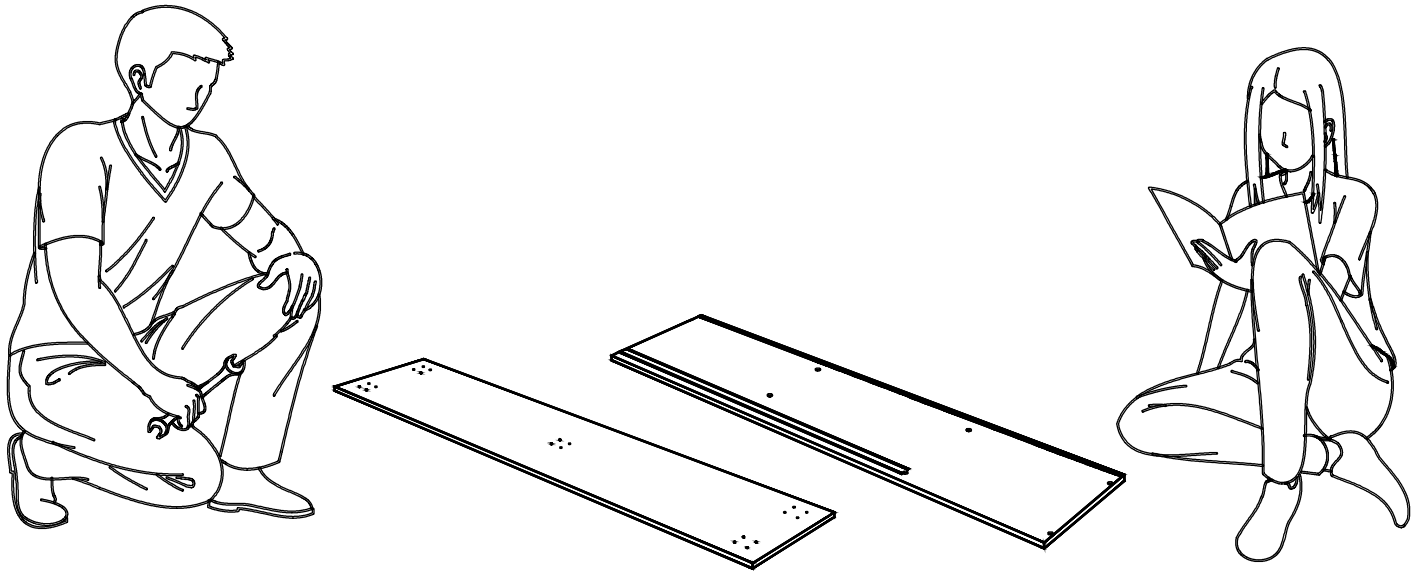




CAM BOLT INSTALLATION AS BELOW

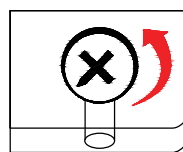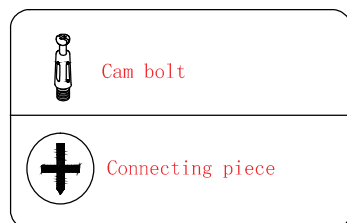


Rotate connecting piece if found in position illustrated above

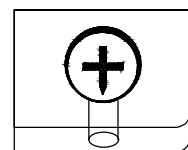


Correct orientation to receive bolts

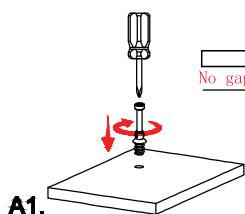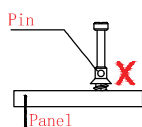


A1.

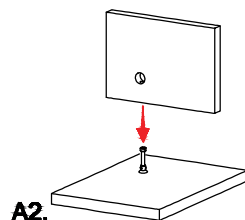

A2.

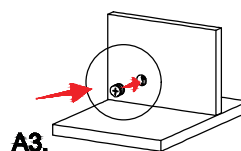

A3.

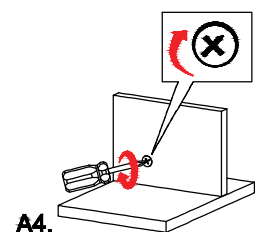


A4.

STEPS


STEP-1

	B x6PCS		D x6PCS
	L x1PCS		

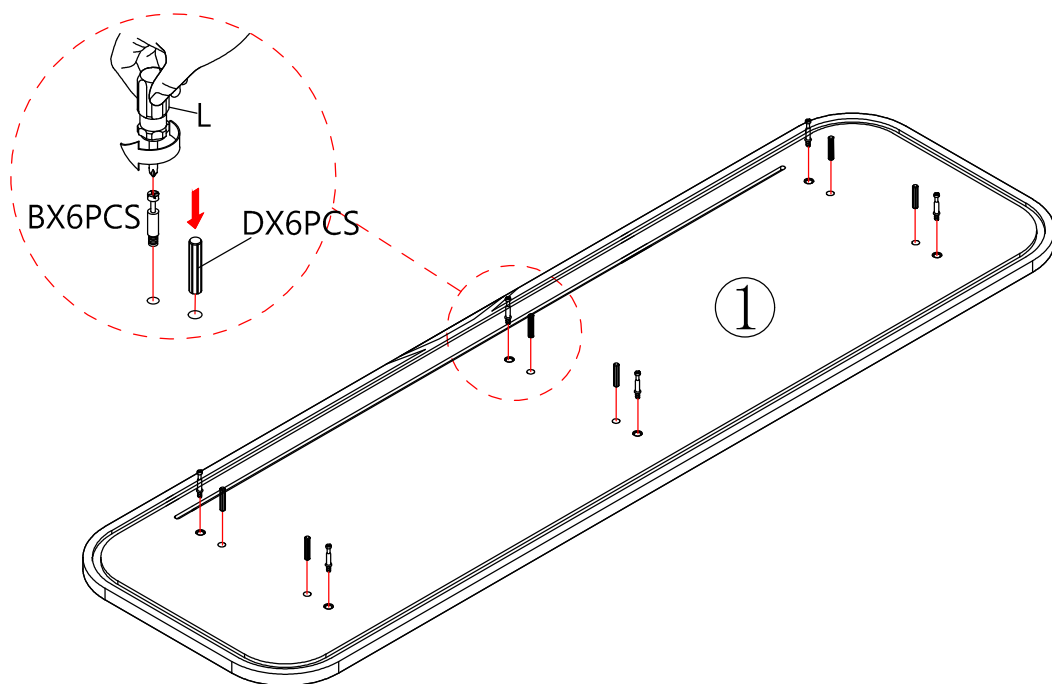


STEP-2

	C x6PCS
	L x1PCS

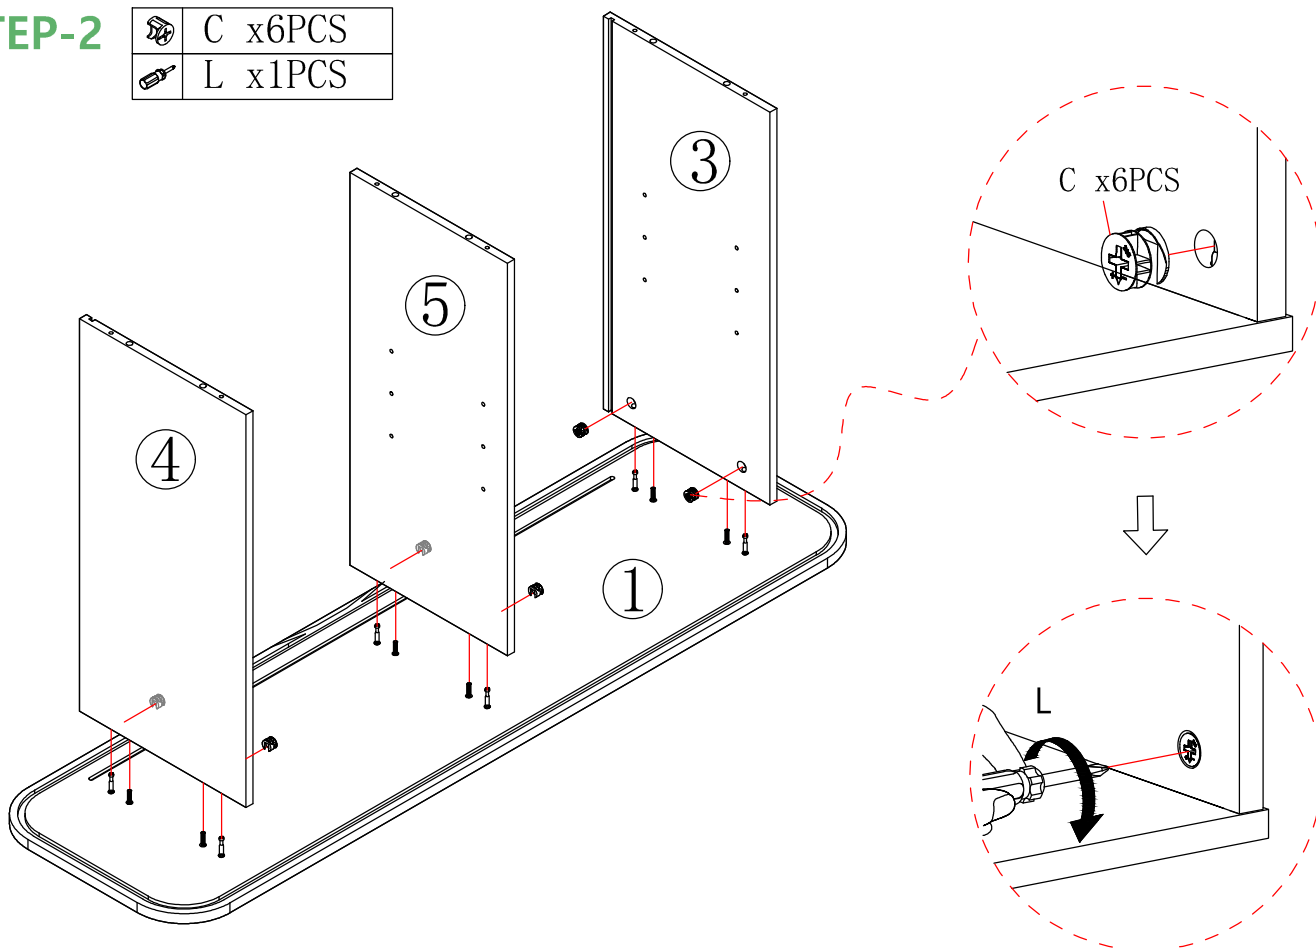


STEP-3

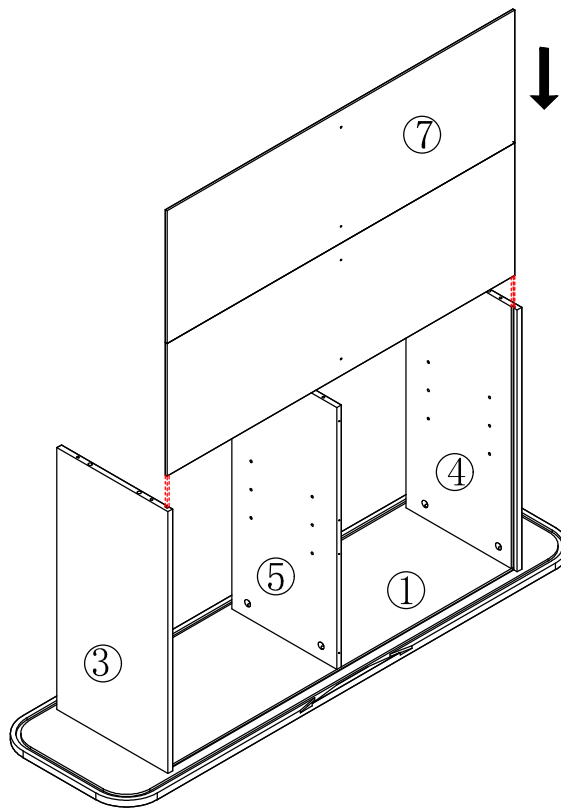

STEP-4


	E x6PCS
	D x6PCS
	K x1PCS

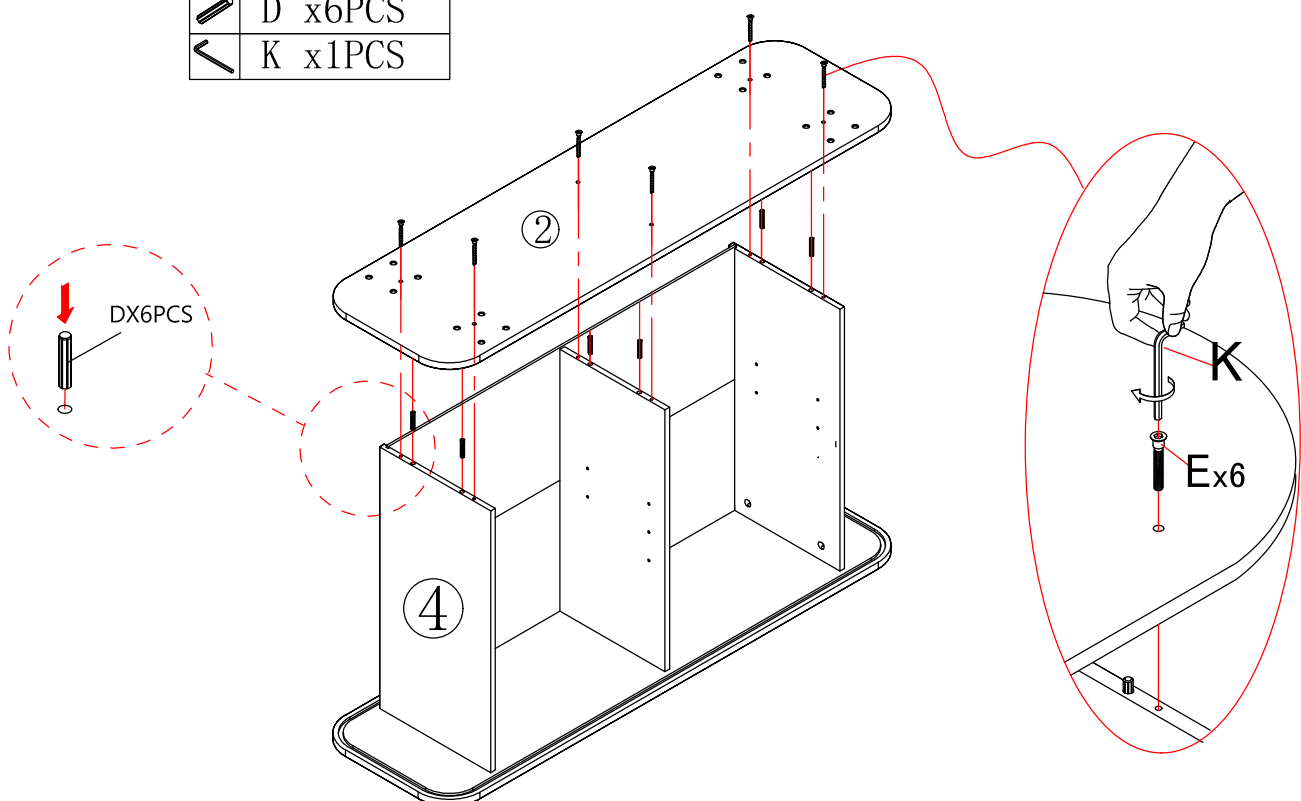

STEPS


STEP-5

	H x16PCS
	K x1PCS

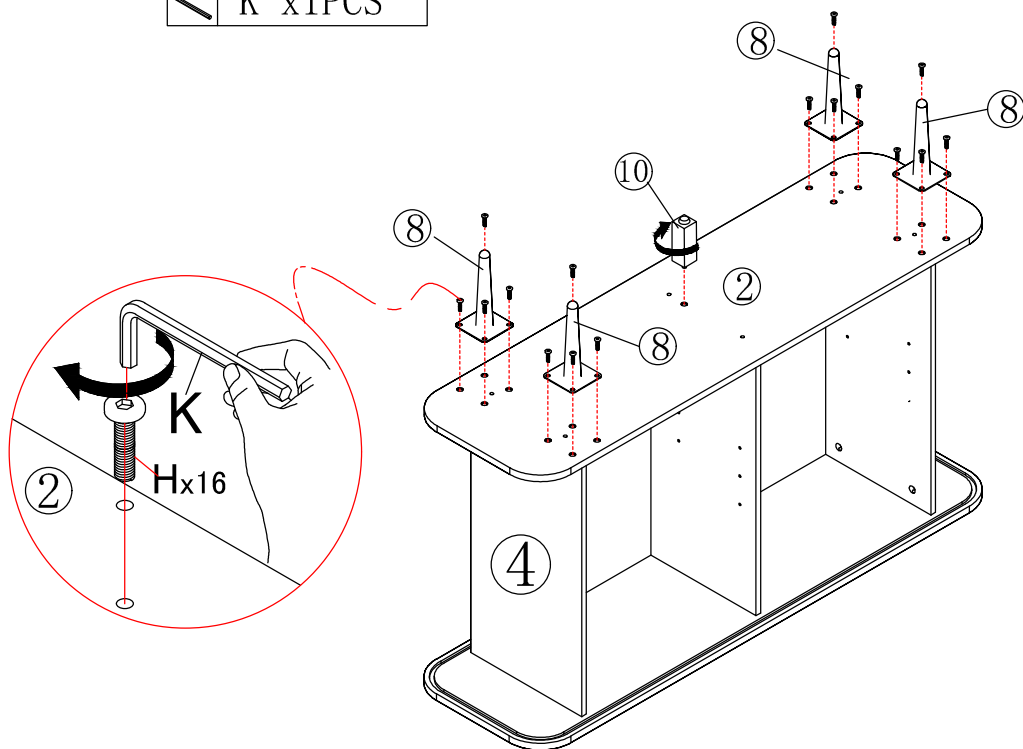

STEP-6


	F x4PCS
	L x1PCS

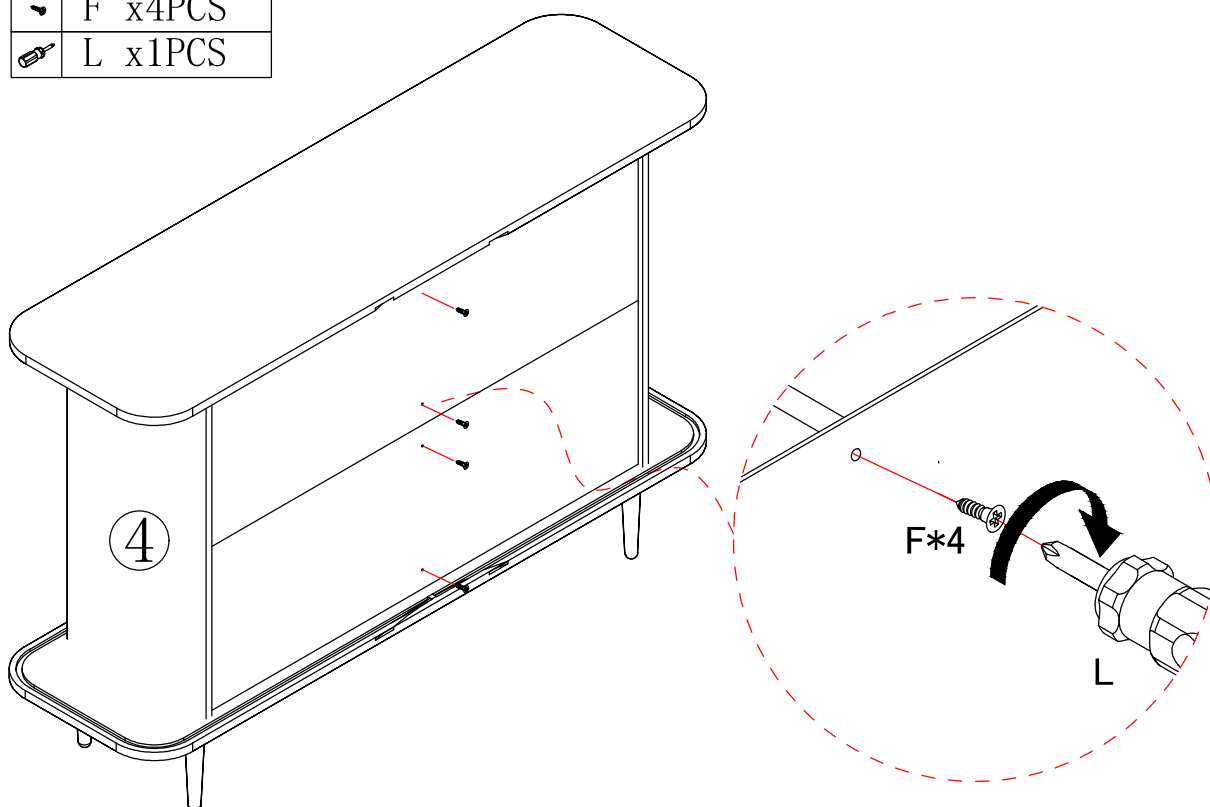


STEPS

STEP-7

	L x1PCS
	A x2PCS

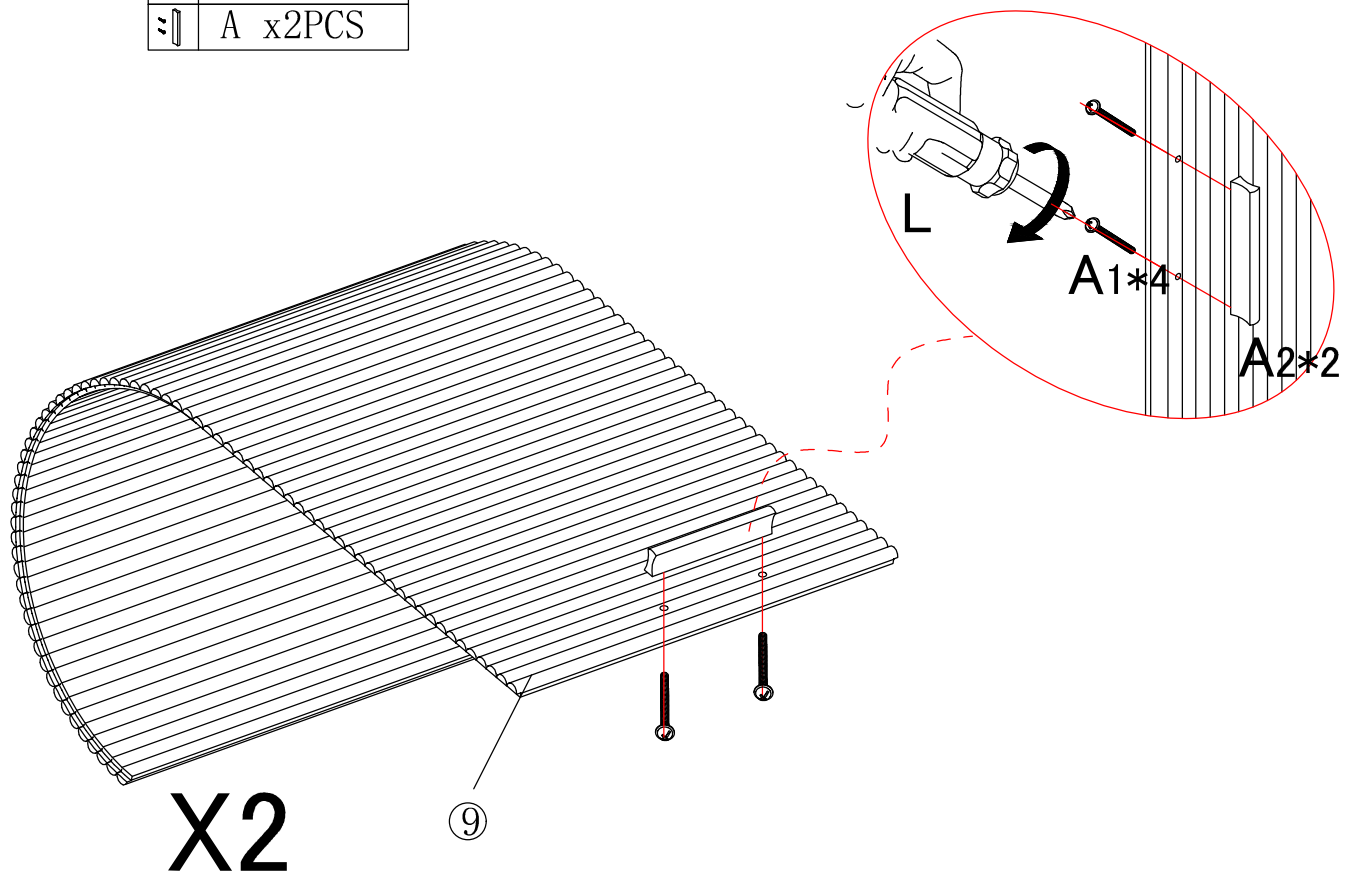


STEP-8

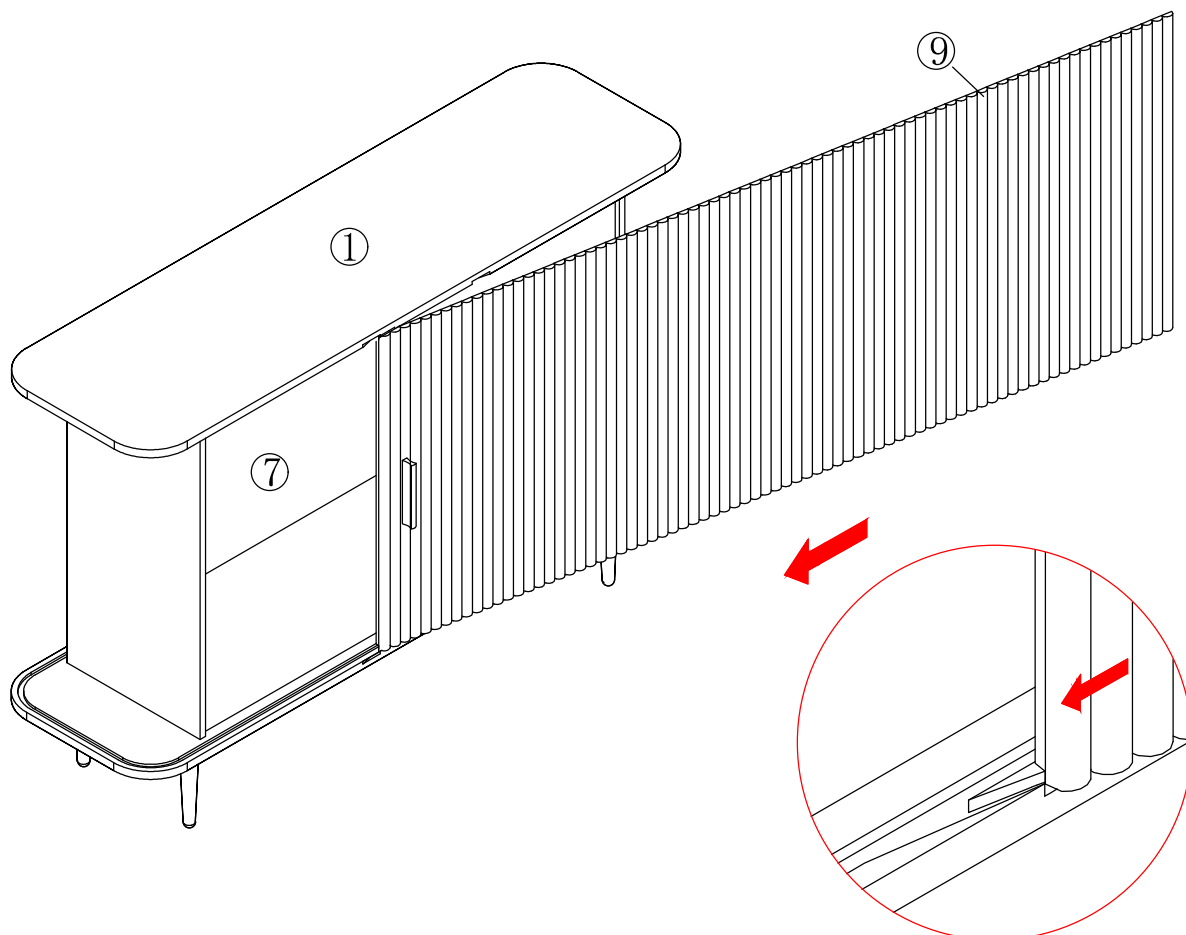


STEPS

STEP-9

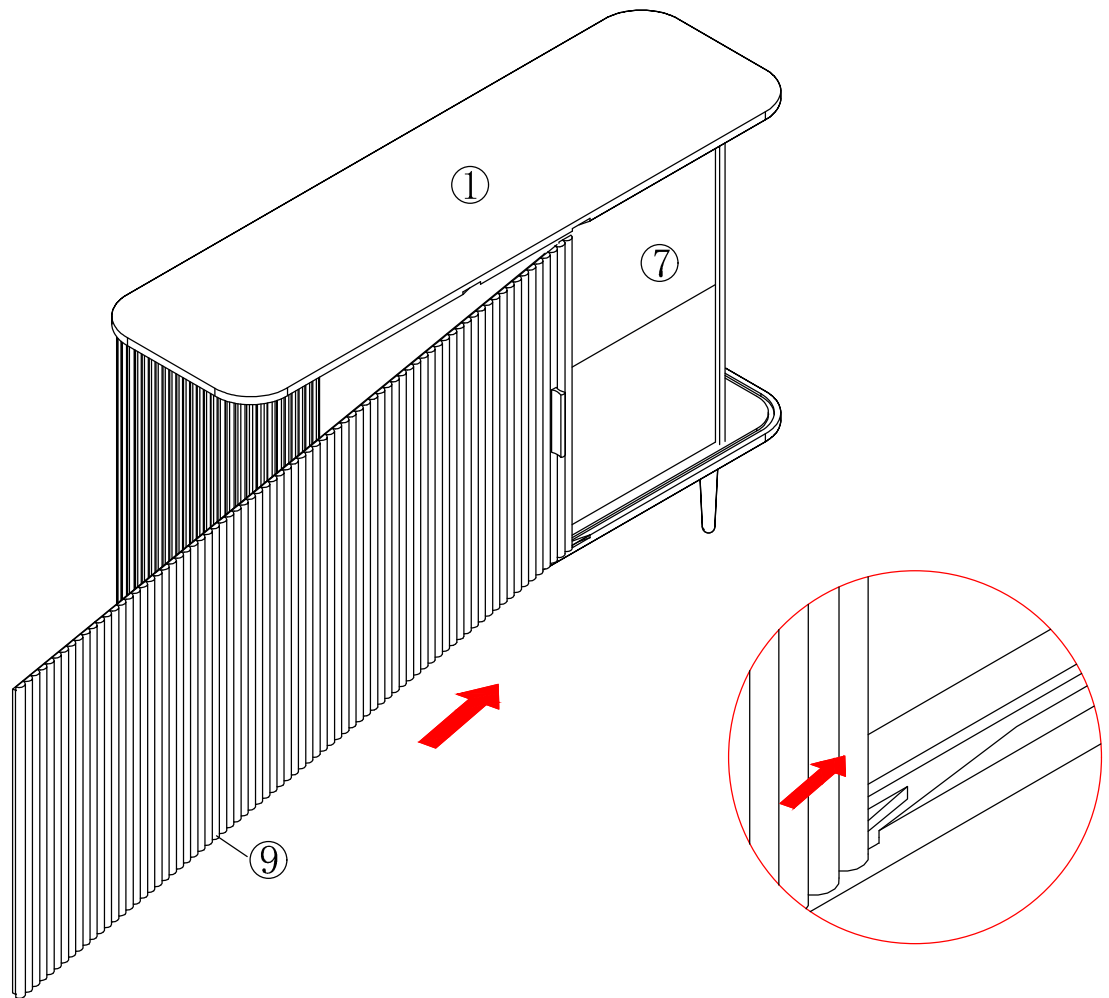

STEP-10



 G x8PCS

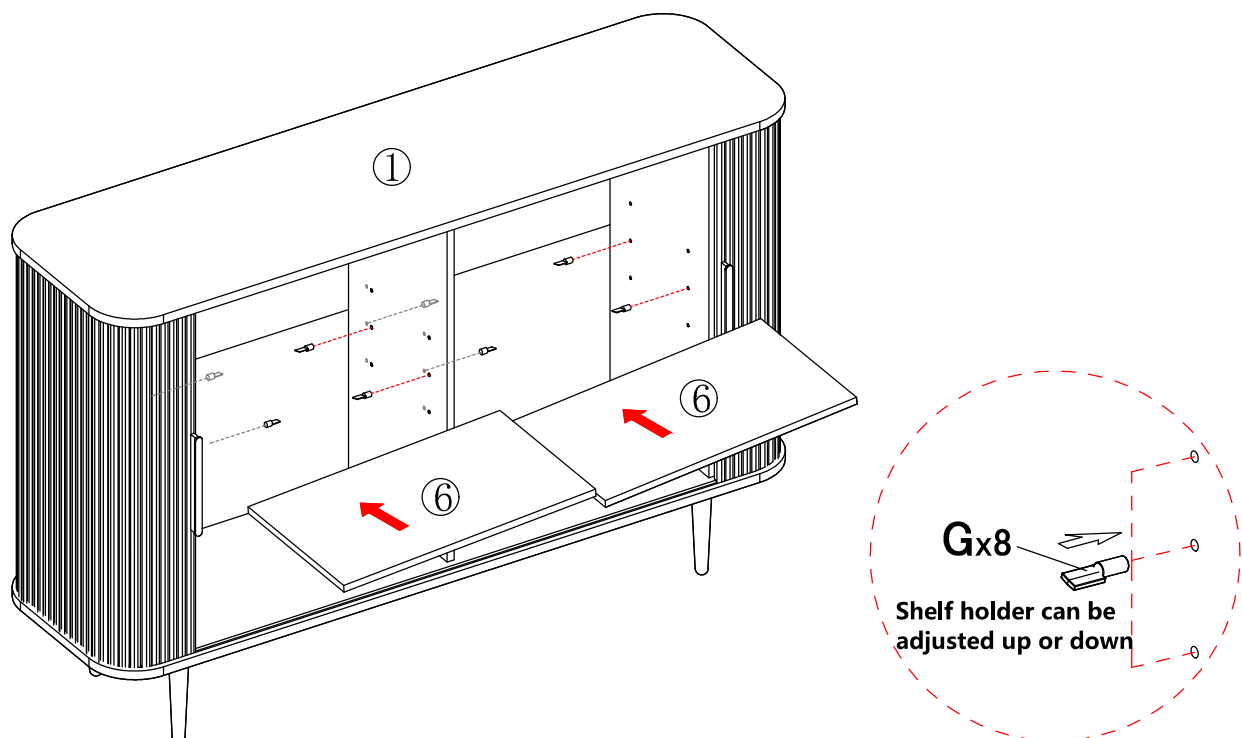

STEPS



STEP-11

	I x8PCS
	L x1PCS

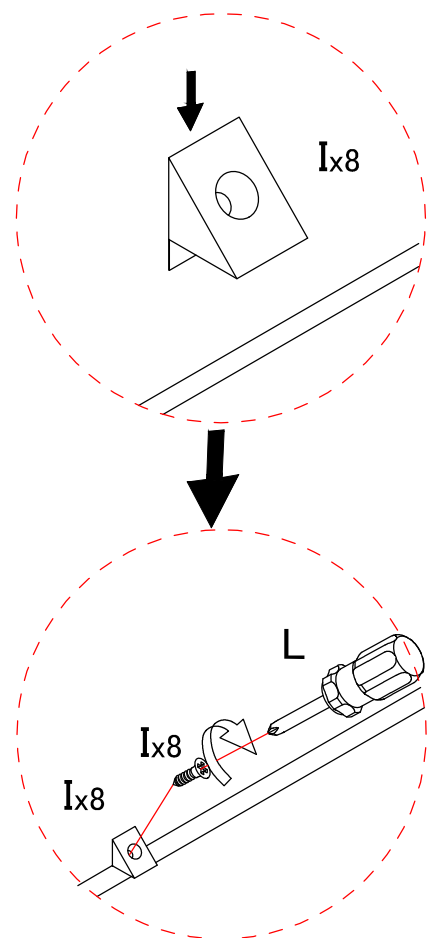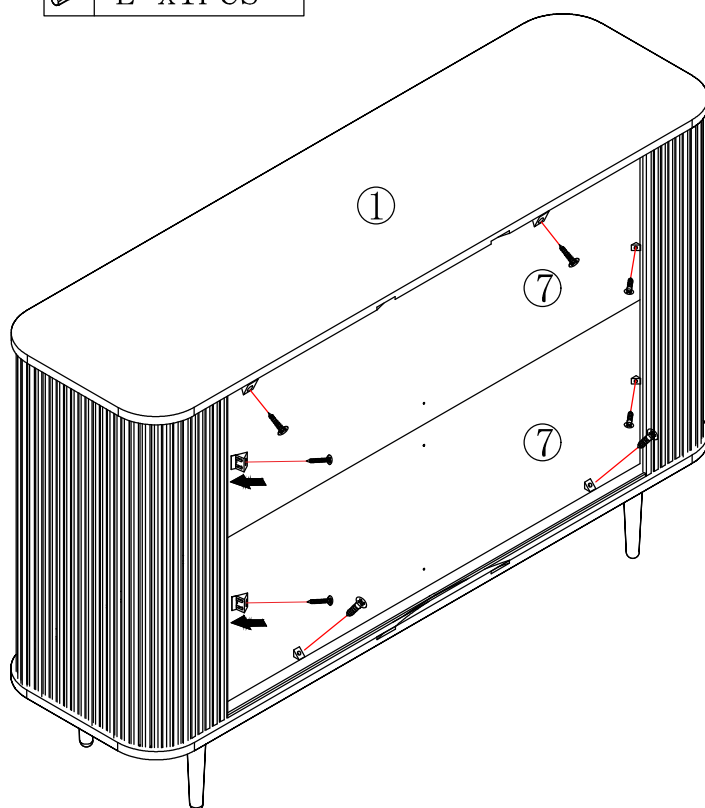

STEP-12


	J x2PCS
	L x1PCS
	G x1PCS

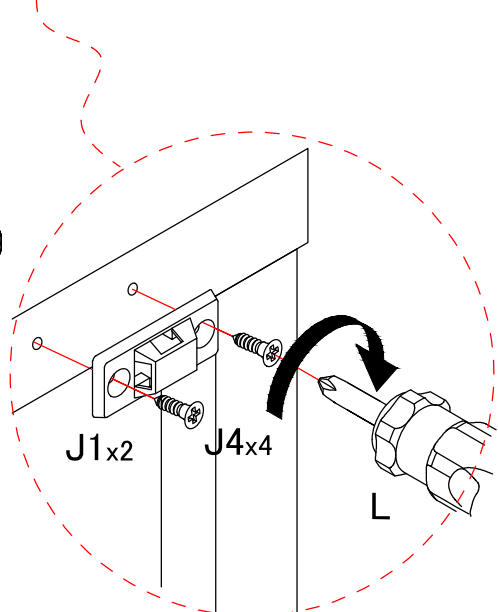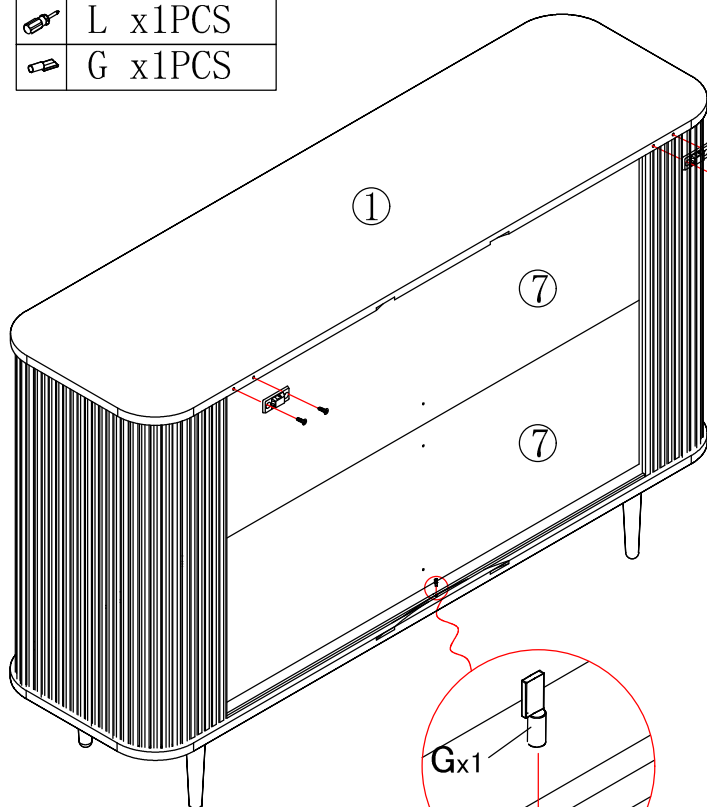


STEPS

STEP-13

	J x2PCS
	L x1PCS

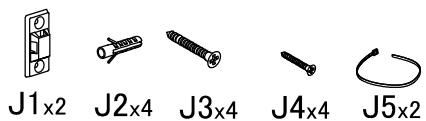

NOT PROVIDED

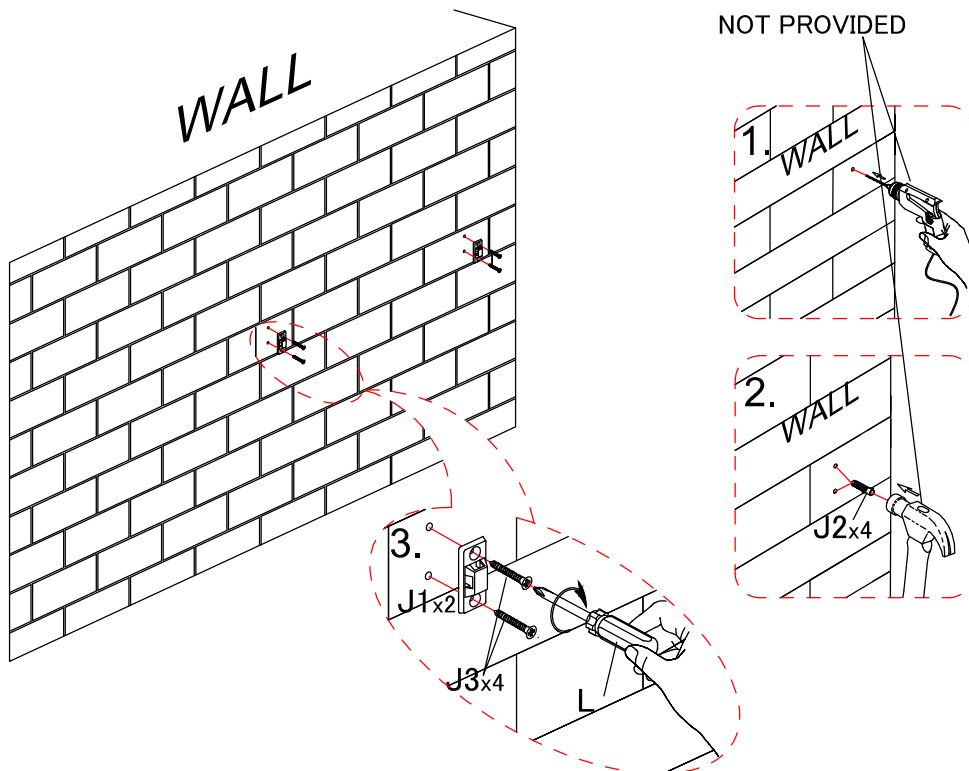

STEP-14

	J x2PCS
	L x1PCS

WALL

