

Installation steps


Step 7: Assemble the drawer according to the diagram.

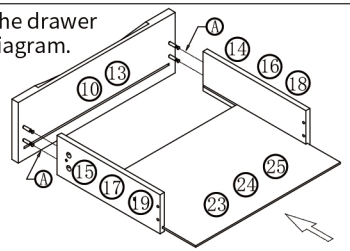

Note: The drawer with a wider drawer surface is the dressing stool drawer.

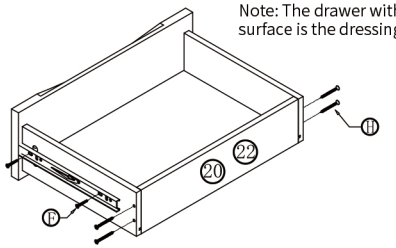


Step 8: Install glass and drawers.

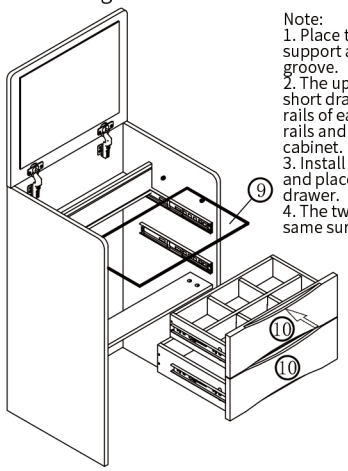

Note:
1. Place the glass on the shelf support and push it into the groove.
2. The upper drawer is the short drawer side. Match the rails of each drawer to the rails and push it into the cabinet.
3. Install the grid frame slot and place it in the upper drawer.
4. The two drawers have the same surface.


Step 9: After installing the dressing stool drawer, push it into the cabinet.

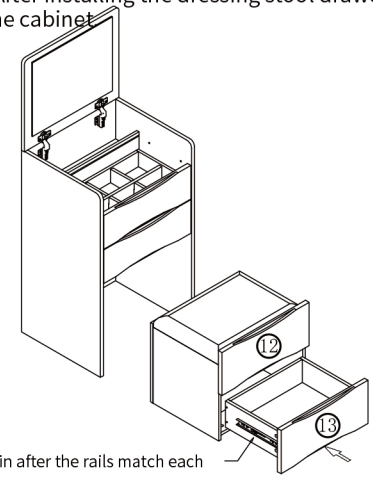


Push in after the rails match each

Step 9: After installing the dressing stool drawer, push it into the cabinet.


Note: 14" rail is installed here, the opening is to the left, and the vertical hole corresponds to the guide hole.

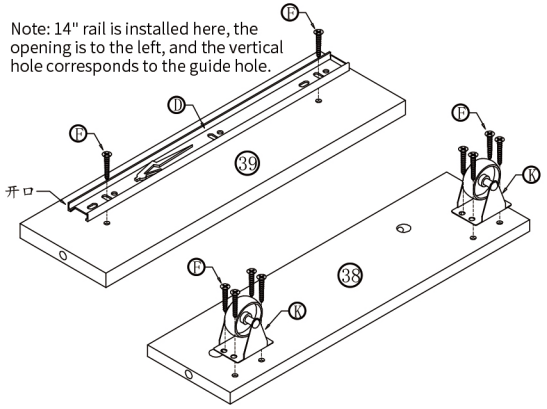

Step 11: Connect the side cabinet layers and bottom panels to the rails.

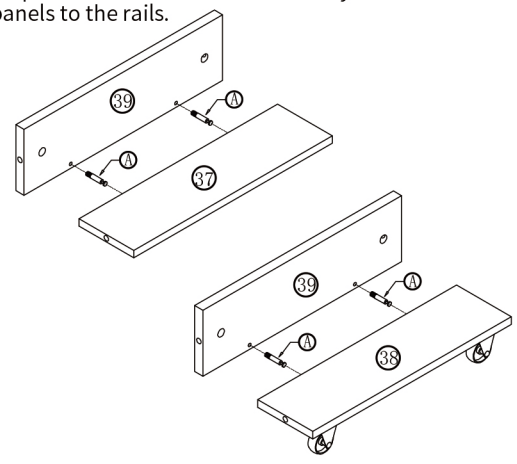


Step 12: Connect the side cabinet layers, bottom panels and rails to the lower back panel of the side cabinet.

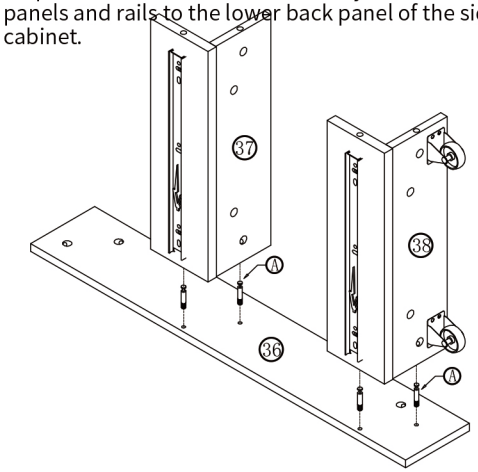


Installation steps


Step 13: Connect the side cabinet panel to the lower back panel.

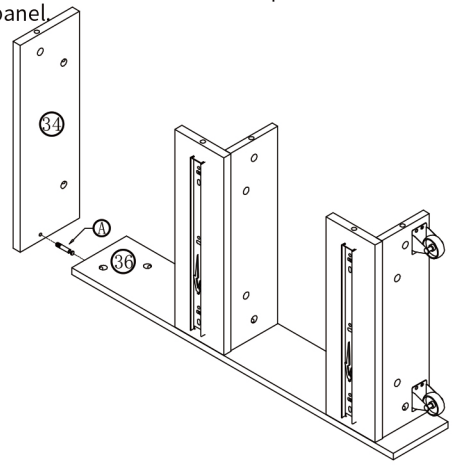


Step 14: Install the front baffle of the side cabinet.

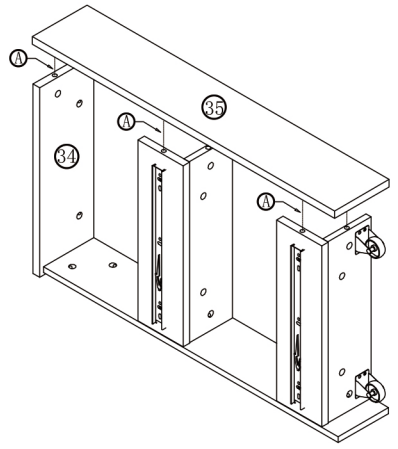


Step 15: Install the side cabinet upper back panel

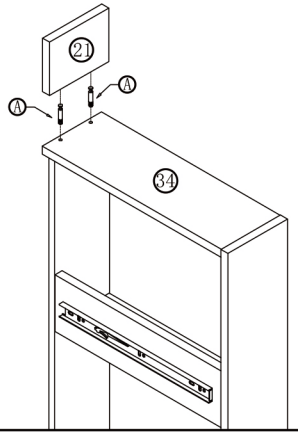

Step 16: Install the side panels of the side cabinet.

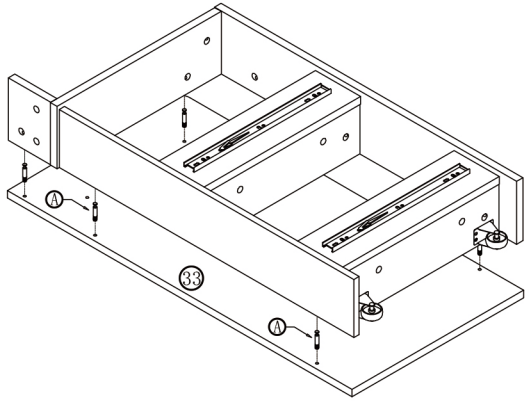

Step 17: Install the rail on the right side of the main cabinet.

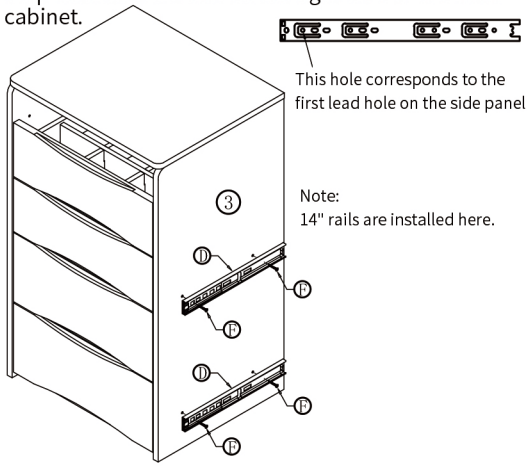

Note:
14" rails are installed here.

Step 18: Install the side cabinet.

Note: First pull out the rail on the side panel to make it match the rail on the side cabinet, and then push the side cabinet in.

