
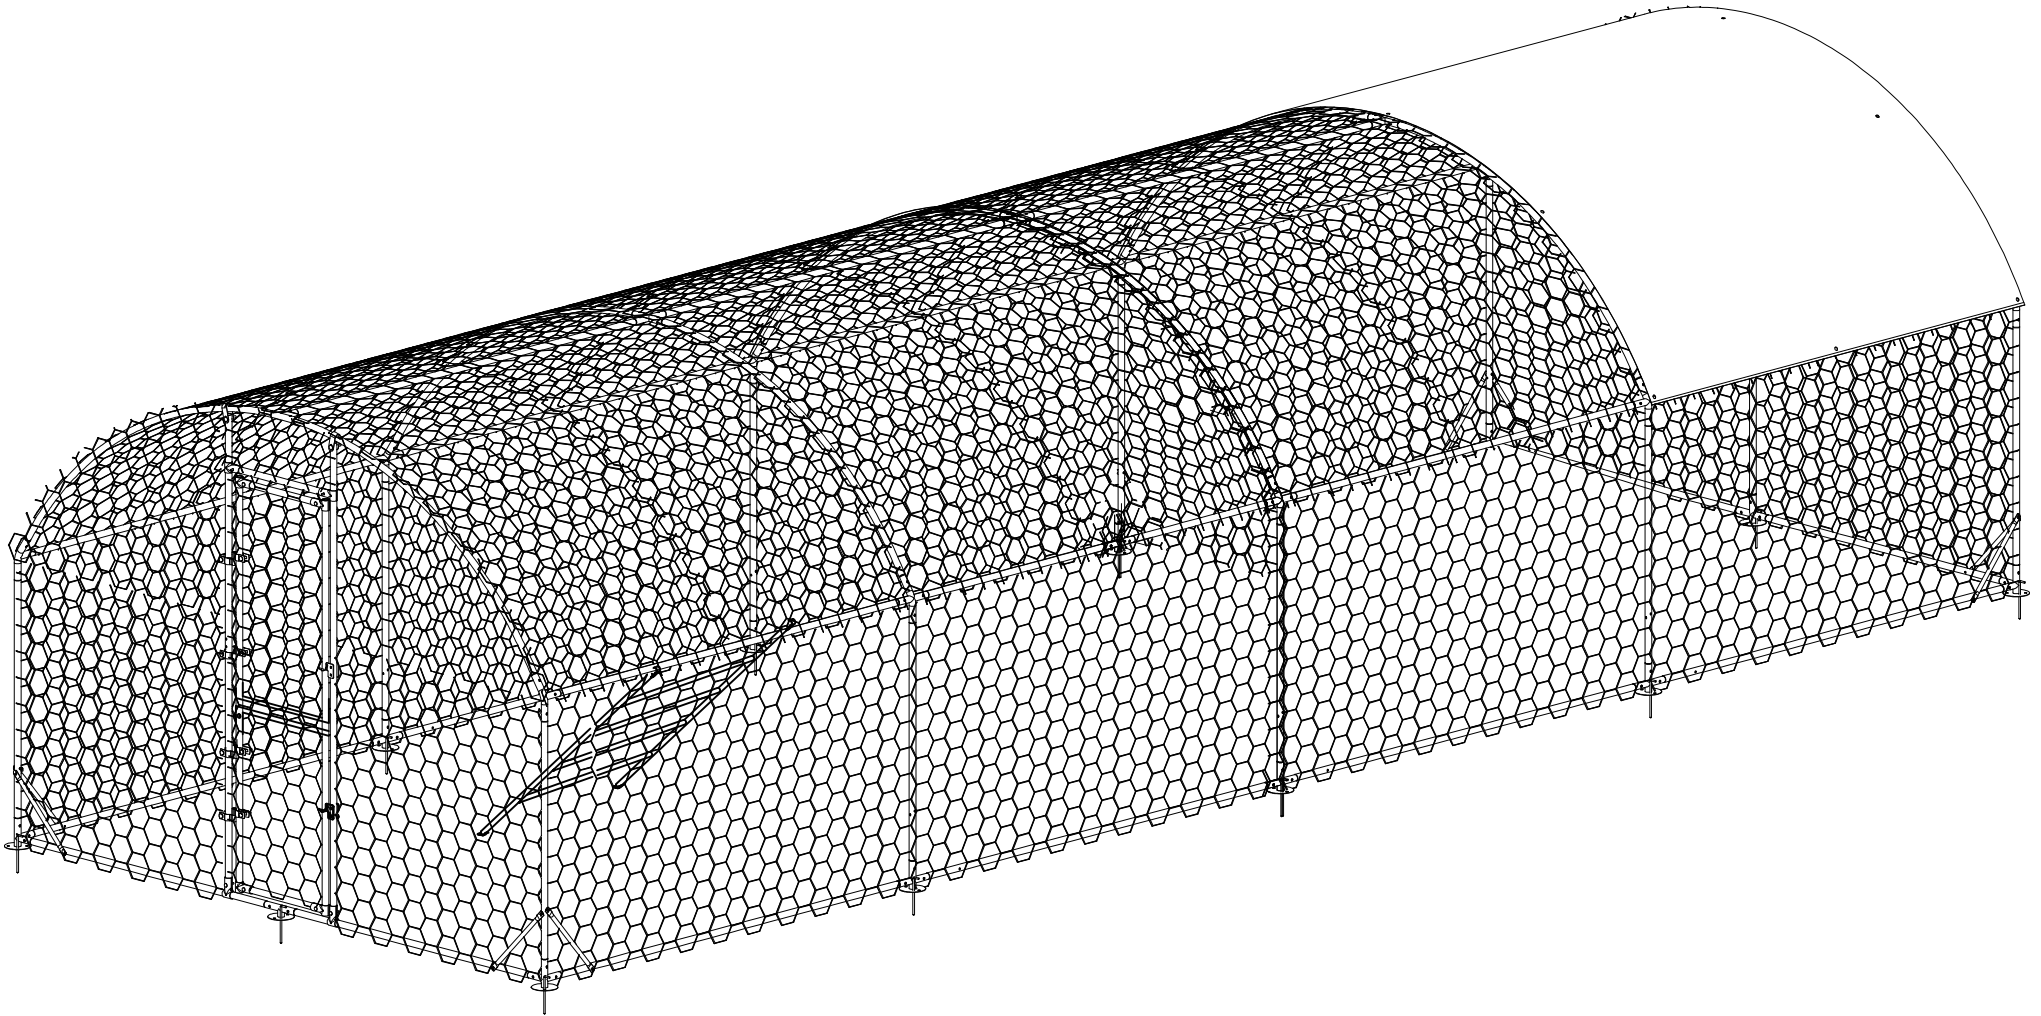
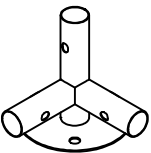
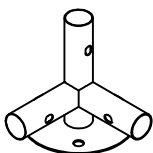
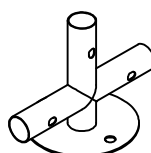
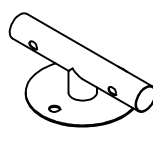










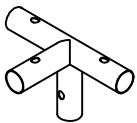







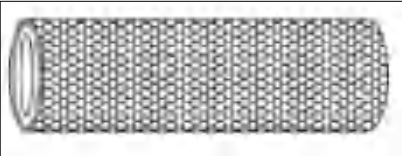



CHICKEN COOPS INSTRUCTIONS

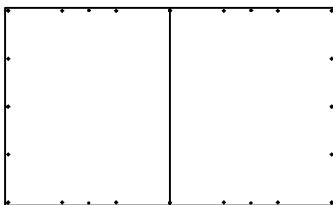


- 1.Recommend multiple people to assemble.
- 2.Do not over torque screws an bolts.
- 3.Do not install on flammable place in case of fire.
- 4.Use on a flat ground.
- 5.Gloves must be worn during assembly.

IMPORTANT.RETAIN FOR FUTURE REFERENCE


NO.	PIC	TYB	PCS								
1		1364mm	4	A1		A2		A3		A4	
2		1919mm	12	2		2		7		1	
3		1919mm	8								
4		1049mm	10								
5Y		1654mm	10	B6		B7		B8		B9	
6Y		1715mm	2	4		6		1		3	
7		515mm	1								
8		1881mm	1								
9		742mm	4	B10		C		D		Z	
10			4	1		8		4		1	
11		385mm	8								
12			2								
13			4	E1		E2		F1		F2	
			W2					YP			
			1	S		L		K		R	
				14		8		28		12	
				G		M8*40		M6*40			
				L1		S1					
				M6*35		4#		1			

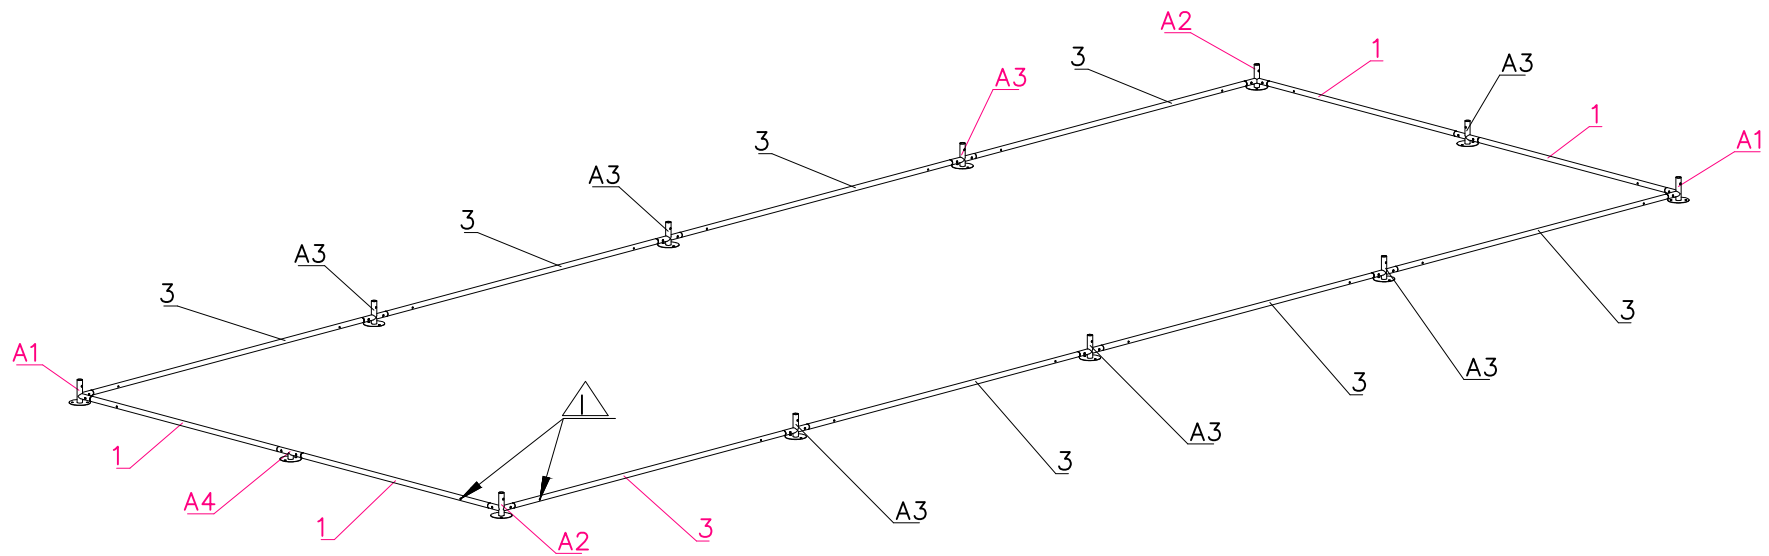


NO.	PCS
A1	2
A2	2
A3	7
A4	1
1	4
3	8

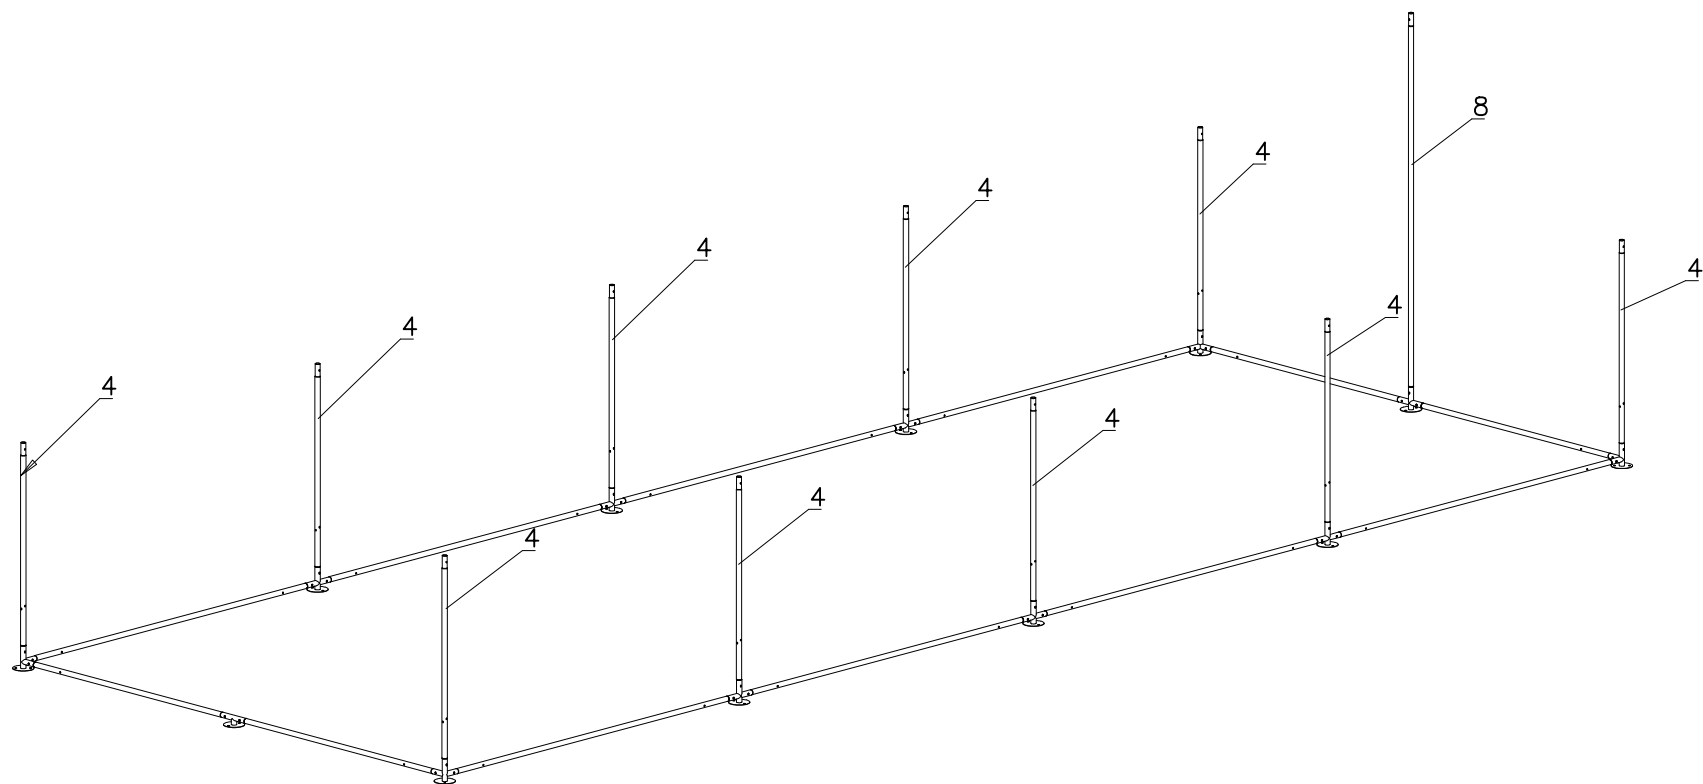

NO.	PCS
4	10
8	1

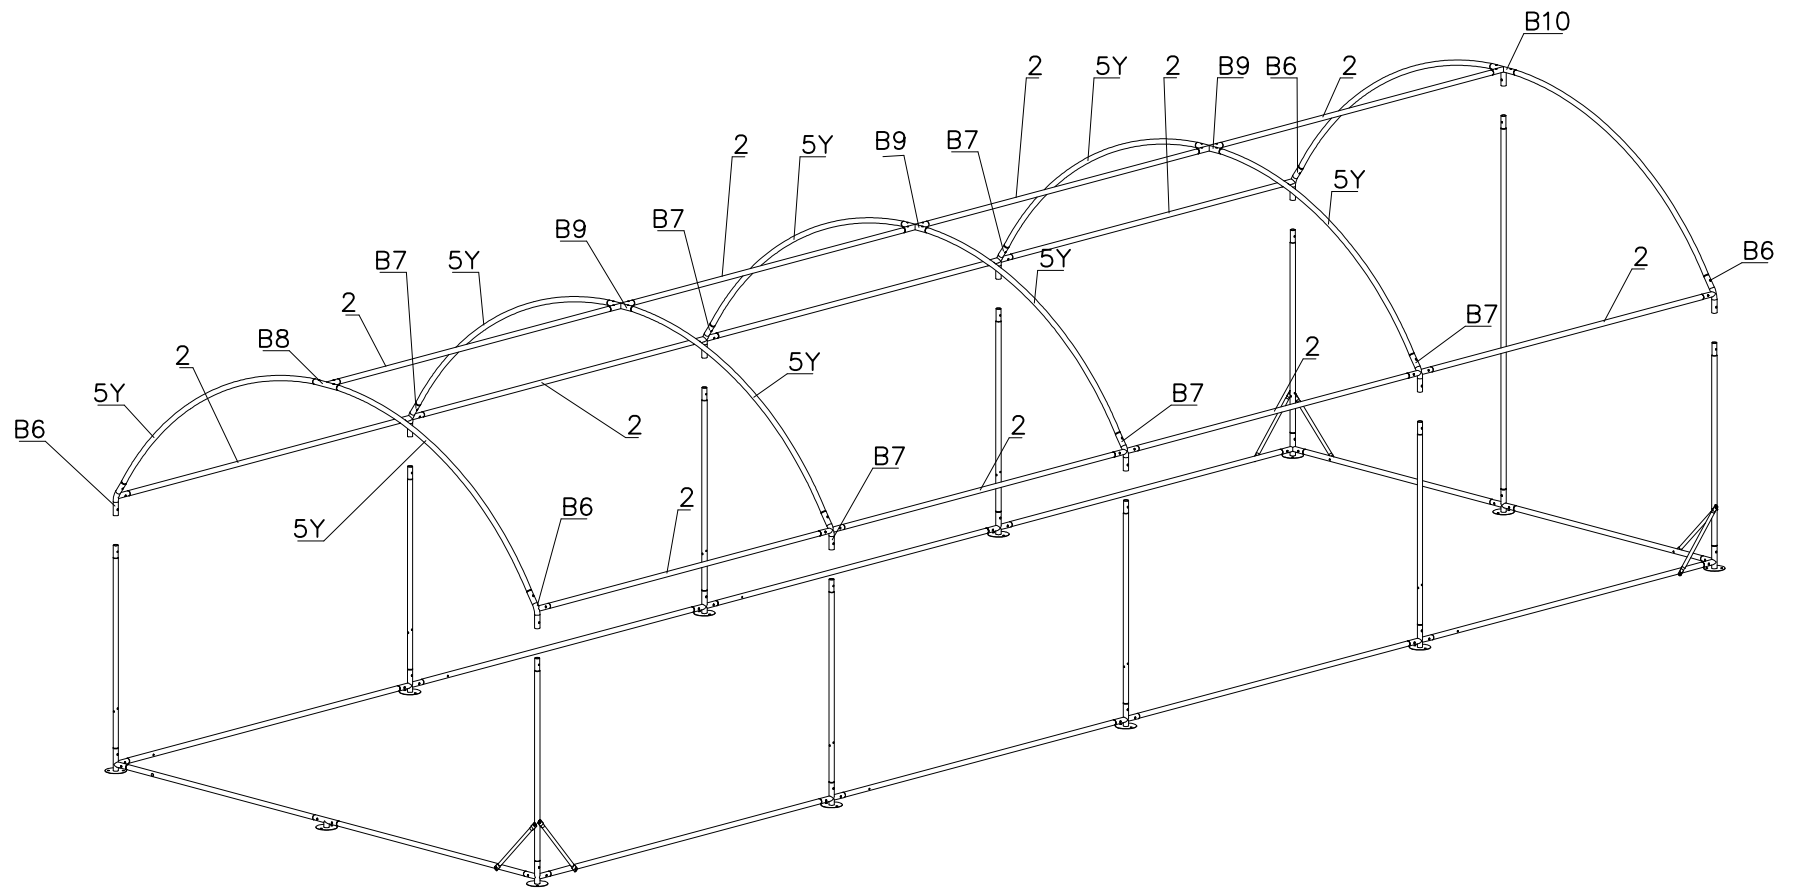


NO.	PCS
2	12
5Y	10
B6	4
B7	6
B8	1
B9	3
B10	1

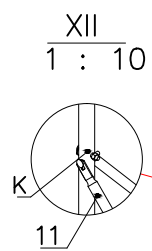




NO.	PCS
11	8
K(M6*40)	16

NO.	PCS
L1 M6*35	8
S1 4#	1
12	2
13	4
D	2
L	2

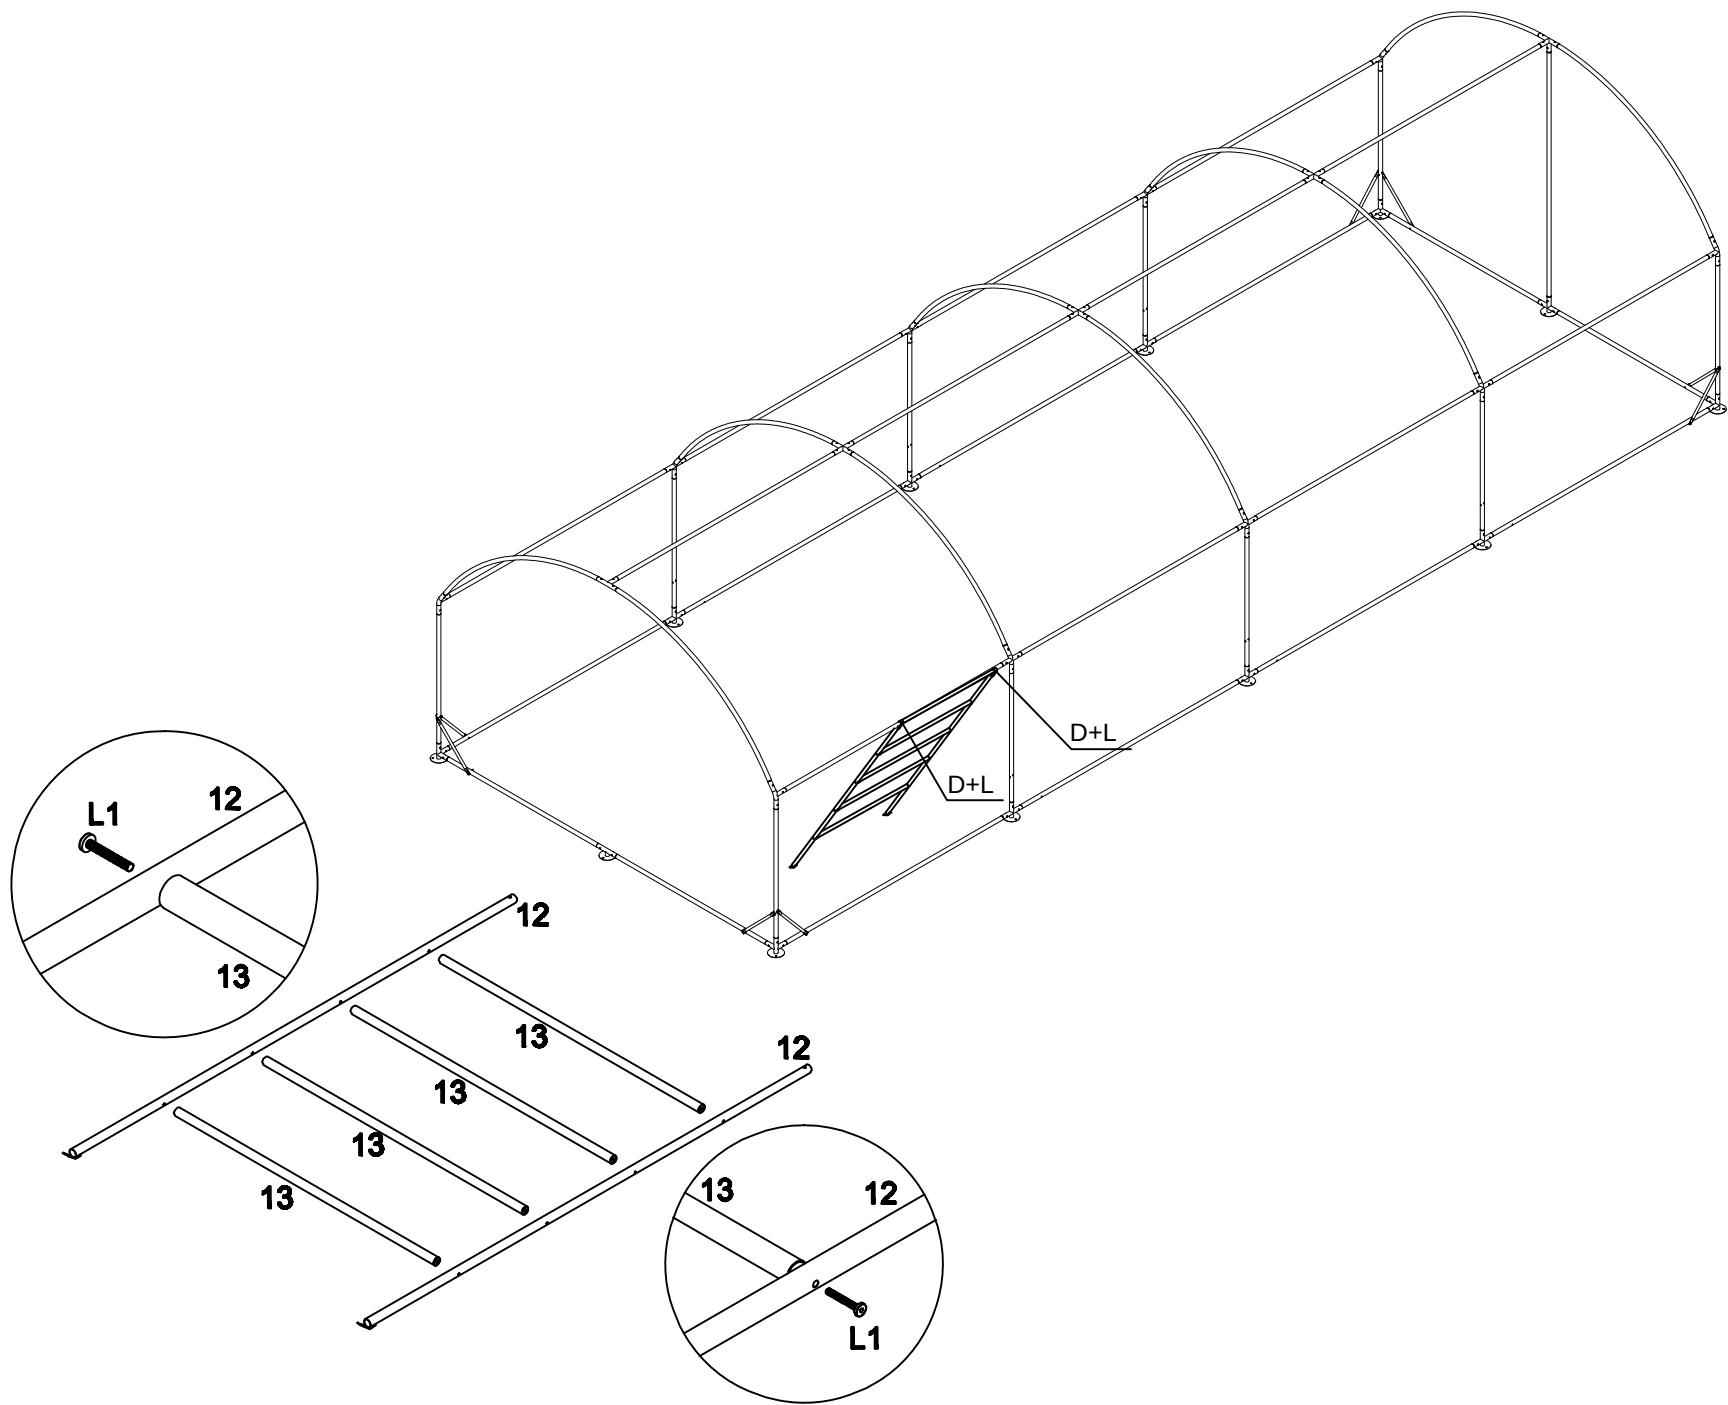


NO.	PCS
D	2
C	8
6Y	2
7	1
E2	4
F2	4
F1	2
L	2
K	12

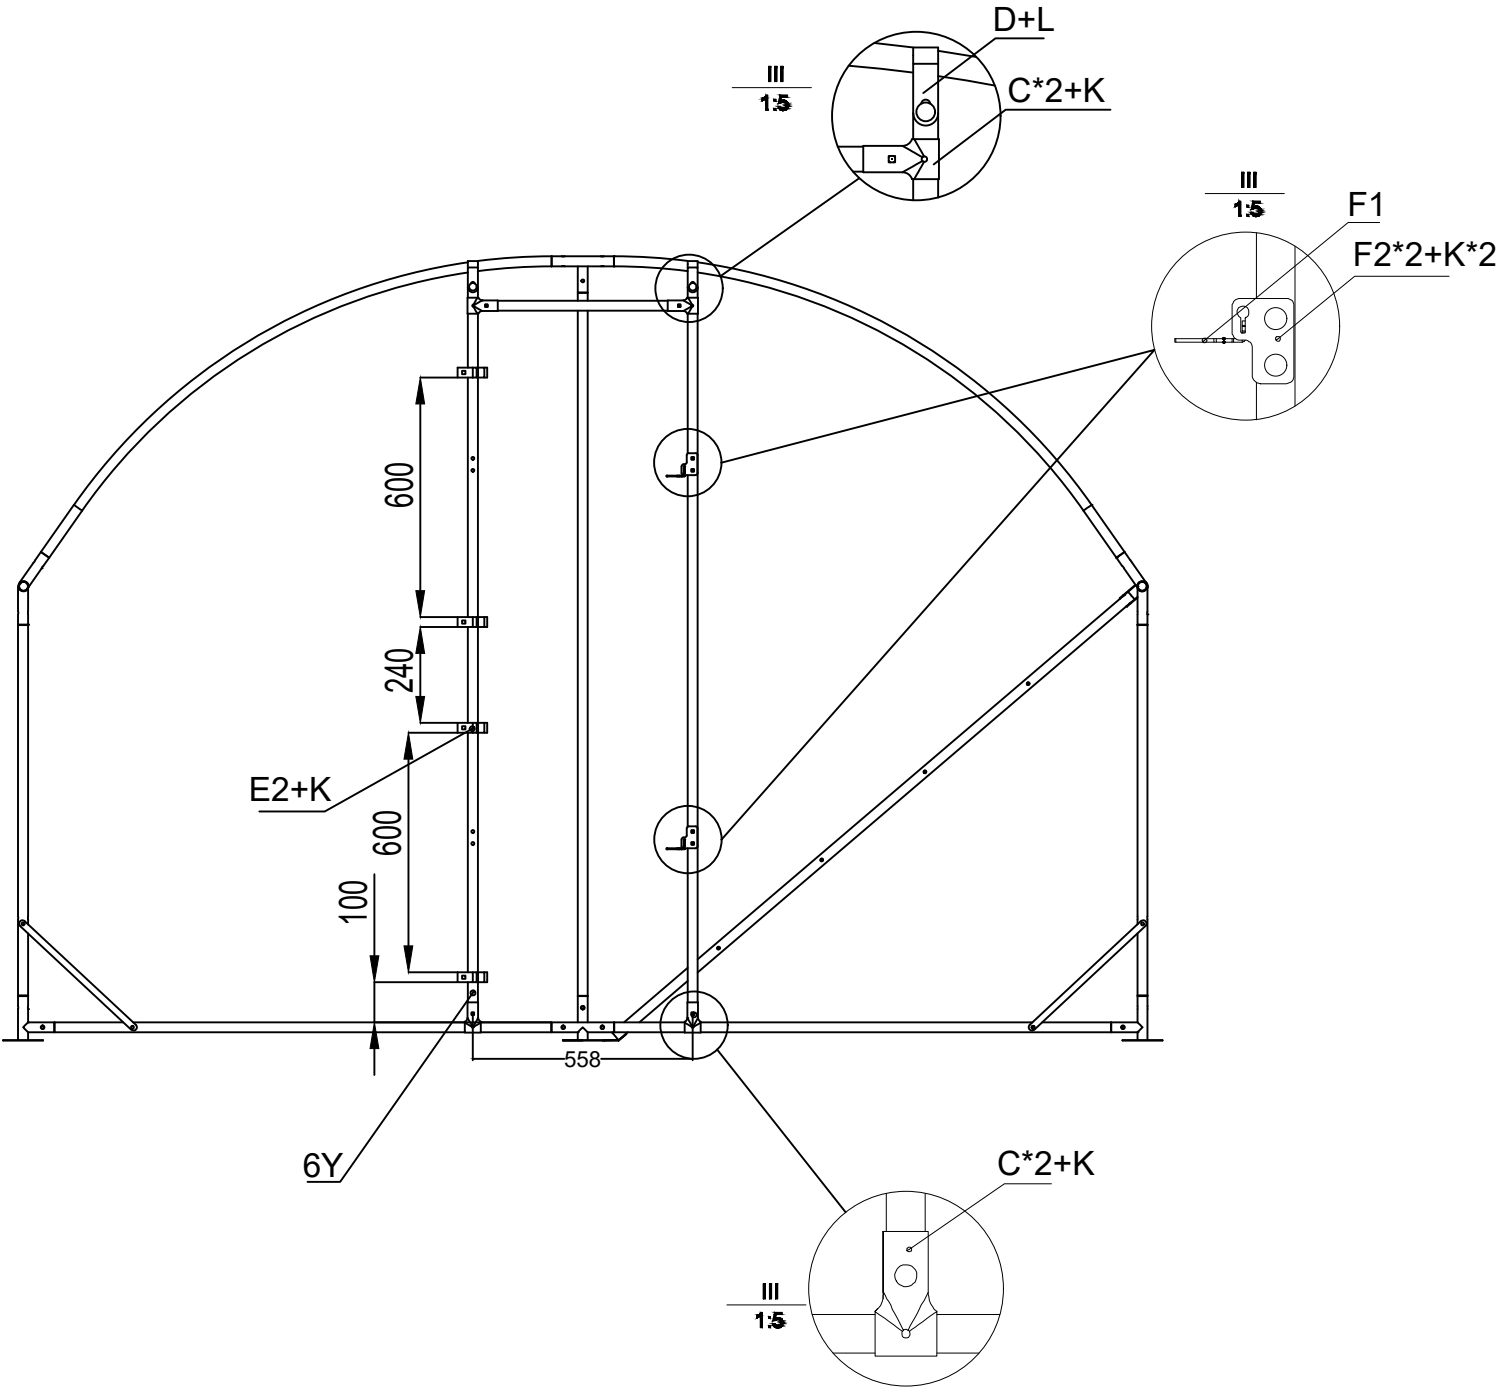

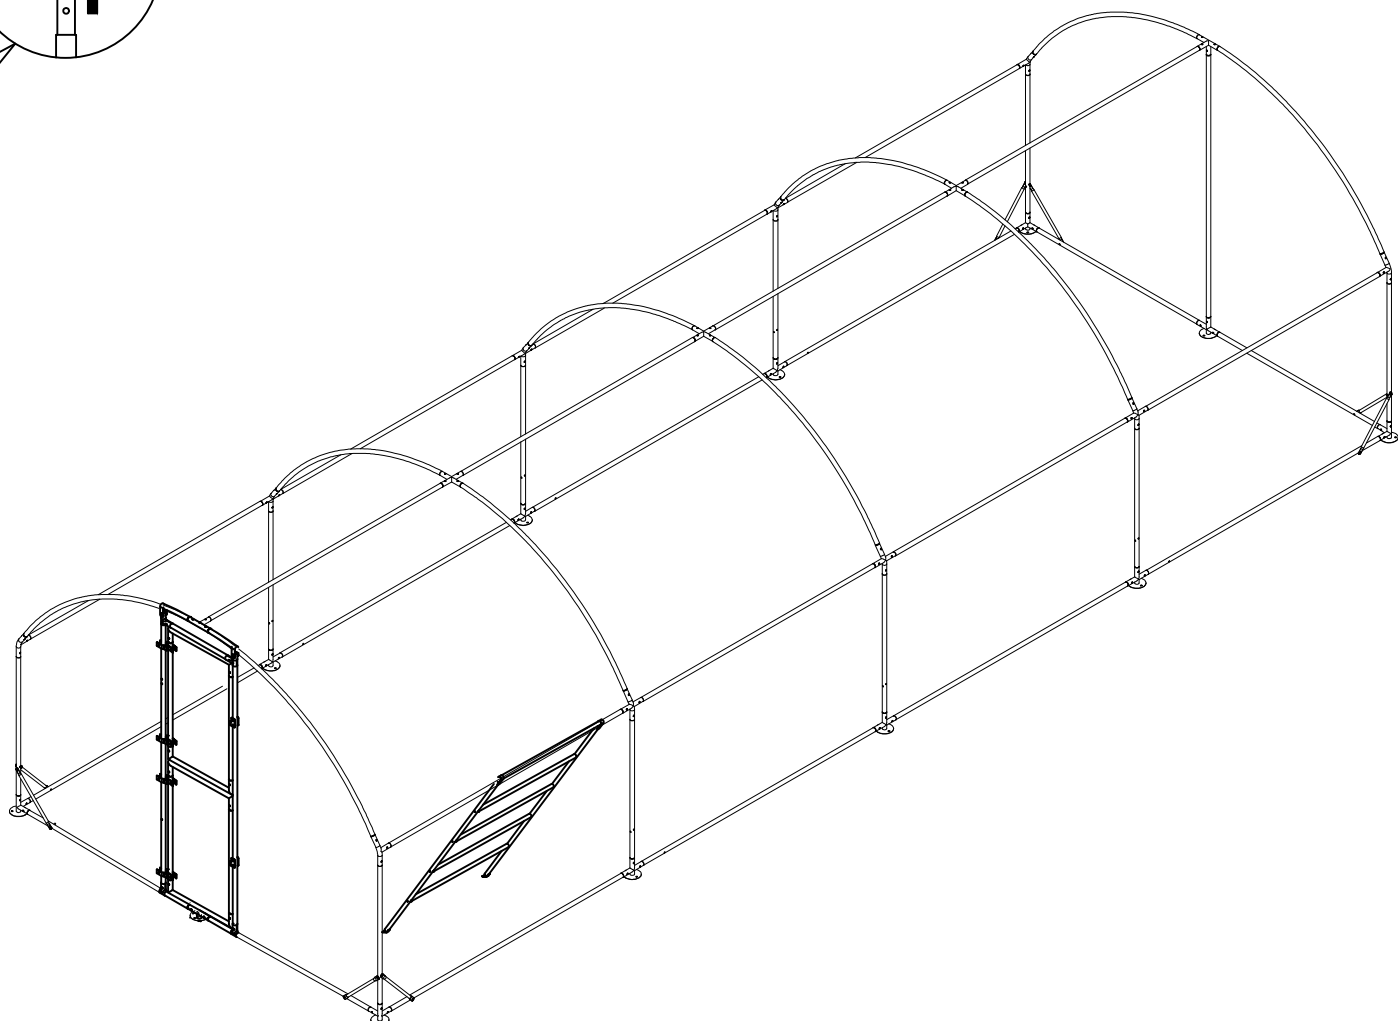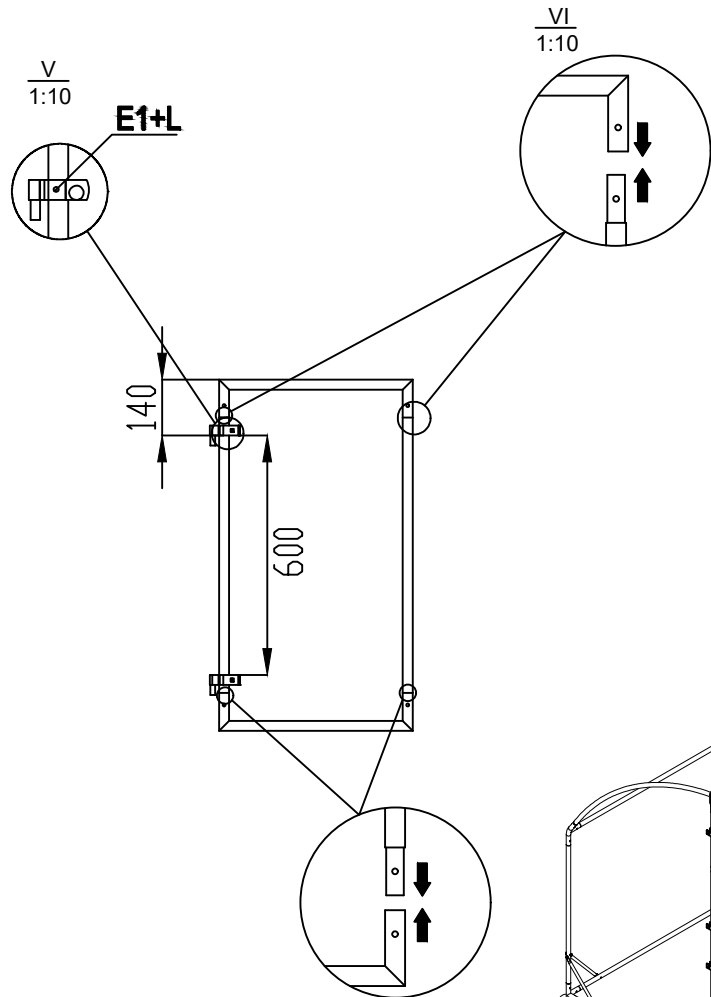


NO.	PCS
10	4
9	4
E1	4
L	4




W2

1

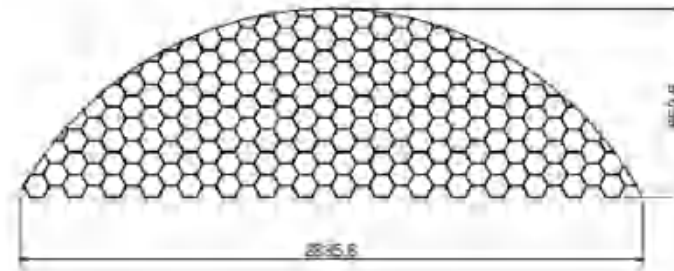


WY1

1

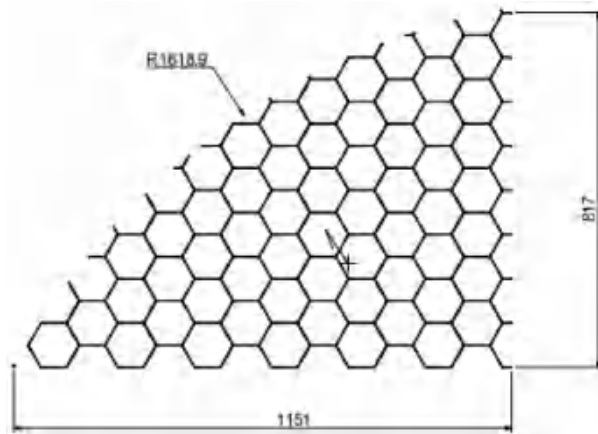


WY2

2

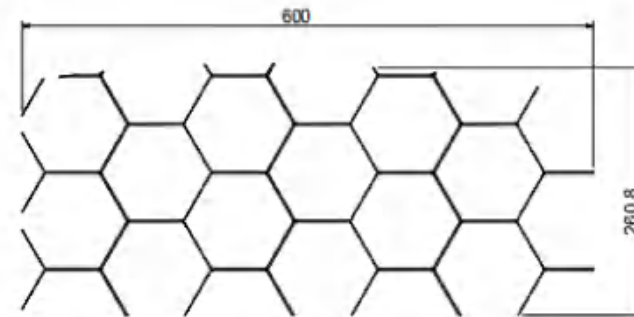


WY3

1

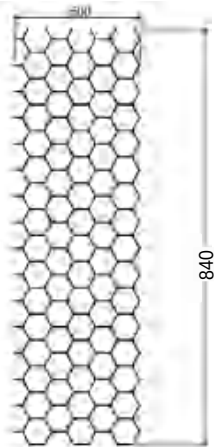


WY4

2

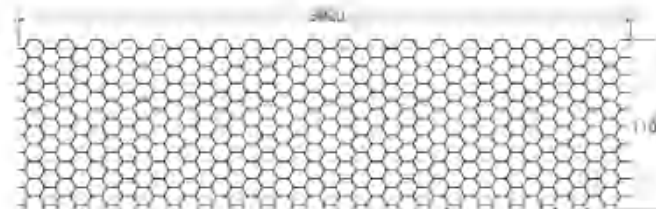


WY5

3




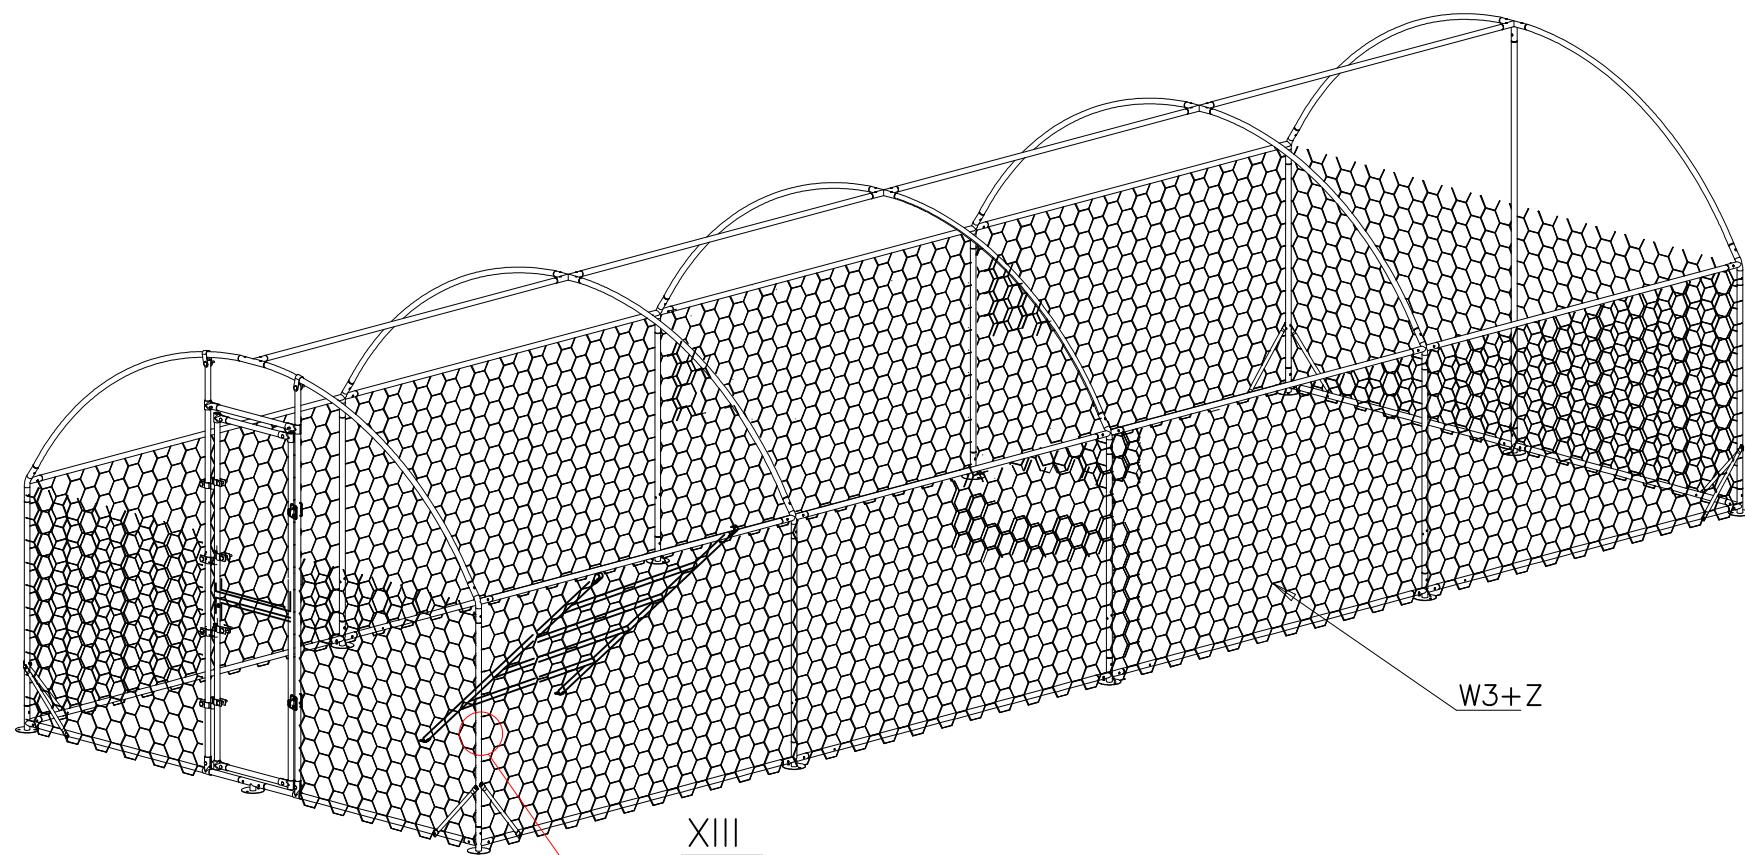




W3+Z

XIII
1 : 5

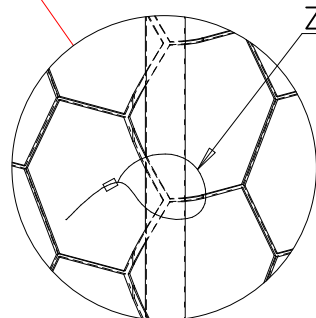

Z

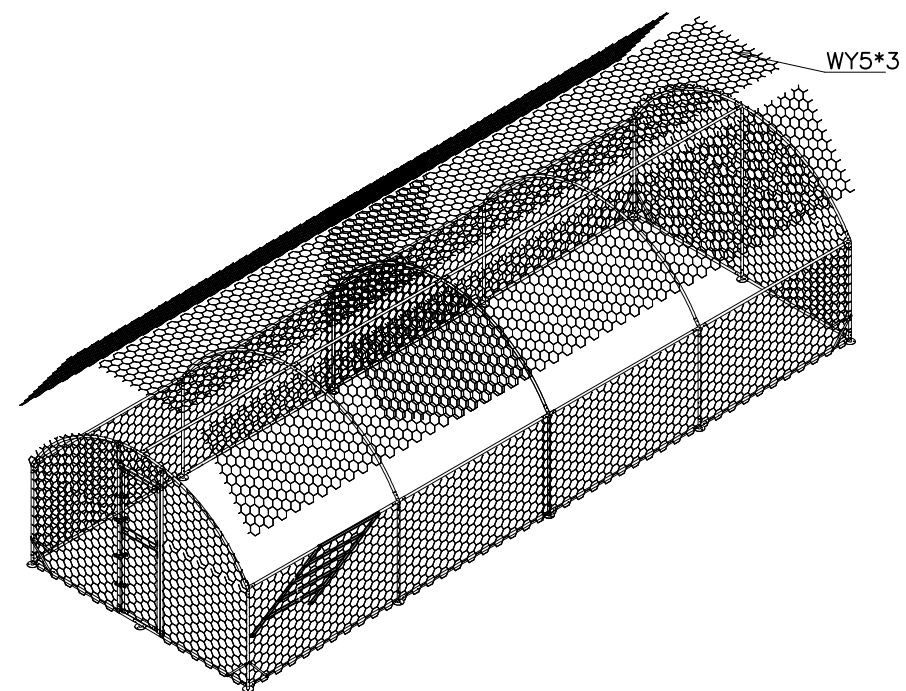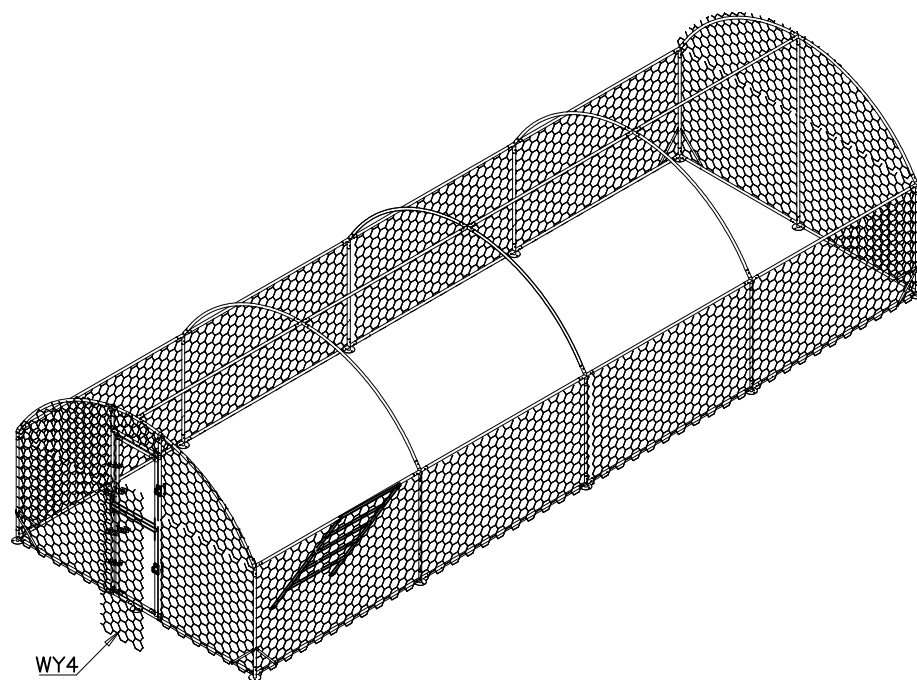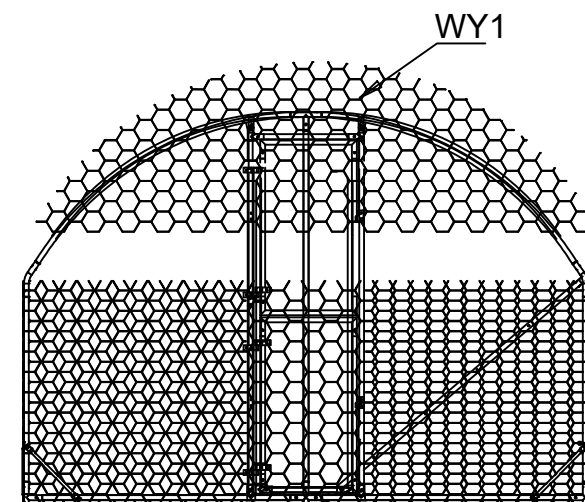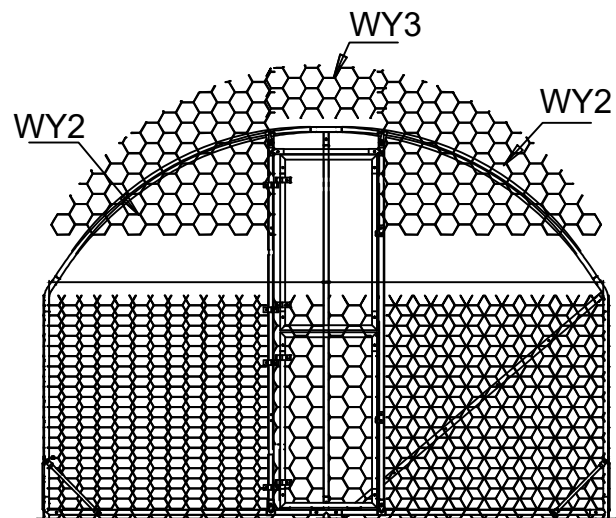

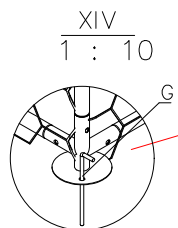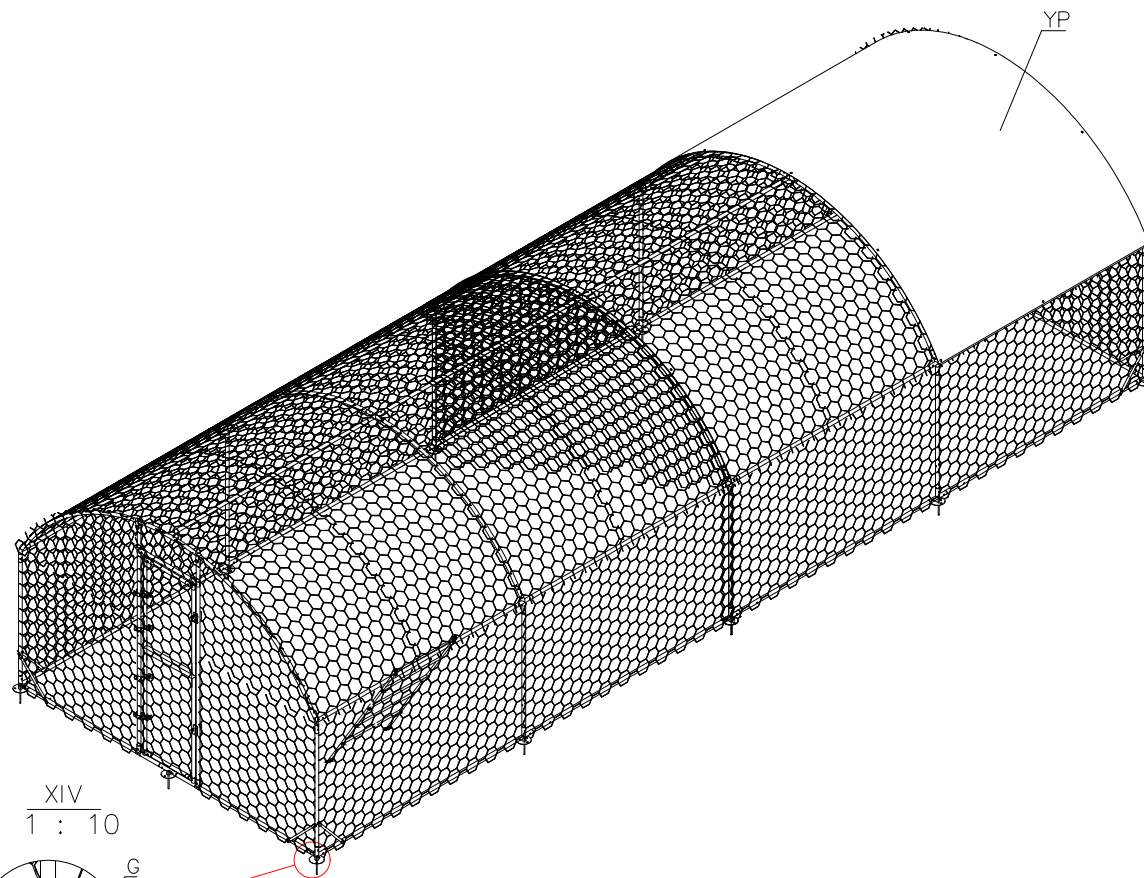

NO	PCS
G	14



KQ