







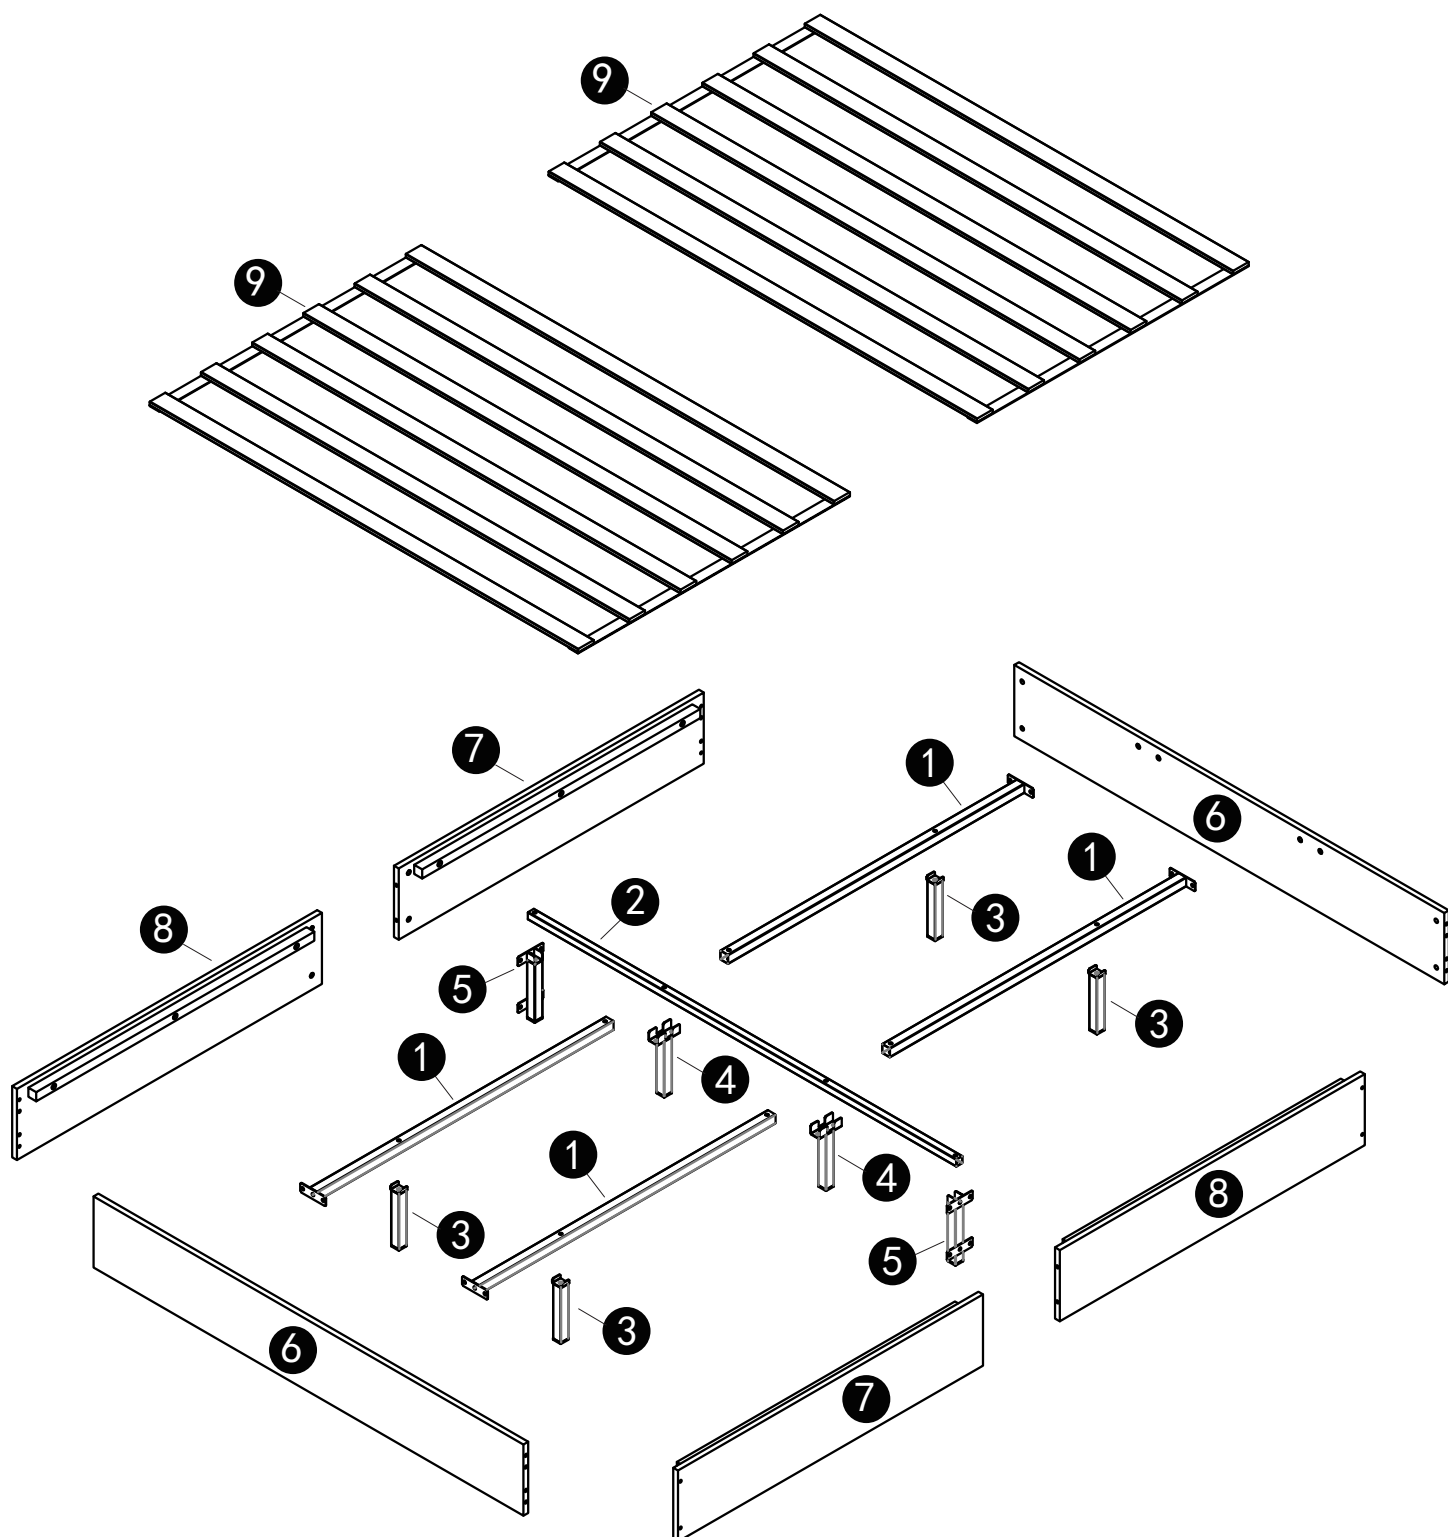


Note: Don't tighten all screws during installation.

Componets

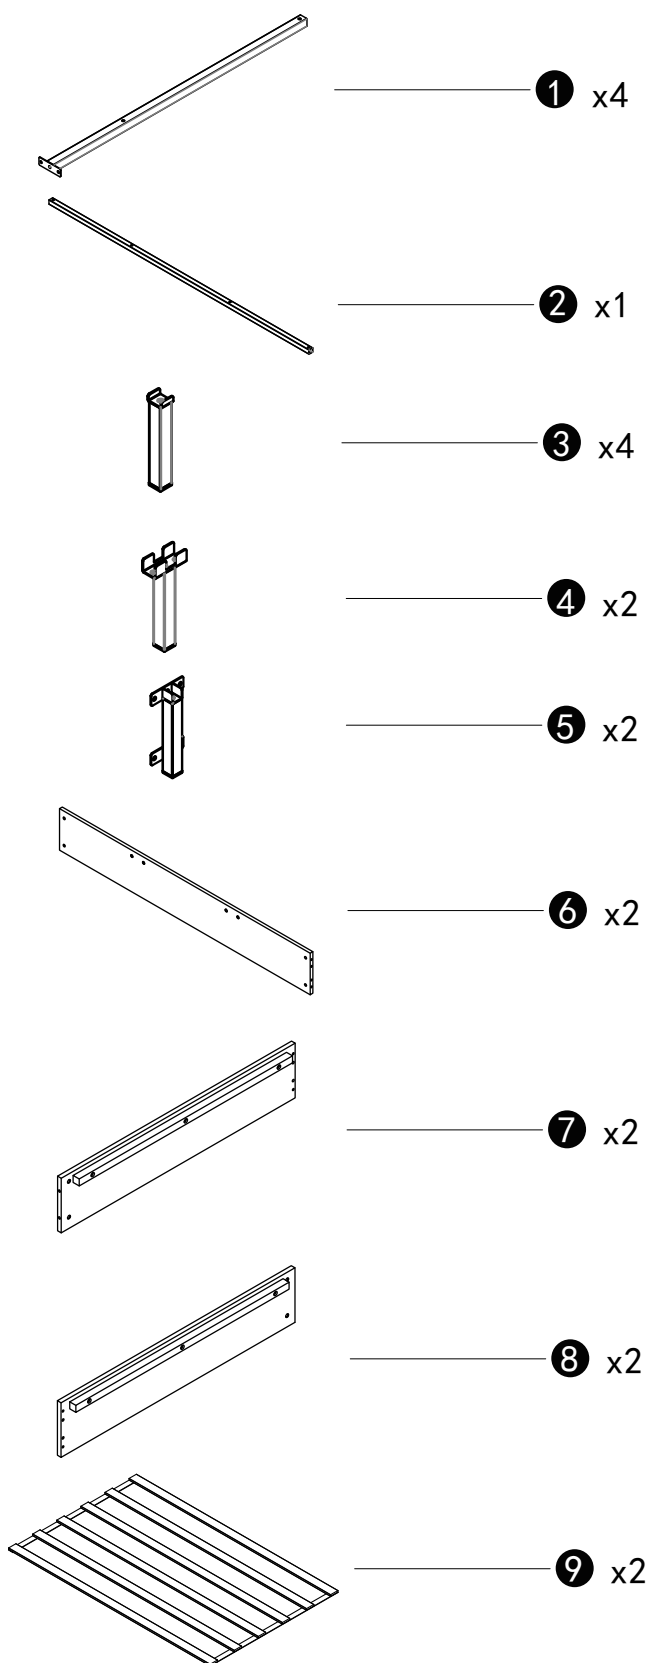

Screws & Tools

A		M6x12mm	x16
B		M6x35mm	x12
C		M6x45mm	x8
D		ø8x30mm	x12
E		M6x10mm	x8
F		2x25x850mm	x4
G		4mm	x1


Check all the components & screws before assembly.

Do not install in case part is missing. contact us to get.

Send email with your question to support@garvee.com

We will resend within 24 hours.


Step:1

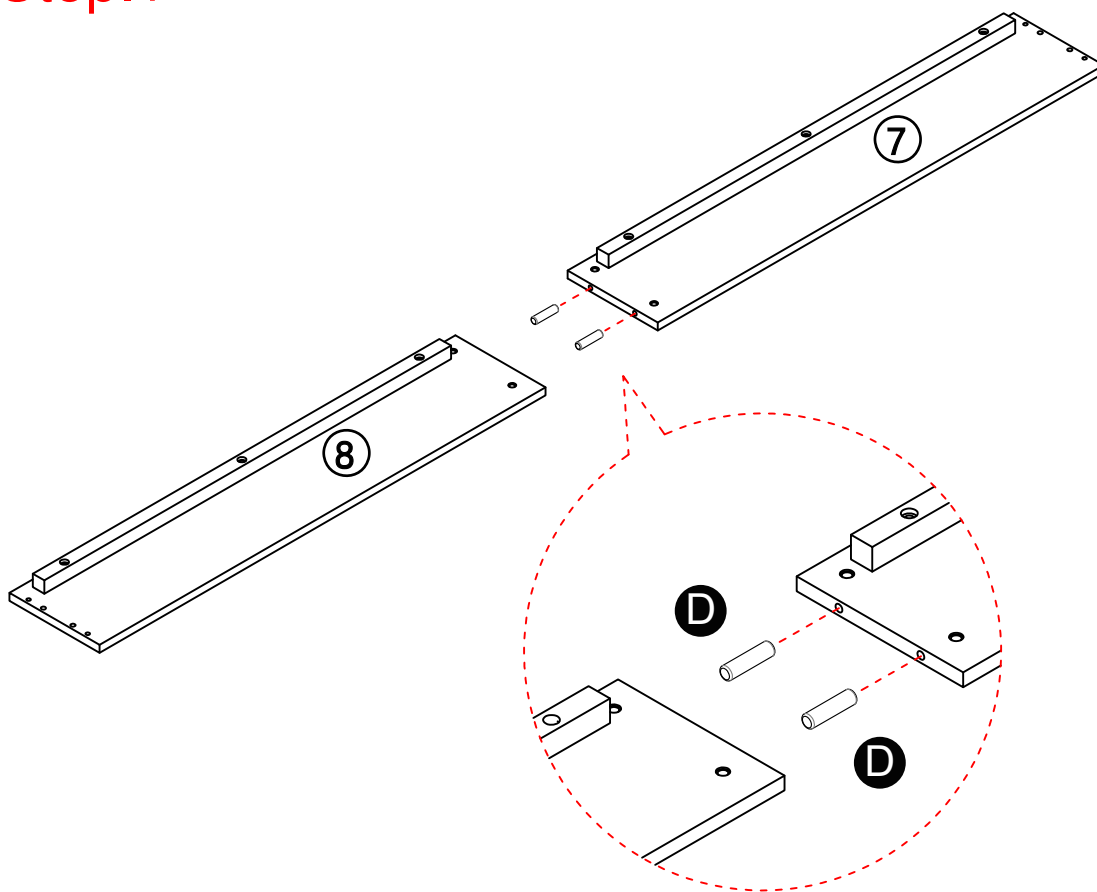

D $\varnothing 8 \times 30 \text{mm}$
4PCS

x2

Step:2

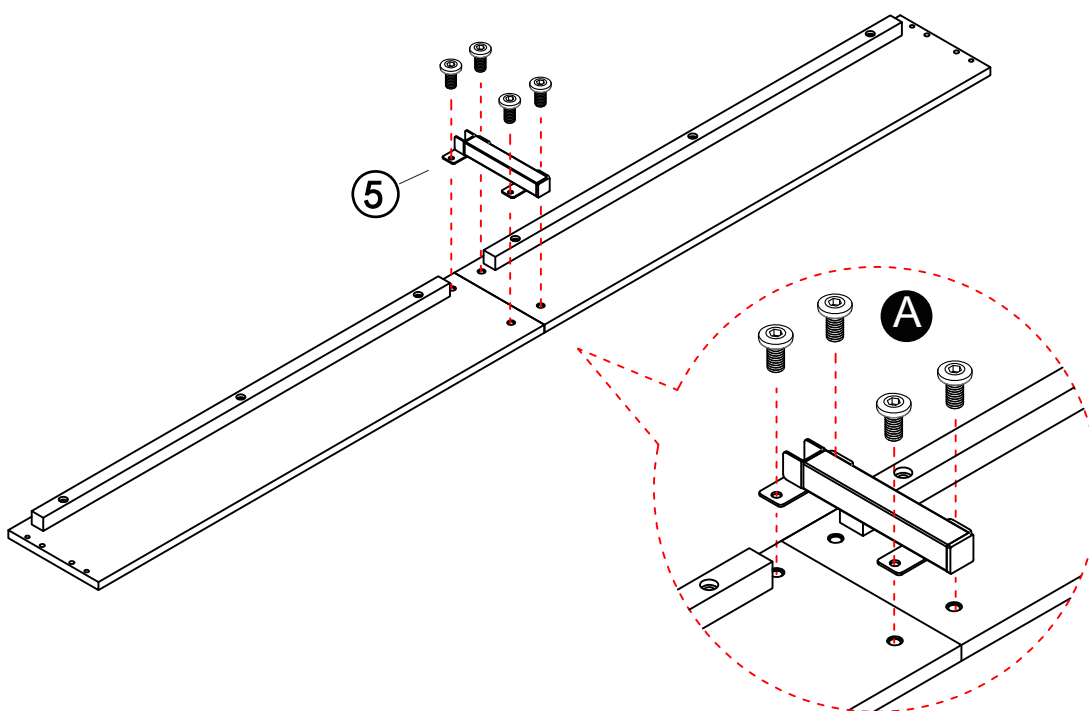


A M6x12mm
8PCS

x2


Step:3

B M6x35mm
10PCS

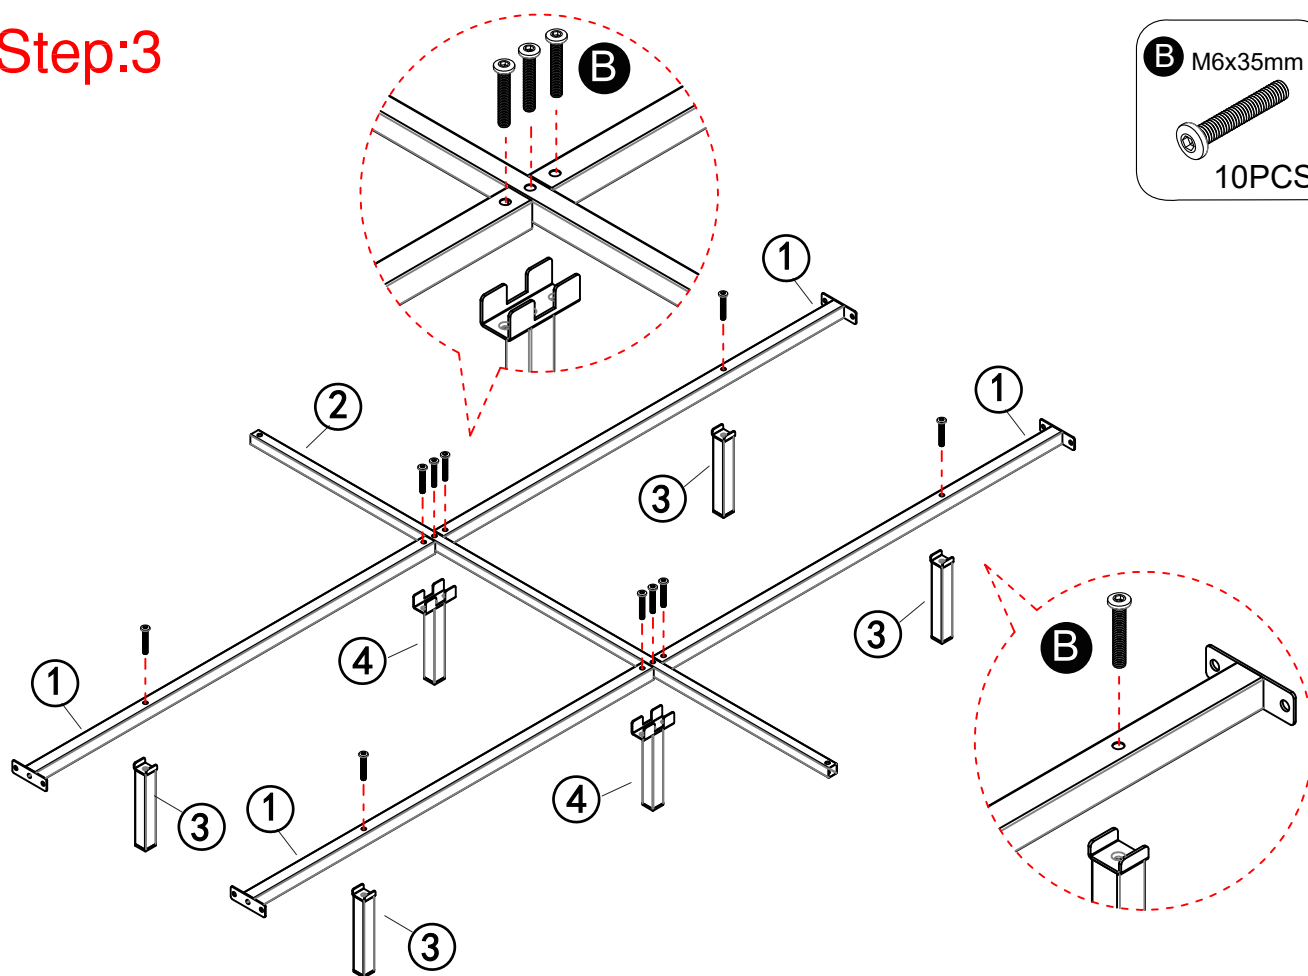


Step:4


A M6x12mm
8PCS

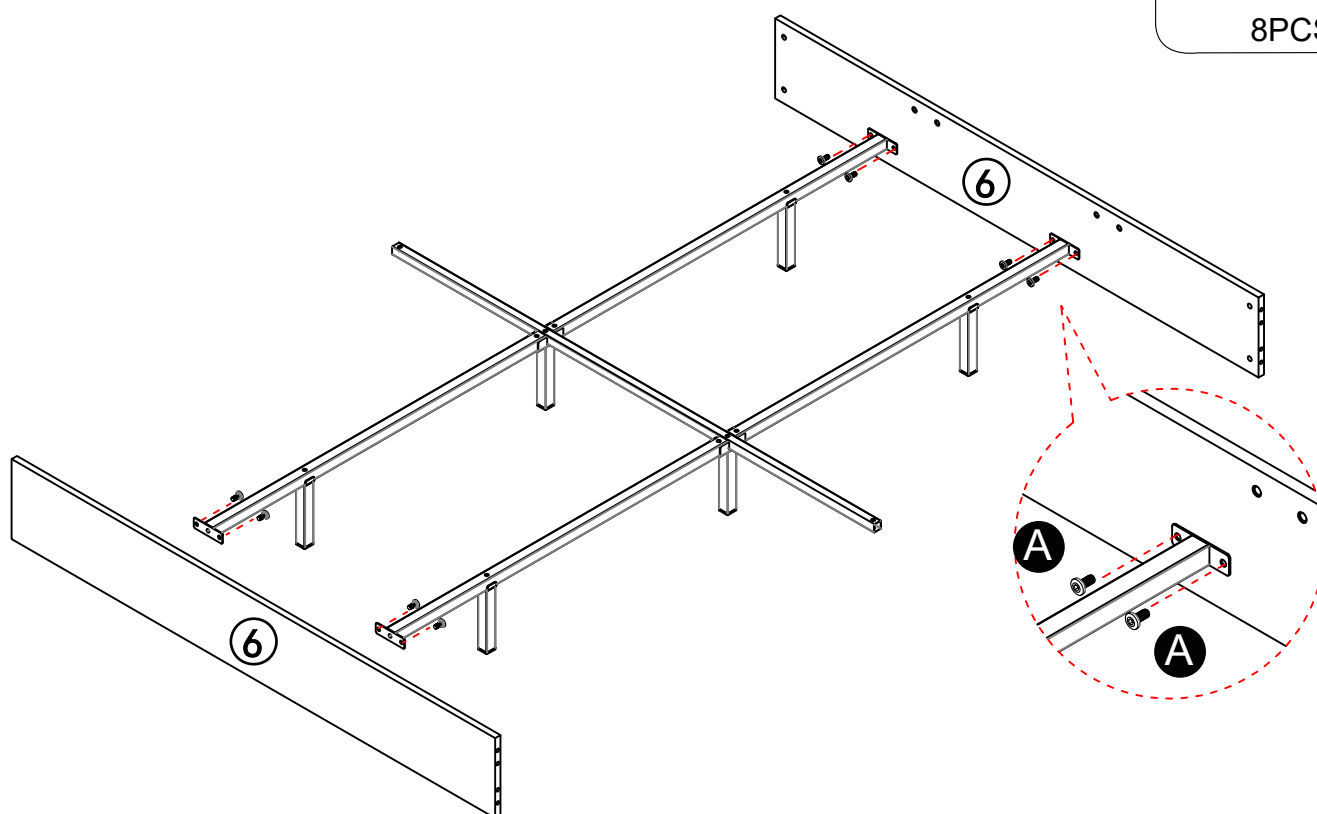


Step:5

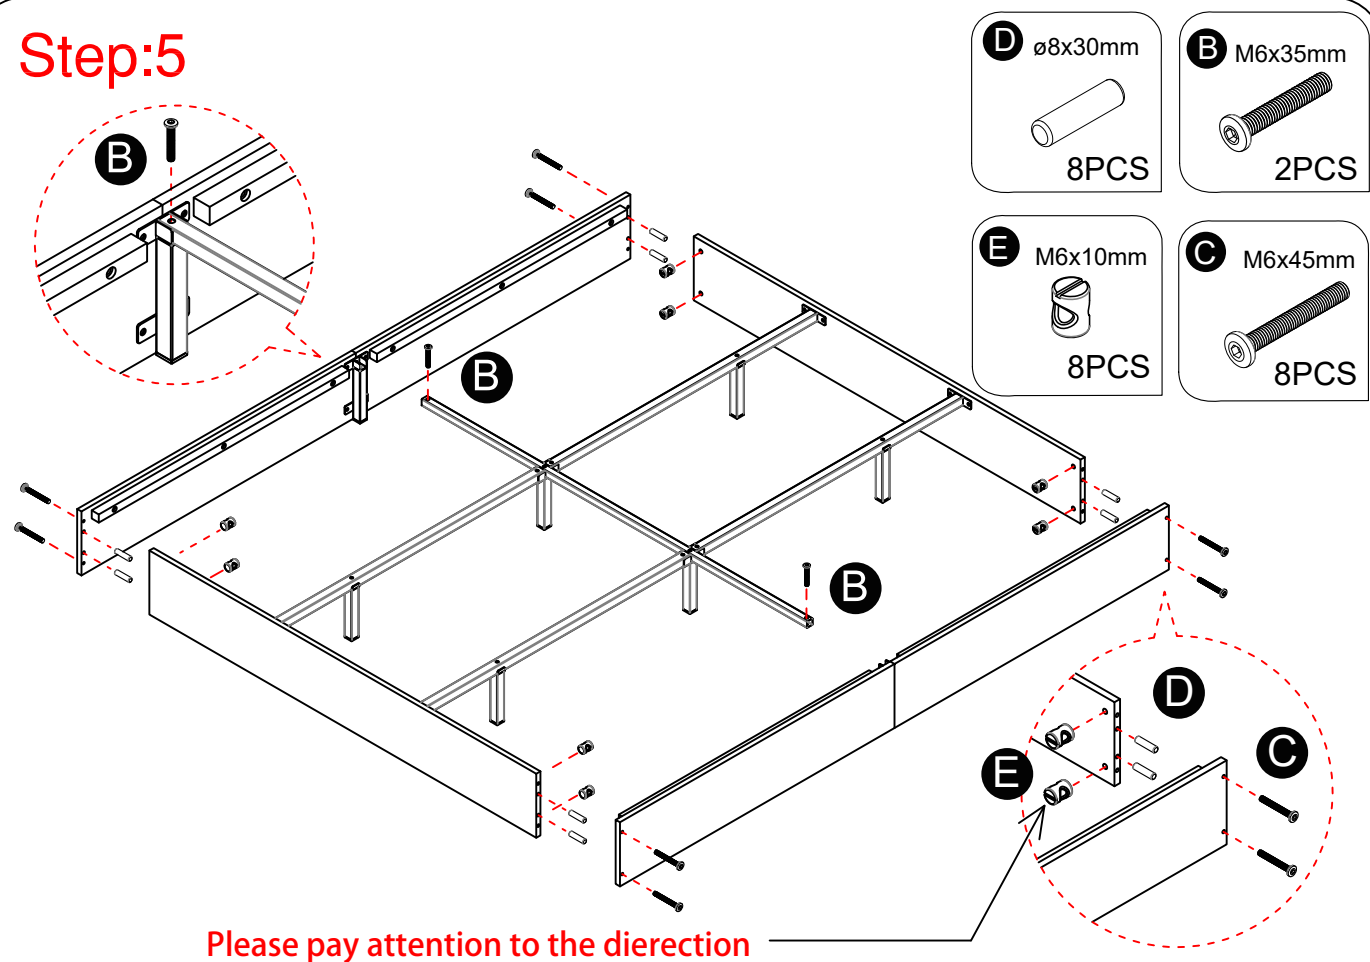

Step:6

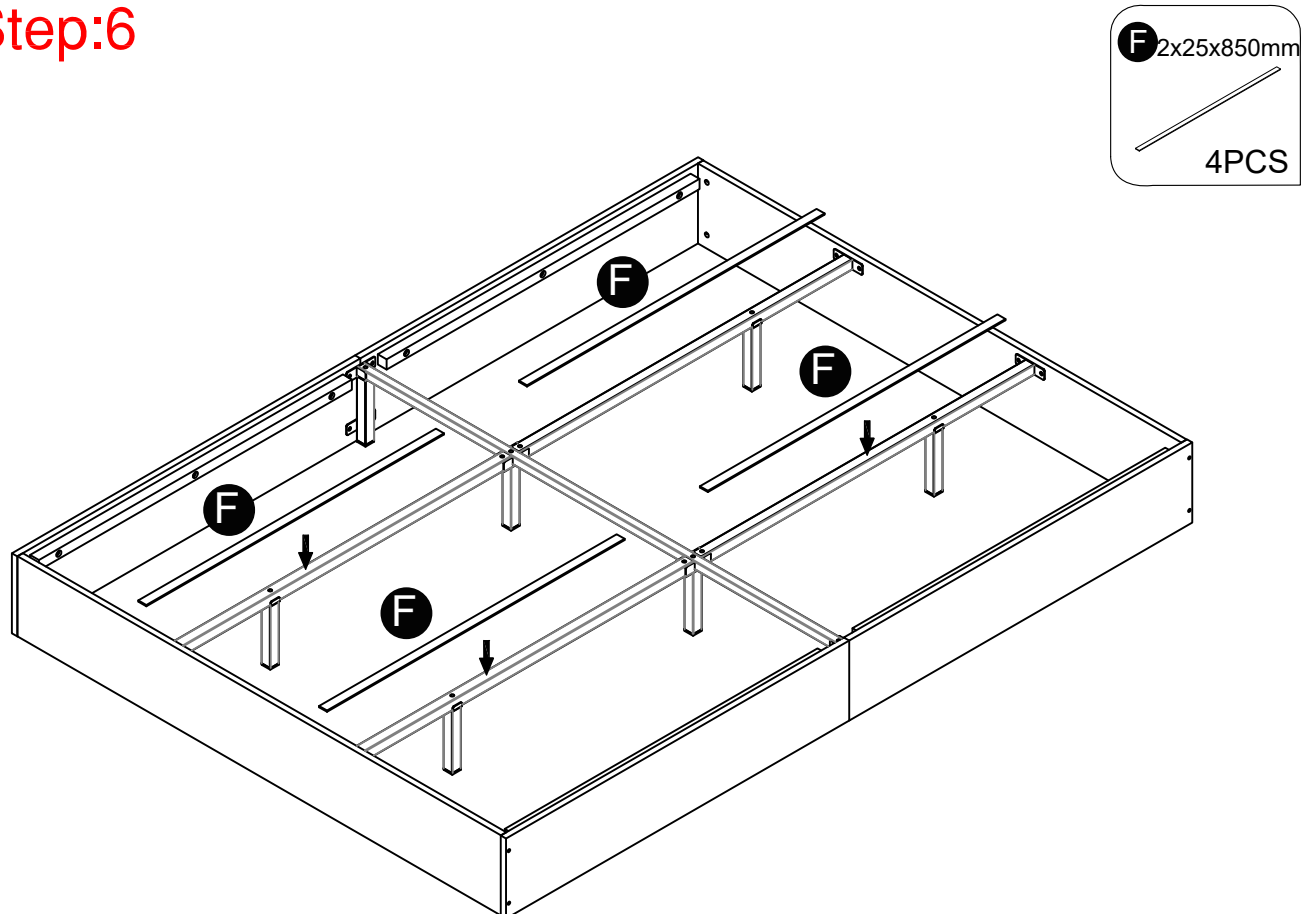

Step:7

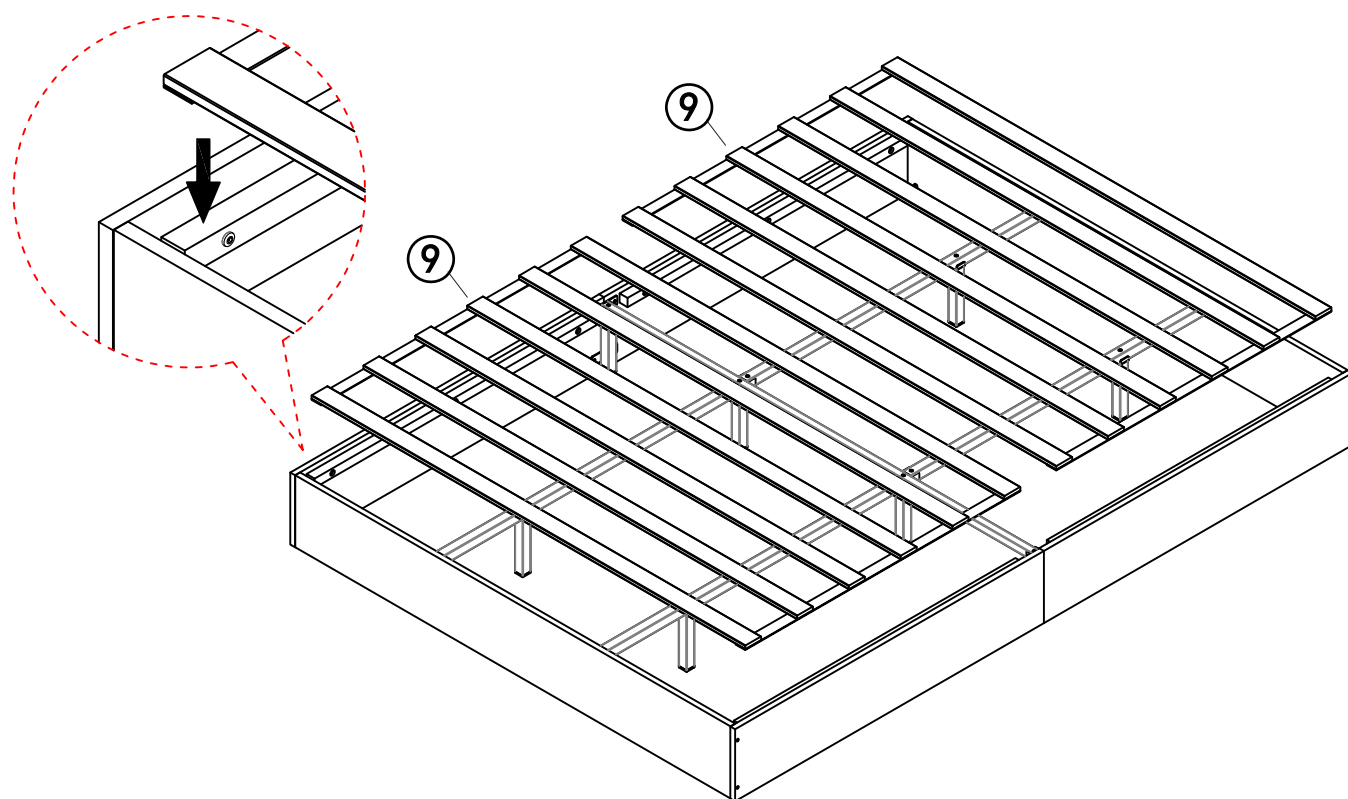

Note : Pls check and tighten all screws.