



Swivel Bar Stool

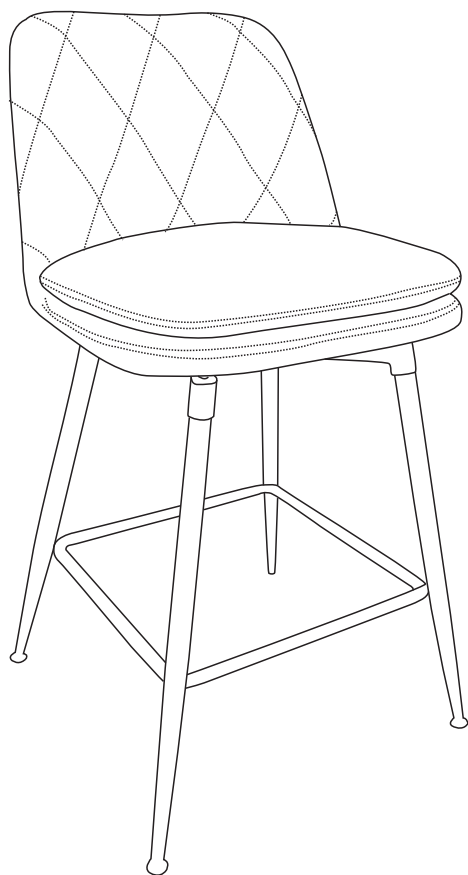



Contact: TYuecustomerservice@outlook.com

Assembly Instructions

- Please read carefully all instructions before assembly.
- For your safety and ease,assembly two or more adults is recommended.
- Please remain these instructions for future reference.

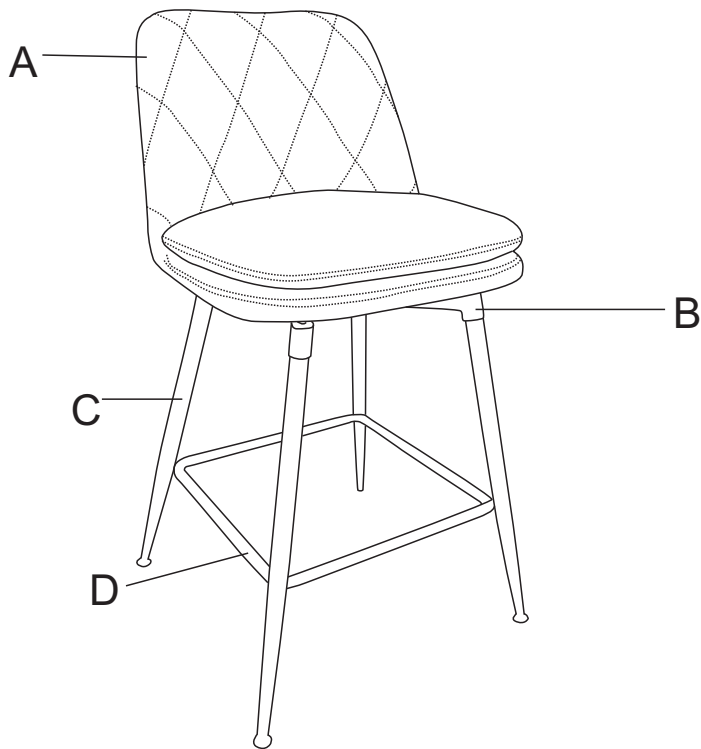


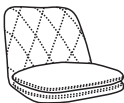A×1 	B×1 	C×4 	D×1 	E×1 	F×12 Bolts  M6*20mm	G×4 Bolts  M6*25mm
Allen Wrench  H×1						

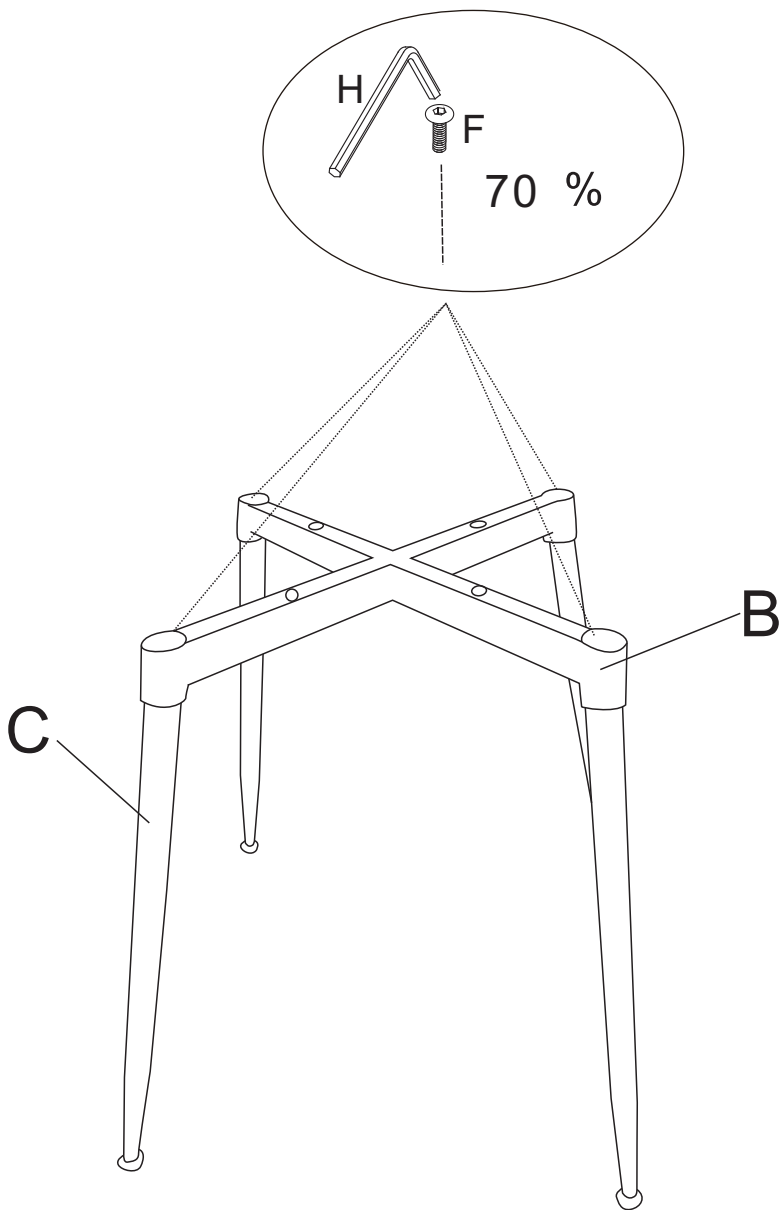


Step 1: Unpack and place out all the pieces on a clean, non-marring surface.


Step 2: Attach the legs (C) and base (B) by using **M6X20mm Bolt (F)**. Tighten the bolts to 70% using the provided Allen wrench (H), do not tighten completely.

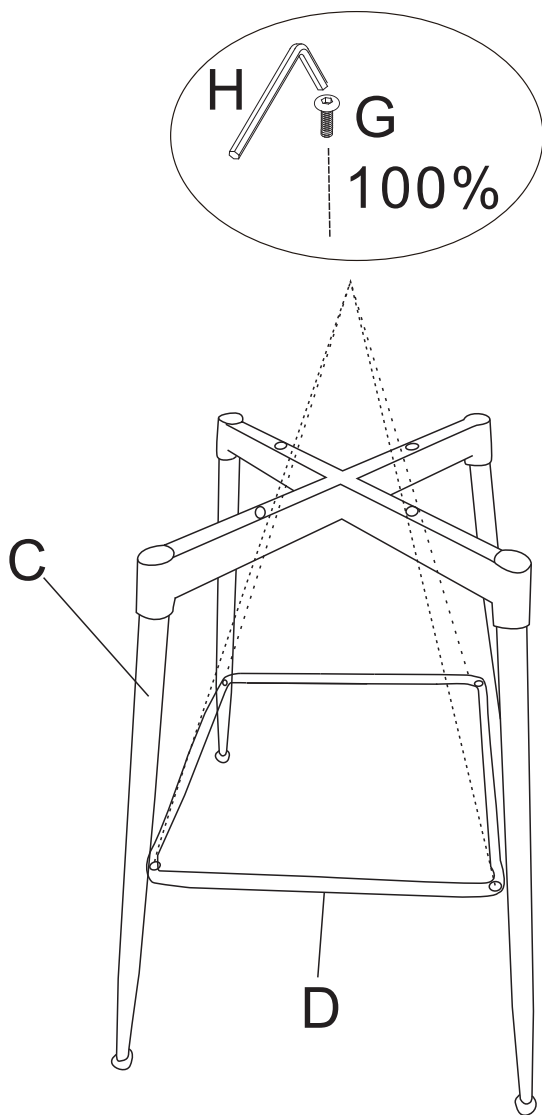


Step 3: Attach the Stretchers(D)to the Legs (C) by using **four** Boles(G)
Use the provided Wrench(H) to tighten the bolts securely completely.

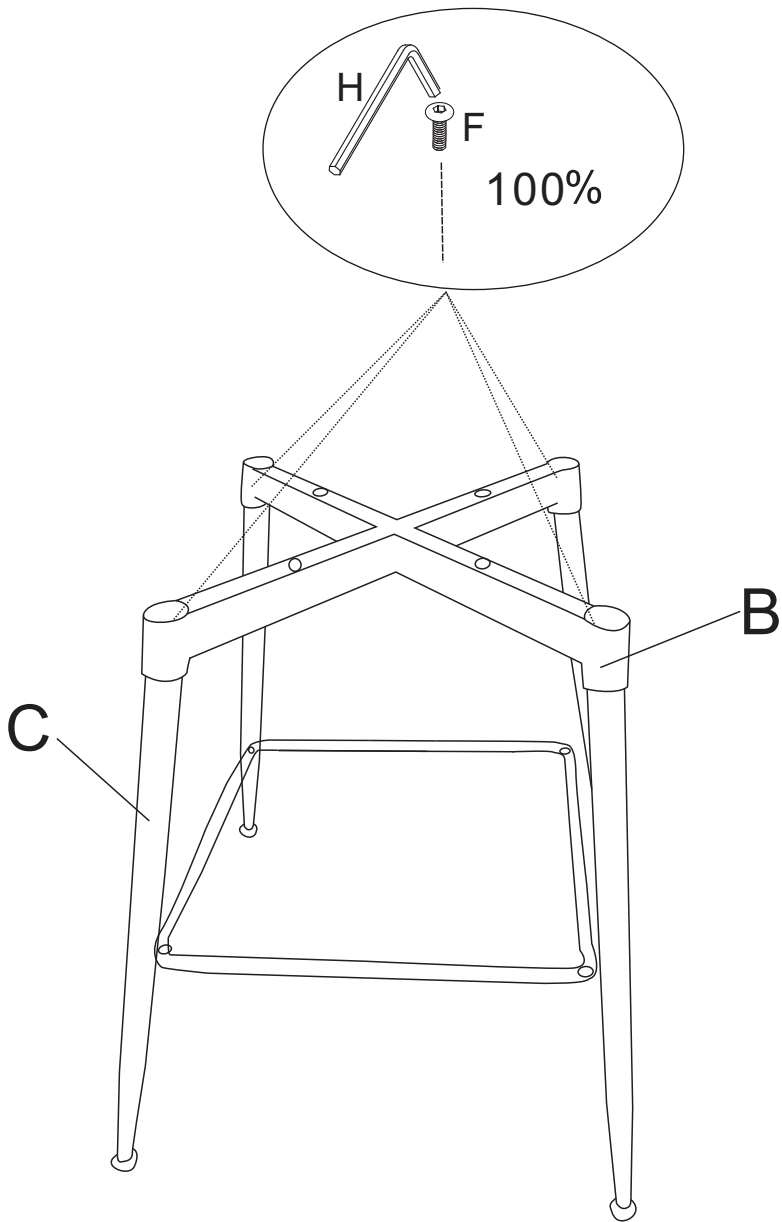

Step 4: Use M6X20mm bolt (F) to connect the outrigger (C) to the base (B) . Tighten the bolts to 100% by using the provided hex wrench (h) and tighten them completely.

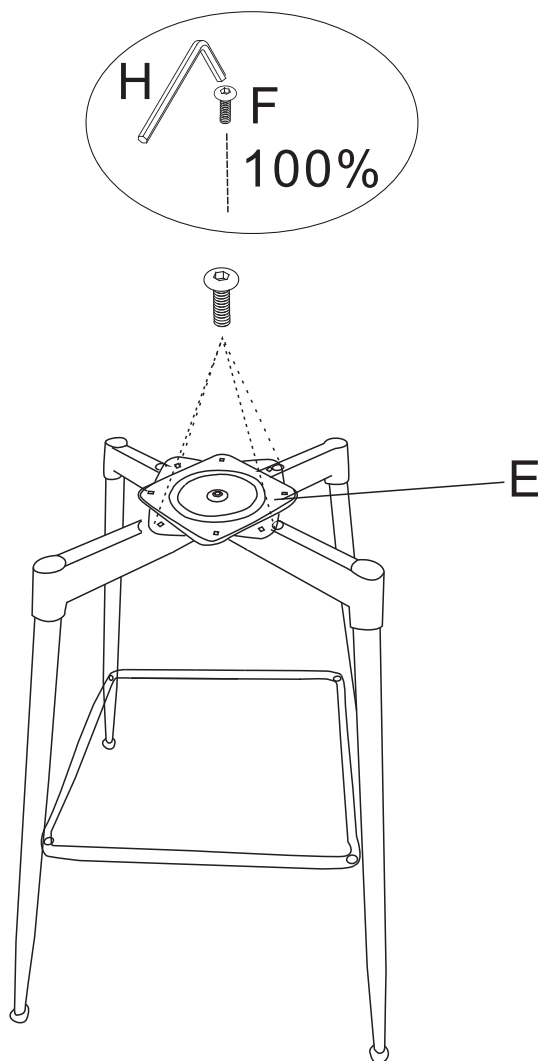


Step 5: Confirm the swivel Mechanism(E) can rotate 360°. Attach the Swivel Mechanism(E) to the assembled Leg Frames(B&C&D) in step 5. Use four M6*20mm Bolts(F) and screw them firmly with Wrench(H).

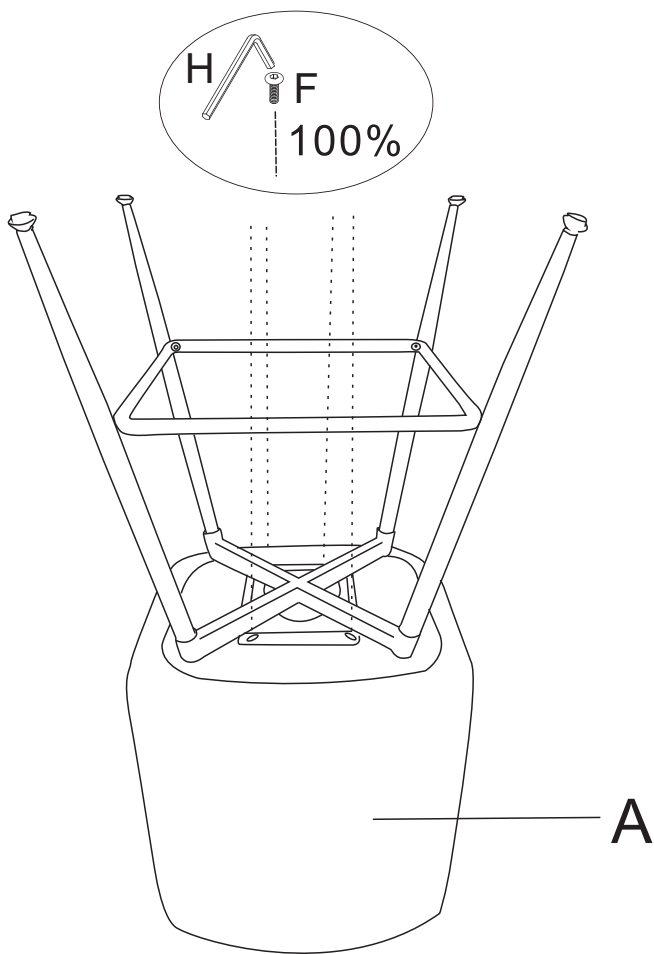

Step 6: Place the Chair upside down on a table.

Attach the Seat (A) to the assembled Leg Frames(B&C&D)

Use four M6*20mm Bolts(F) and screw them firmly with Wrench(H).

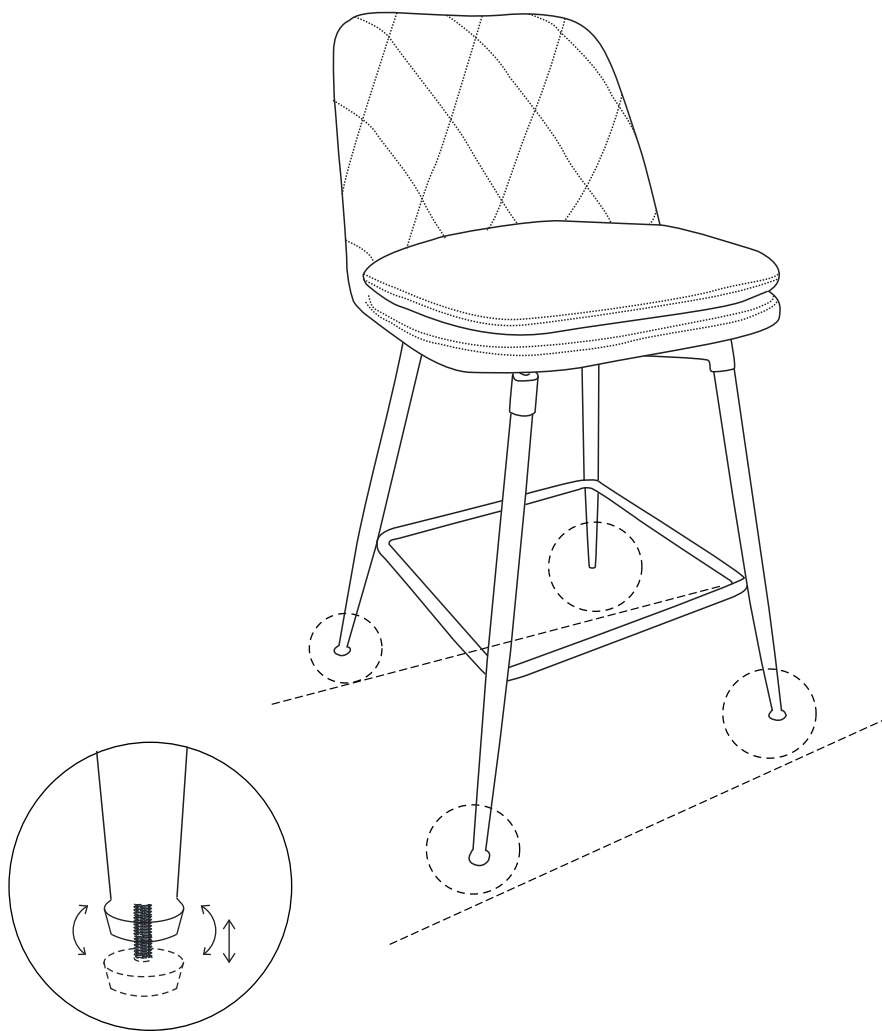

Adjust the foot nails to
keep the chair level again

Step 7: Turn up the barstool and it is ready for use.
Adjust the foot nails to keep the chair level again
Enjoy your new barstool.