



Pre-hung Door Installation Guide

What's included




Ⓒ × 1

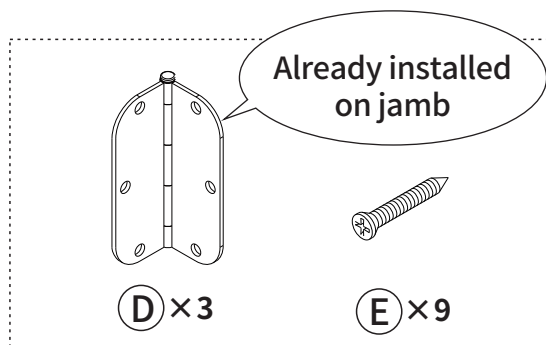


Ⓓ × 3

Ⓔ × 9



Ⓑ × 1



Ⓐ × 1

Tools Required


Speed Square



Phillips Screwdriver




Tape Measure

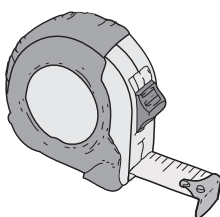



Pencil




Nail Gun

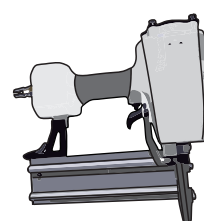

Step ① Attach Door to Jamb

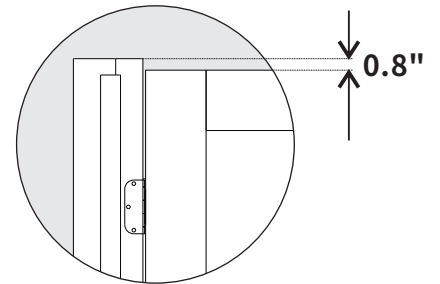
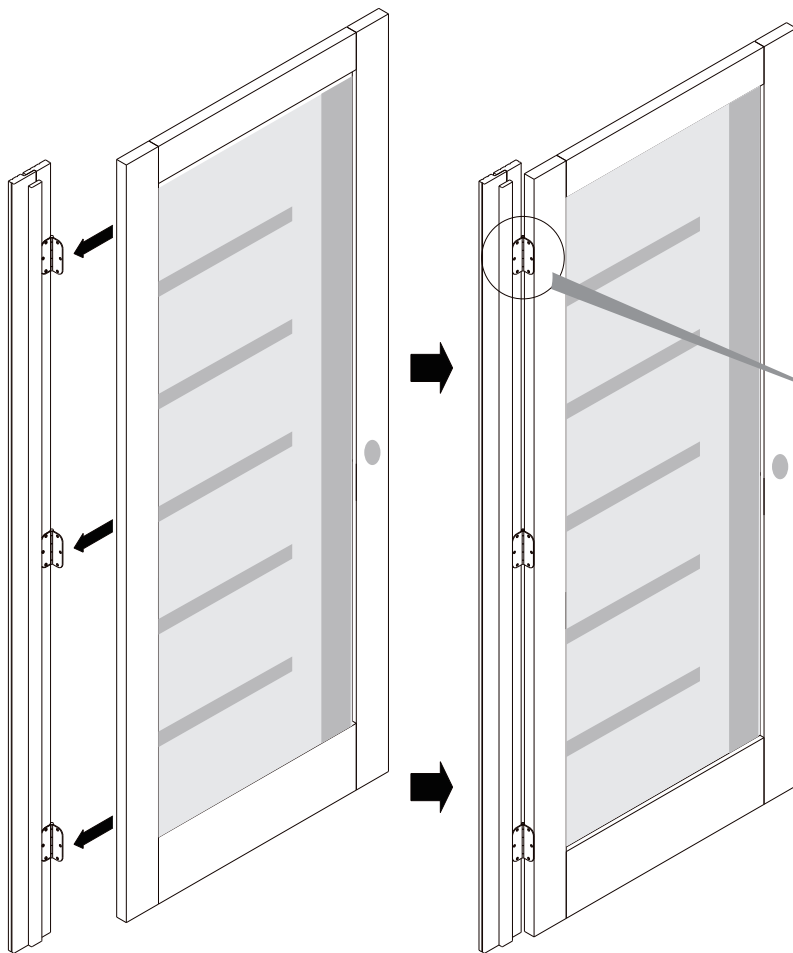


Pro tip: Leave a 0.8" space from the top of the jamb to the top of the door. This space is for the upper jamb.

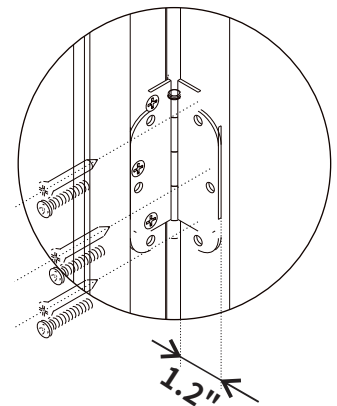

Pro tip: The edge of the hinge should be 1.2 inches from the edge of the door. This will leave enough room for the door to swing. There's no need to groove on the door as we have already taken into consideration the thickness of the hinge.

Step② Assemble Jamb Kit

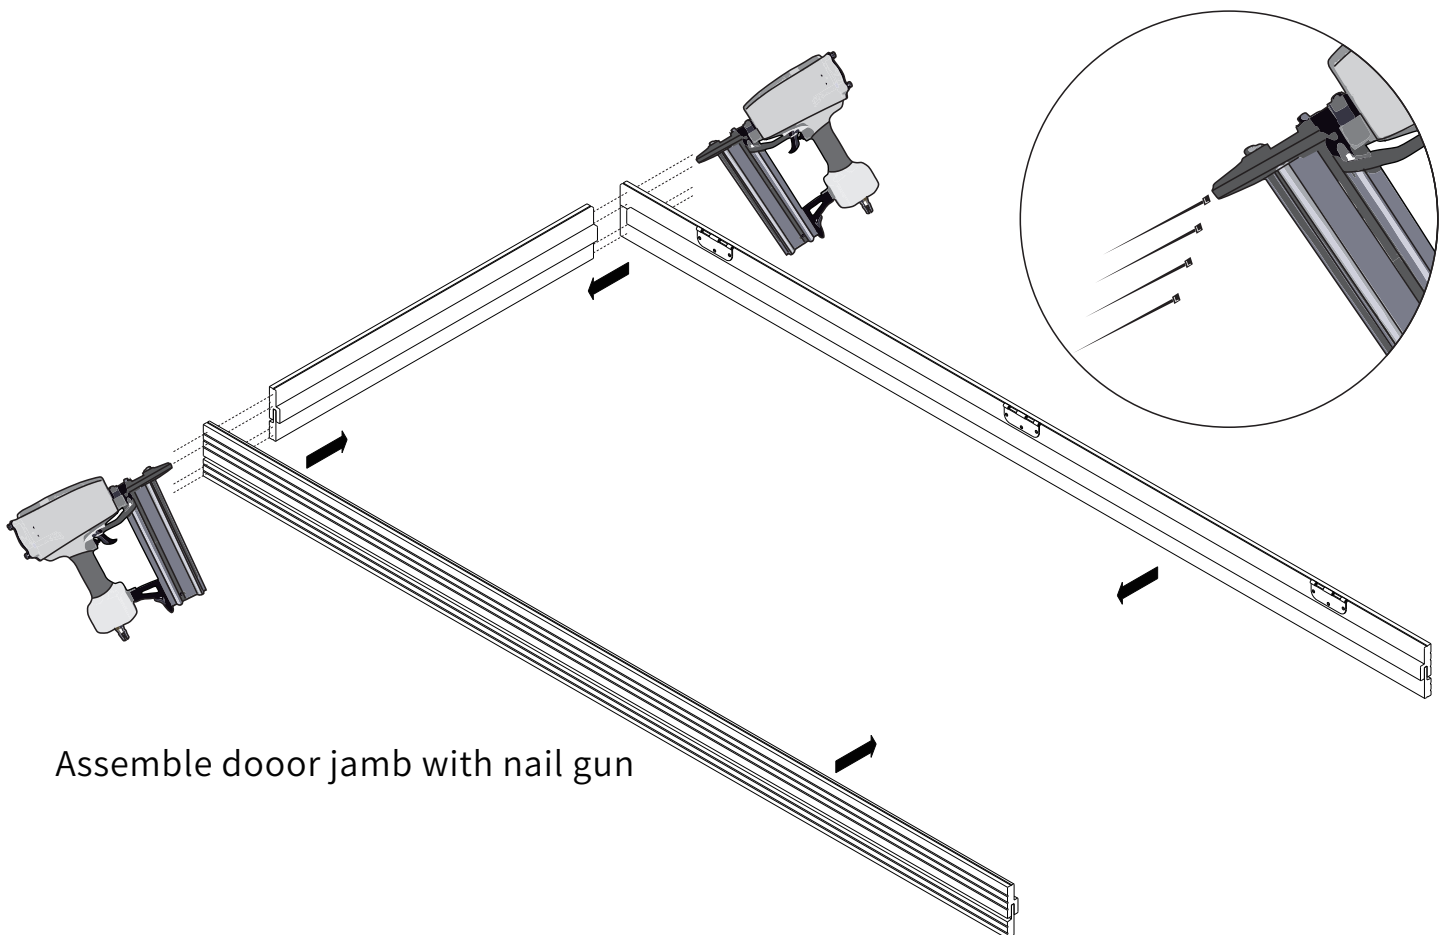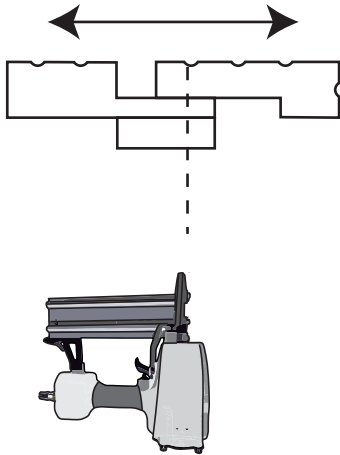

Assemble door jamb with nail gun

Step③ Install Jamb to the Opening, and Re-attach the Door

