


ASSEMBLY INSTRUCTIONS

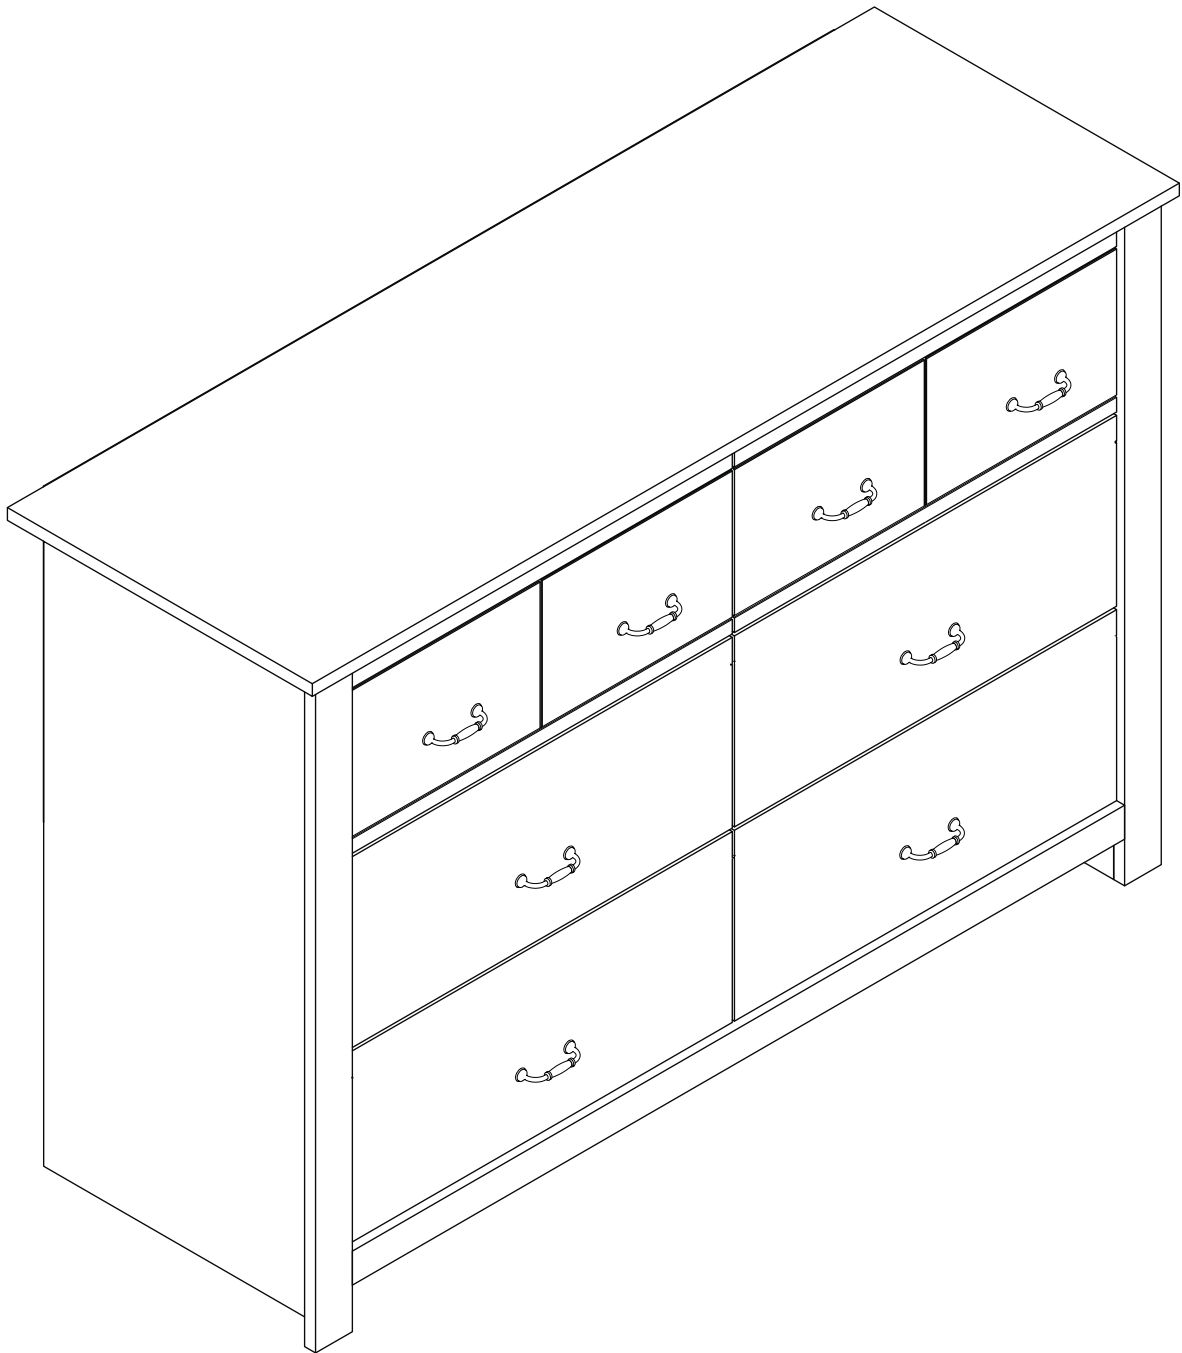

NOTES ON ASSEMBLY

- To ensure ease of assembly read all instructions before assembly and follow step by step illustrations.
 - Keep instructions for future use.
 - Adult assembly required. 
-

MAINTENANCE TIPS

- Never let liquids or damp cloths sit on this furniture.
 - Never use chemical cleaning products. They can damage the finish. For cleaning, use only a slightly damp cloth and wipe dry.
 - To avoid dulling of the finish, do not place furniture in direct sunlight.
 - Do not put plastic or rubber rings under appliances. Use cloth or felt protectors.
 - To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth.
-


WARNING **AVERTISSEMENT**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:








- It is important to place the safety bracket included.
 - Place heaviest items in the lowest storage space.
 - Never allow children to climb or hang on drawers, doors, or shelves.
 - Never open more than one drawer at a time.
 - If a heavy object is placed on top or inside the furniture, consider this risk.
-

PART LIST


CODE	QTY
<i>A</i>	1
<i>B</i>	1
<i>C</i>	1
<i>D</i>	1
<i>E</i>	1
<i>F</i>	1
<i>G</i>	2
<i>H</i>	1
<i>I</i>	1
<i>J</i>	1
<i>K</i>	2
<i>L</i>	1
<i>M</i>	1
<i>N</i>	2
<i>O</i>	2
<i>P</i>	6
<i>Q</i>	6
<i>R</i>	6
<i>S</i>	6

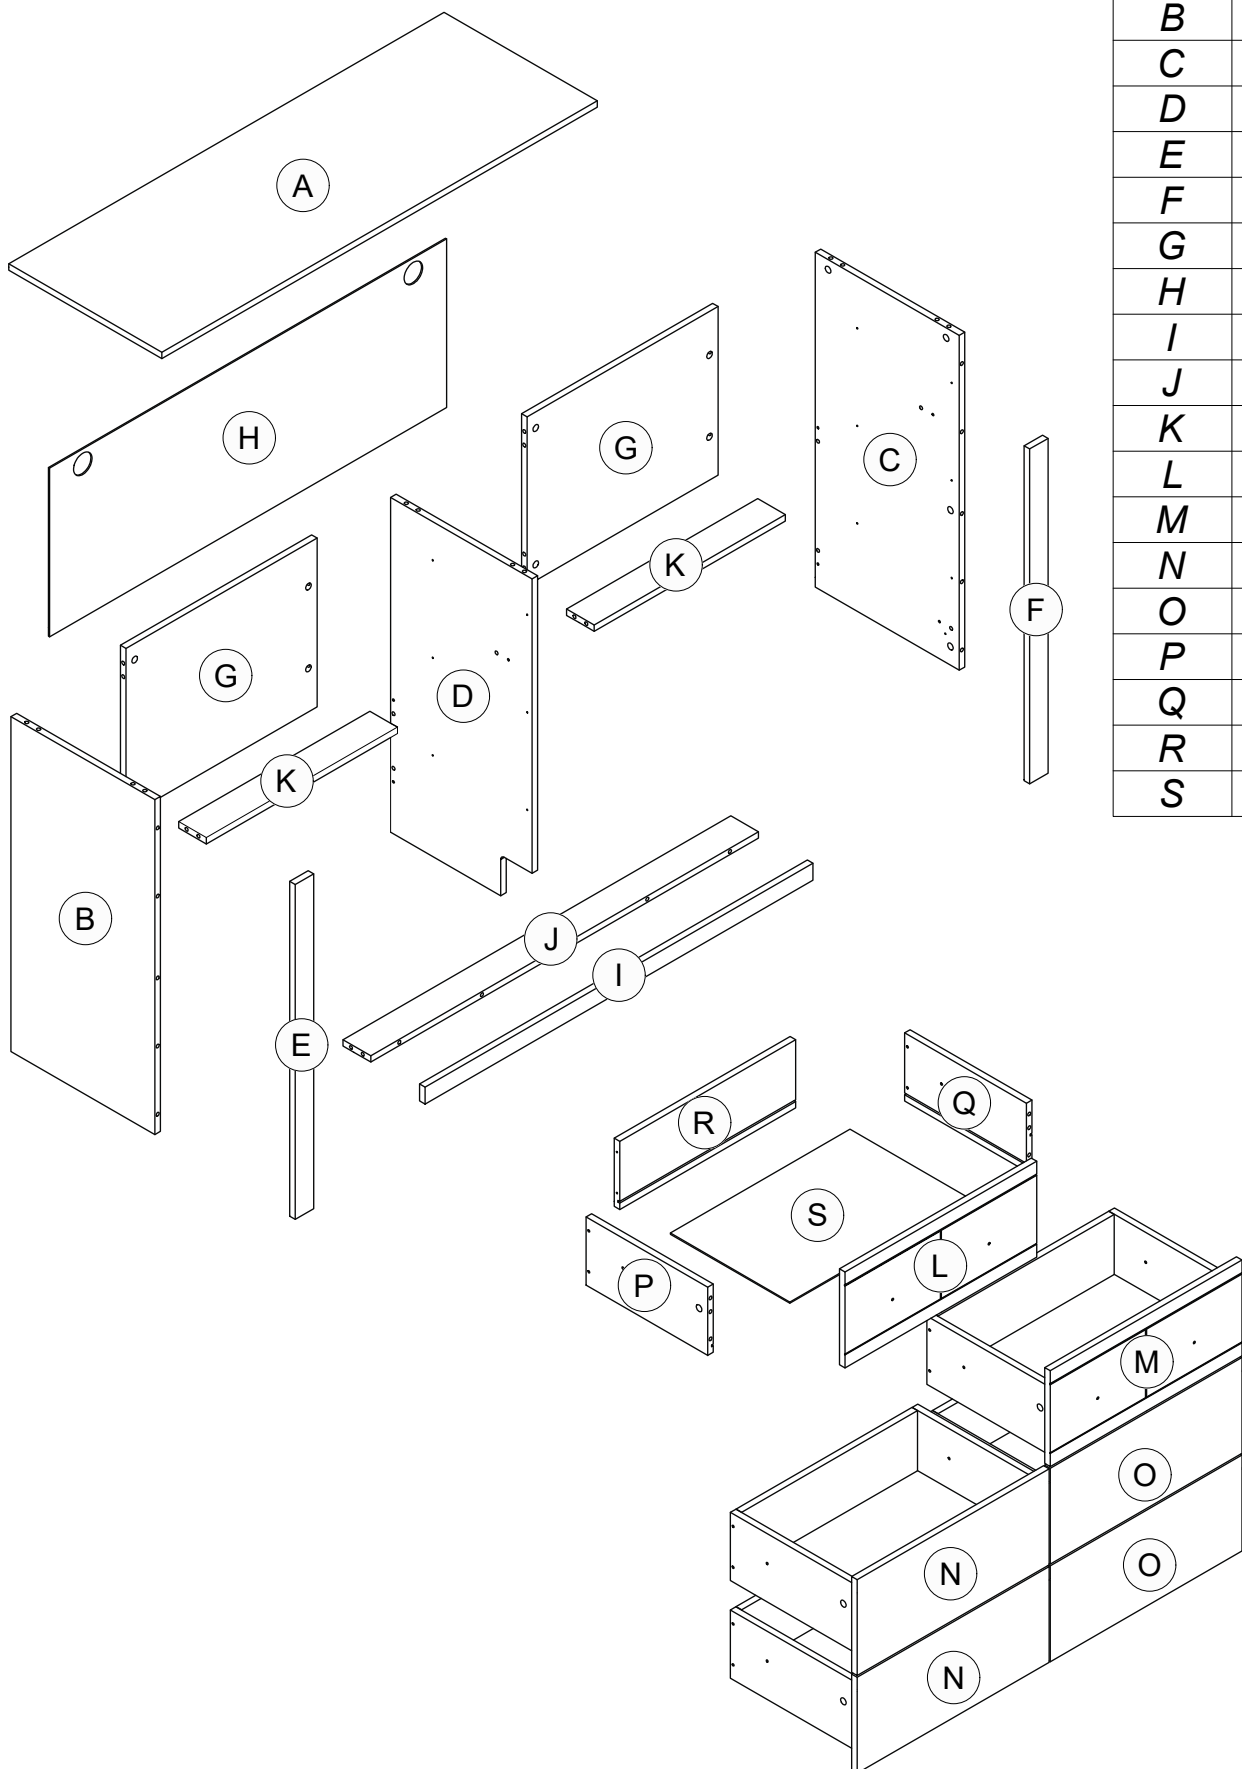


HARDWARE QUINCAILLERIE

(1)	Minifix Bolt	(2)	Minifix Cam	(3)	Wood Dowel M8 x 30mm
					
	41 pcs		41 pcs		50 pcs
(4)	Unitar M6.3 x 40mm	(5)	Screw M3.5 x 15mm	(6)	Screw M4 x 38mm
					
	1 pc		32 pcs		24 pcs
(7)	Screw M6 x 8mm	(8)	Drawer Slide 300mm	(9)	Drawer Slide 300mm
					
	24 pcs		6 sets		6 sets
(10)	Handle Screw M4 x 19mm	(11)	Nail Leg	(12)	PVC L Bracket
					
	16 pcs		6 pcs		2 pcs
(13)	Screw M3 x 12mm	(14)	Nail Pin	(15)	Handle
					
	12 pcs		9 pcs		8 pcs
(16)	Allen Key M4				
					
	1 pc				


FURNITURE ANTI TIPPING

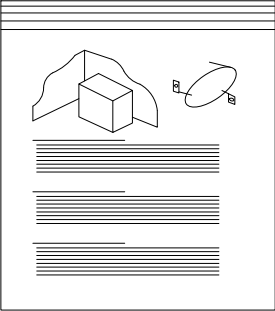
		(17)	Mounting L Bracket	(18)	Flat Washer M6 x 16mm
x 1					
			2 units		2 units
		(19)	Screw #10 x 16mm	(20)	Screw M4 x 38mm
					
			2 units		2 units

TOOLS NOT INCLUDED OUTILS PAS INCLUS

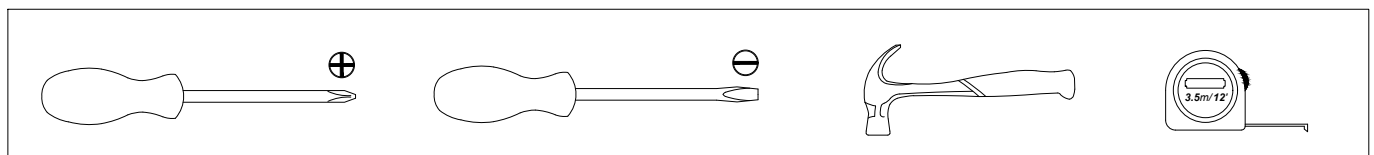



STEP 1

7		6 pcs
8		3 pcs
13		3 pcs

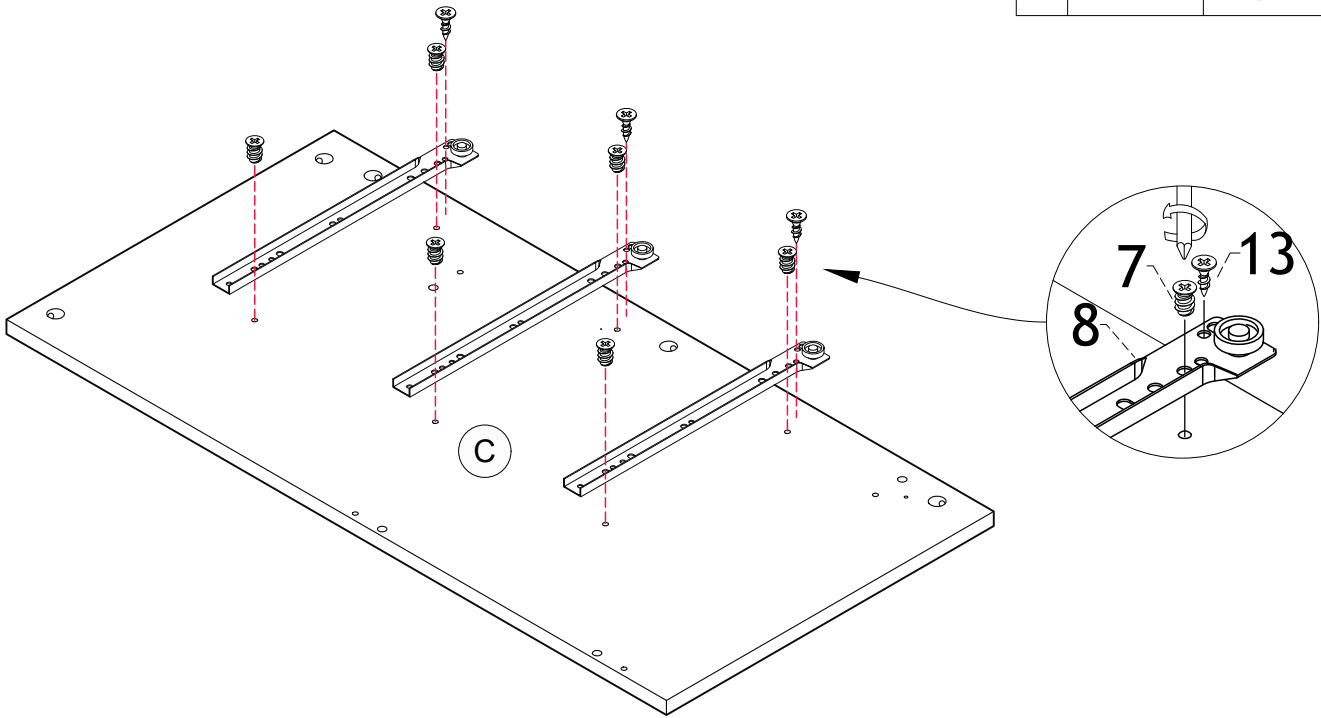


STEP 2


1		4 pcs
---	---	-------

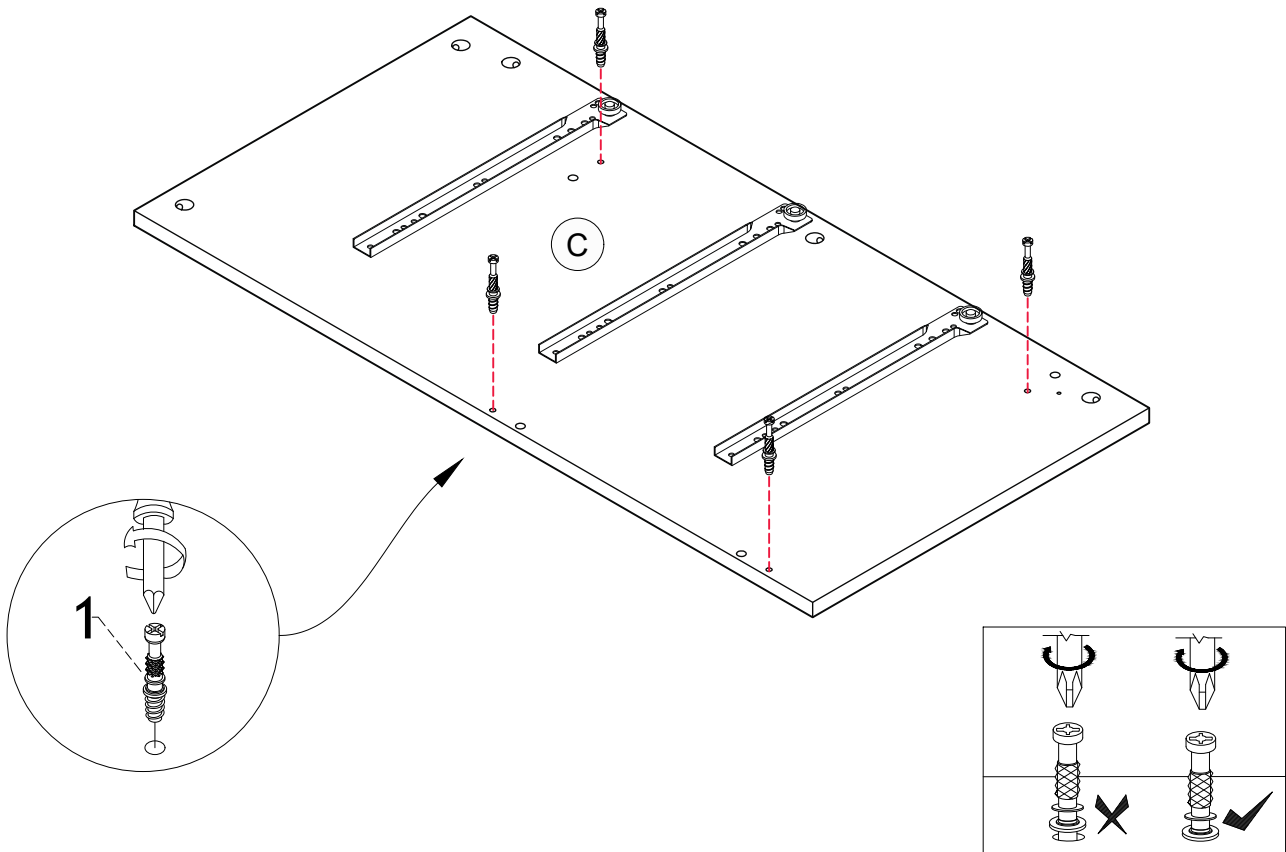

STEP 3


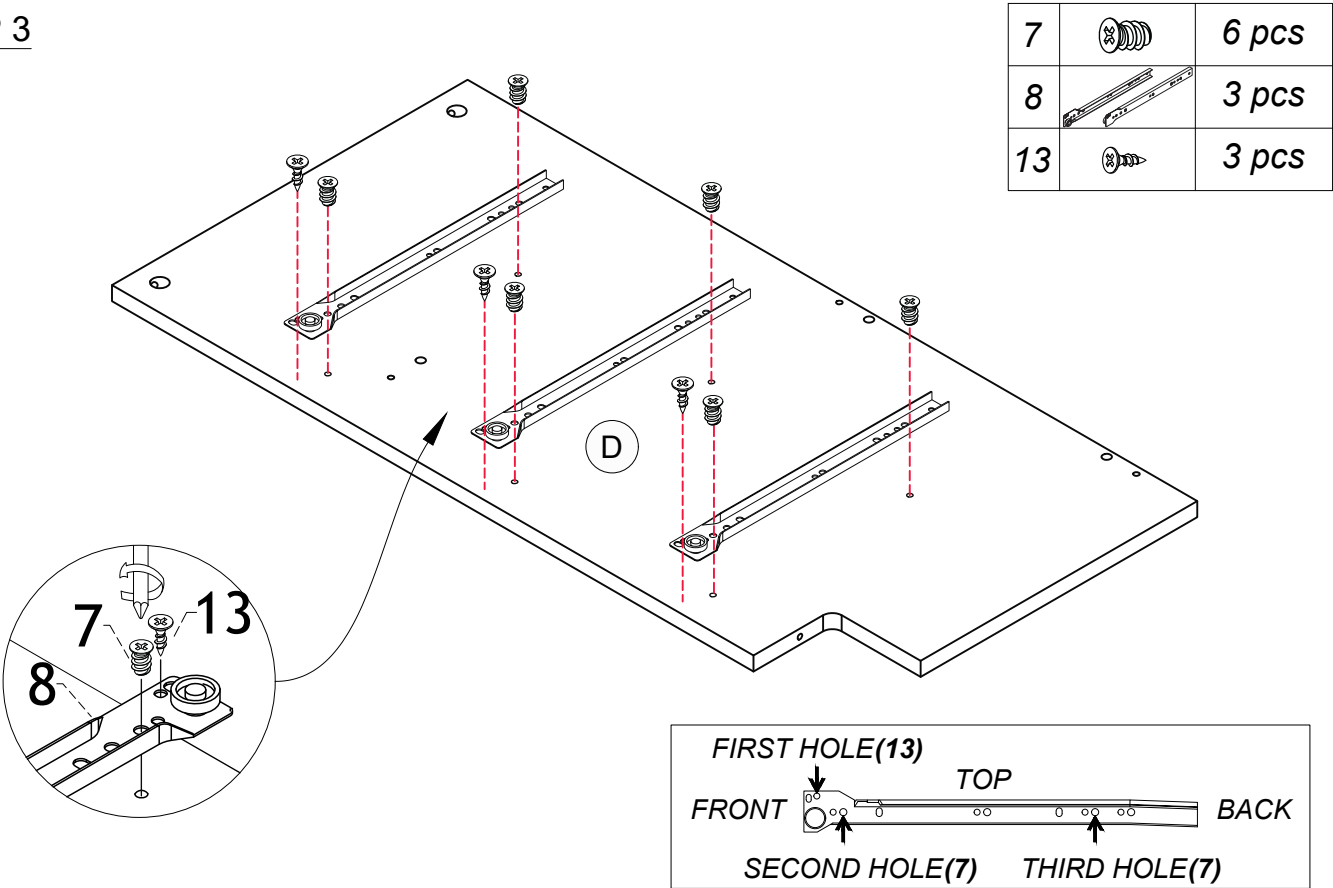


STEP 4

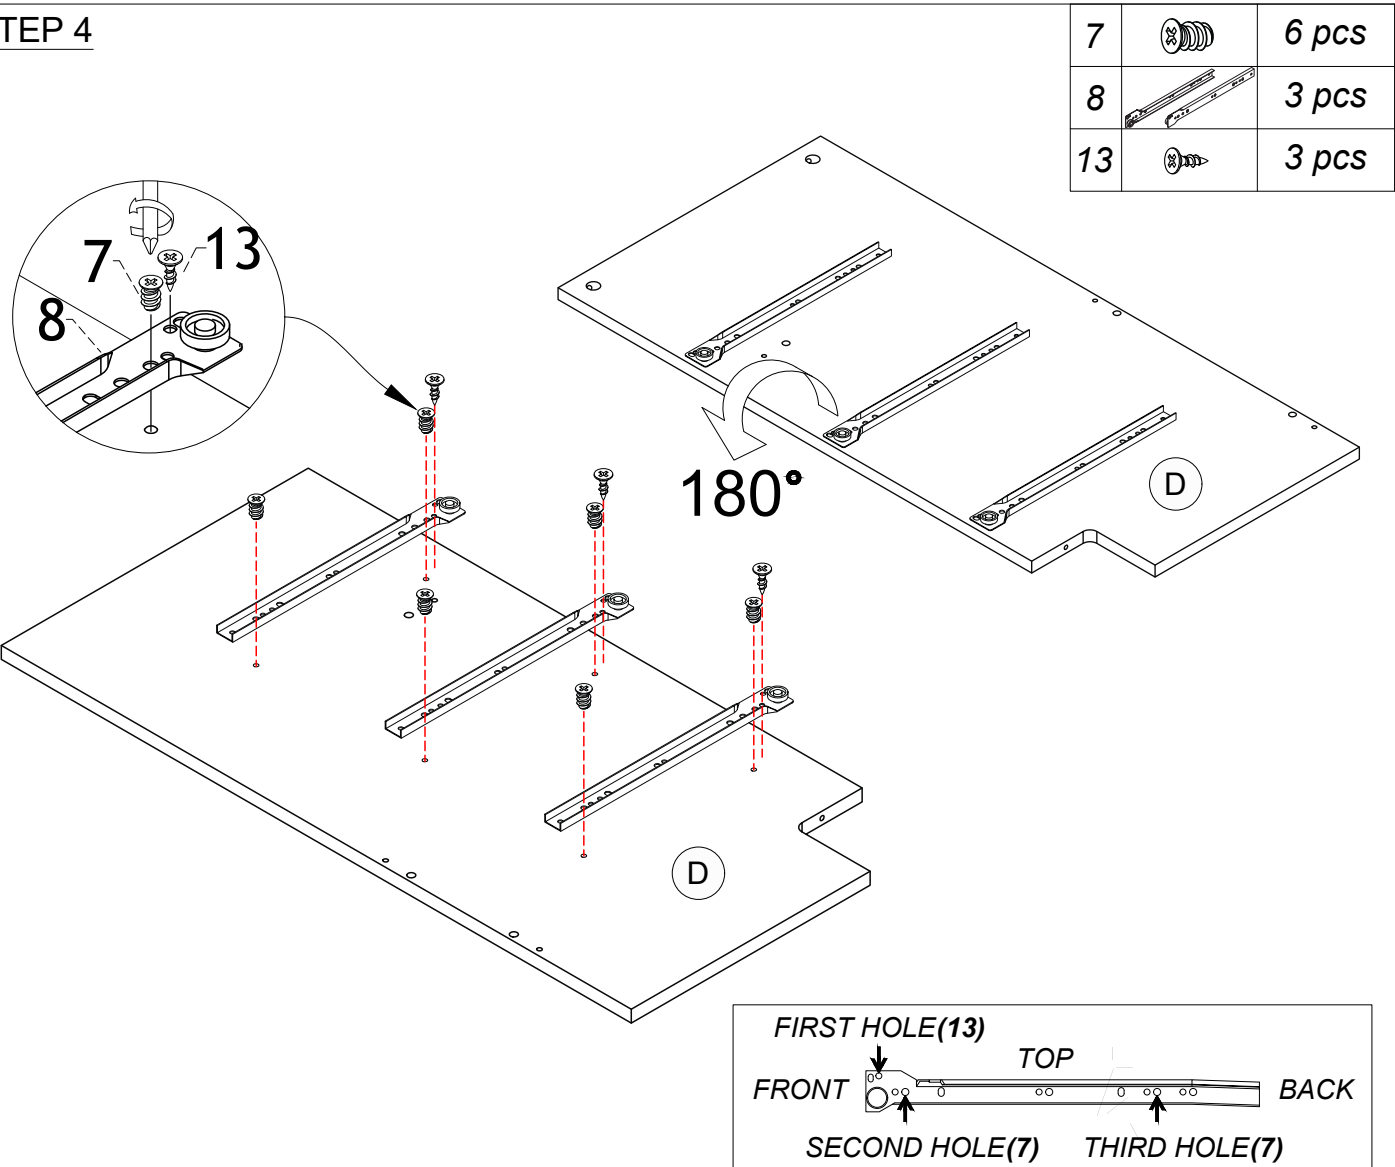



STEP 5

1		3 pcs
---	--	-------

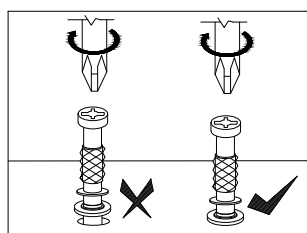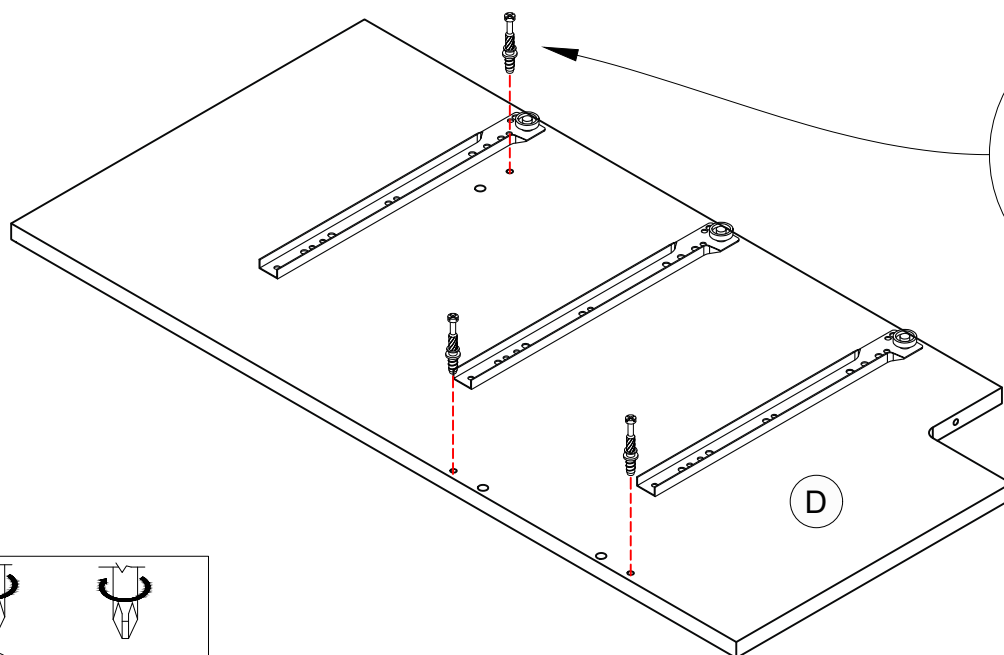


STEP 6

1		3 pcs
---	--	-------

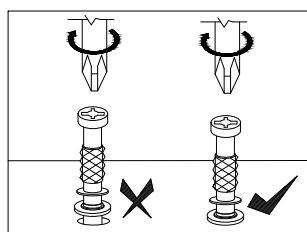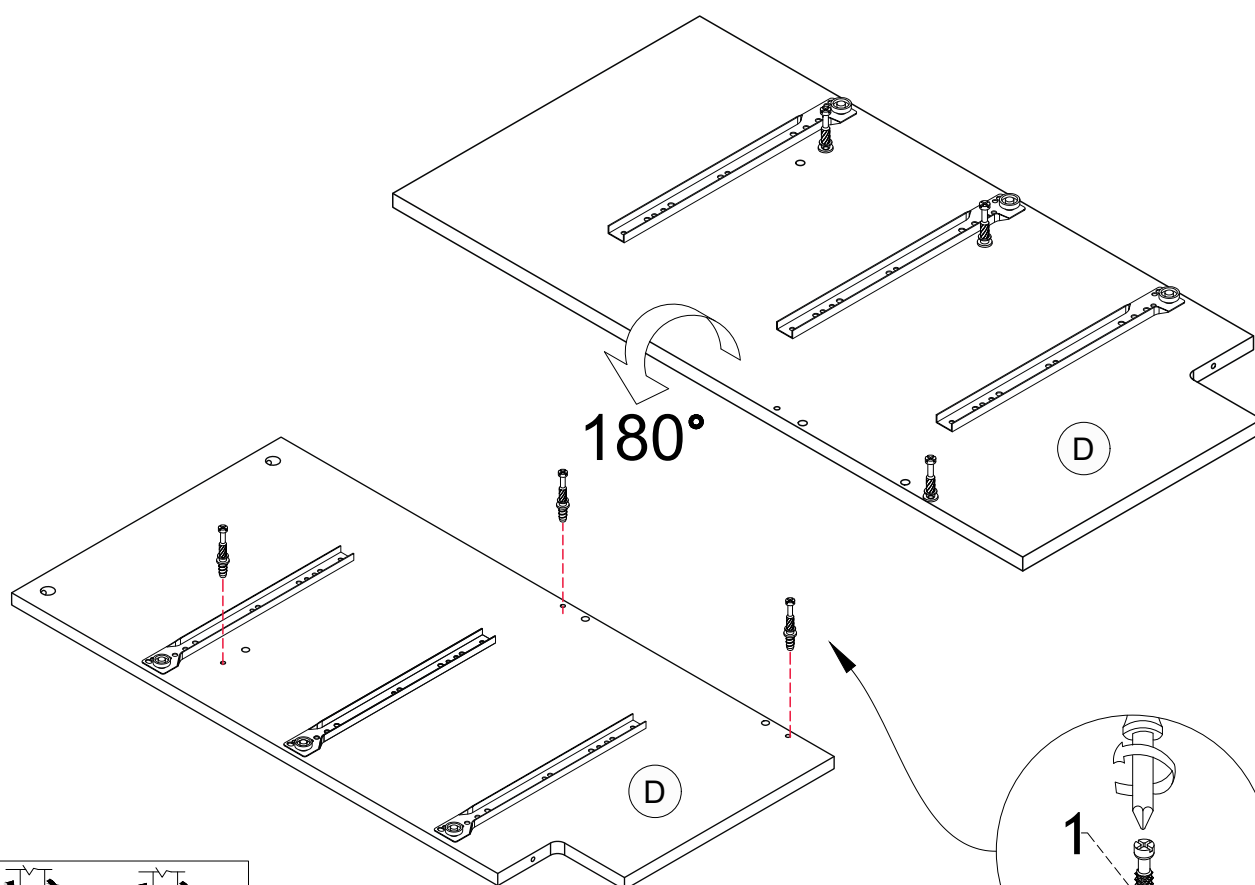


STEP 7

3		3 pcs
---	--	-------

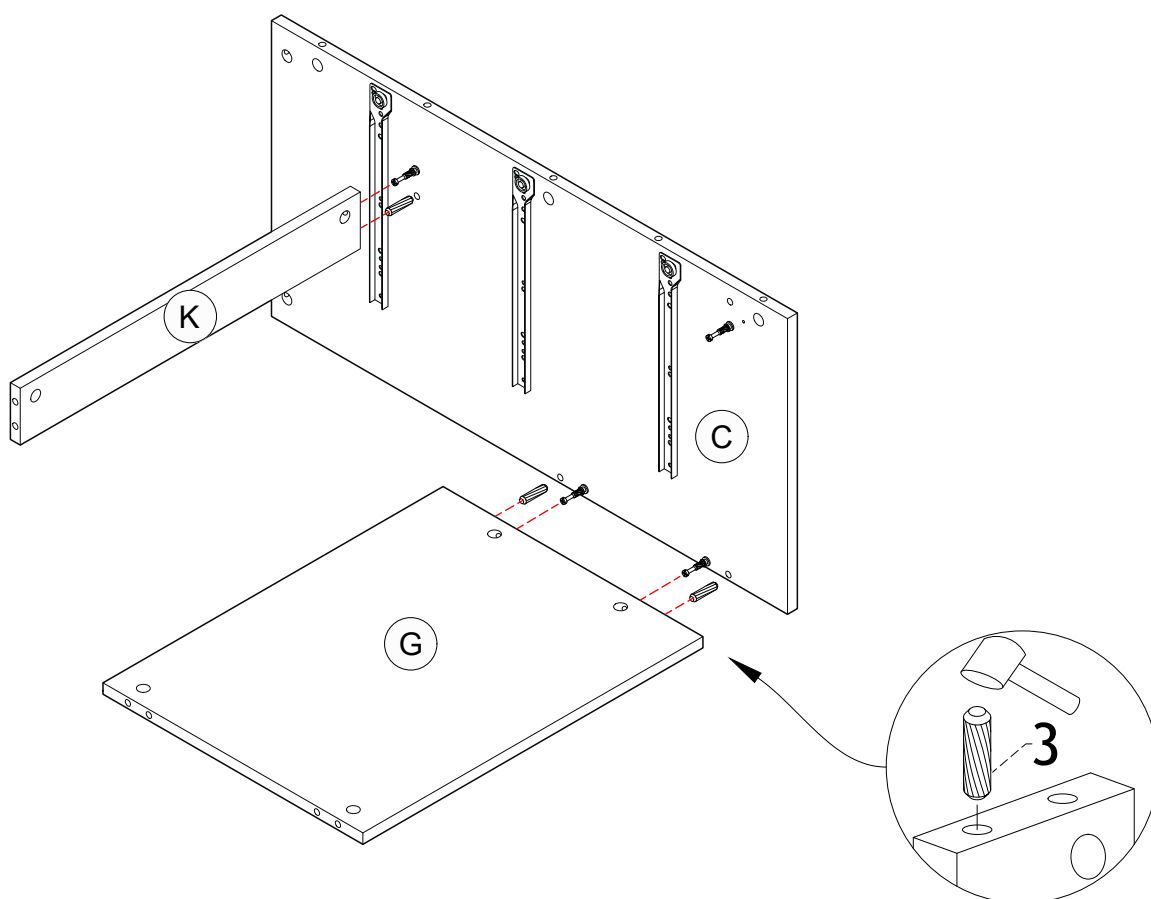


STEP 8

2		3 pcs
---	---	-------

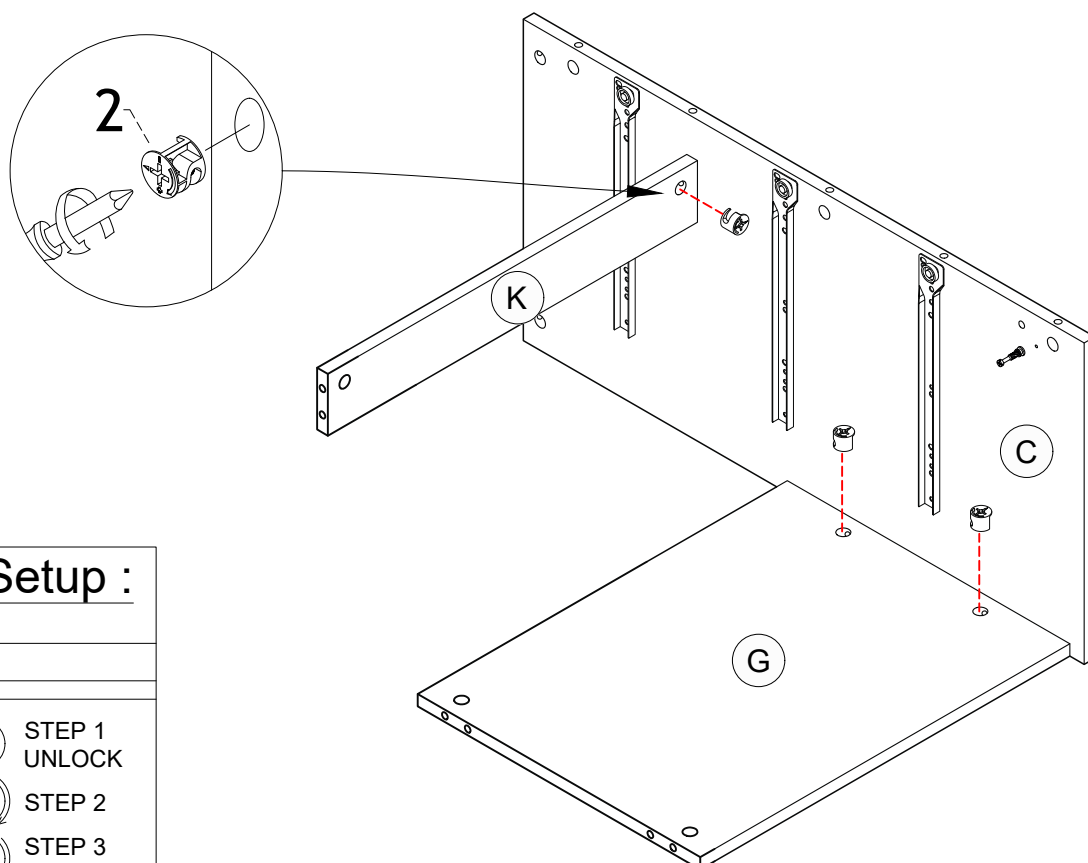


Minifix Setup :

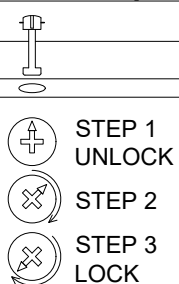



STEP 9

3		3 pcs
---	--	-------

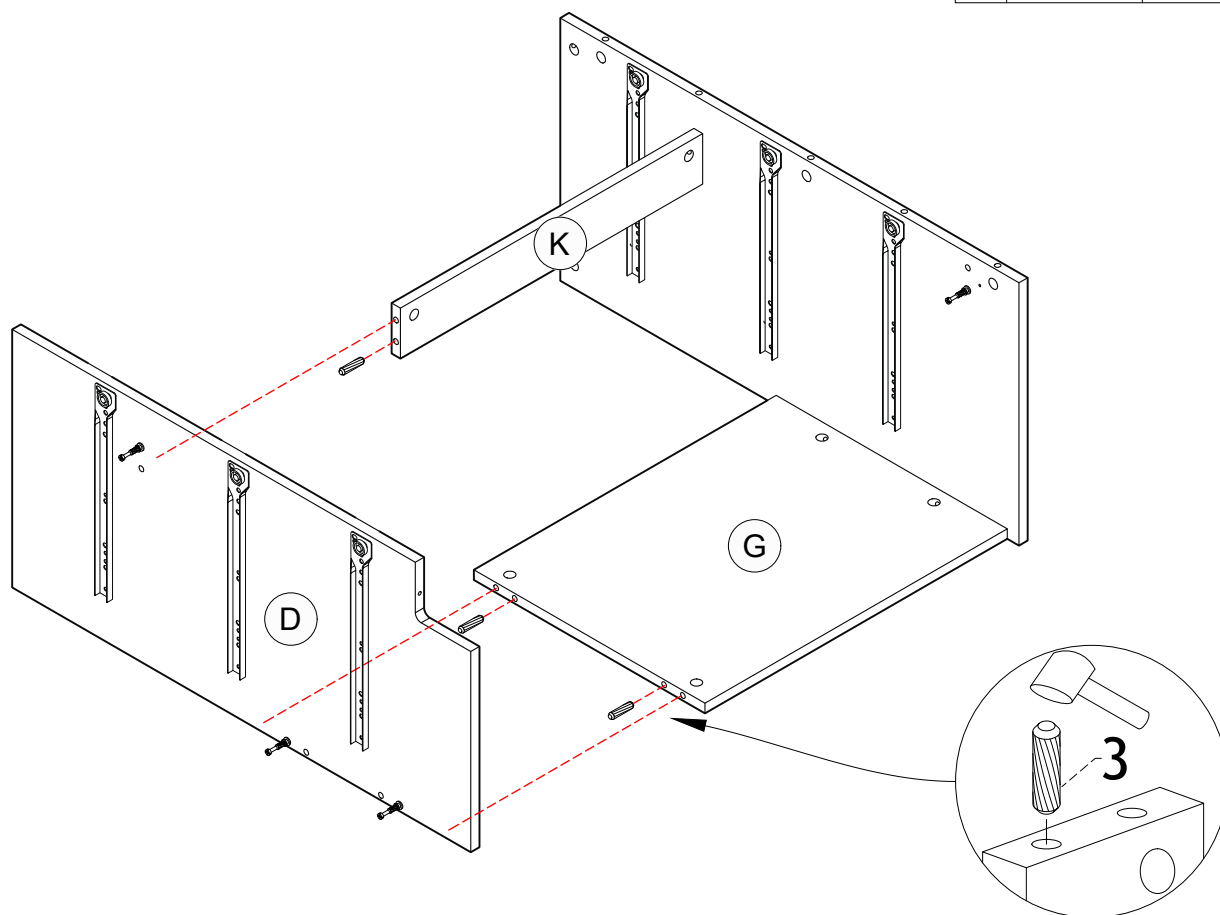

STEP 10

2		3 pcs
---	---	-------

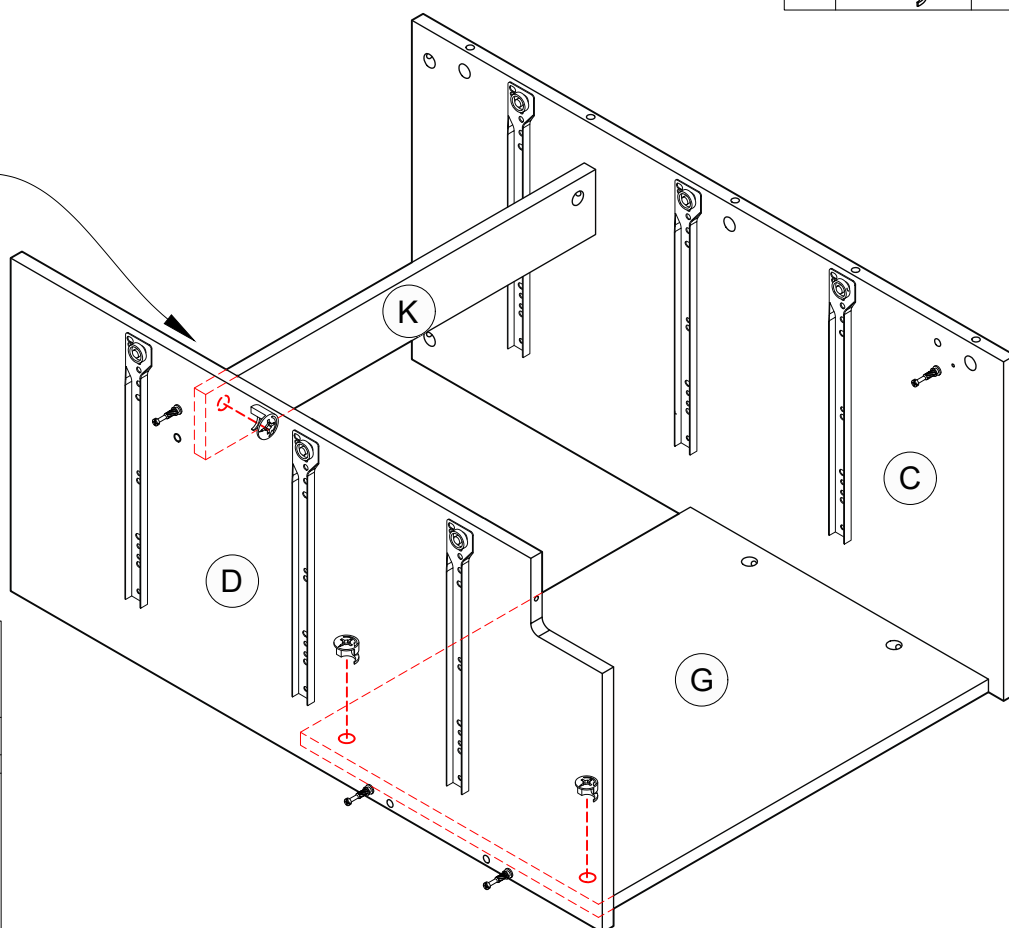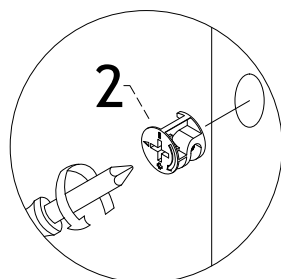

Minifix Setup :




STEP 1
UNLOCK

STEP 2

STEP 3
LOCK


STEP 11

5		2 pcs
12		2 pcs

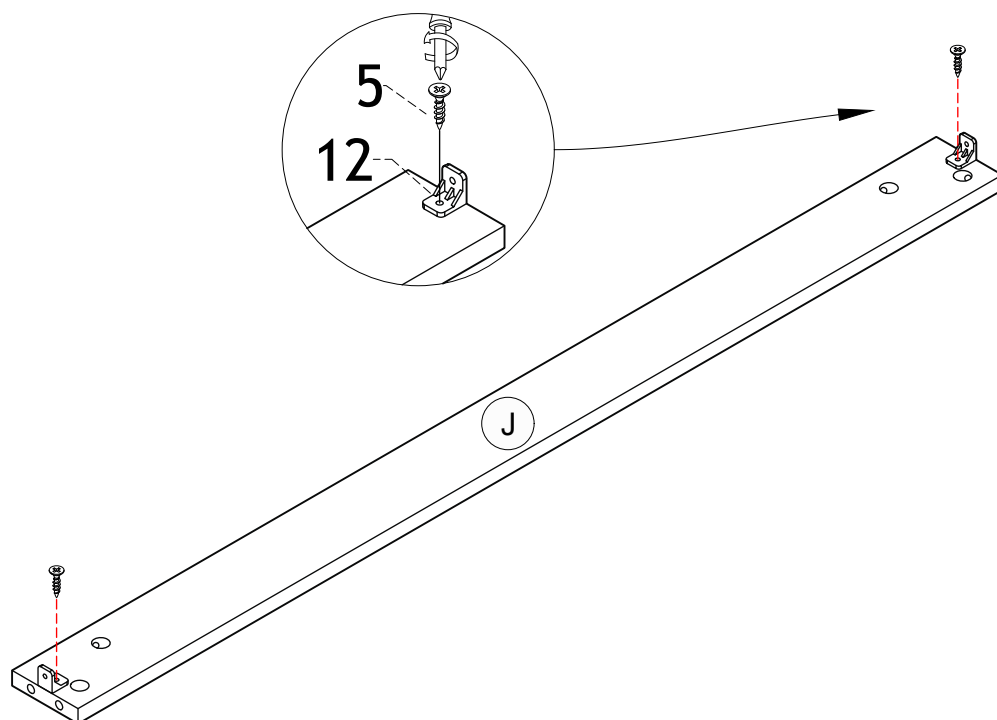

STEP 12

3		4 pcs
---	--	-------

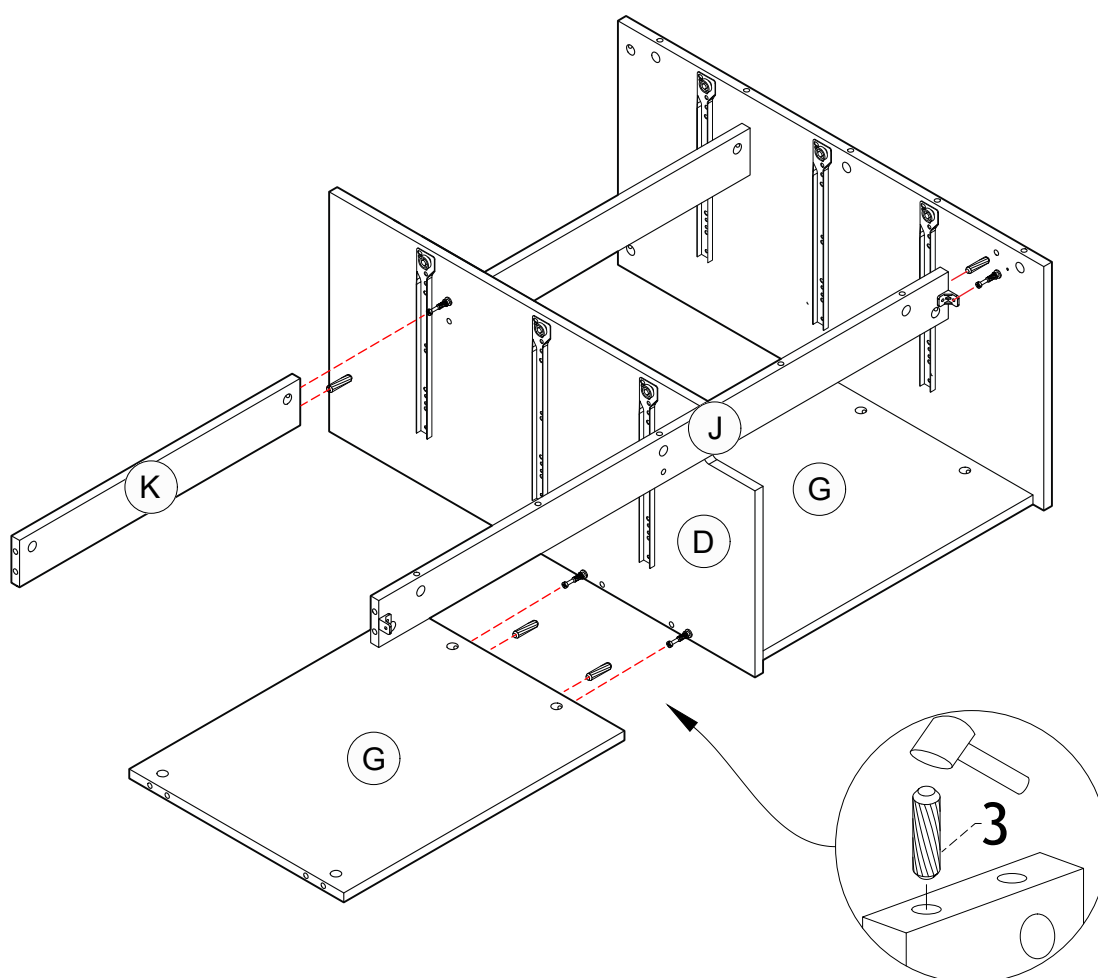

STEP 13

Minifix Setup :






STEP 1
UNLOCK




STEP 2



STEP 3
LOCK

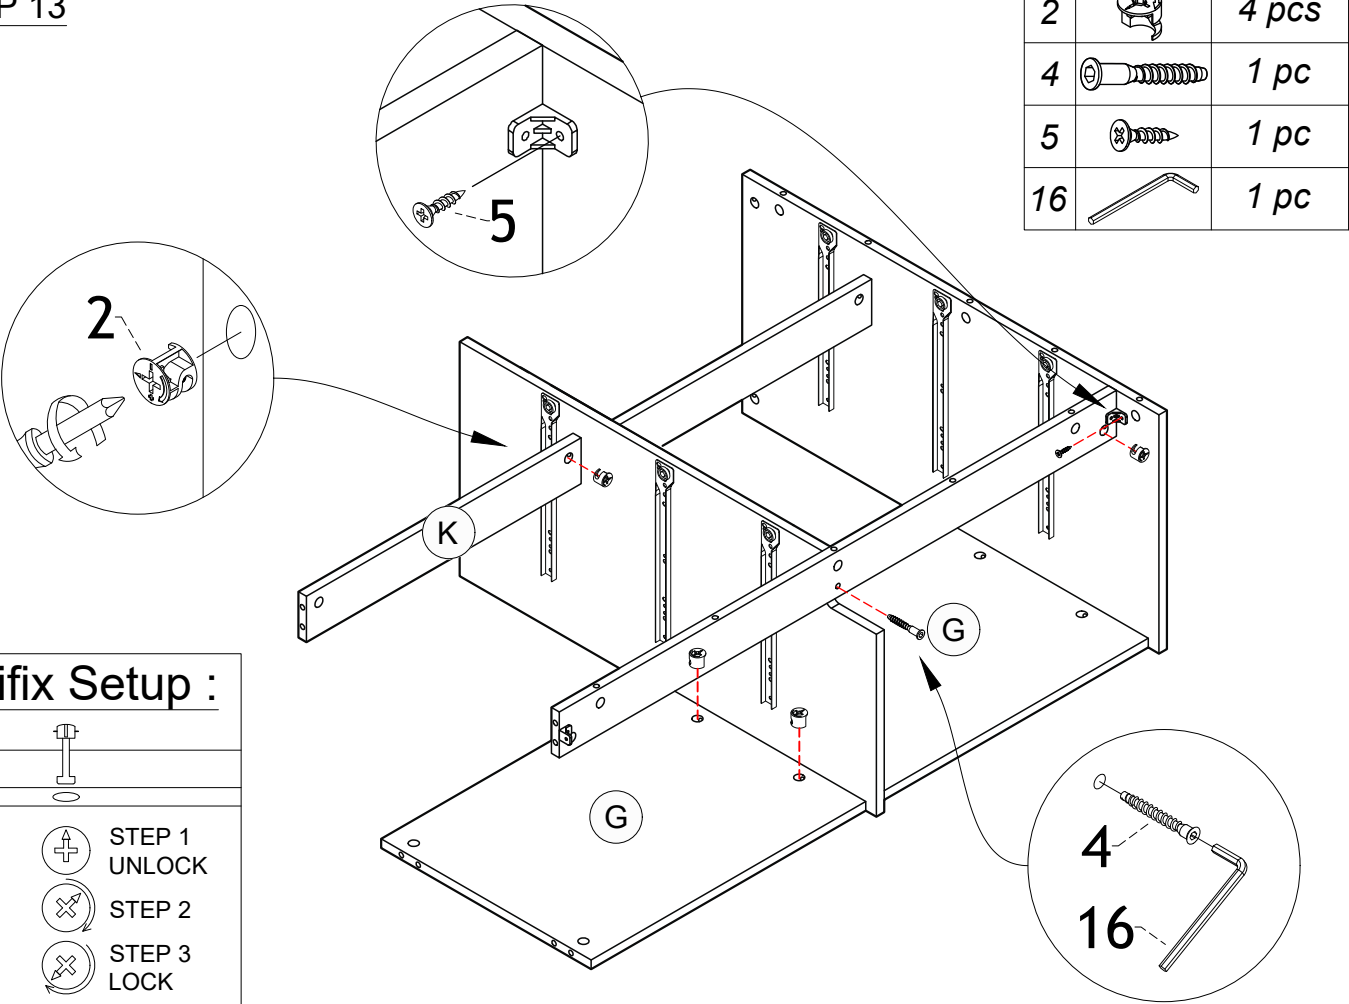


STEP 14

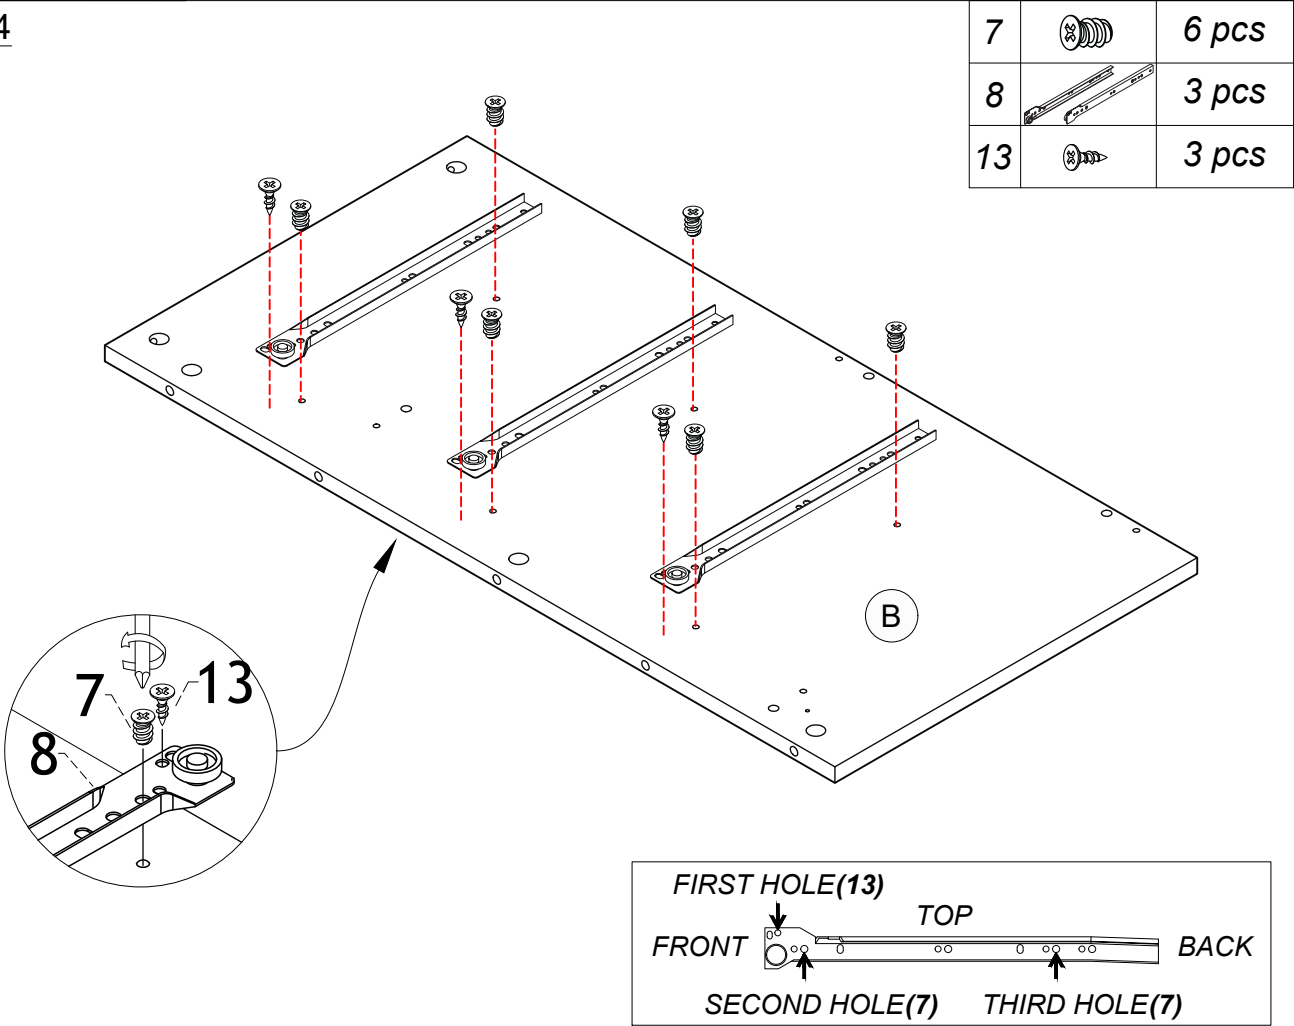


STEP 15

1		4 pcs
---	--	-------

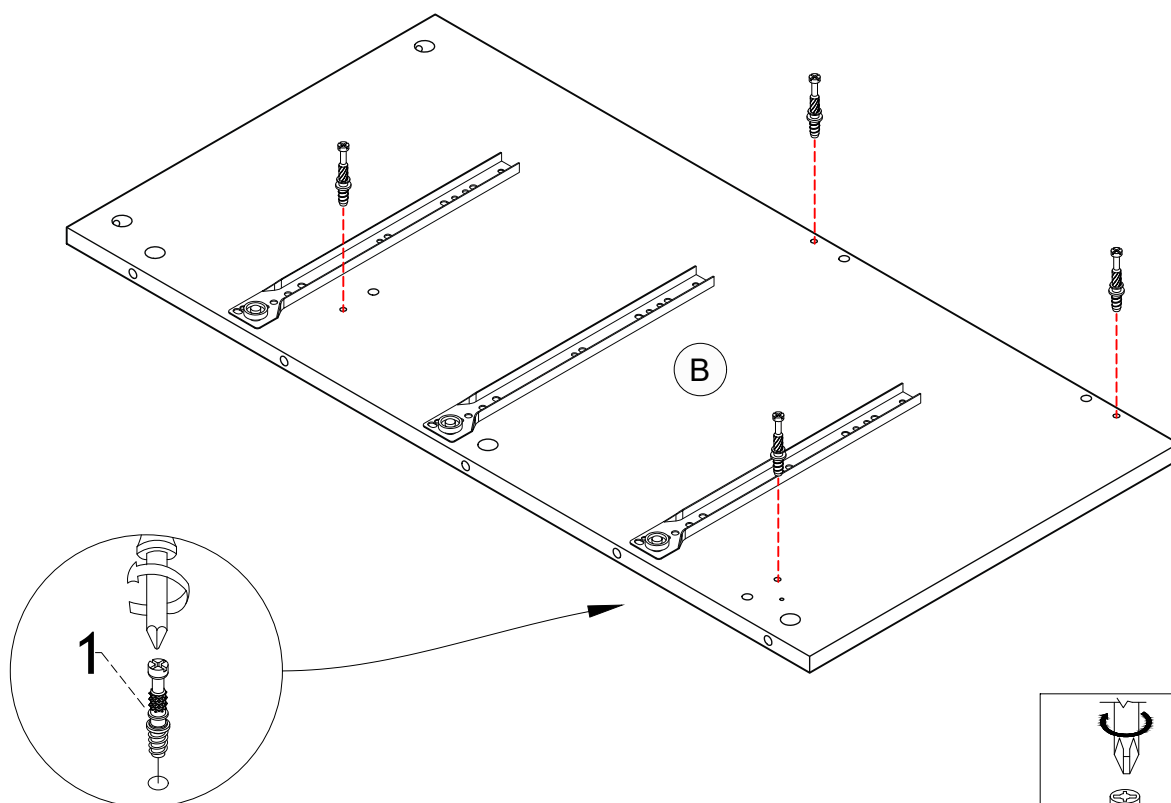


STEP 16

3		4 pcs
---	---	-------

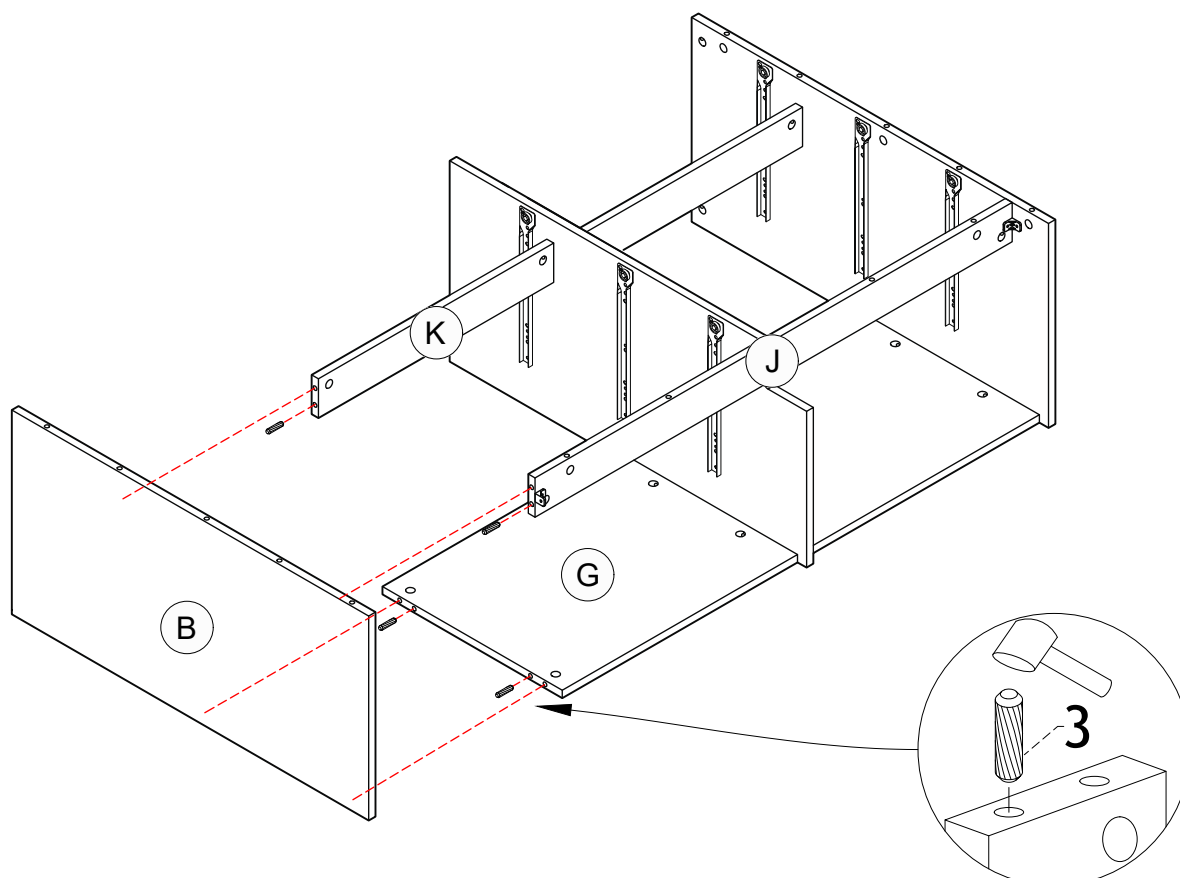


STEP 17

2		4 pcs
5		1 pc

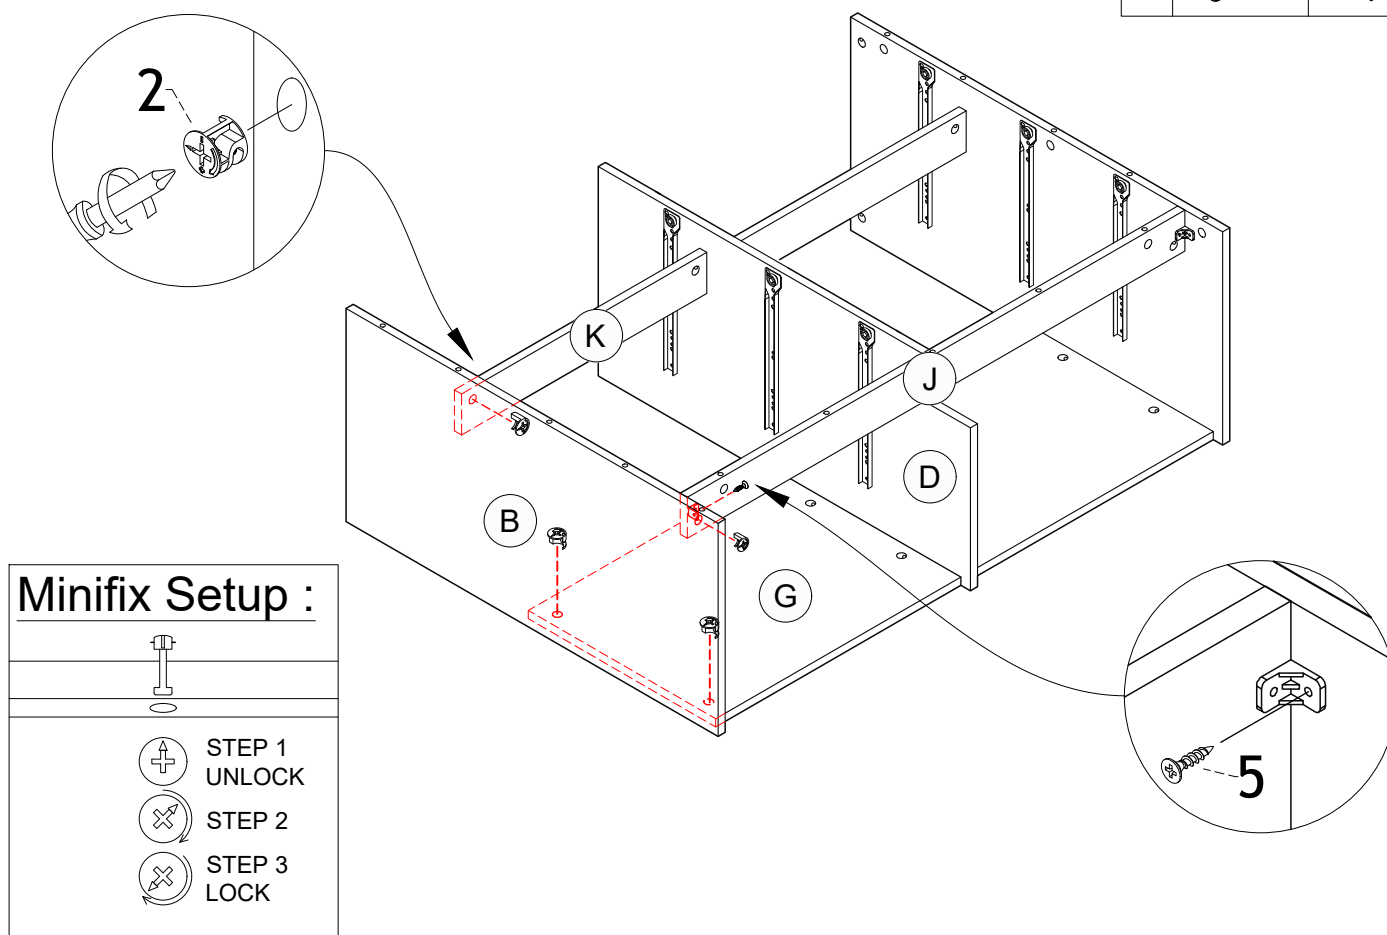


STEP 18

1		9 pcs
---	---	-------

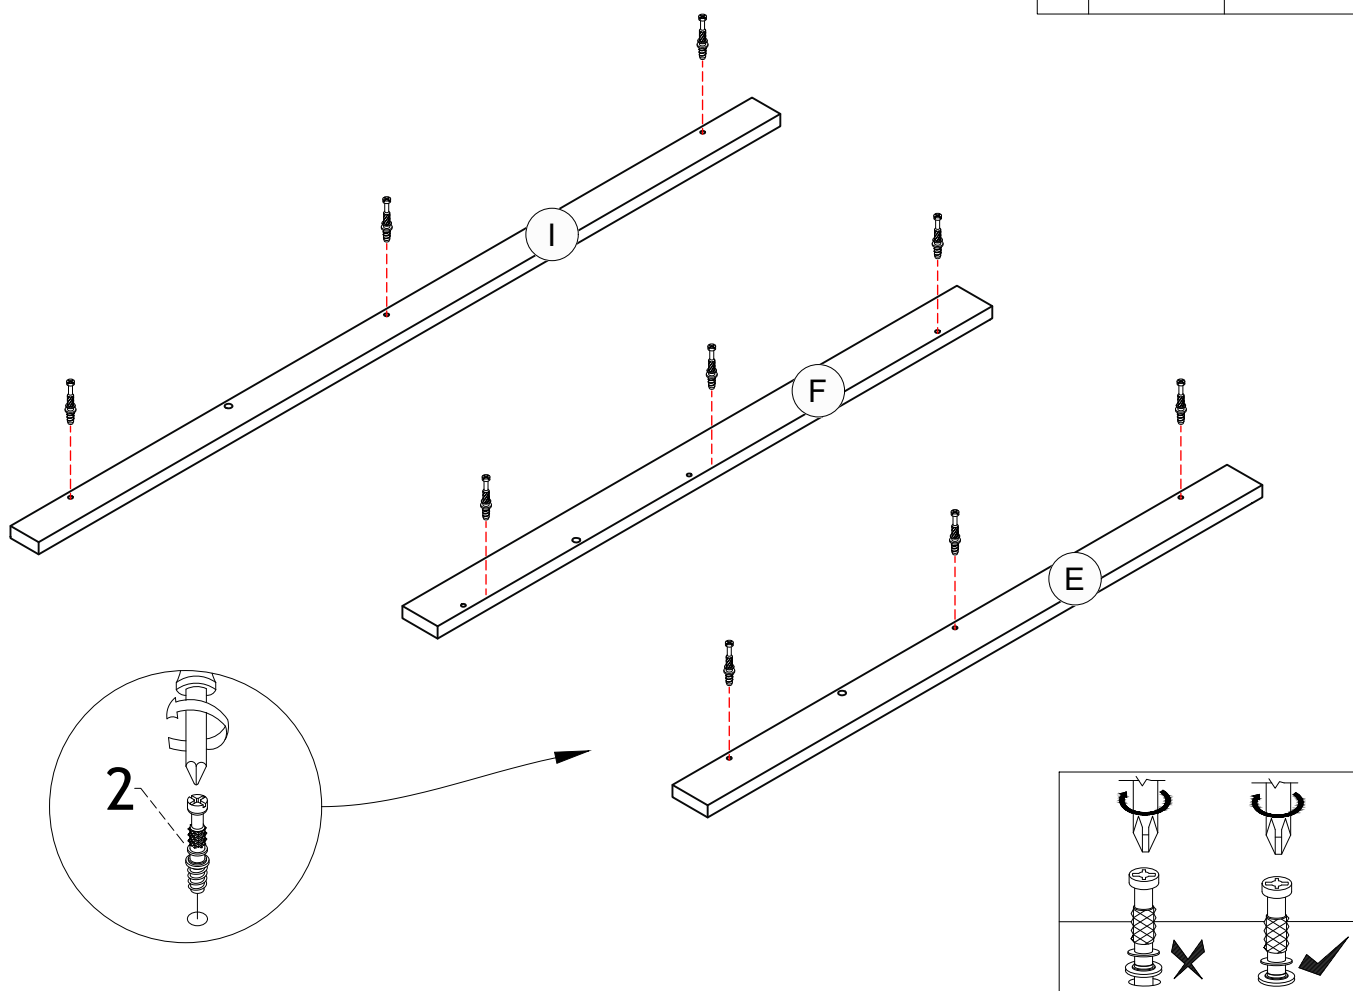


STEP 19

3		6 pcs
---	--	-------

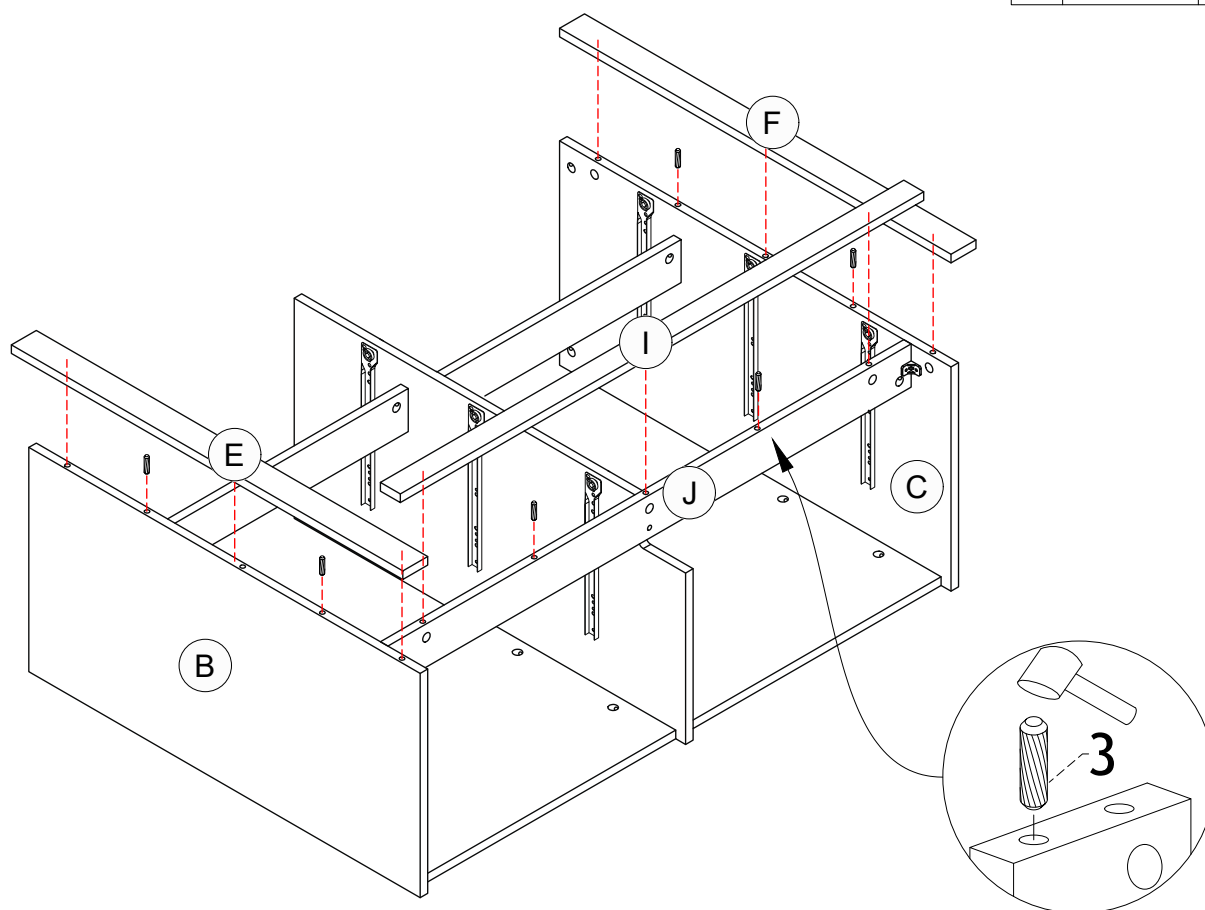

STEP 20

2		9 pcs
---	---	-------

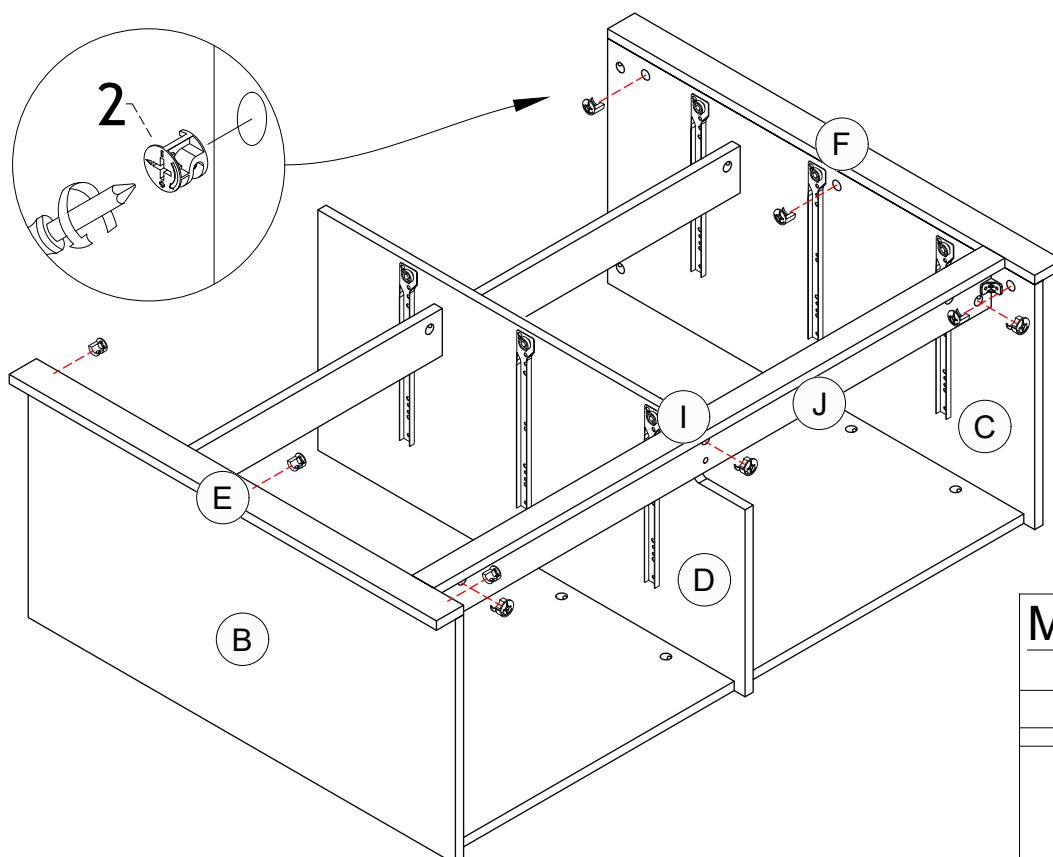


Minifix Setup :




-  STEP 1
UNLOCK
-  STEP 2
-  STEP 3
LOCK

STEP 21

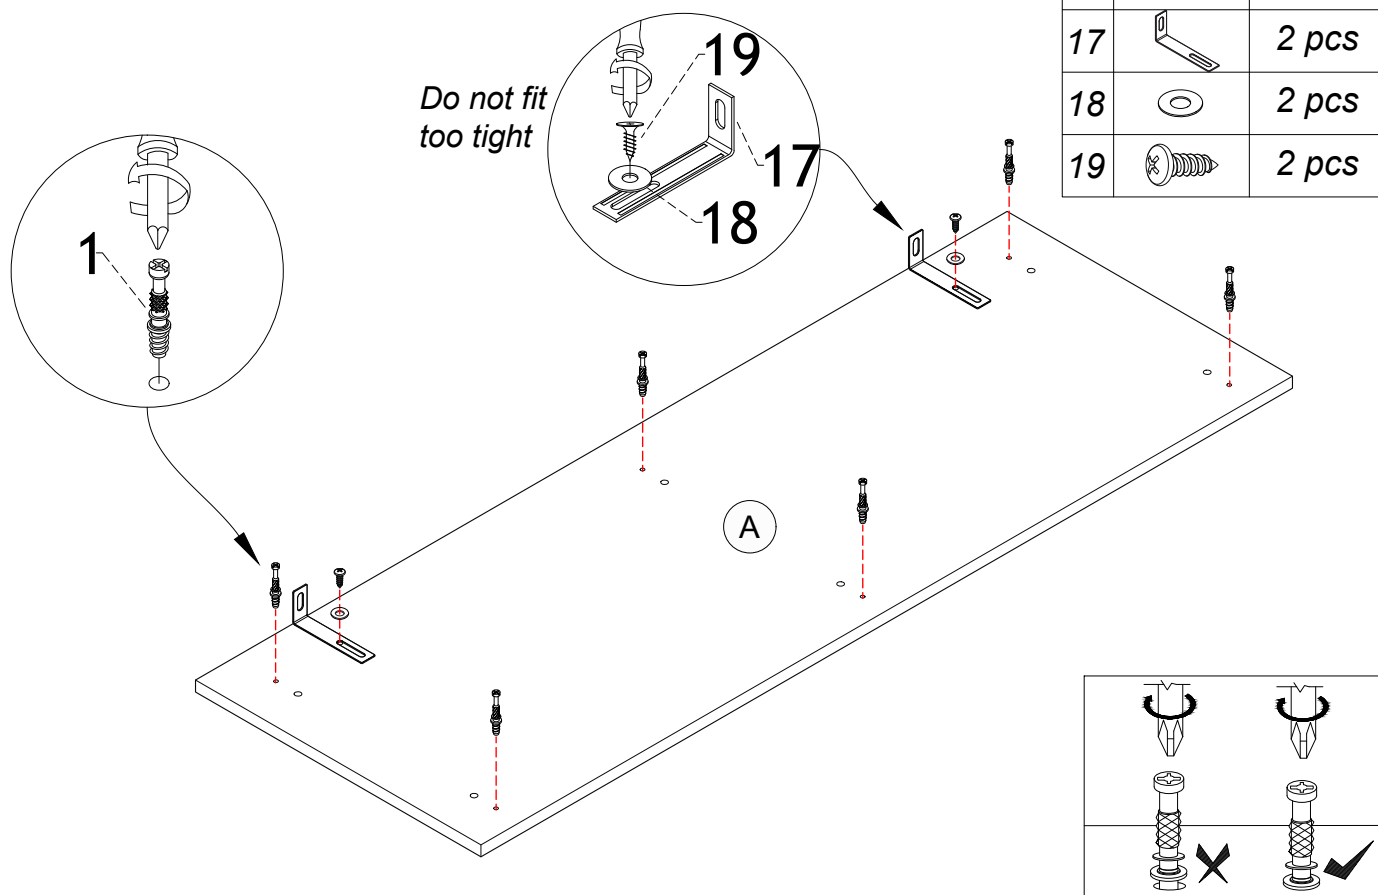


STEP 22

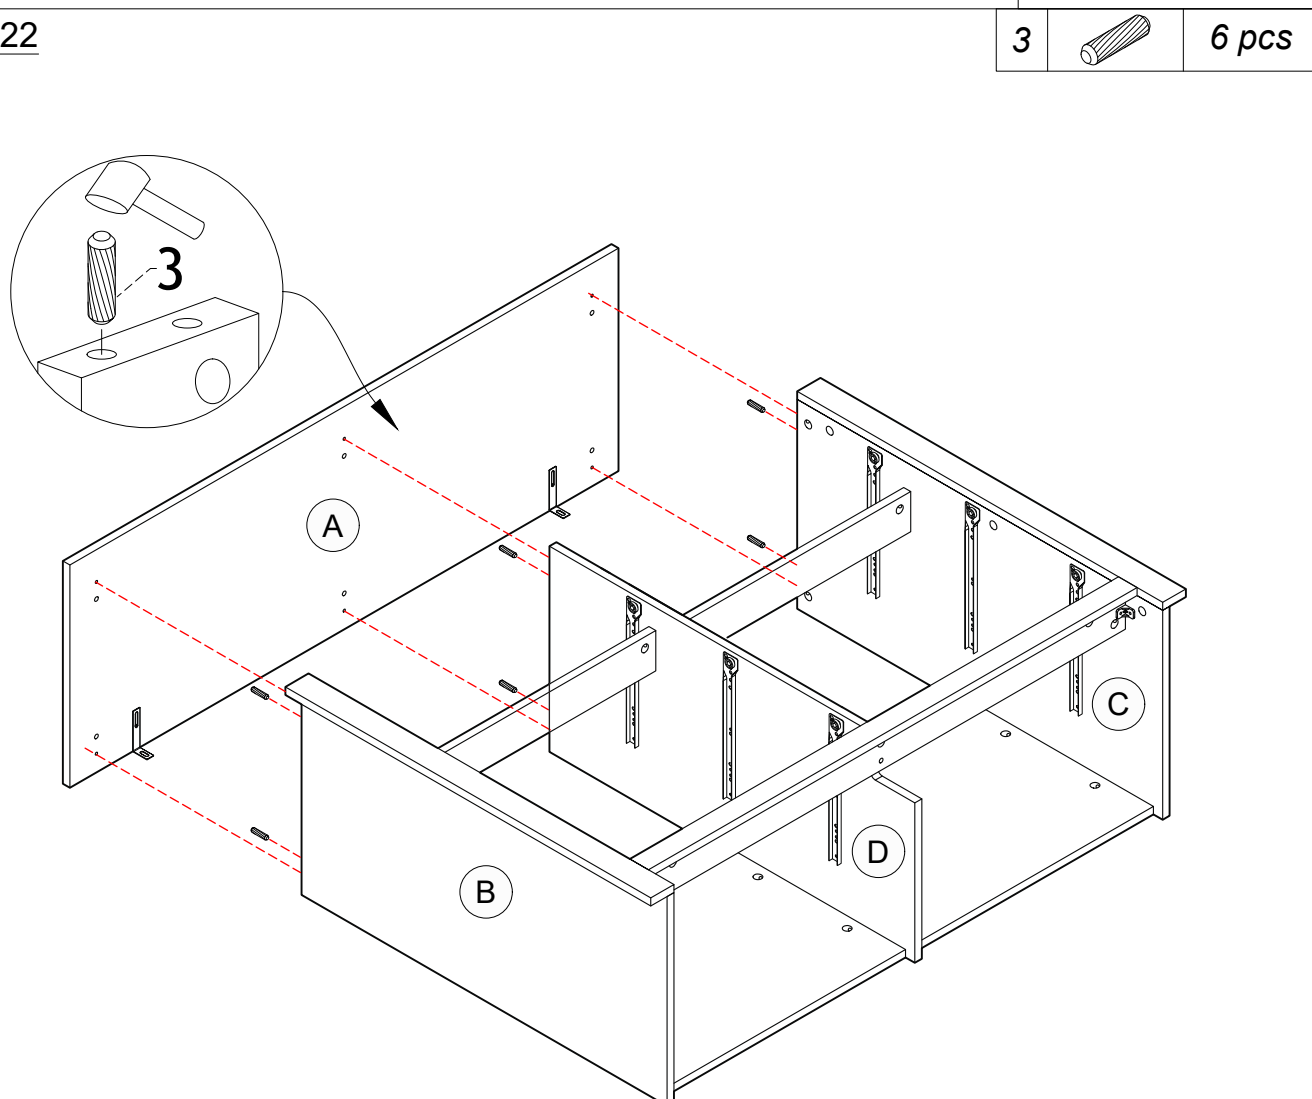

STEP 23

2		6 pcs
---	--	-------

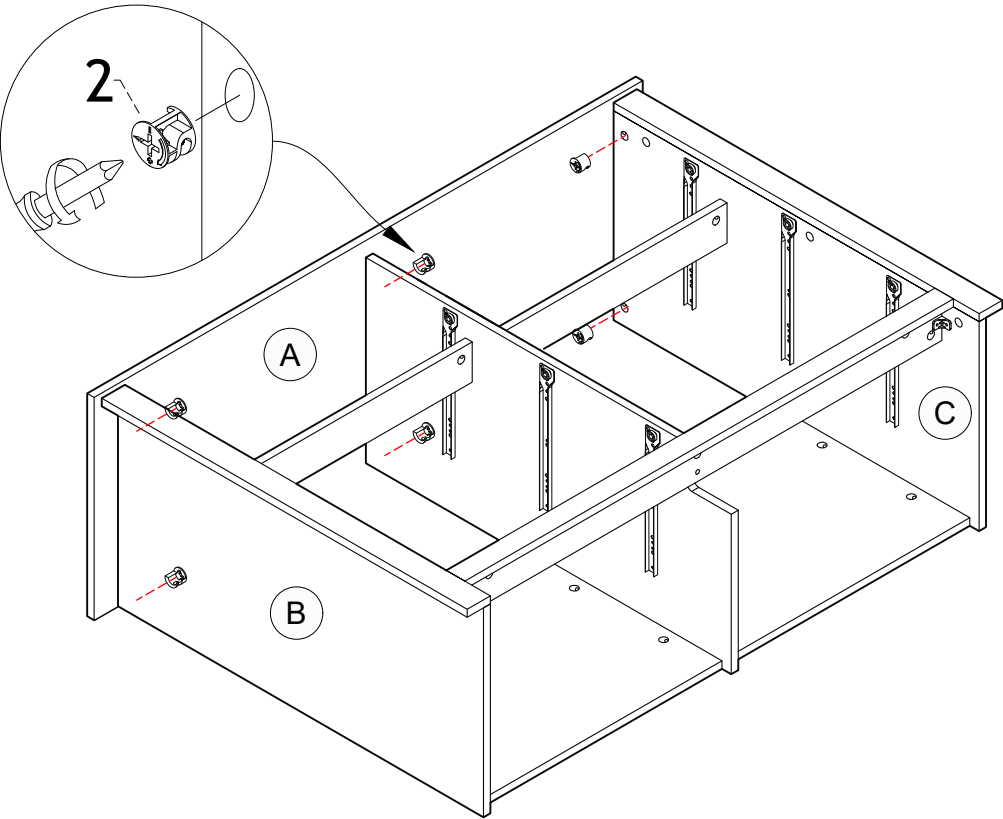


Minifix Setup :



		
	STEP 1	UNLOCK
	STEP 2	
	STEP 3	LOCK

STEP 24

5		4 pcs
11		6 pcs
14		9 pcs

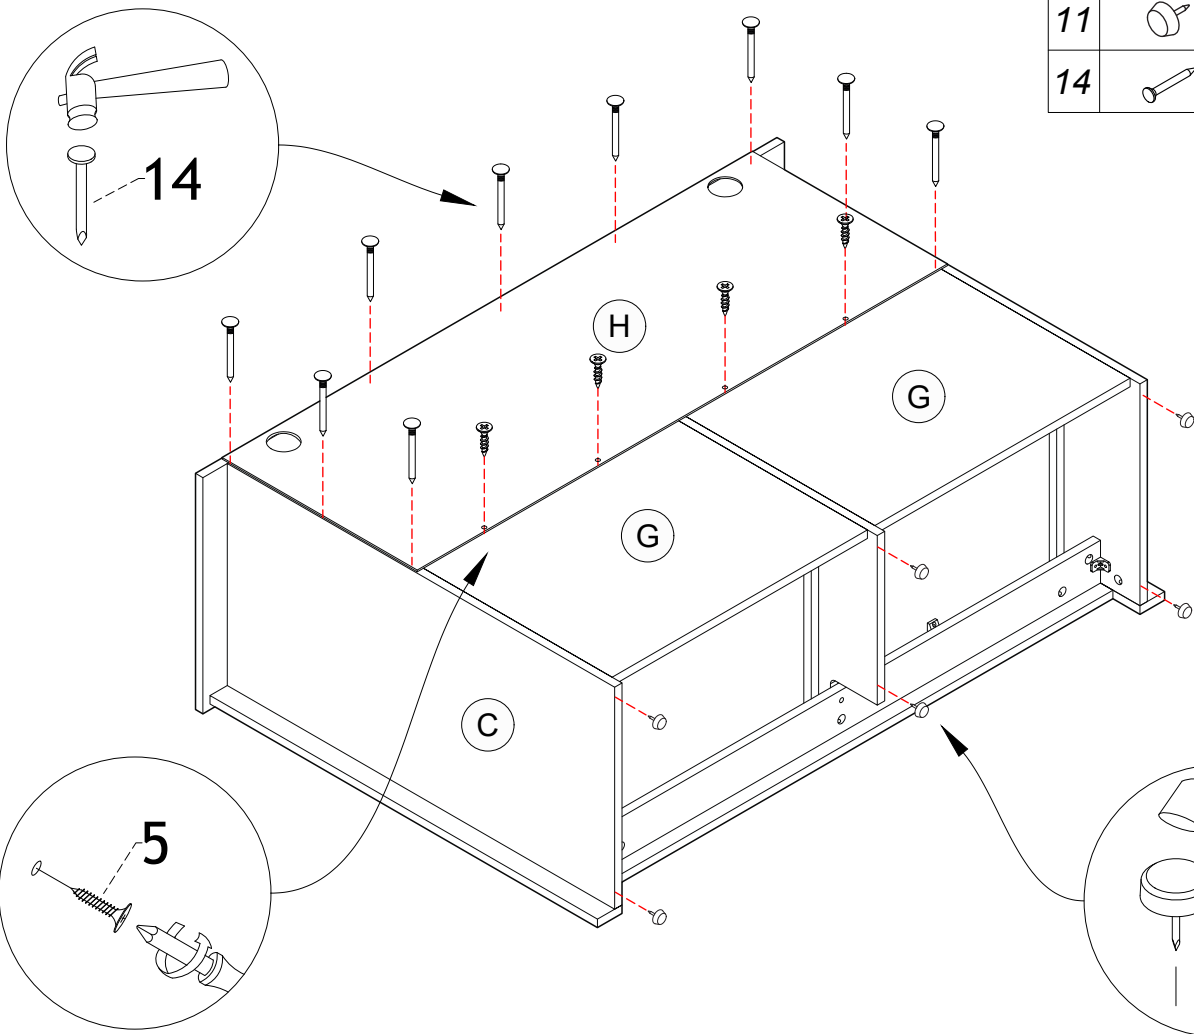

 WARNING
AVERTISSEMENT

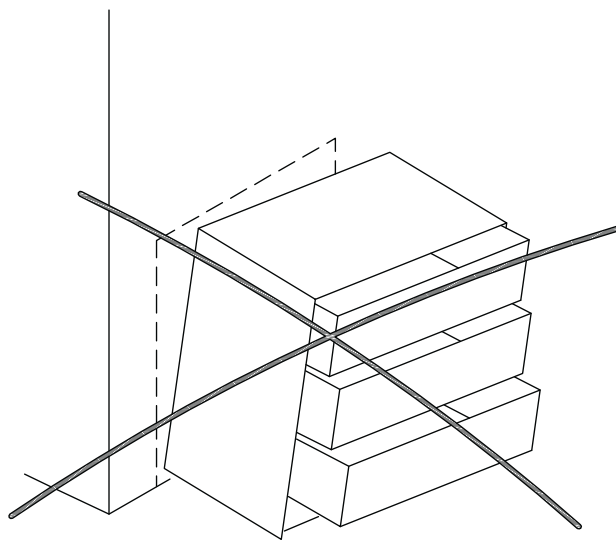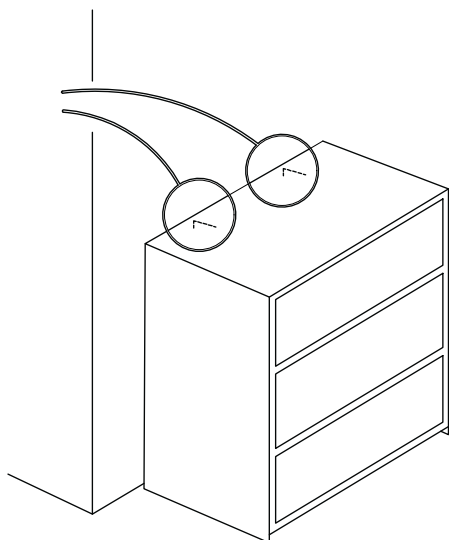


STEP 25

20



2 pcs


①

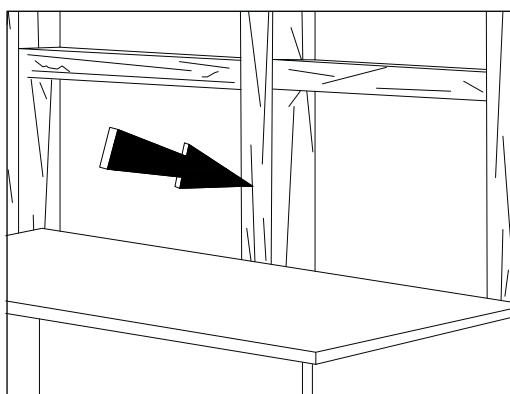

Locate a wall stud:


- Move the furniture unit to its final position to the wall
- Locate a wall stud behind the furniture unit

②

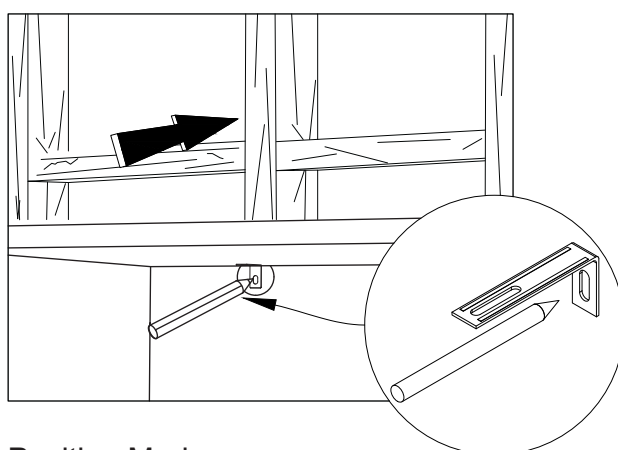


Position Mark:


- Use the Pencil to mark the positioning hole on a wall stud

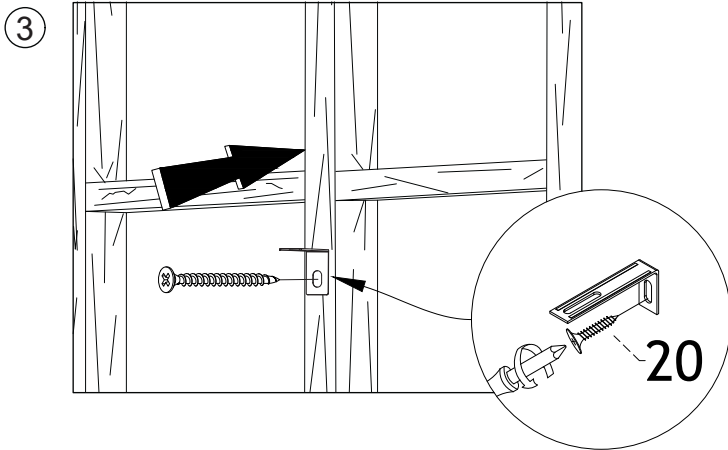


Screw the safety bracket to the wall stud:
- Screw the safety bracket (17) to the wall stud with Screw (20)

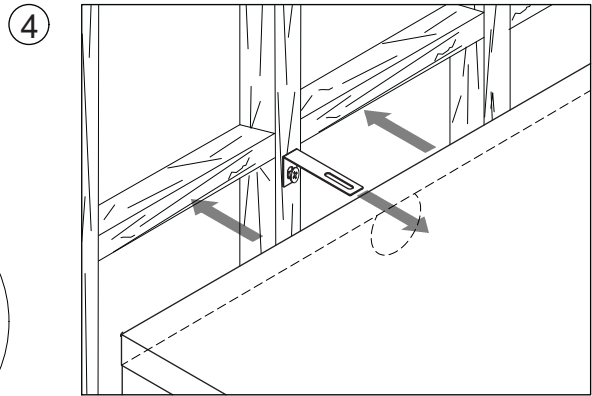

Move the furniture to the wall stud
- Move the furniture to the wall stud and make sure the safety bracket is in the hole


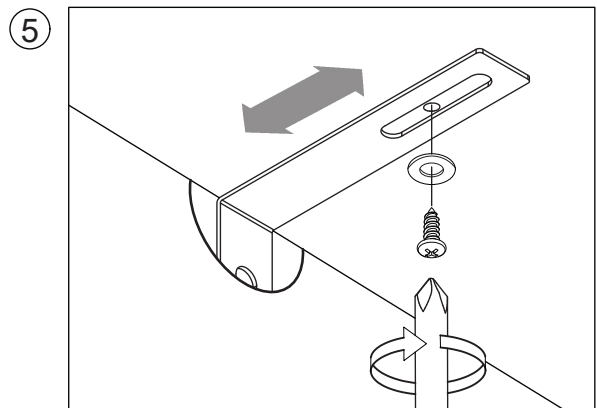


Screw the safety bracket to the furniture
- Screw the safety bracket to the bottom Top Furniture with Flat Washer (18) and Screw (19)

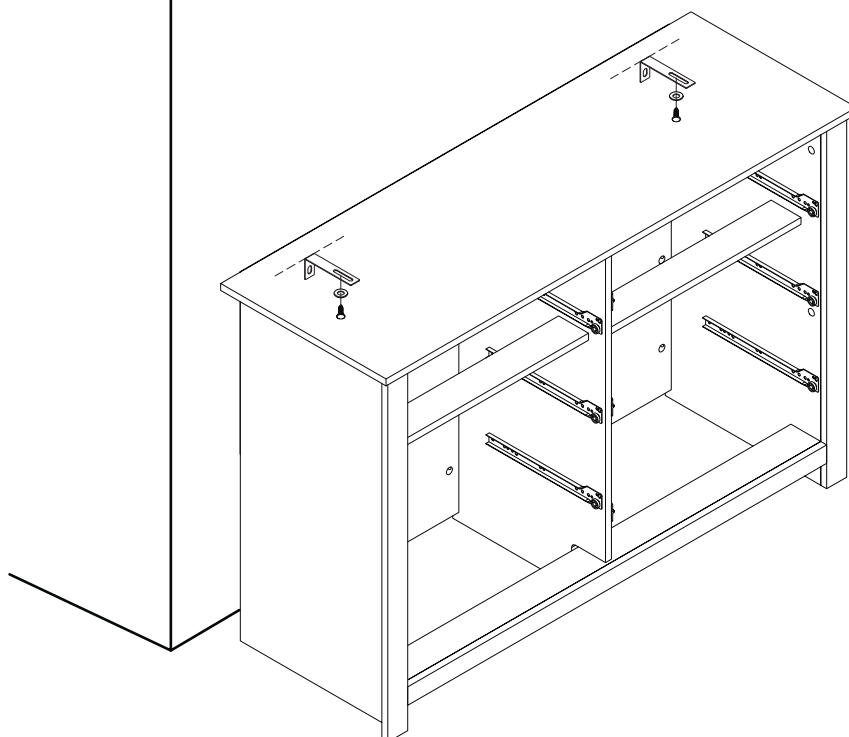

STEP 26


1		12 pcs
---	--	--------

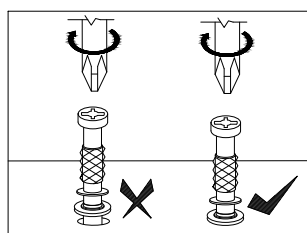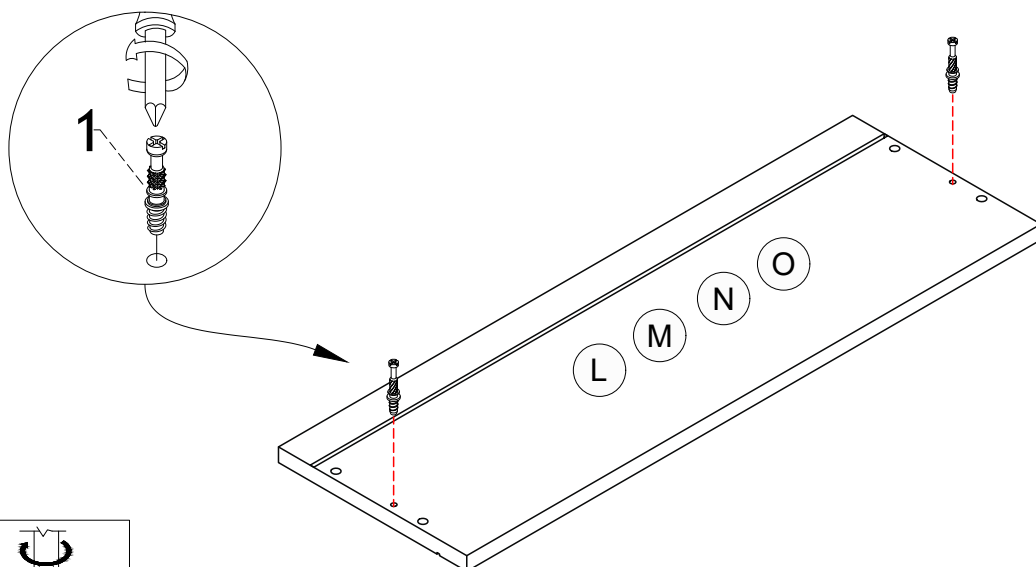

(6x)

STEP 27


3		24 pcs
---	--	--------

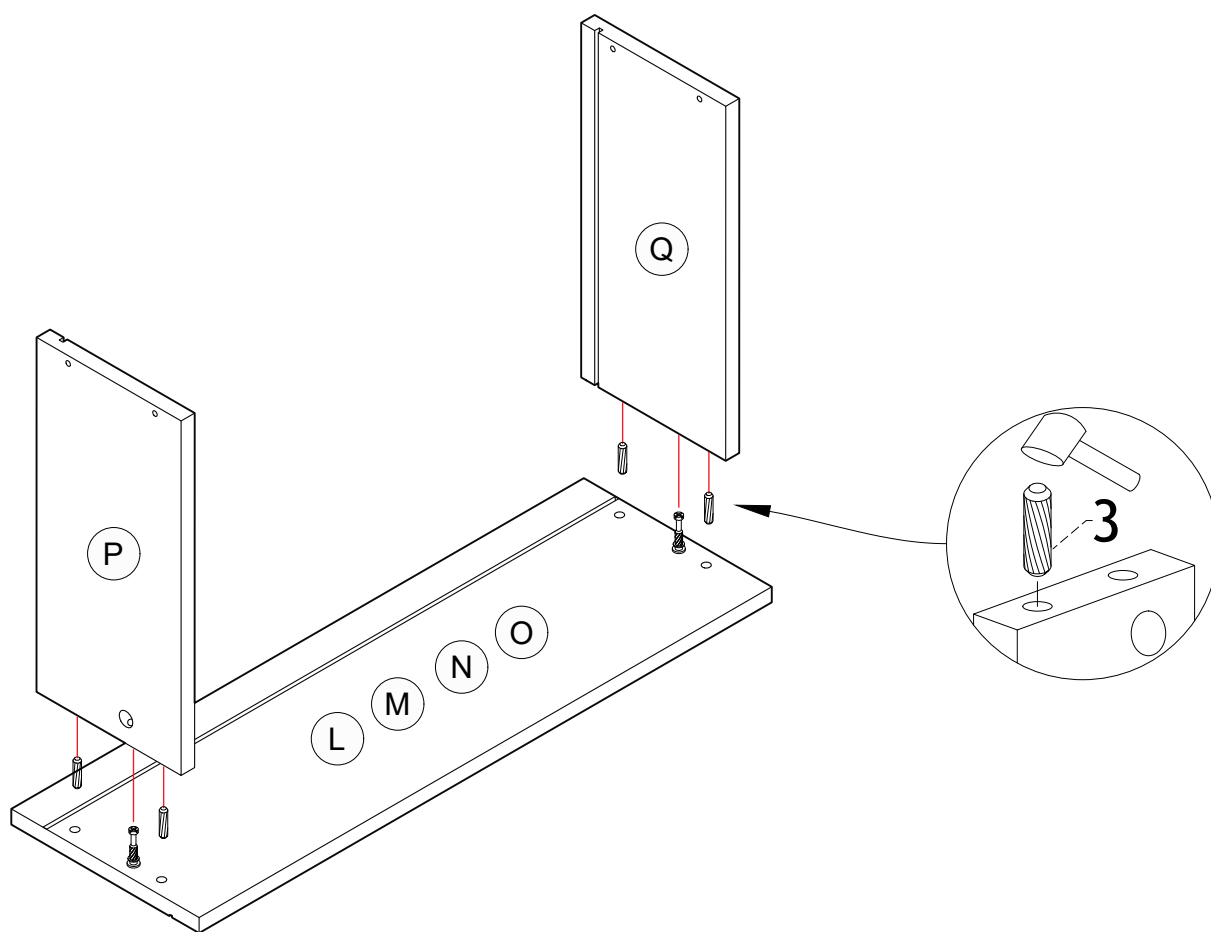

(6x)

STEP 28

2		12 PCS
---	--	--------

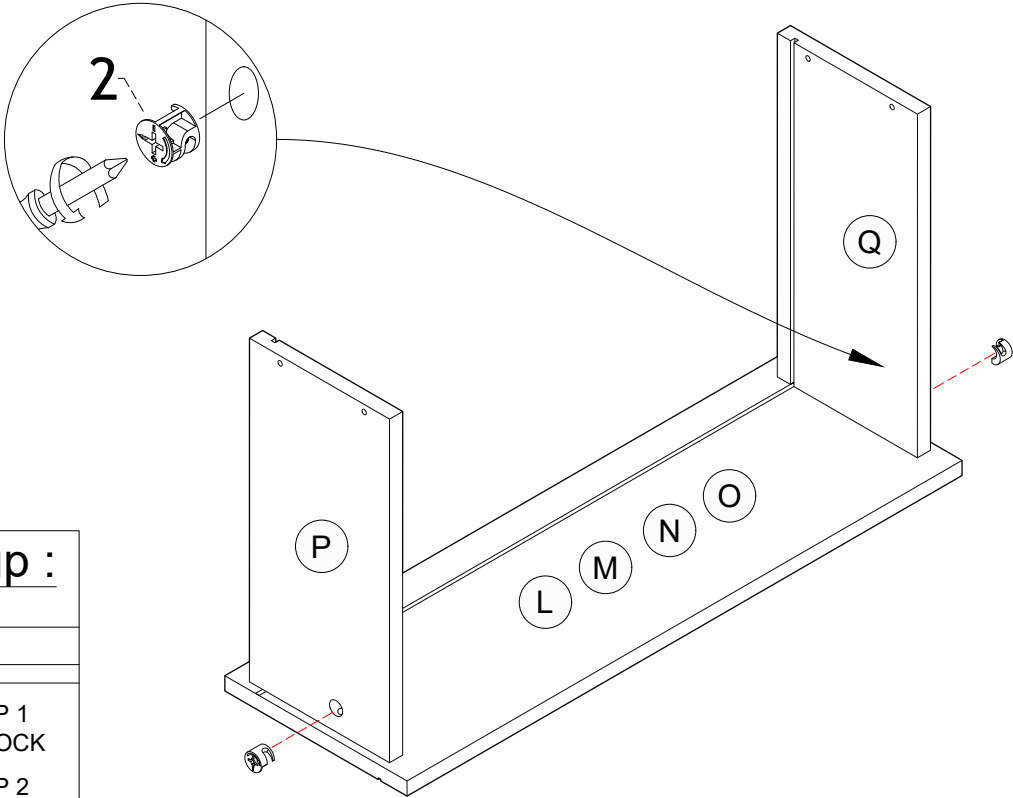


(6x)

Minifix Setup :

	
	STEP 1 UNLOCK
	STEP 2
	STEP 3 LOCK

STEP 29



6		24 pcs
---	---	--------

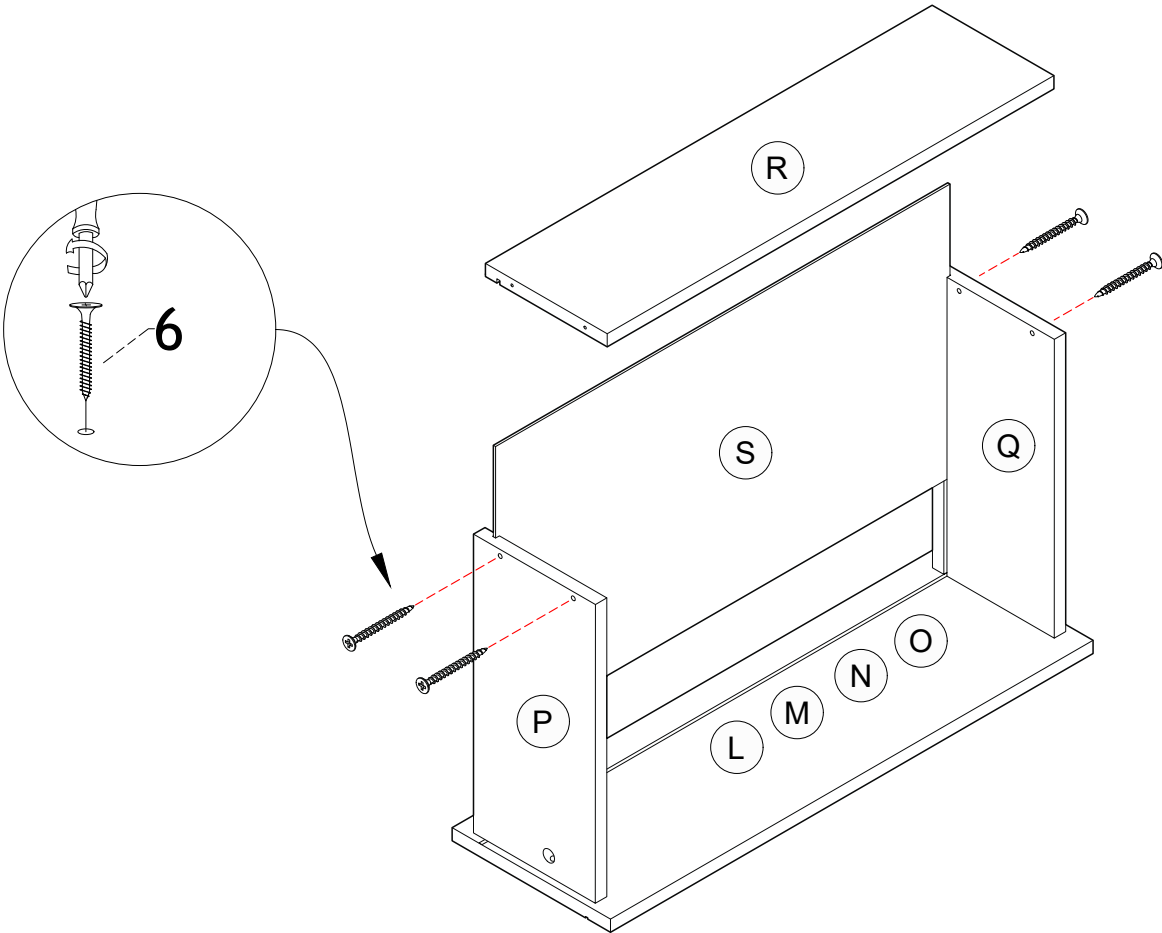

(6x)

STEP 30



10		8 pcs
15		4 pcs

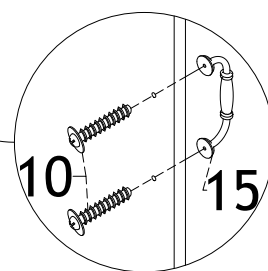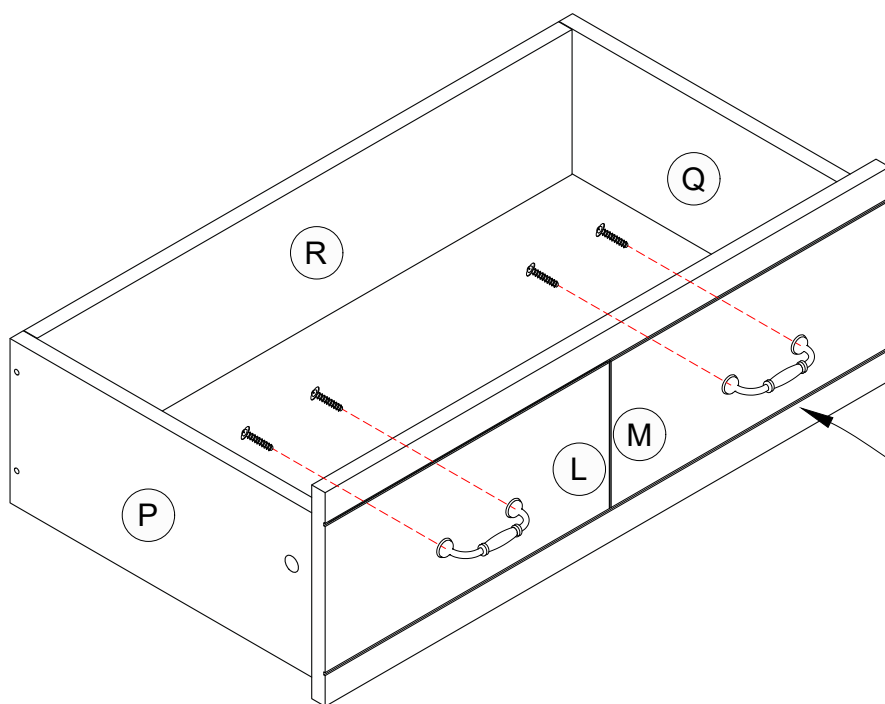

(2x)

STEP 31



10		8 pcs
15		4 pcs

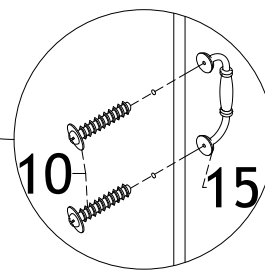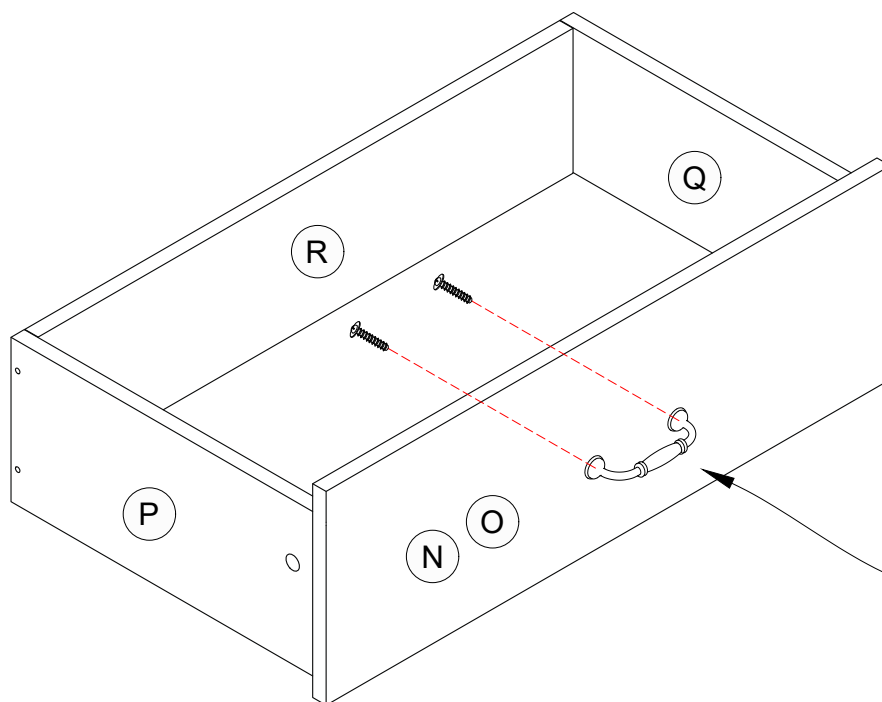

(4x)

STEP 32

5		24 pcs
9		6 pcs

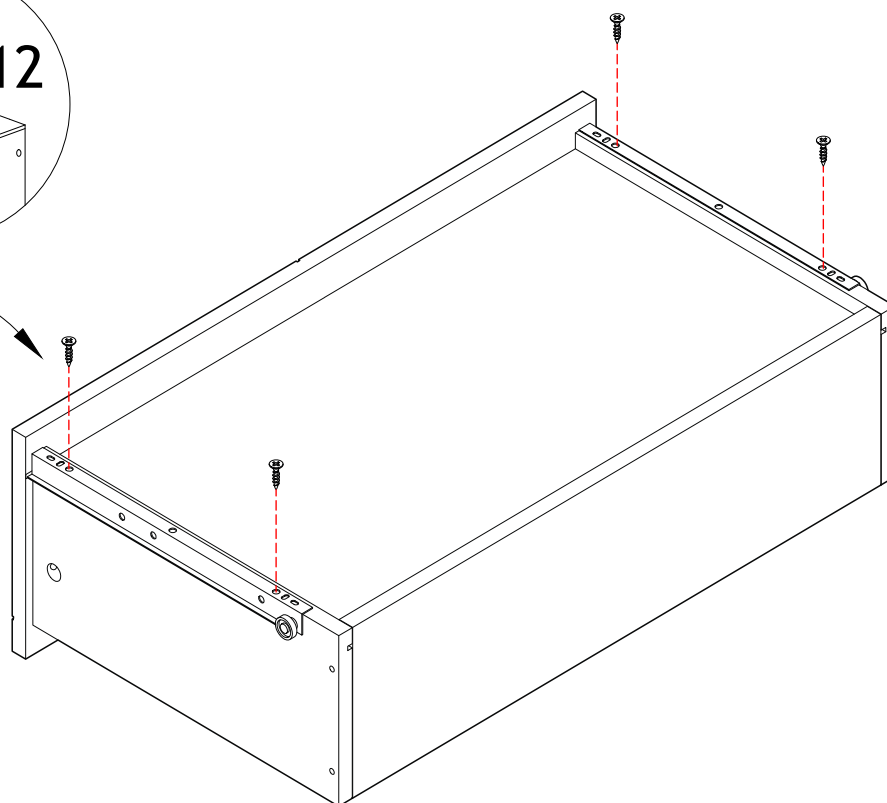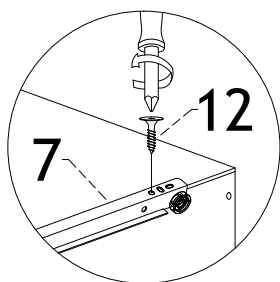

(6x)

STEP 33

