



ASSEMBLY INSTRUCTION


STEP1

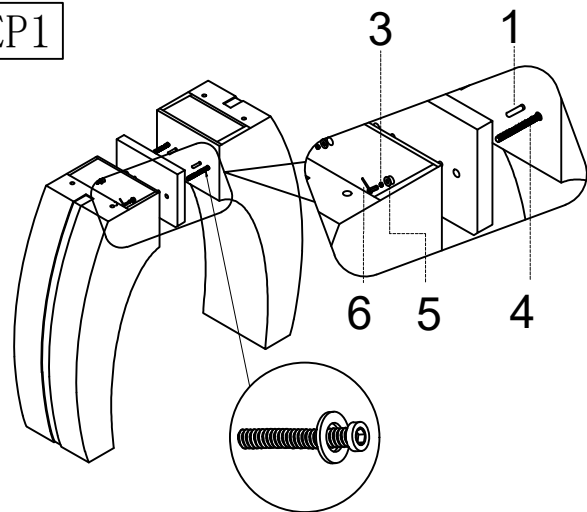


STEP2

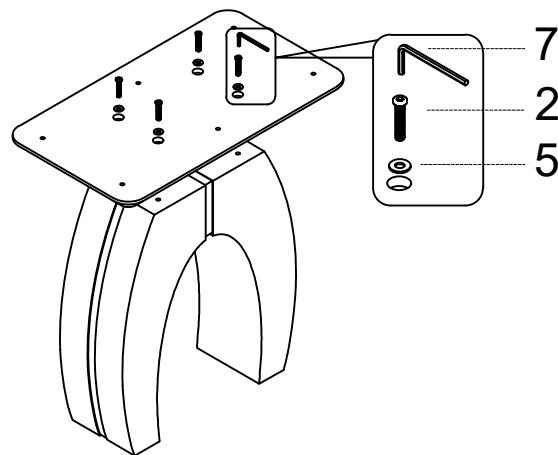


STEP3

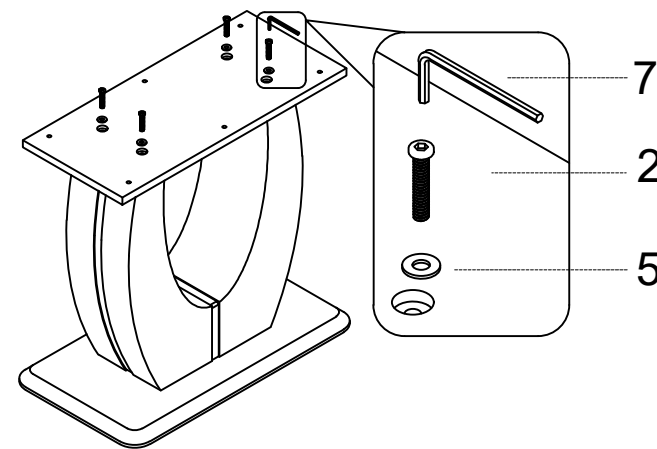




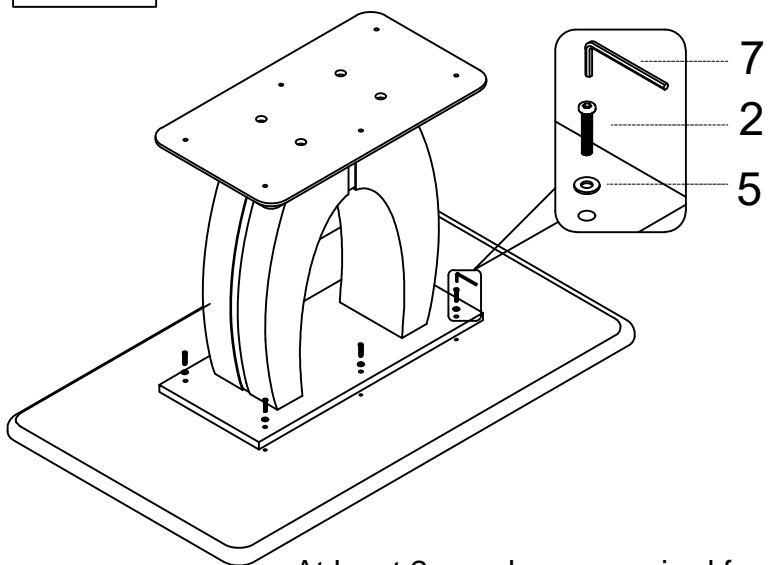

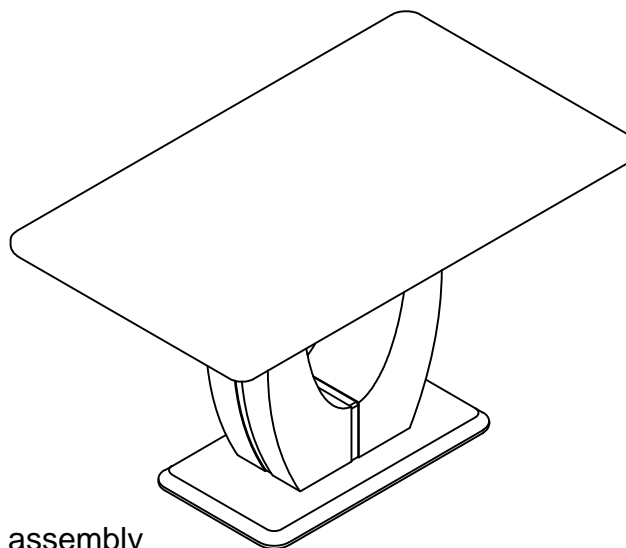

STEP4



At least 2 people are required for product assembly



DI-14

1		2pcs	Wooden dowel $\varnothing 8 \times 50 \text{mm}$
2		14pcs	bolt M8*50mm
3		2pcs	Nut M8
4		2pcs	bolt M8*90mm
5		18pcs	Washer $\varnothing 22 \text{mm}$
6		1pc	DRIVEPE 17*47mm
7		1pc	Allen Wrench 5mm

【Kindly Remeber】

If the products you receive in this package are not all of the items you purchased, please be patient. The rest of the products will be delivered by other packages. If you would like to know where the rest of the package has arrived, please contact us.

We will get back to you within 12 hours.

Please feel free to contact us if there any damage caused in transit. And do not return the product without communication. That's very important for us. Thank you for your understanding.

