


door hanging bath basket four-piece set


USER MANUAL

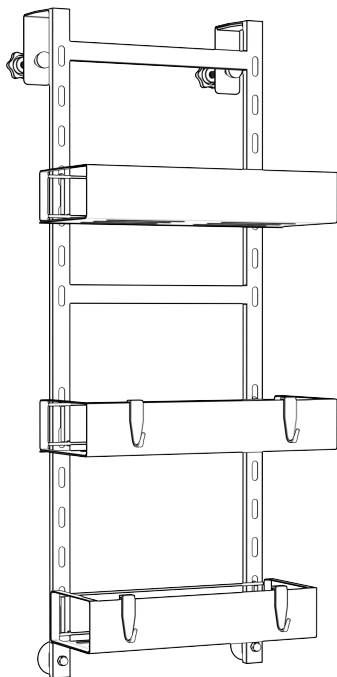

WP331


Accessory

- ① Upper bracket*1
- ② lower bracket*2
- ③ Baskets*3
- ④ Plastic hook *4
- ⑤ Plastic screws M8*50mm*2
- ⑥ Silicone*4
- ⑦ Screw M4*8mm*10
- ⑧ Screwdriver*1

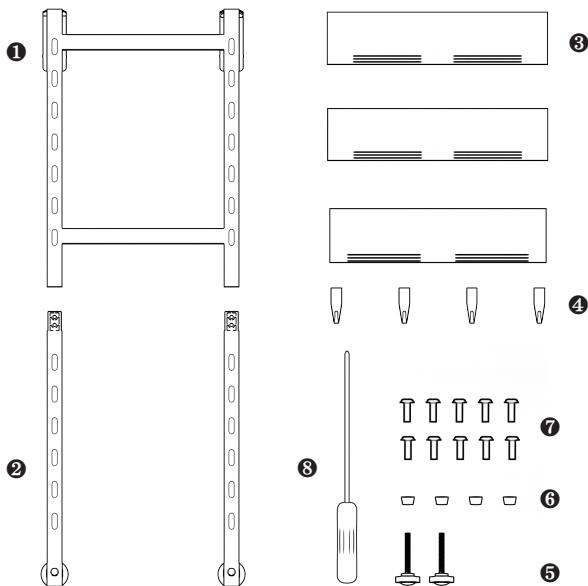


Installation Steps




- 1 Insert the lower bracket into the upper bracket and lock it with the (screwM4*8mm).

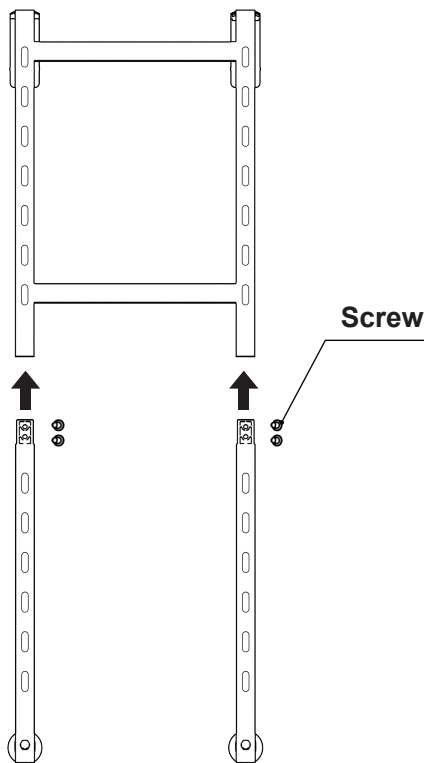

2 Assemble the plastic screws (M8*50mm) to the peg head of the upper bracket and install the silicone to the Plastic screws.

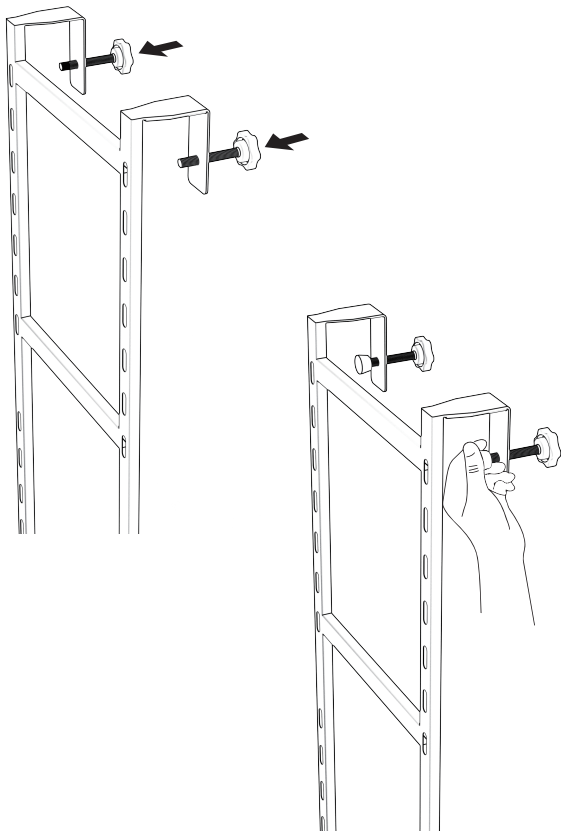

3 Hang the assembled door hanging bracket on the door edge, twist the plastic screws to adjust appropriately, and press the suction cups into the glass door to fix the whole bracket.

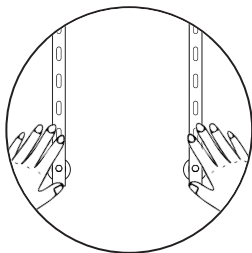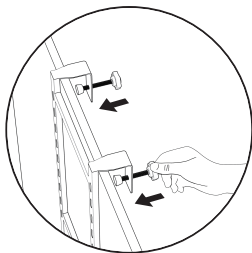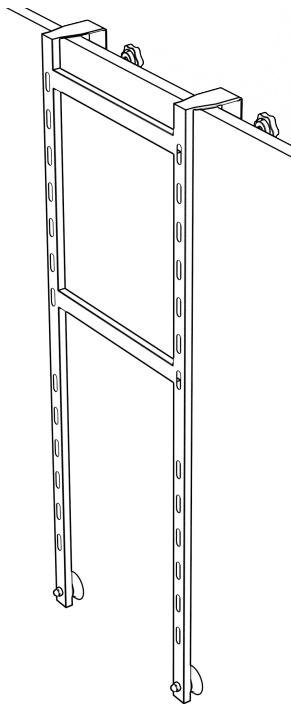

- 4 Finally install the three baskets on the bracket.

