



User Guide

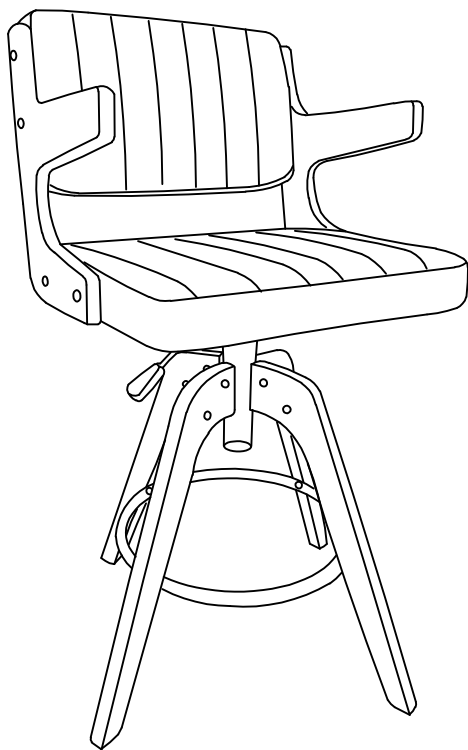

Bentwood Bar Chair

Components


A Backrest(x1)




B Seat(x1)



C Armrest (x1pair)




D Legs(x4)

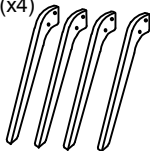


E Footrest ring(x1)



F Gas Lift(x1)




G Central axis(x1)




H Gas Strut(x1)




I M6x30mm Screw (x8)
(Spare screws x1)




J M6x18mm Screw (x4)
(Spare screws x1)




K M6x16mm Screw (x8)
(Spare screws x1)



L M6x30mm Screw (x4)
(Spare screws x1)



M M6x18mm Through nut (x8)
(Spare through nut x1)



N M5 Allen Key(x1)



O M6 Allen Key(x1)




P Felt pads(x4)
(Spare felt pads x2)





Assembly

Step1

- ① Insert the central axis into the wooden leg.

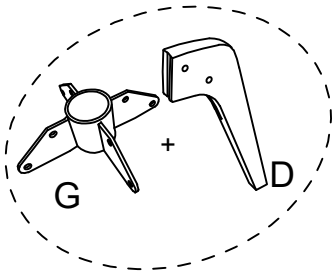

- ② Tighten the screws to **70%** of its strength

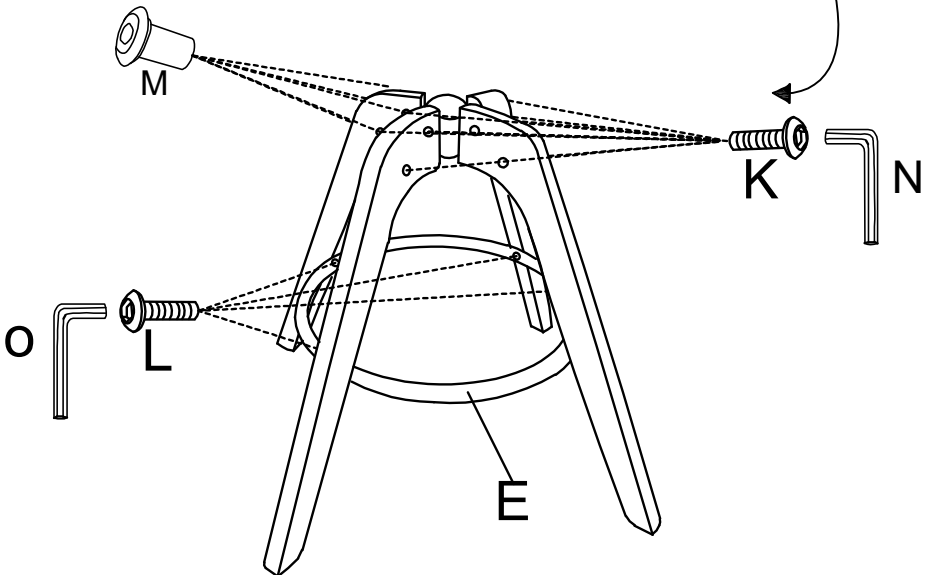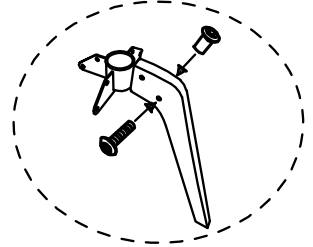


- ③ Tighten the screws of Component E to 70%.


- ④ Tighten **all screws** on the wooden feet and Component E to **100%**.

Step2



Stick the felt pad
onto the chair leg

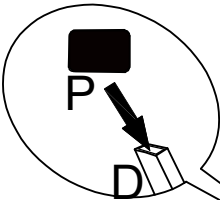


Place the gas lift
with its head facing
upward

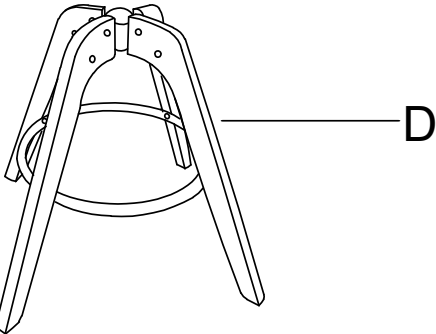

Step3 The side with the
countersunk hole
faces the soft cushion

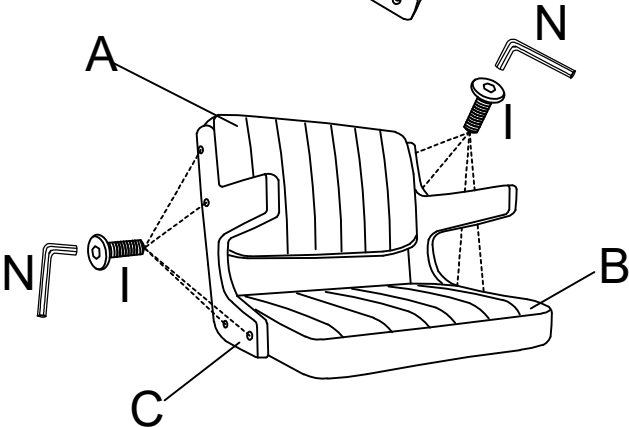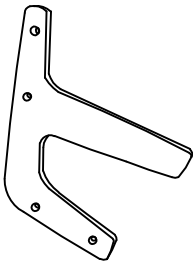

Step4

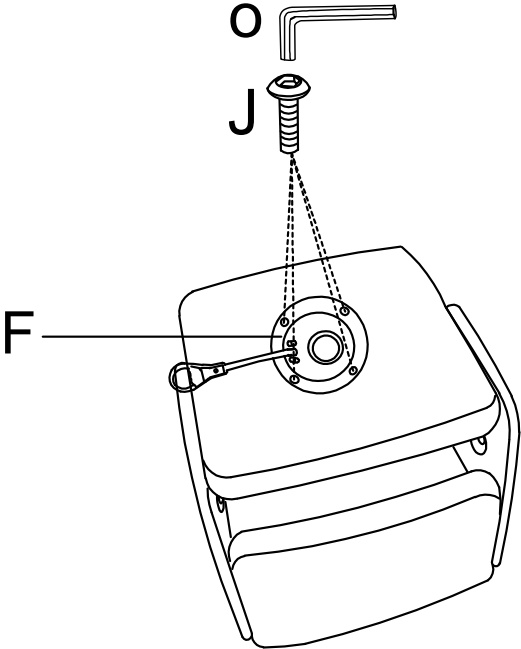

Step5

