


INSTALLATION MANUAL


SHOE(STORAGE)CABINET

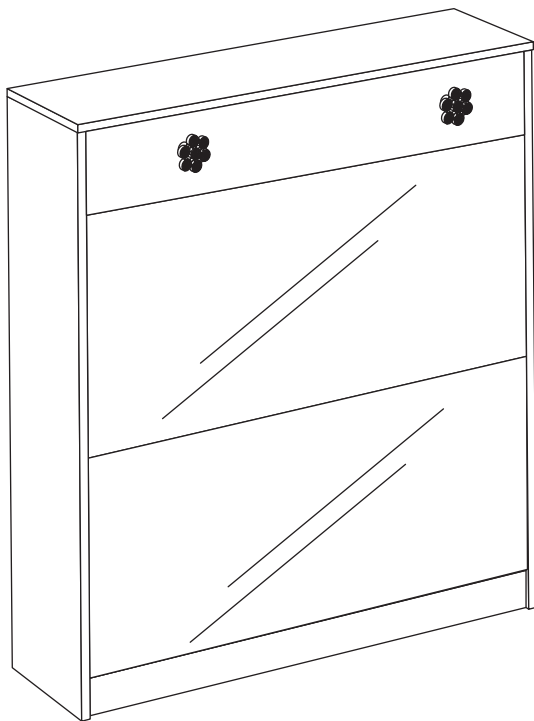

WARNING

**INSTALLATION REQUIRES TWO ADULTS,
KEEP AWAY FROM CHILDREN TO
PREVENT ANY INJURY.**

Tools Required






INSTALLATION MANUAL

SHOE(STORAGE)CABINET






Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

Panel parts

 806*238*15mm 1 Left side panel 1PC	 806*238*15mm 2 Right side panel 1PC	 831*238*15mm 3 Top panel 1PC
 800*60*12mm 4 Bottom slot slat 1PC	 800*300*5mm 5 Back panel 1PC	 800*116*12mm 6 Back slot slat 1PC
 800*116*12mm 7 Back slot slat 1PC	 806*300*5mm 8 Back panel 1PC	 784*135*12mm 9 Mirror drawer slat 4PCS
 784*97*12mm 10 Mirror drawer slat 2PCS	 795*320*12mm 11 Mirror panel 2PCS	 794*92*15mm 12 Drawer panels 1PC
 795*86*12mm 13 Drawer backs 1PC	 188*76*12mm 14 Drawer side panels 1PC	 188*76*12mm 15 Drawer side panels 1PC
 761*198*5mm 16 Drawer pallets 1PC	 188*76*12mm 17 Side panel 1PC	


Hardware fitting

 Left	 Right	 3.5*10mm	 4*16mm	 3.5*16mm
A 2PCS	B 2PCS	C 20PCS	D 4PCS	E 8PCS
 3.5*25mm				
F 8PCS	G 4PCS	H 4PCS	I 4PCS	J 2PCS
				
K 2PCS	L 19PCS	M 19PCS	N 4PCS	O 2PCS
 3.5*14mm	 3.5*25mm			
P 6PCS	Q 2PCS	R 2PCS	S 2PCS	T 2PCS
 3.5*12mm		 3.5*30mm		
U 8PCS	V 2PCS	X 6PCS		

Please read the instructions carefully before assembling the cabinet.
Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

Board Identification

Not Actual Size

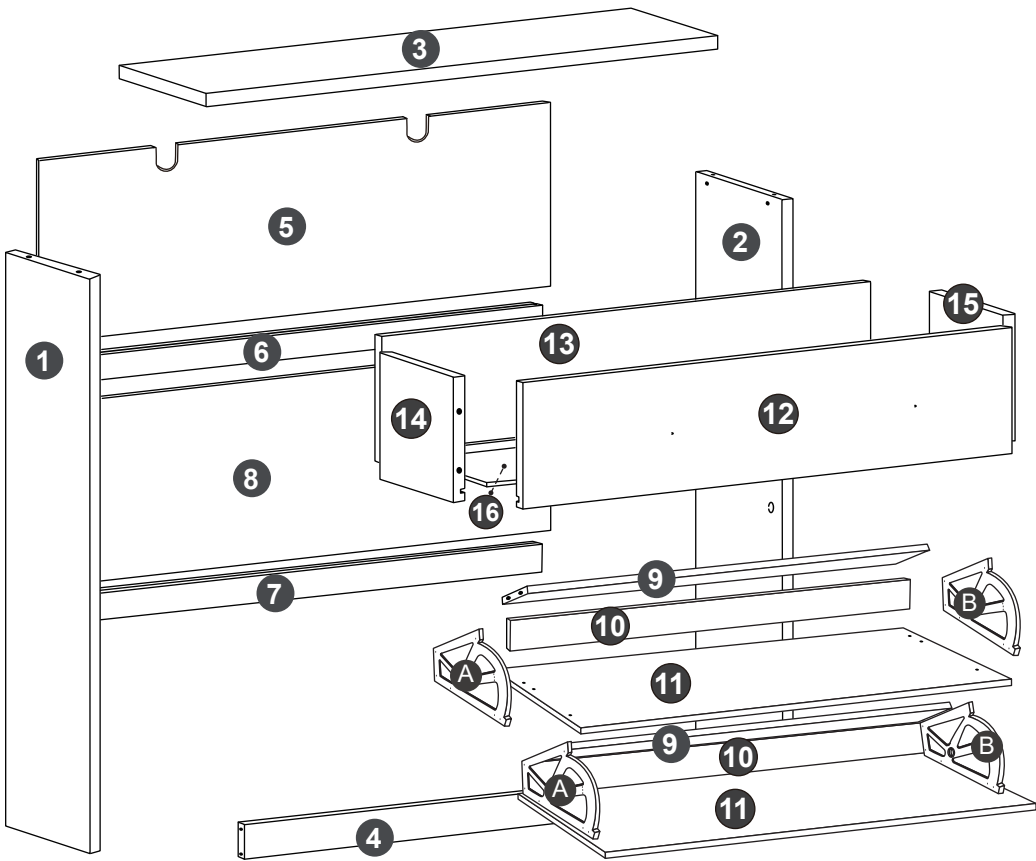


Assistance must be required for assembly of this product

Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

ASSEMBLY INSTRUCTION

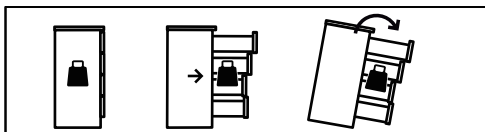

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.



ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:


- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.




STEP 1

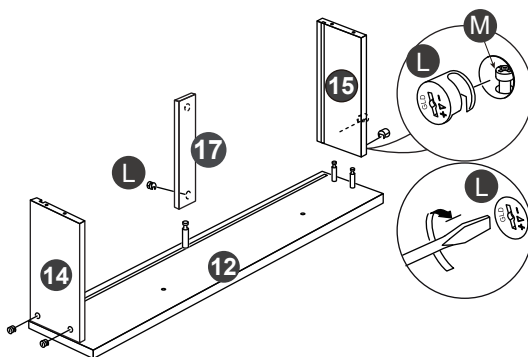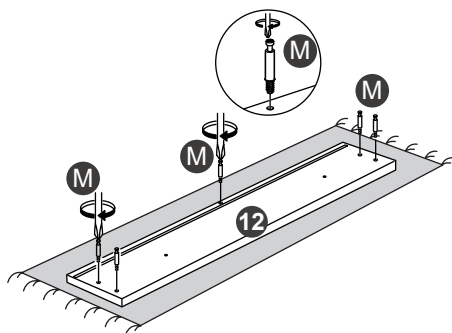


STEP 2

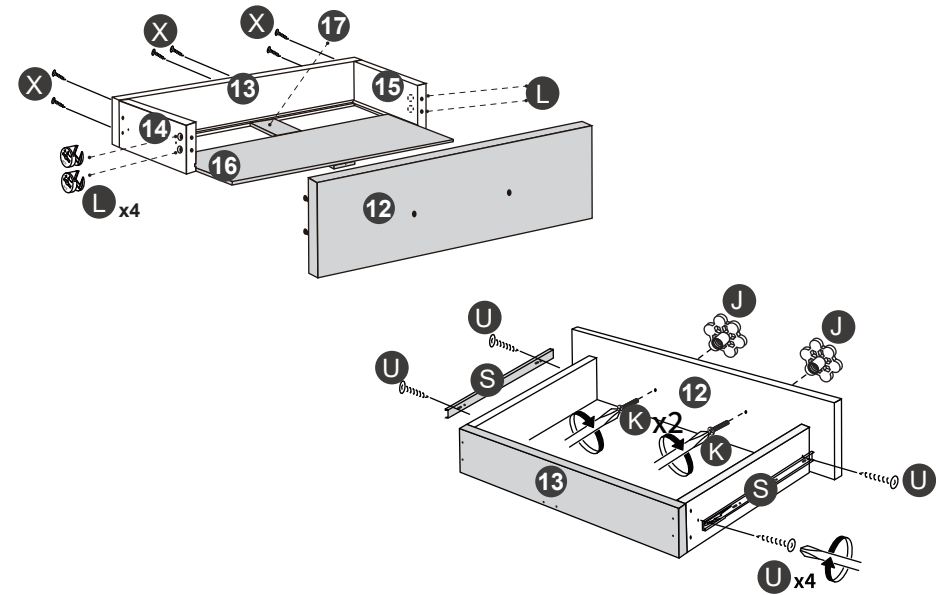


STEP 3

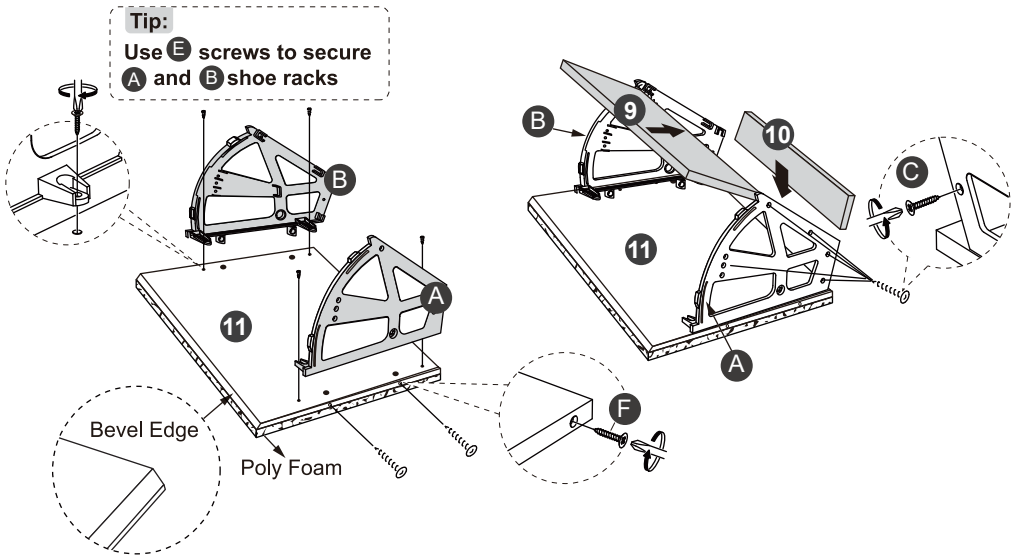

STEP 4

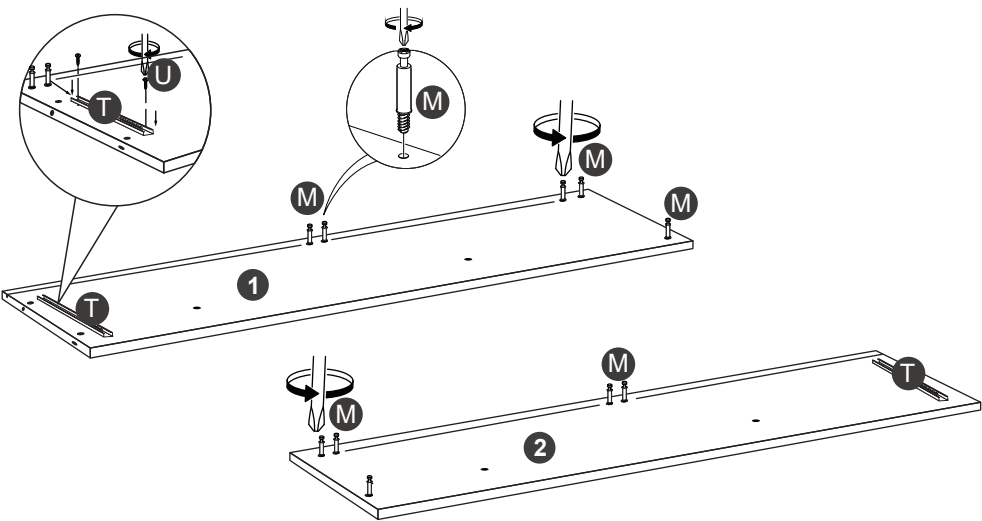


STEP 5

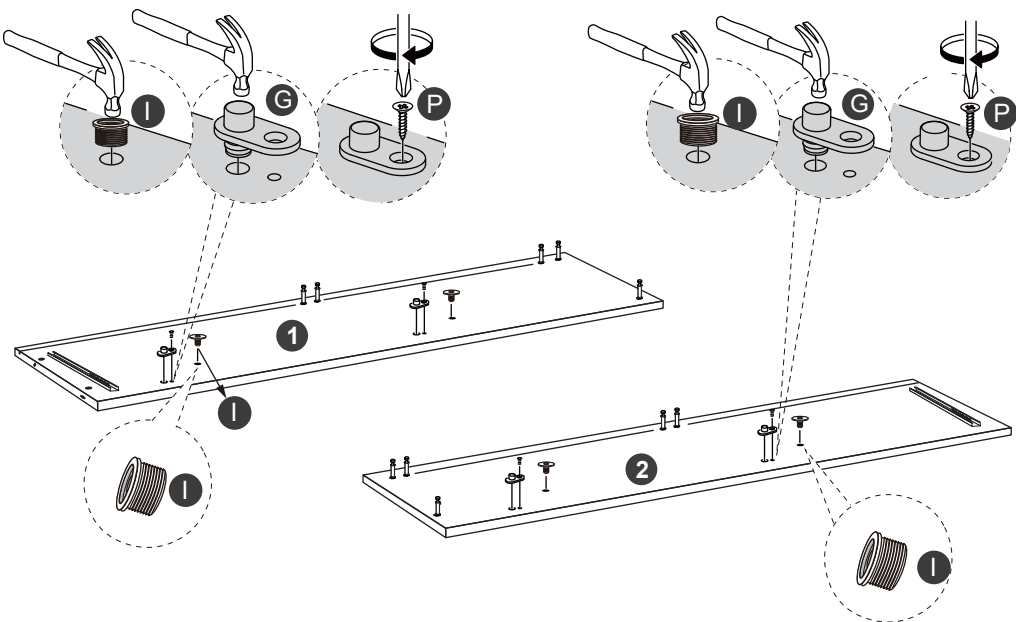


STEP 6

Attention:

When installing ④, ensure that the holes on the board face inward and the bevel side faces upward

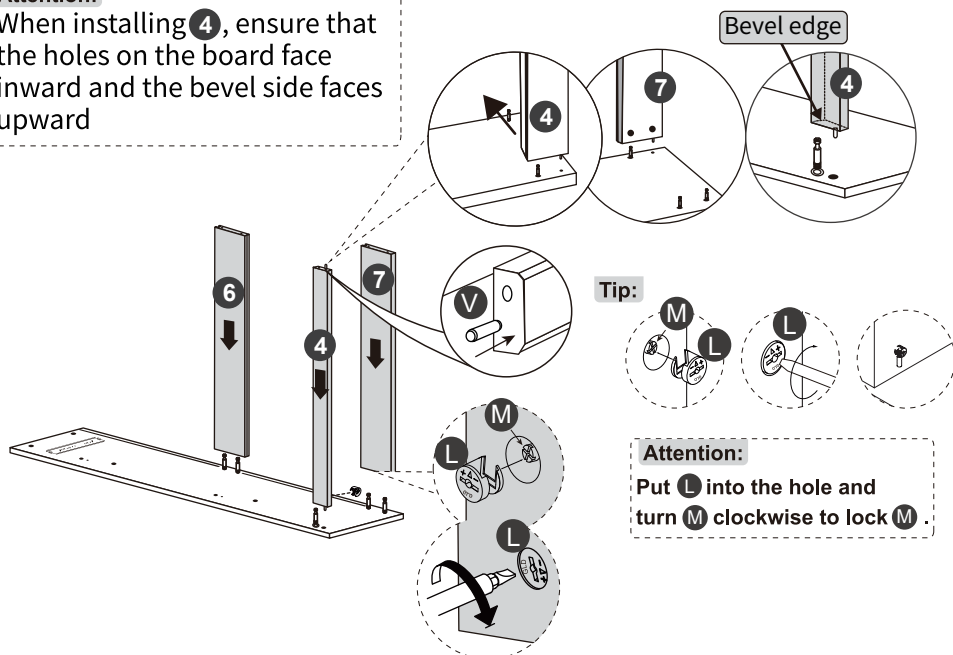

STEP 7

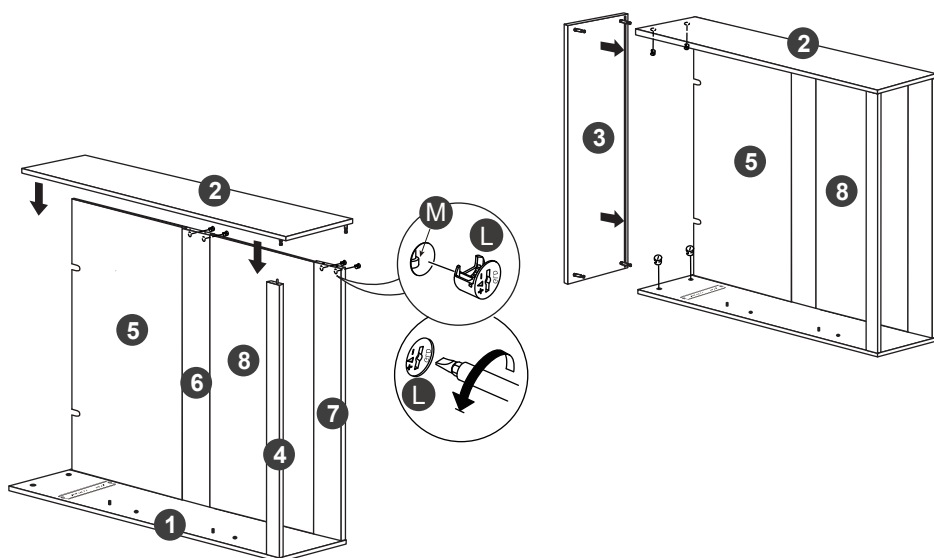


STEP 8



⚠ WARNING

To reduce the risk of furniture Tip over"
ALWAYS install anti-tip device provided
-NEVER allow children to stand,
climb or hang on drawers.

wall

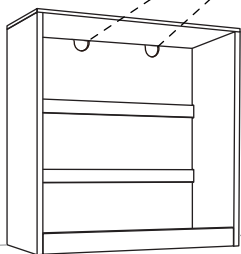

STEP 1

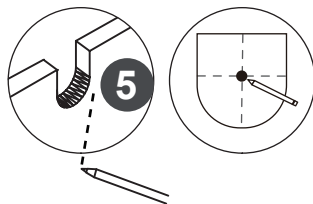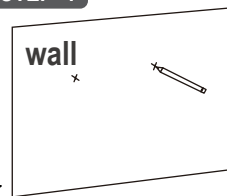



Put the cabinet in an appropriate position, and mark the center of the hole on the cabinet, a total of 2 places.

STEP 2



According to the 2 holes drawn, Put the rubber plug **R** into the wall.

STEP 3


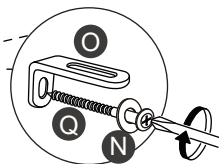
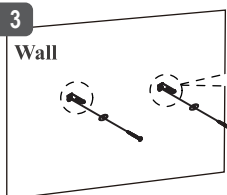


Screw **Q** into the top two holes in the wall.





STEP 4

Move the cabinet back to the position of the drawing points, and align to holes.

wall

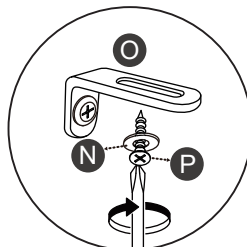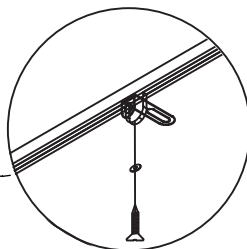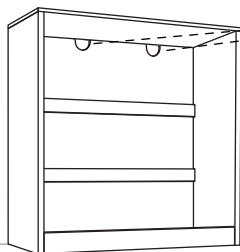

STEP 9

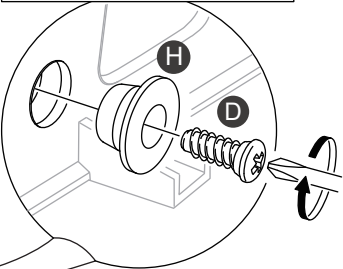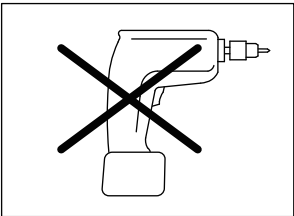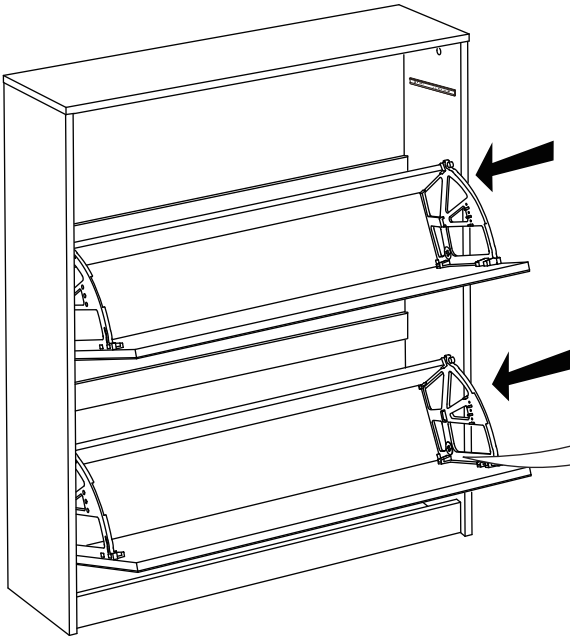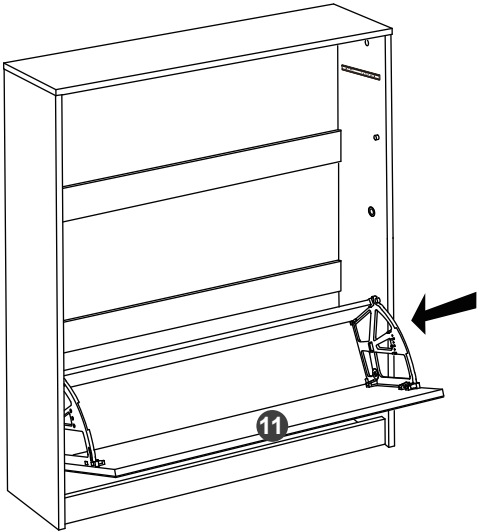

STEP 10

