
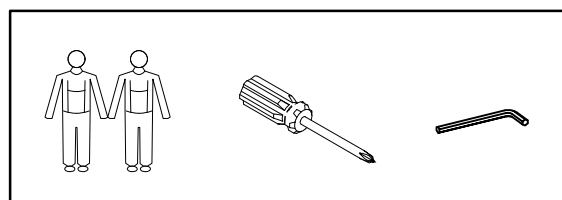


# ***L SHAPED DESK WITH FILE CABINET***

## **ASSEMBLY INSTRUCTION**

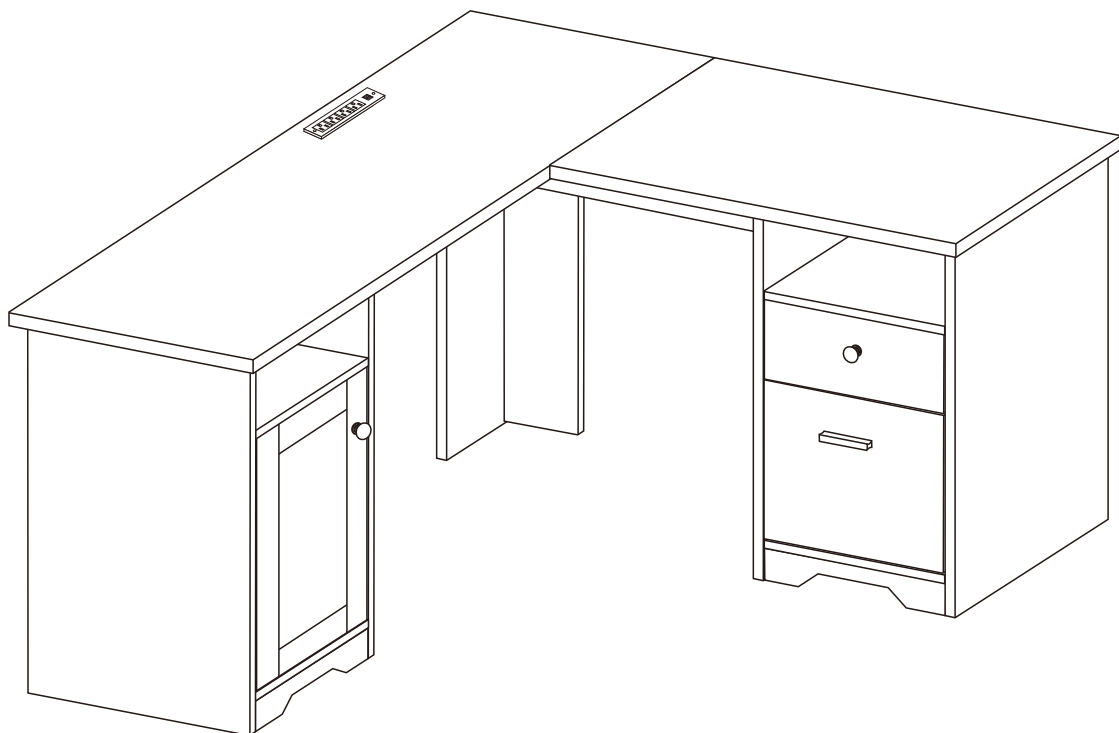

### **CAUTION**

Put the screws in loosely until all pieces are together and then tighten them all.  
It will save your time if you make a mistake while installing.

---

---


Dear Customers,

## Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.


If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.

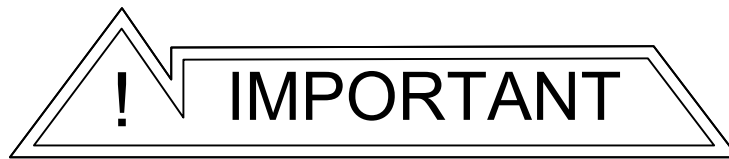

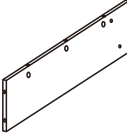












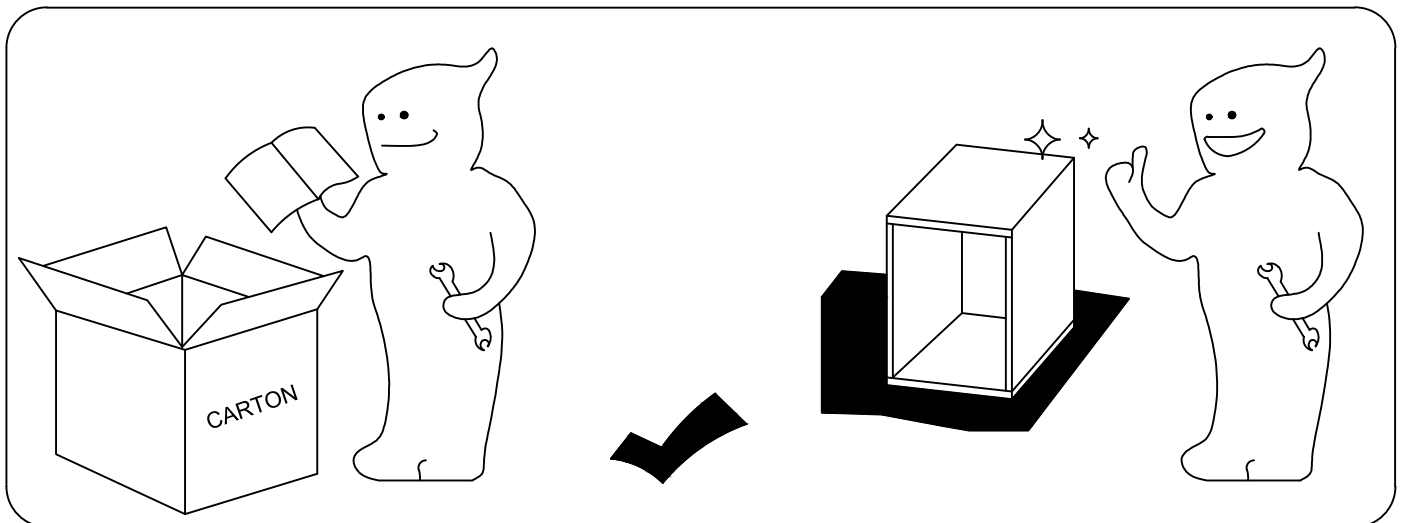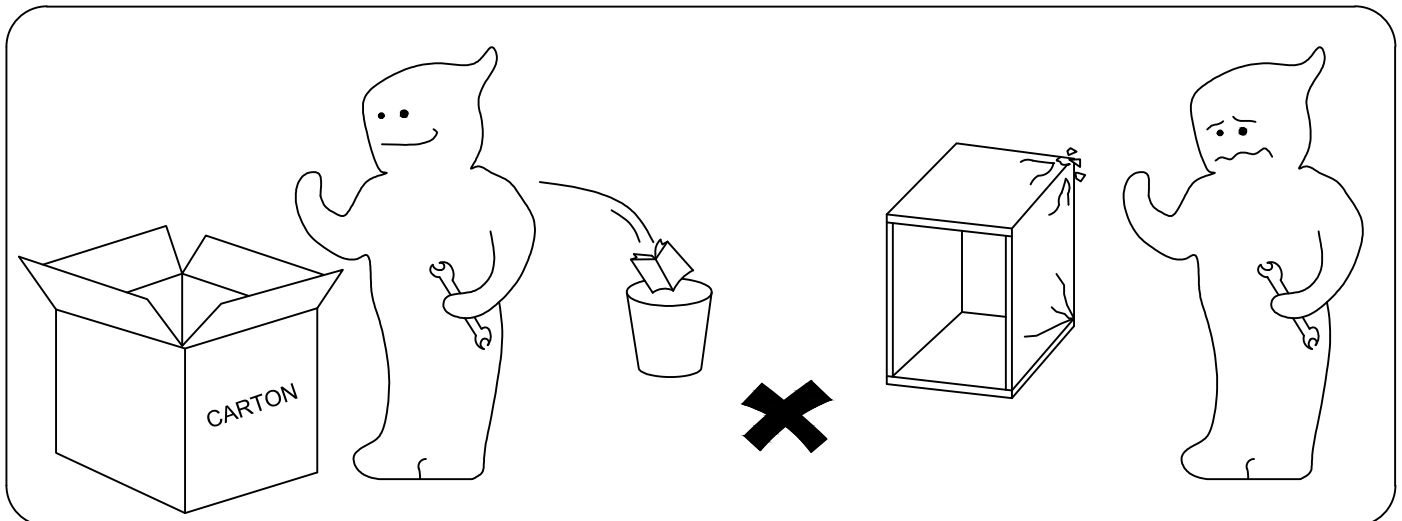






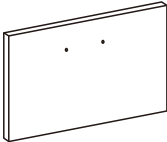
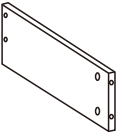



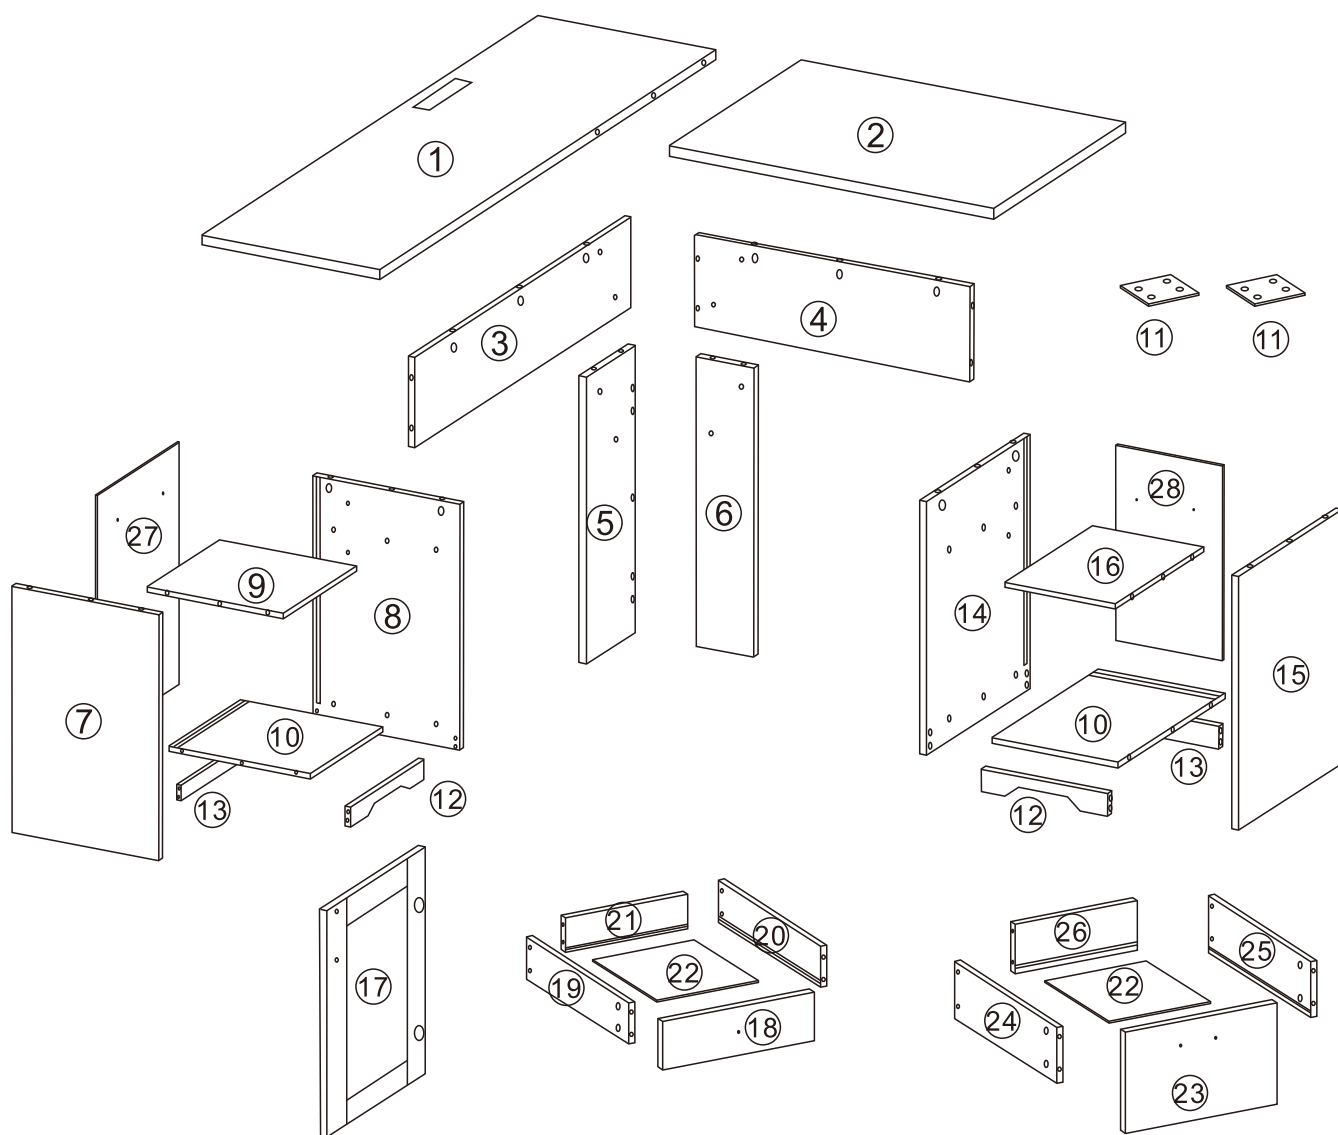


Please follow the instruction manuals and use a pad to protect the product during your assembly.

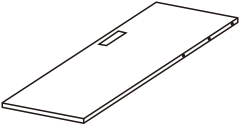







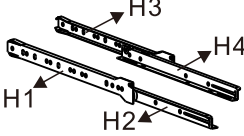













# PART LIST

|  |  |  |   |
|--|--|--|---|
| ①<br><br>1pc    | ②<br><br>1pc    | ③<br><br>1pc   | ④<br><br>1pc   |
| ⑤<br><br>1pc    | ⑥<br><br>1pc    | ⑦<br><br>1pc   | ⑧<br><br>1pc   |
| ⑨<br><br>1pc    | ⑩<br><br>2pcs   | ⑪<br><br>2pcs  | ⑫<br><br>2pcs  |
| ⑬<br><br>2pcs | ⑭<br><br>1pc  | ⑮<br><br>1pc | ⑯<br><br>1pc |
| ⑰<br><br>1pc  | ⑱<br><br>1pc  | ⑲<br><br>1pc | ⑳<br><br>1pc |
| ㉑<br><br>1pc  | ㉒<br><br>2pcs | ㉓<br><br>1pc | ㉔<br><br>1pc |
| ㉕<br><br>1pc  | ㉖<br><br>1pc  | ㉗<br><br>1pc  | ㉘<br><br>1pc |

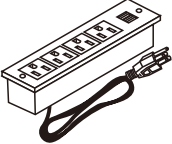


| HARDWARE LIST   |  |   |   |
|---|--|---|---|
| <div>A</div> <div>A1 </div> <div>A2 </div> <div>50pcs</div> | <div>B</div> <div></div> <div>M6X25mm<br/>4pcs</div>  | <div>C</div> <div></div> <div>M6X12mm<br/>8pcs</div> | <div>D</div> <div></div> <div>M6X8mm<br/>1pc</div> |
| <div>E</div> <div></div> <div>ST3.5X14mm<br/>34pcs</div>   | <div>F</div> <div></div> <div>ST6X40mm<br/>9pcs</div> | <div>G</div> <div></div> <div>M4X18mm<br/>4pcs</div> | <div>H</div> <div></div> <div>2pcs</div>           |
| <div>I</div> <div></div> <div>8X35mm<br/>25pcs</div>   | <div>J</div> <div></div> <div>1pc</div>               | <div>K</div> <div></div> <div>2pcs</div>            | <div>L</div> <div></div> <div>2pcs</div>           |
| <div>M</div> <div></div> <div>1pc</div>  | <div>N</div> <div></div> <div>1pc</div>             | <div>O</div> <div></div> <div>1pc</div>           | <div>P</div> <div></div> <div>1pc</div>          |
| <div>Q</div> <div></div> <div>ST5X45mm<br/>8pcs</div>  |  |   |   |

# Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

**1** DO NOT OVER TIGHTEN

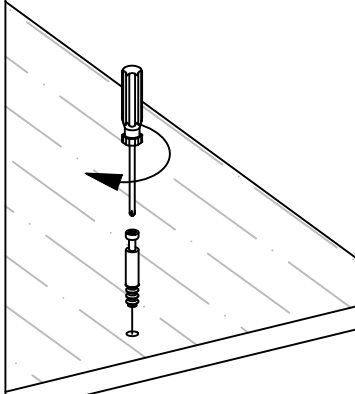

Push the male camlock into the entry hole.


**2**

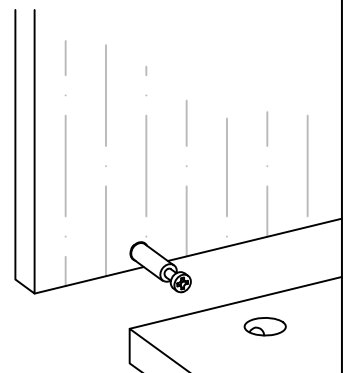

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

**3**

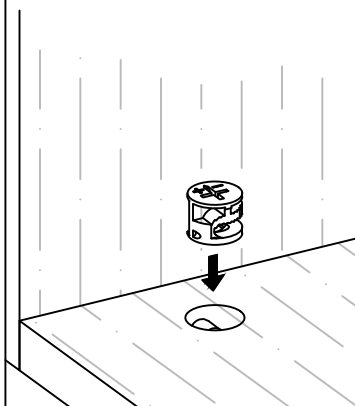


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

**4**

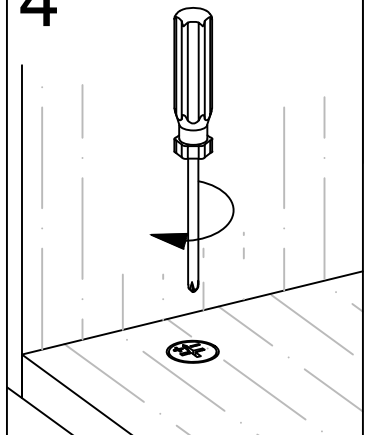

STEP 1

Jx1

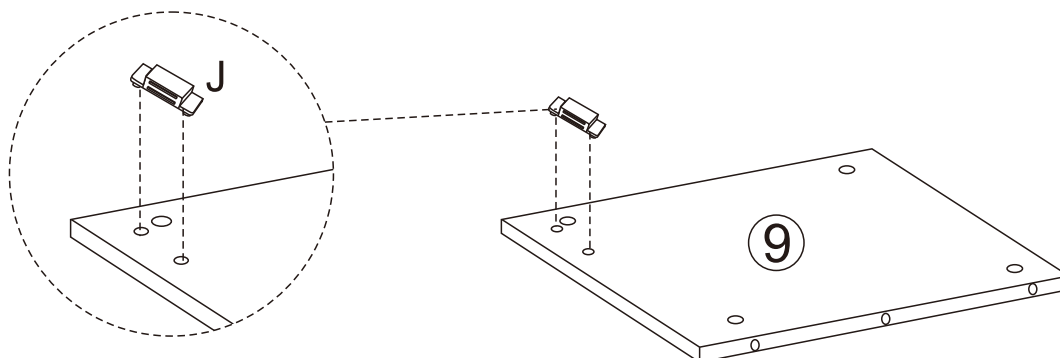


STEP 2

A1x12




Px1

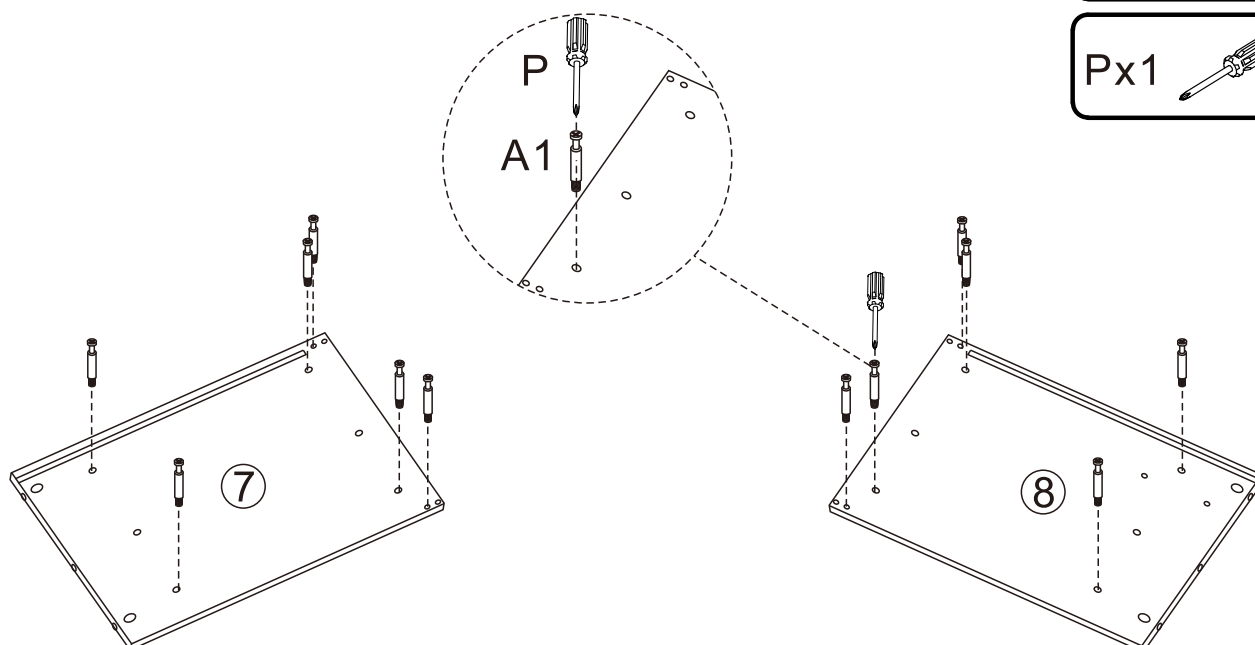


STEP 3

A1x12 

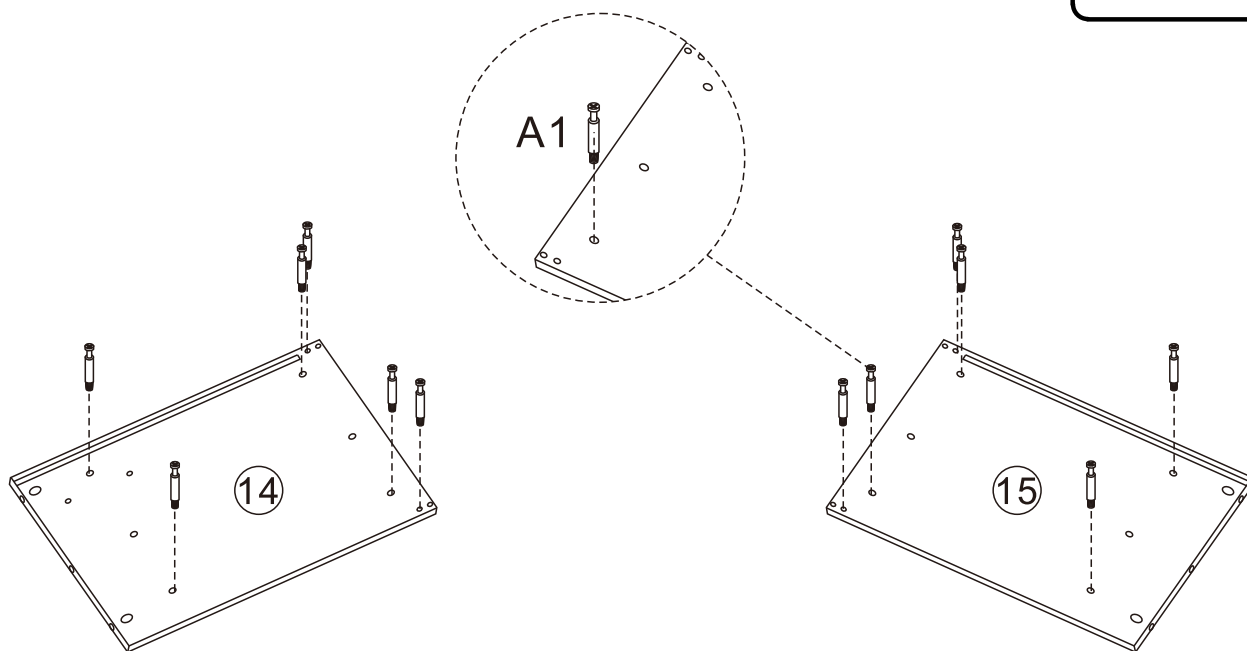

STEP 4

A1x26 

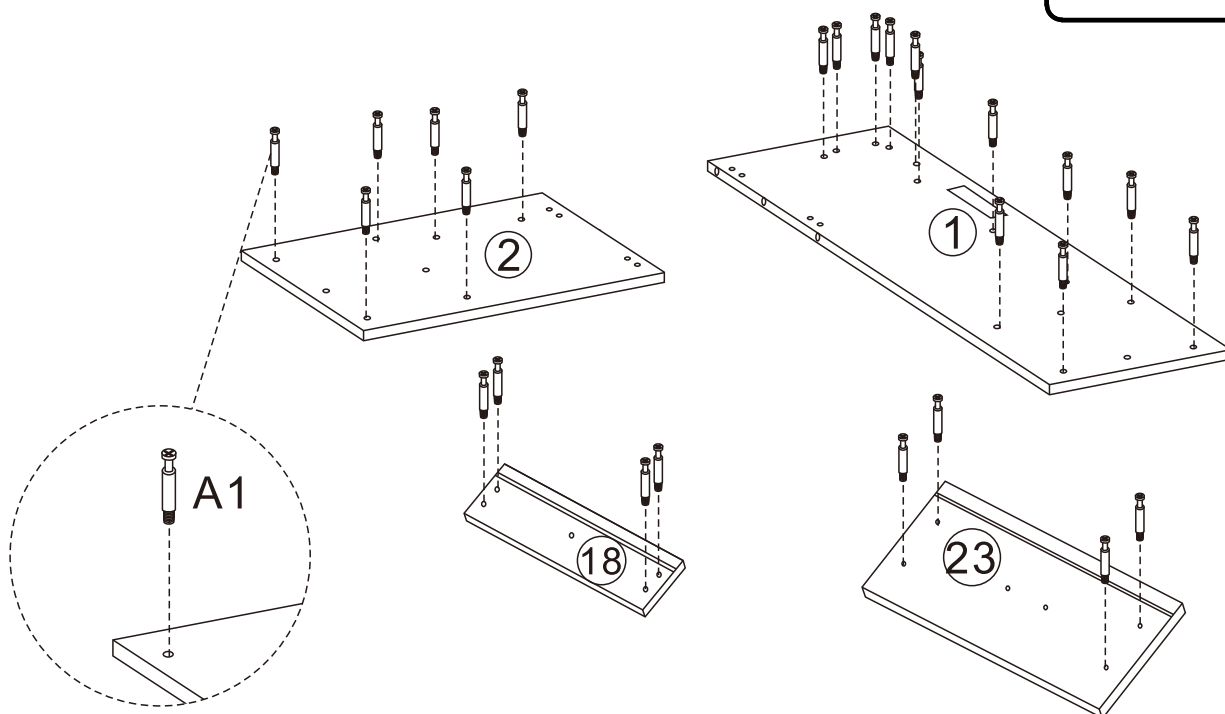


## STEP 5


A2x2



1x2

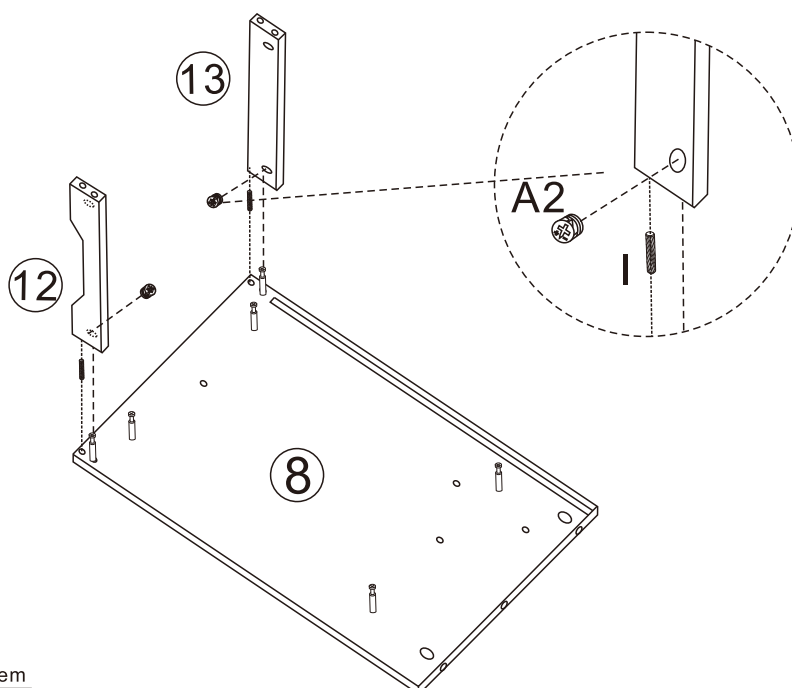

Cam Lock Fastening System



## STEP 6


A2x4




1x2



Please also notice the side slot position of Part 10.

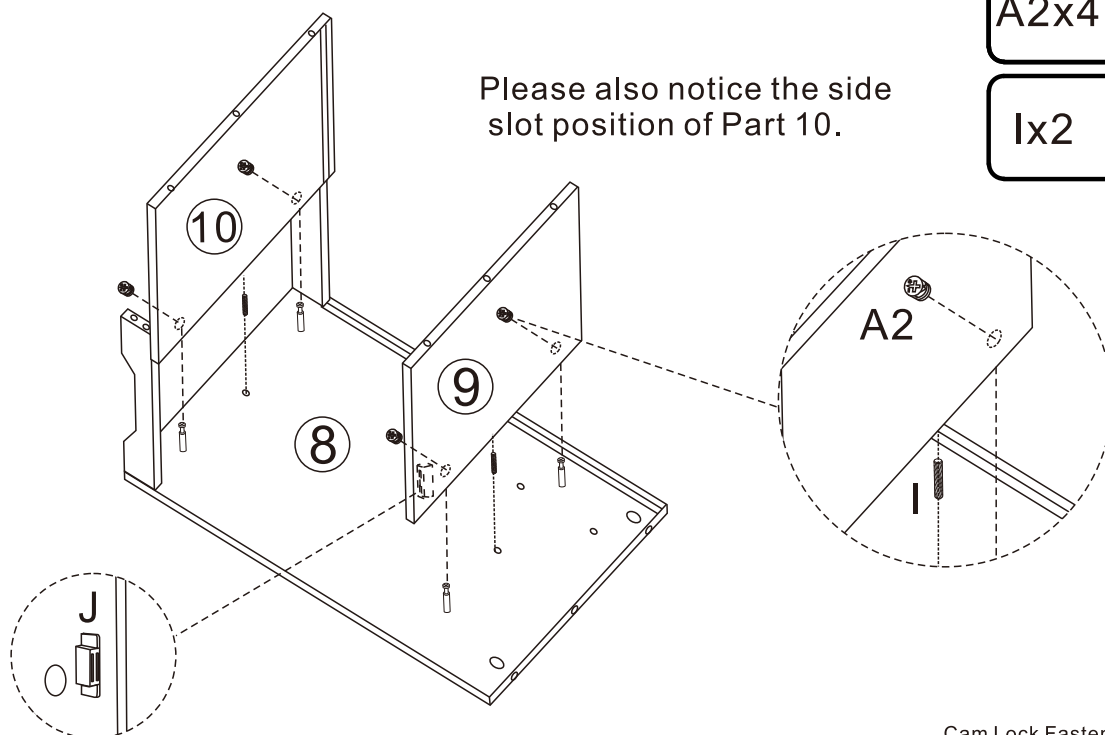

Cam Lock Fastening System




Before installing Part 9, please pay attention to the position of the magnetic Part J

## STEP 7


A2x6




1x4

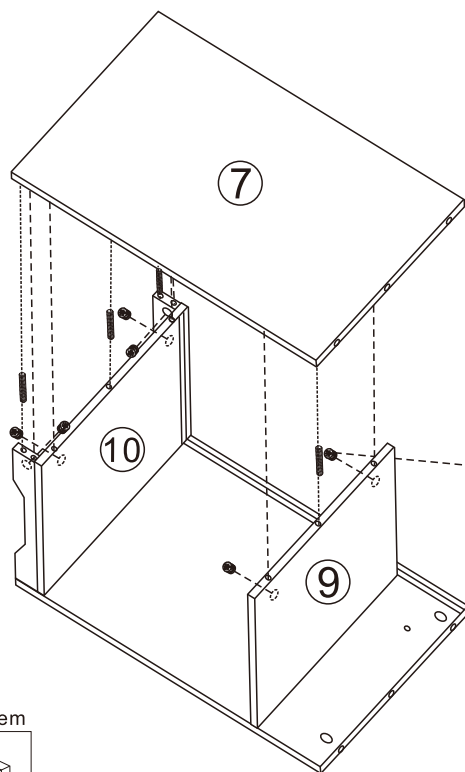

Please notice the slot position on Part 7 before installing it.


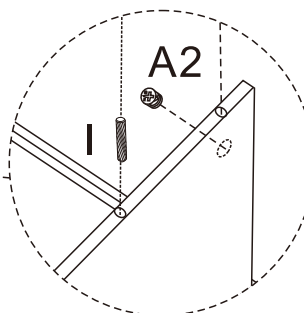


Cam Lock Fastening System



## STEP 8

Ex2

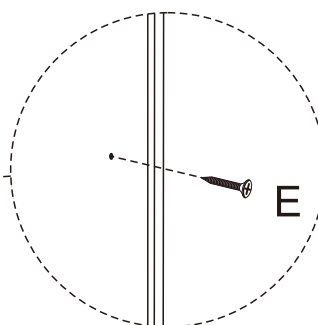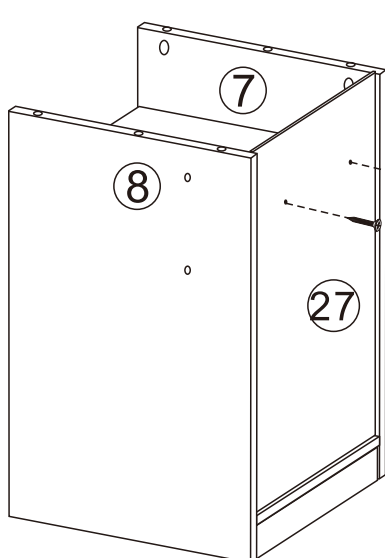






## STEP 9

There are small predrilled holes on the board, please identify the positions of the holes and assemble the part.

Ex8



Hx2

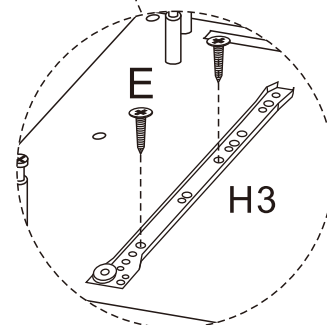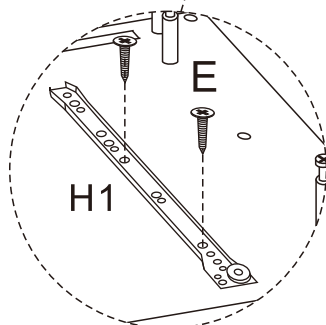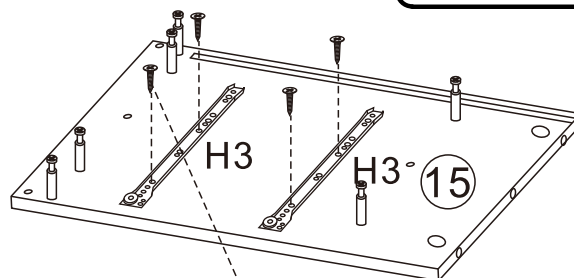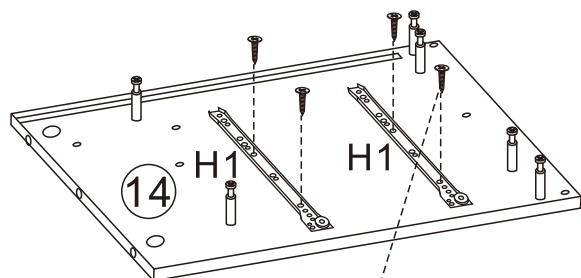


## STEP 10


A2x2



Ix2

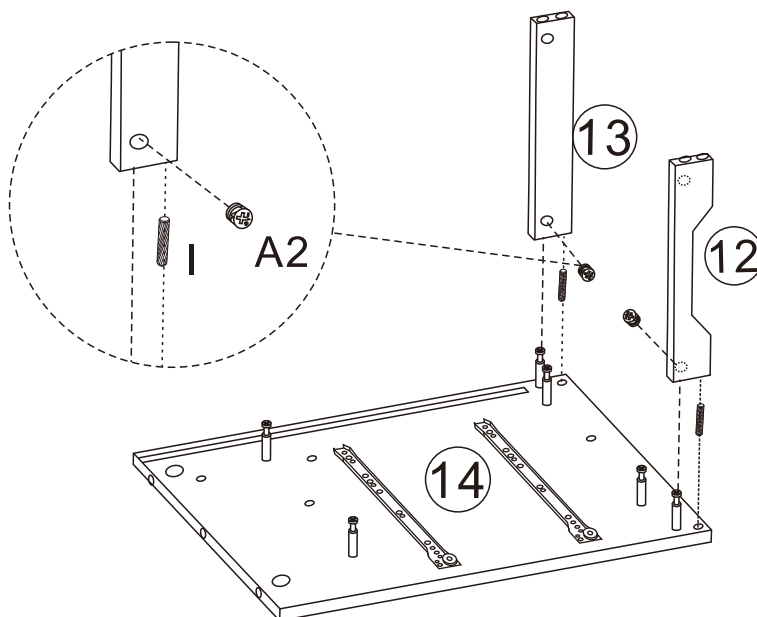

Cam Lock Fastening System




## STEP 11


Please check the side holes position on Part 16 before screwing it up.  
Please also notice the side slot position of Part 10.

A2x4 

1x2 

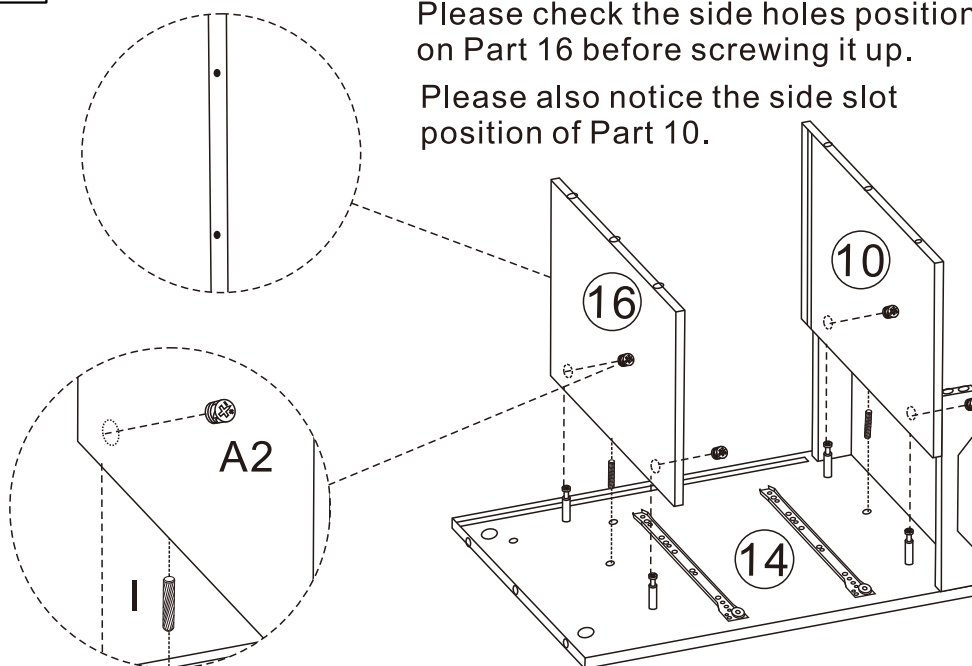

Cam Lock Fastening System




## STEP 12


Please notice the slot position on Part 15 before installing it.

A2x6 

1x4 

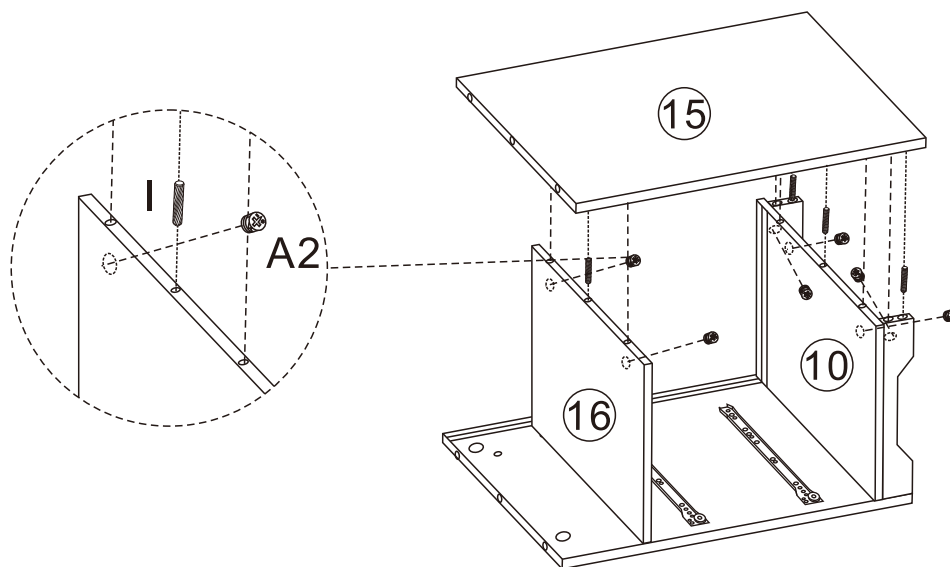


Cam Lock Fastening System



# STEP 13

Ex2 

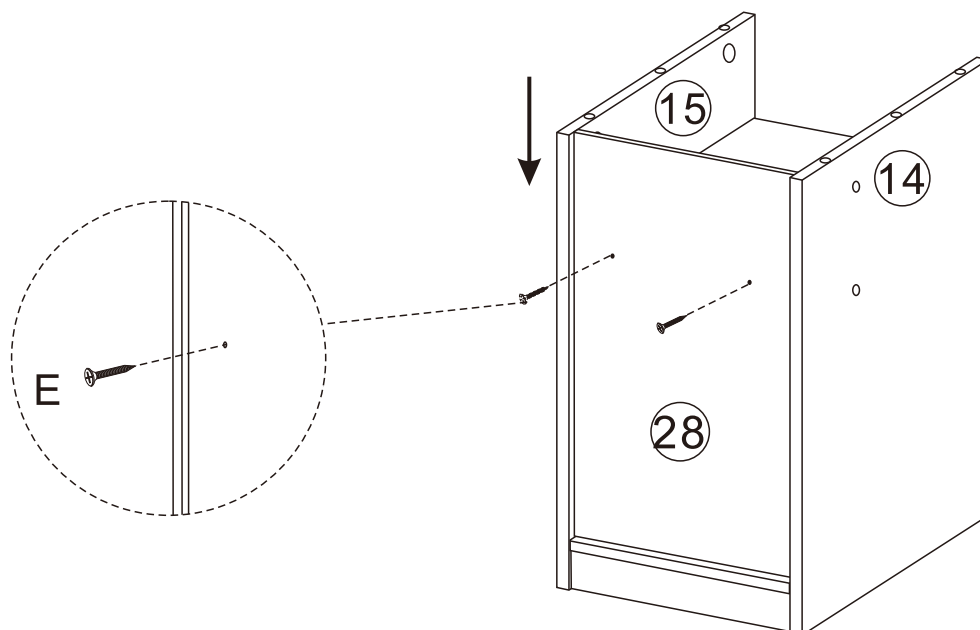


# STEP 14

Fx3 

Ix2 

Ox1 


Please notice that the holes on Part 5 and 6 are upwards.

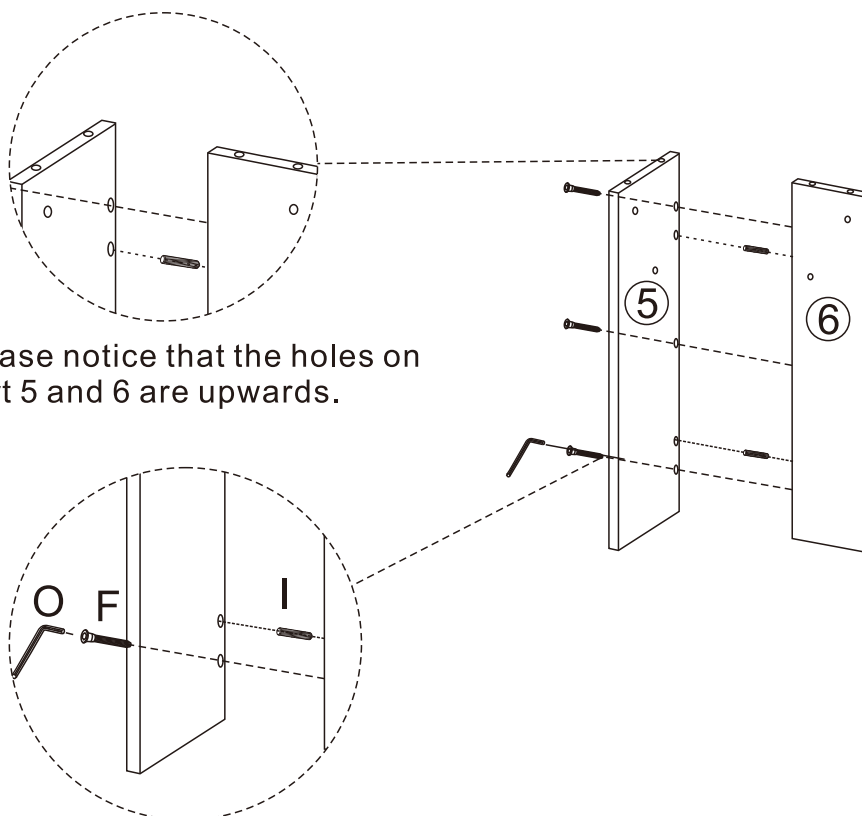

# STEP 15


Fx2 

Please notice that the holes in Parts 3 and 4 are upward and there are four holes inside as shown.

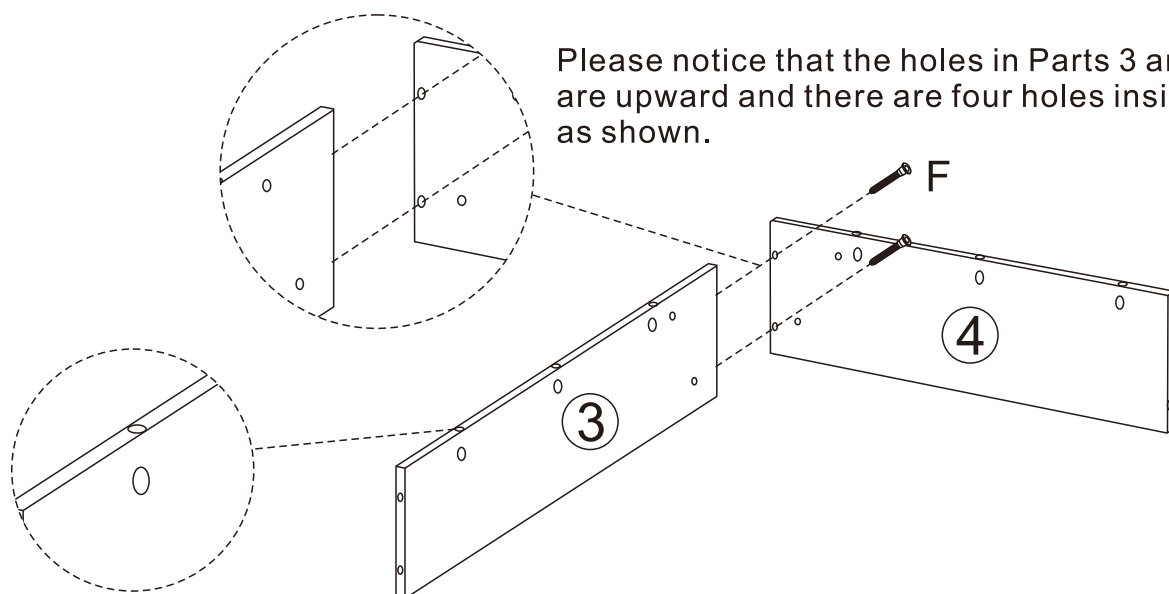


# STEP 16

Bx4 

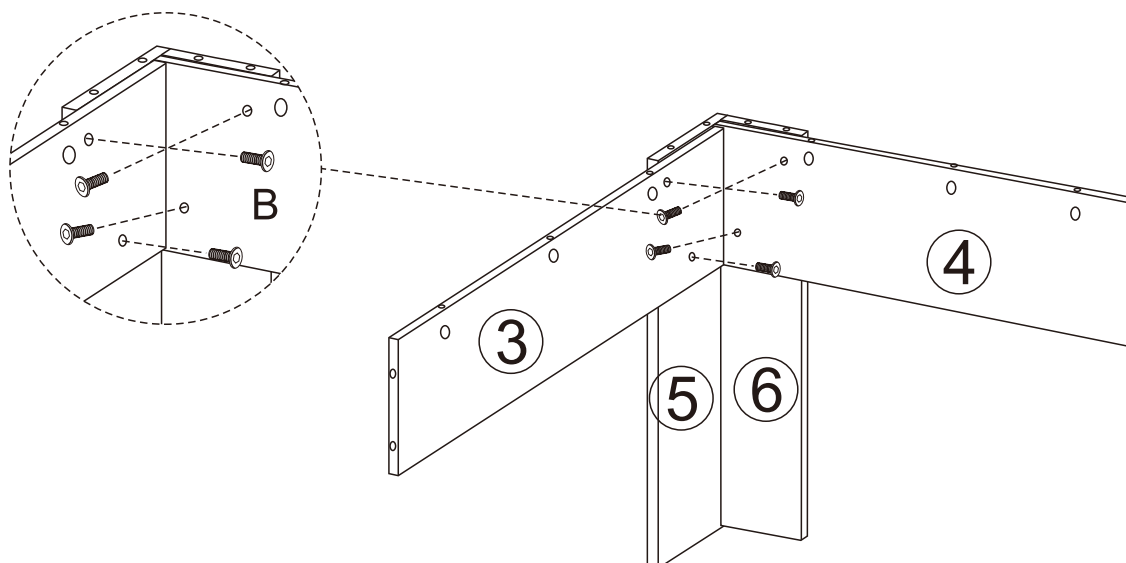

# STEP 17


Fx4 

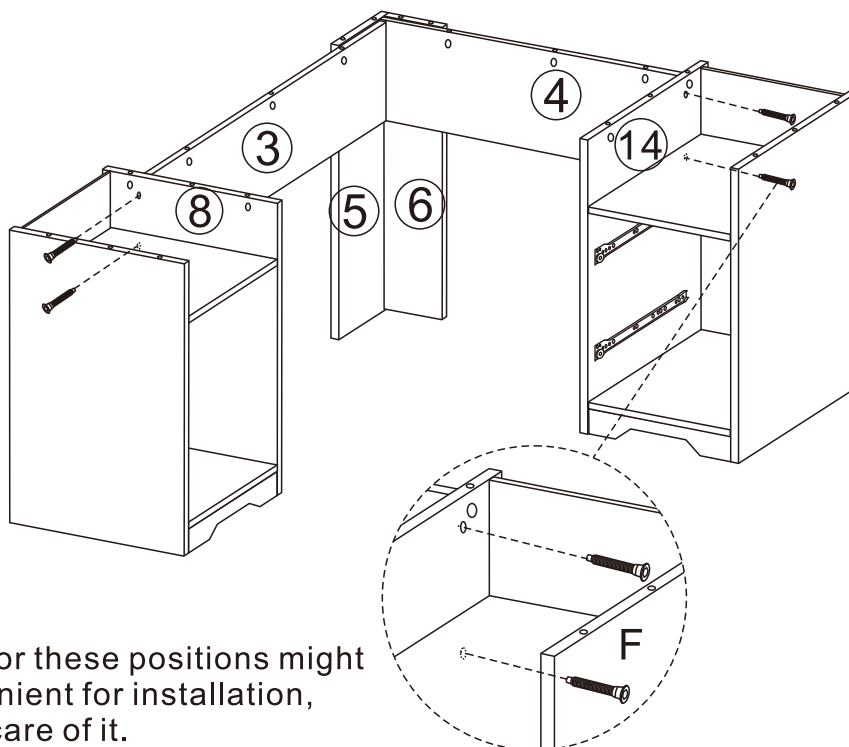

The screws for these positions might not be convenient for installation, please take care of it.


# STEP 18

Ix3 

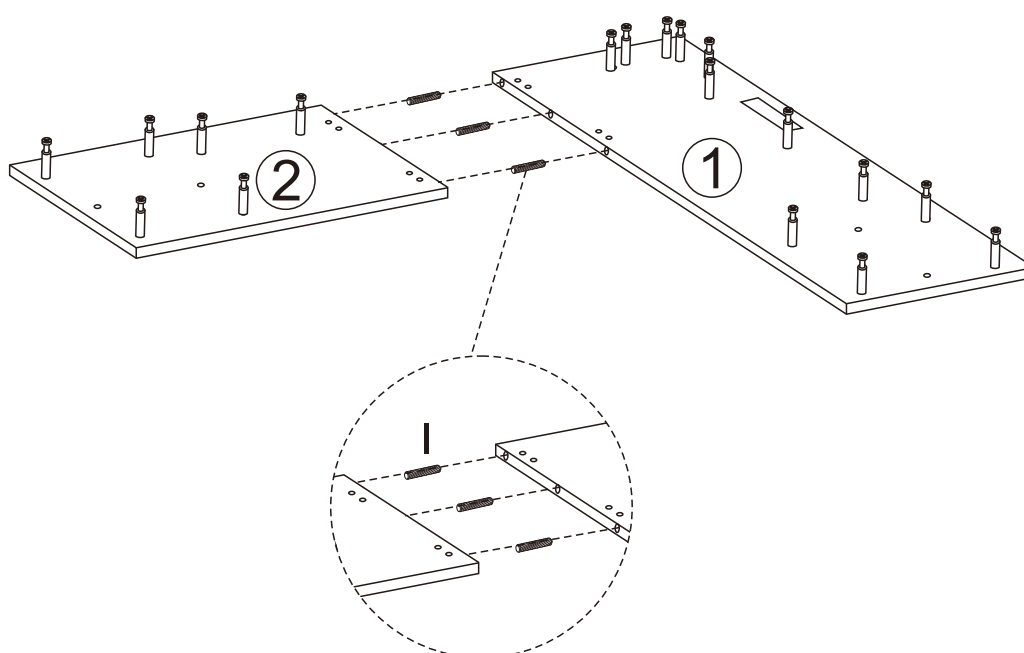


STEP 19

Cx8

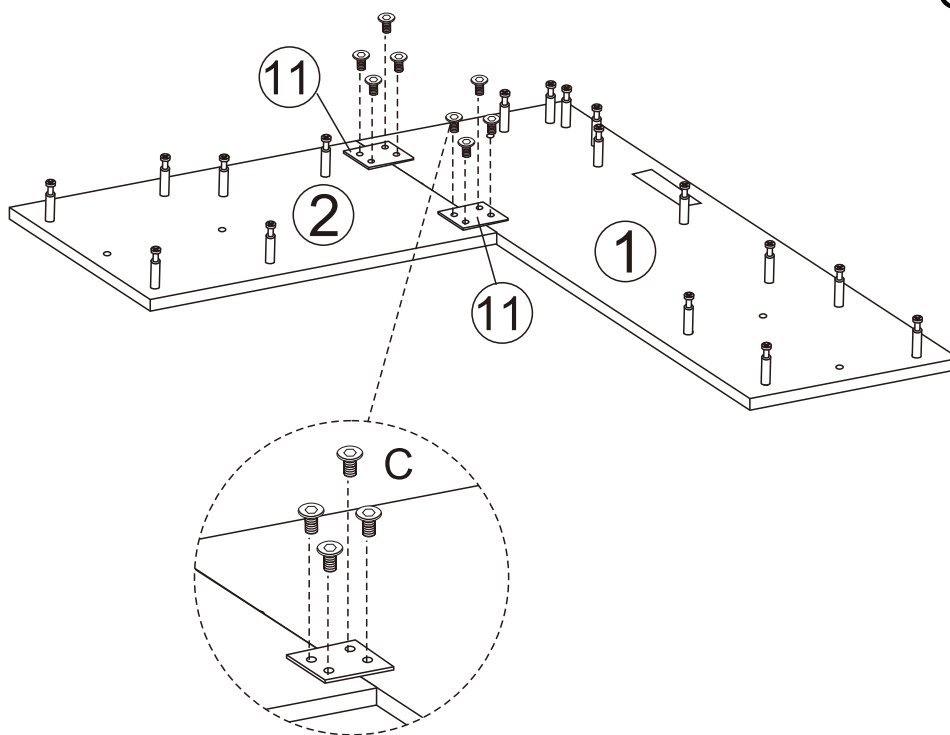


STEP 20

lx4

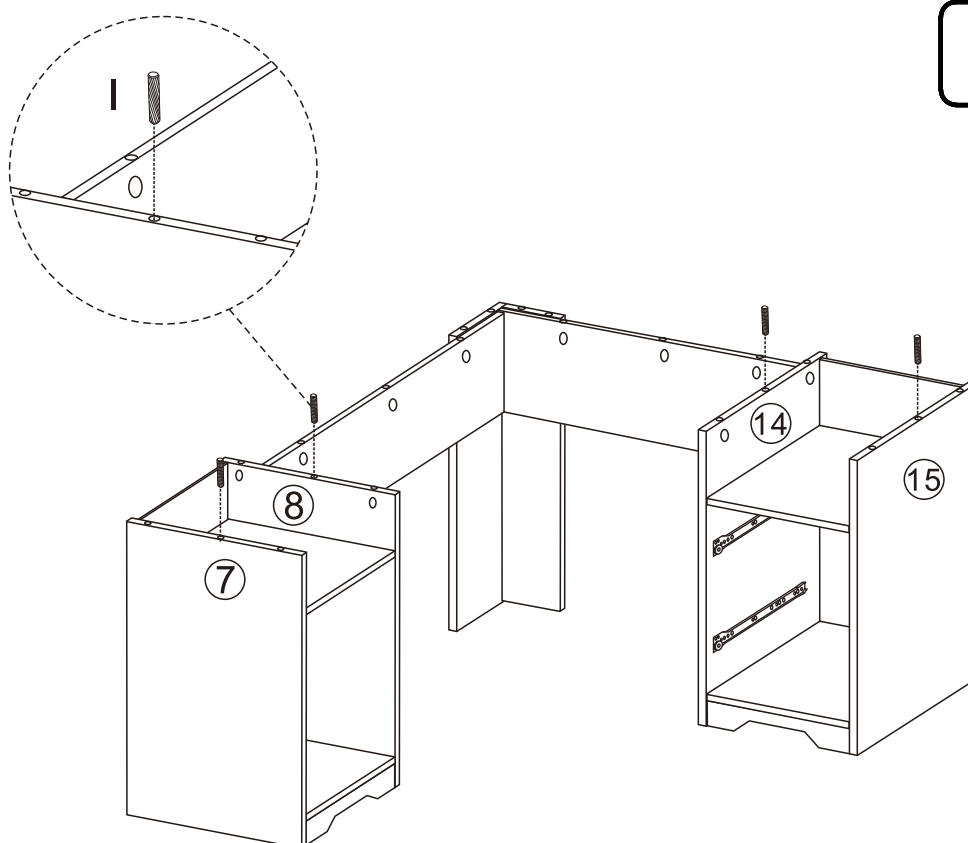


## STEP 21

A2x18 

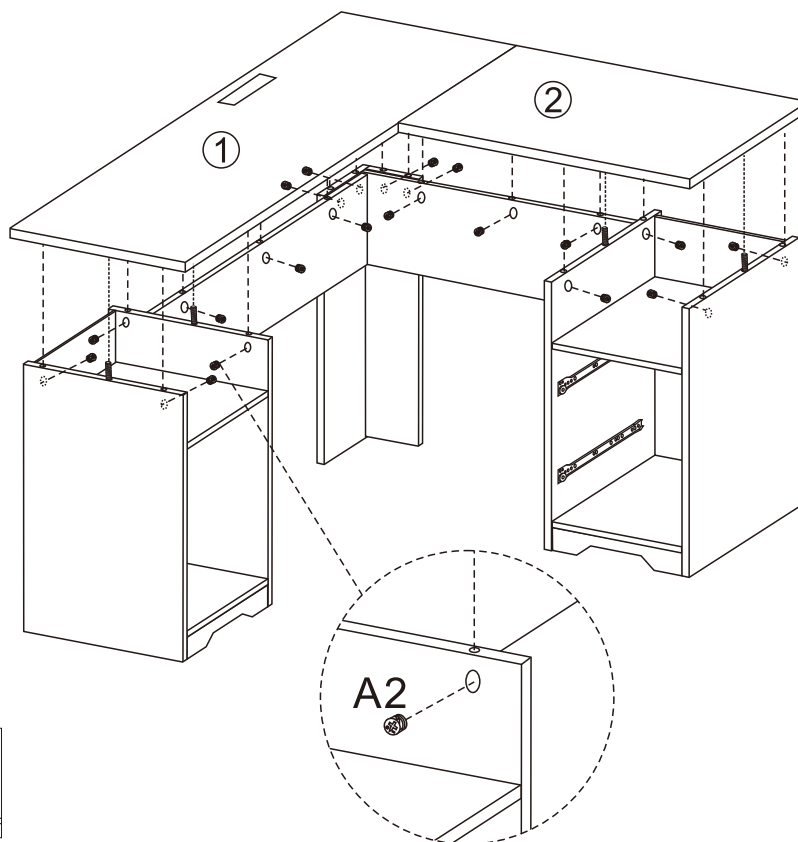

Cam Lock Fastening System




## STEP 22

Dx1 

Gx1 


Lx1 

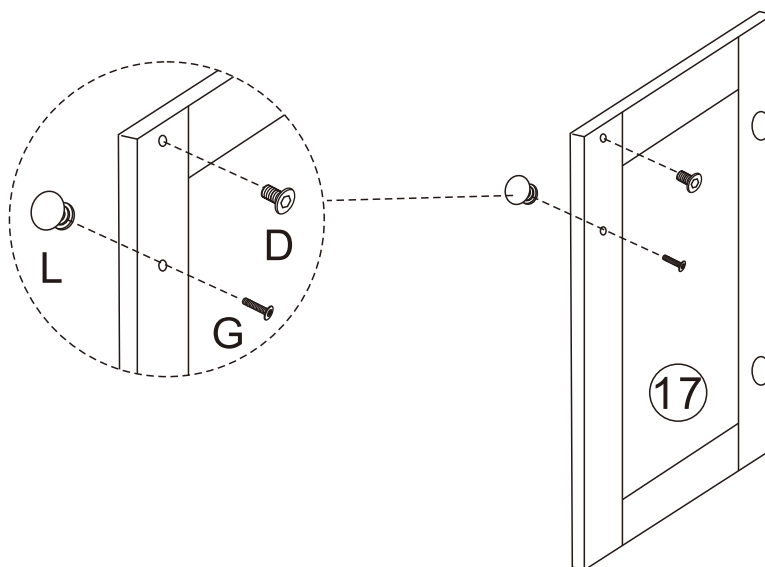

# STEP 23

Ex4 


Kx2 

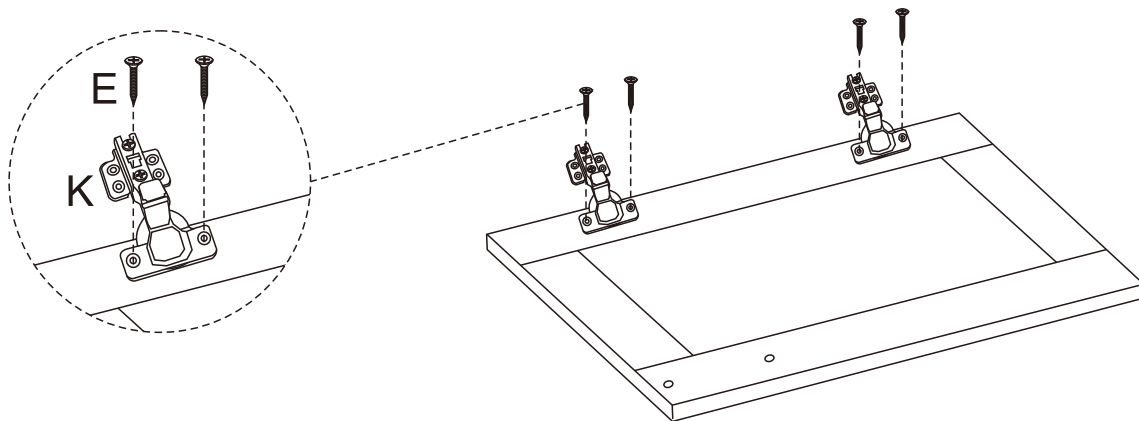

# STEP 24

Ex8 


Kx2 

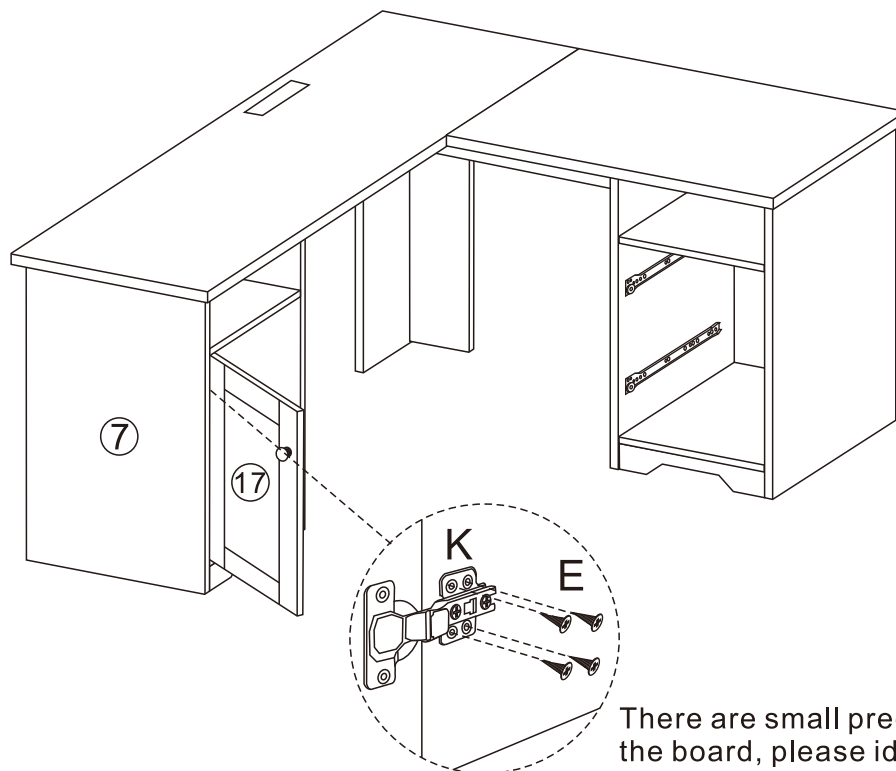

There are small predrilled holes on the board, please identify the positions of the holes and assemble the part.

STEP 25


Qx4 

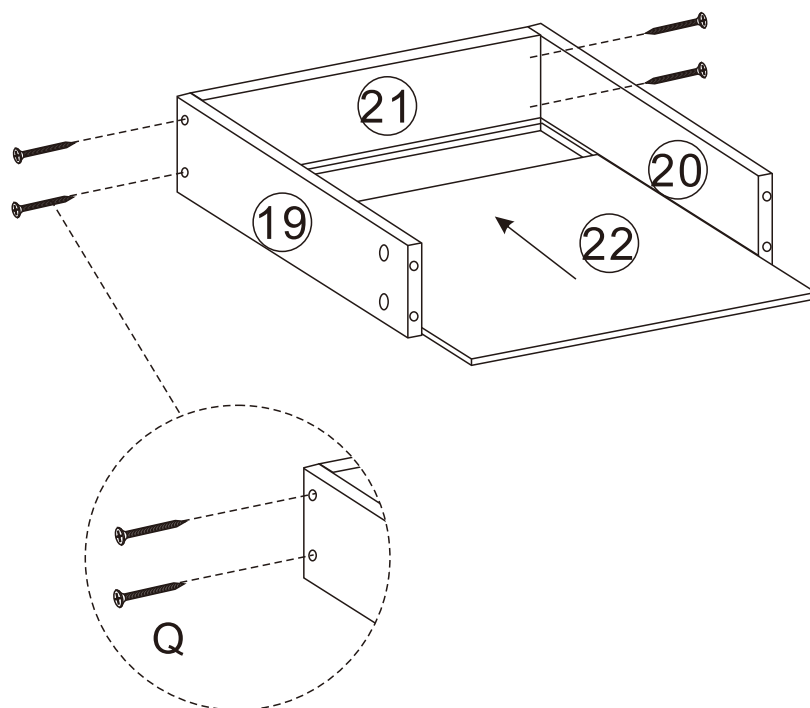

STEP 26


Gx1 

Lx1 

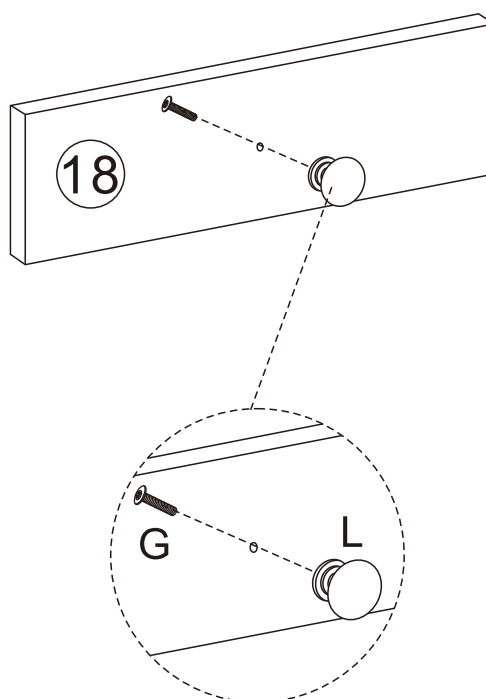


## STEP 27

A2x4 

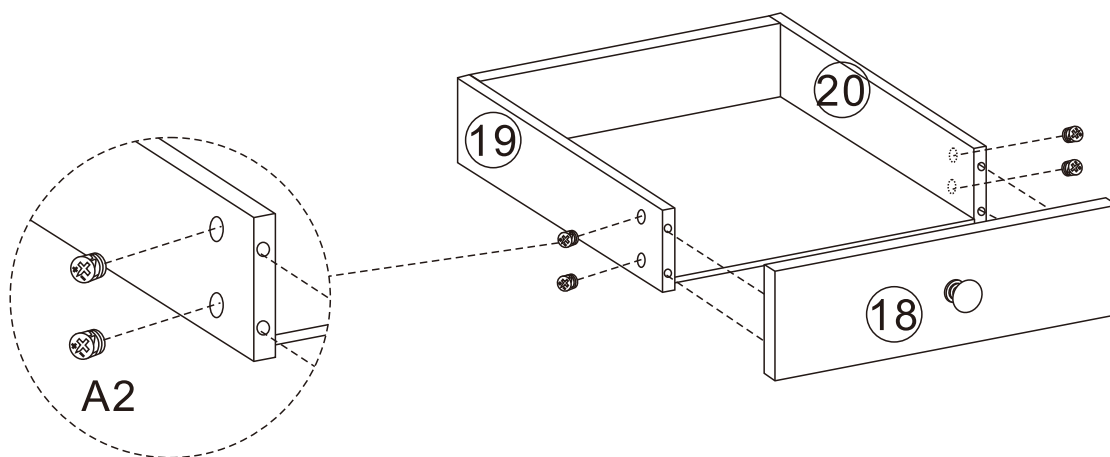



Cam Lock Fastening System



## STEP 28

Ex4 


Hx1 

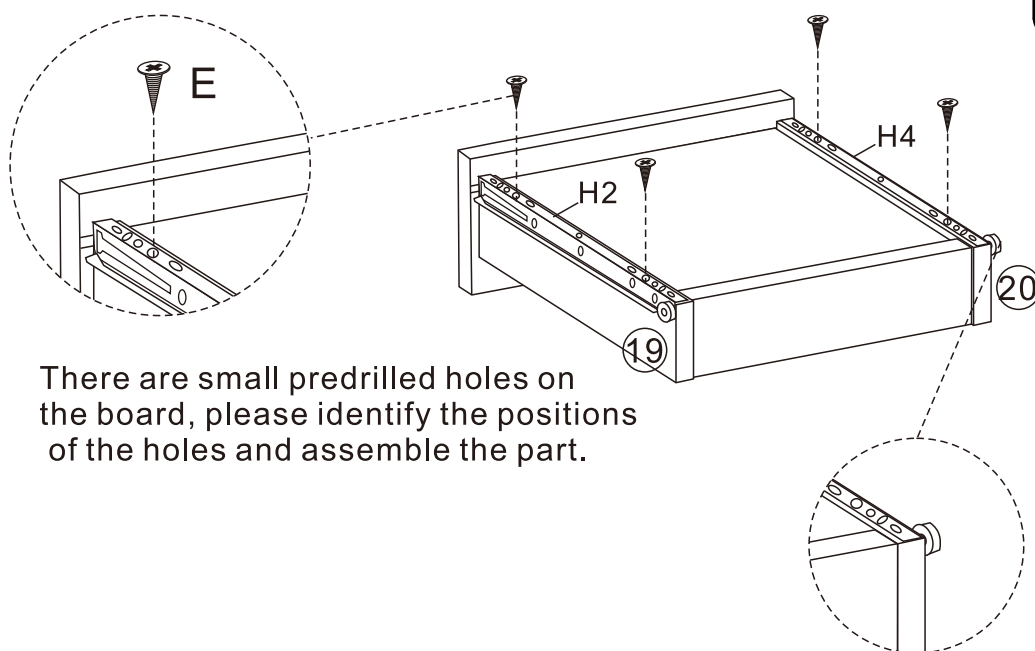

There are small predrilled holes on the board, please identify the positions of the holes and assemble the part.

STEP 29


Qx4 

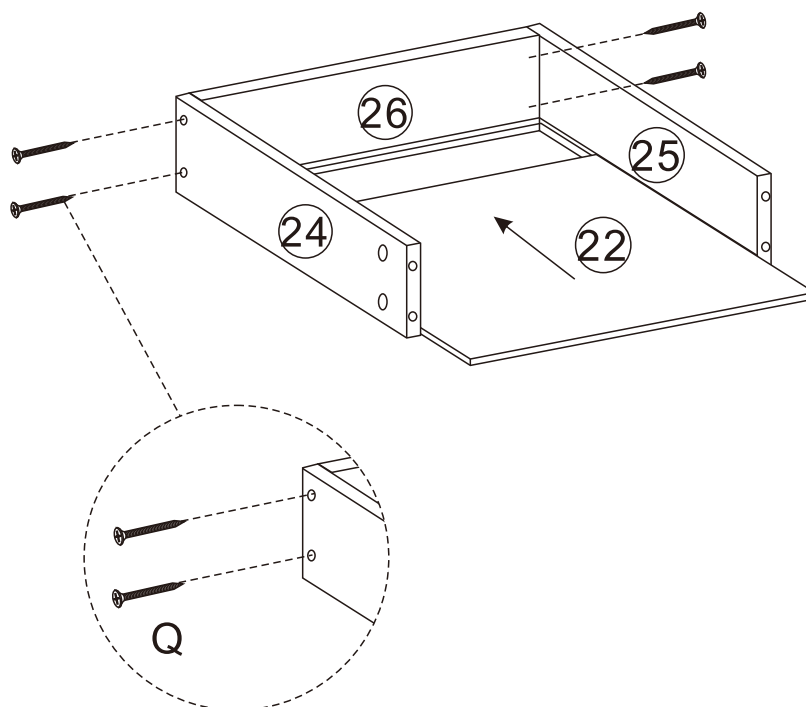

STEP 30


Gx2 

Mx1 

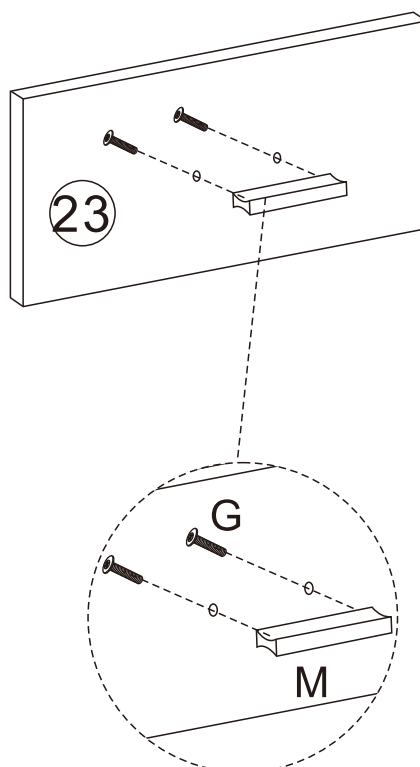


## STEP 31

A2x4 

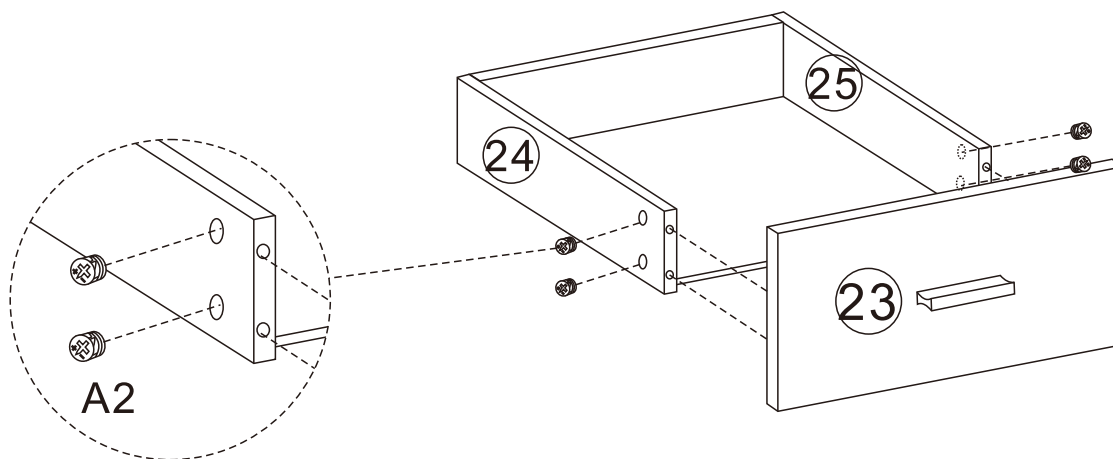


Cam Lock Fastening System



## STEP 32

Ex4 

Hx1 

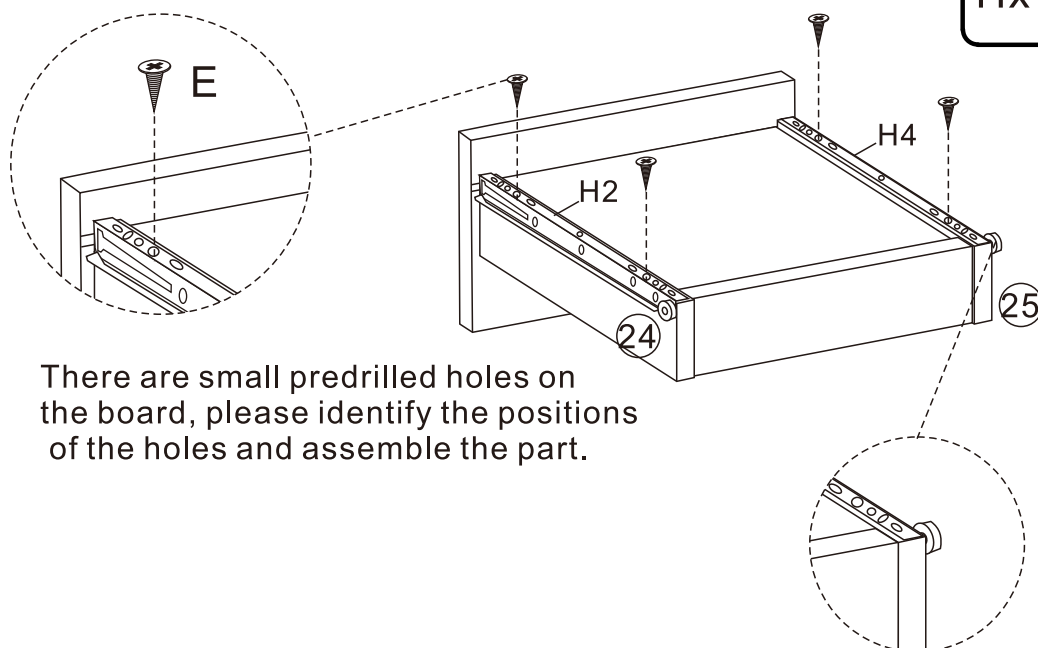



There are small predrilled holes on the board, please identify the positions of the holes and assemble the part.

# STEP 33



Ex2



Nx1

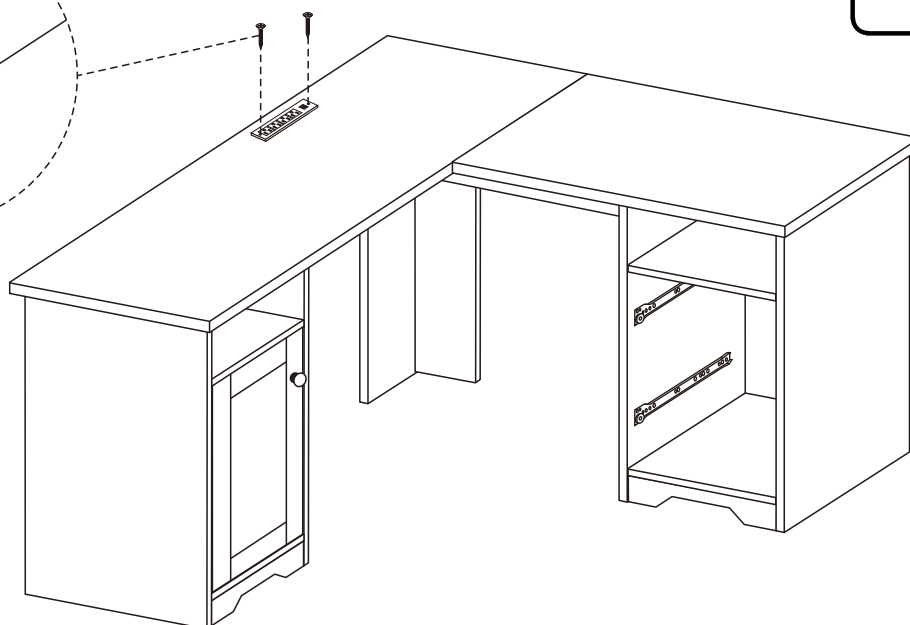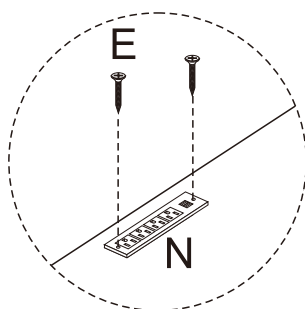

# STEP 34

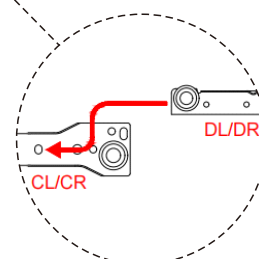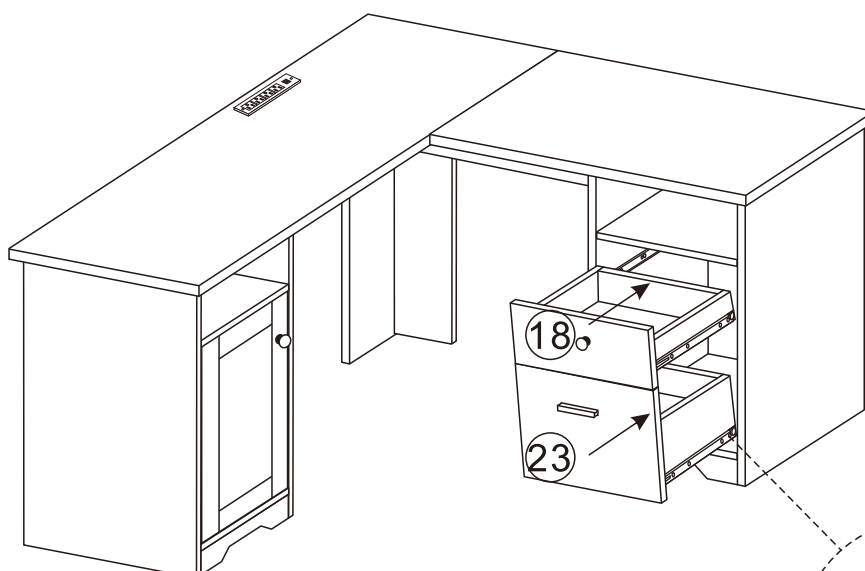

Please put the wheels align with the slots as the instruction shows, then slide into them.