
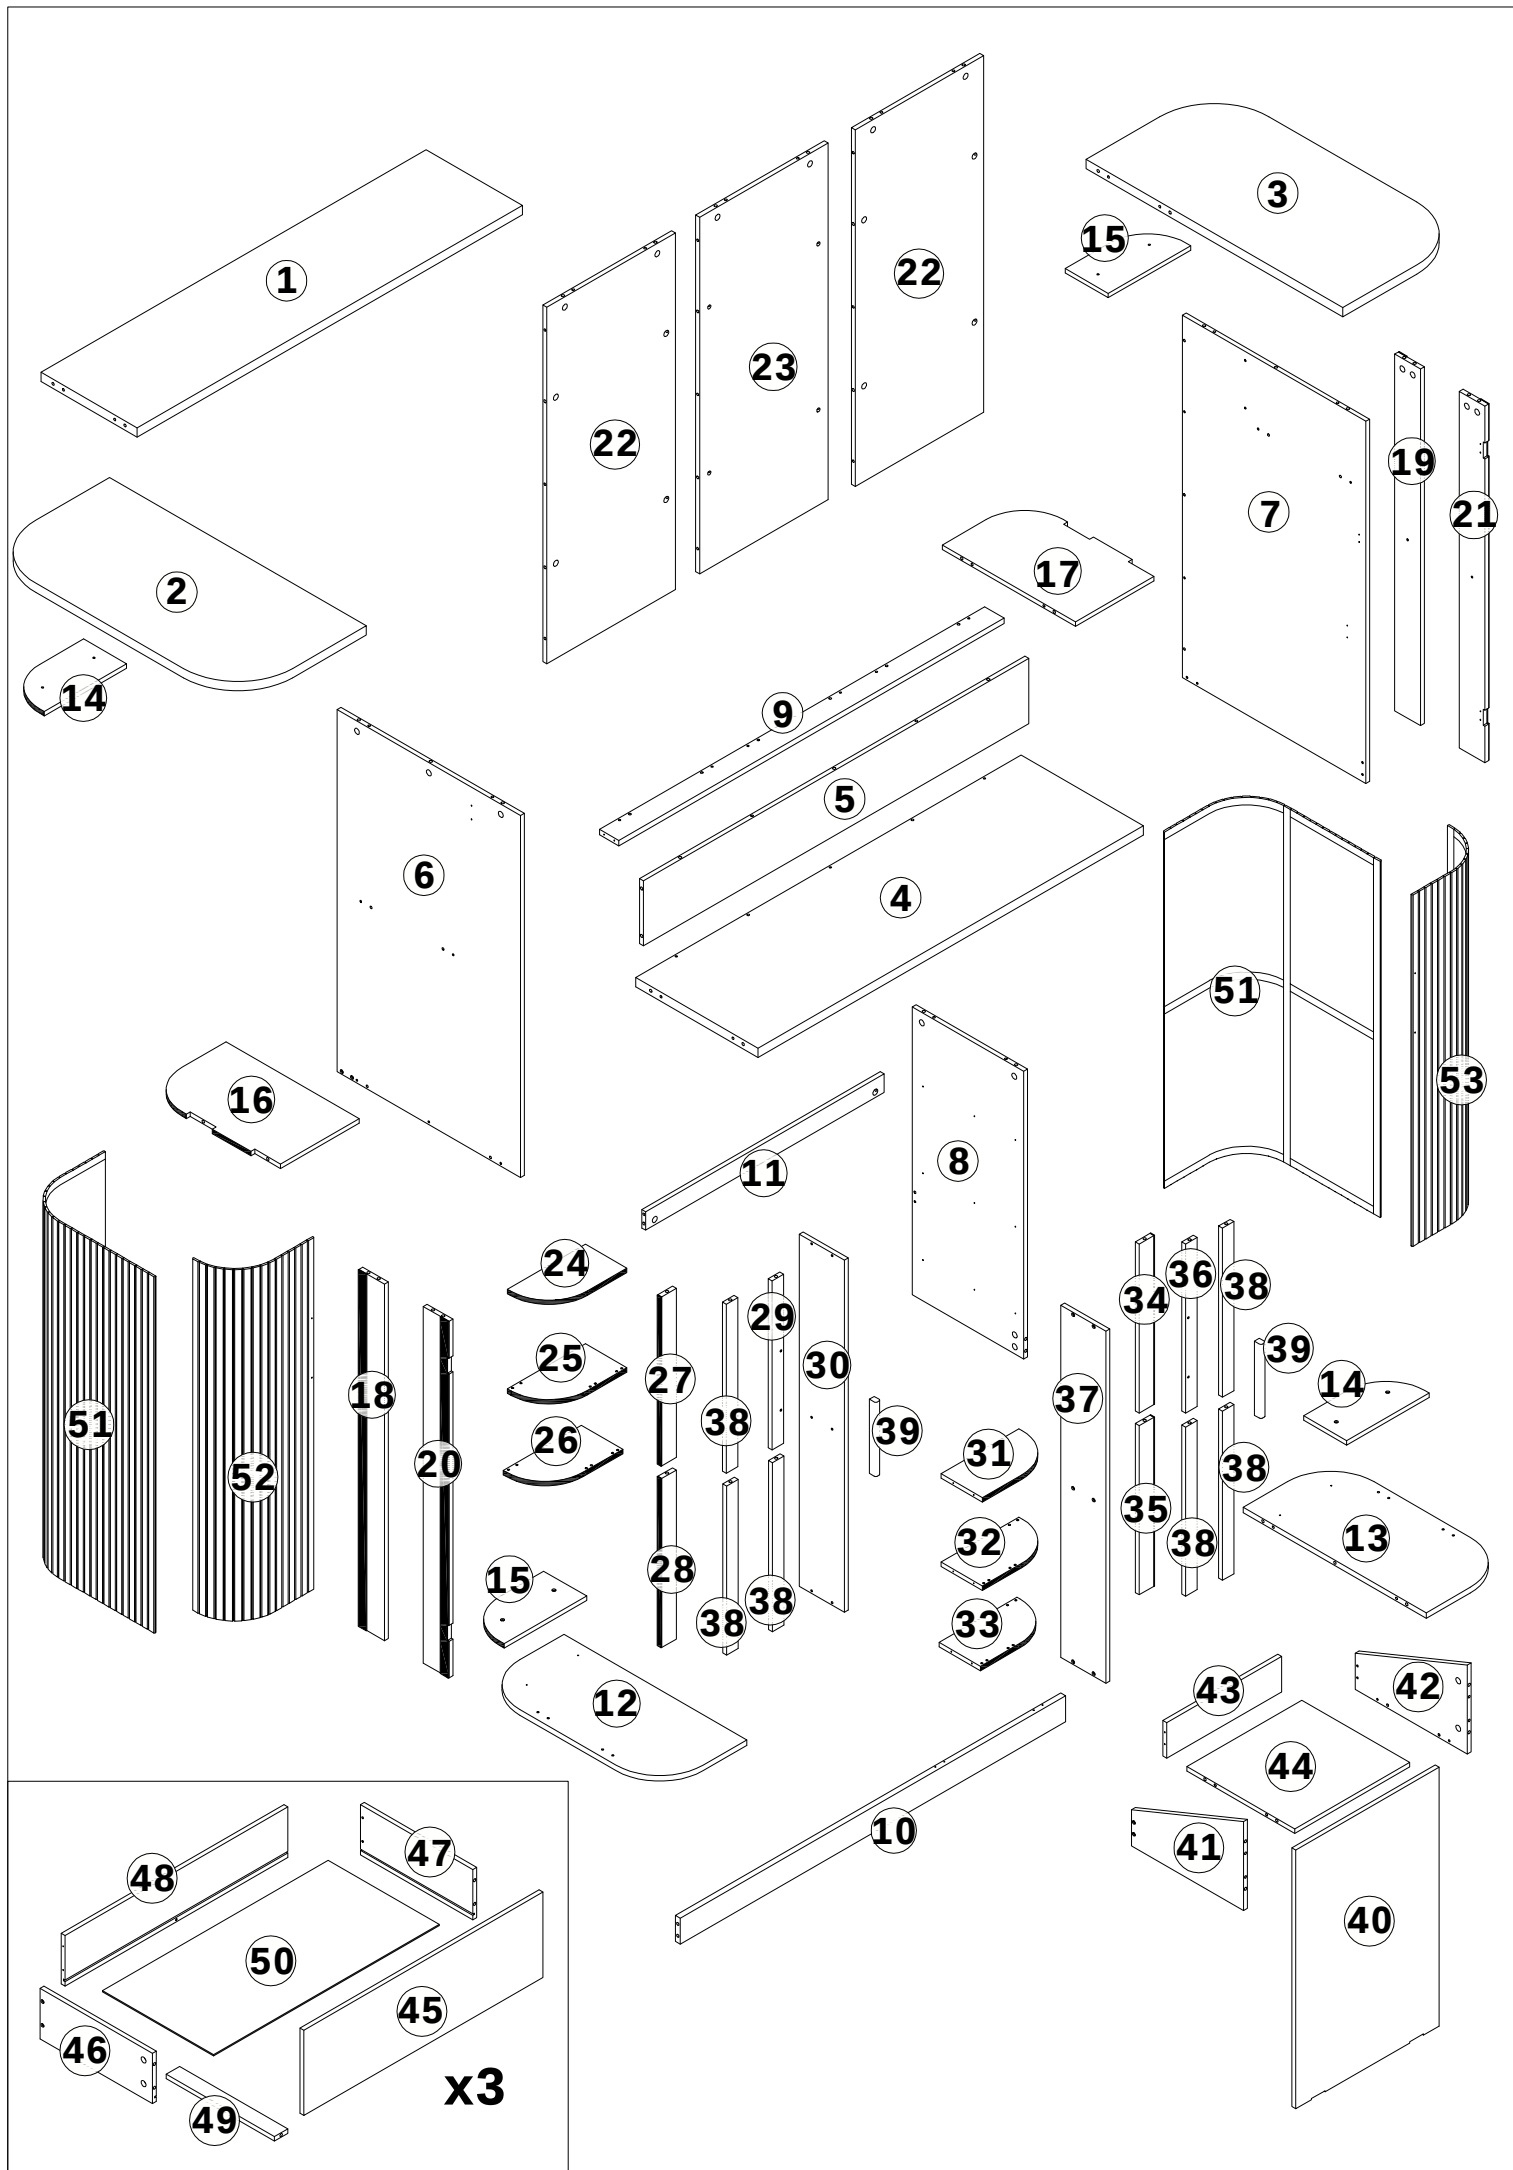
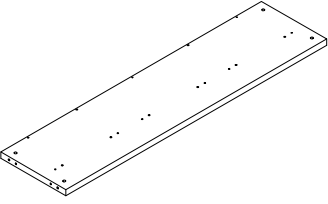
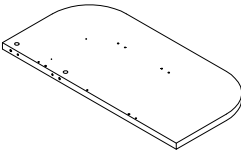
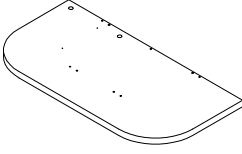
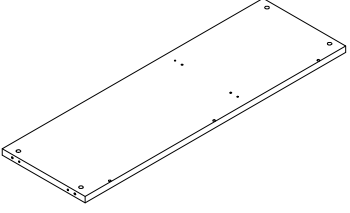
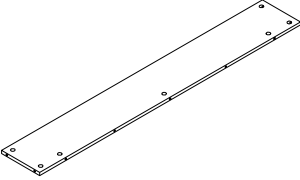
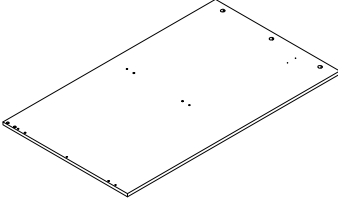
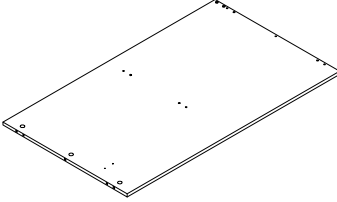
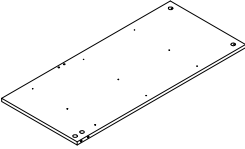
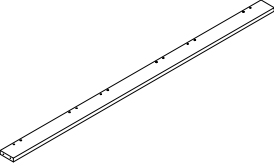
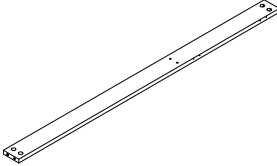





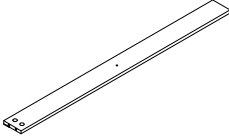
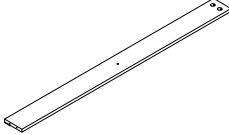
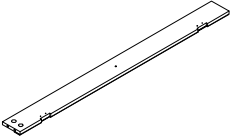
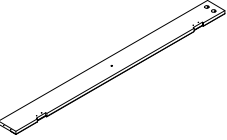
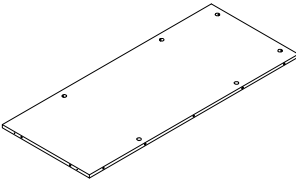















Installation instruction

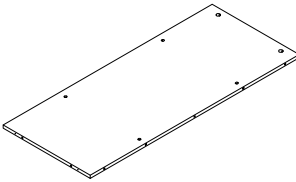





Parts and Operation Elements

							
①	1pc	②	1pc	③	1pc	④	1pc
							
⑤	1pc	⑥	1pc	⑦	1pc	⑧	1pc
							
⑨	1pc	⑩	1pc	⑪	1pc	⑫	1pc
							
⑬	1pc	⑭	2pcs	⑮	2pcs	⑯	1pc
							
⑰	1pc	⑱	1pc	⑲	1pc	⑳	1pc
							
㉑	1pc	㉒	2pcs	㉓	1pc	㉔	1pc

















Parts and Operation Elements

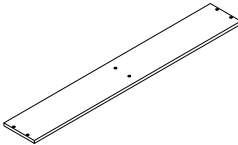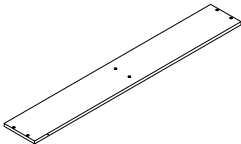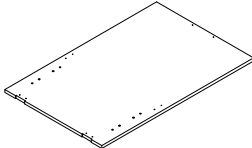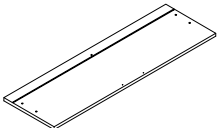							
25	1pc	26	1pc	27	1pc	28	1pc
							
29	1pc	30	1pc	31	1pc	32	1pc
							
33	1pc	34	1pc	35	1pc	36	1pc
							
37	1pc	38	6pcs	39	2pcs	40	1pc
							
41	1pc	42	1pc	43	1pc	44	1pc
							
45	3pcs	46	3pcs	47	3pcs	48	3pcs

Parts and Operation Elements

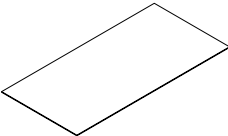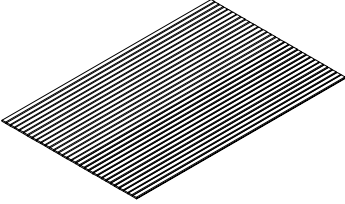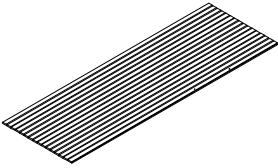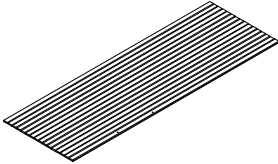							
49	3pcs	50	3pcs	51	2pcs	52	1pc
							
53	1pc						




Hardware

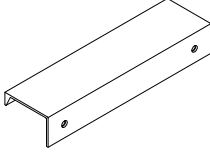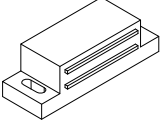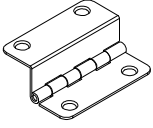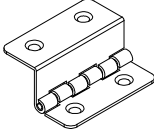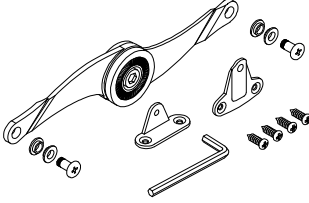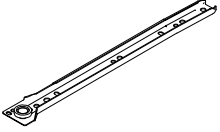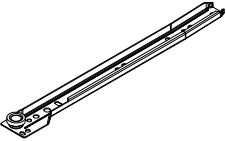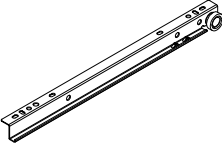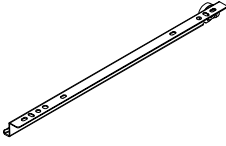				 Wood dowel Ø6 x 30mm			
A	94+4pcs	B	102+4pcs	C	60+4pcs	D	80+4pcs
							
E	72+4pcs	F	8+1pcs	G	4pcs	H	4+1pcs
							
J	2pcs	K	2pcs	L	1pc	M	8pcs
							
N	2pcs	O	4pcs	P	2pcs	CL	3pcs
							
CR	3pcs	DL	3pcs	DR	3pcs		




SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED
OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

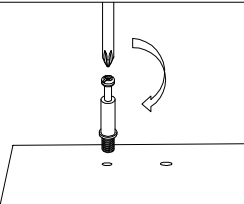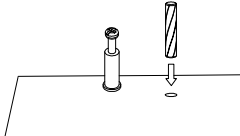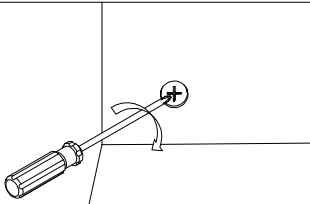			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.	Arrow must face hole	Screw the camlock firmly into locked position.

1





A x5



E x9




CR x3

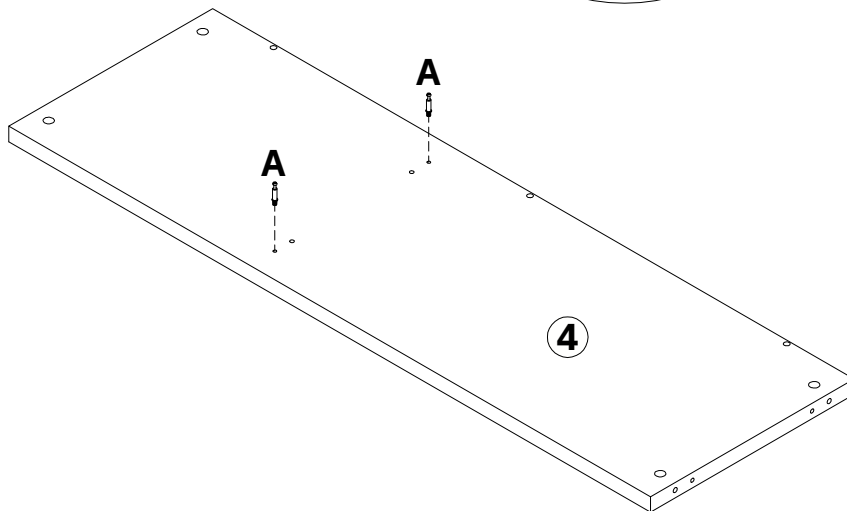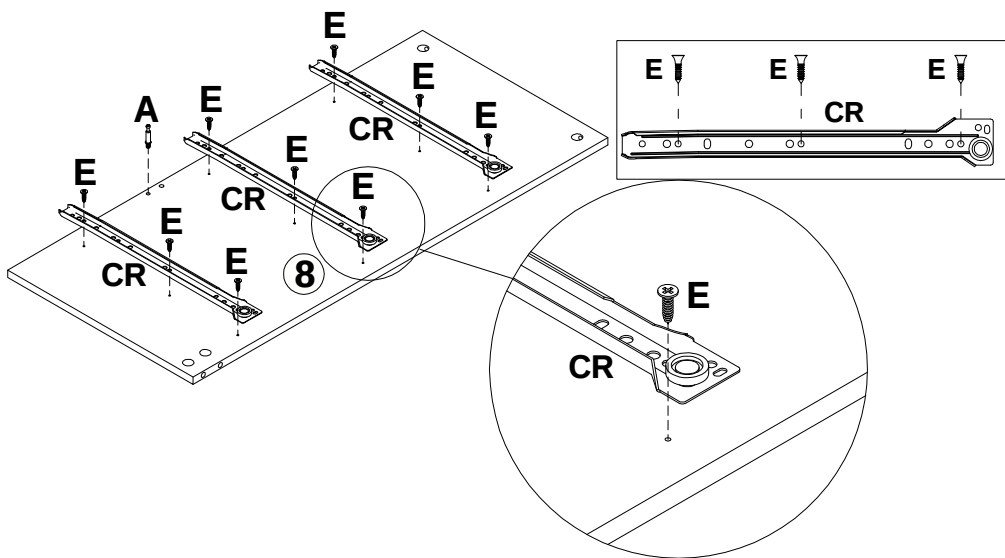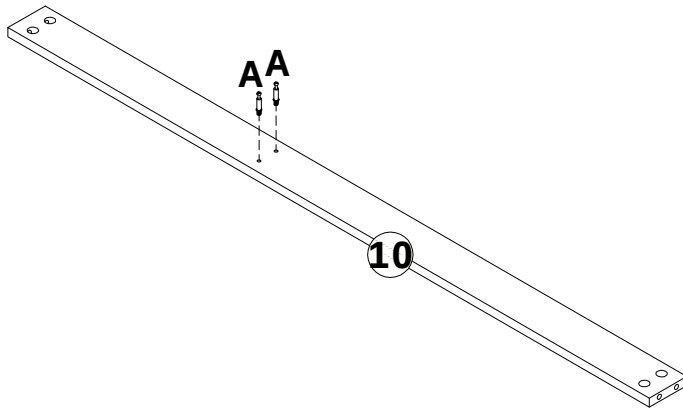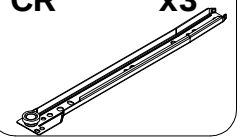

2

B

x2

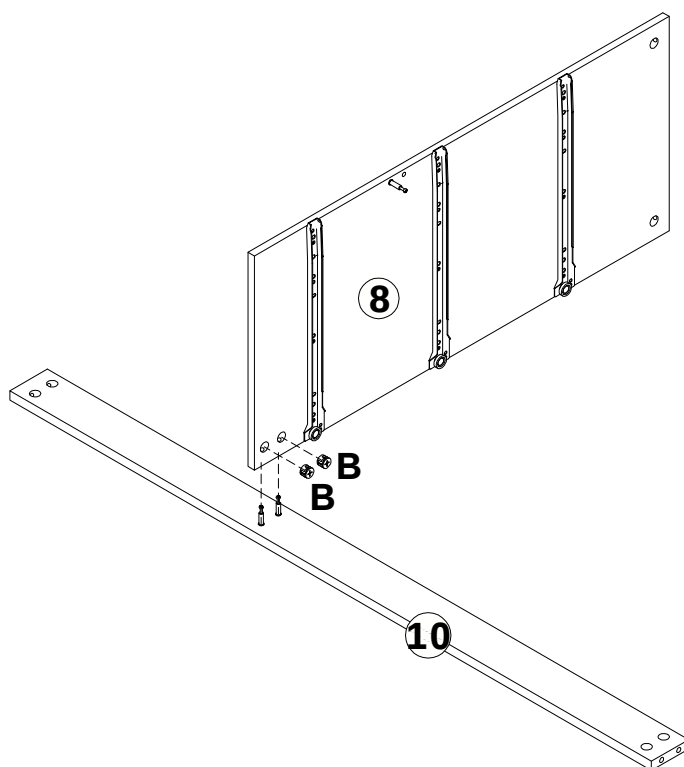

3



B

x2






C

x2

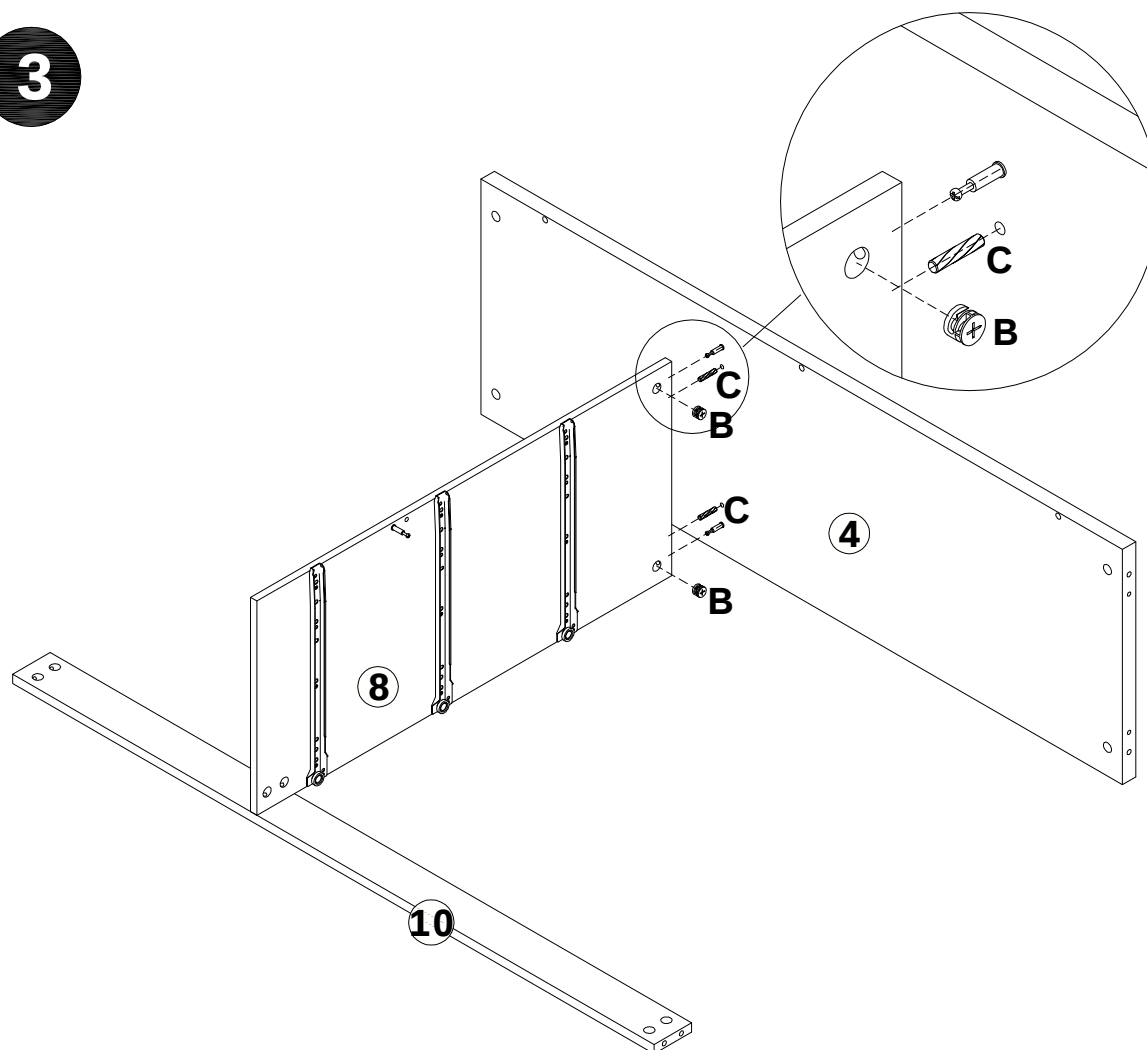


4

Fix screw A to one side of No.6 board, then turn to another side.

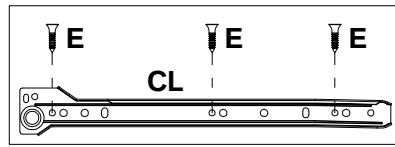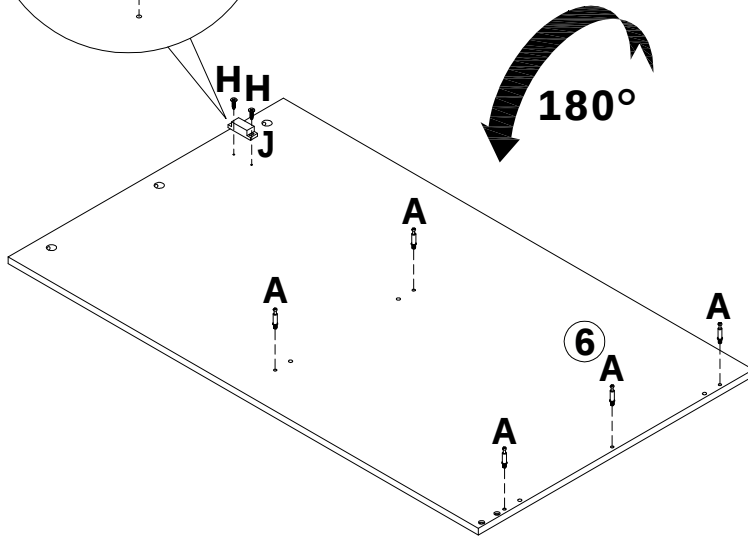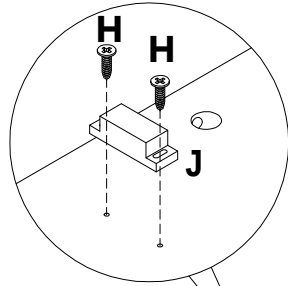

A x14




E x9





H x2




J x1




CL x3

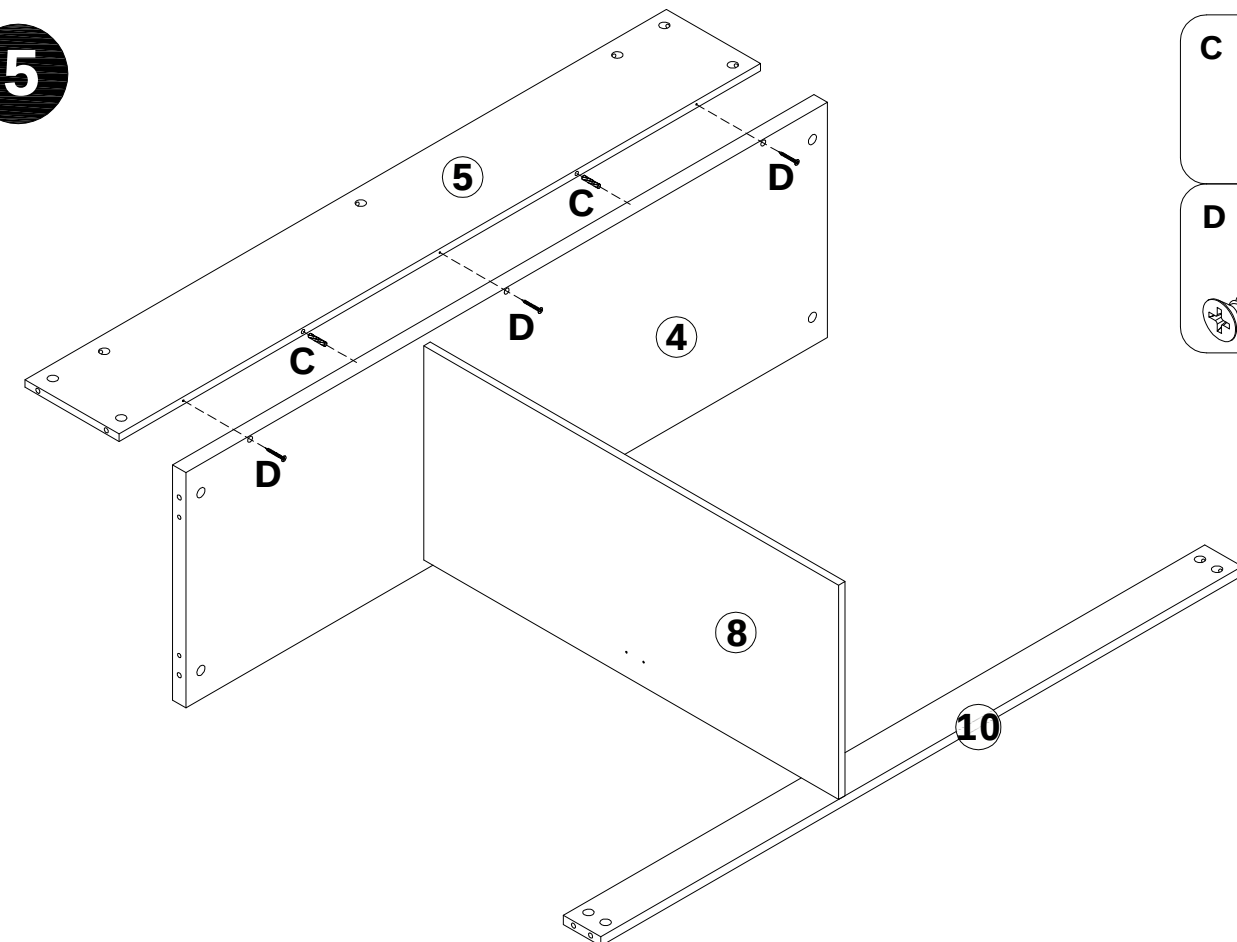


C x2



D x3




6

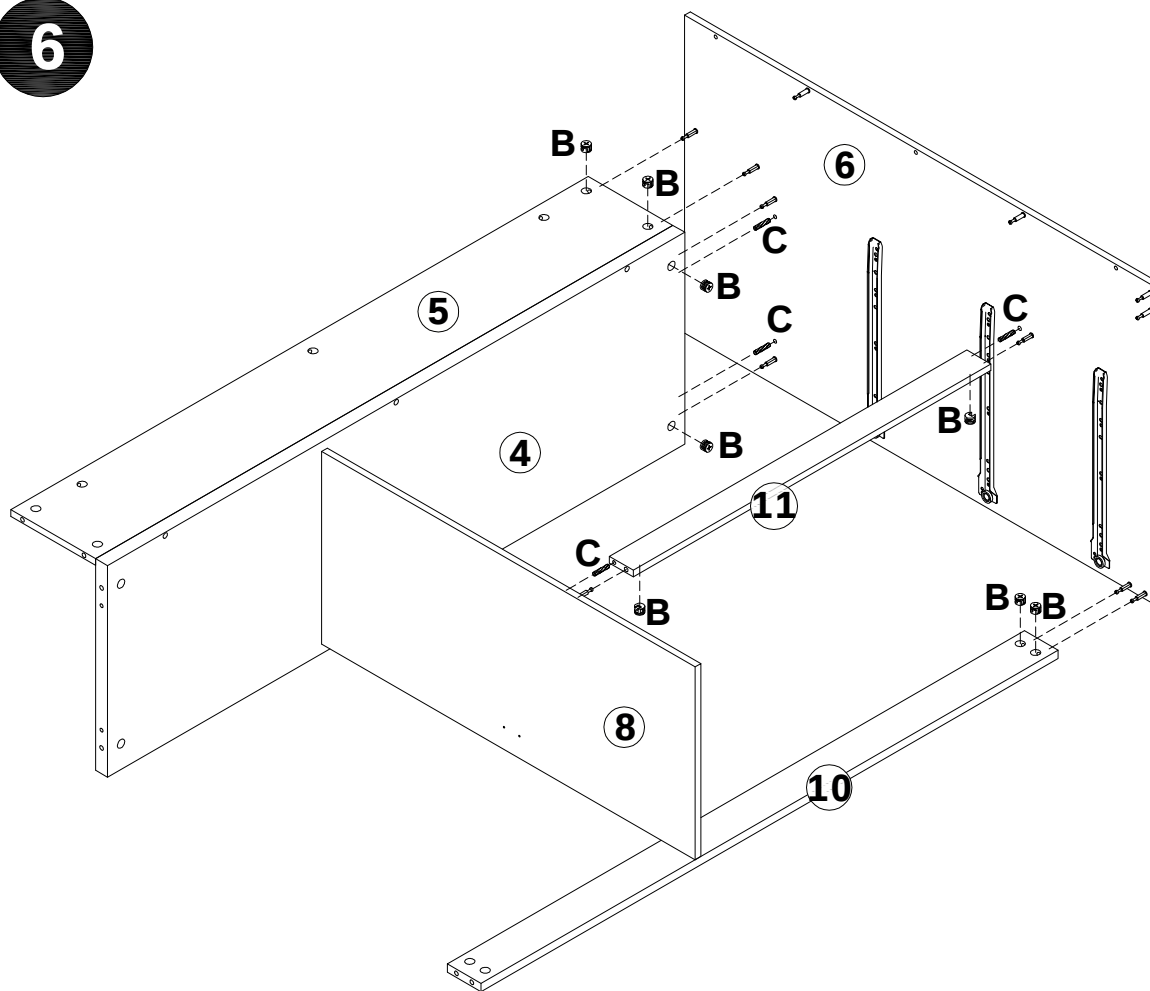


B x8




C x4



7

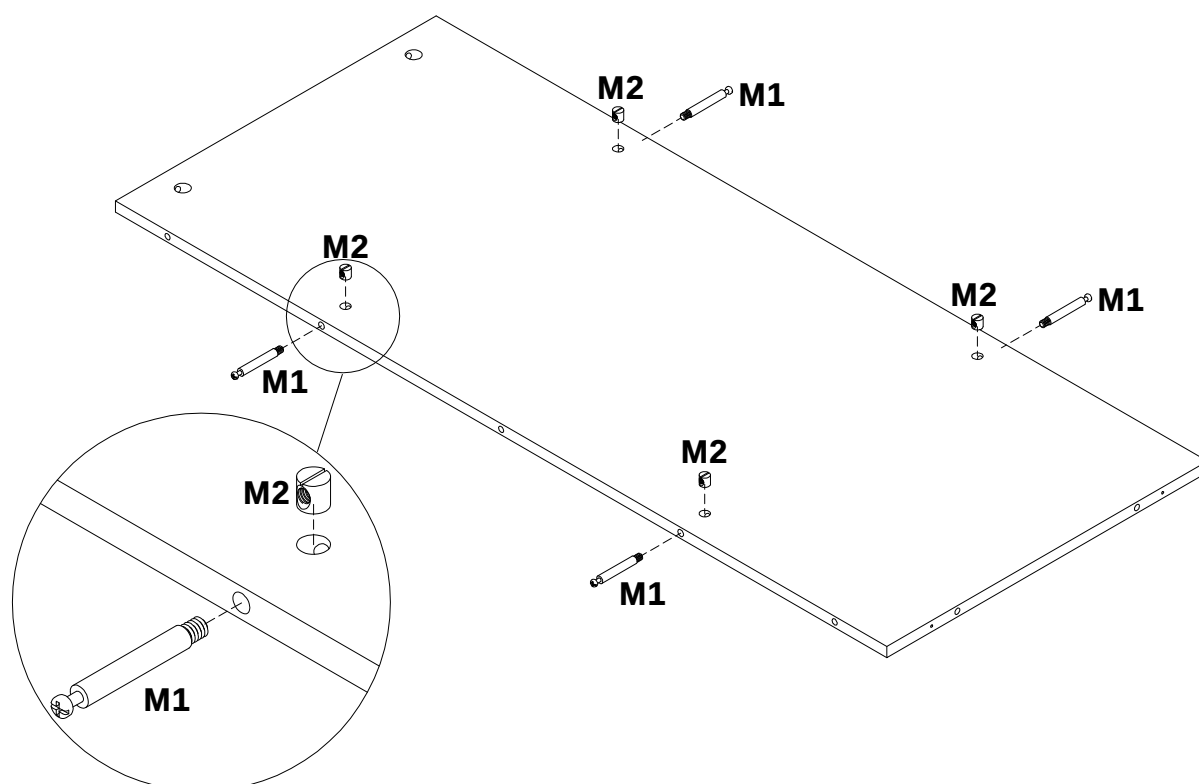

M x4





8

B x4




C x6

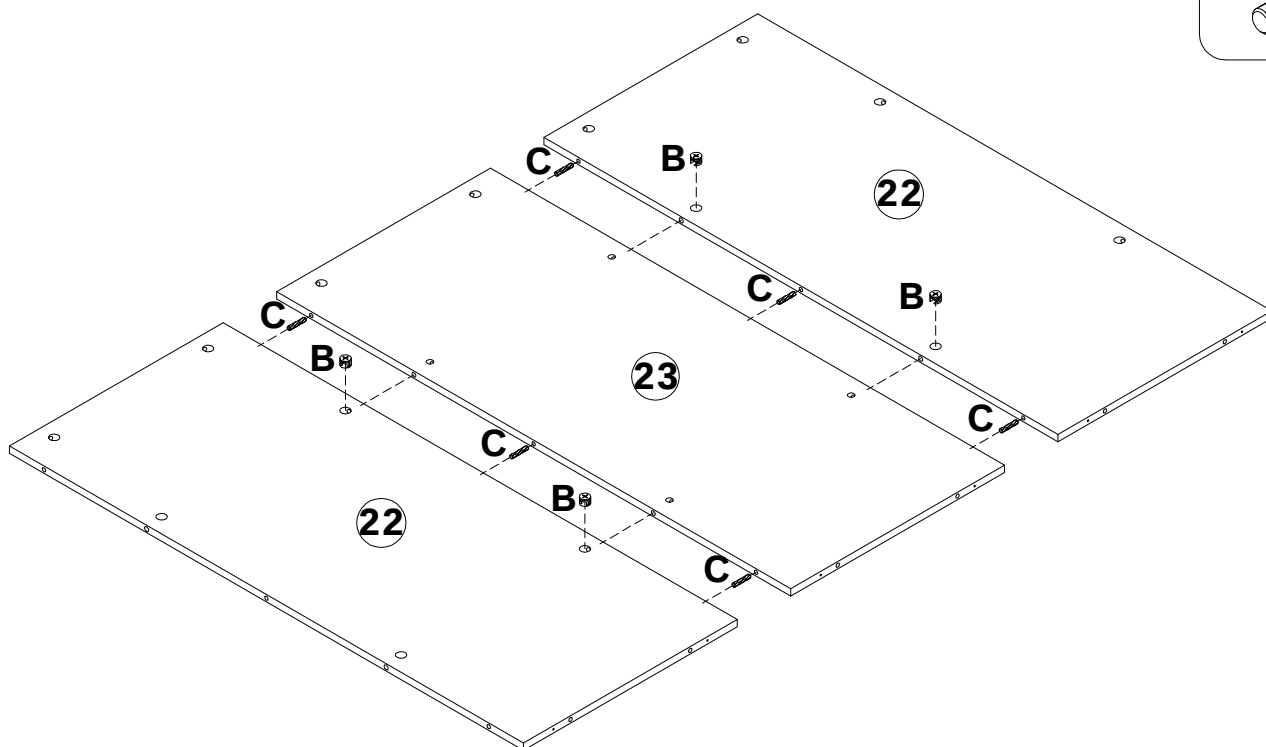



9

C x6




D x6

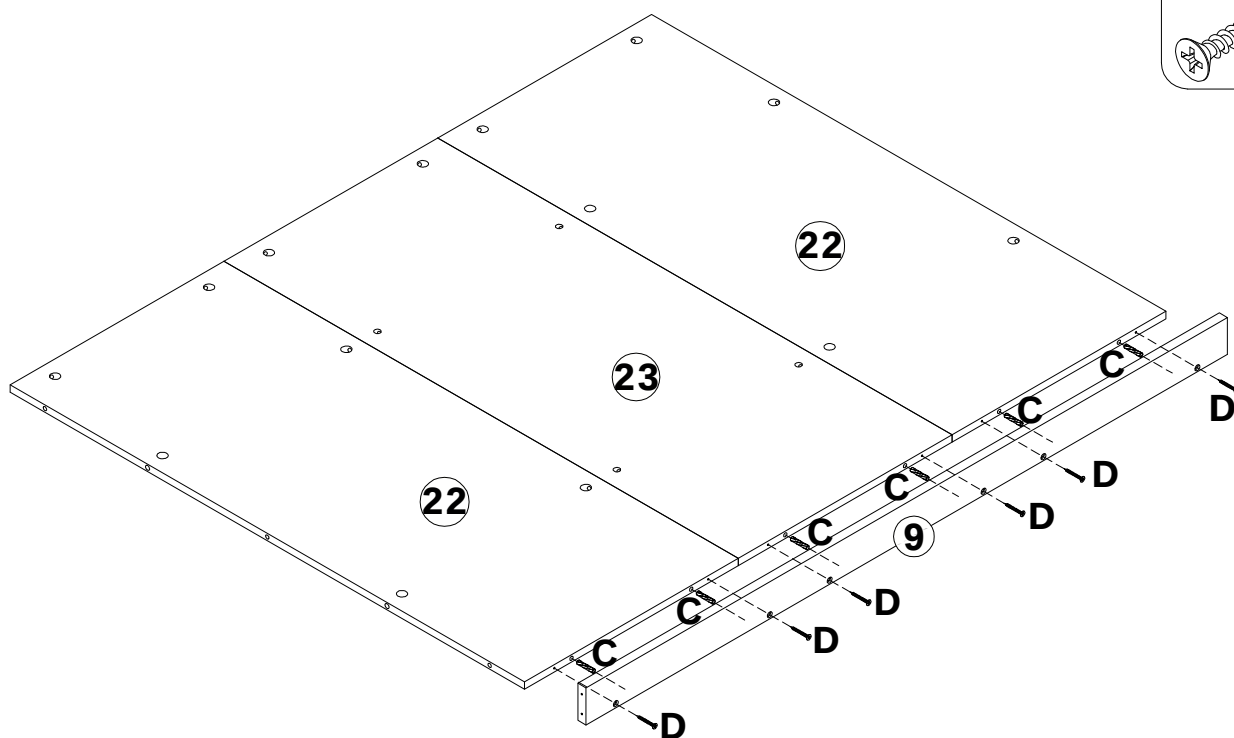


10

Fix screw A to one side of No.7 board, then turn to another side.

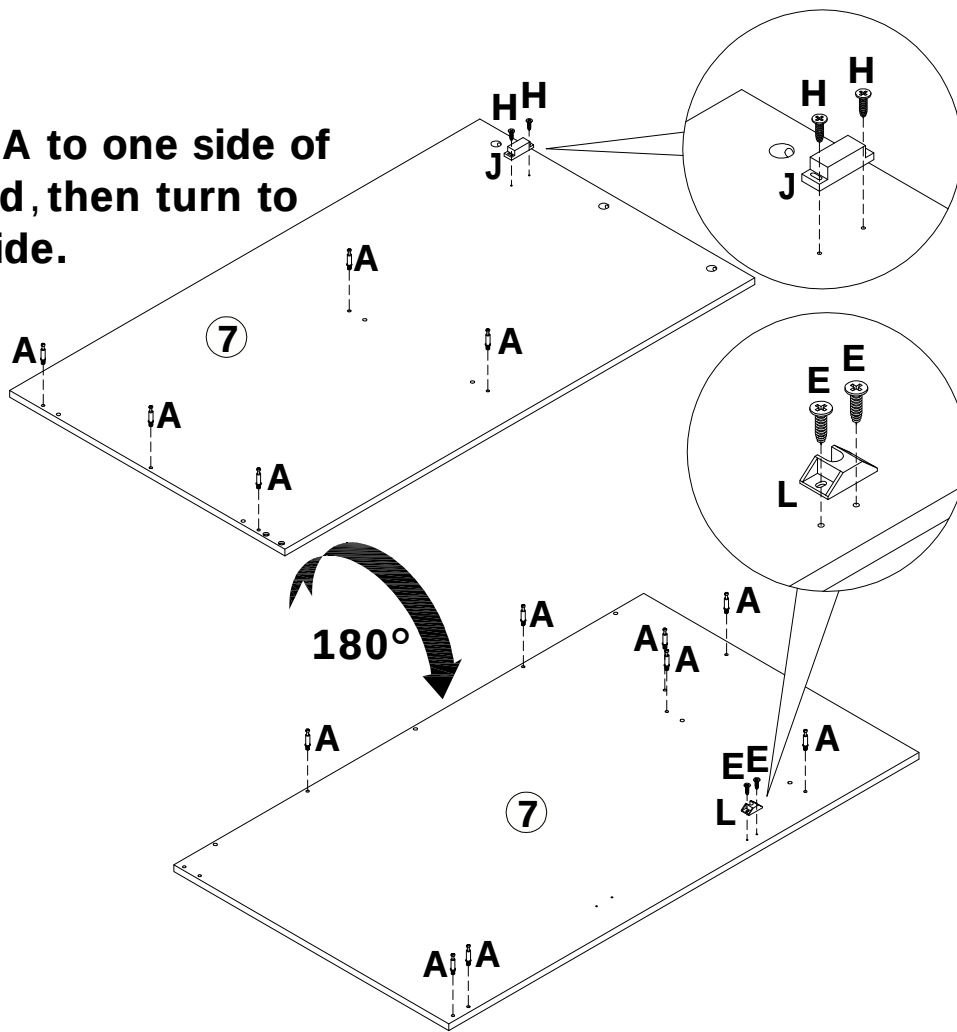


A x13




E x2




H x2




J x1



L x1




11

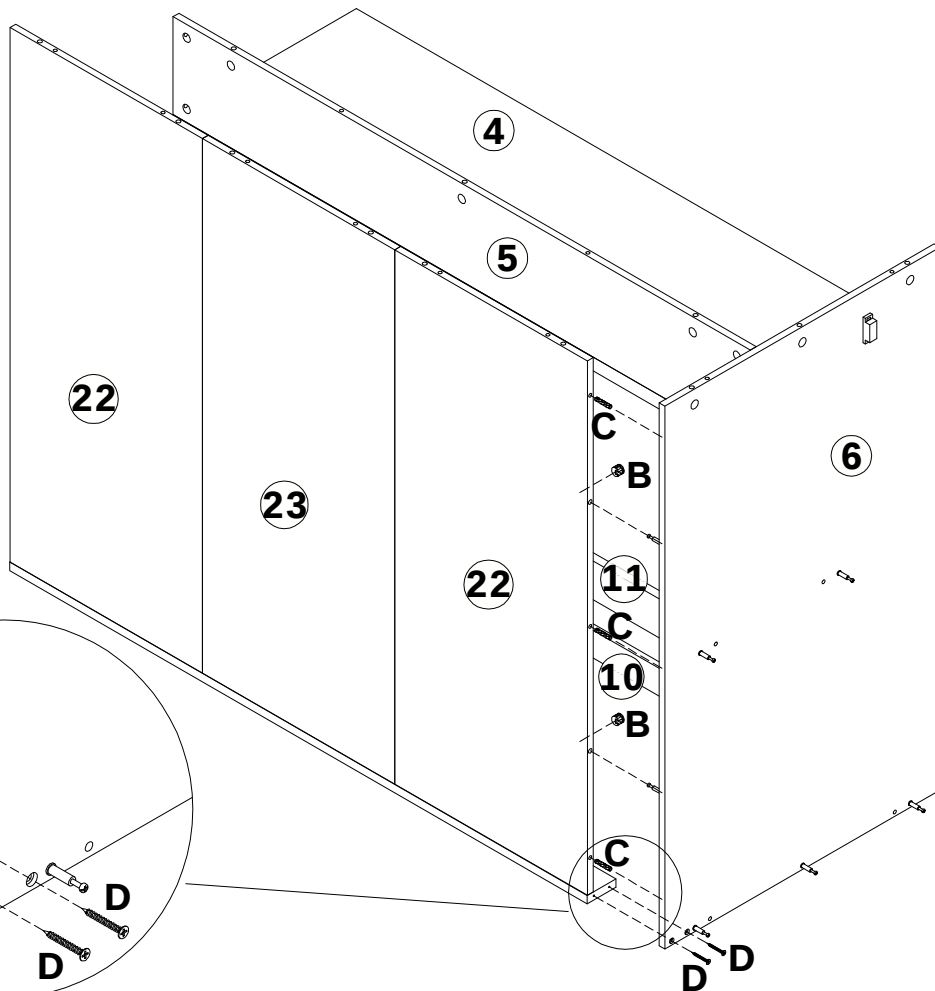


B x2



C x3



D x2




12



B x8




C x5




D x2

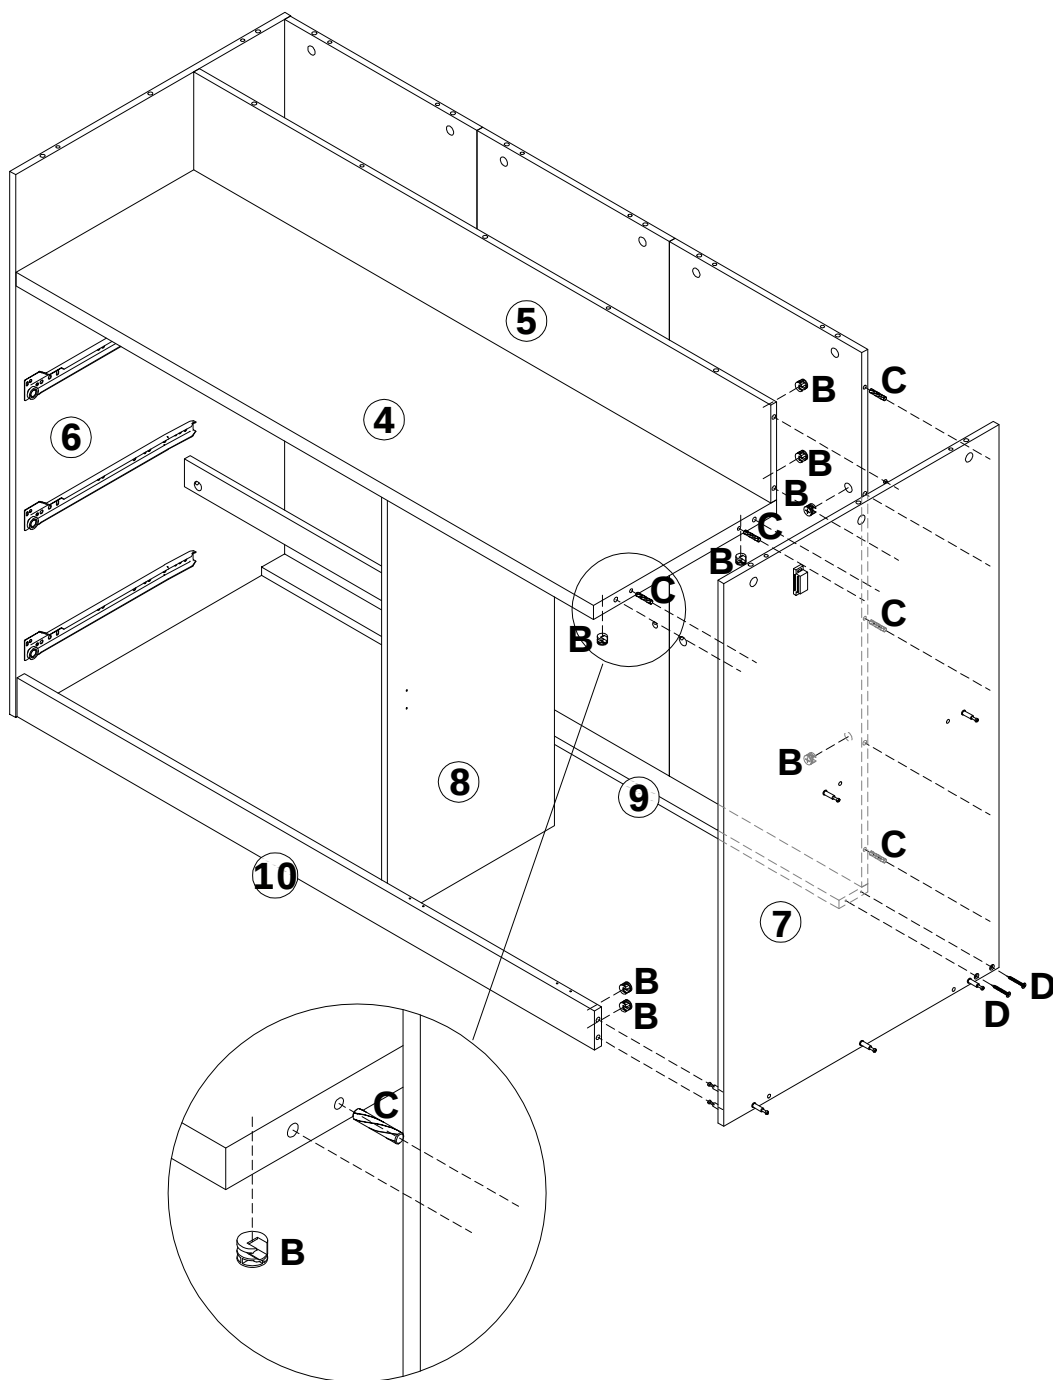


13

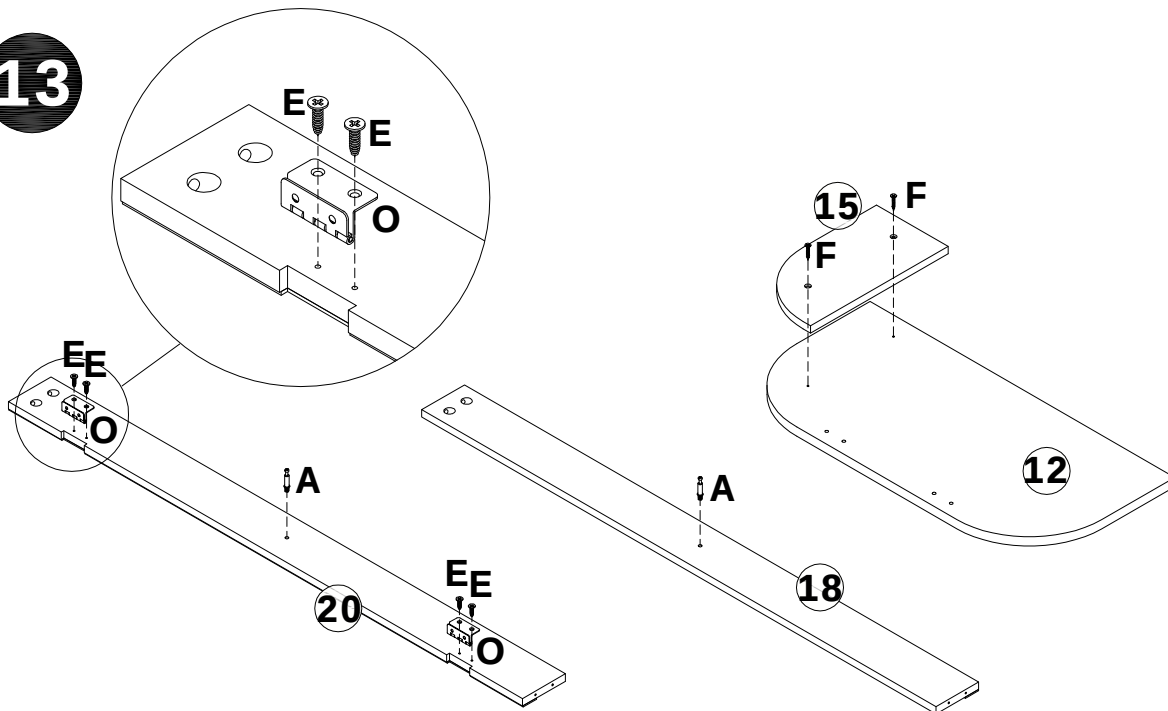


A x2




E x4




F x2



O x2

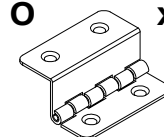


14

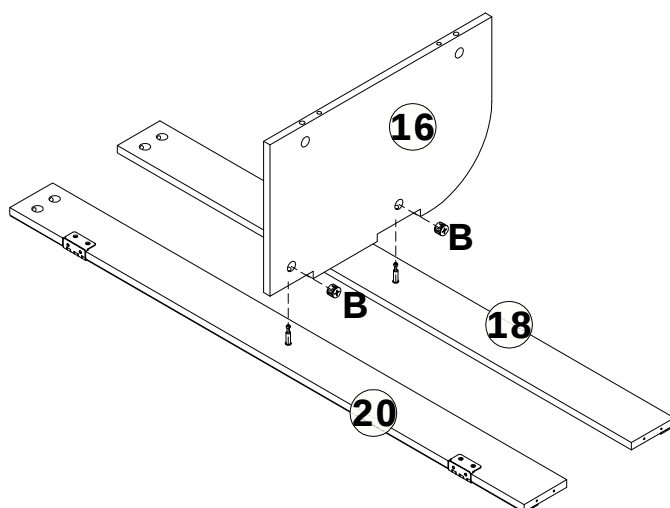


B x2








15

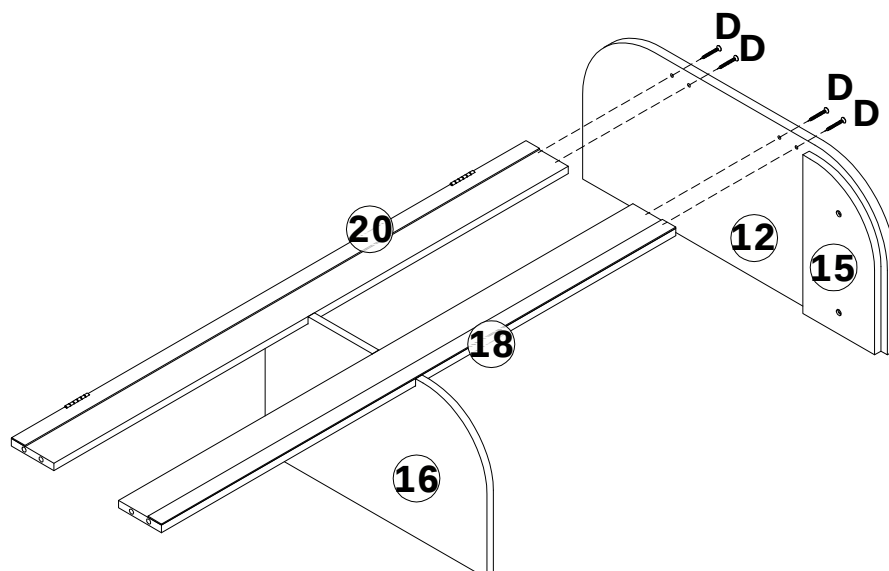



D x4





16

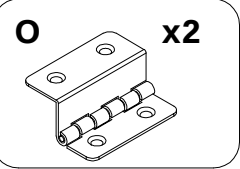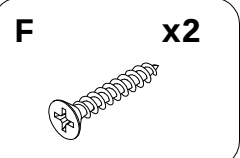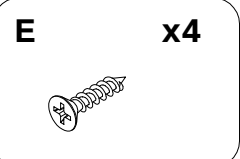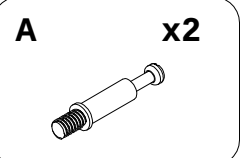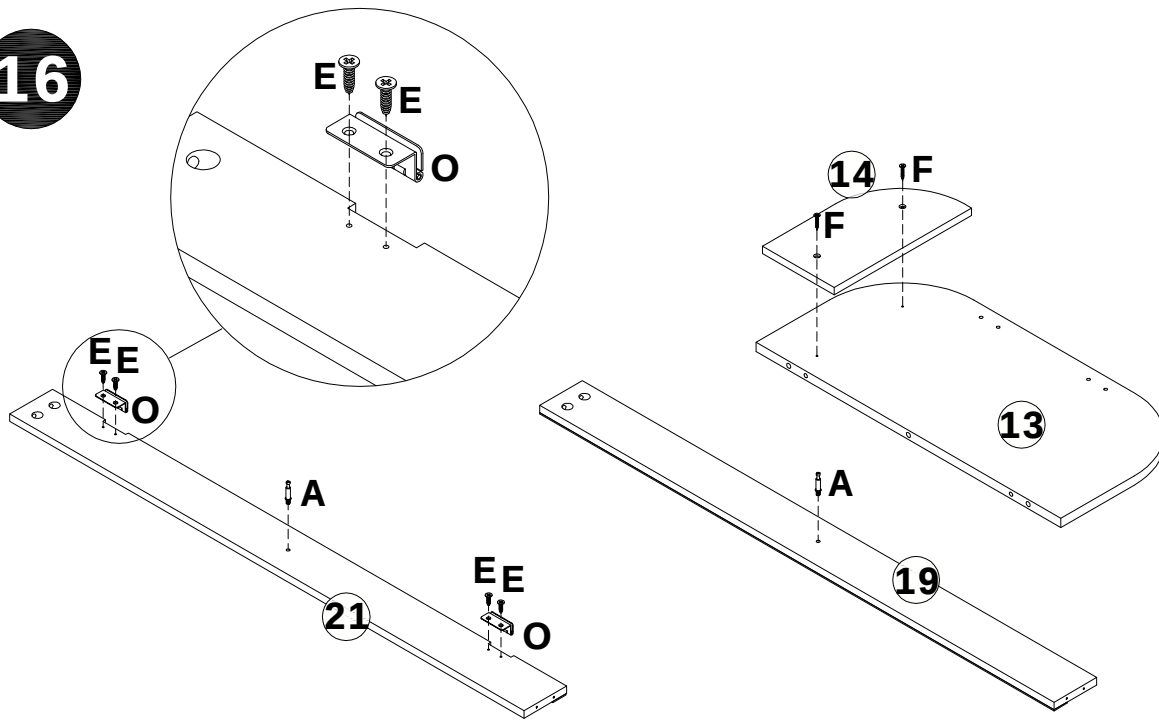


17

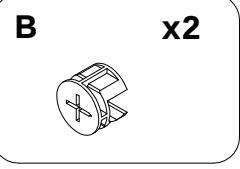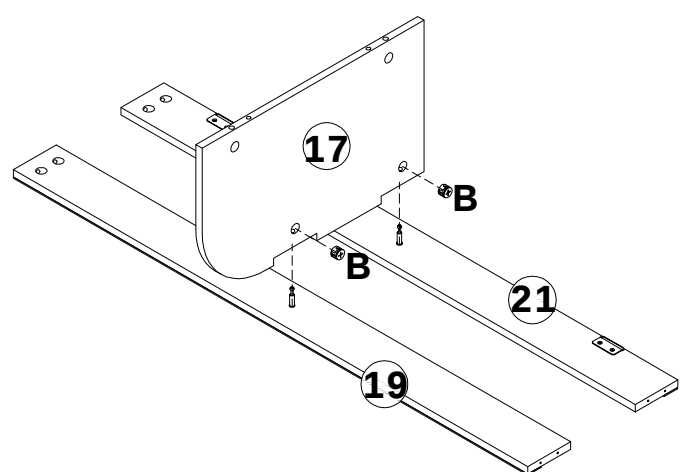

18

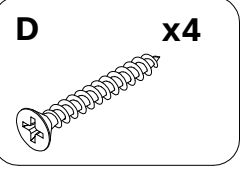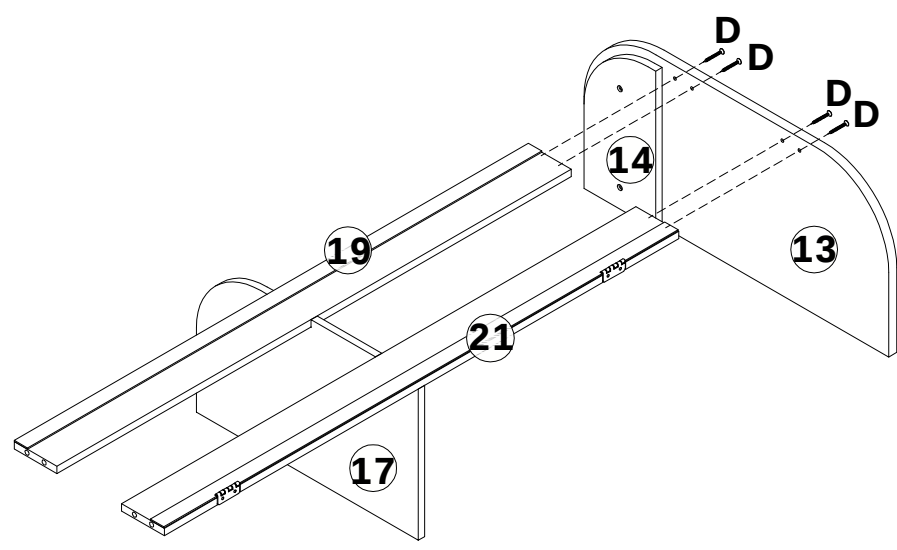


19

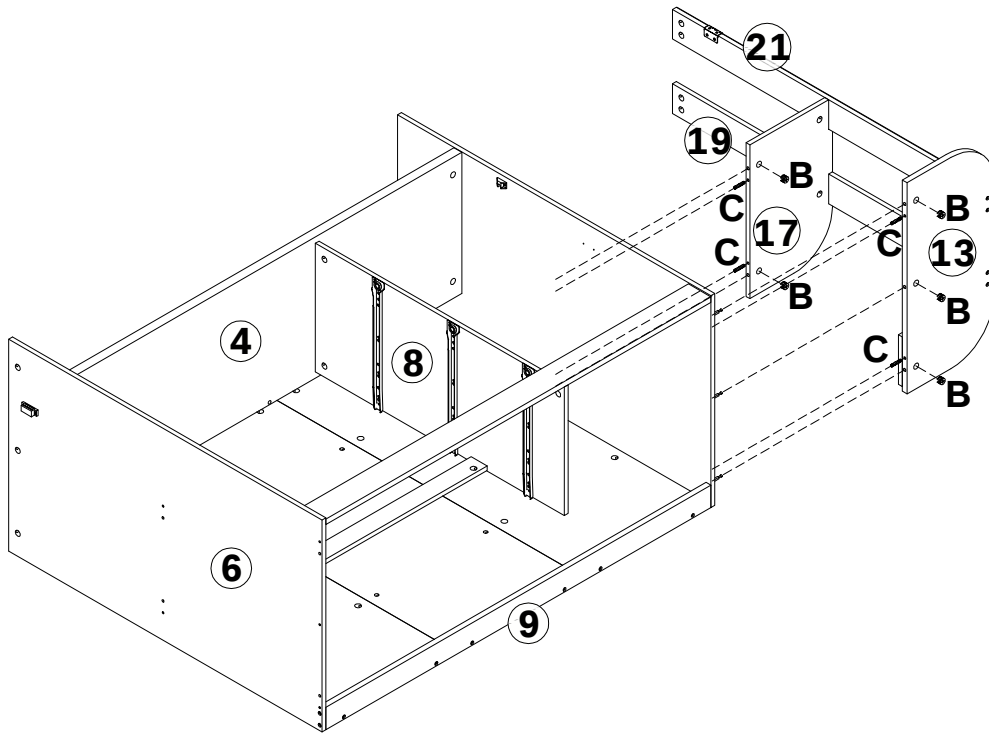


B x5



C x4




20

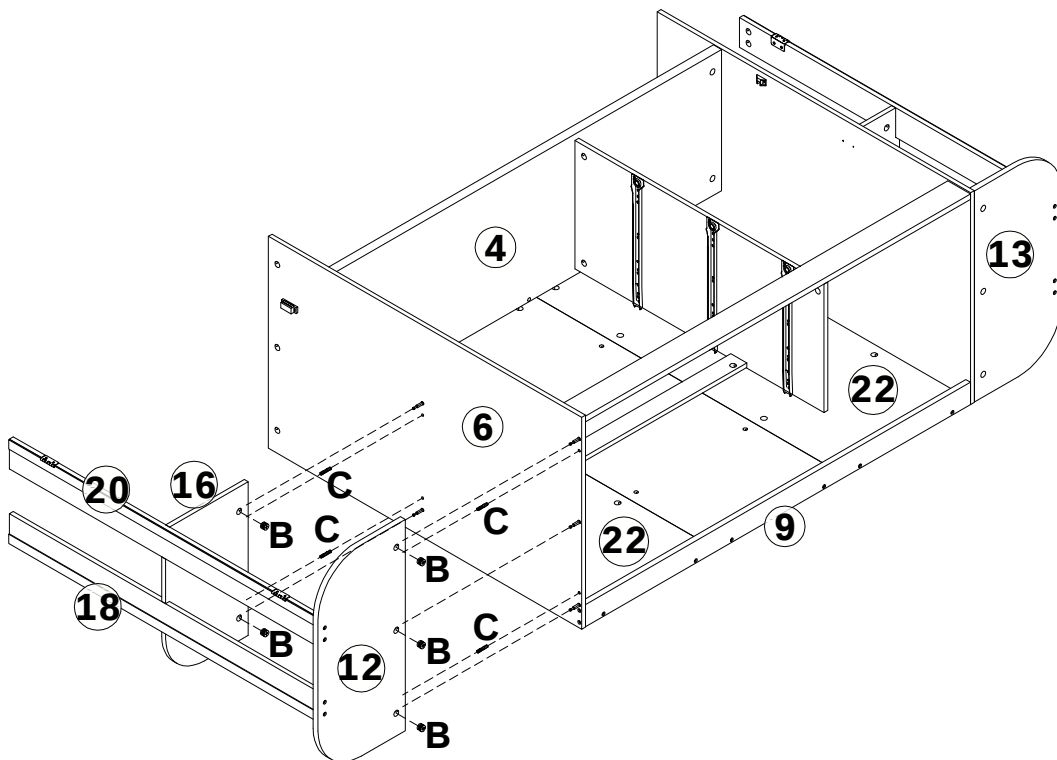


B x5




C x4



21

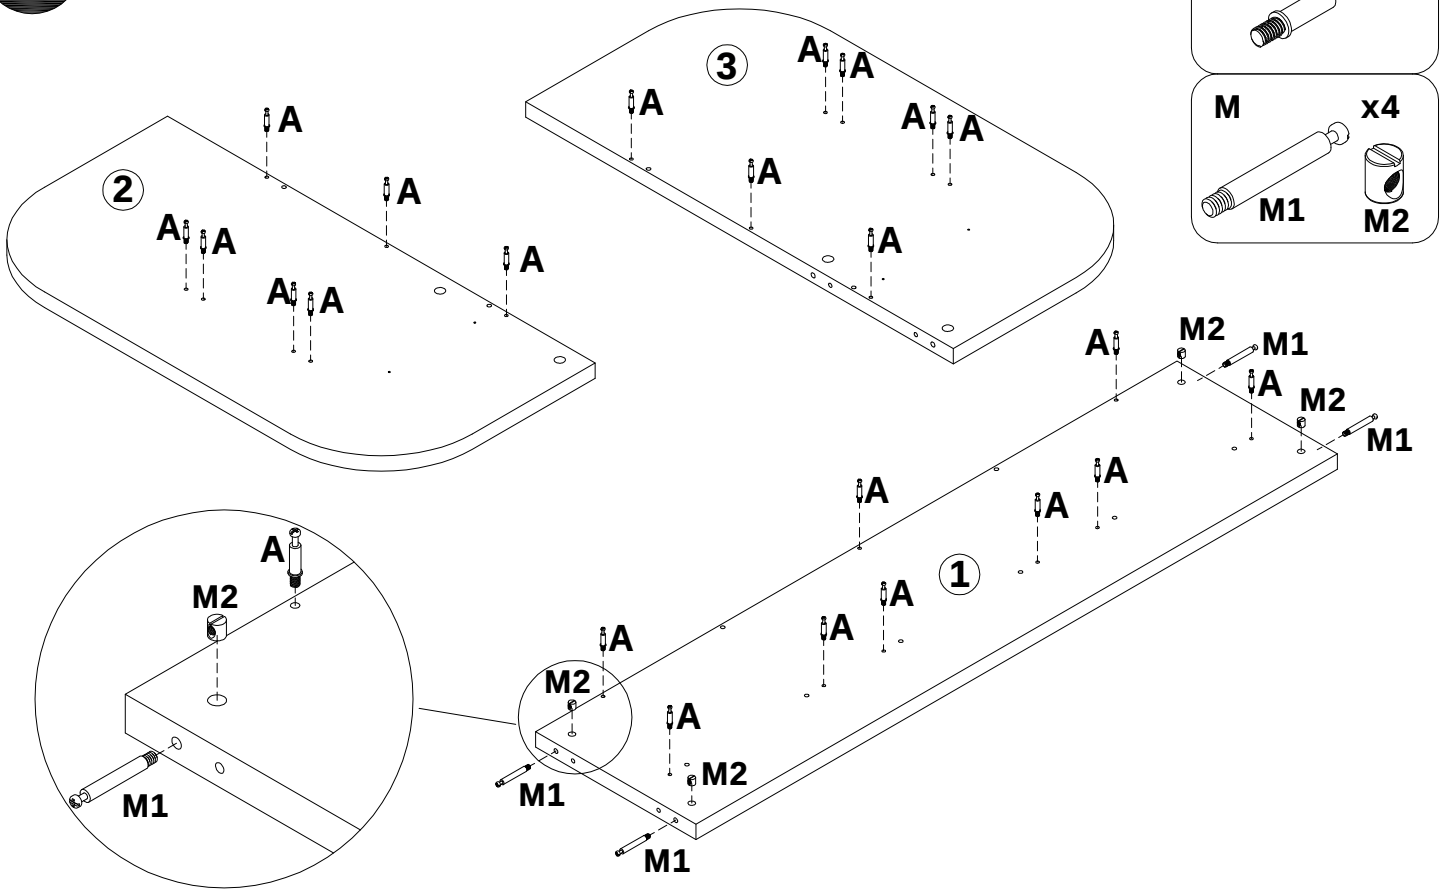

22


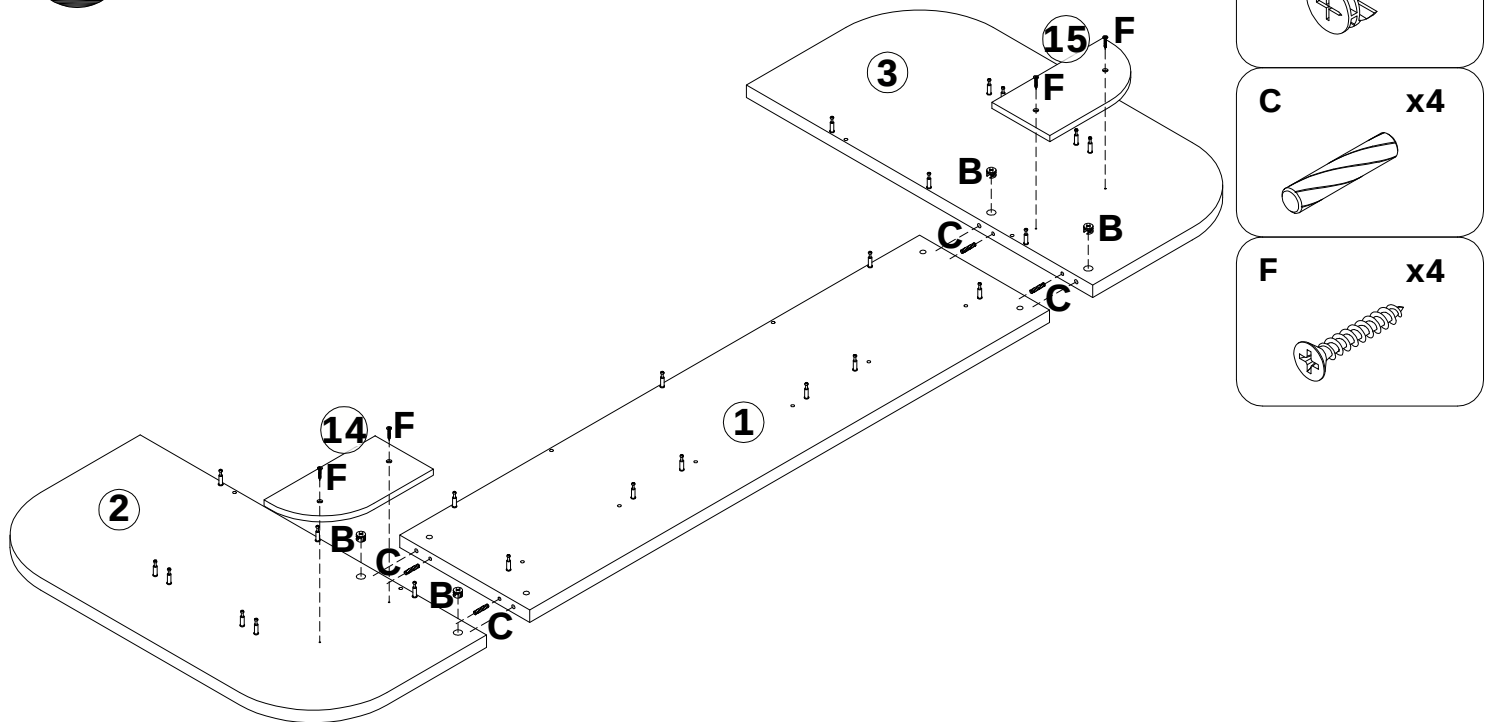


23


B x23




C x12

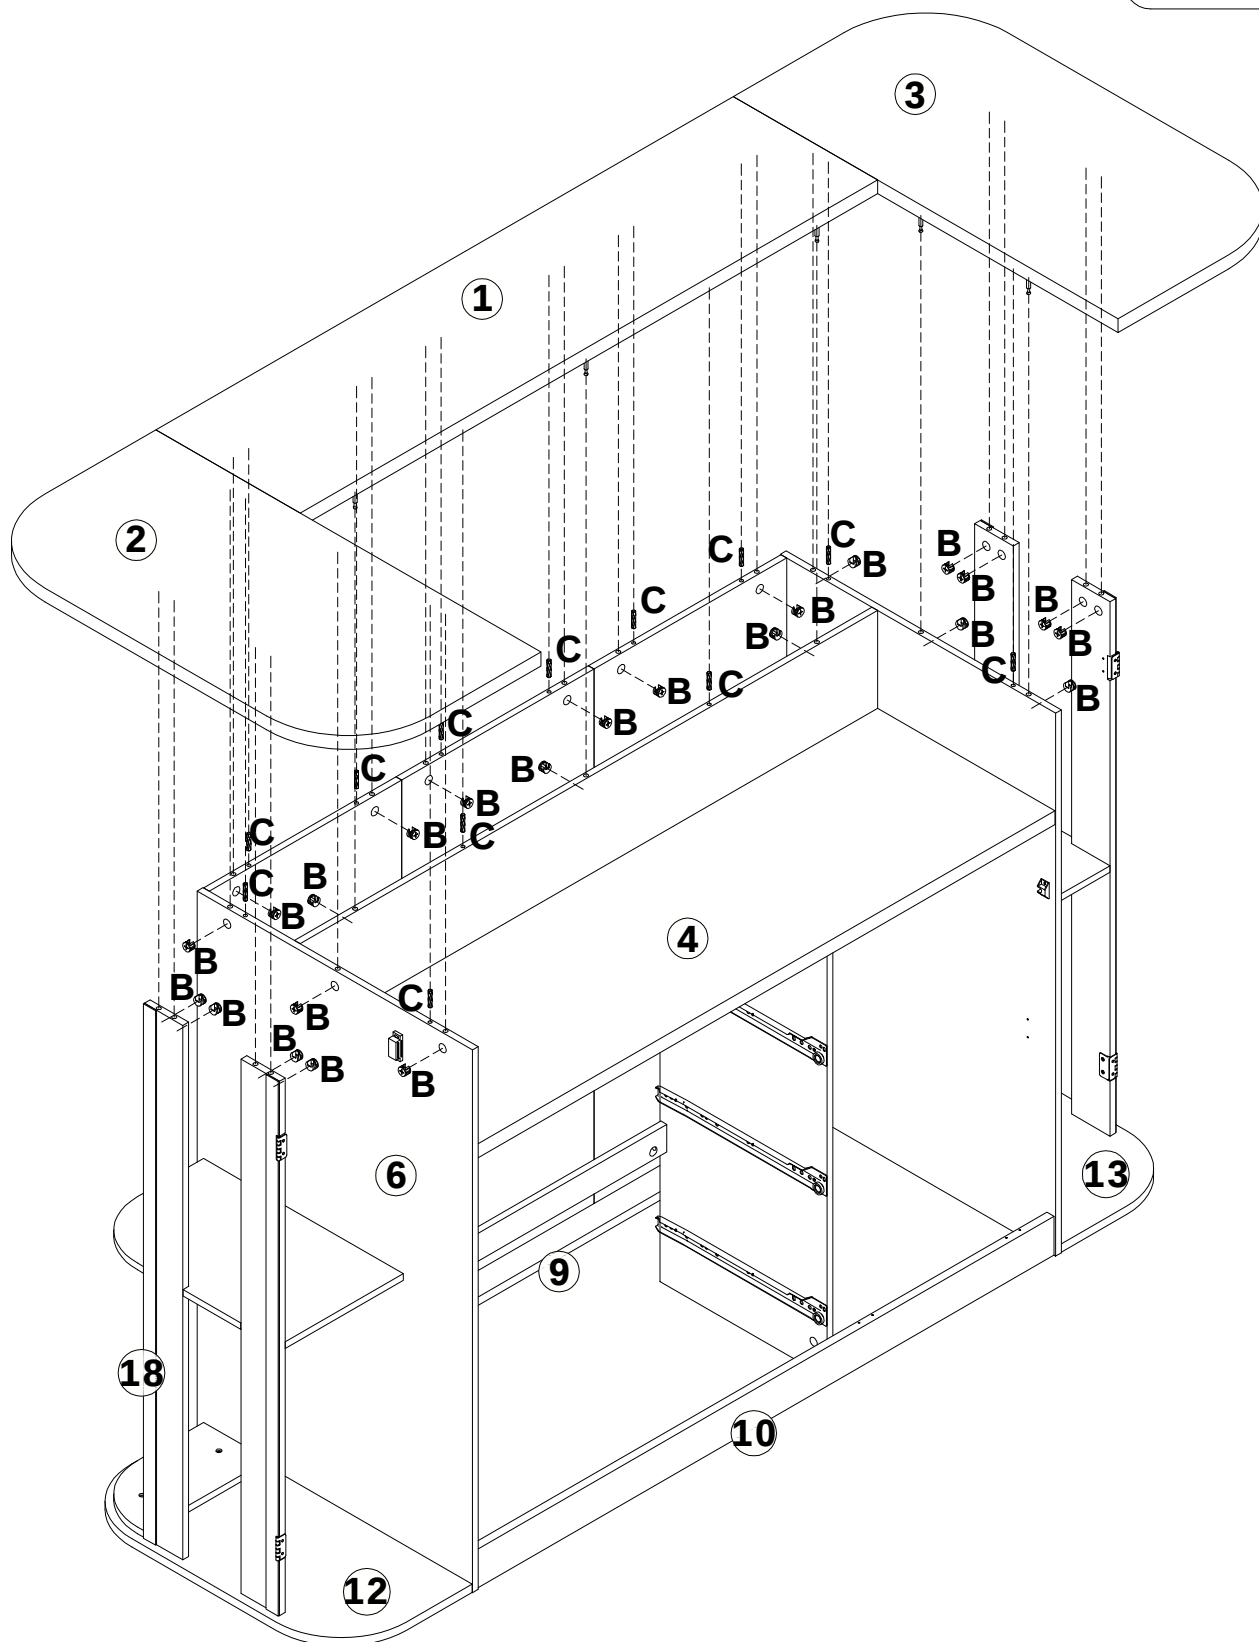


24

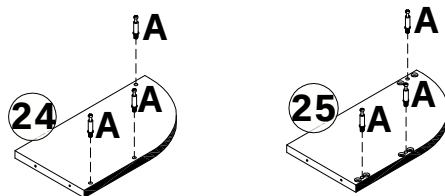

A x6




25

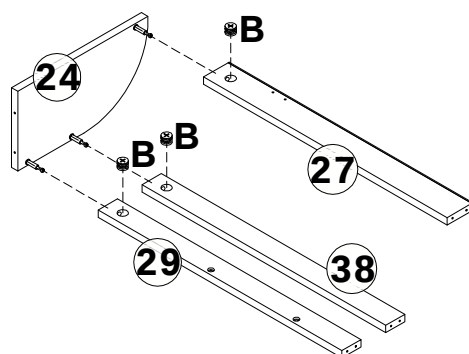


B x3




26

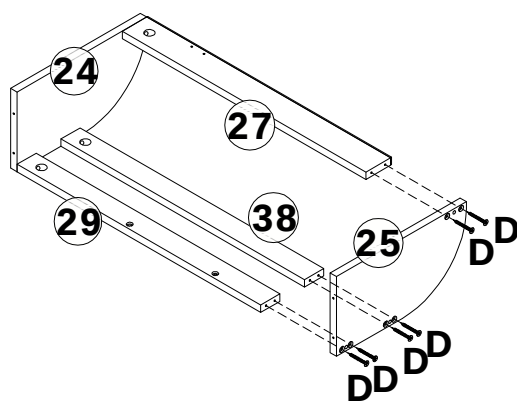

D x6




27

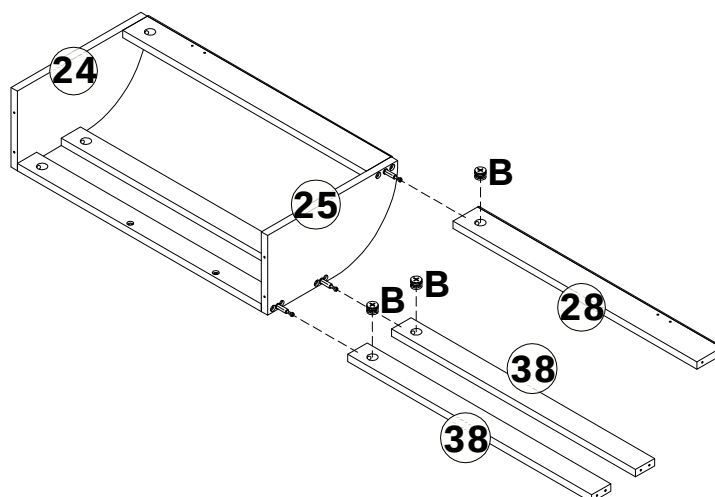


B x3




28

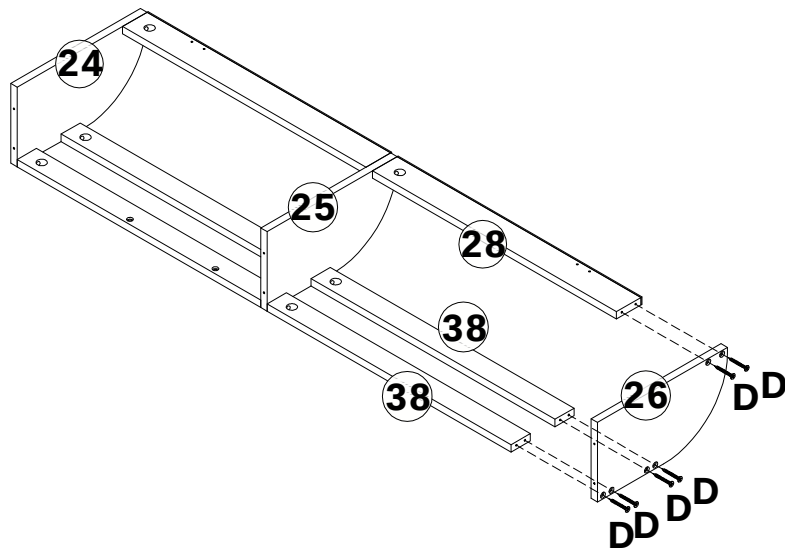


D x6




29

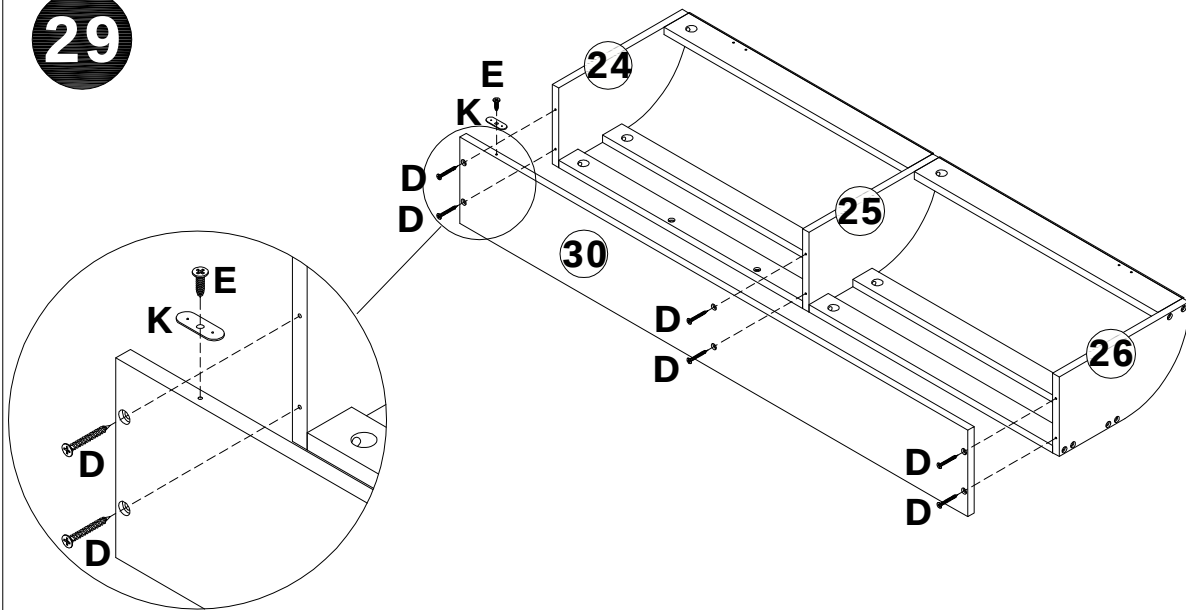


D x6




E x1




K x1




30

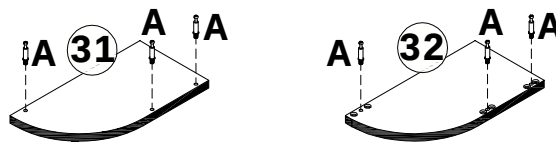


A x6





31

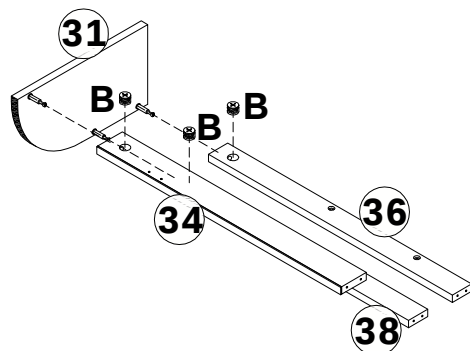



B x3





32

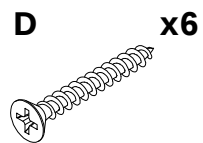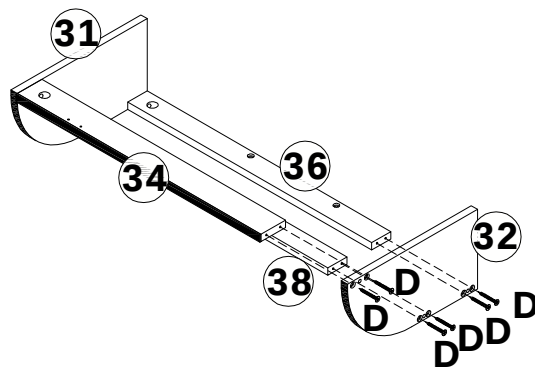





33

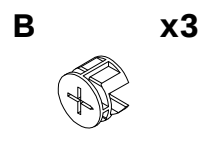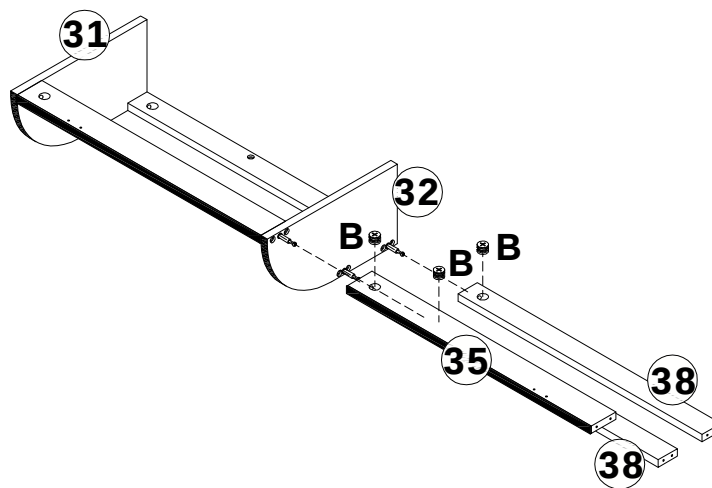


34

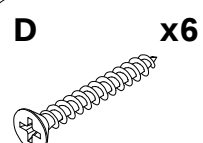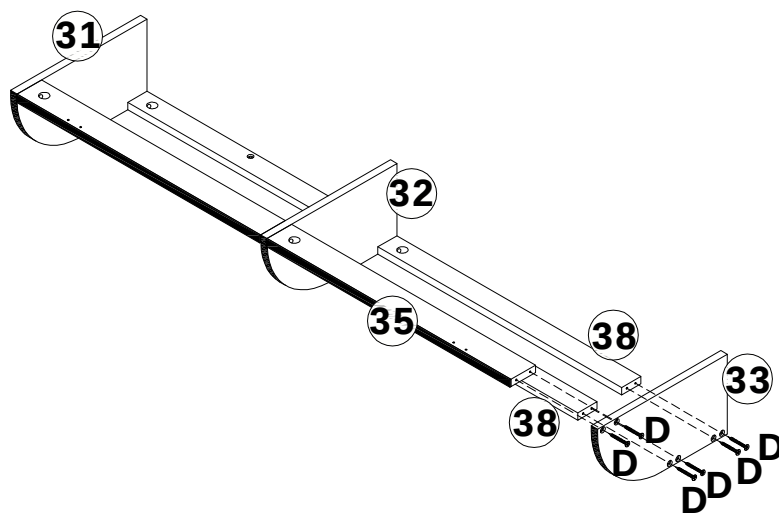

35

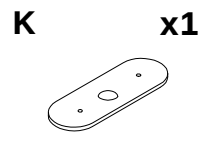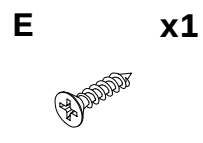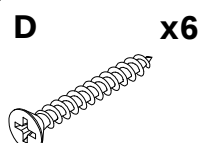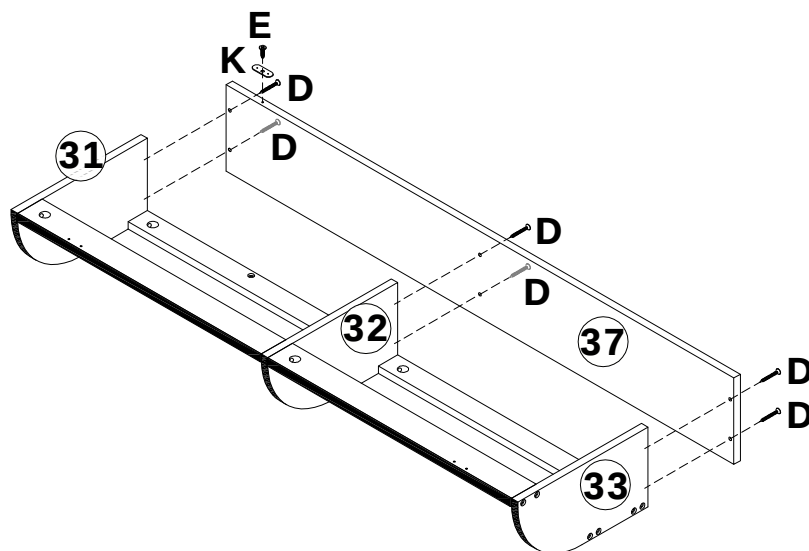


36

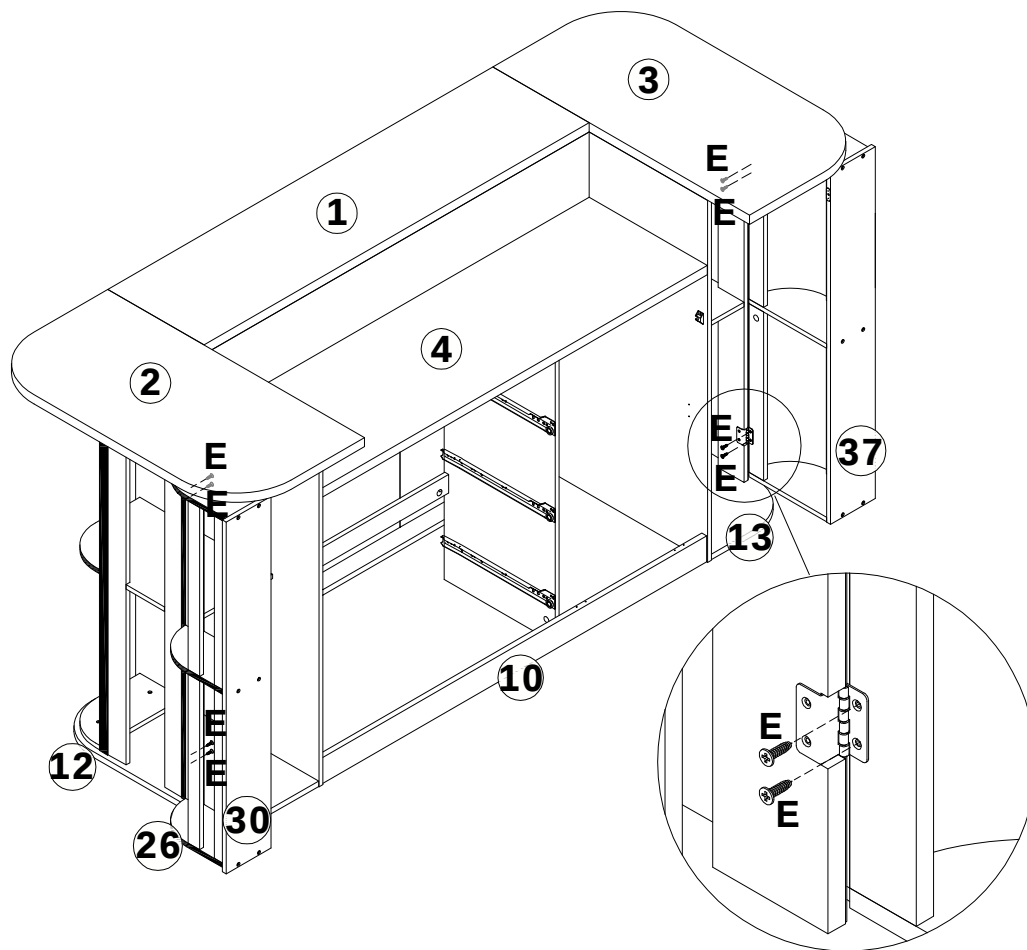


E x8




37

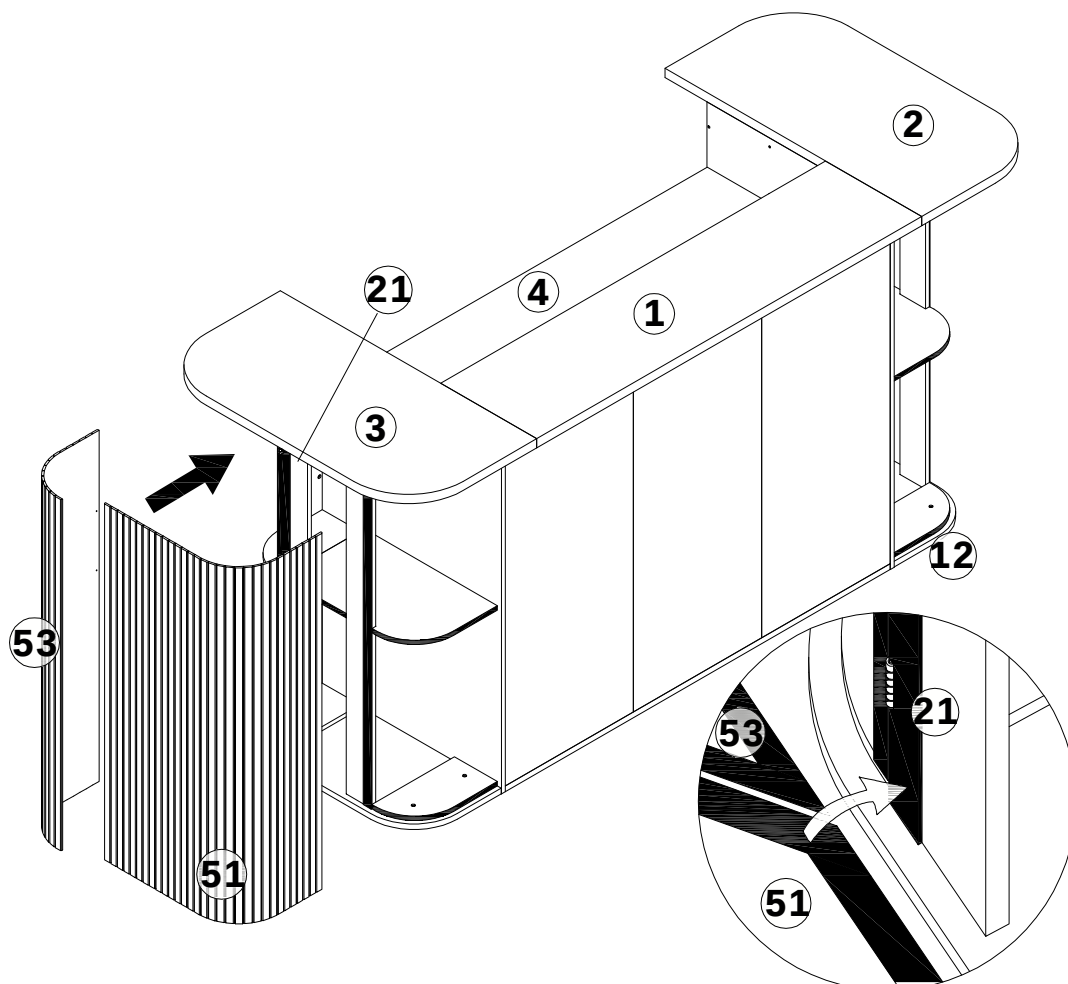


38

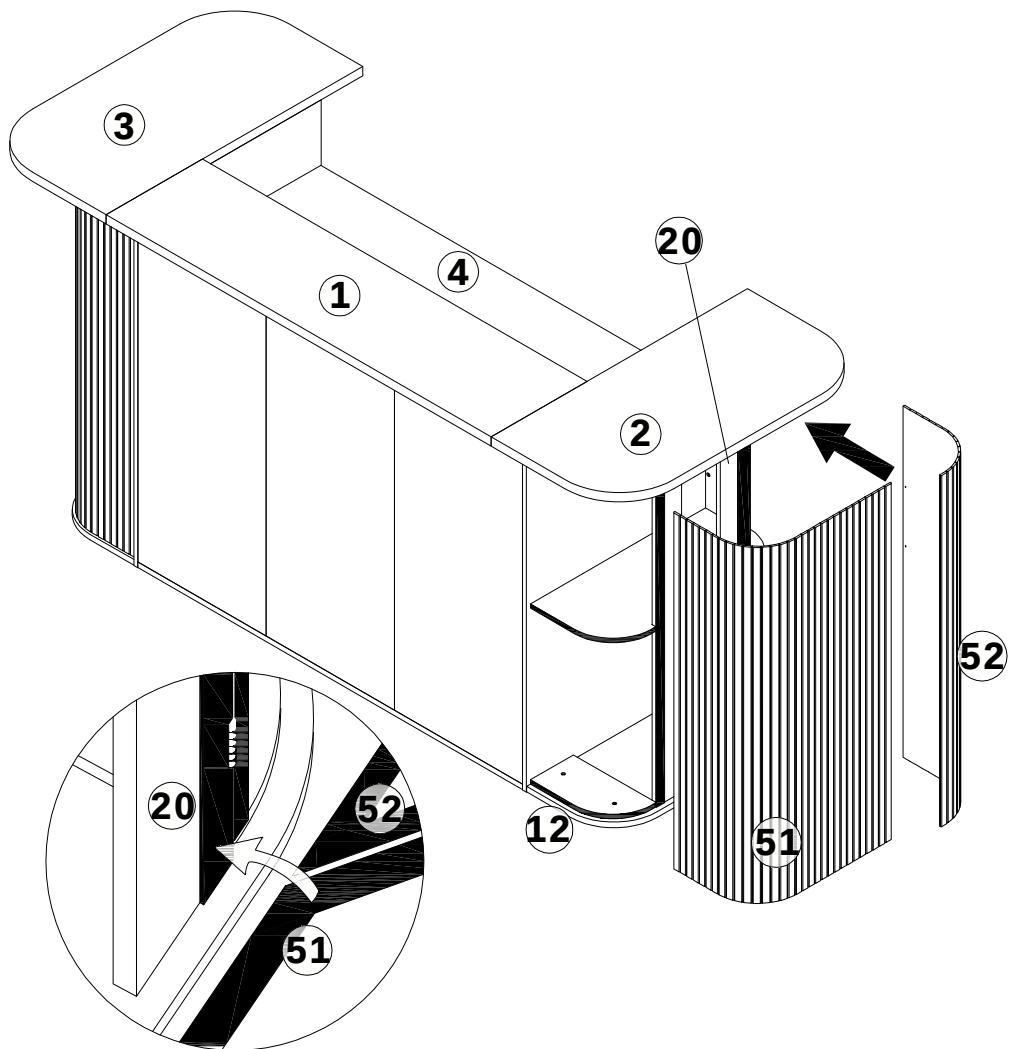

39


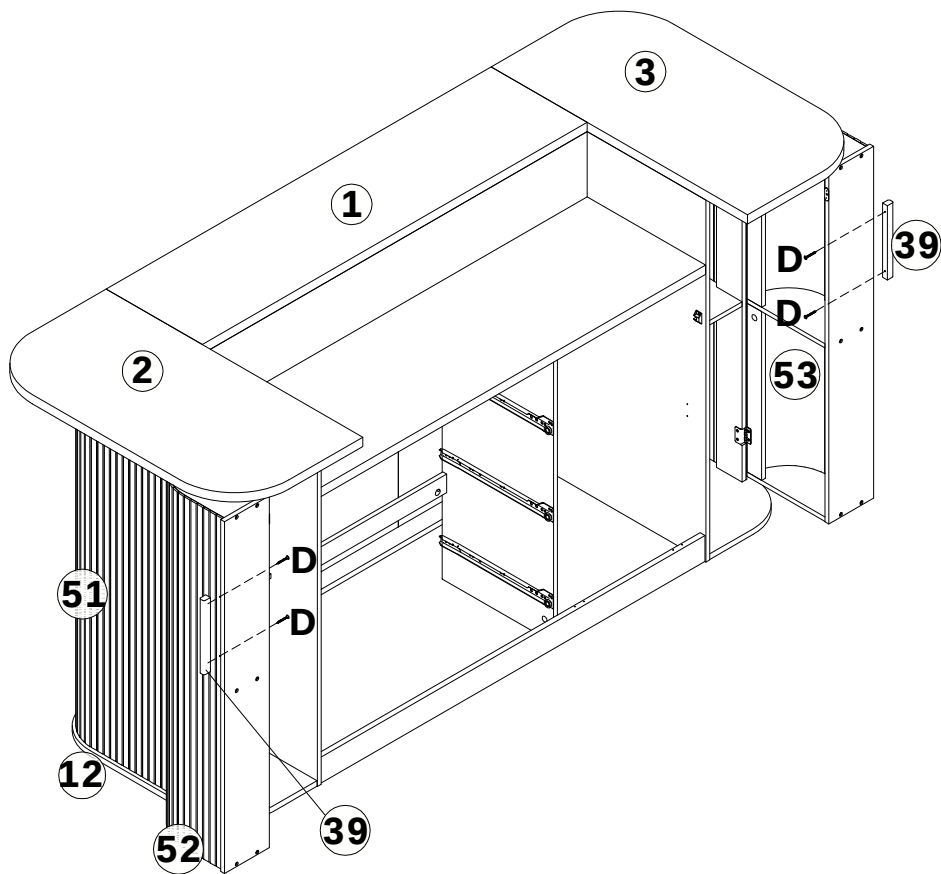


D x4




40

D x15

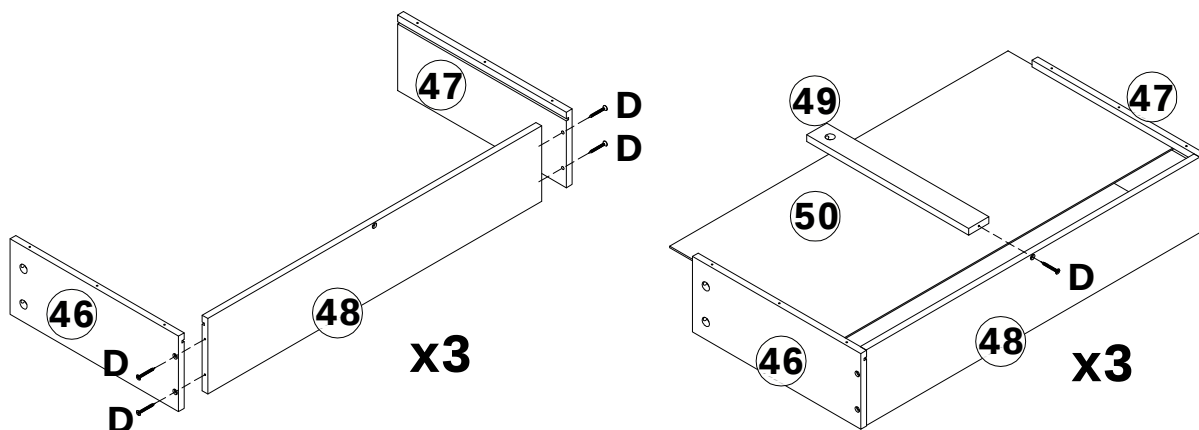


41


A x15



B x15

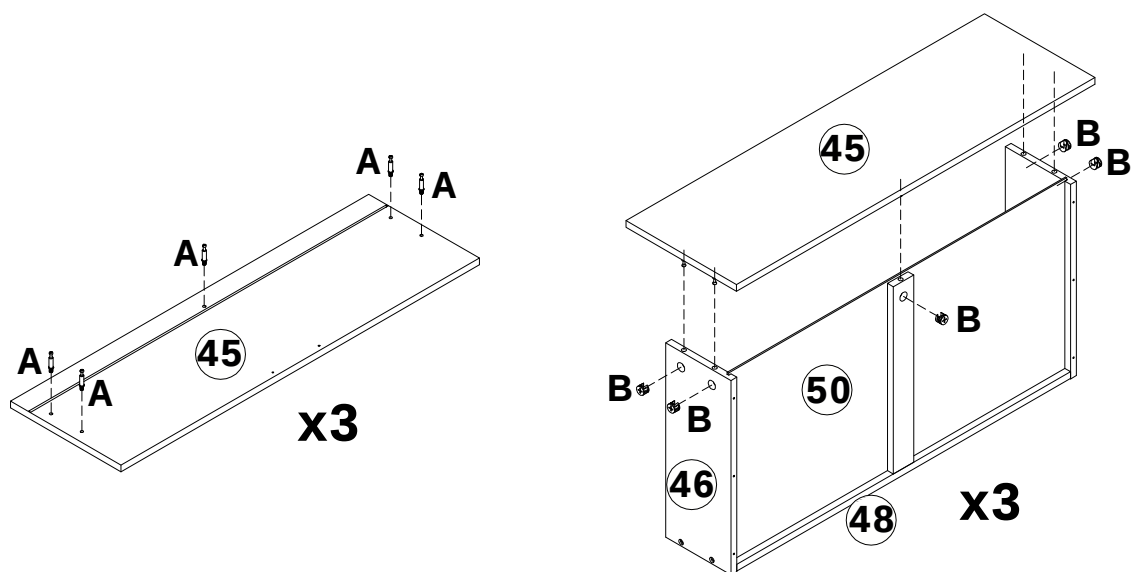


42

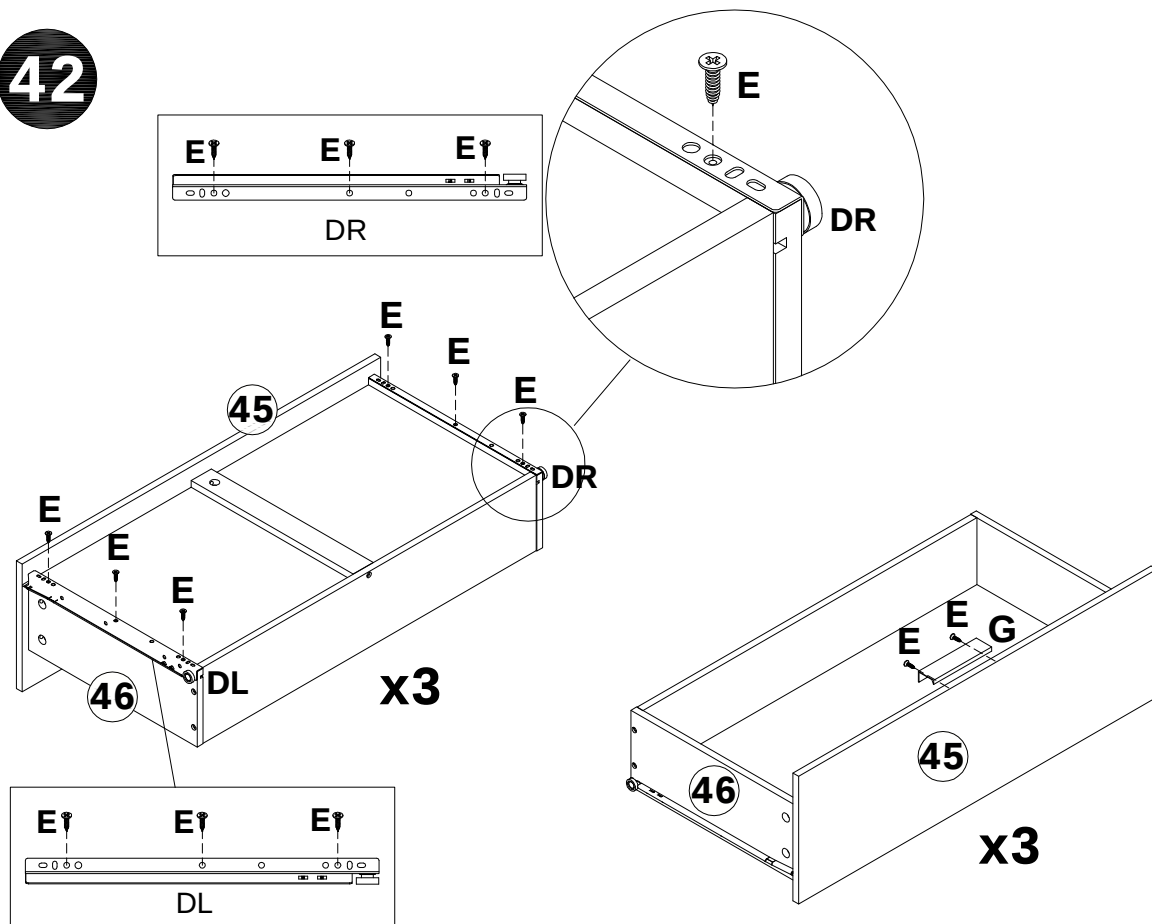


E x24




G x3




DL x3






DR x3




43

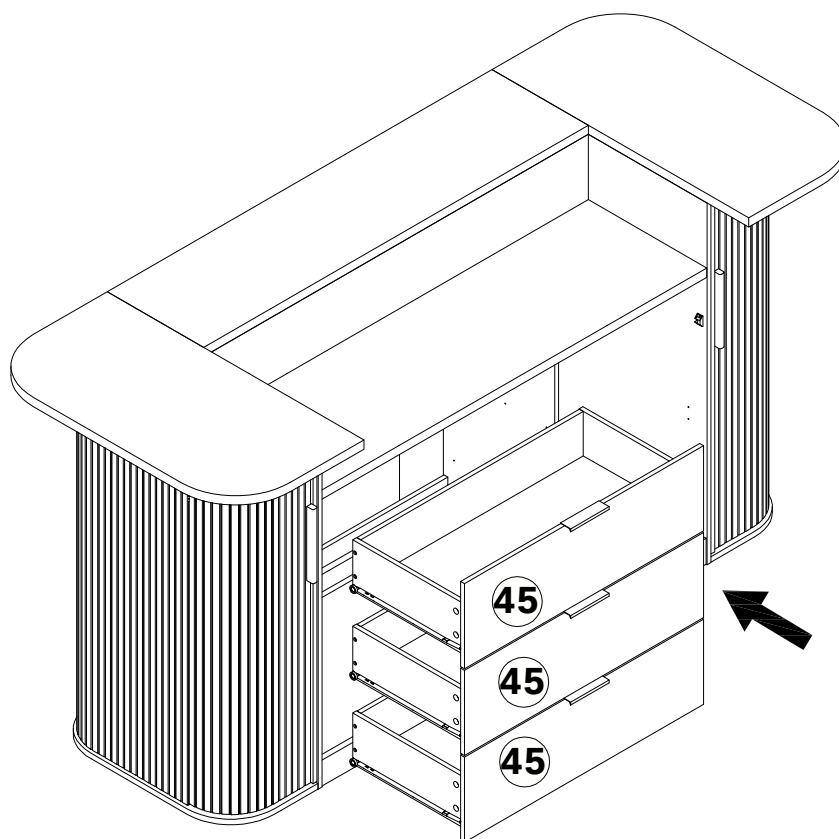

44

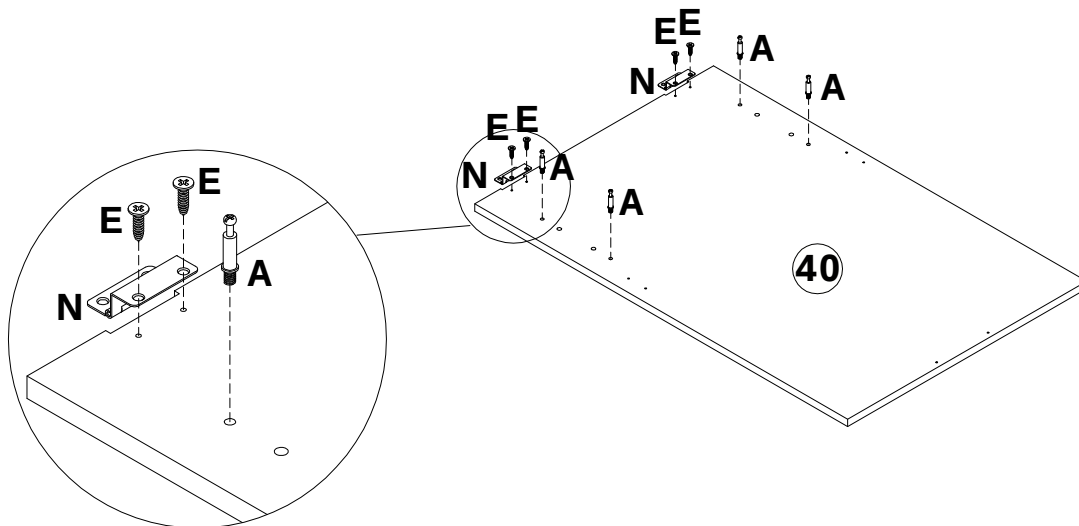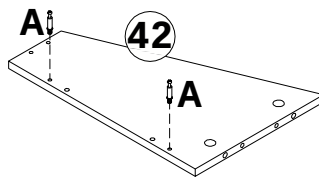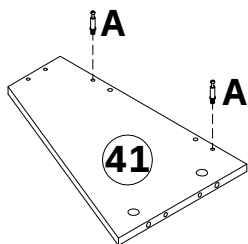


A x8





E x4



N x2

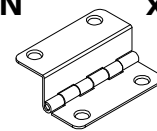


45

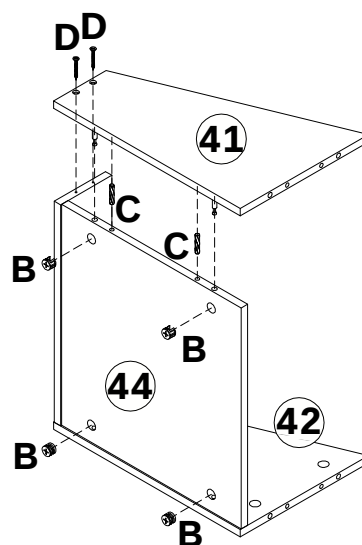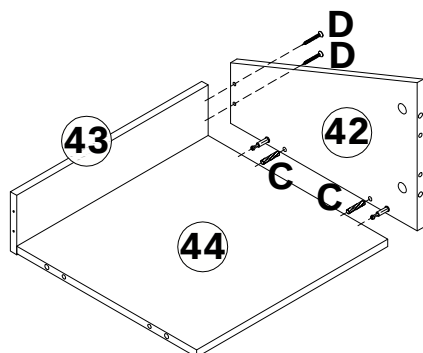


B x4





C x4



D x4




46

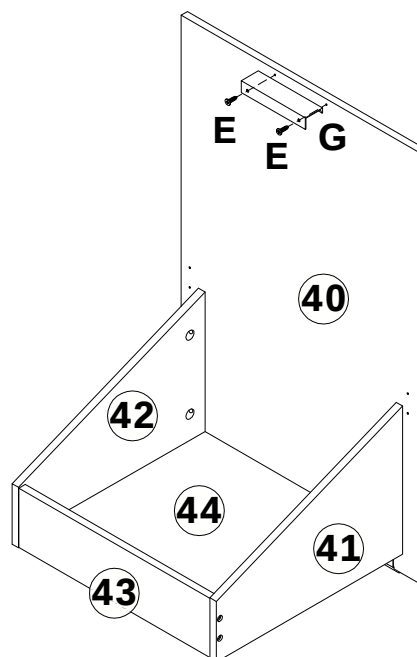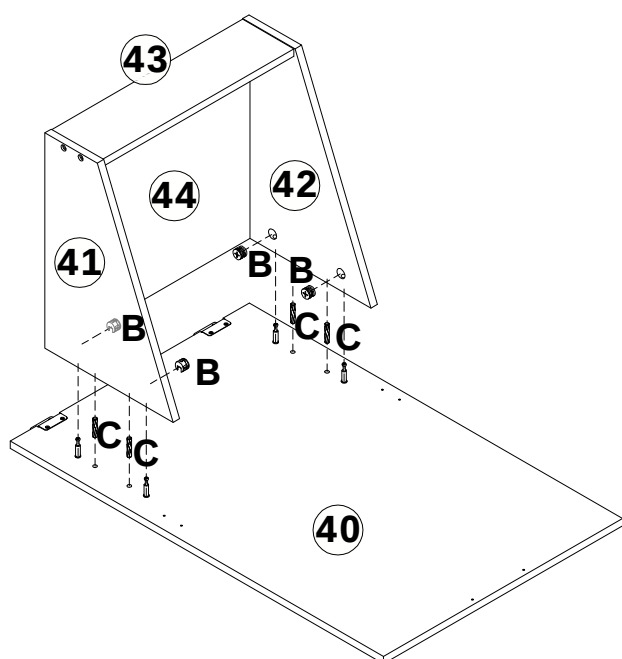

B x8




C x8





E x2



G x1





47

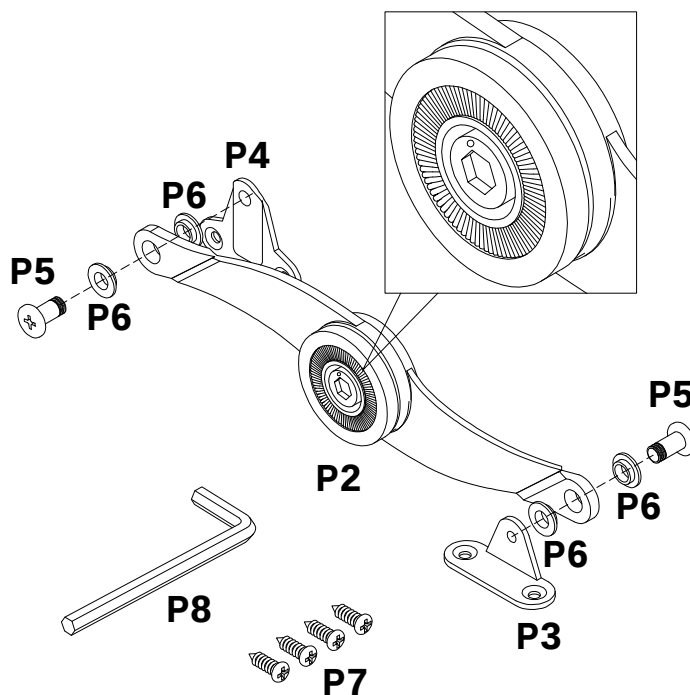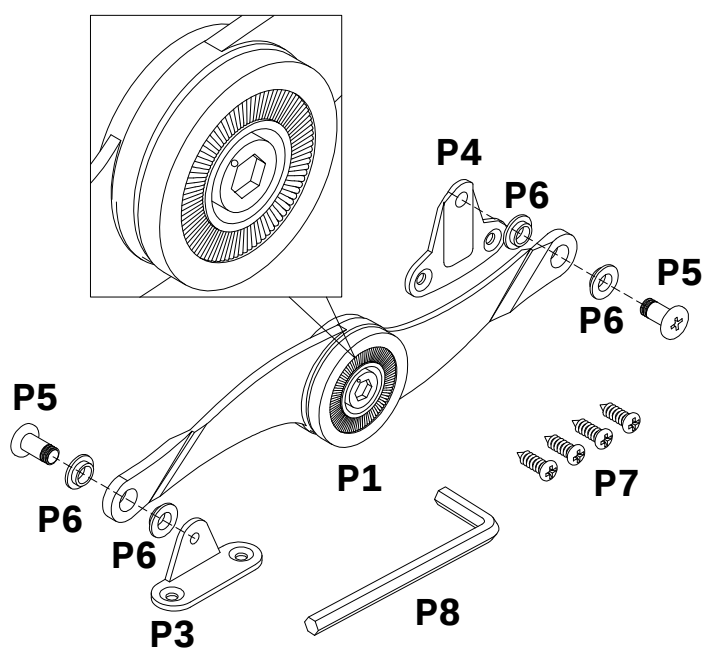

P x2



48

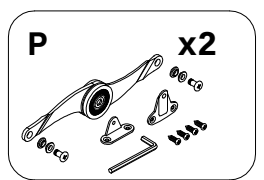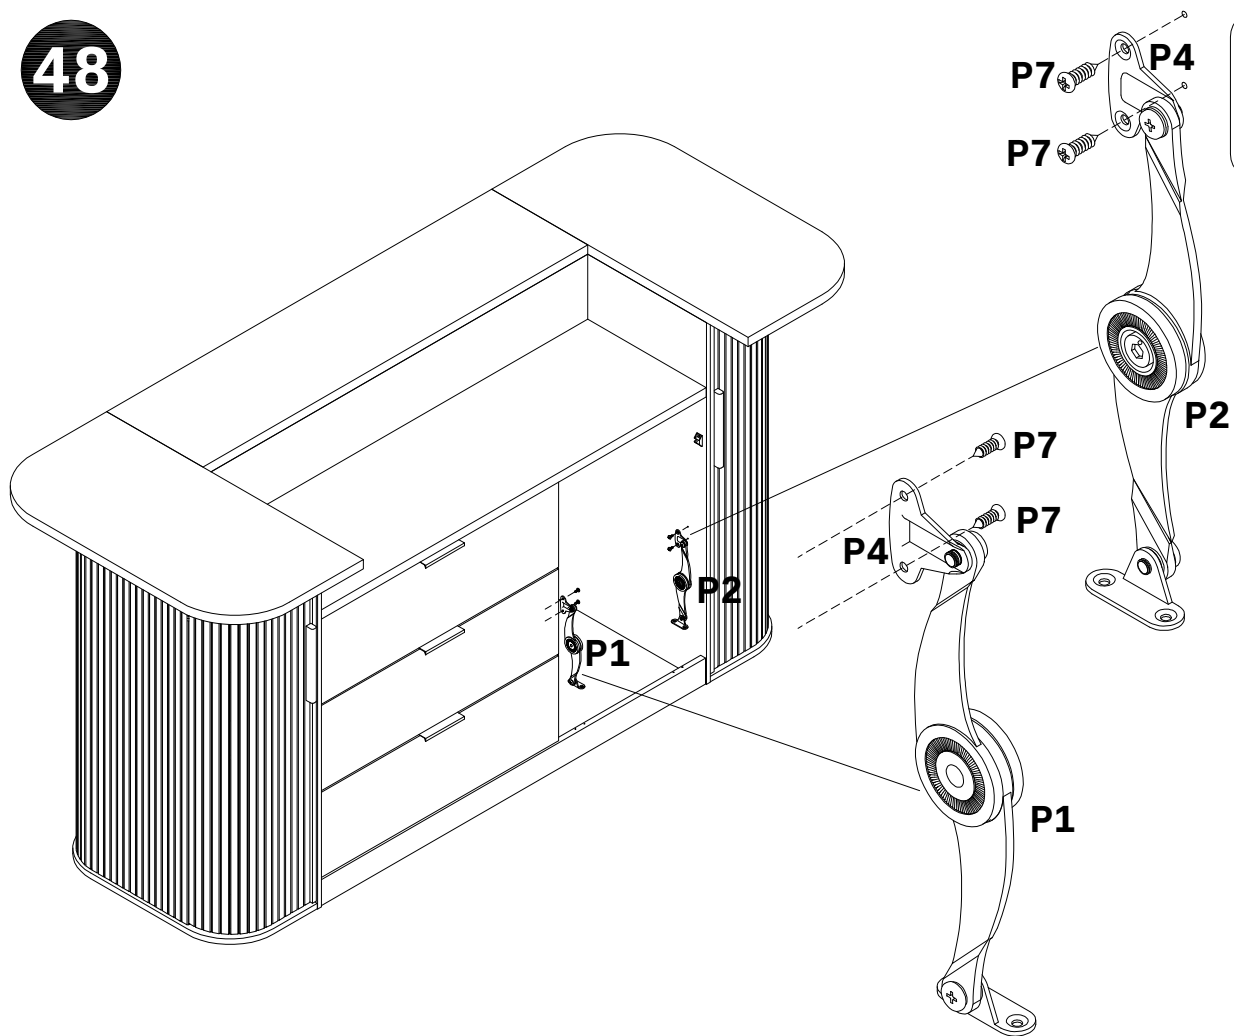

49

