


DRAWERS + MODESTY PANEL - FULL

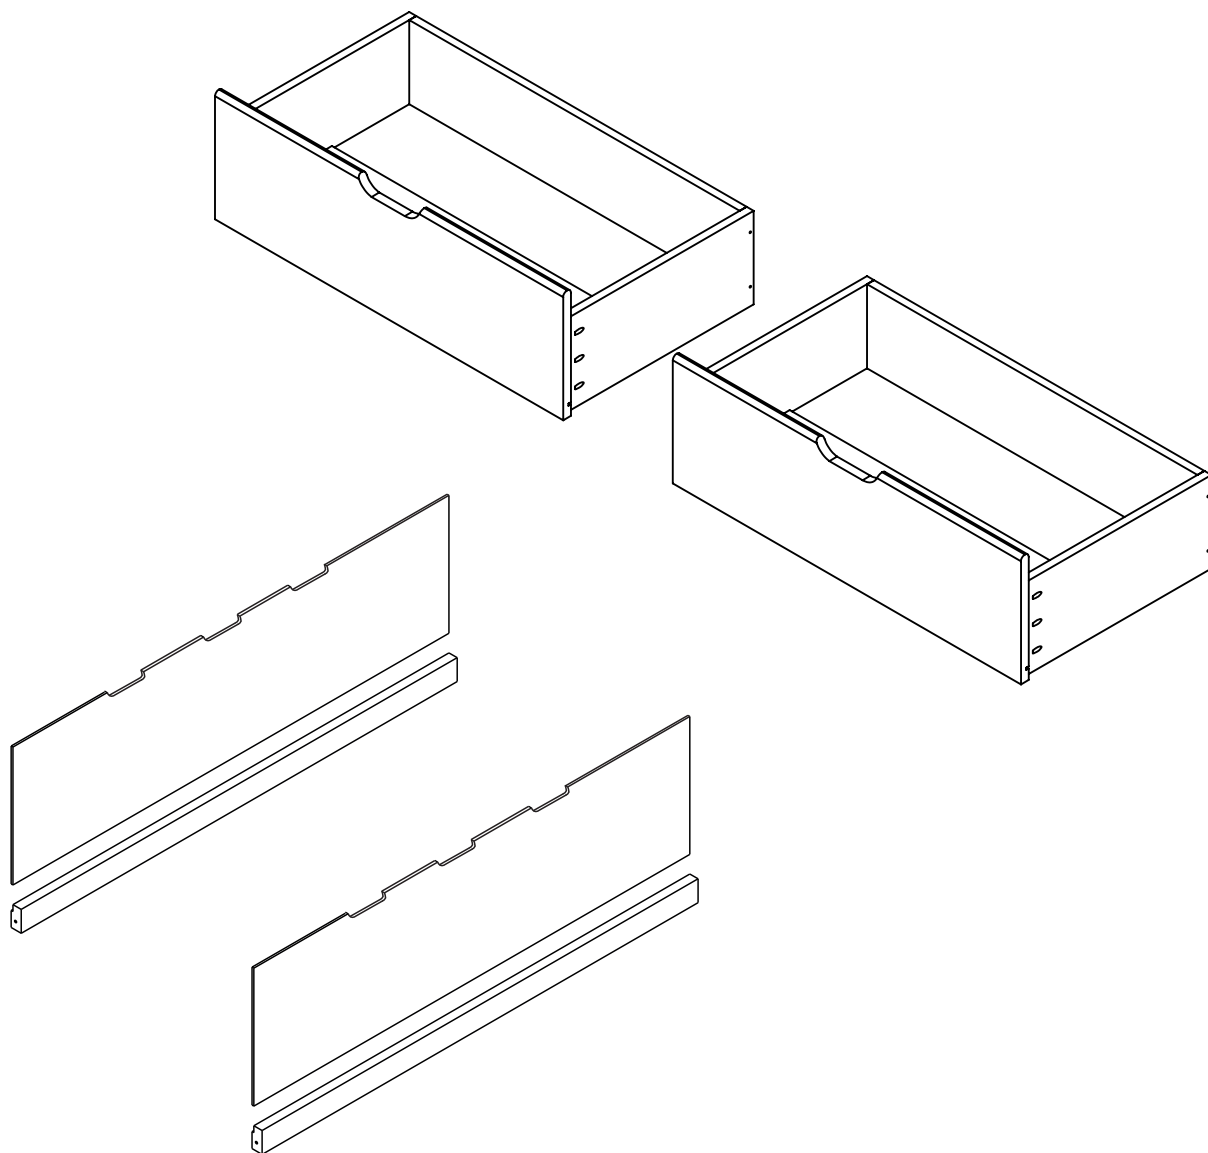



ATTENTION

- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screw must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.




“Please! Confirm all parts and hardware are included to assemble!”

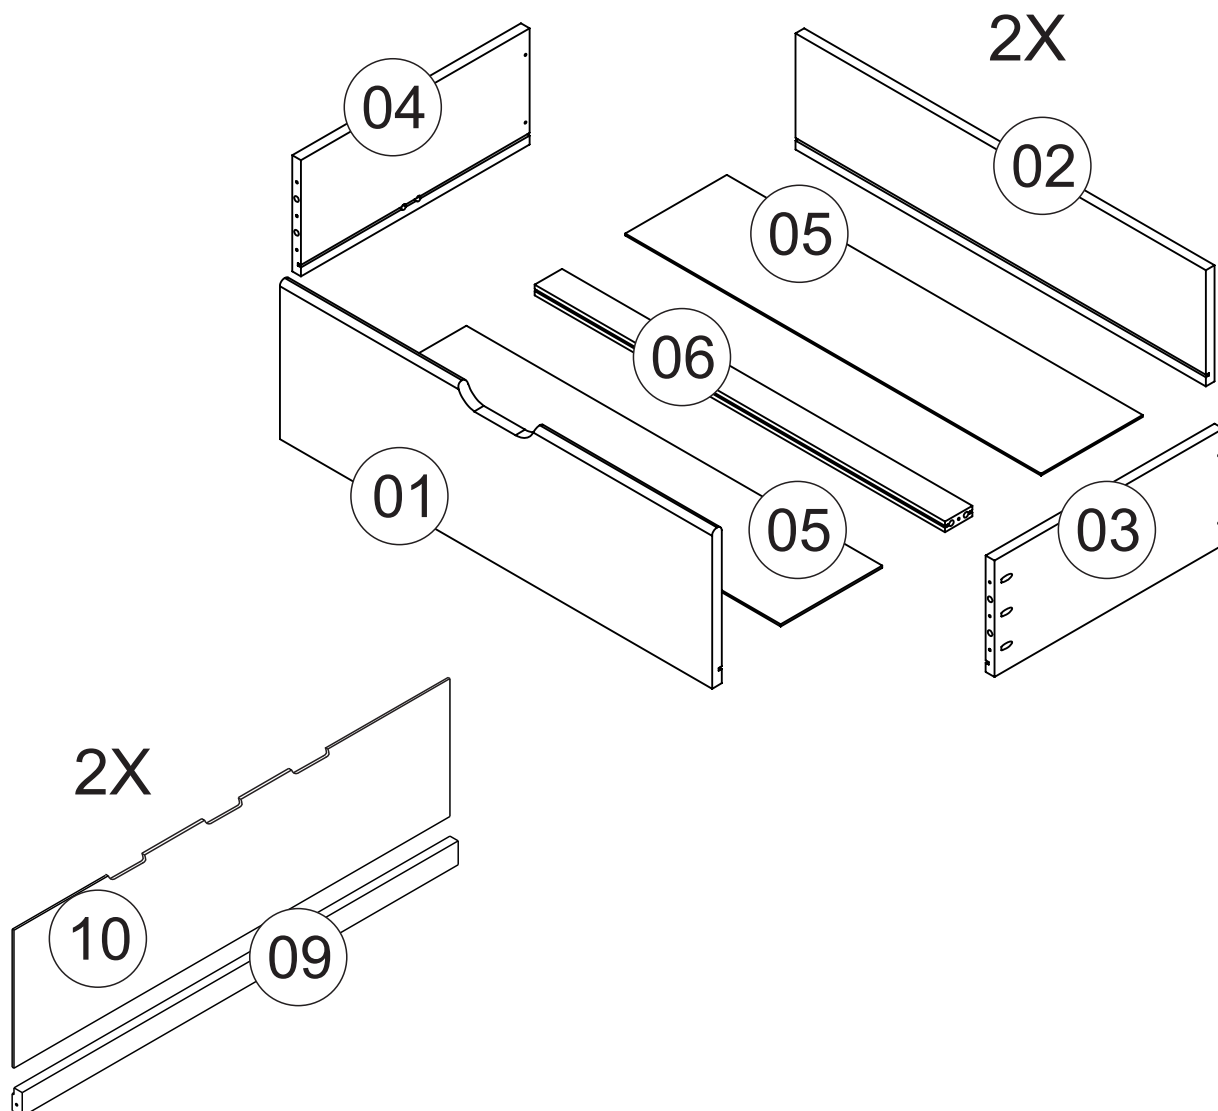

T	 1 5/16"	08x
Z	 Ø1/8" x 5/8"	48x
AP	 Ø1/8" x 1 3/8"	28x
AW	 Ø3/8" x 1 3/8"	16x

ASSEMBLY INSTRUCTIONS

Step 01

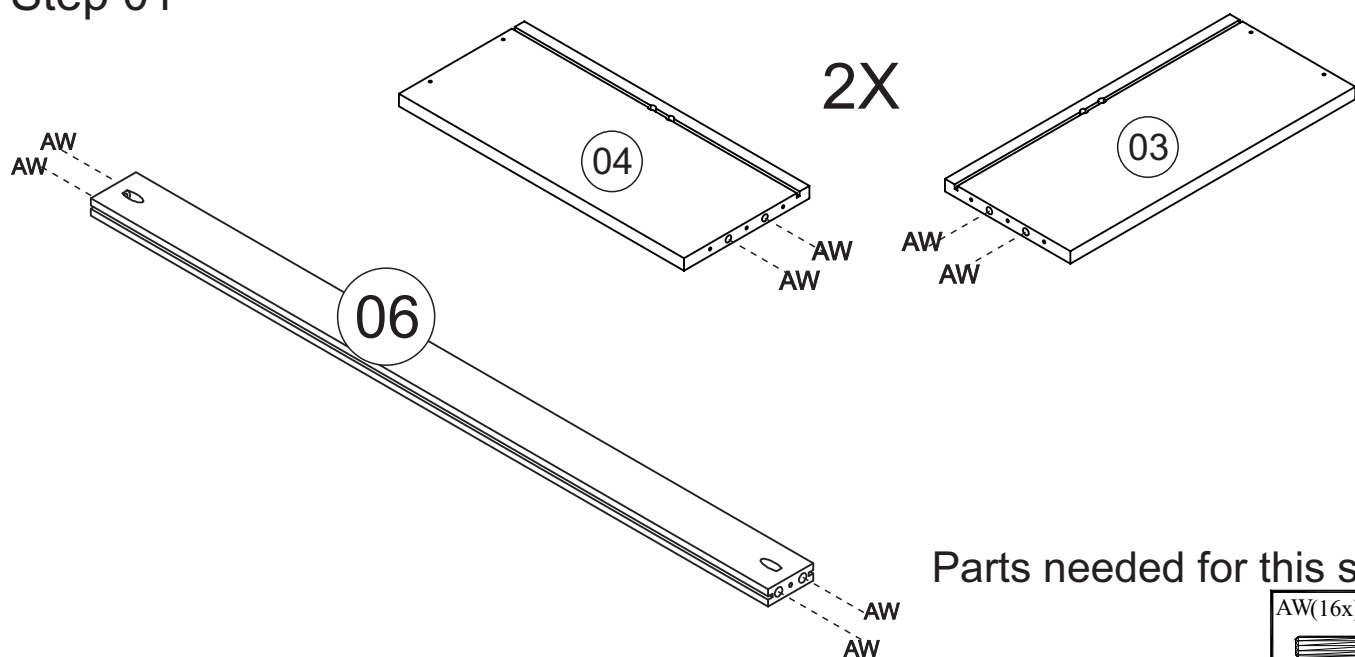


Parts needed for this step:

AW(16x)



Step 02

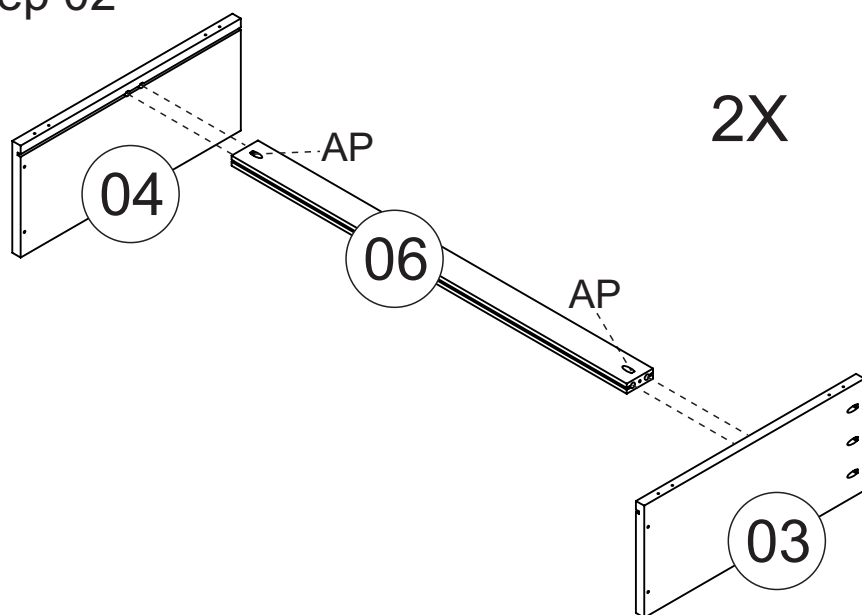


Parts needed for this step:

AP(04x)



Step 03

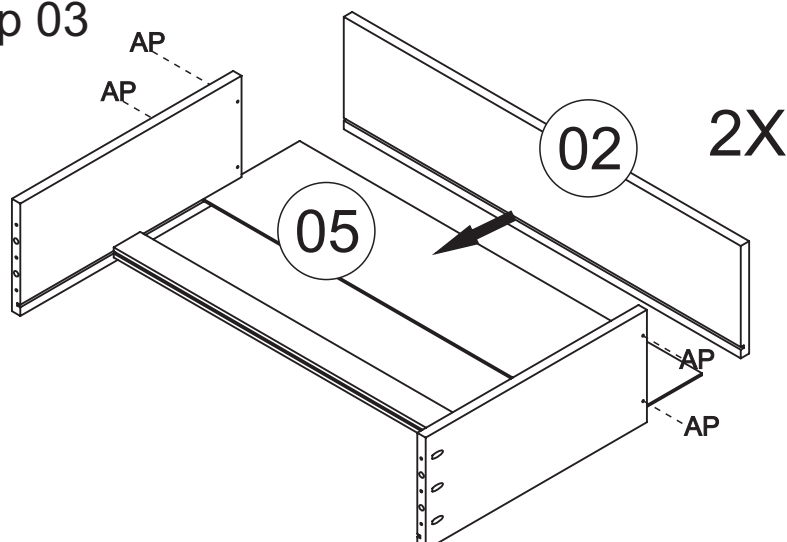


Parts needed for this step:

AP(08x)



Step 04

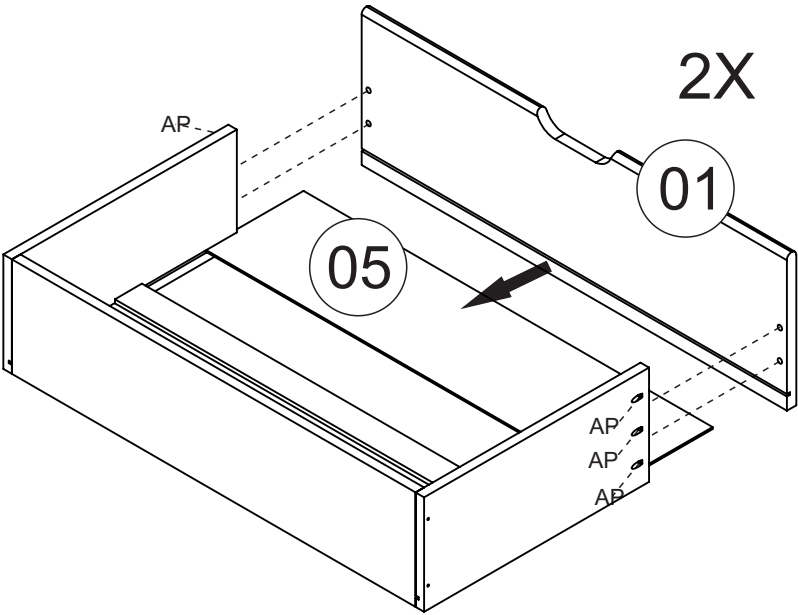


Parts needed for this step:

AP(12x)

Step 05

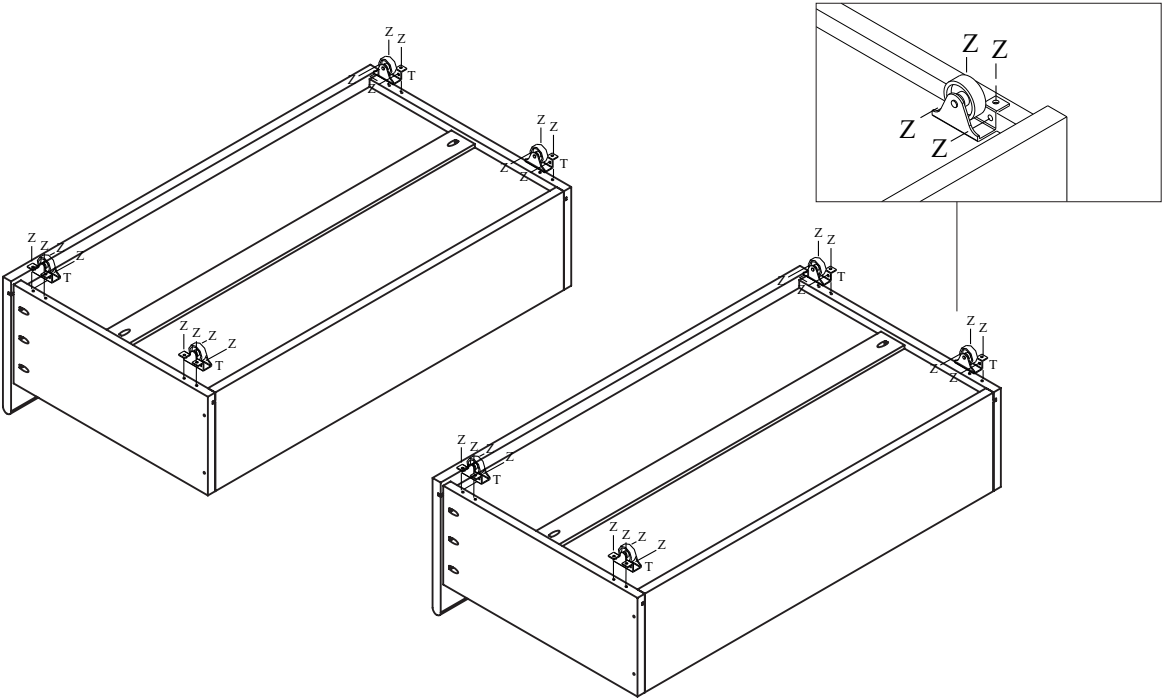

Parts needed for this step:


Z (32x)

T (8x)



Step 06

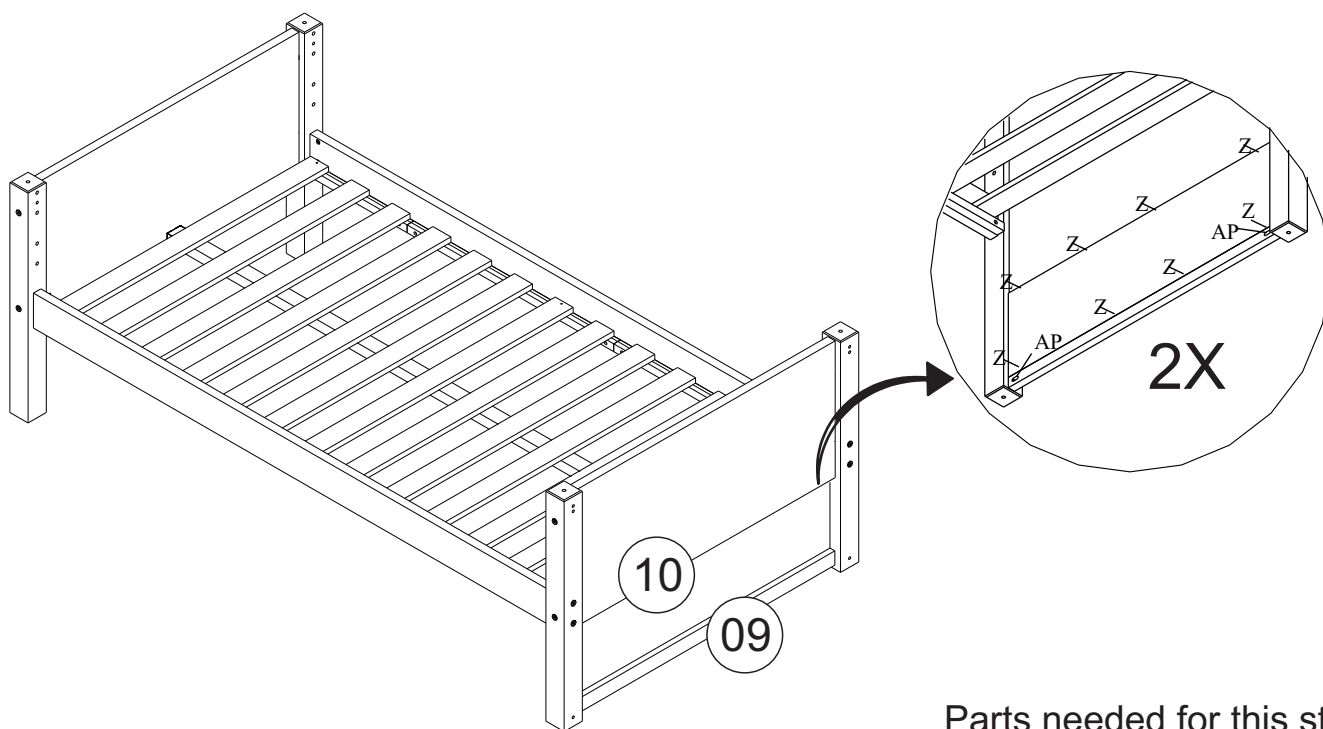

Parts needed for this step:

AP (4x)	Z (16x)
	

Step 07

