


Store
Your
Patio Well

ASSEMBLY INSTRUCTIONS

10X10FT RESIN GARDEN SHED

SKU: T-PS24-0781A-10

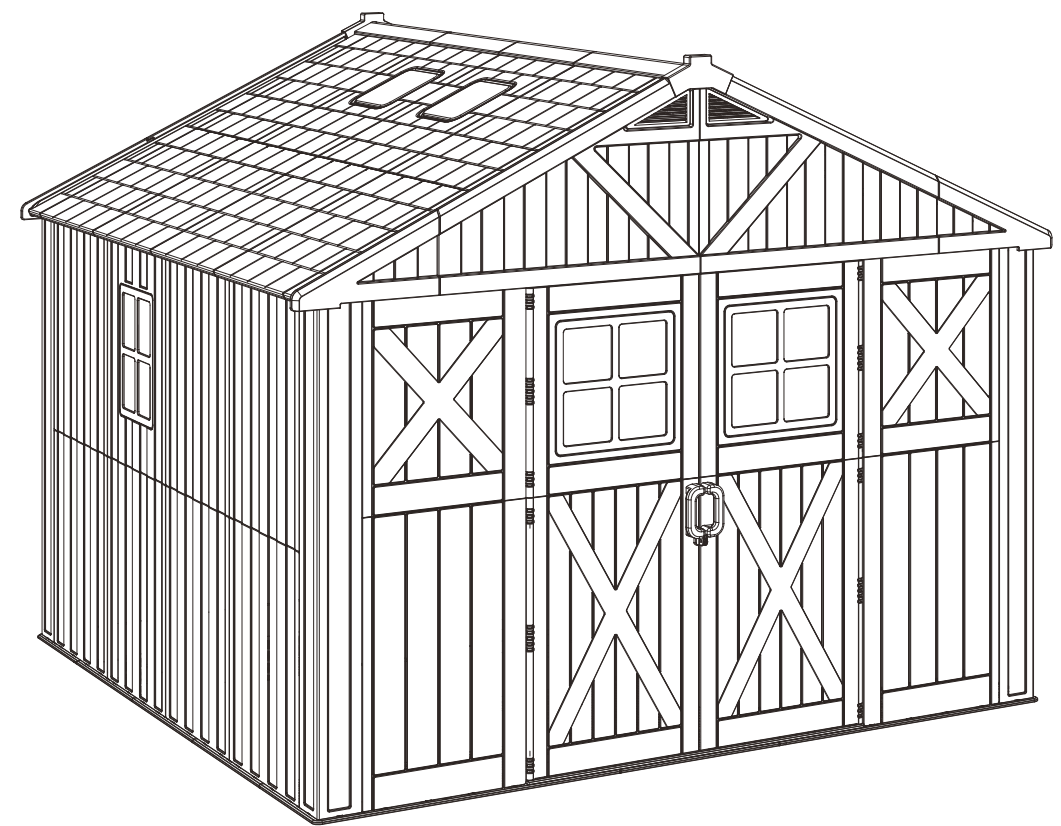

E-mail:
saleservice@madepot.com





Please read the instruction manual strictly,
Please assemble the resin garden shed in
the following steps.

SITE PREPARATION

Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

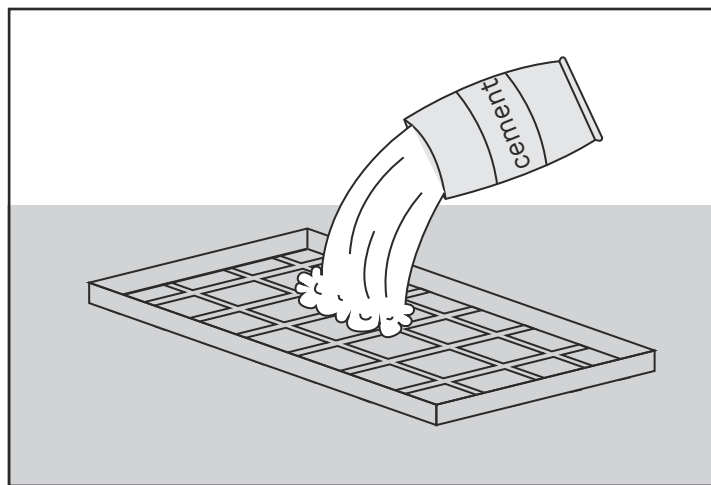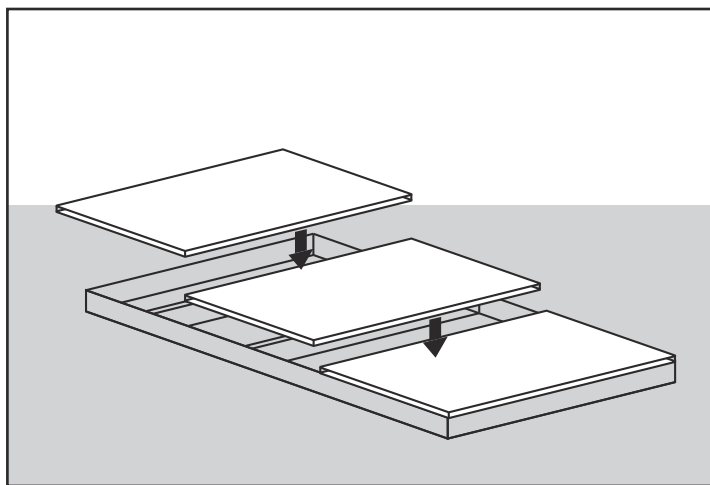

Before installation, please measure the ground with a tool and make sure the ground is level before installation.

BEFORE STARTING ASSEMBLY


Remove all of the pieces from the 9 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

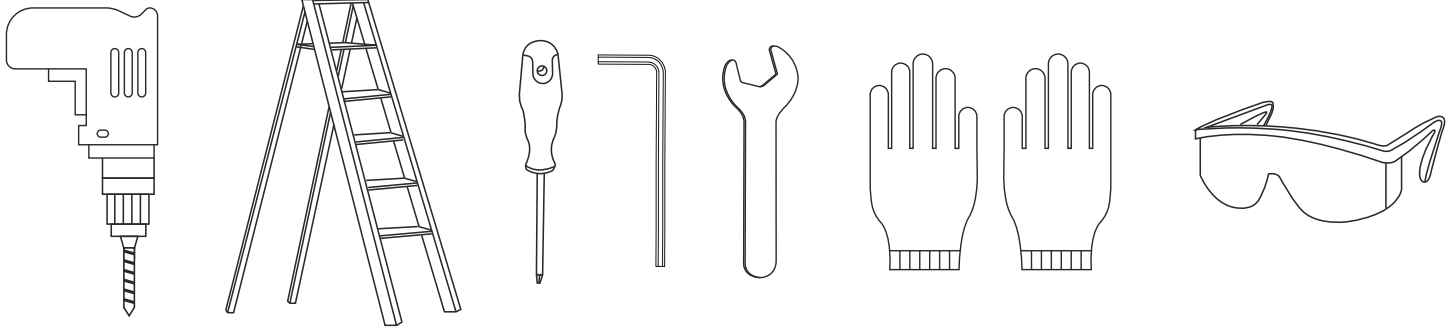

CAUTION







Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.







Requires two people and takes 2-3 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

**DO NOT RETURN YOUR UNIT
TO THE STORE**
Contact us first
saleservice@madepot.com






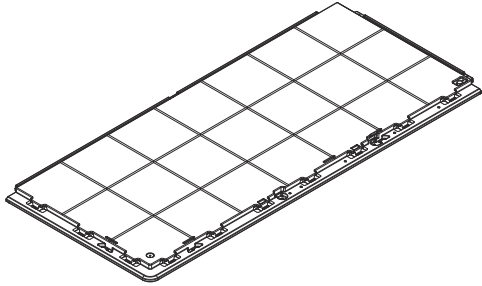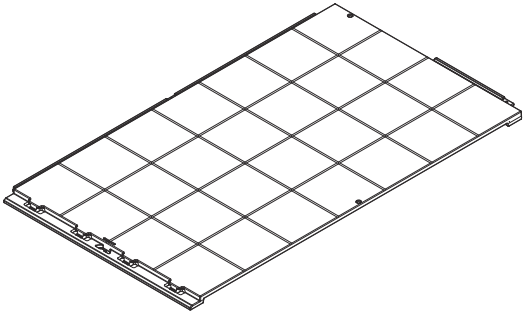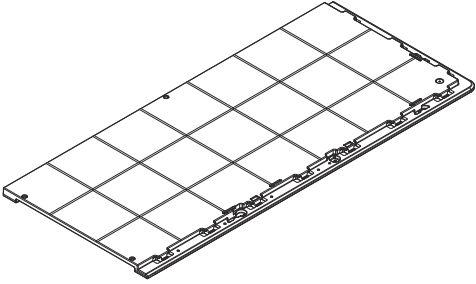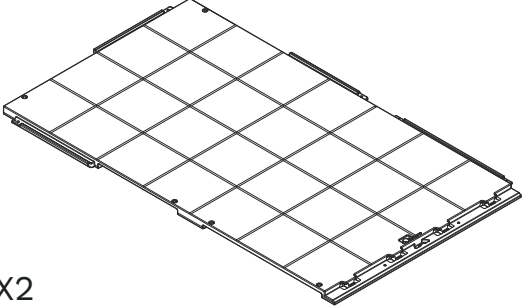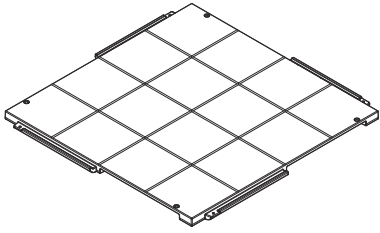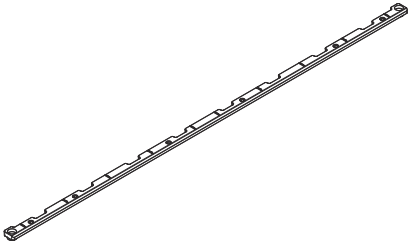


FLOOR PARTS

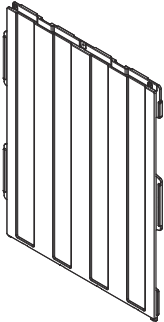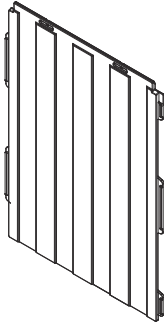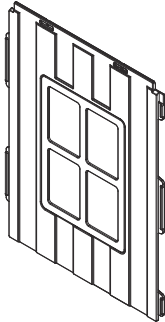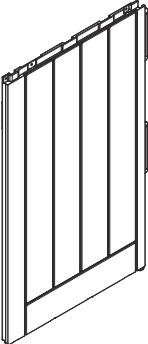 <p>A1 X2</p>	 <p>A2 X6</p>
 <p>A3 X2</p>	 <p>10-A6 X2</p>
 <p>10-A7 X1</p>	 <p>A4 X1</p>





WALL PARTS

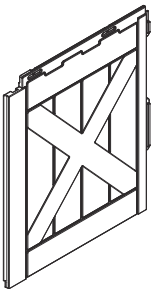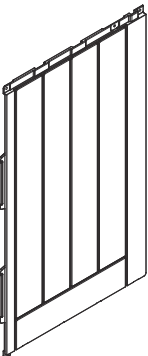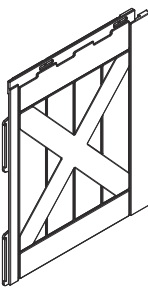 <p>10-B1 X12</p>	 <p>10-B2 X10</p>	 <p>10-B3 X2</p>	 <p>10-B5 X1</p>
--	--	--	---











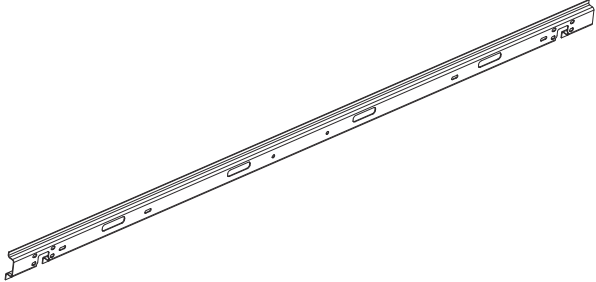
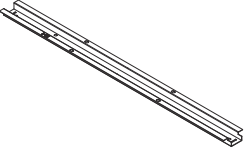
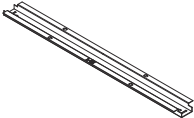
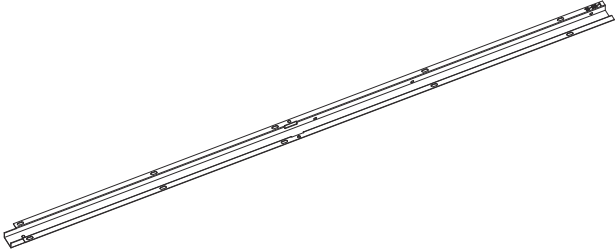
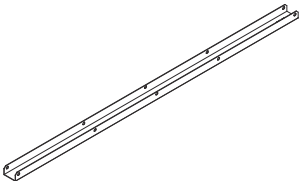
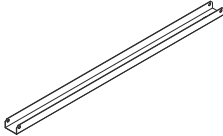
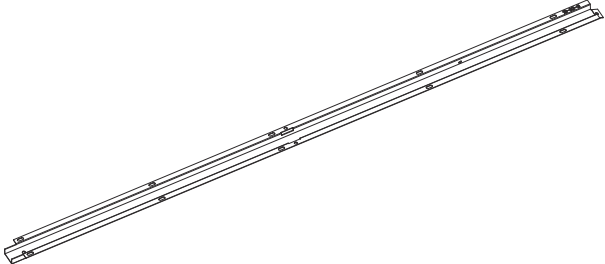
WALL PARTS

			
10-B7 X1	10-B8 X1	10-B9 X1	B4 X2
			
B6 X2	B2-1 X10	B2-2 X2	B2-3 X9

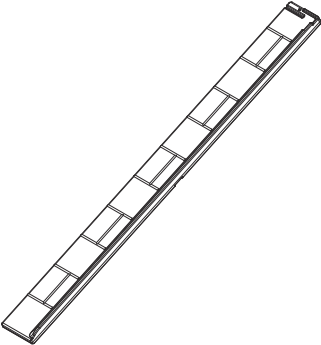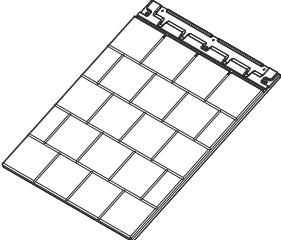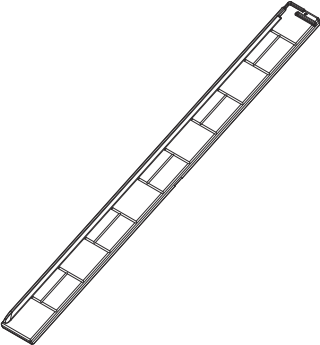
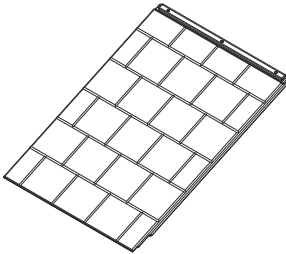

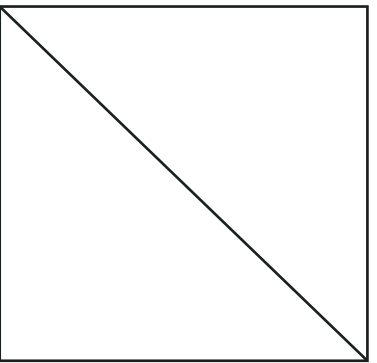
ROOF PARTS

			
10-D1 X2	10-D2 X8	10-D3 X2	10-D4 X4

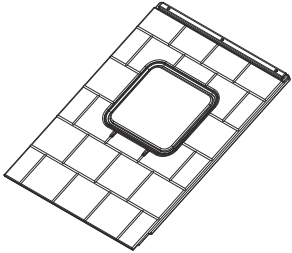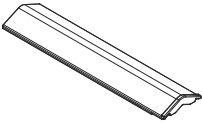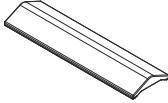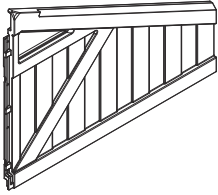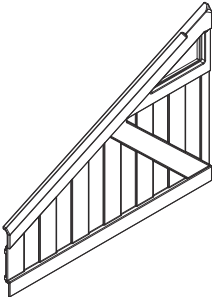
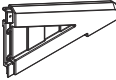
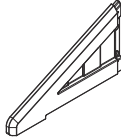



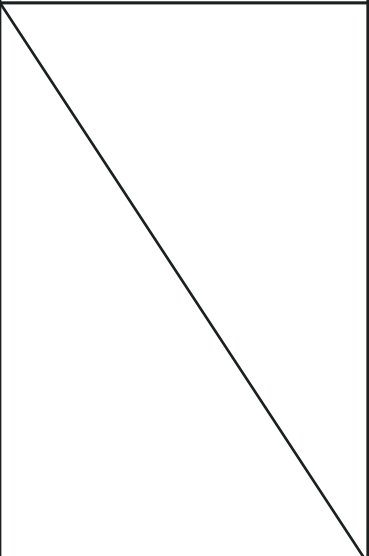
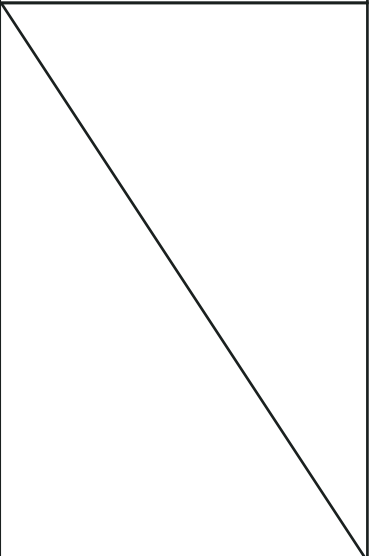
ROOF PARTS

			
10-D5 X4	10-E1 X2	10-E2 X2	10-CR X2
			
10-CL X2	10-CR-1 X2	10-CL-1 X2	B2-4 X2
			
10-B2-5 X1	10-B2-6 X2	DD X1	
			
E1-1 X2	E2-1 X2	10-D2-1 X6	
			
D2-2 X3	D2-4 X2	10-D2-3 X4	

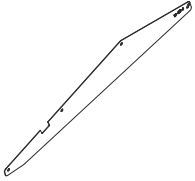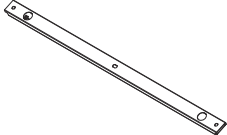

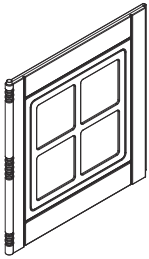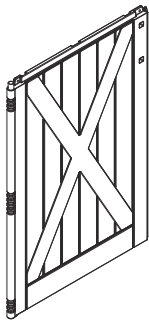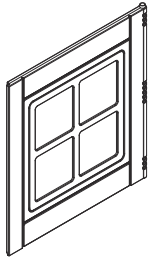



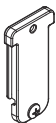

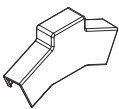
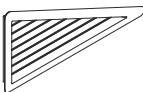

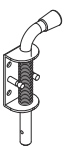

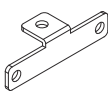

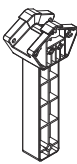
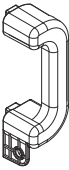

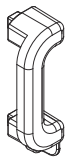
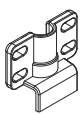


ROOF PARTS

 <p>10-D2-6 X12</p>	 <p>10-D2-7 X8</p>	 <p>10-D2-8 X4</p>	
--	---	--	---





































DOOR PARTS

 <p>DL-1 X1</p>	 <p>DL-2 X1</p>	 <p>DR-1 X1</p>	 <p>DR-2 X1</p>
 <p>DZ X2</p>	 <p>DG X2</p>		


ACCESSORIES

			
A5 X2	10-A8 X4	8/10-A9 X1	8/10-A10 X1
			
10-A11 X2	A1-1 X1	10-BC X30	B1-1 X2
			
E3X2	CRI X2	CLI X2	DC X1
			
			D4 X16
			
D2-5 X6	D2-6 X6	E4 X3	10-HR1 X1
			
10-HR2 X2	10-HL1 X1	DDZ X2	M6 X93
			
			Z6 X10

SCREW


 <p>307 pcs</p>   <p>SP6-15 M6*15</p>	 <p>296 pcs</p>   <p>SP6-20 M6*20</p>
 <p>20 pcs</p>   <p>M6-25 M6*25</p>	 <p>10 pcs</p>   <p>M6-10 M6*10</p>
 <p>37 pcs</p>   <p>M6-55 M6*55</p>	 <p>26 pcs</p>   <p>M6-15 M6*15</p>
 <p>38 pcs</p>   <p>SPF6-20 M6*20</p>	 <p>6 pcs</p>   <p>SF4-15 M4*15</p>
 <p>18 pcs</p>   <p>M5-8 M5*8</p>	 <p>8 pcs</p>   <p>M5-12 M5*12</p>
 <p>20 pcs</p>   <p>SP6-25 M6*25</p>	 <p>8 pcs</p>   <p>SP6-35 M6*35</p>

CONTENTS

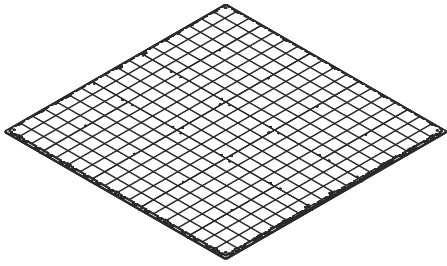


Floor Part Instruction

11-16
(page)

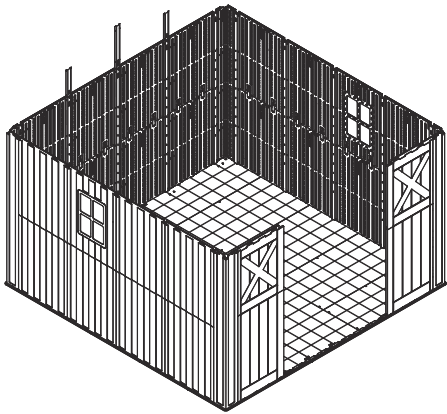


Wall Part Instruction

17-29
(page)

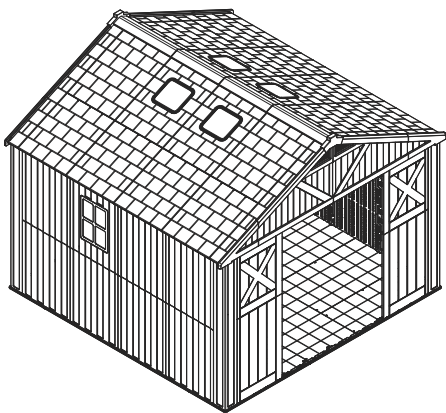

Roof Part Instruction



30-47
(page)

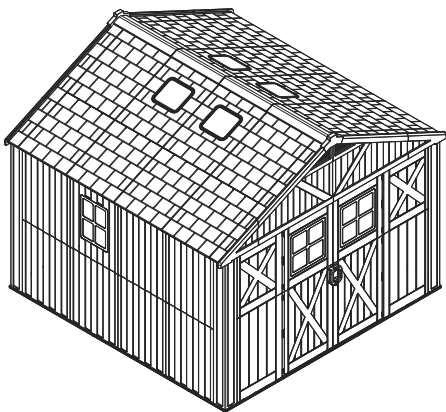



Door Part Instruction

48-52
(page)



STEP 1

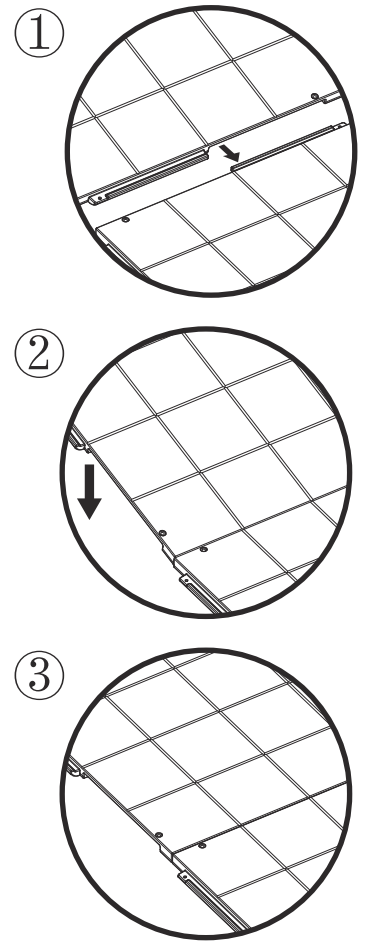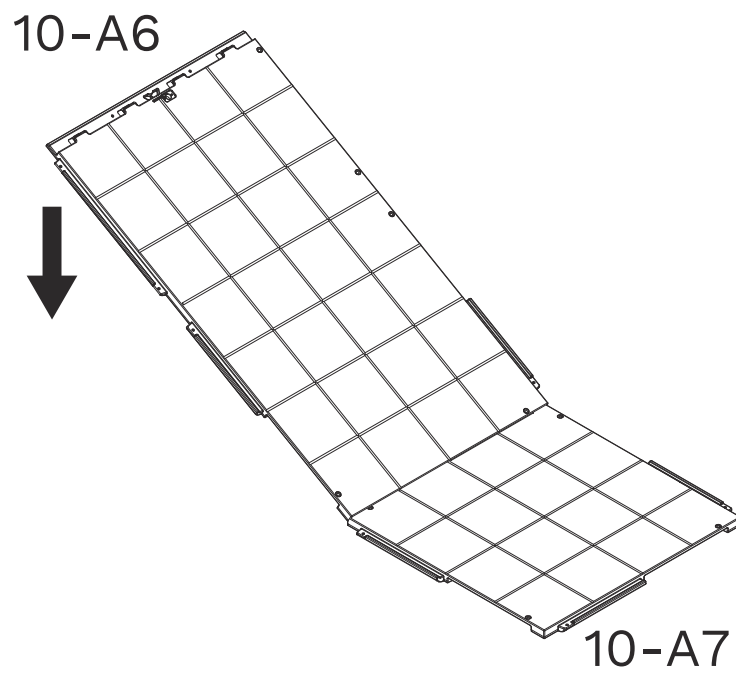

STEP 2

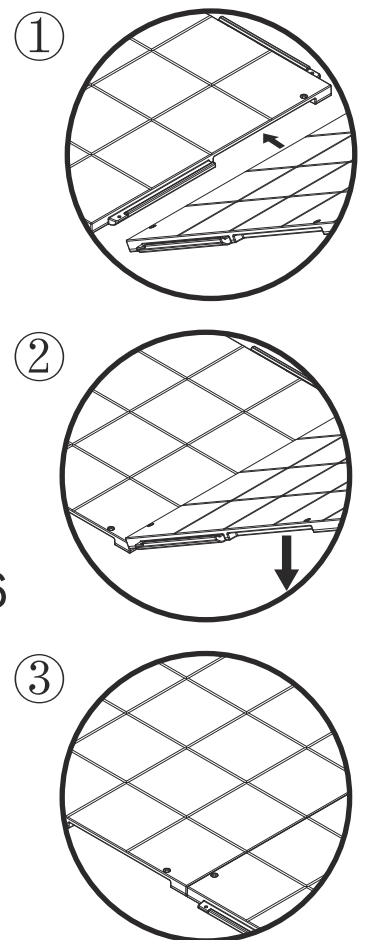
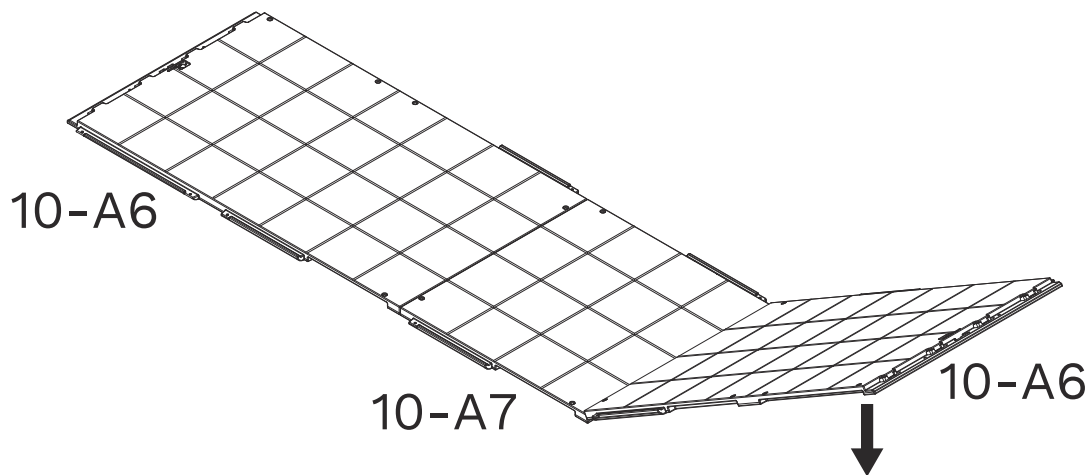


STEP 3

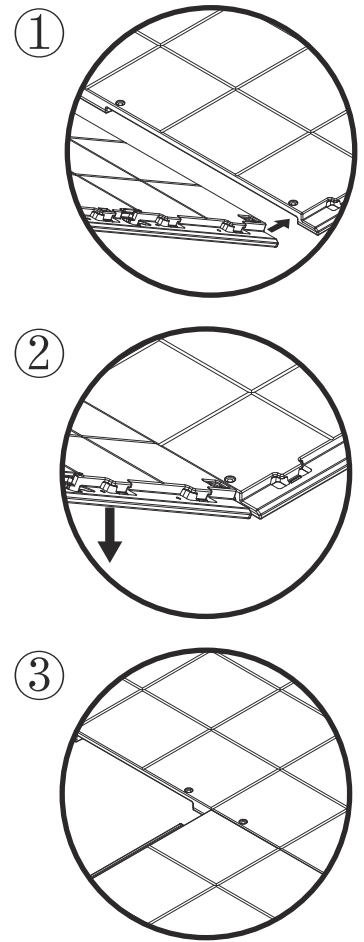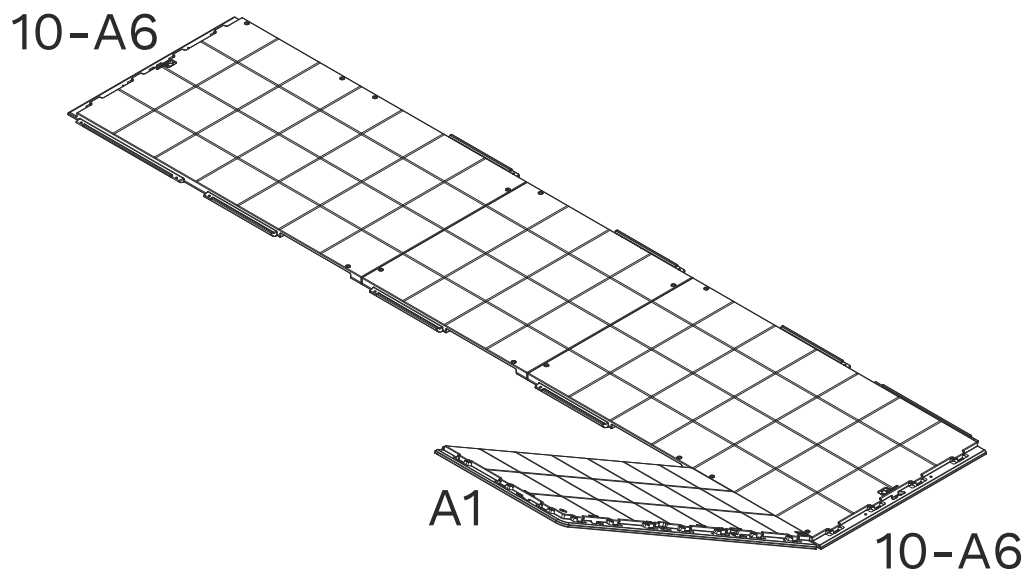


STEP 4

Refer to STEP 3 to Install 3 A2s in sequence.

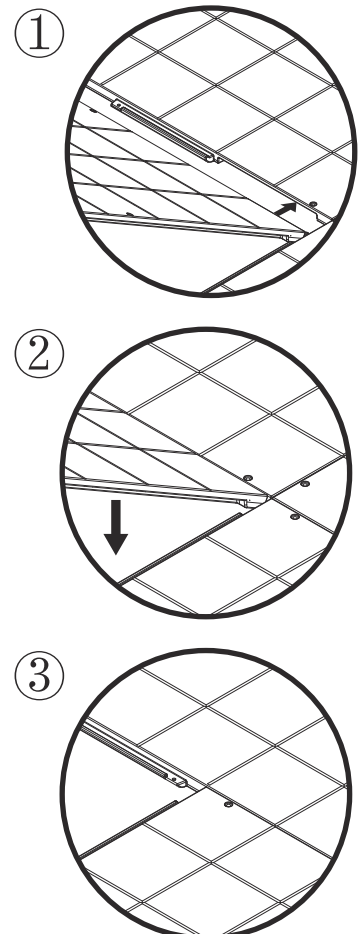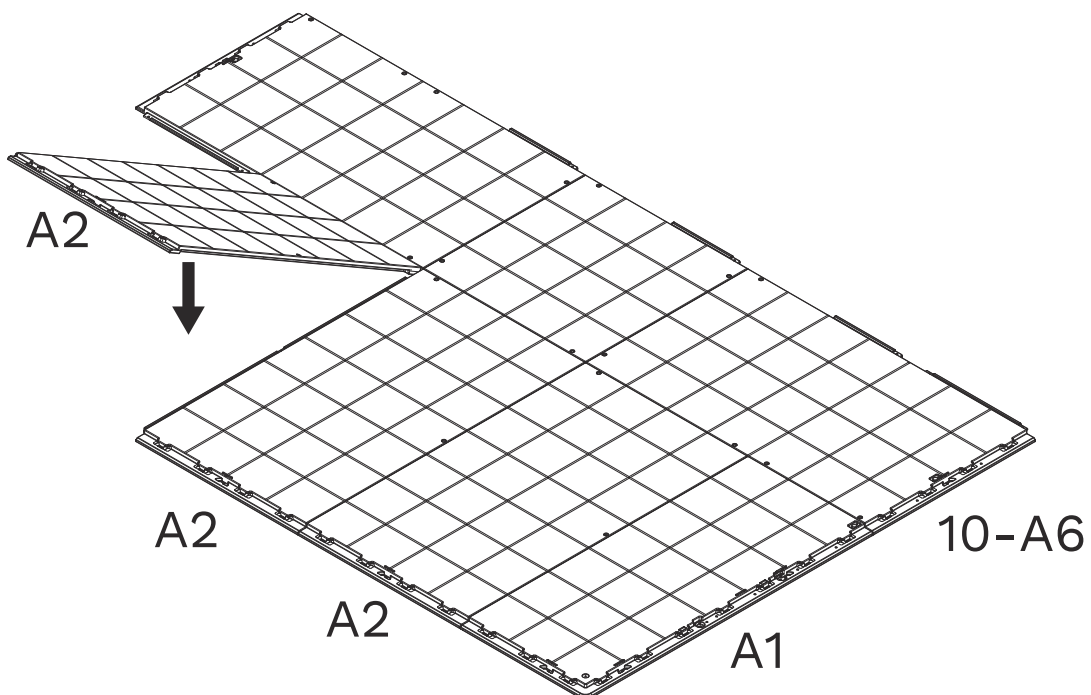


STEP 5

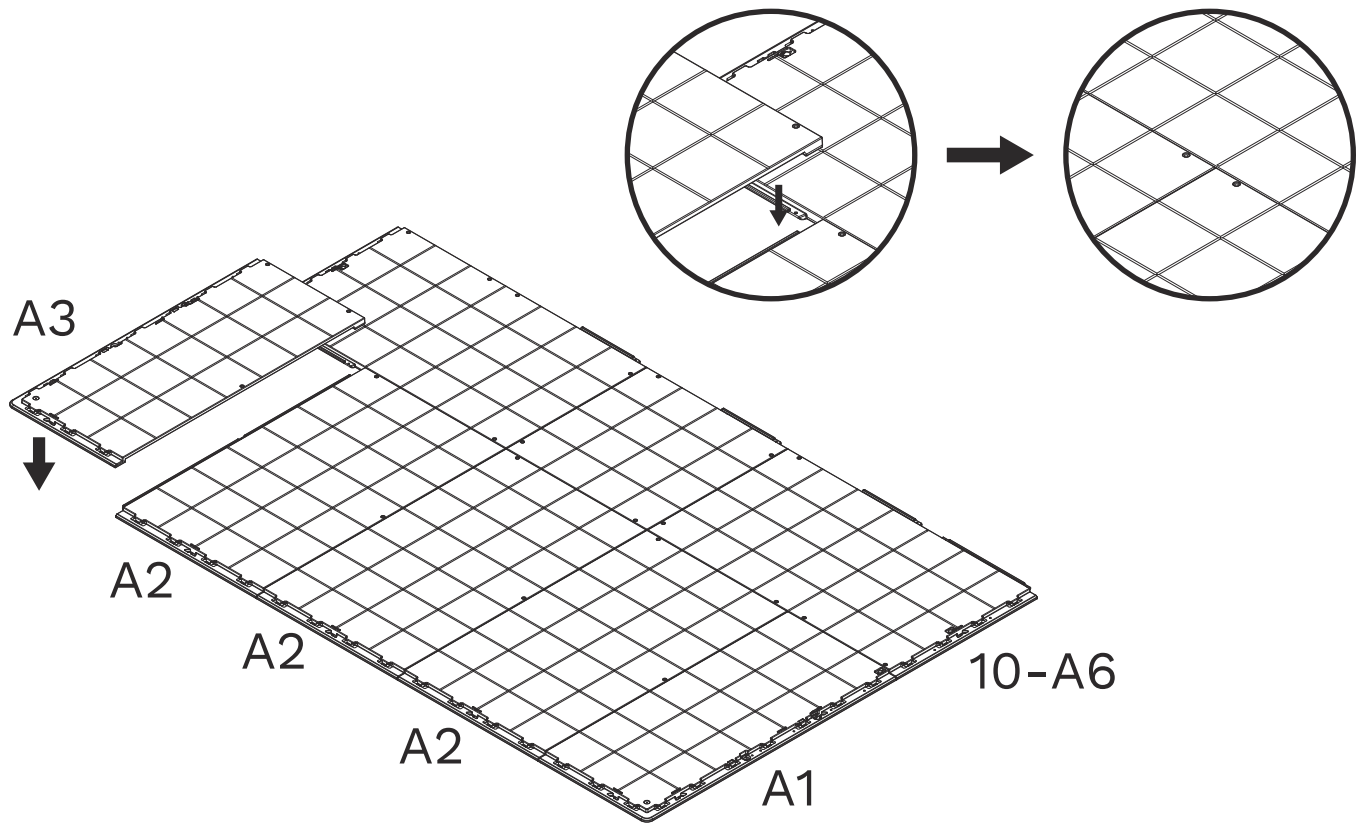


STEP 6


Refer to STEP 3 to Install A1 and 3 A2s in sequence.

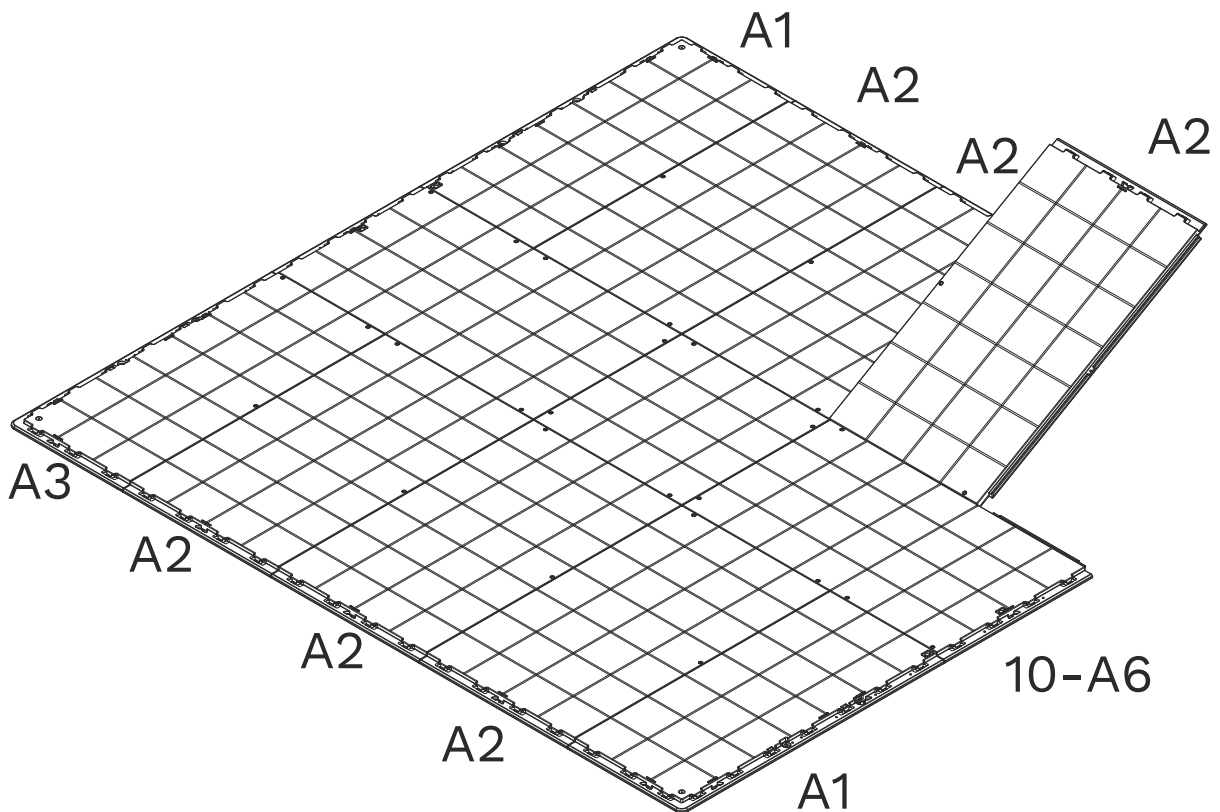


STEP 7

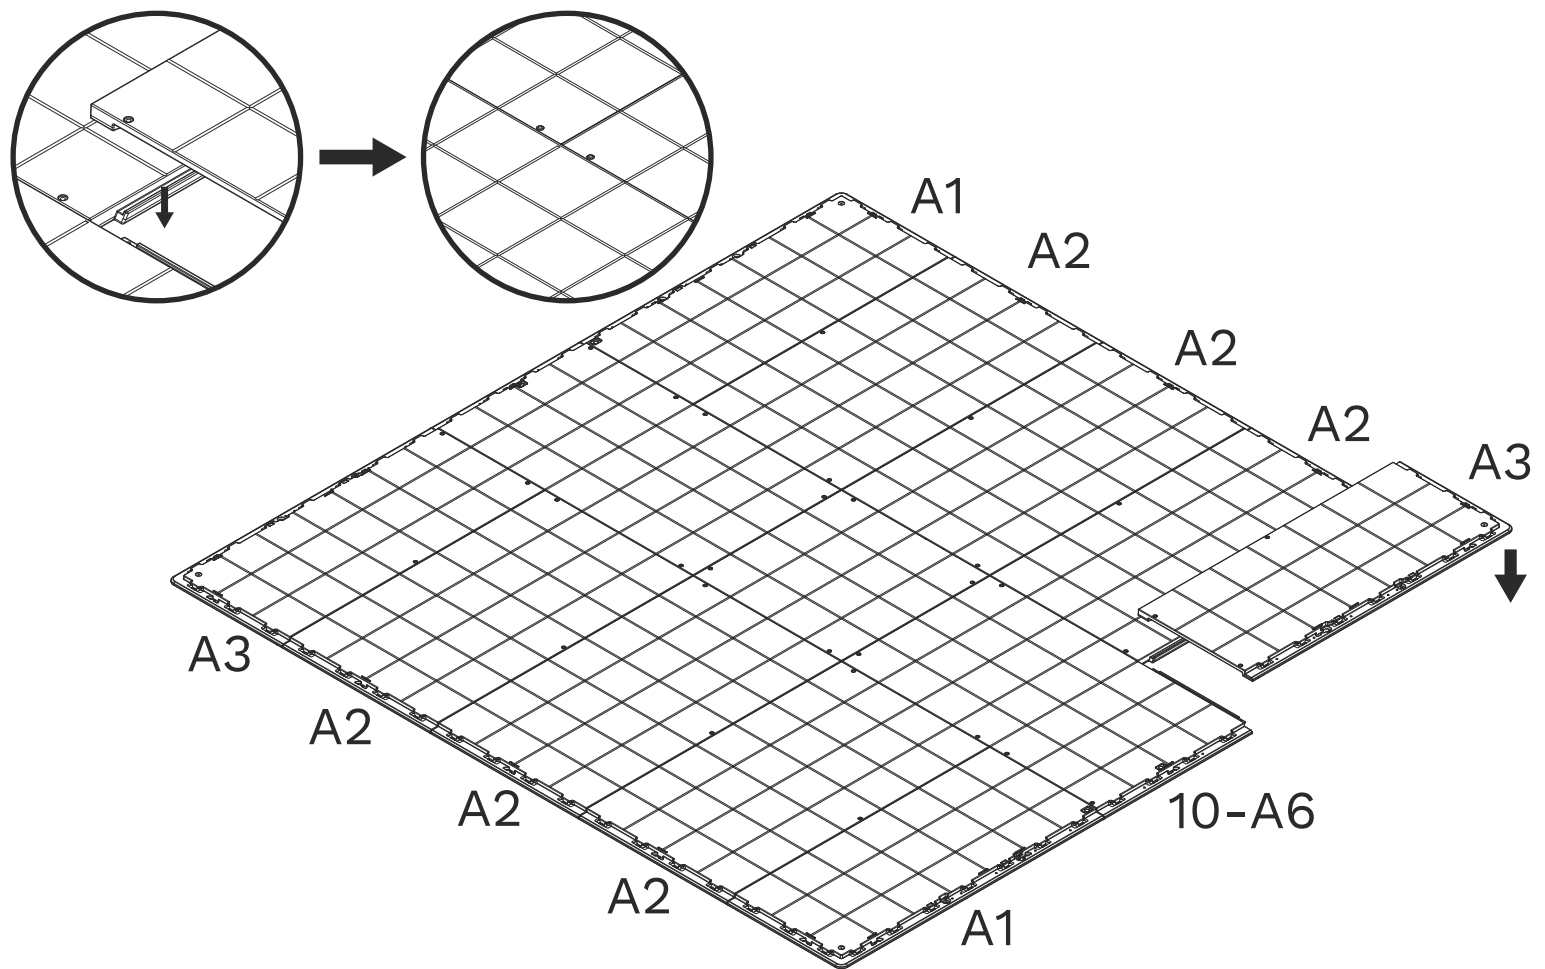


STEP 8

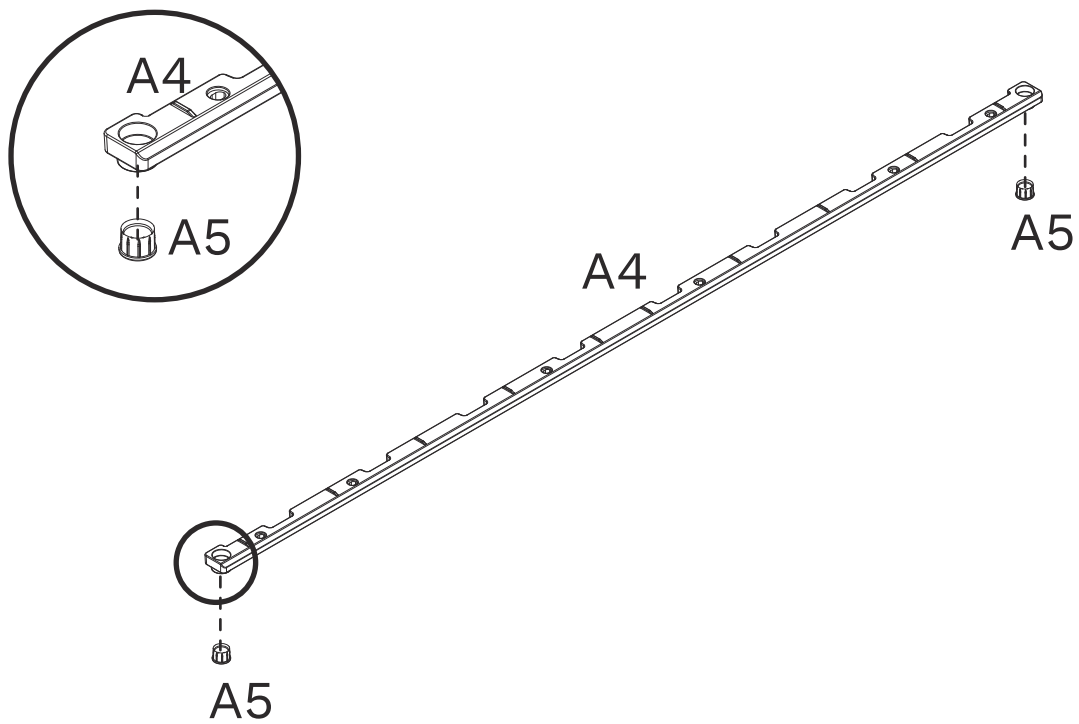


STEP 9

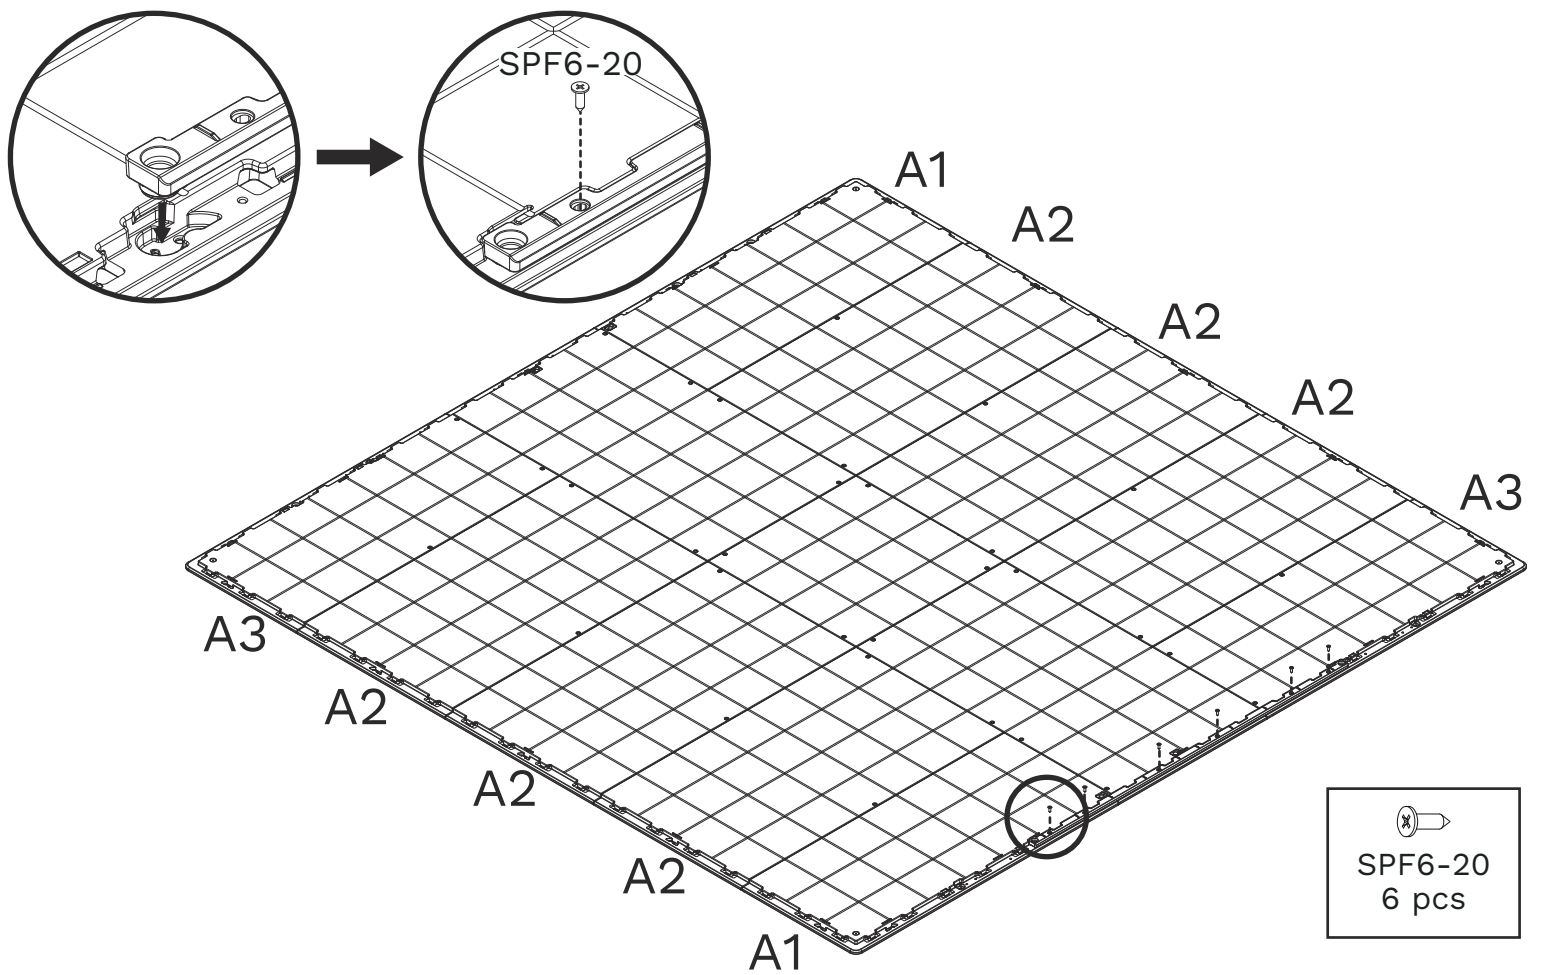


STEP 10

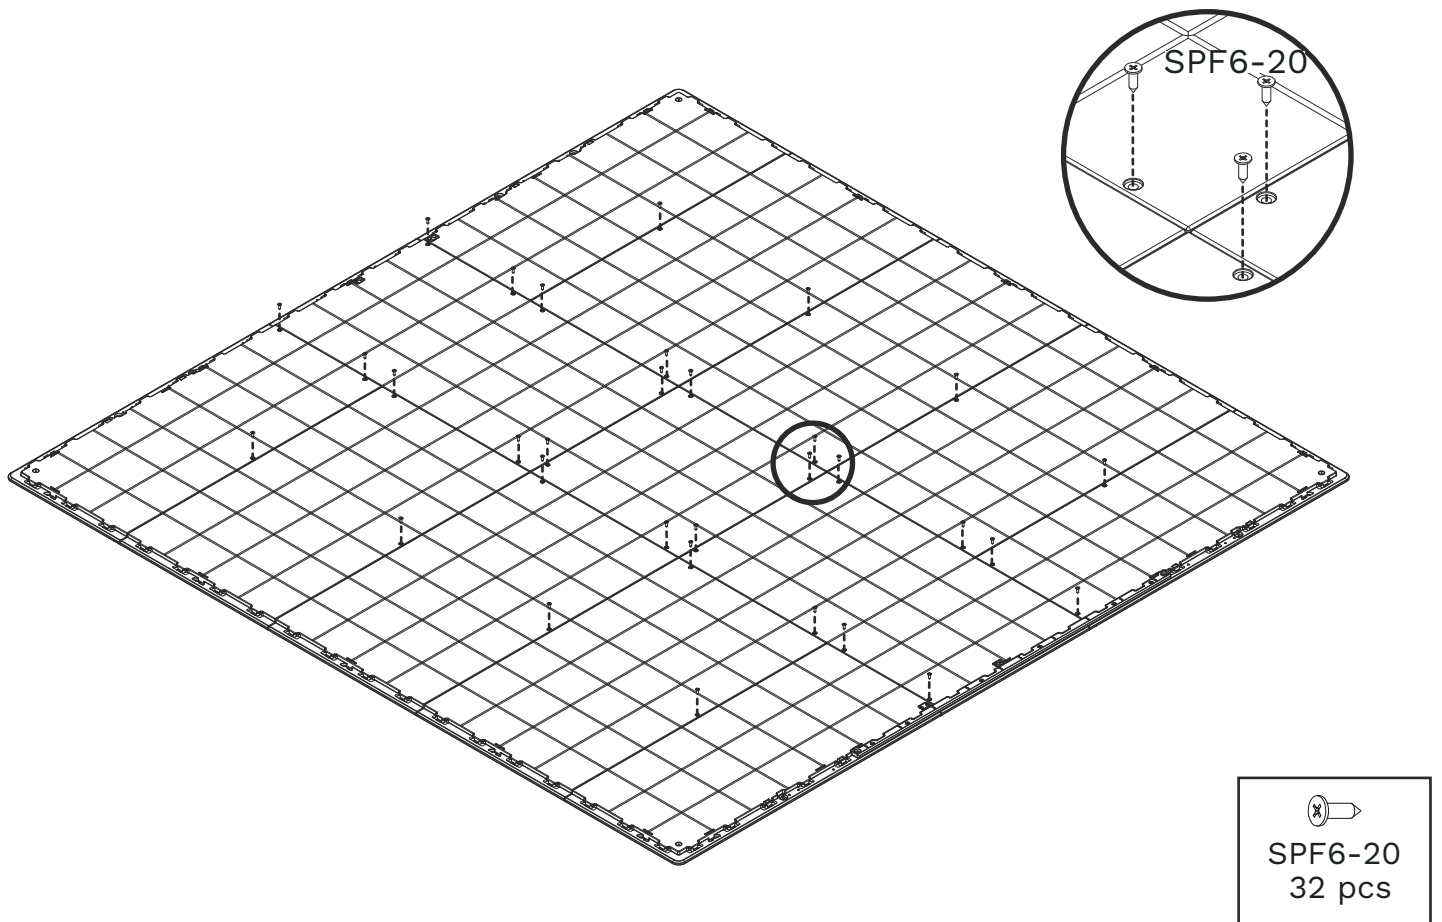

STEP 11

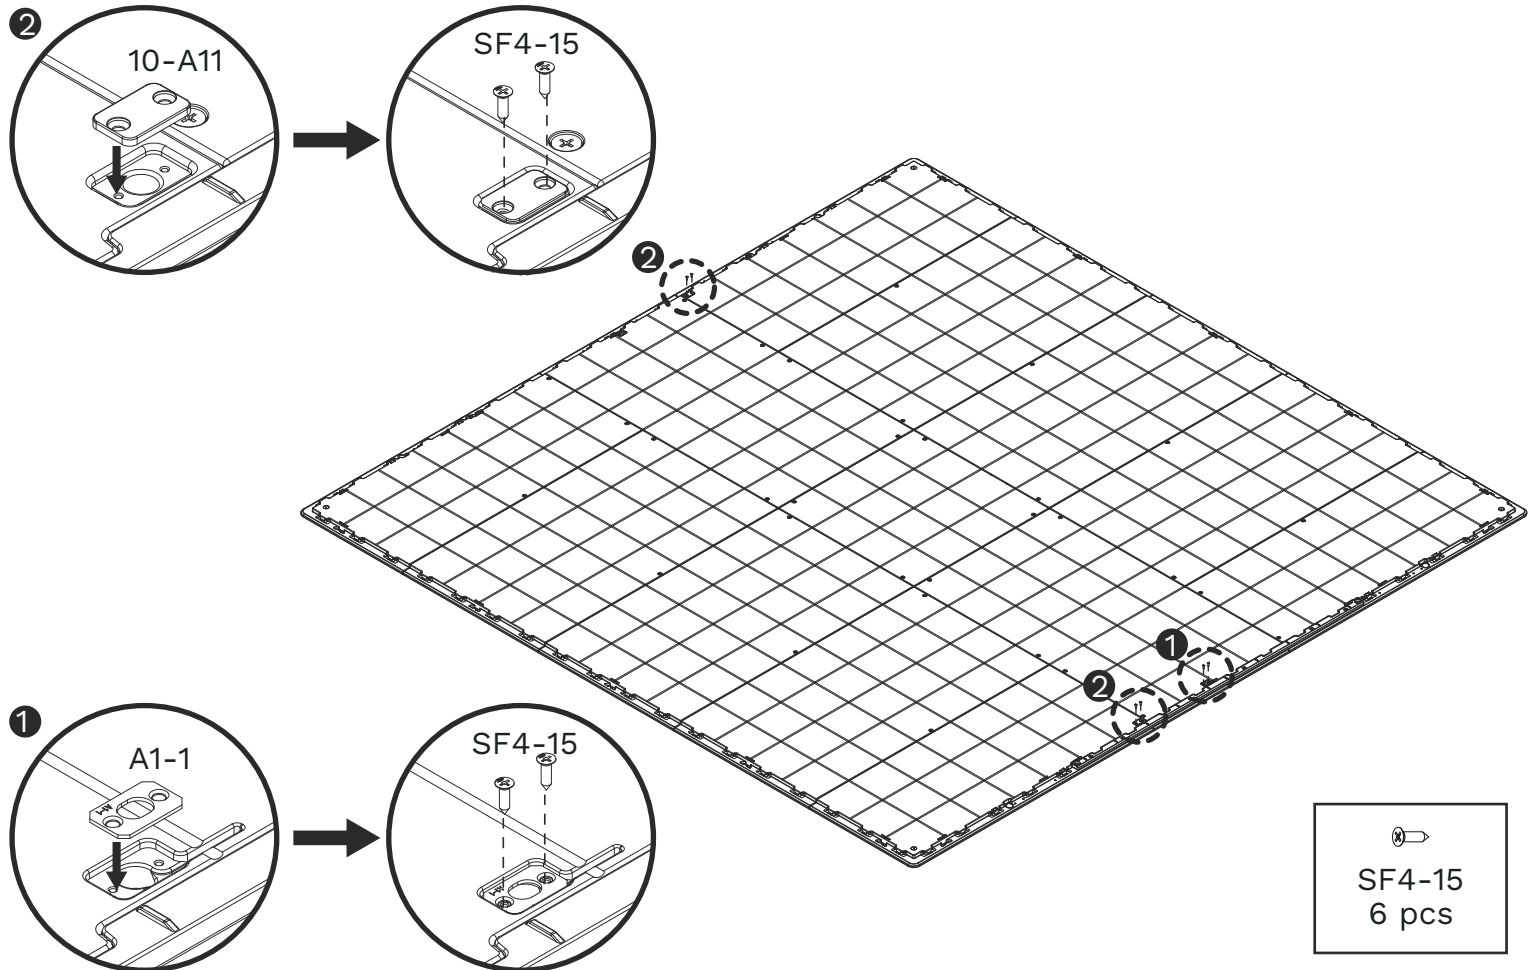


STEP 12

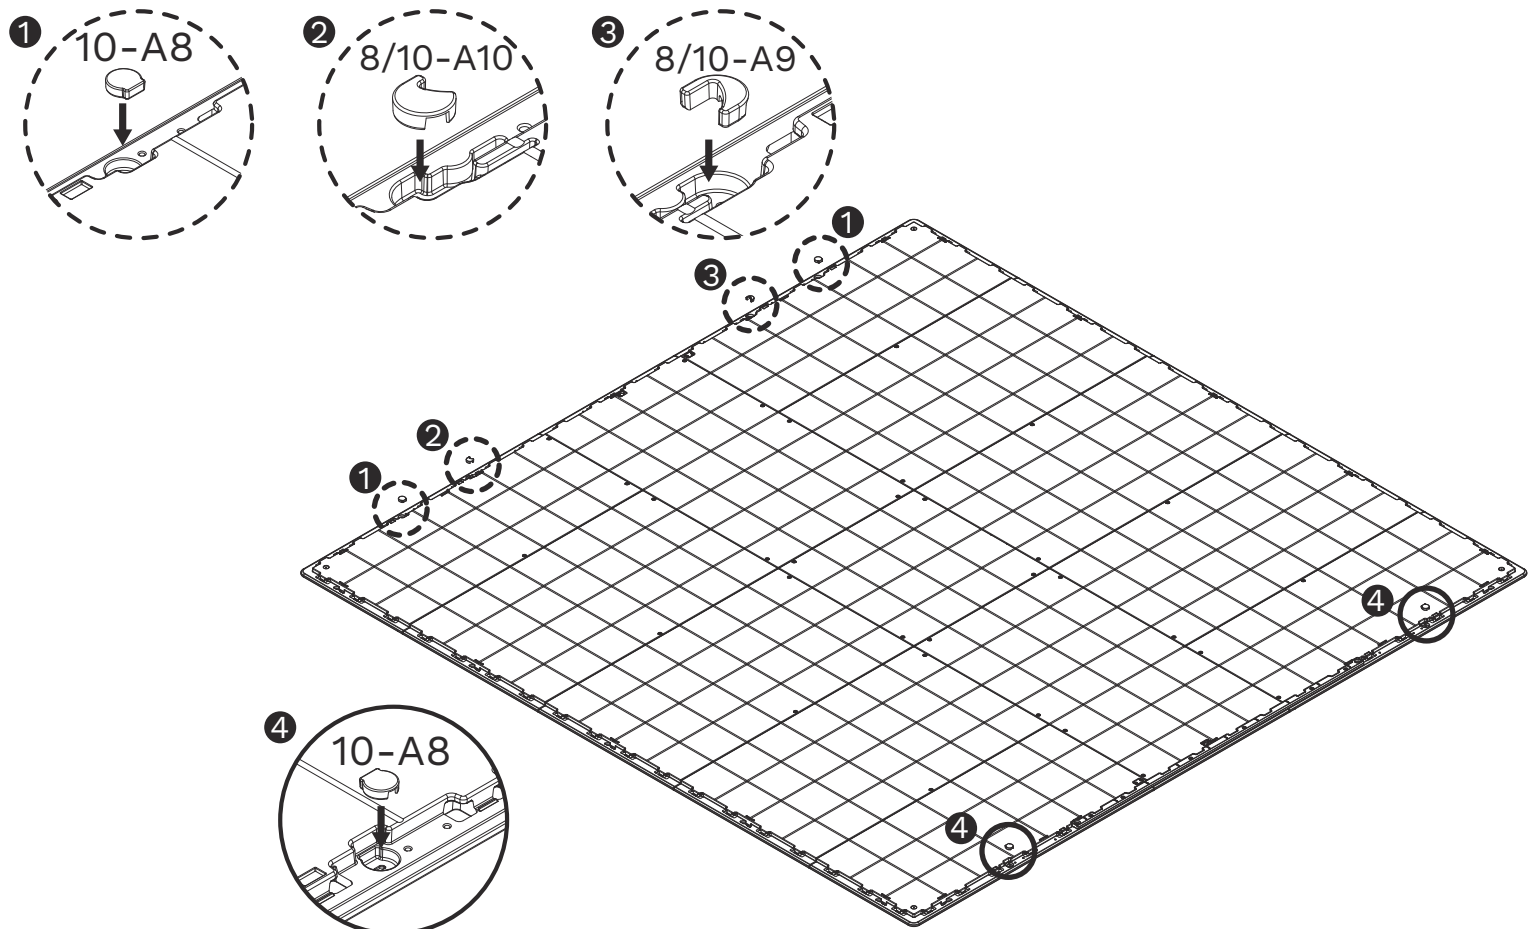


STEP 13

Please note the direction of the arrow when installing.

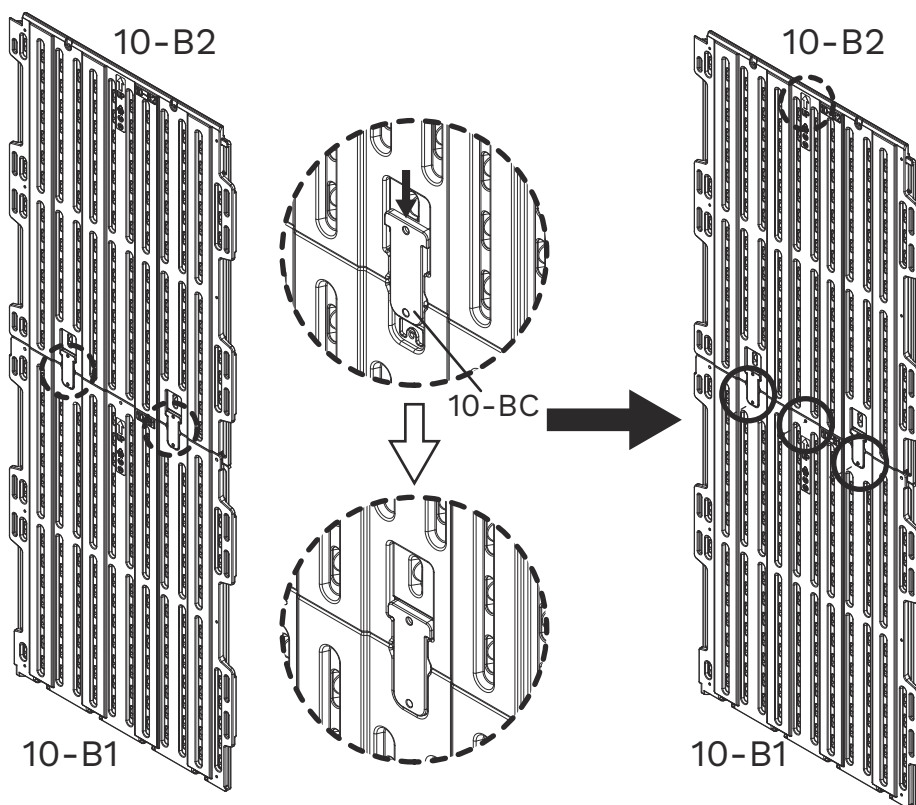


x10

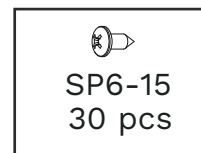


STEP 14

Please note the direction of the arrow when installing.

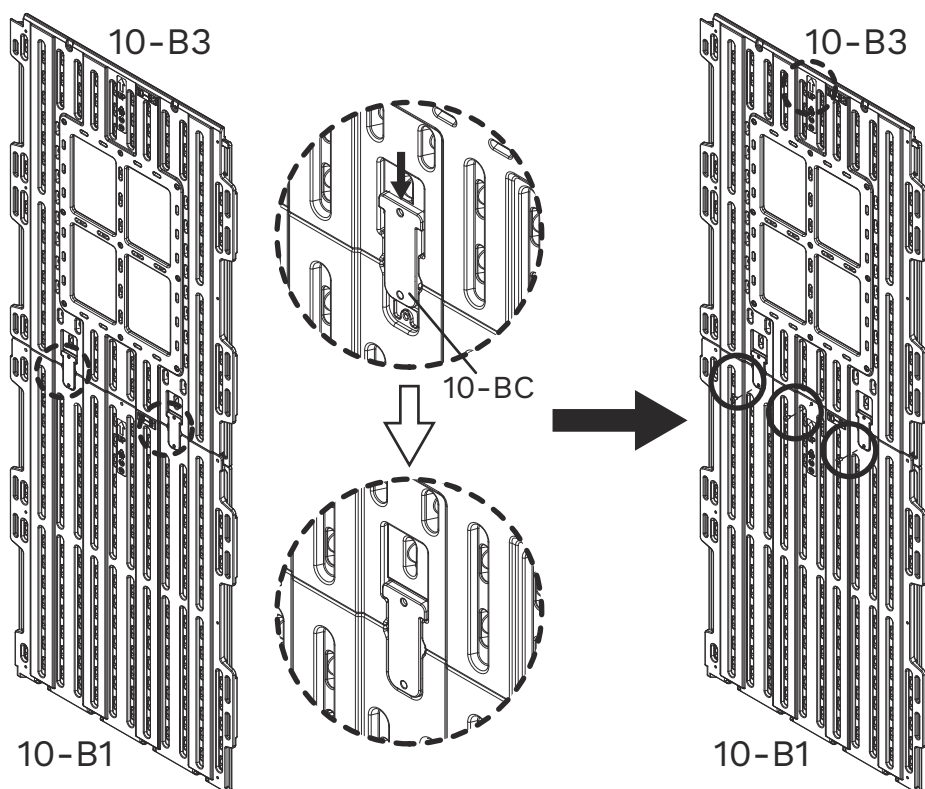


x2

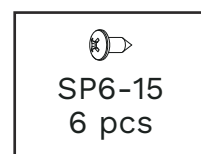


STEP 15

Please note the direction of the arrow when installing.

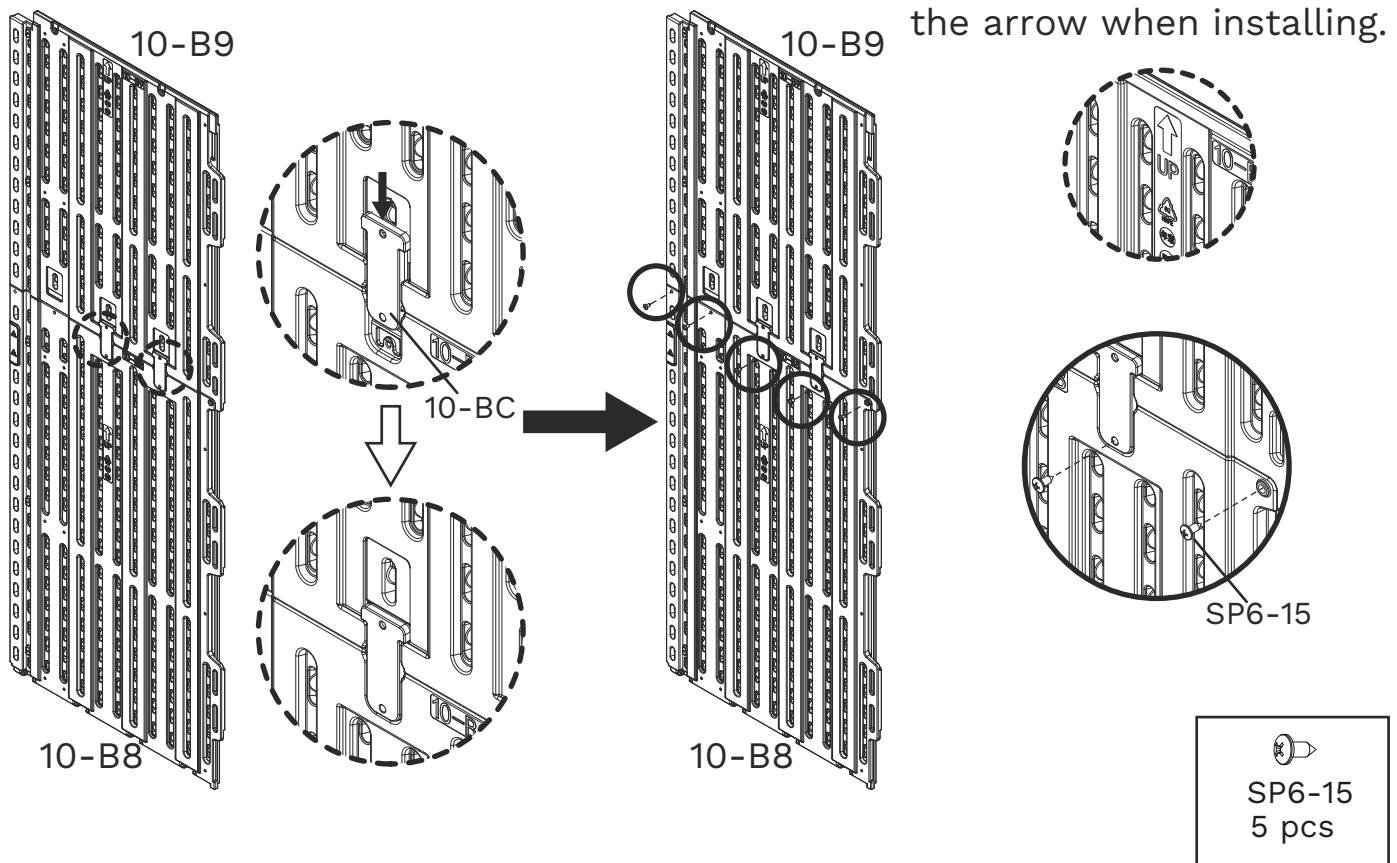

STEP 16


Please note the direction of the arrow when installing.

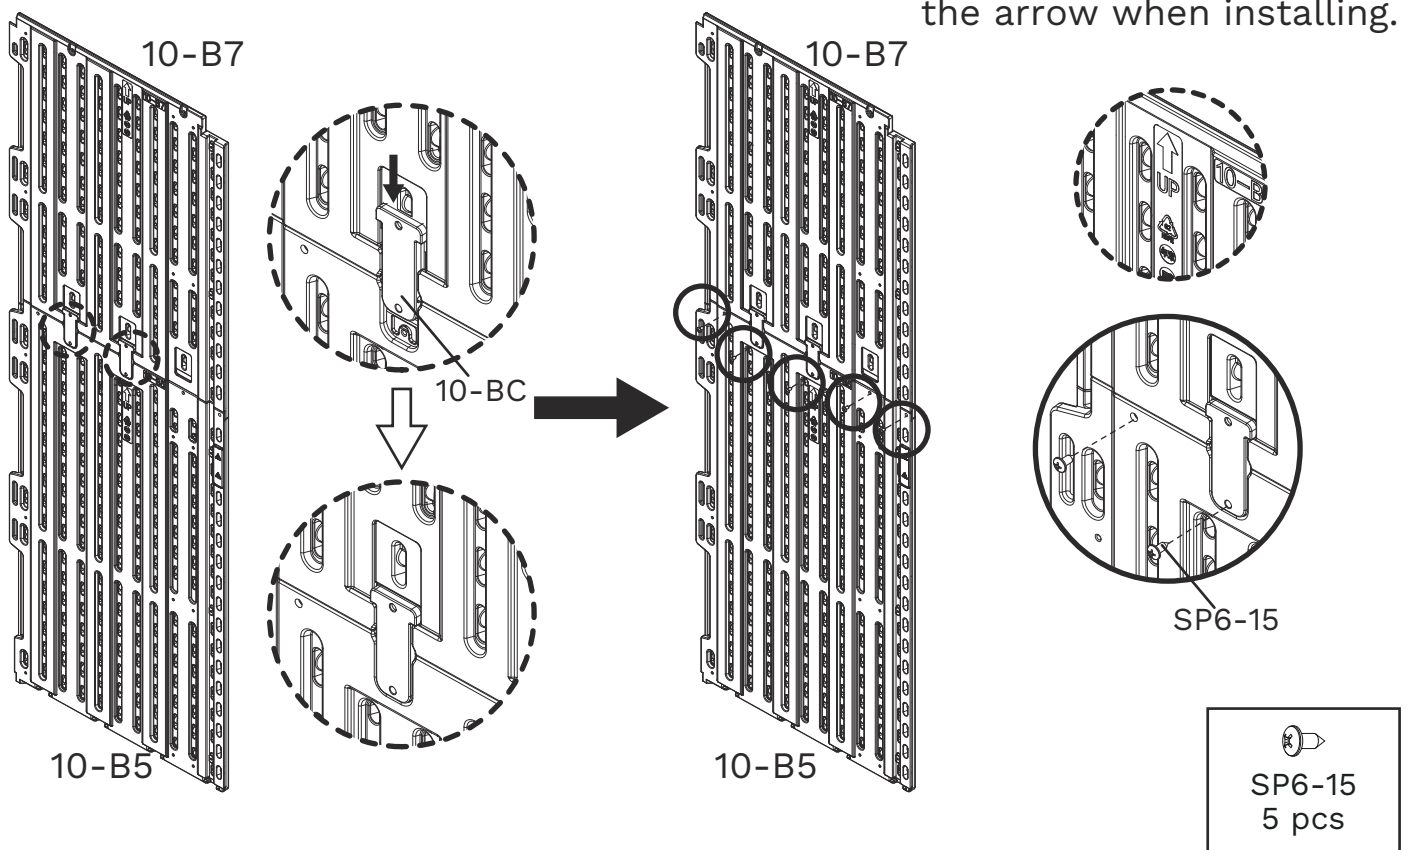


STEP 17

Place the assembled 10-B9 and 10-B8 at the corresponding position on the floor and rotate them into the groove.

Then Press 10-B9 to make the bottom of 10-B8 align with the floor, kick 10-B8 and snap it into place.

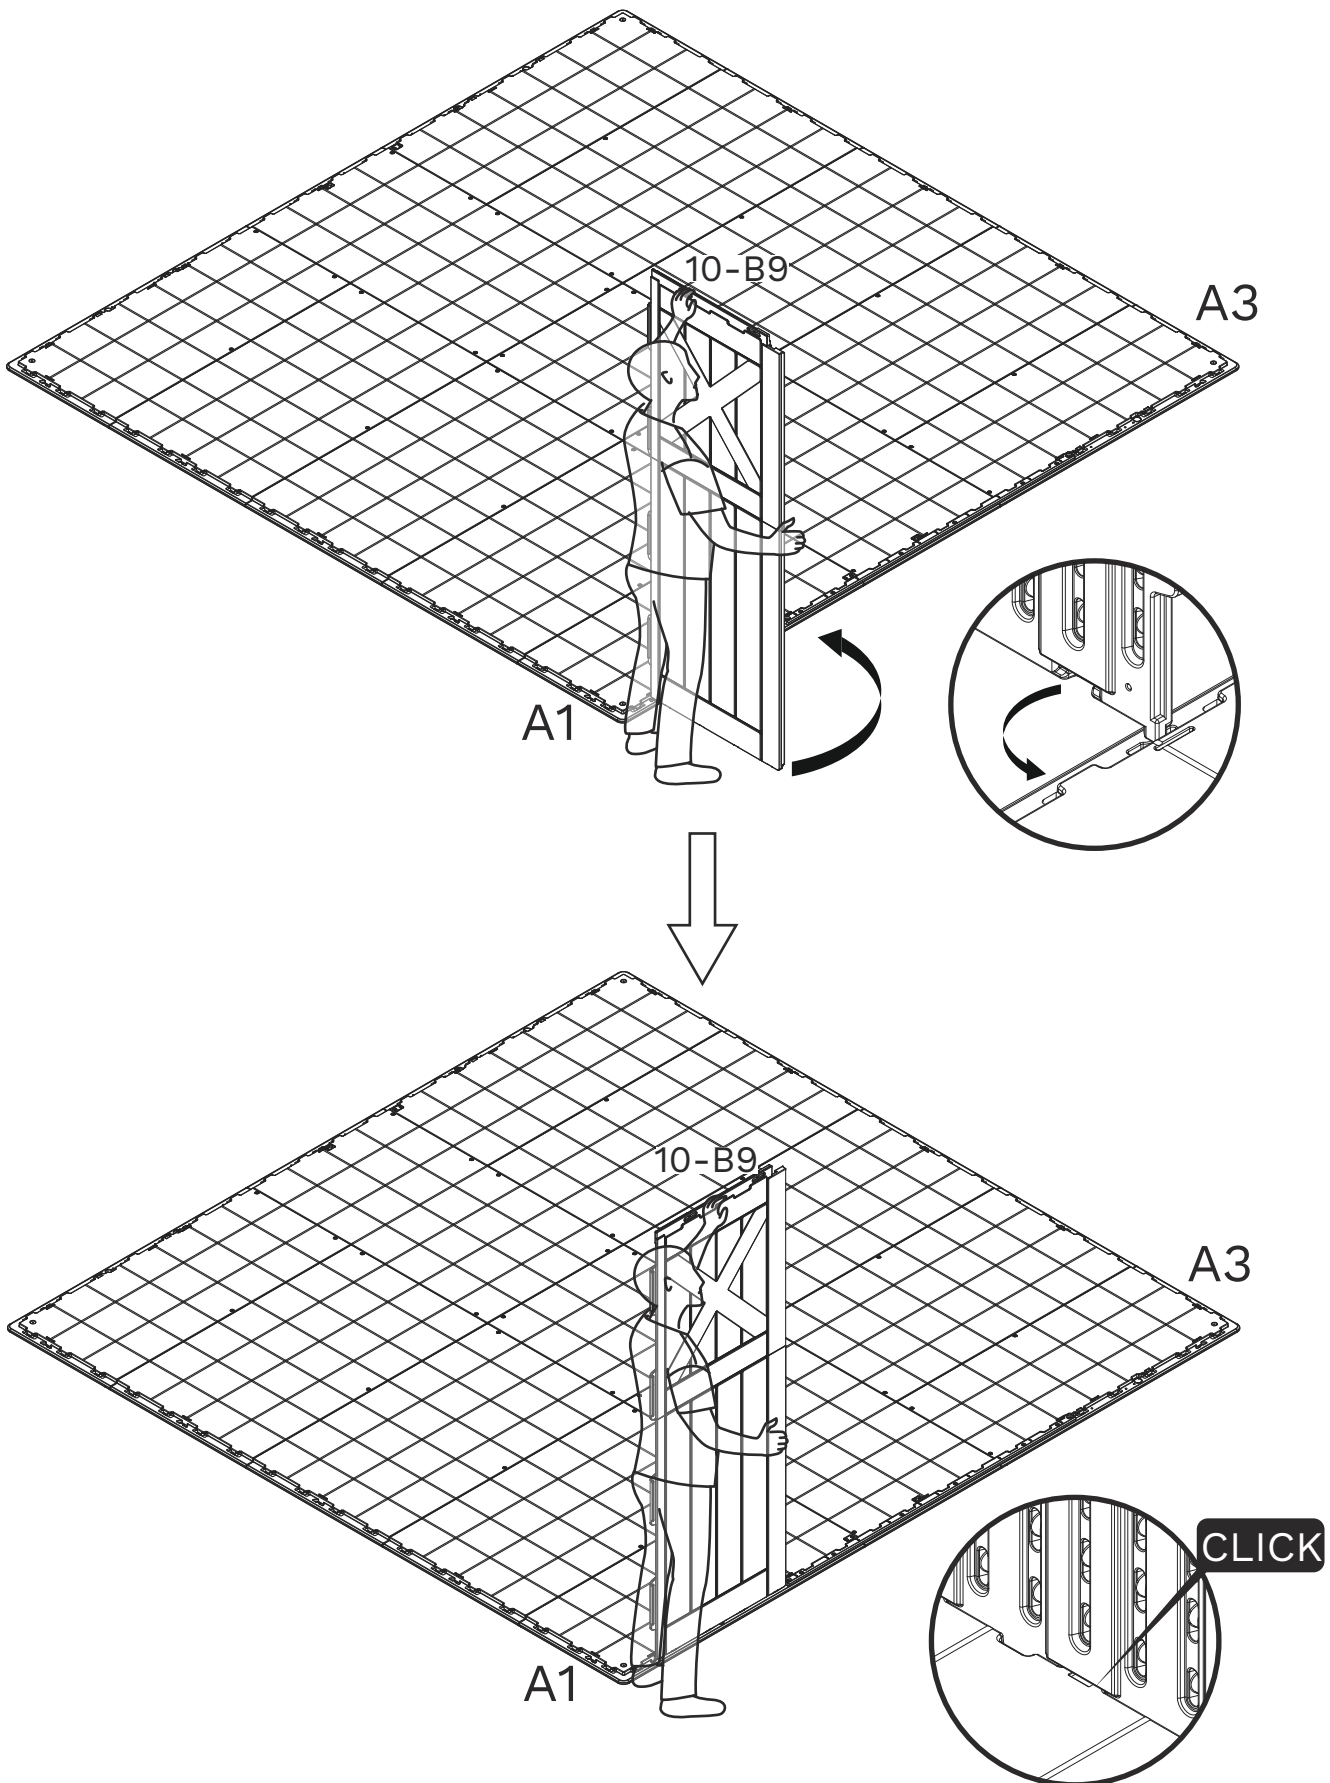


STEP 18

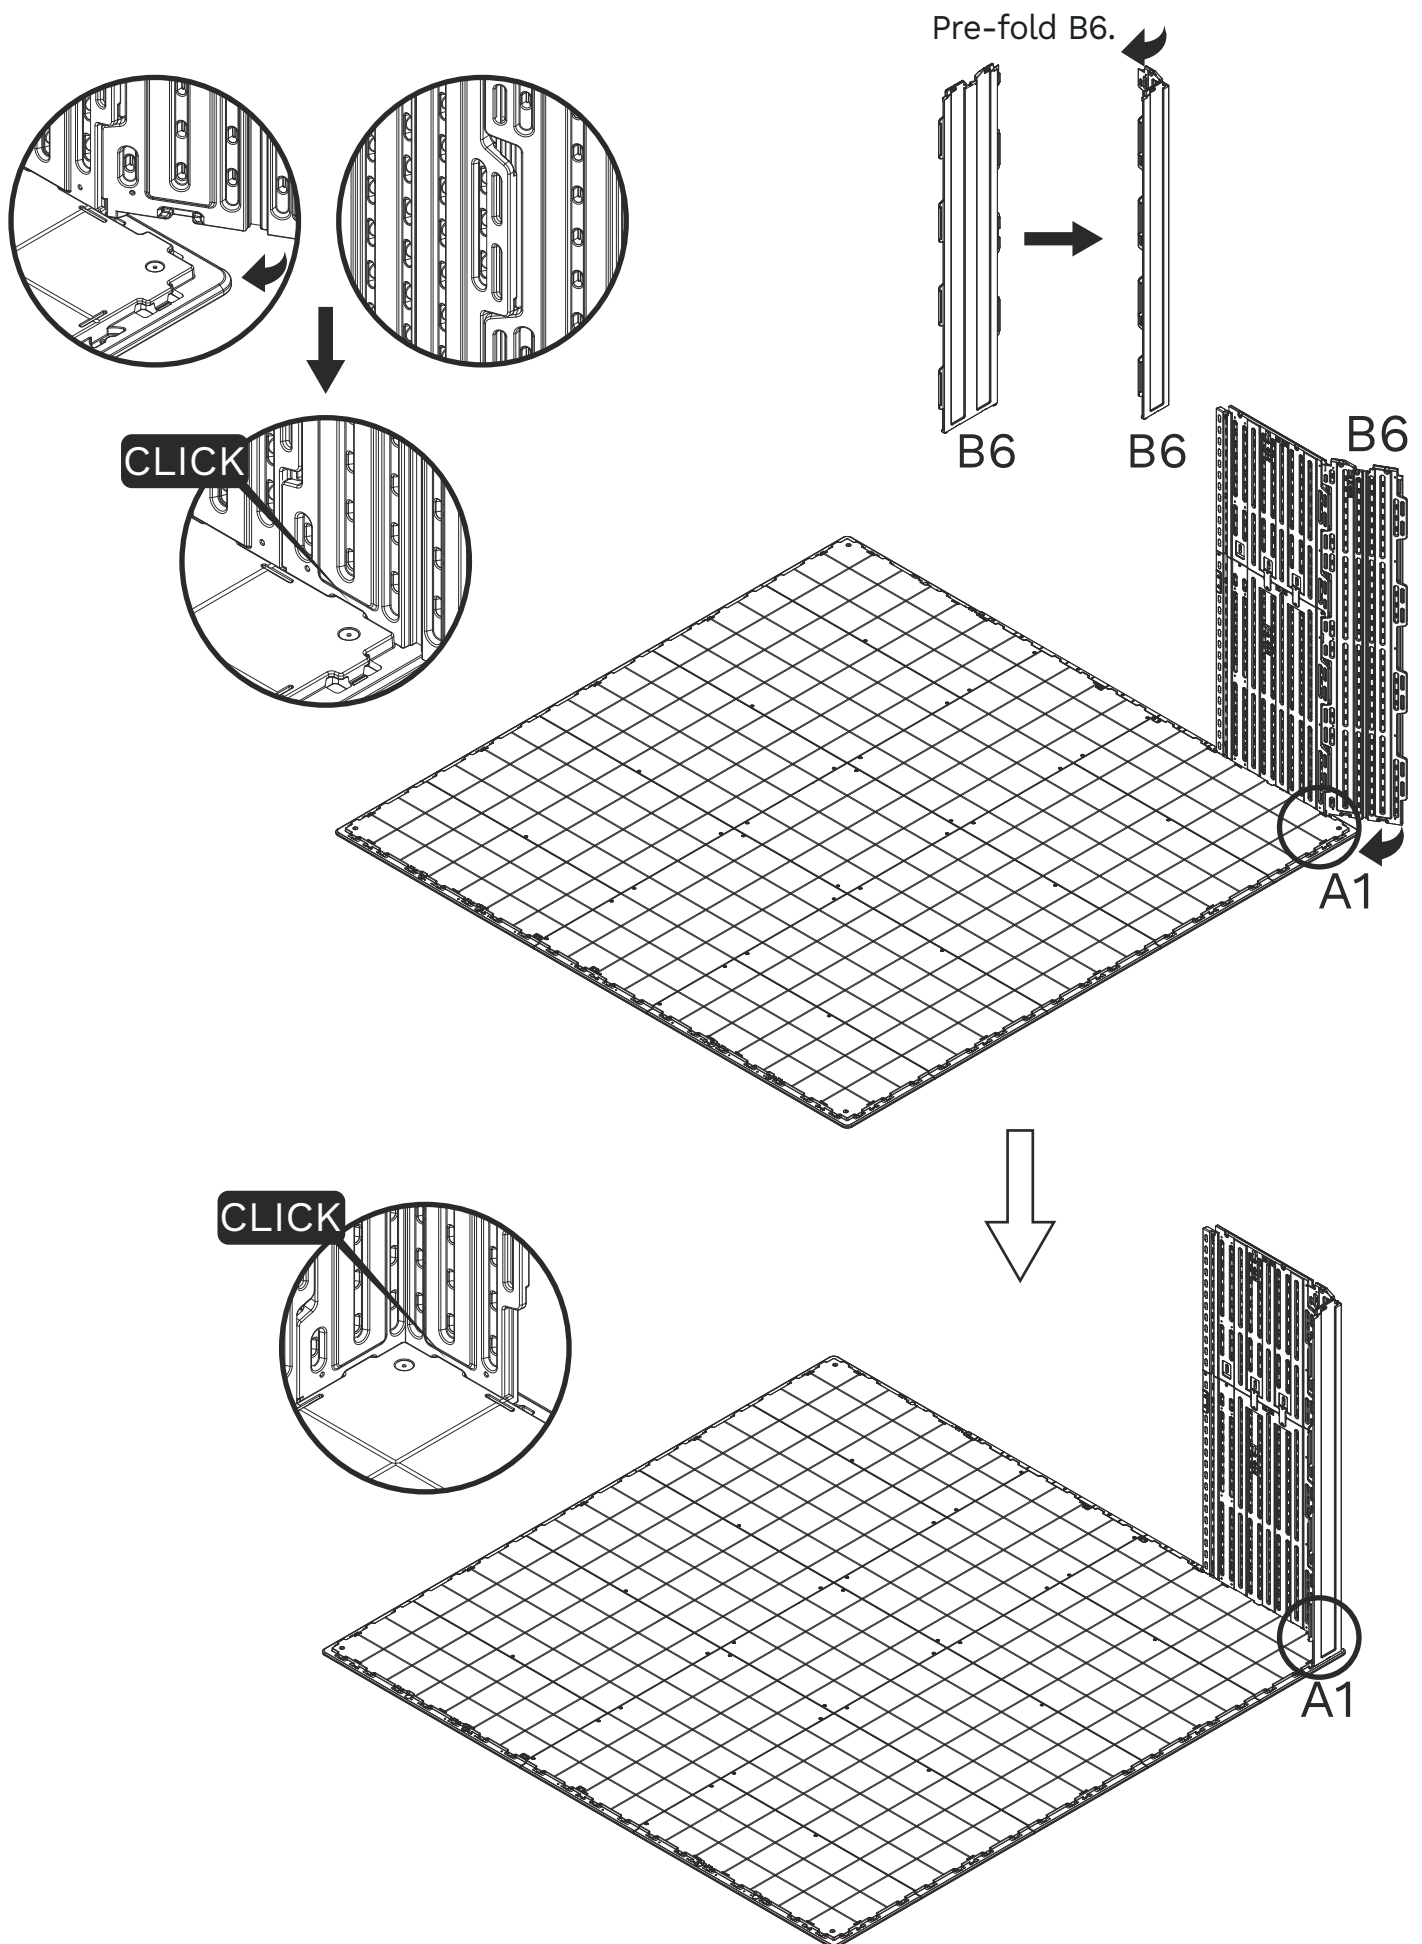

STEP 19


Place the assembled 10-B2 and 10-B1 at the corresponding position on the floor and rotate them into the groove.

Then press 10-B2 to make the bottom of 10-B1 align with the floor, kick 10-B1 and snap it into place.

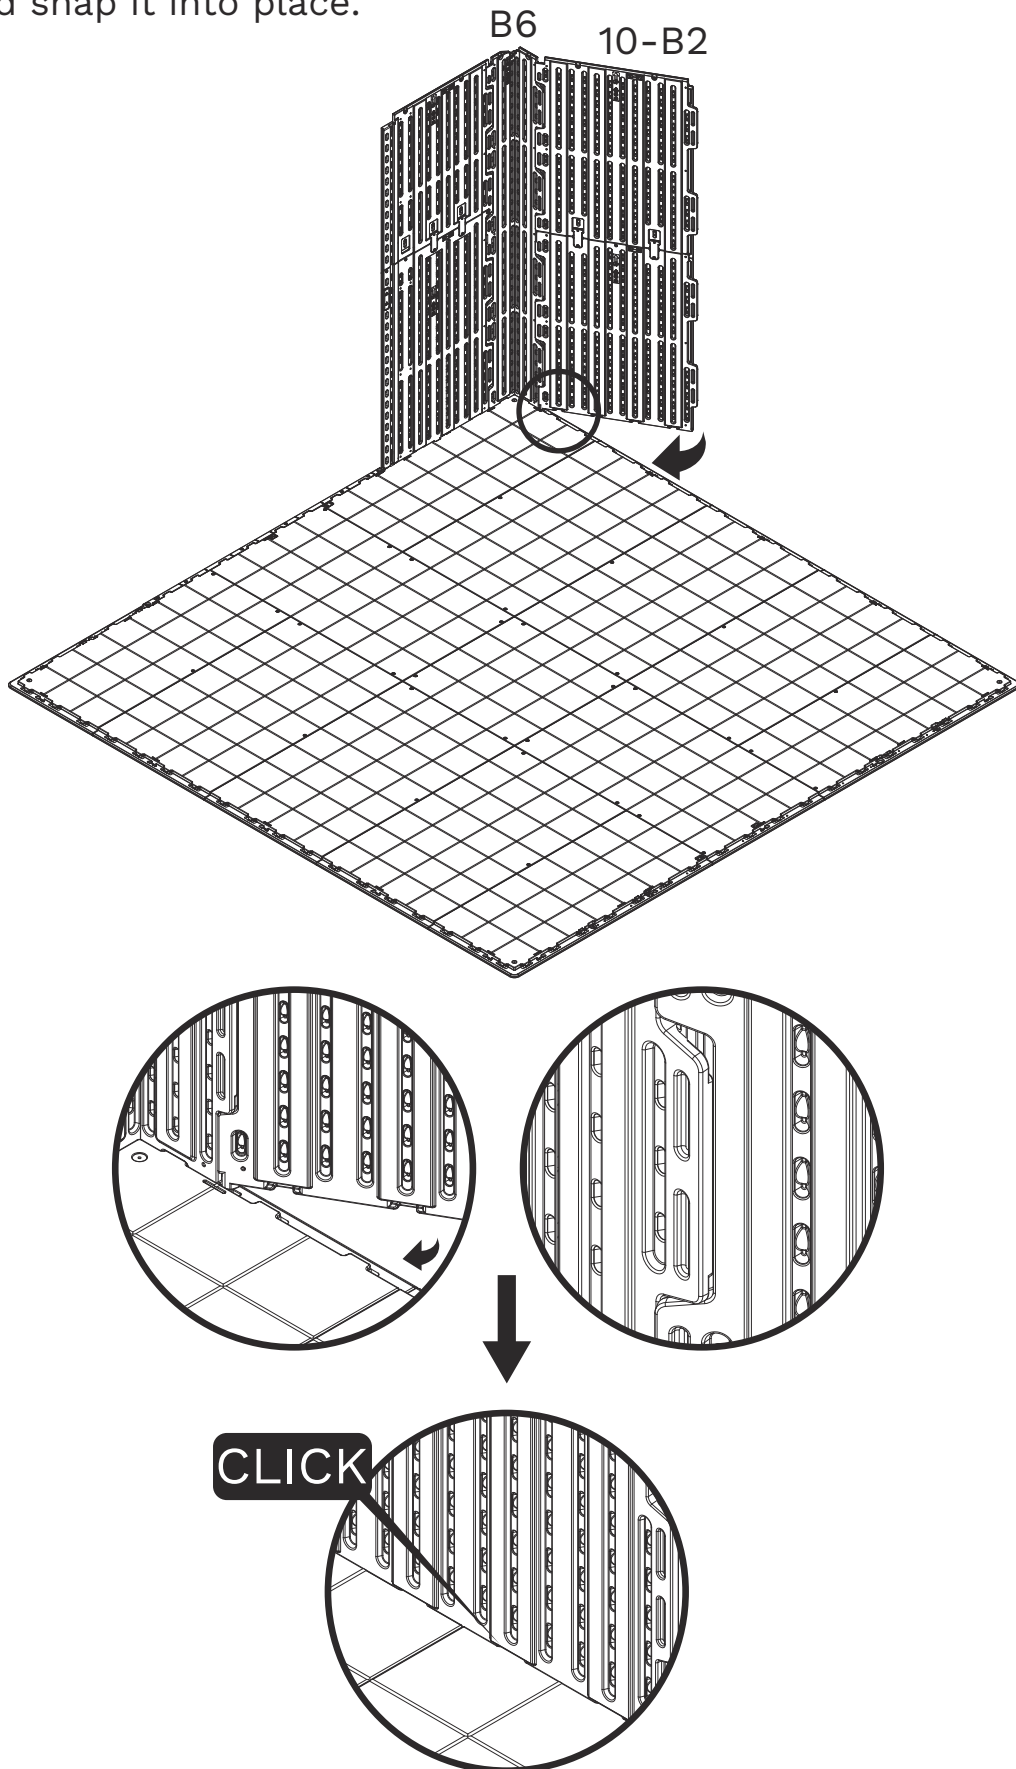


STEP 20

Please install the assembled 10-B2, 10-B2, 10-B3, 10-B2 and B4 in order.

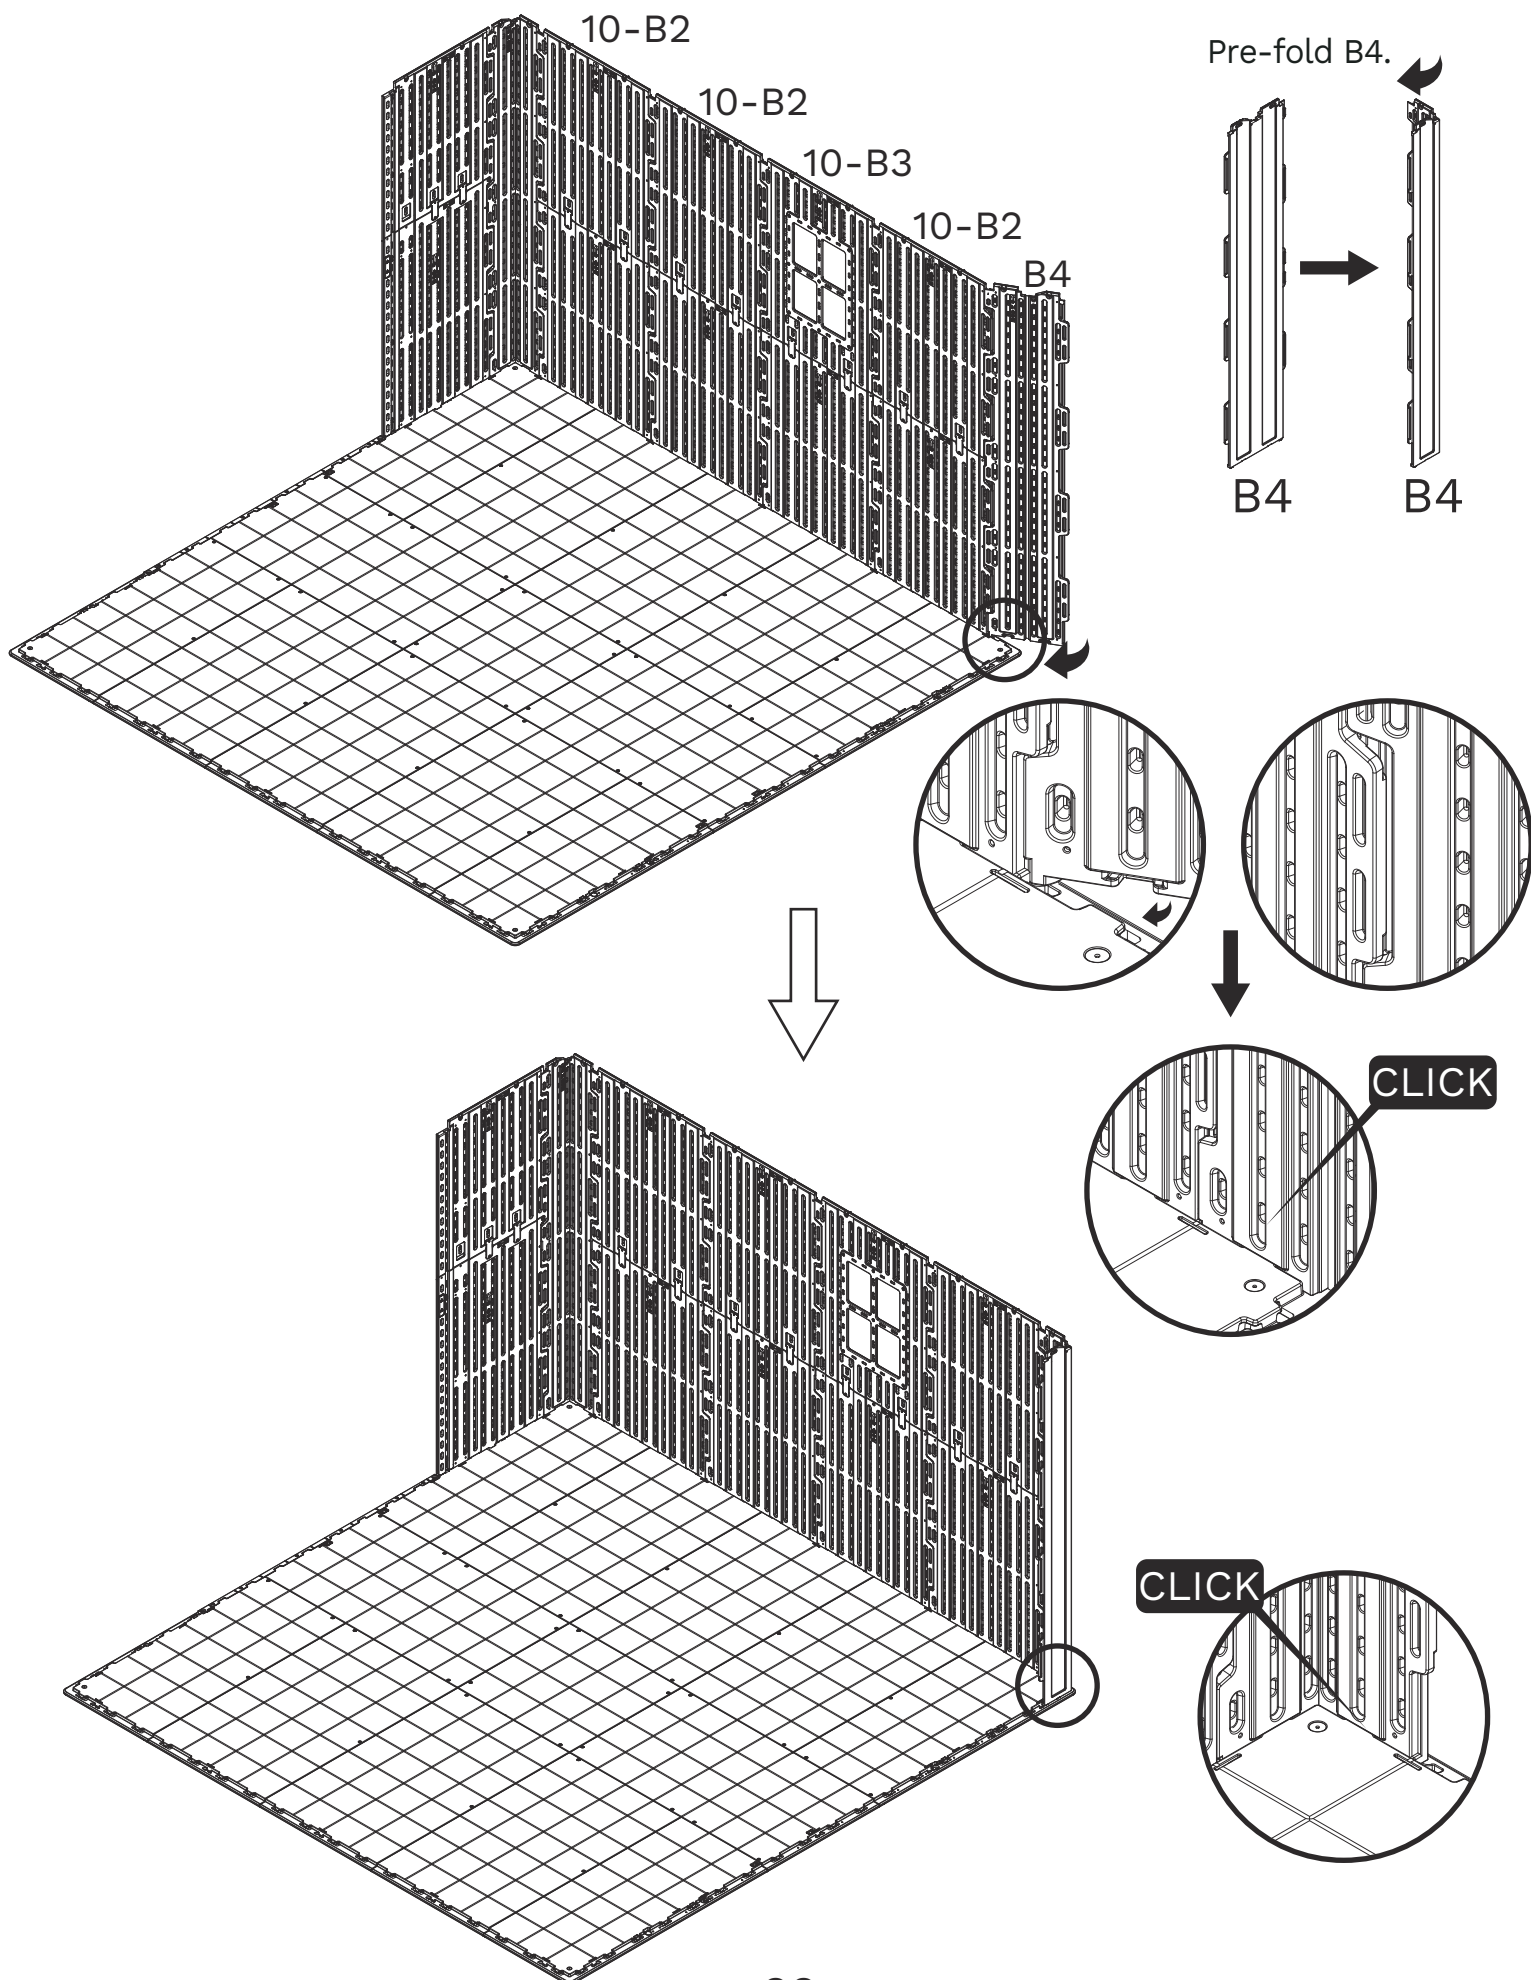


STEP 21

Please Install assembled 10-B2, 10-B2,10-B2, 10-B2 and B6 in order.

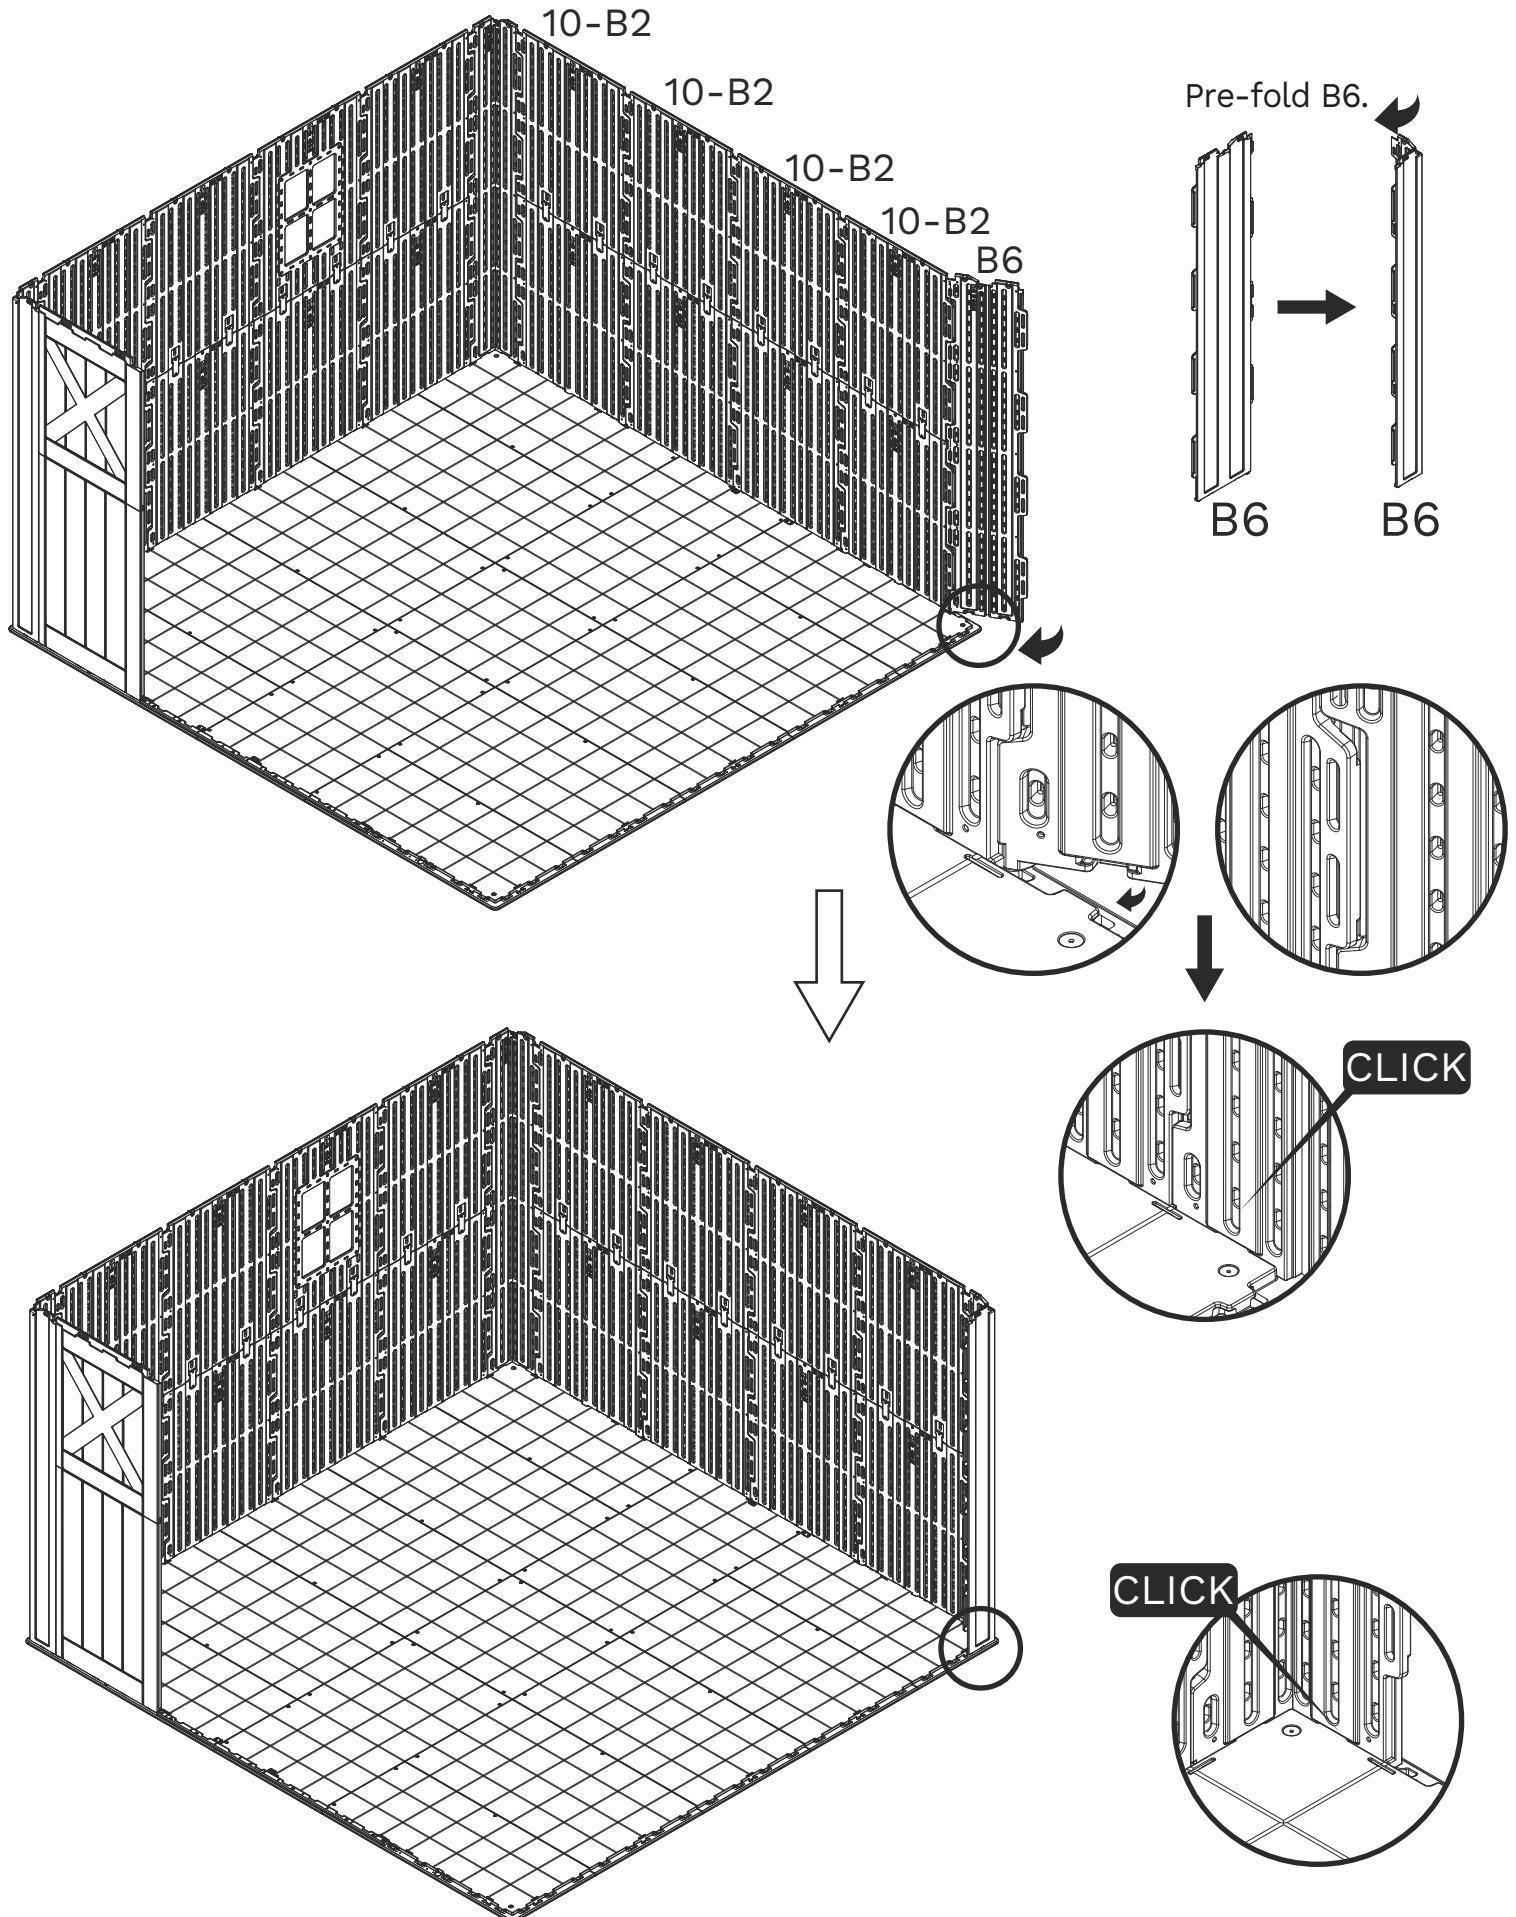


STEP 22






Please install the assembled 10-B2, 10-B2, 10-B3, 10-B2 and B4 in order.

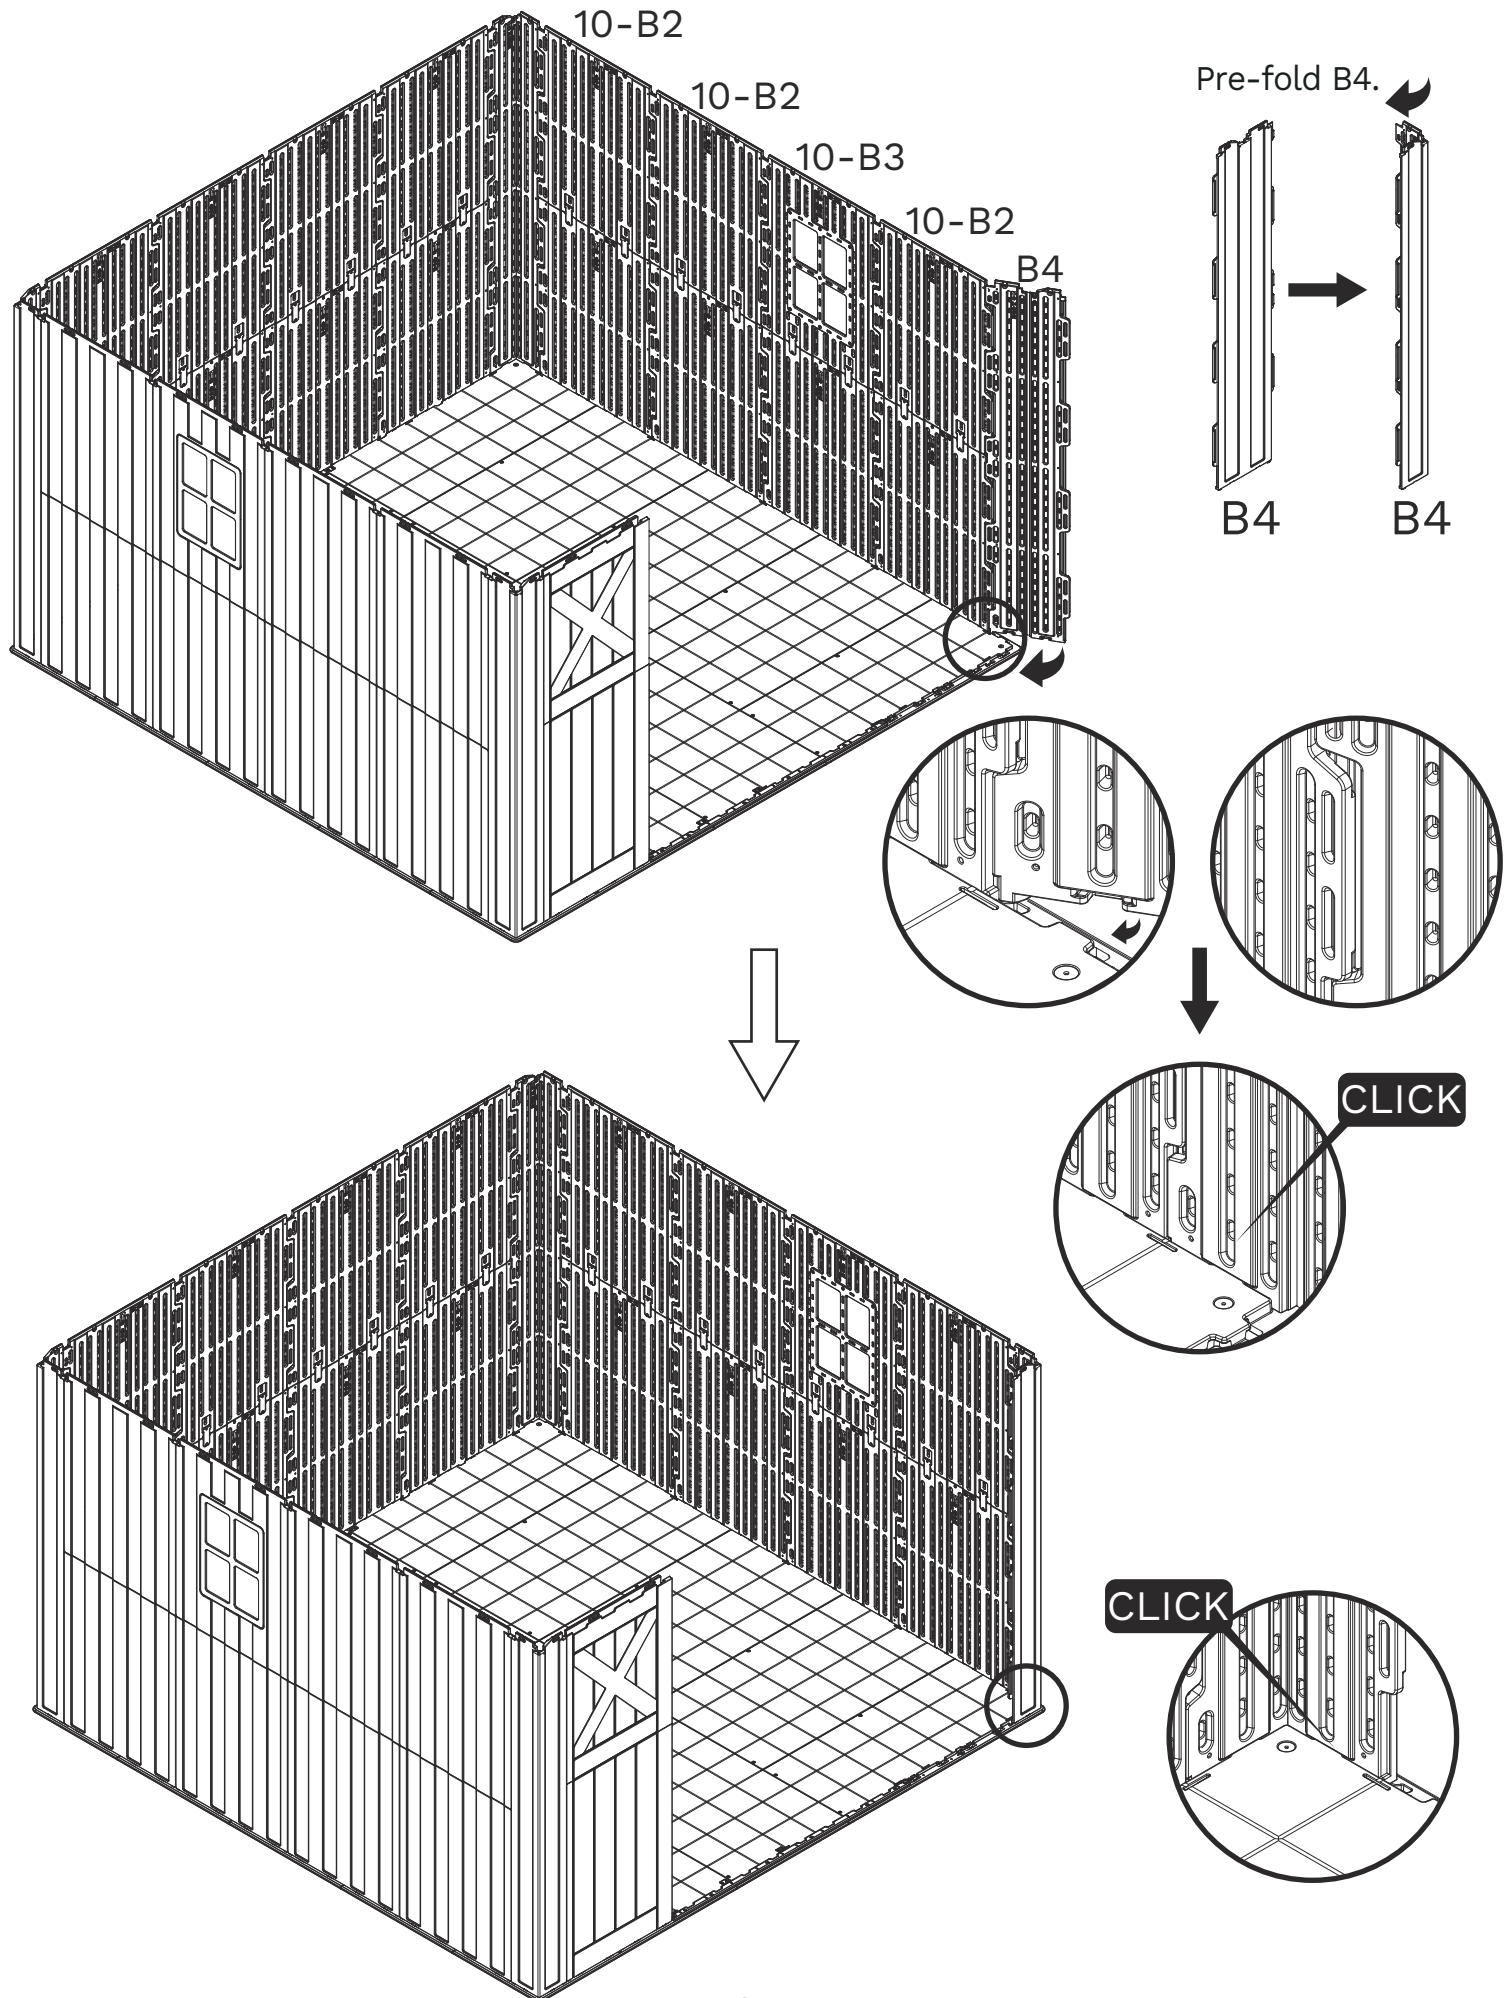

STEP 23




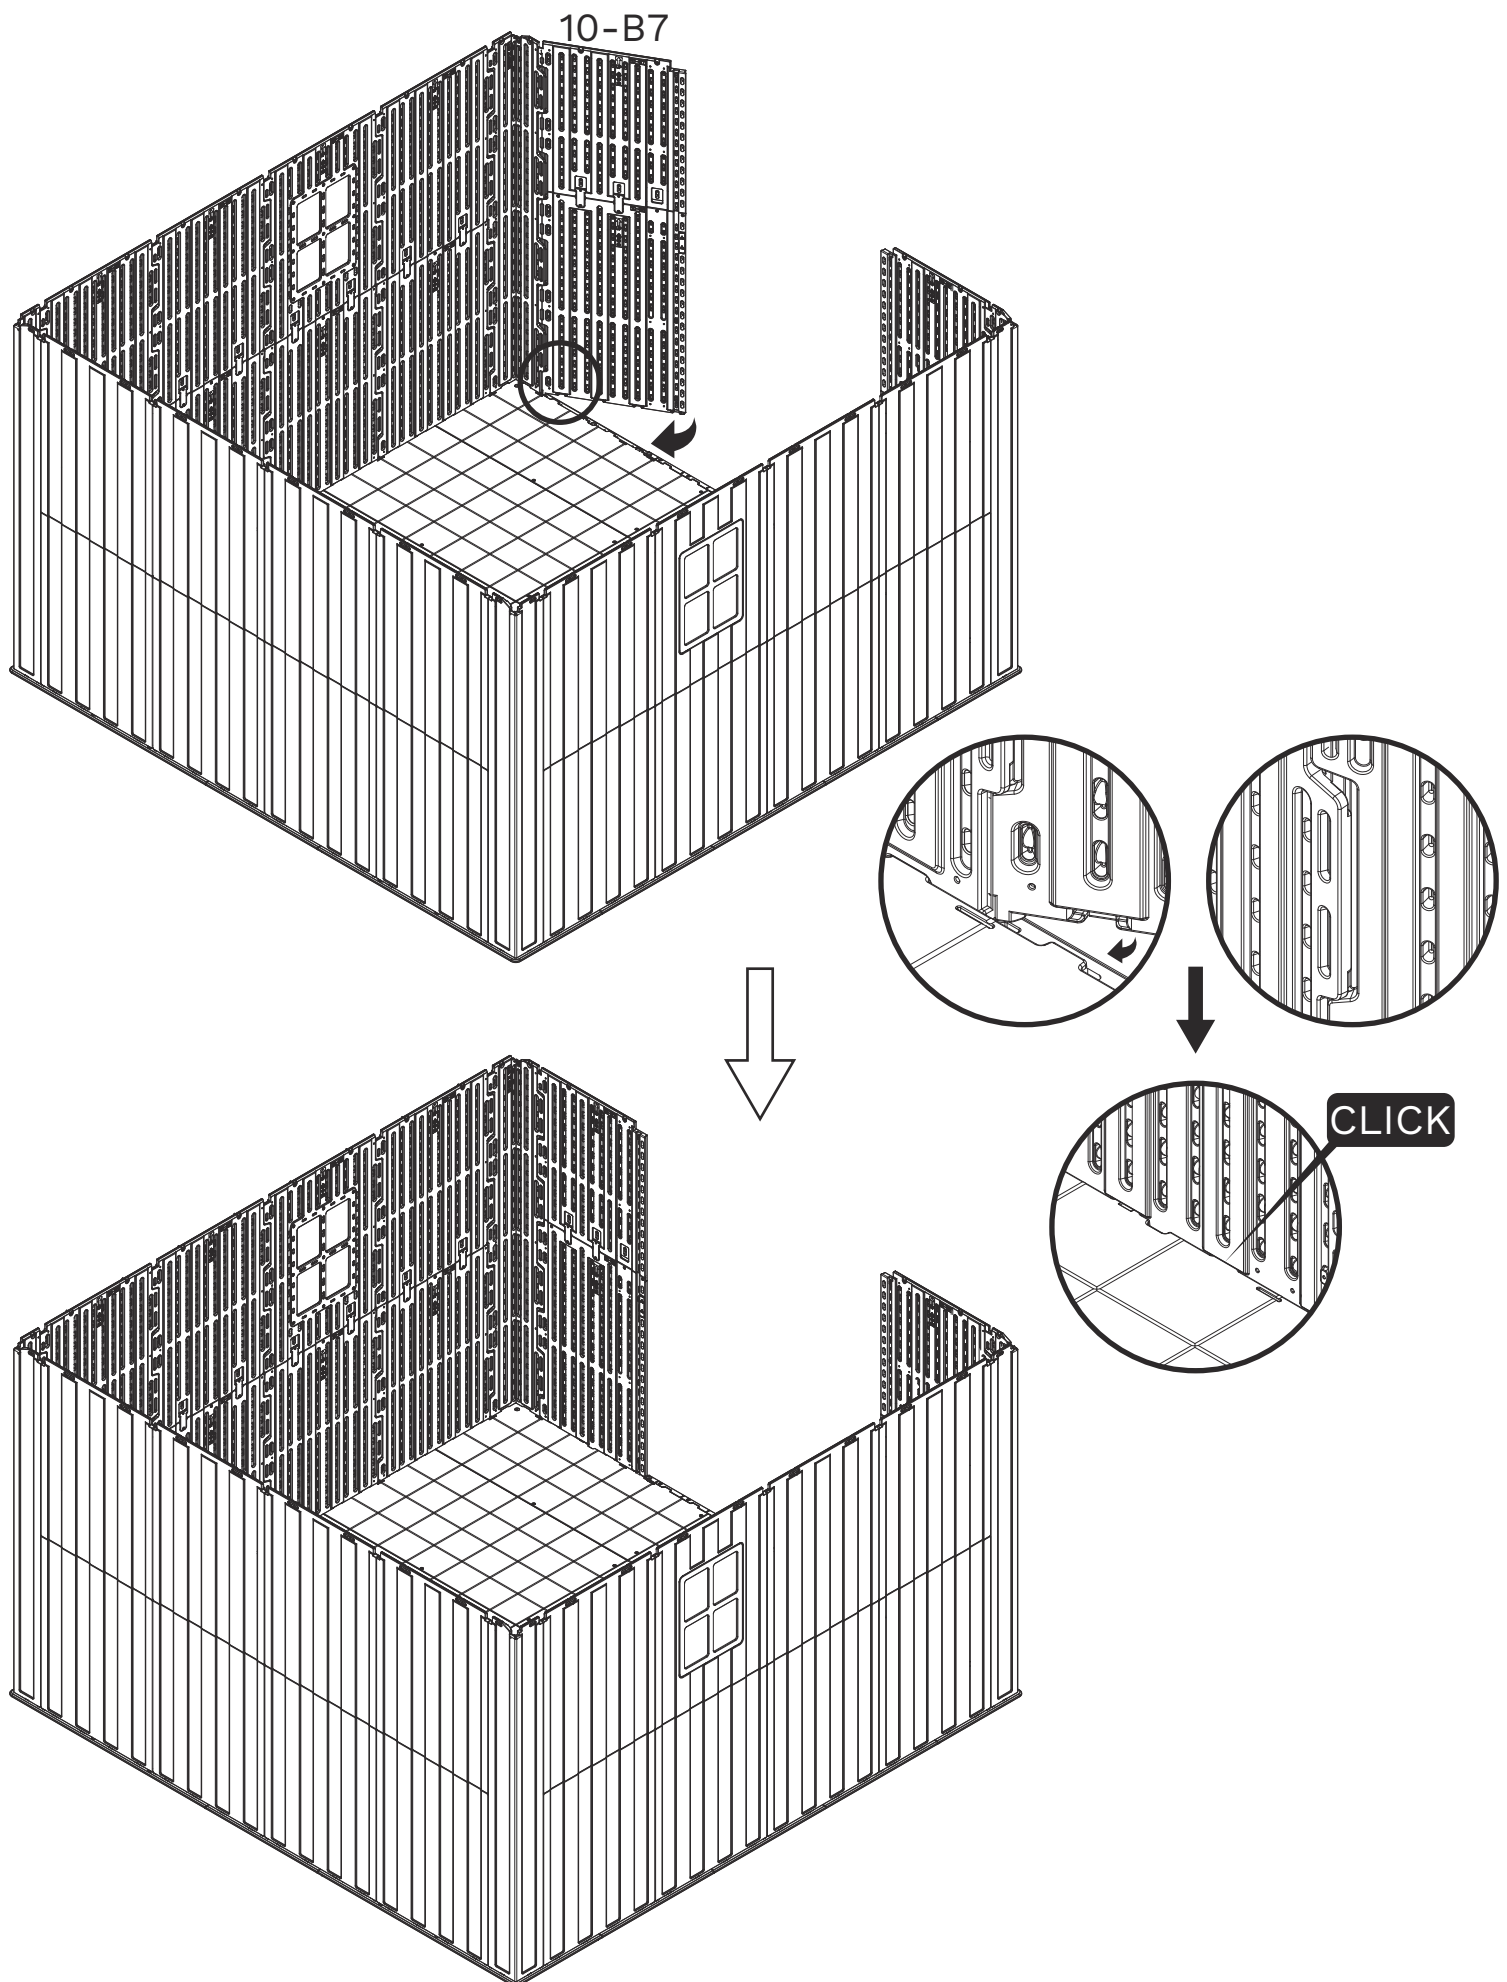


STEP 24

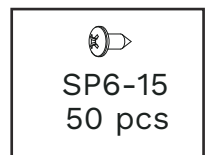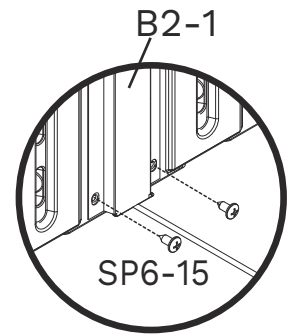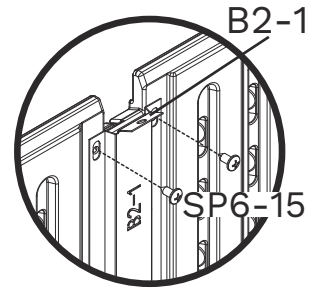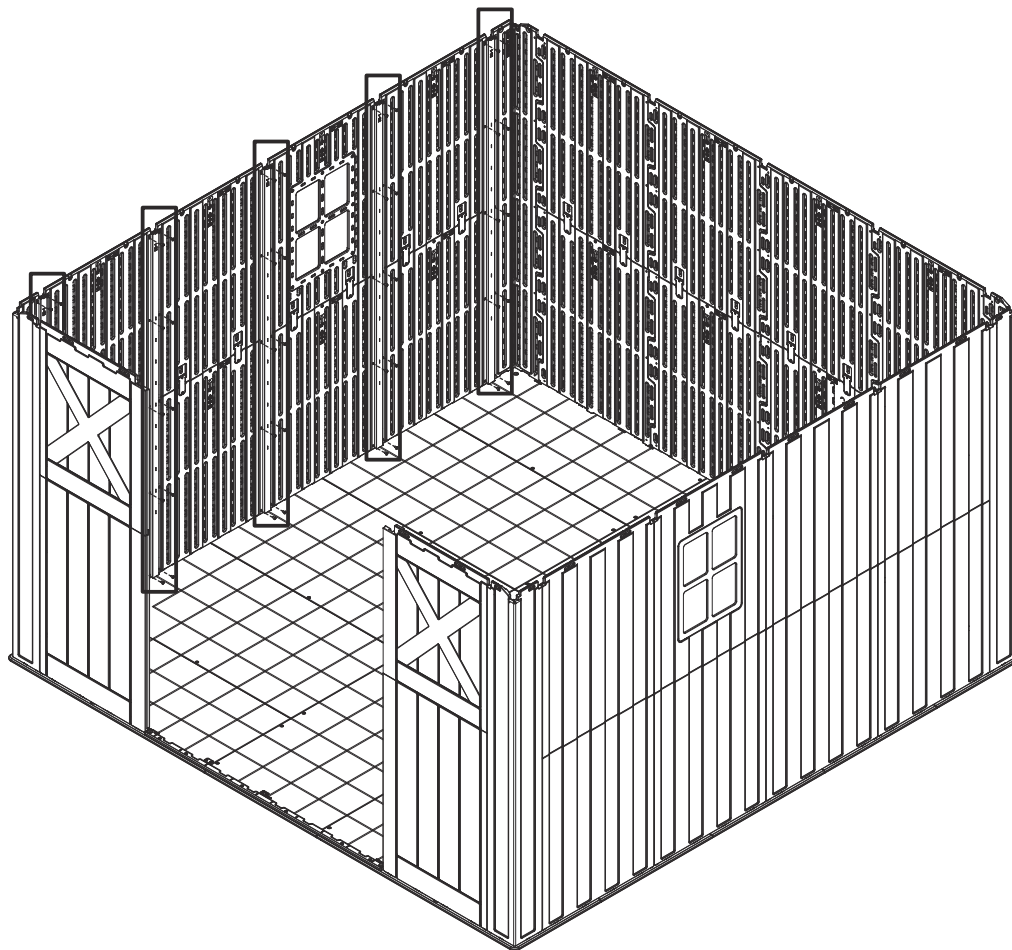


SP6-15

STEP 25

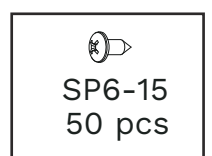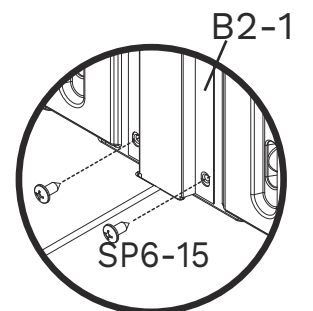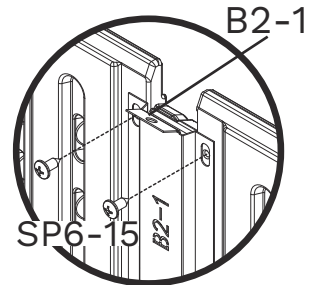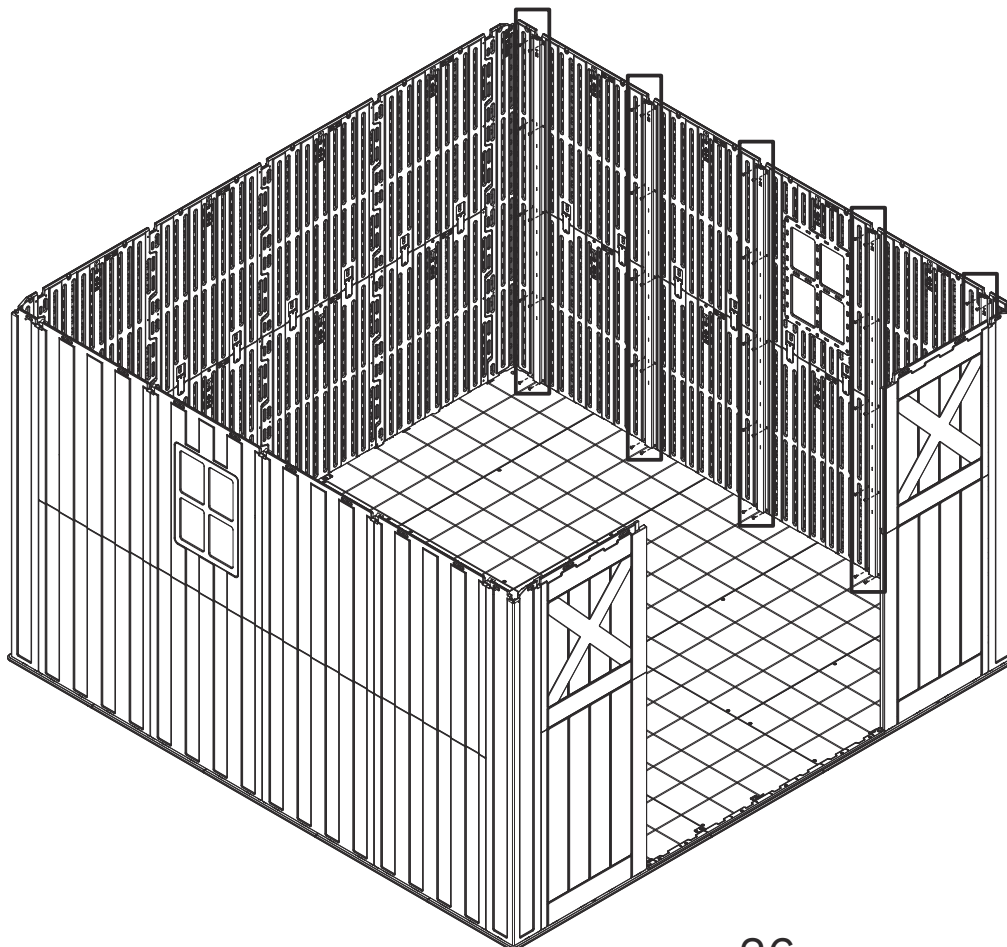


SP6-15



STEP 26

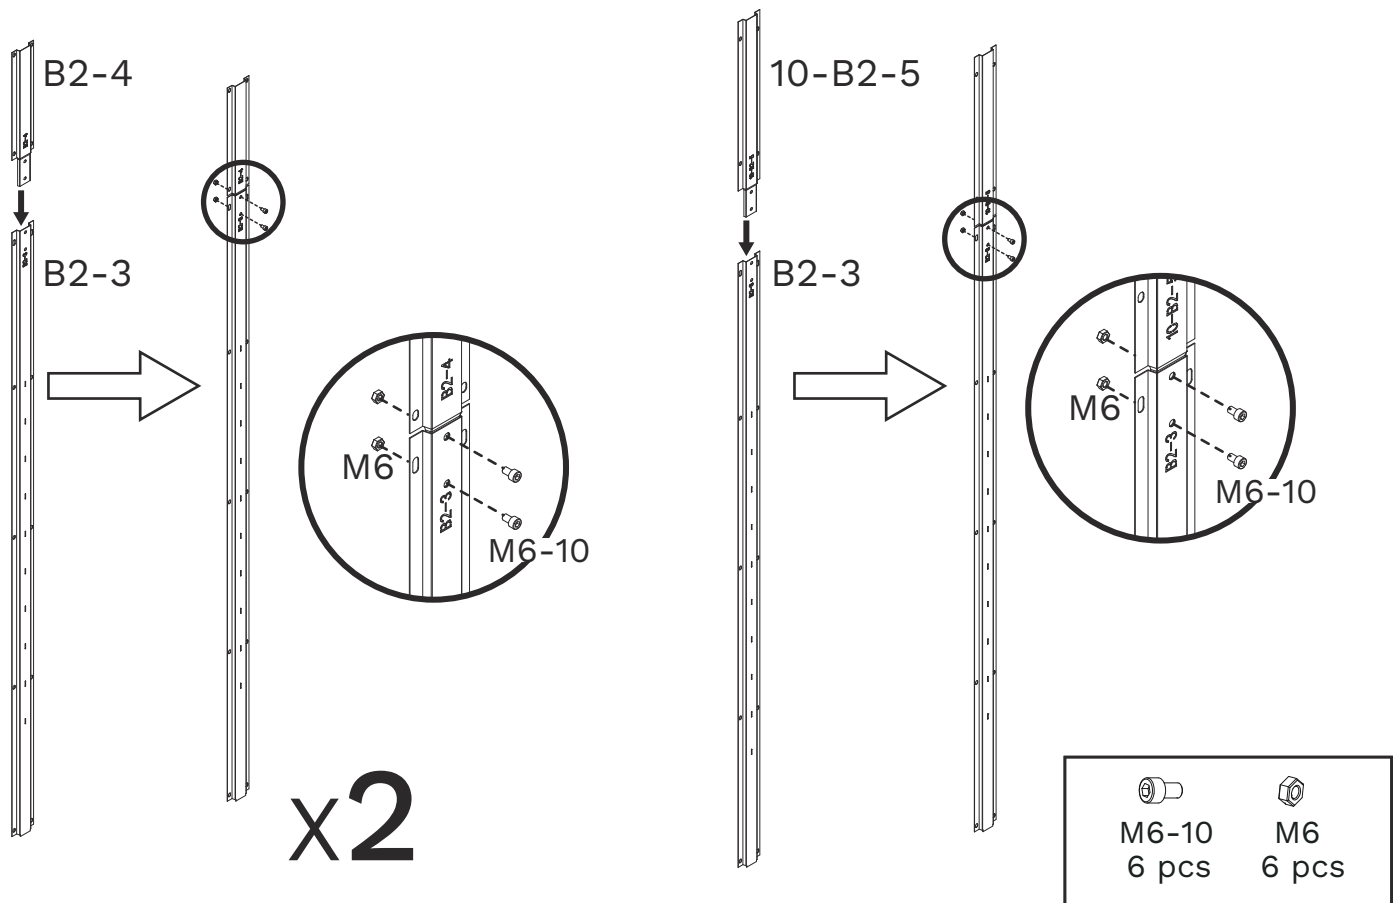



STEP 27

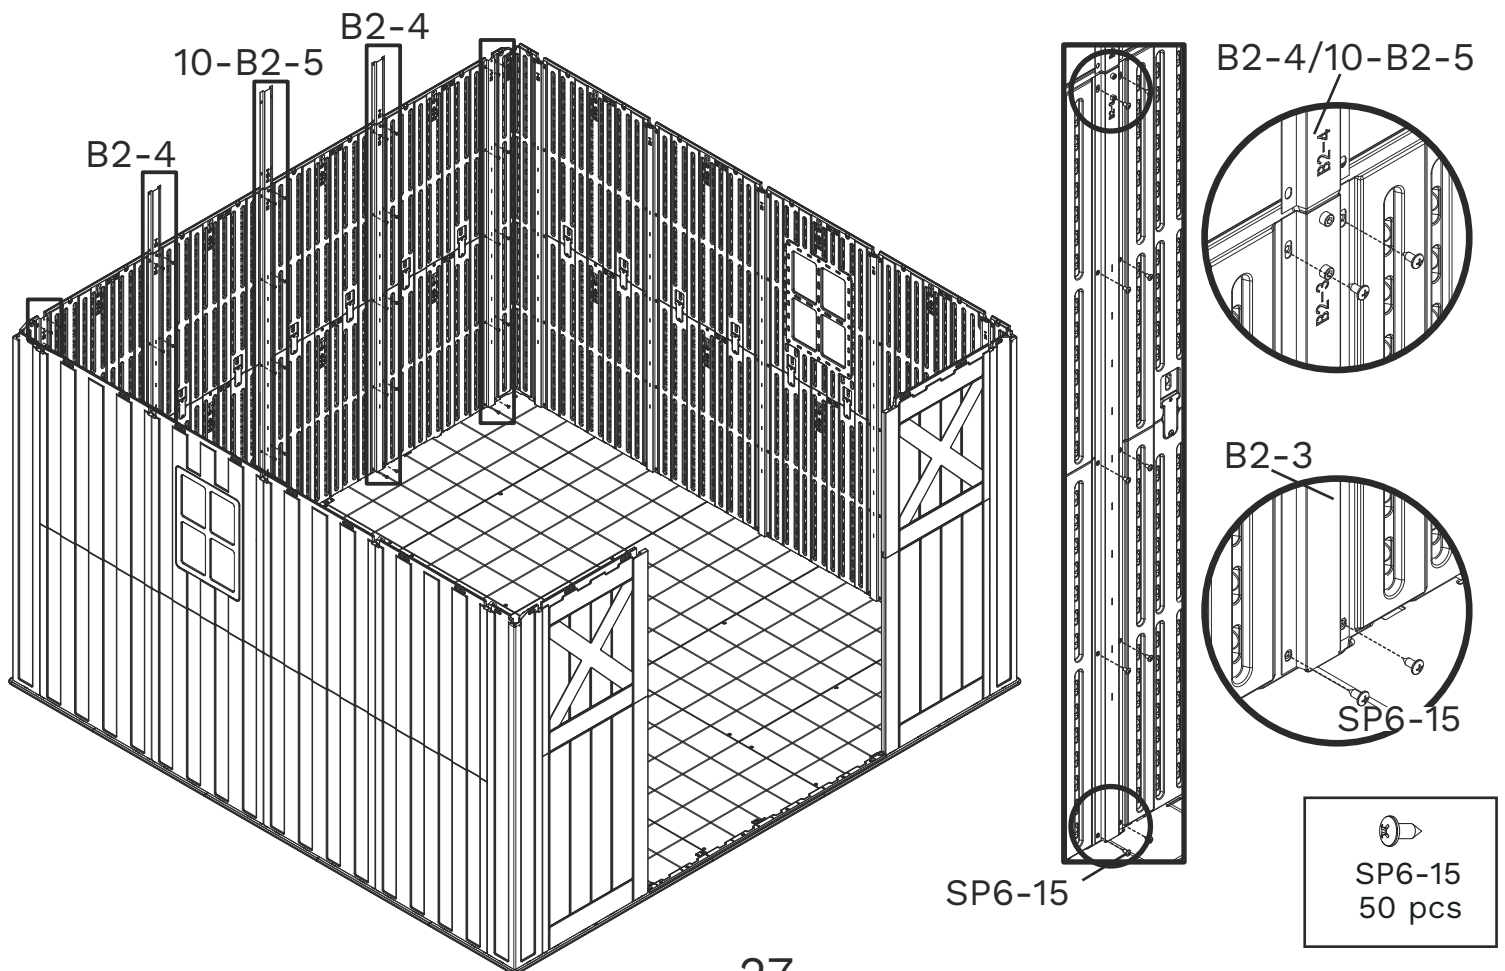

STEP 28

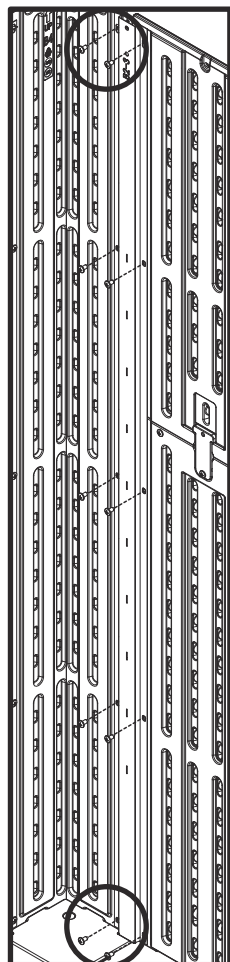
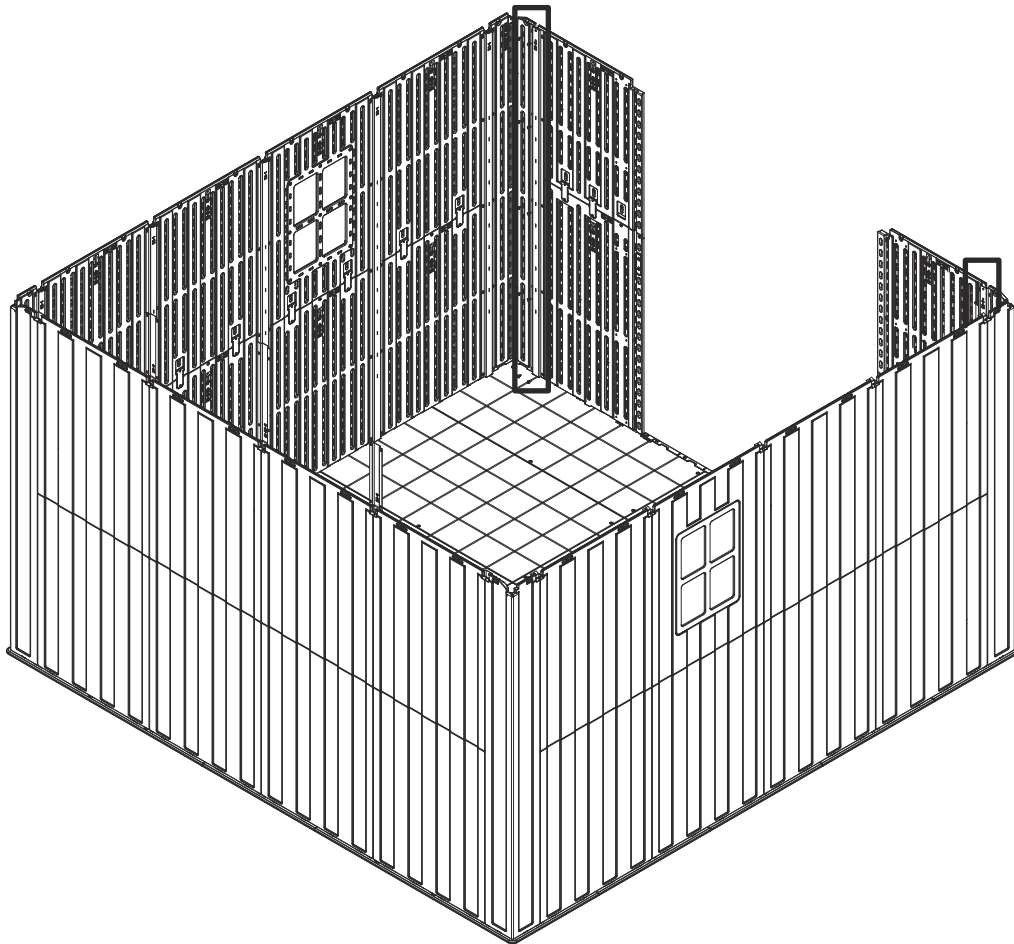



SP6-15

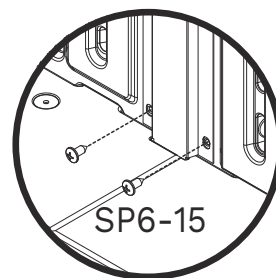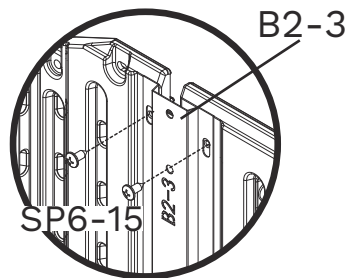


SP6-15
20 pcs

STEP 29

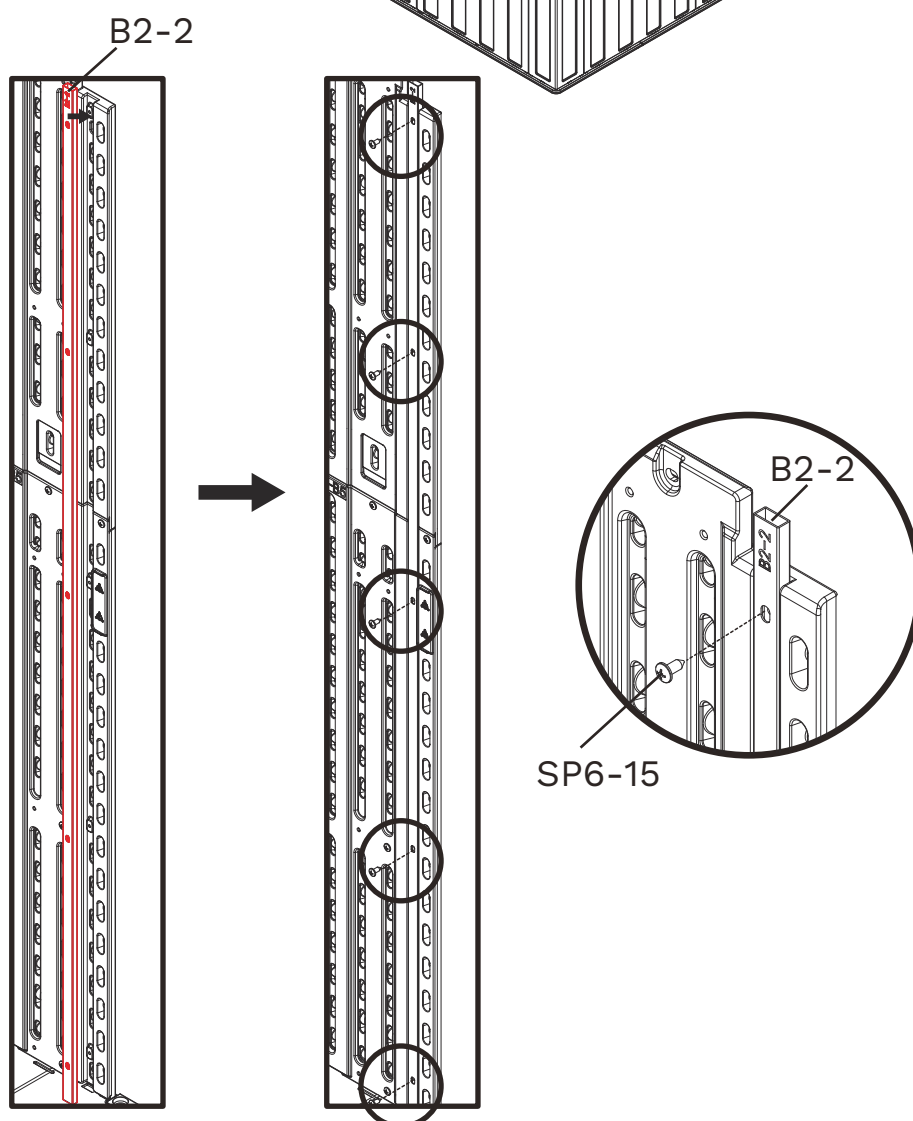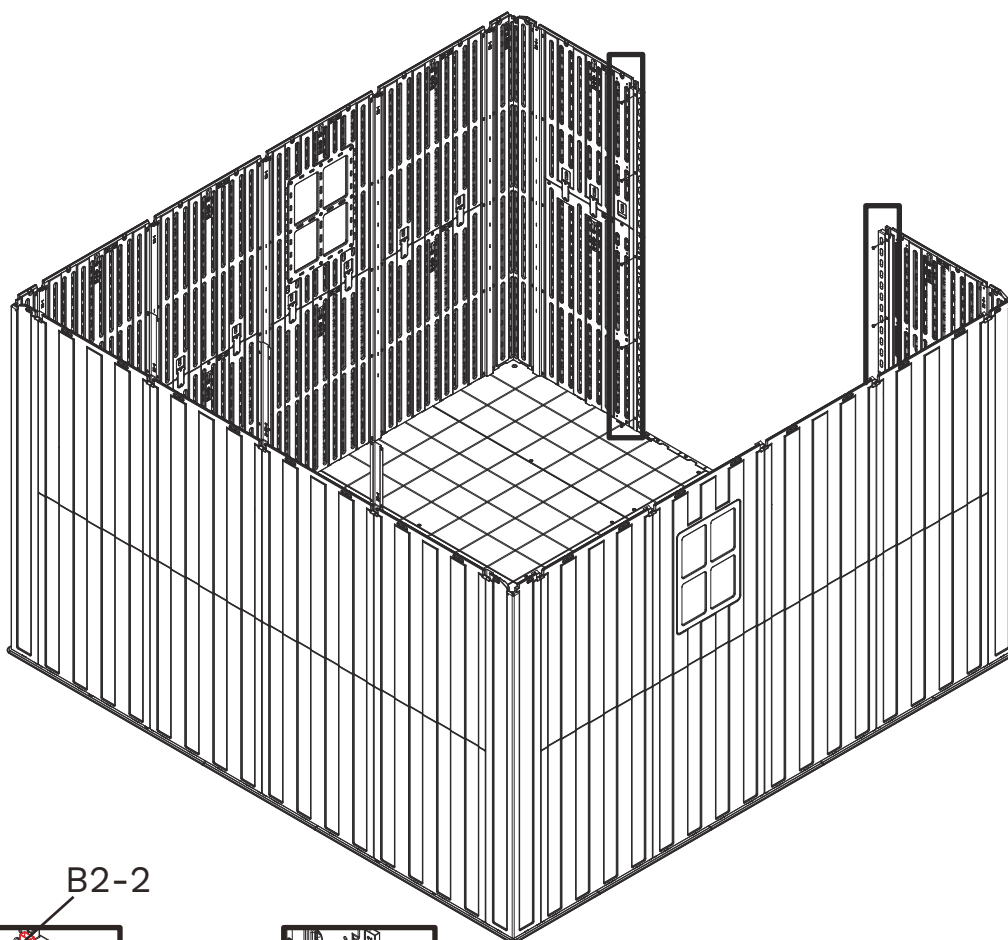



SP6-15
10 pcs

STEP 30

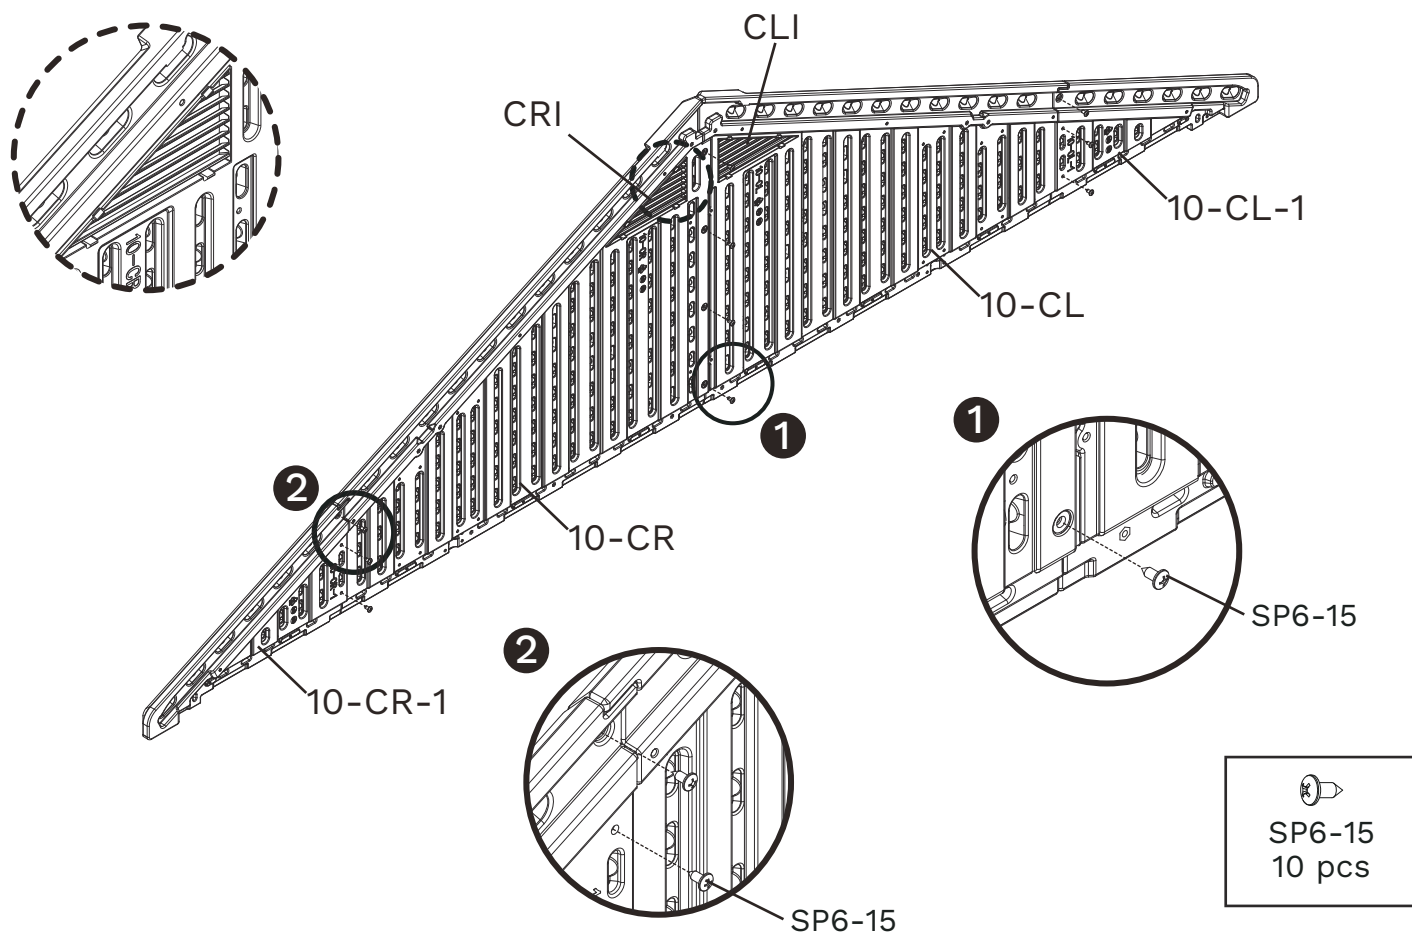


STEP 31

For Front Door

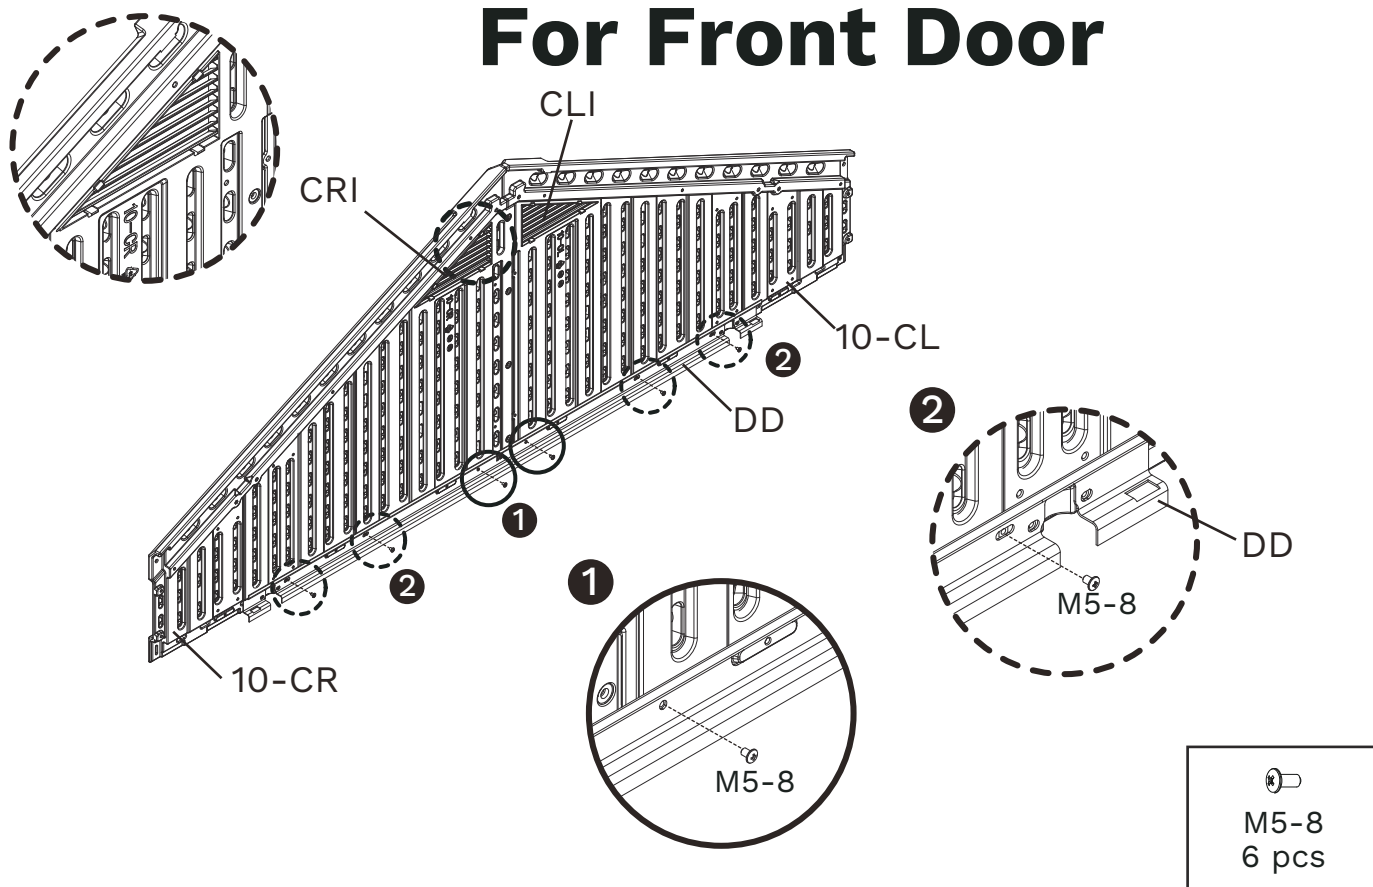


STEP 32


For Front Door

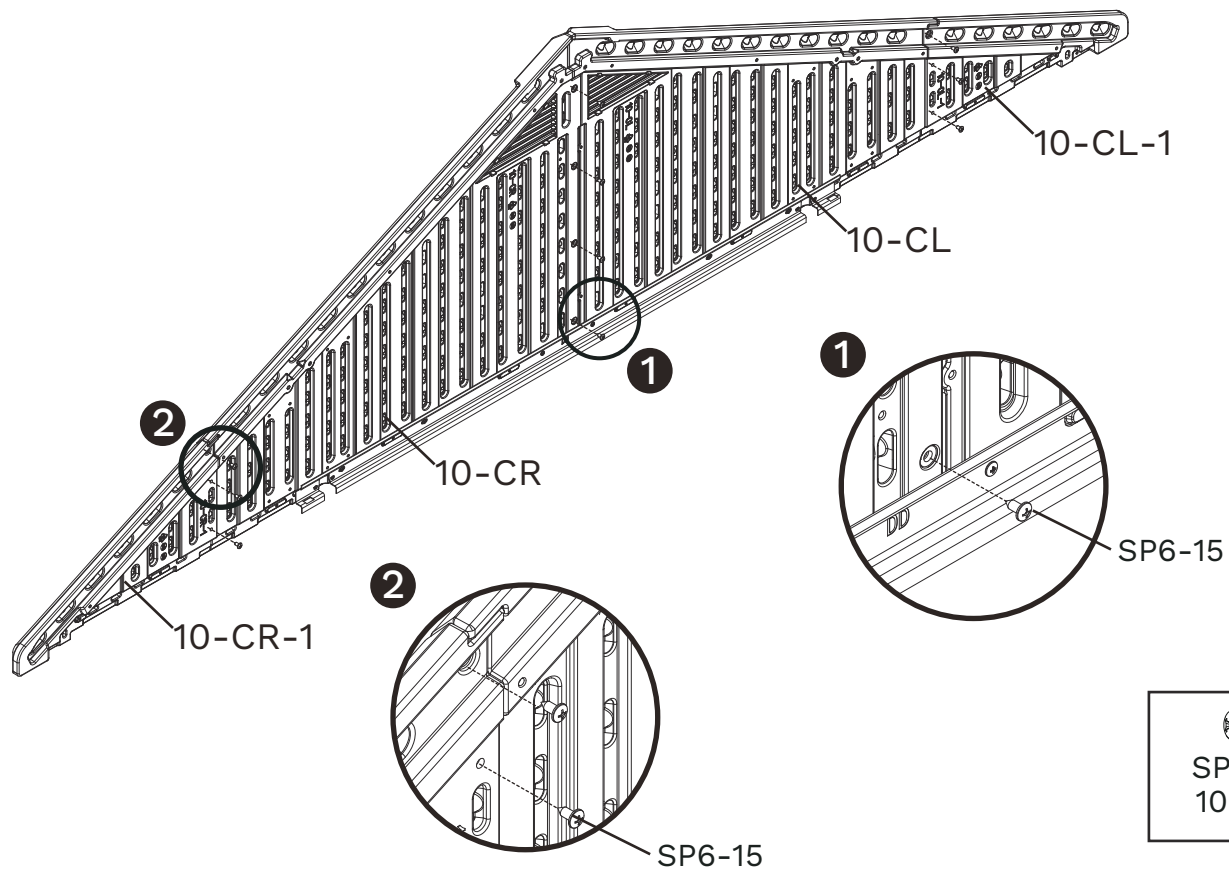

STEP 33

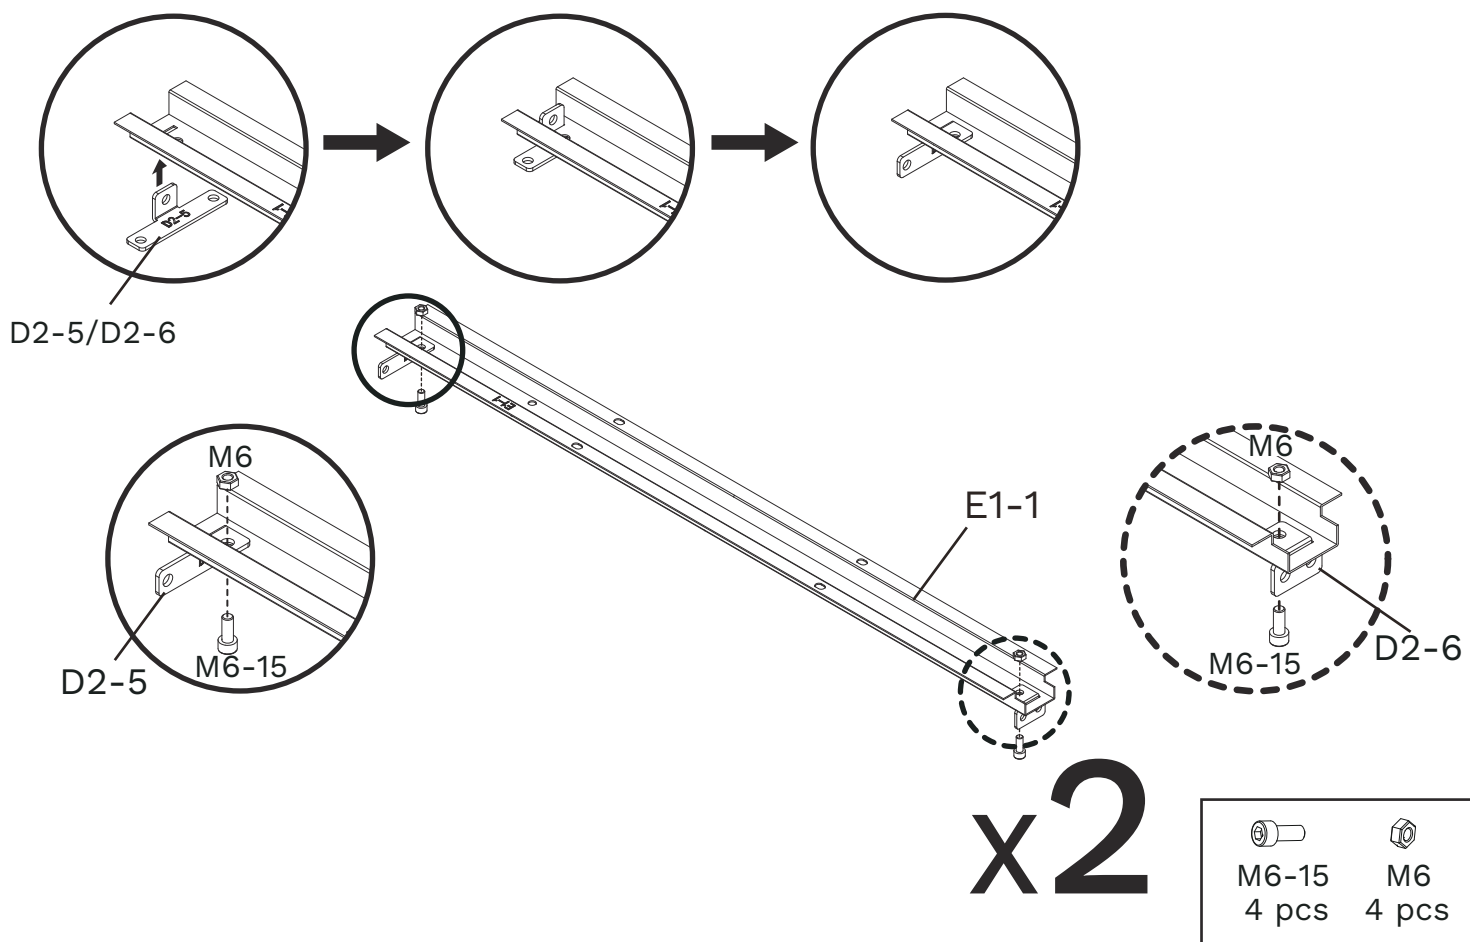


STEP 34




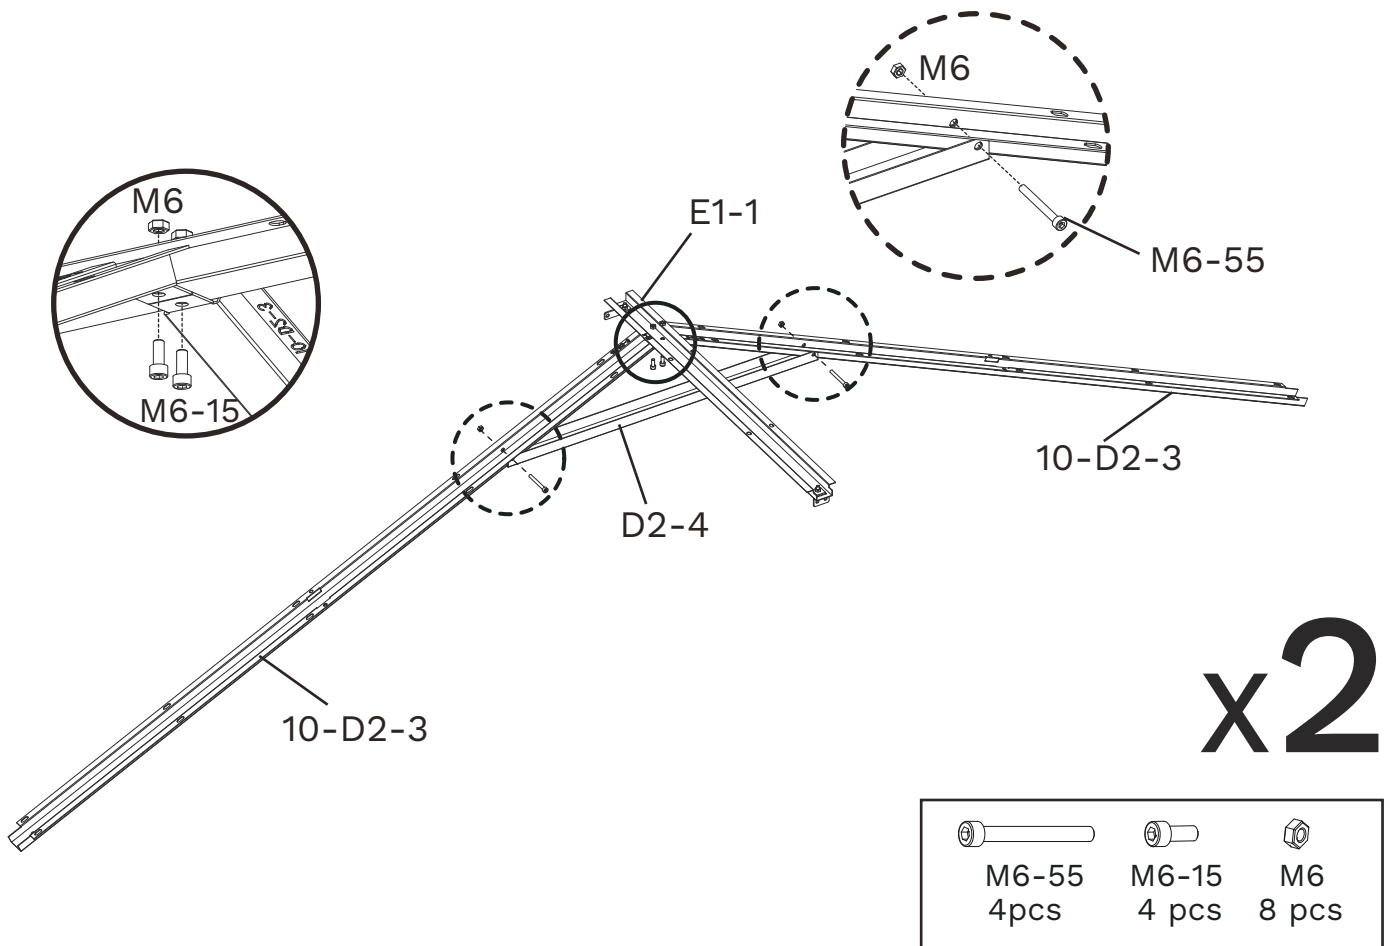


STEP 35



Refer to STEP 33 to install the D2-5.

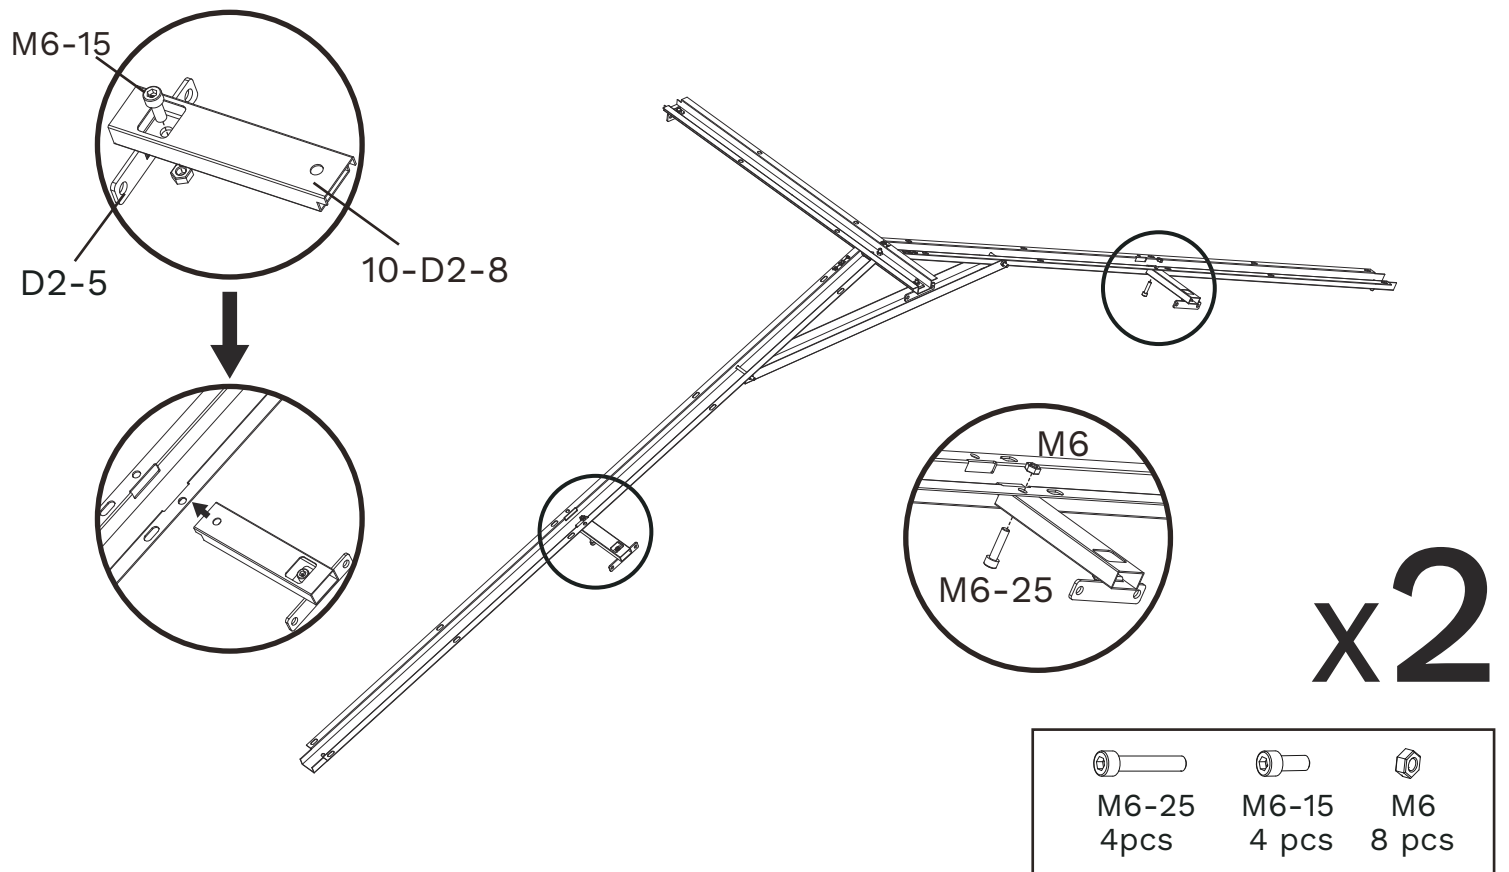


STEP 36

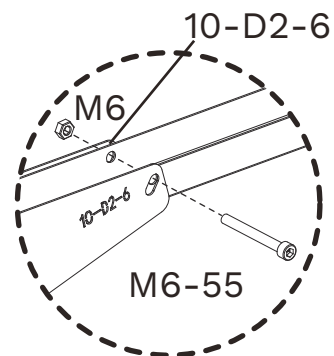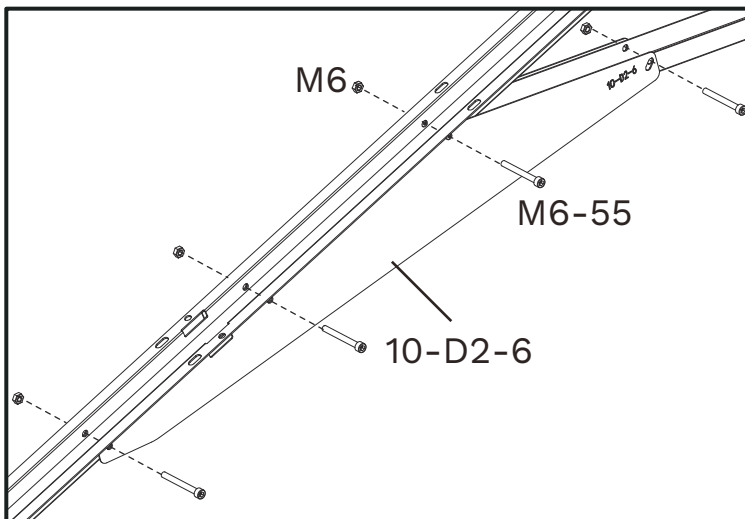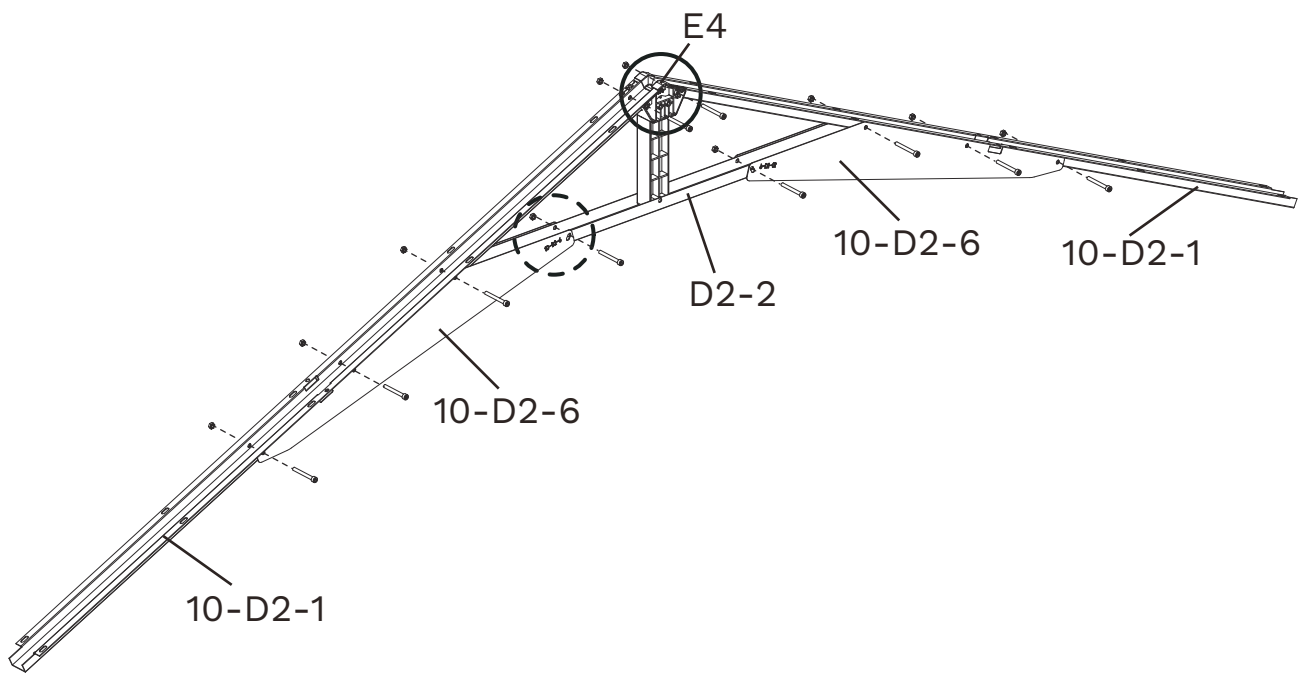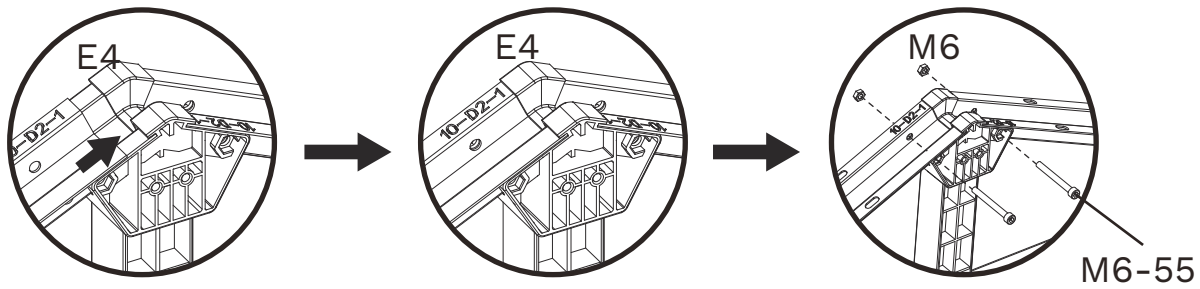


x3

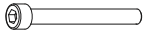	
M6-55 30 pcs	M6 30 pcs

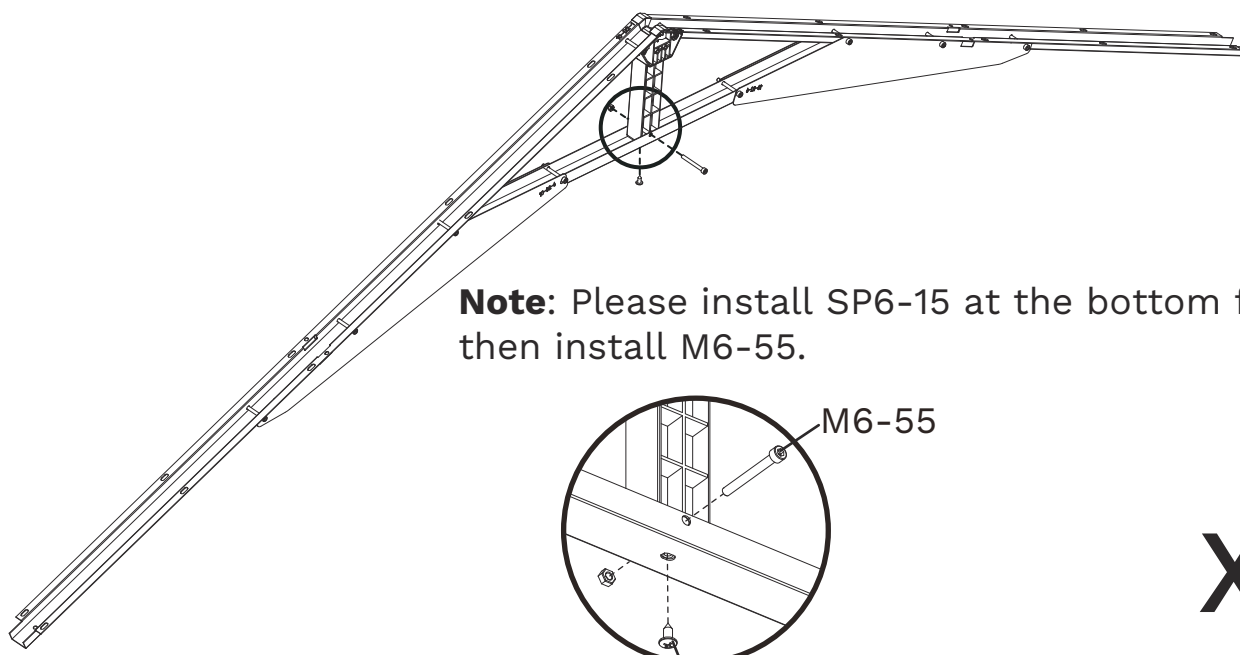


STEP 37

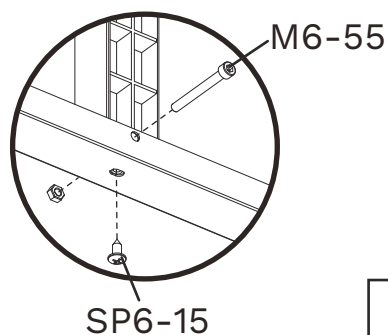


Note: Please install SP6-15 at the bottom first, then install M6-55.



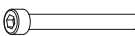

x3

		
M6-55	SP6-15	M6
3 pcs	3 pcs	3 pcs




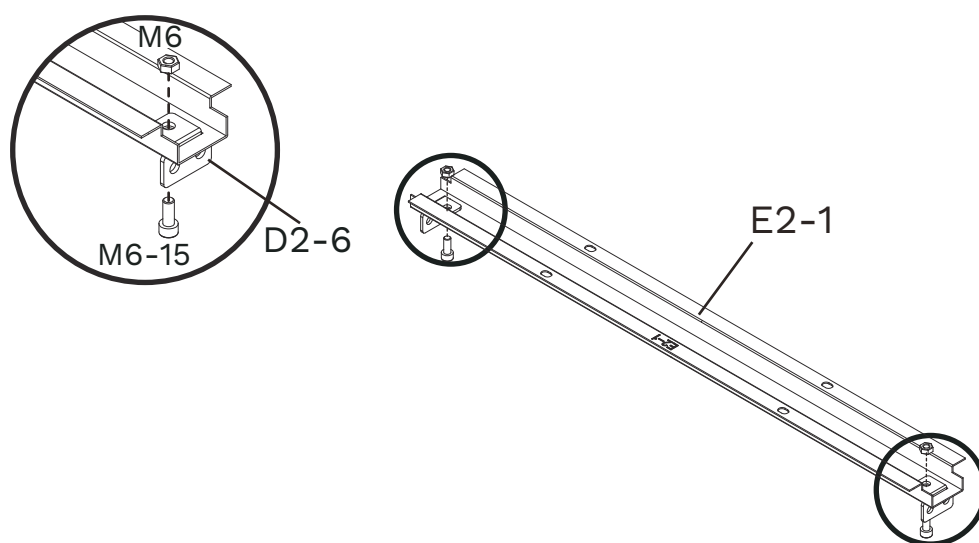
STEP 38




x2

	
M6-15	M6
4 pcs	4 pcs

STEP 39


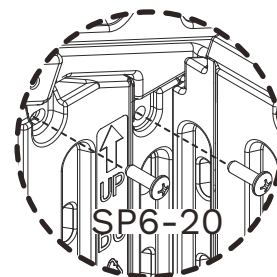
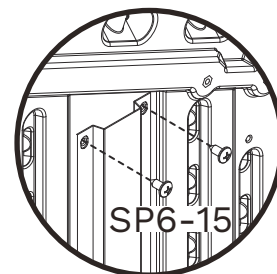
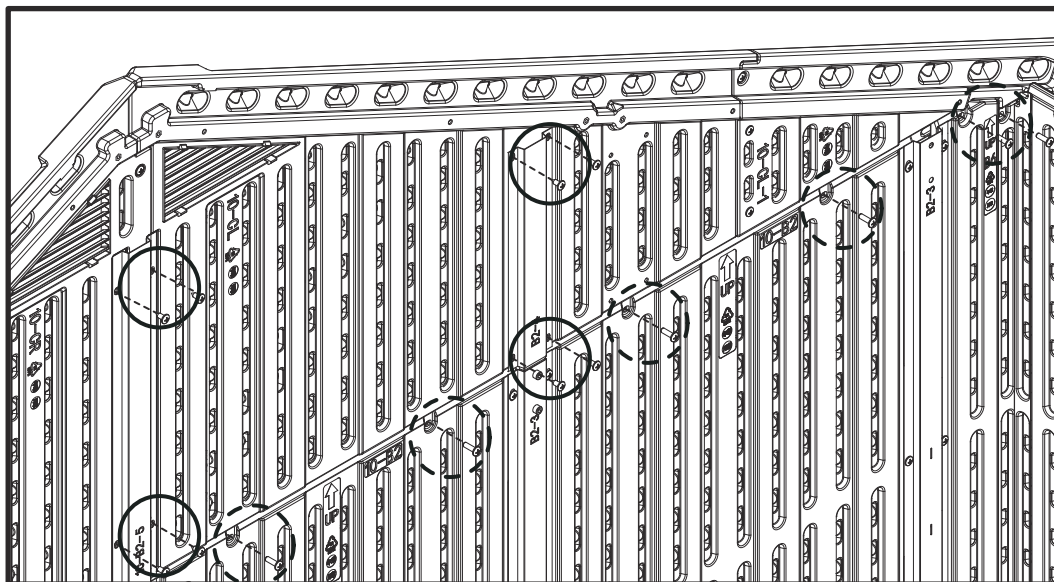
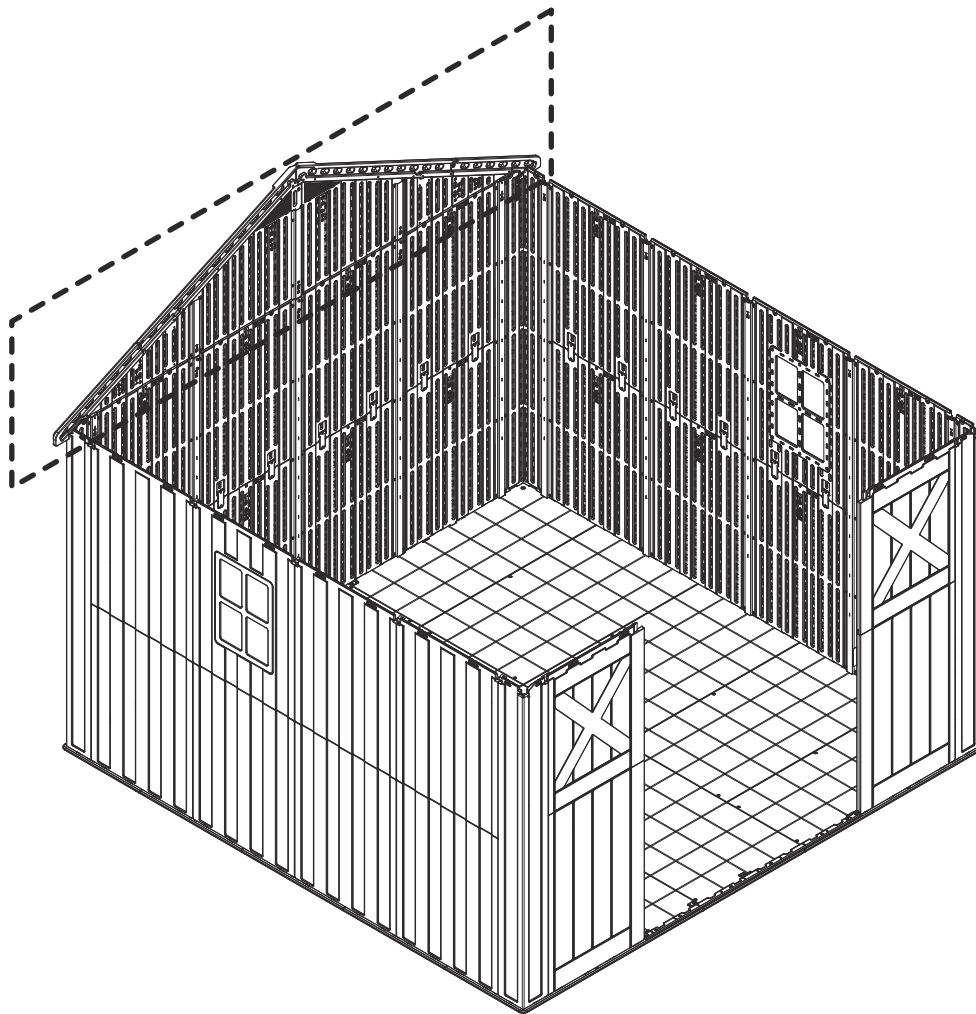



SP6-20
12 pcs


SP6-15
12 pcs

STEP 40





Place the triangular panel assembled in STEP 35 (as shown in the figure) in the corresponding position on the walls.

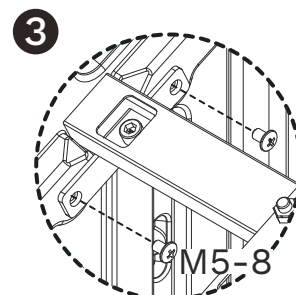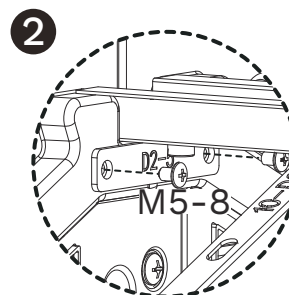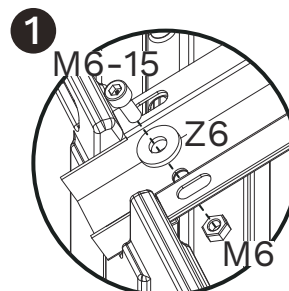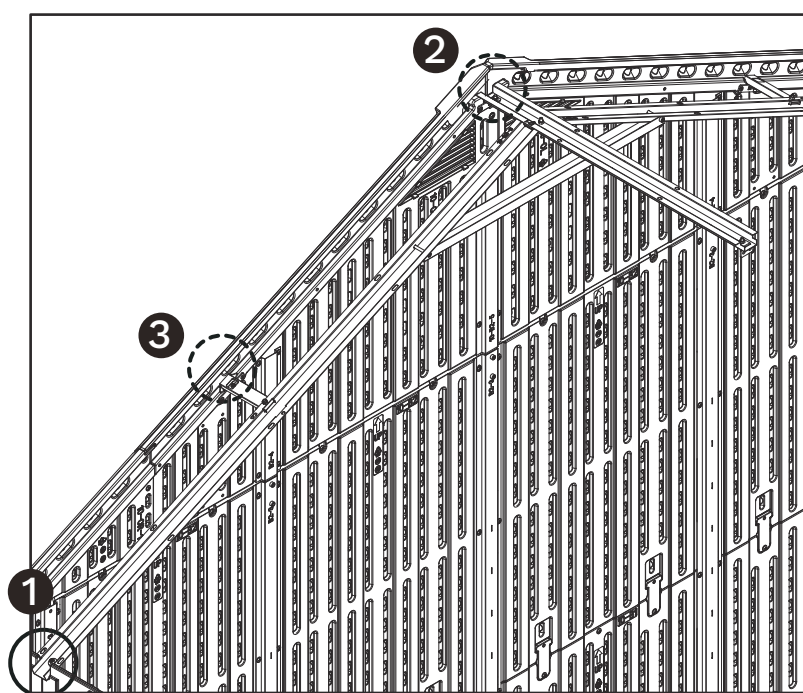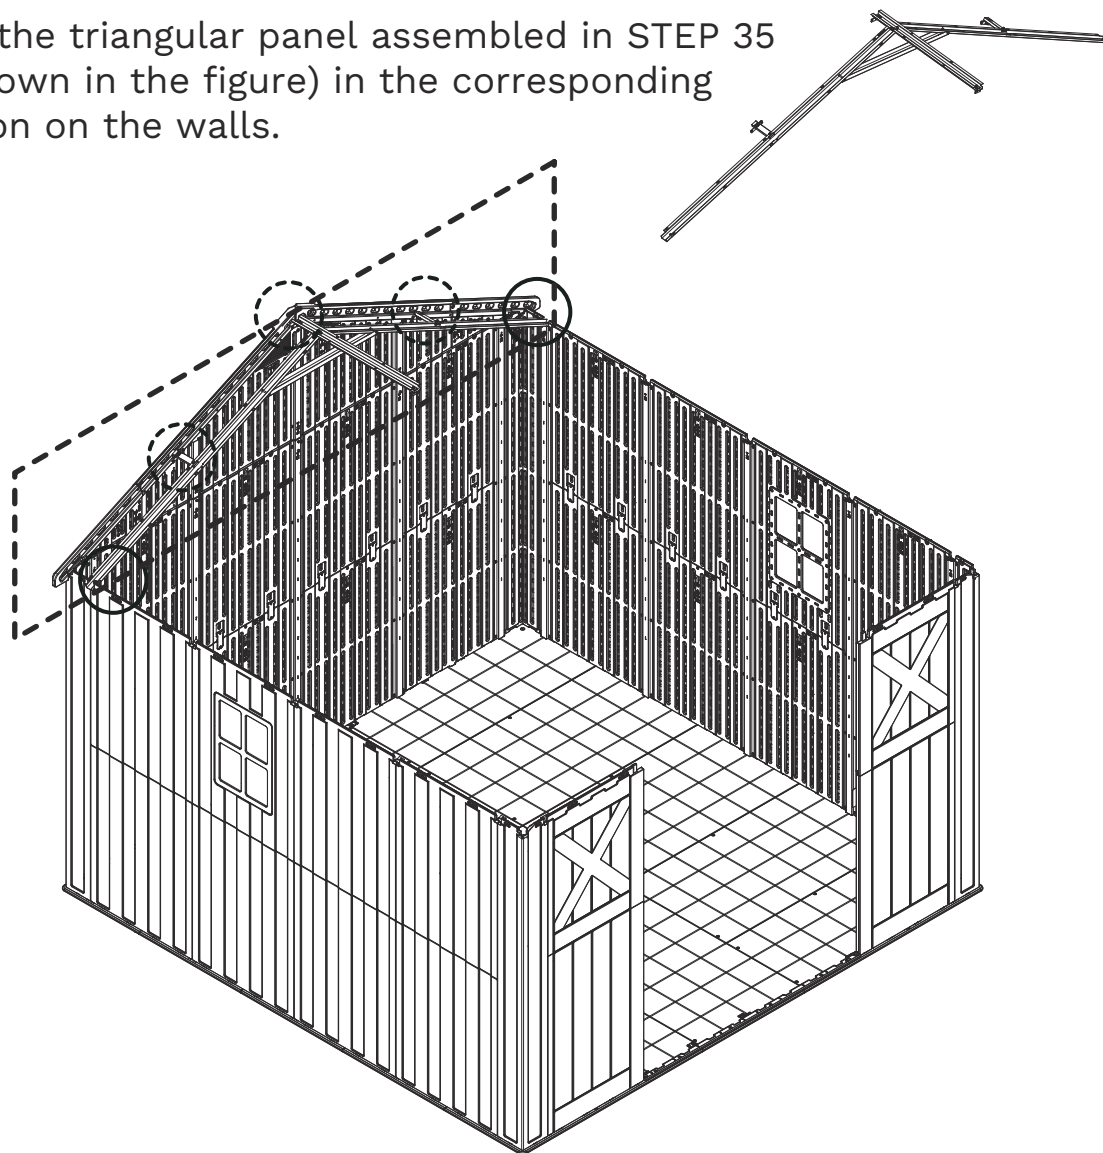





M6-15	M6	Z6	M5-8
2 pcs	2 pcs	2 pcs	6 pcs

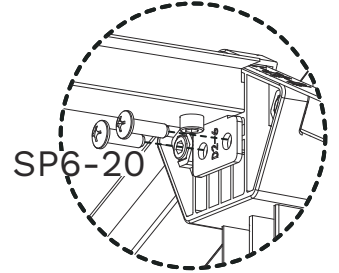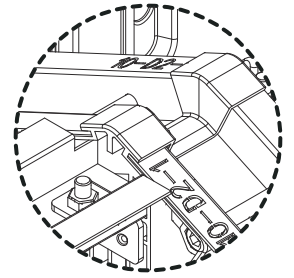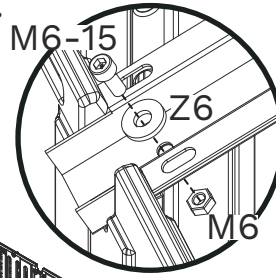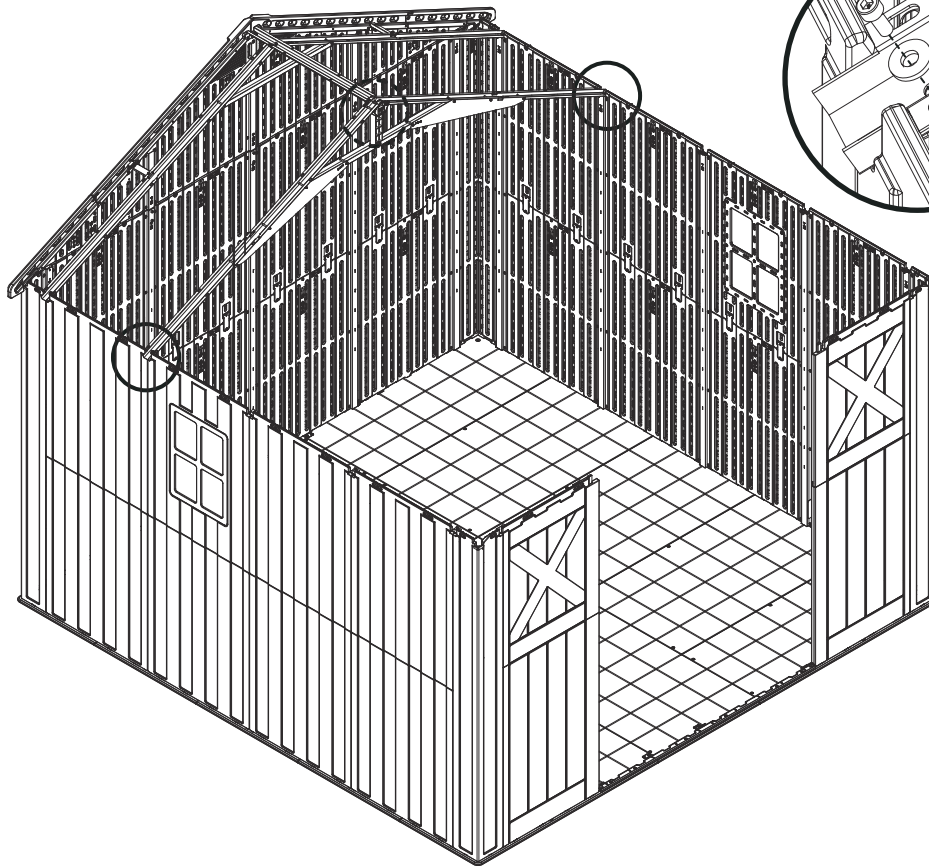STEP 41

Place the triangular panel assembled in STEP 37 in the corresponding position on the walls.







Note: Before installing the screws, please make sure that E1-1 is snapped into the corresponding position.)





			
M6-15	M6	Z6	SP6-20
2 pcs	2 pcs	2 pcs	2 pcs

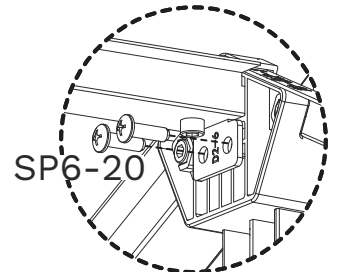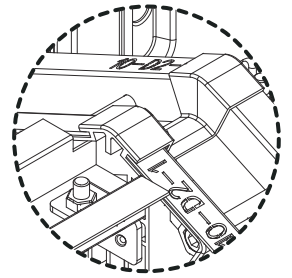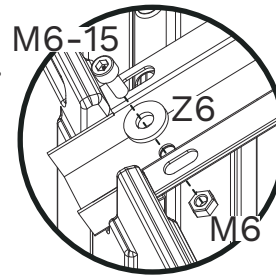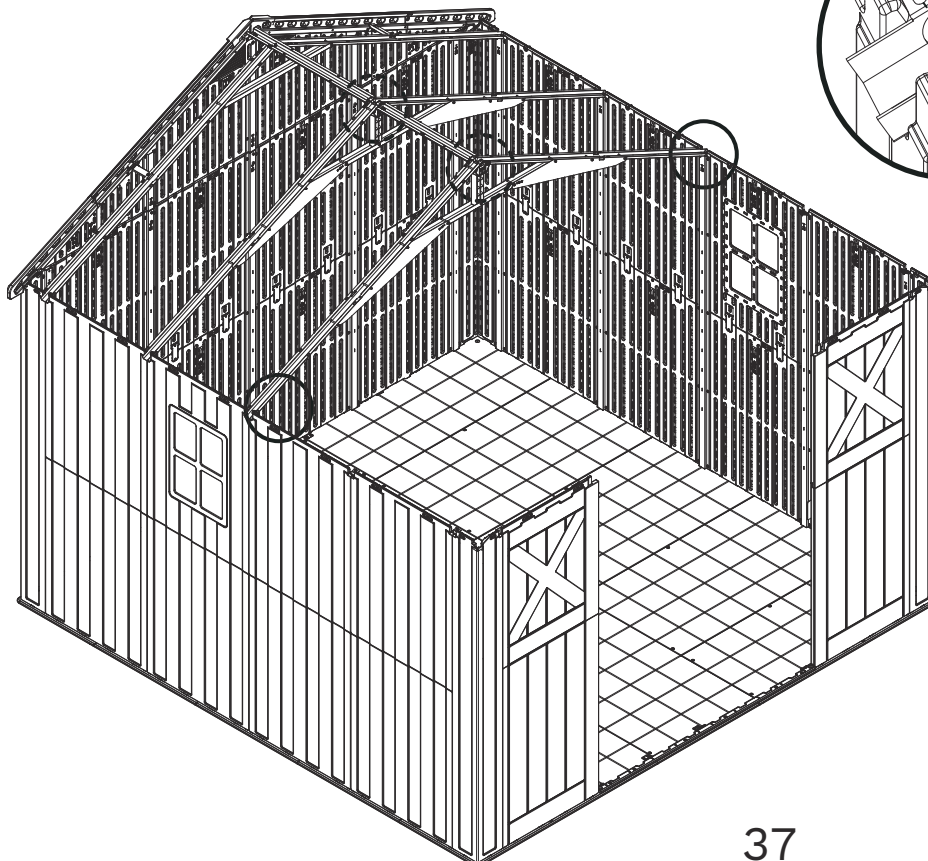STEP 42

Install E2-1 first and then place the triangular panel assembled in STEP 37 in the corresponding position on the wall.




Note: Before installing the screws, please make sure that E2-1 is snapped into the corresponding position.)




			
M6-15	M6	Z6	SP6-20
2 pcs	2 pcs	2 pcs	4 pcs



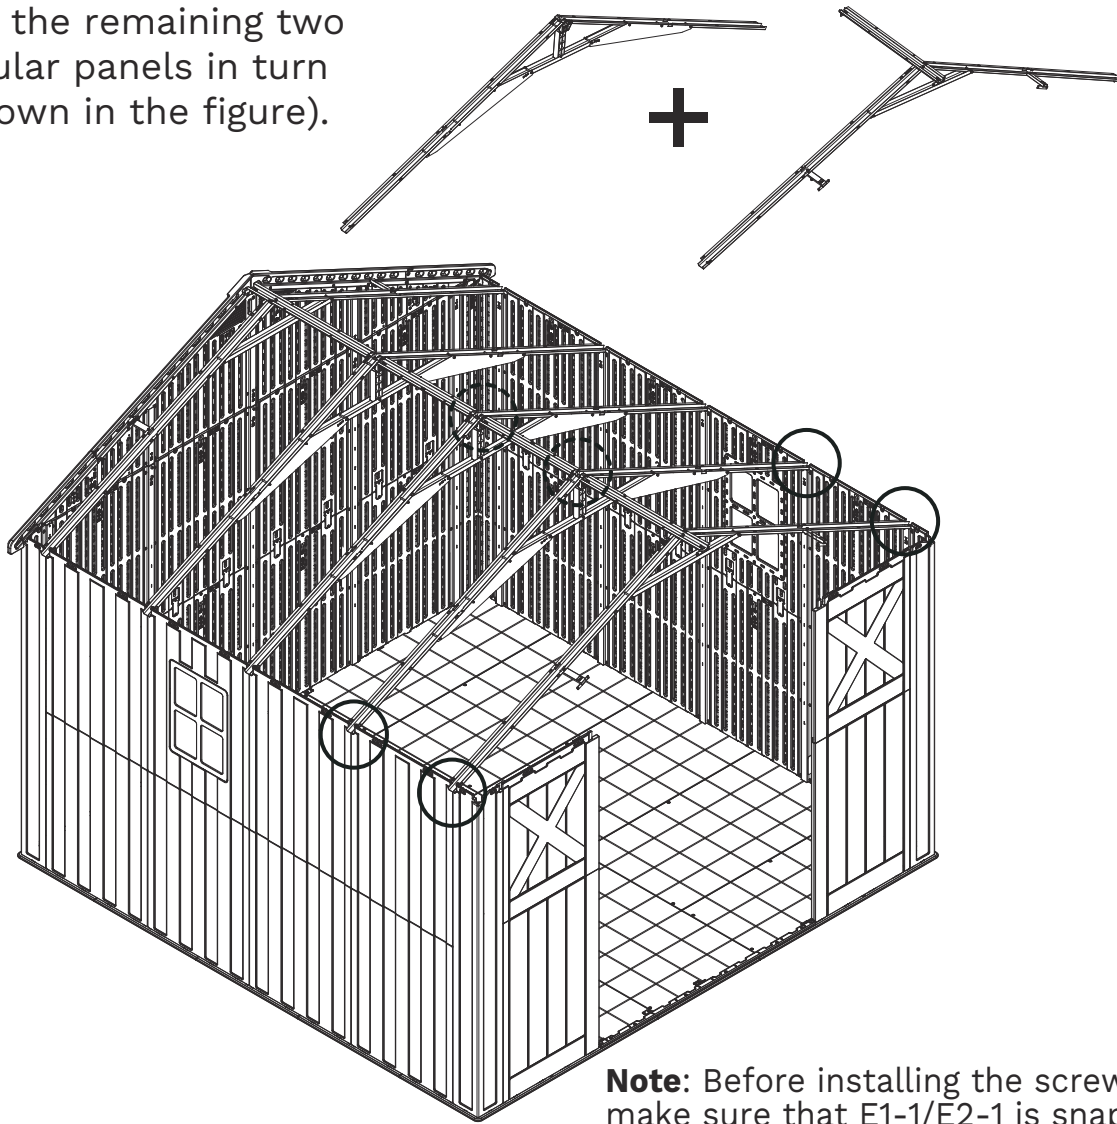

STEP 43

Install the remaining two triangular panels in turn (as shown in the figure).

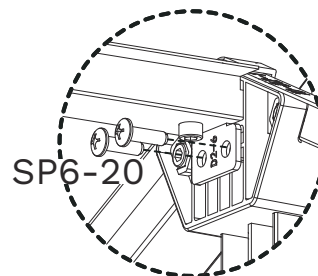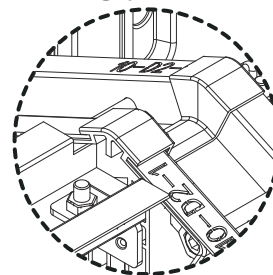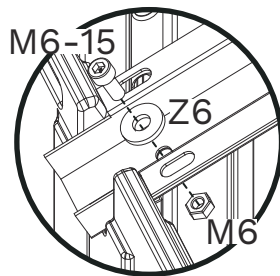








Note: Before installing the screws, please make sure that E1-1/E2-1 is snapped into the corresponding position.





			
M6-15	M6	Z6	SP6-20
4 pcs	4 pcs	4 pcs	6 pcs


STEP 44

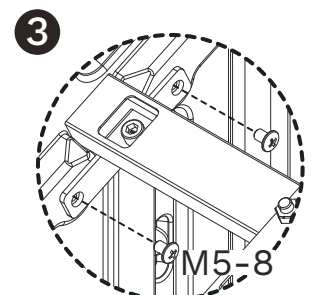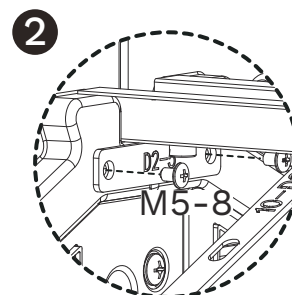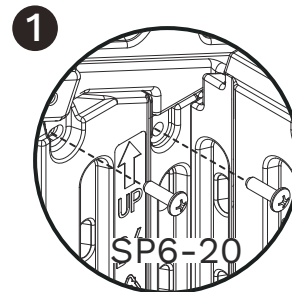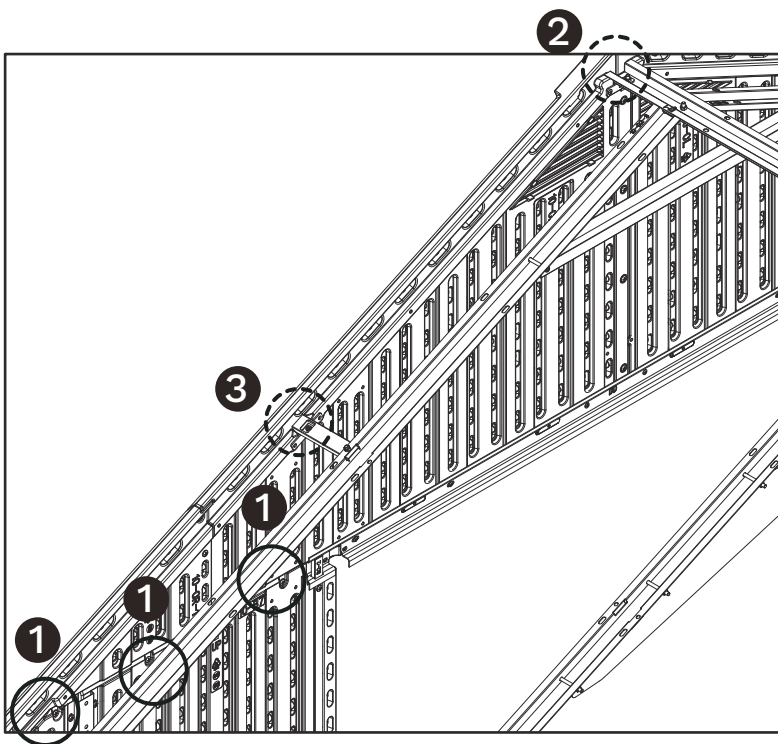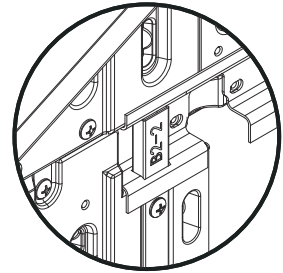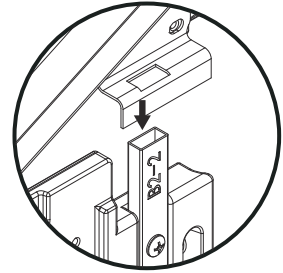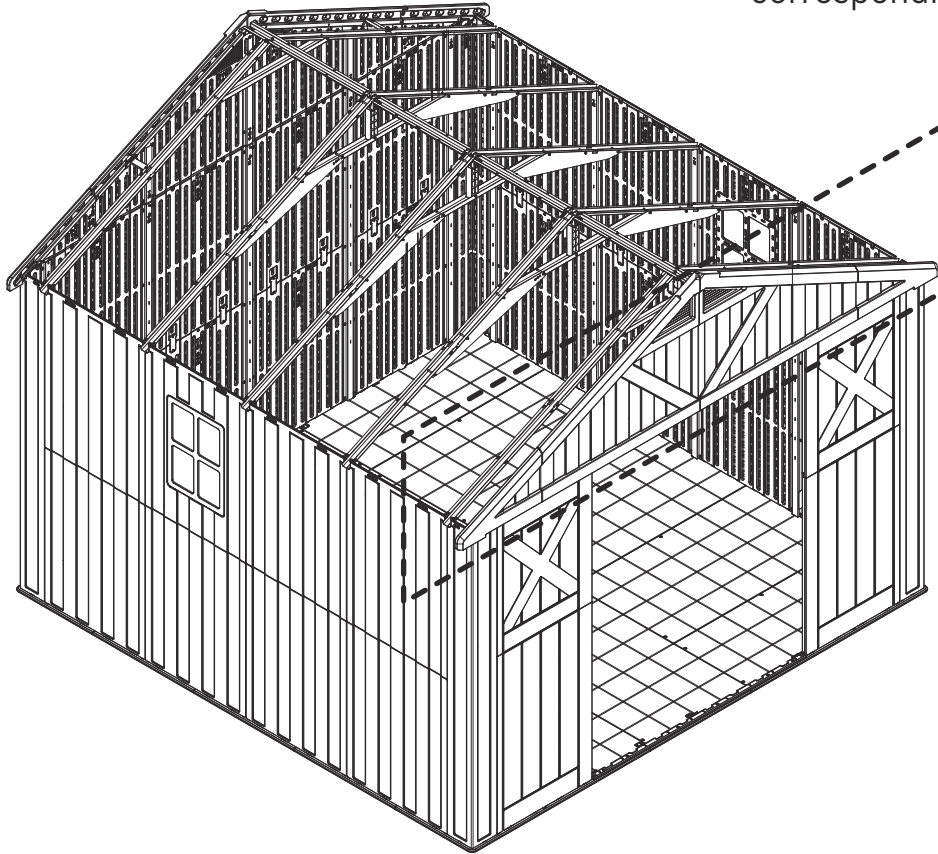Place the assembled triangle panel on the corresponding position of the wall panel.




	
SP6-20	M5-8
8 pcs	6 pcs




STEP 45

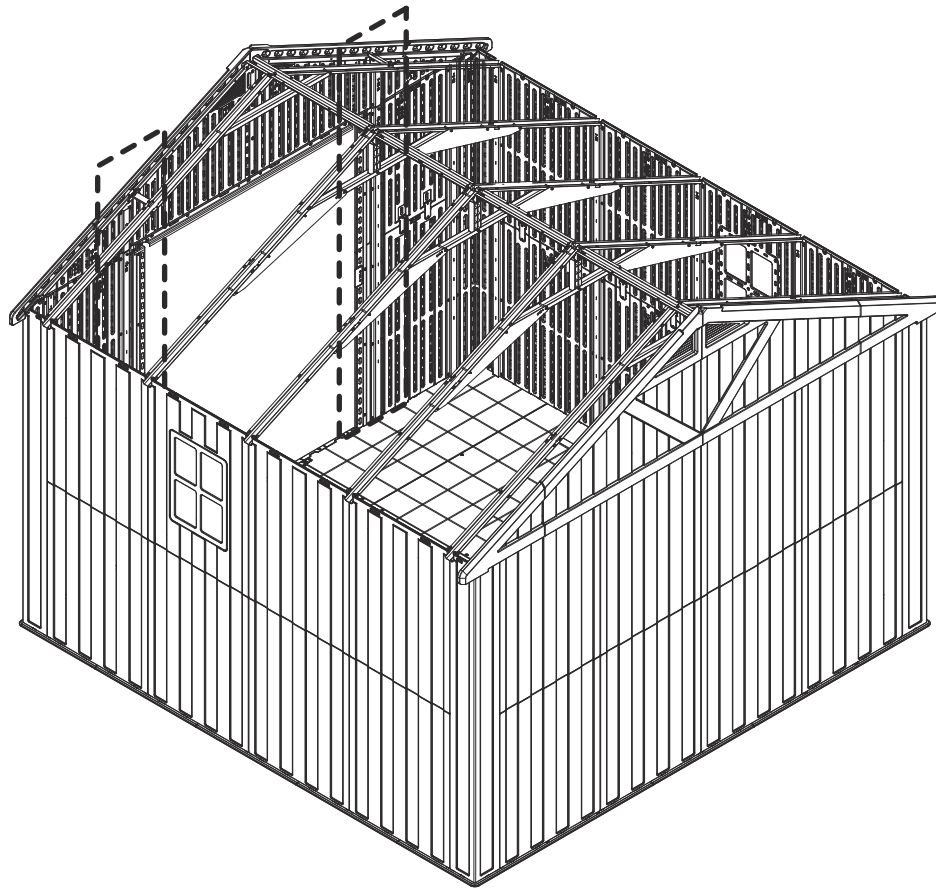

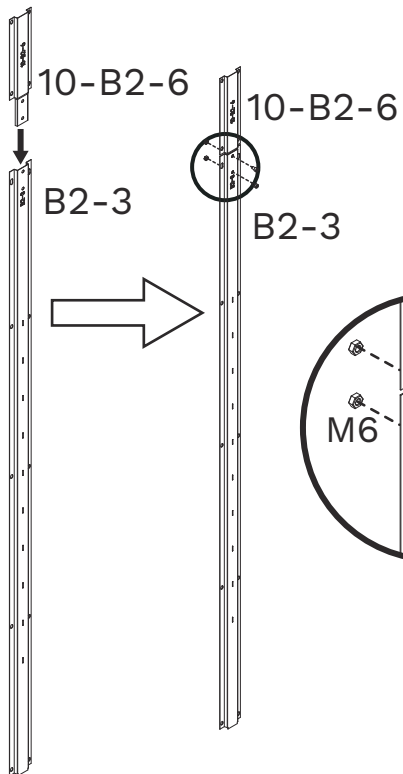


1

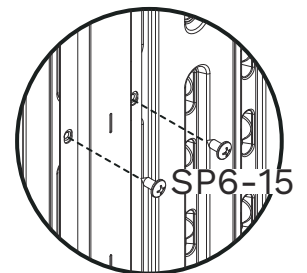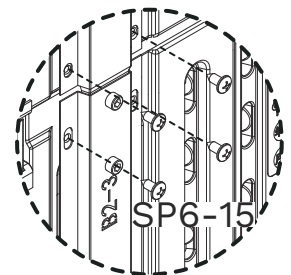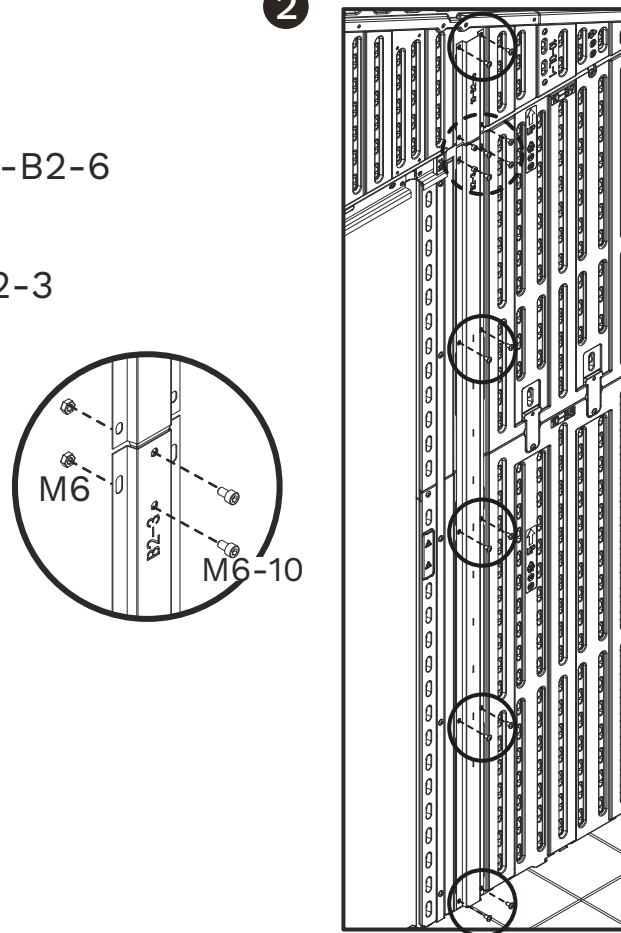


2




x2

		
M6-10	M6	SP6-15
4 pcs	4 pcs	28 pcs


STEP 46

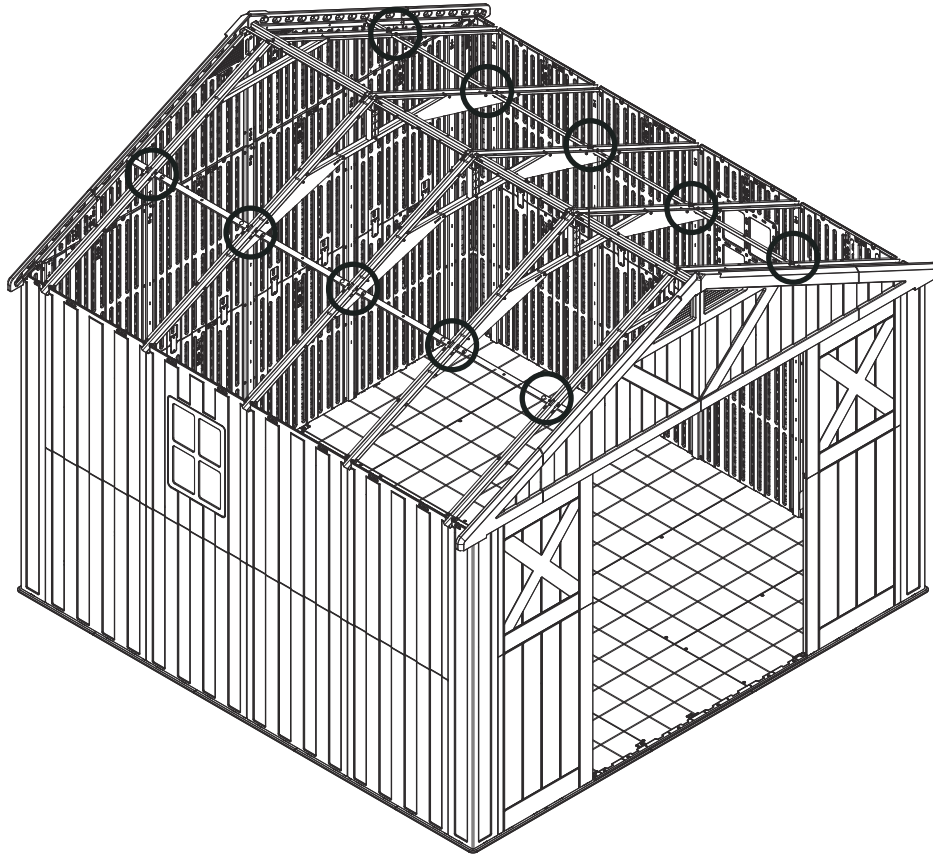

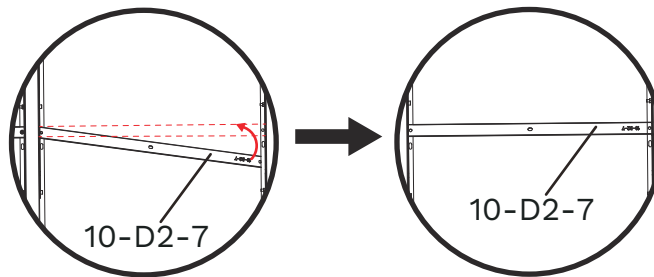

1. Place one end of the 10-D2-7 into the corresponding position and tilt the other end into place.



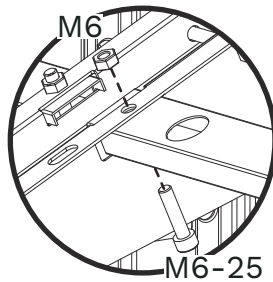


2. Once the holes are aligned, install M6-25 and M6.






	
M6-25	M6
16 pcs	16 pcs

STEP 47

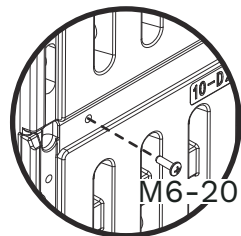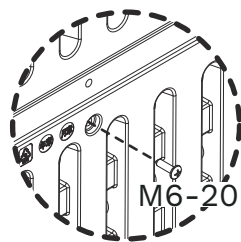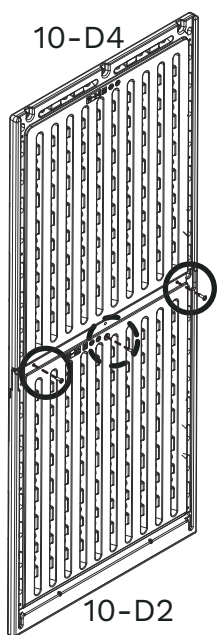

x4

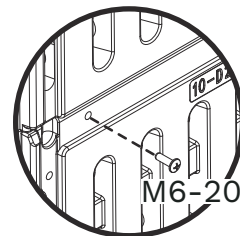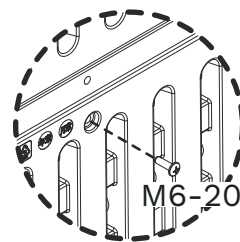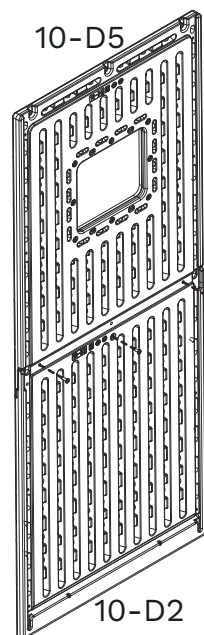

x4





SP6-20
24 pcs





STEP 48

✓


✗

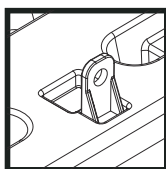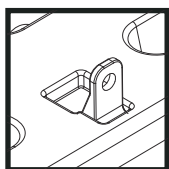






Note the mounting direction of D4.

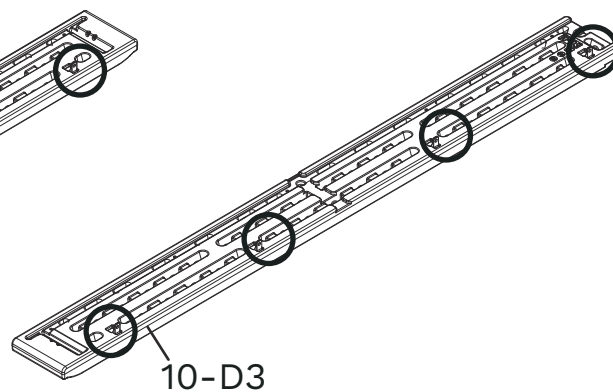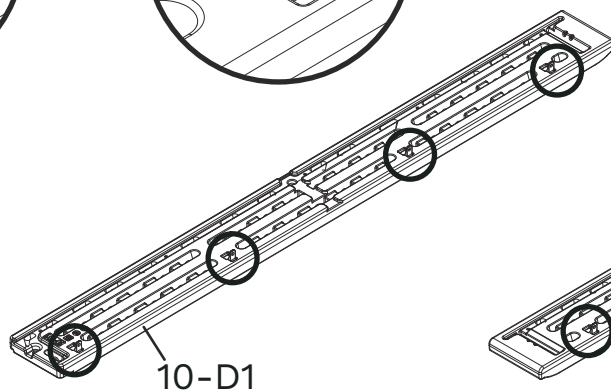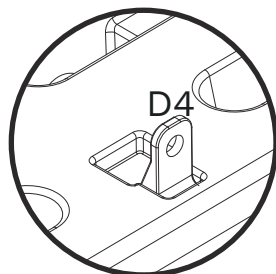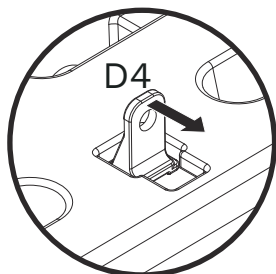


STEP 49

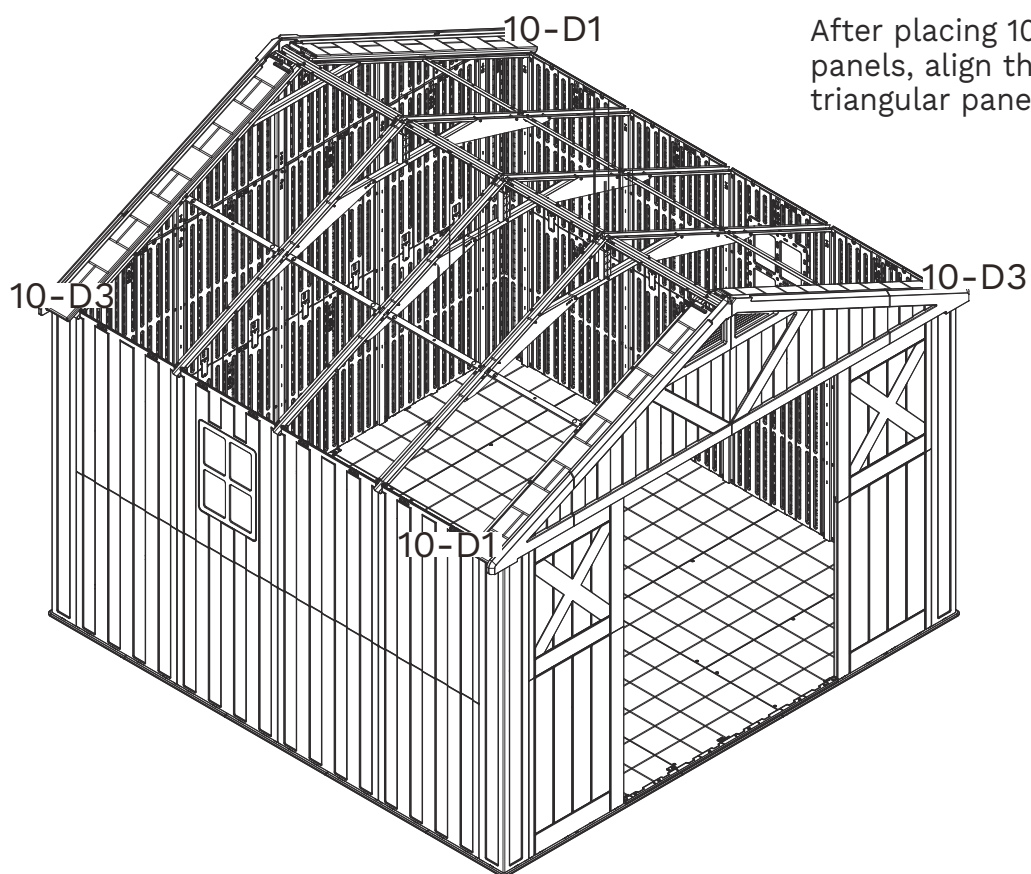

After placing 10-D1 and 10-D3 on the triangular panels, align them with the grooves of the triangular panels and push them forward.

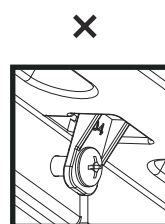
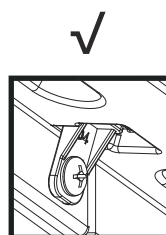
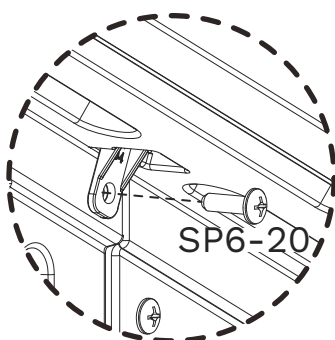
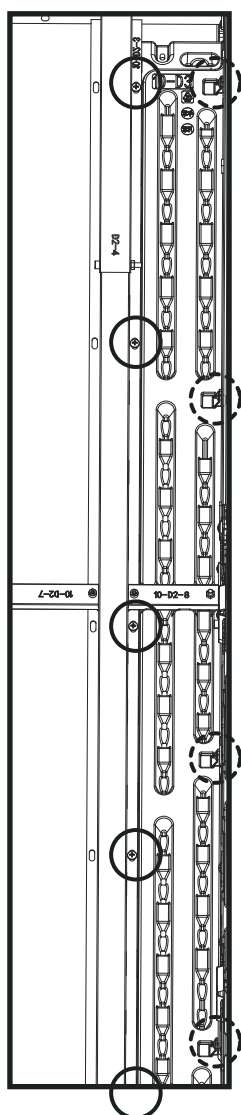
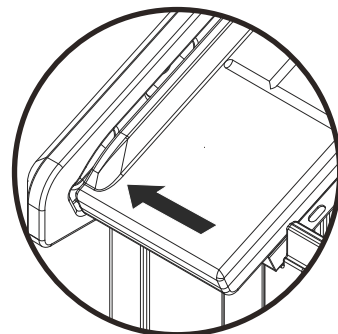


D4 should fit perfectly on the tripod.


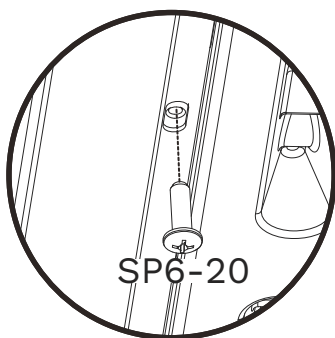


SP6-20
36 pcs



STEP 50

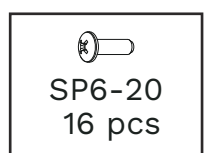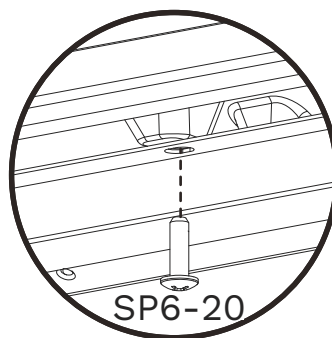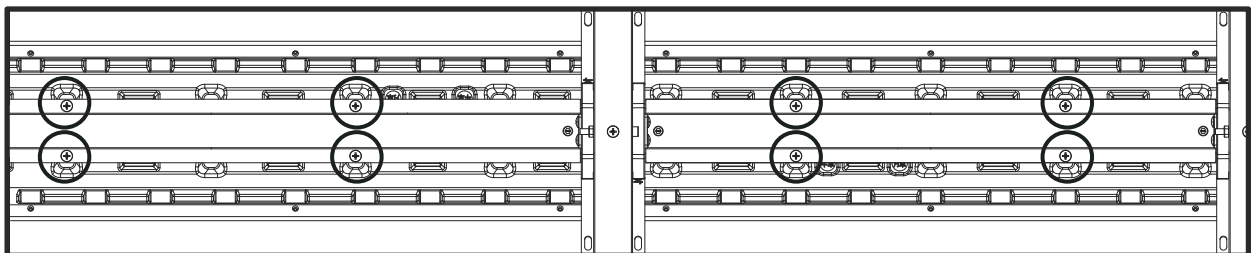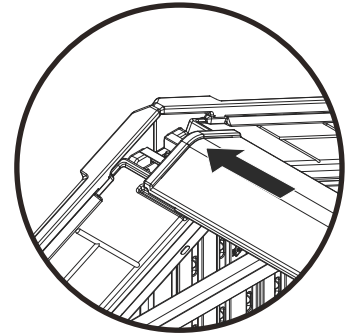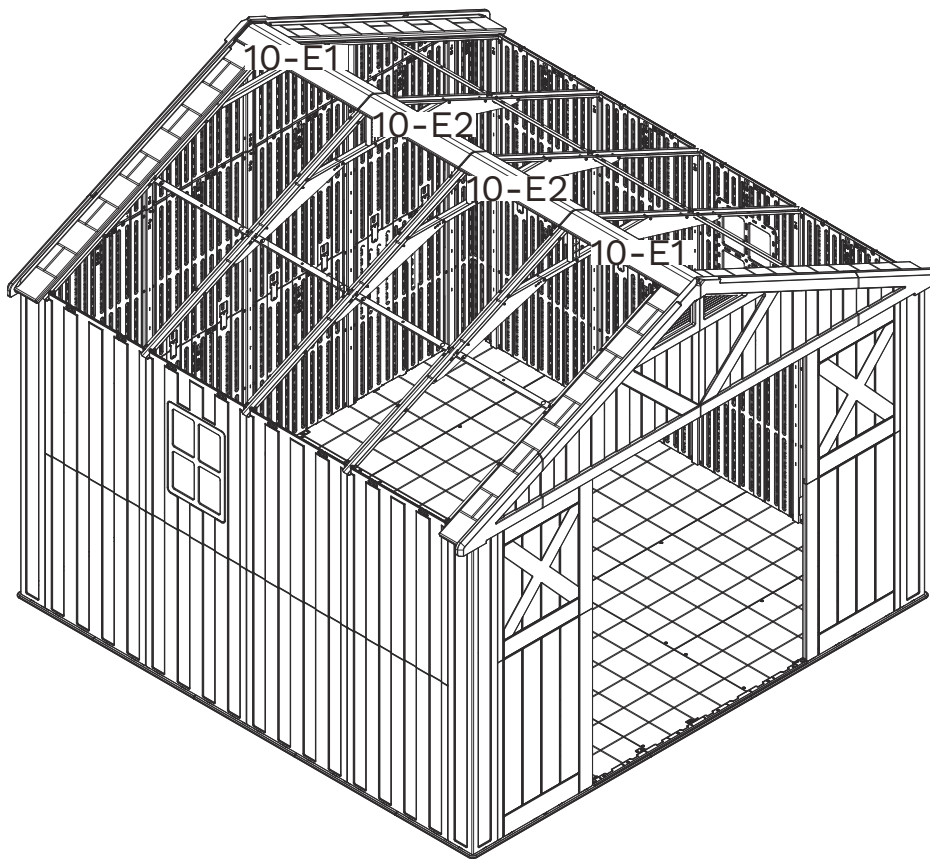






STEP 51

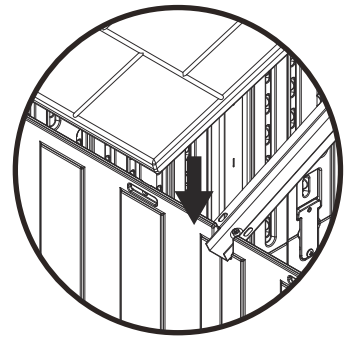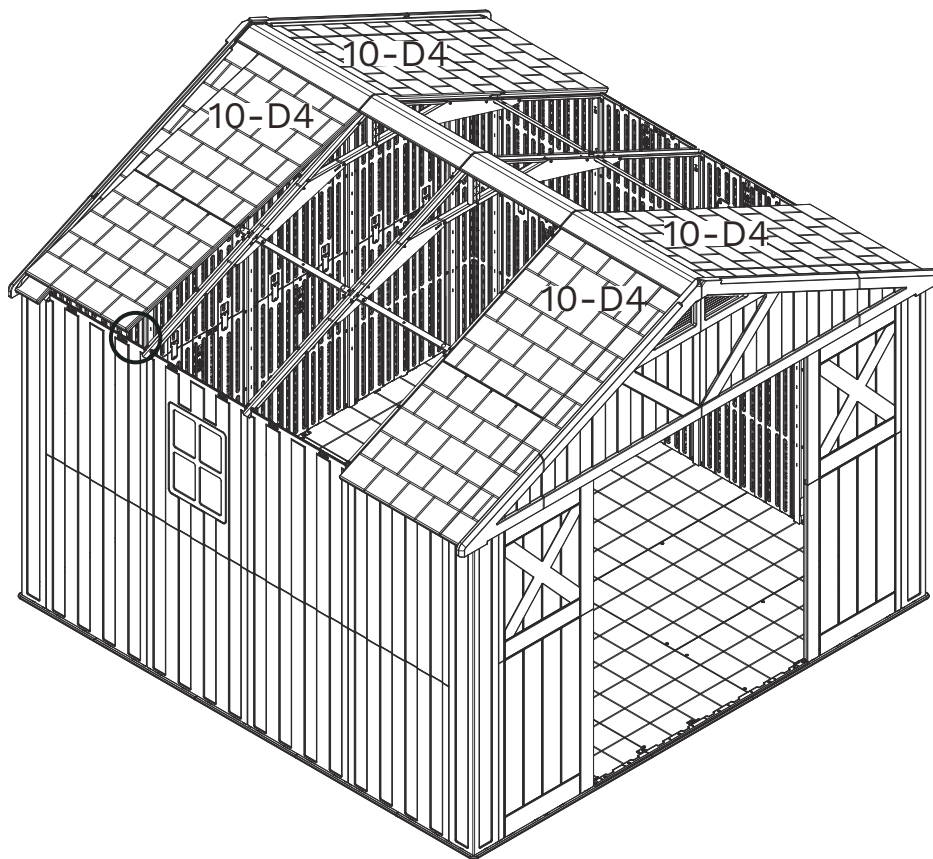

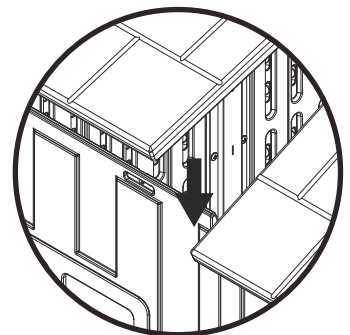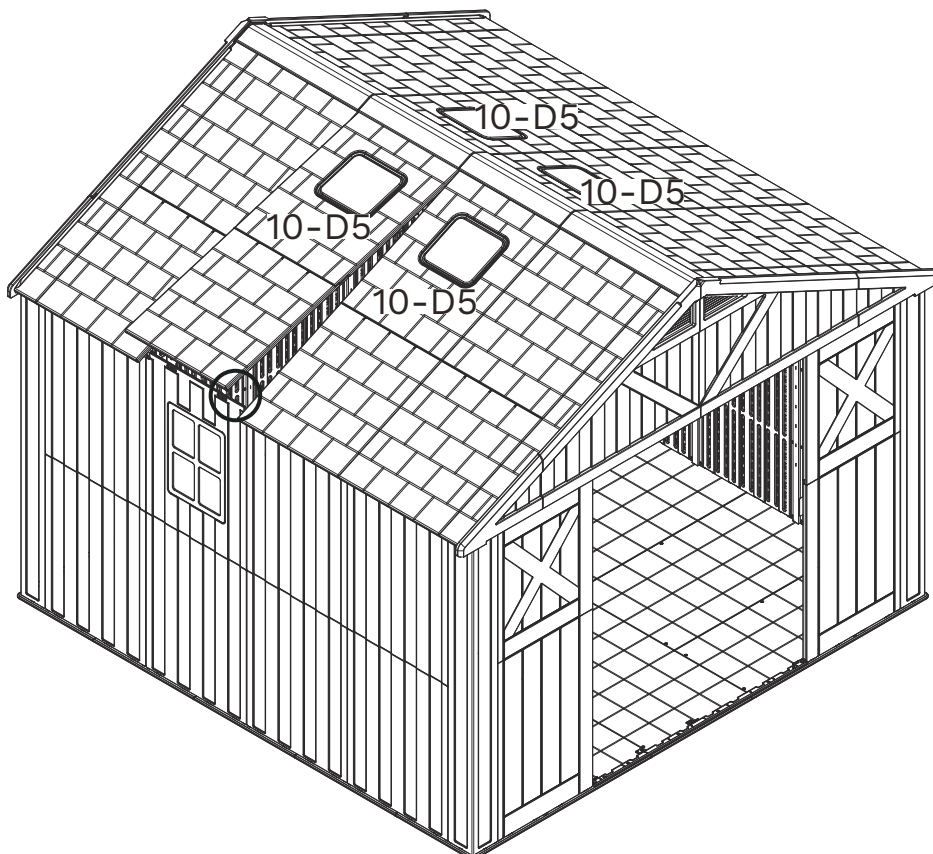

STEP 52

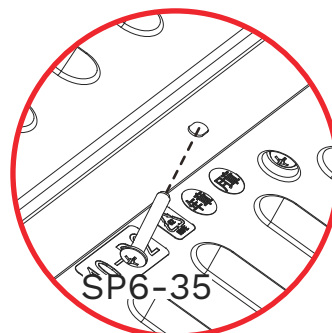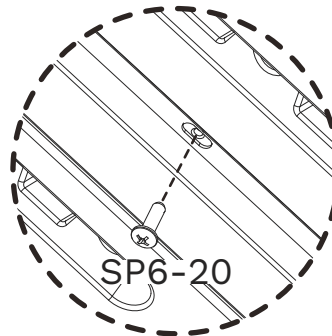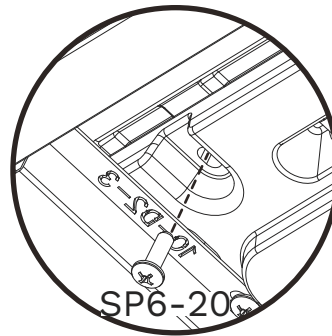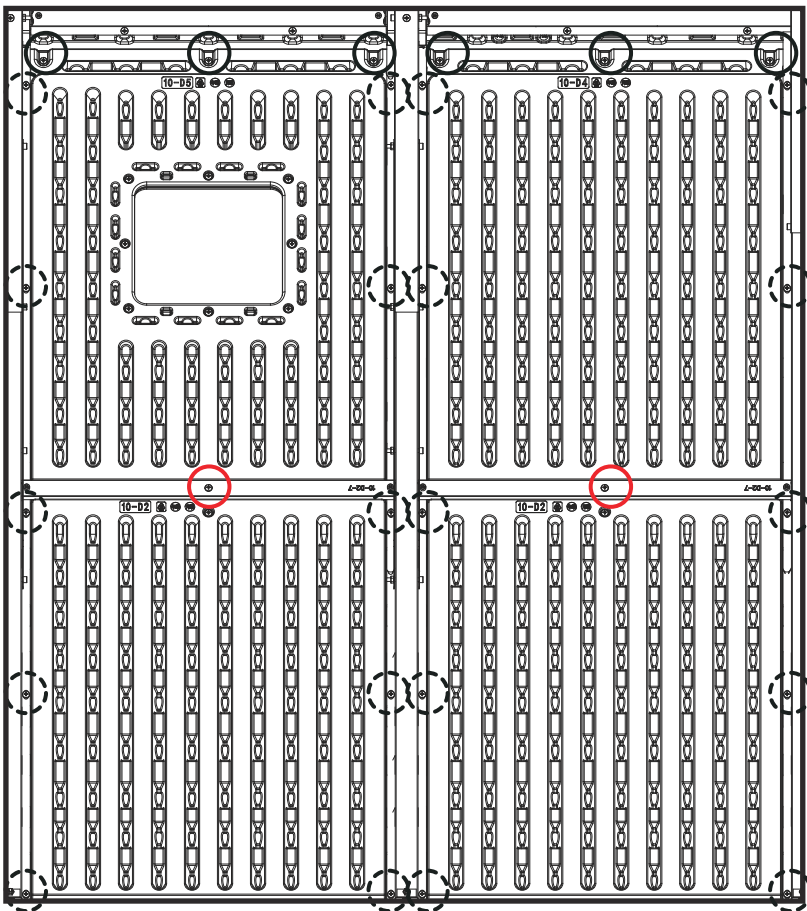
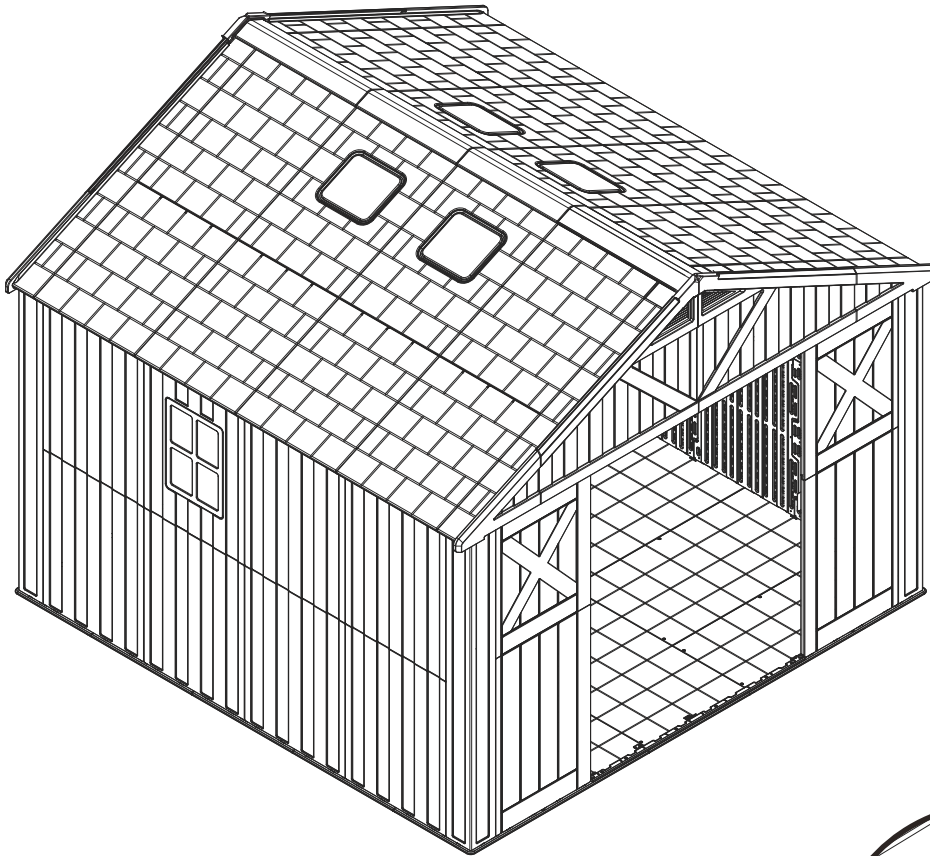



STEP 53





	
SP6-20	SP6-35
108 pcs	8 pcs

STEP 54

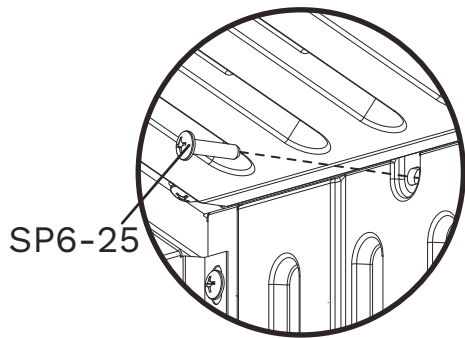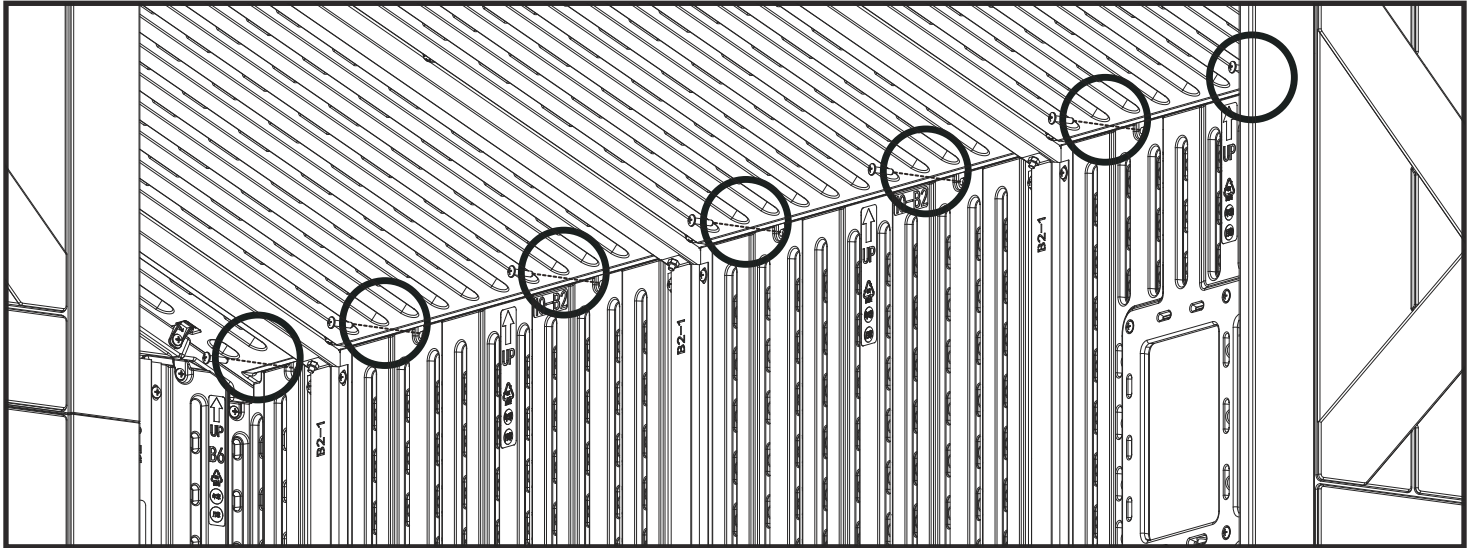



SP6-25
20 pcs


STEP 55

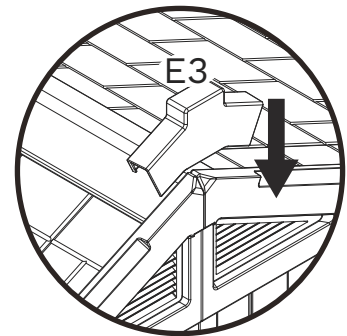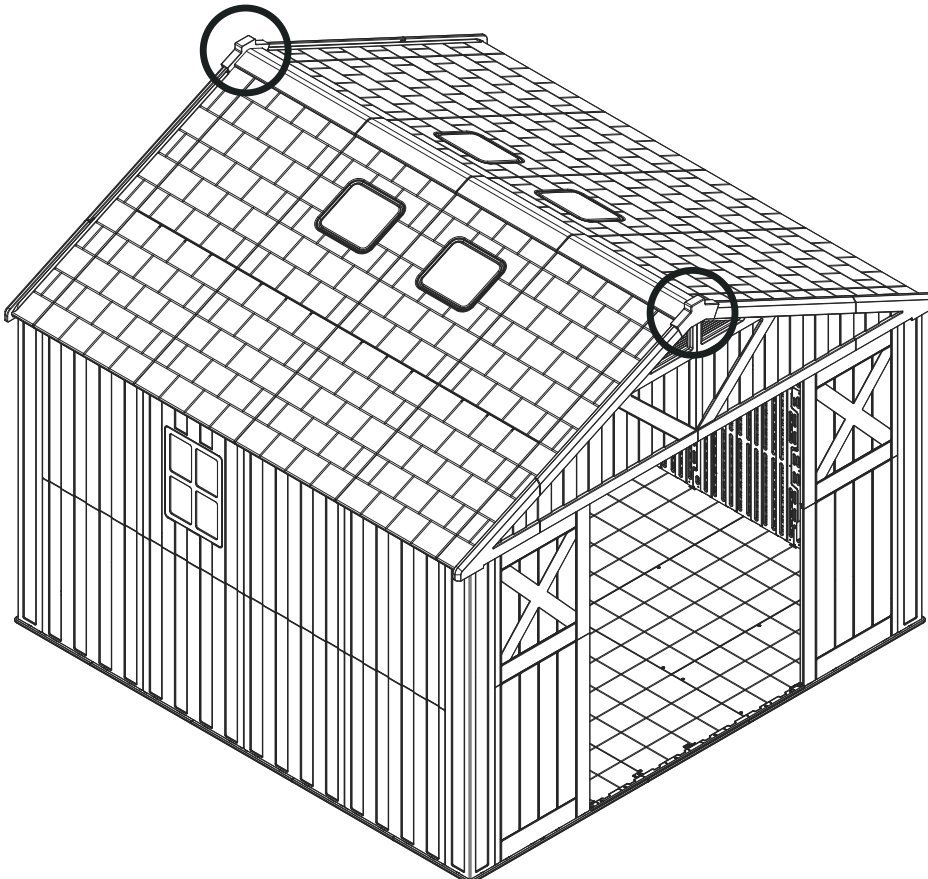

STEP 56

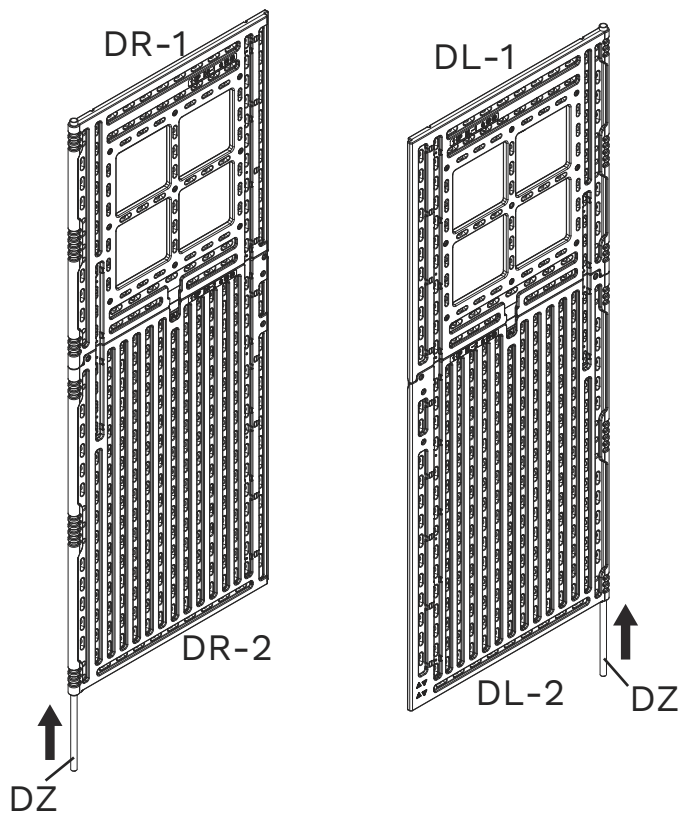


Do not push in hard when there is an obstruction, rotate DZ to adjust.

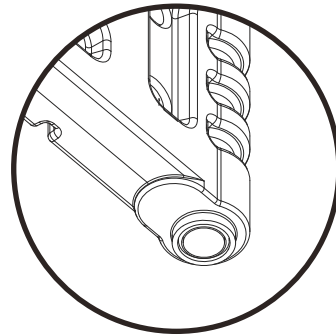




Push DZ completely down below, ensuring the bottom surface is level.

STEP 57

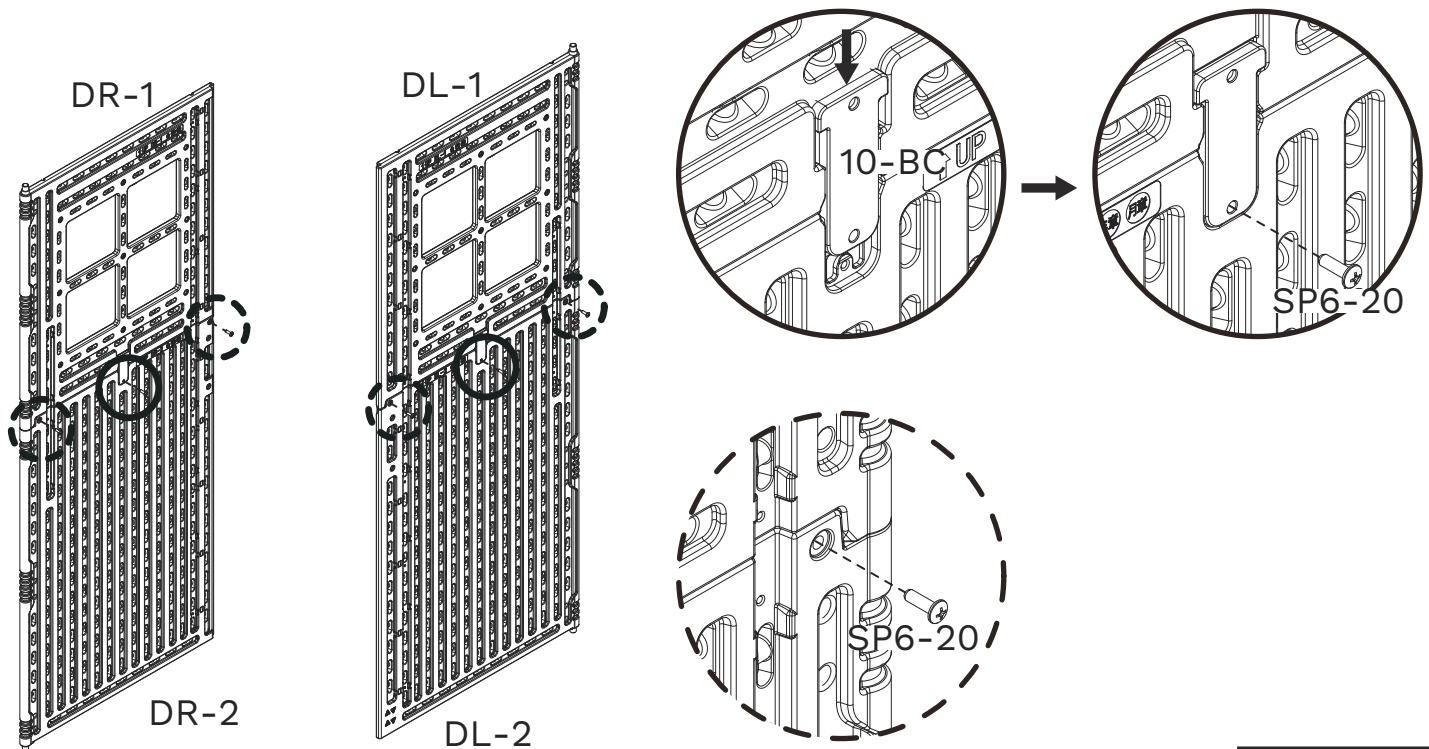



SP6-20
6 pcs

STEP 58

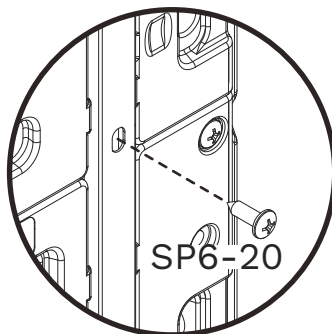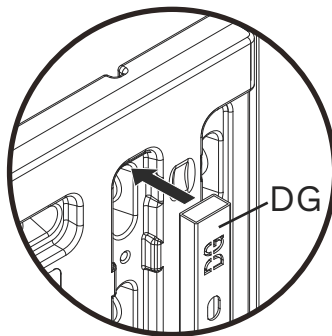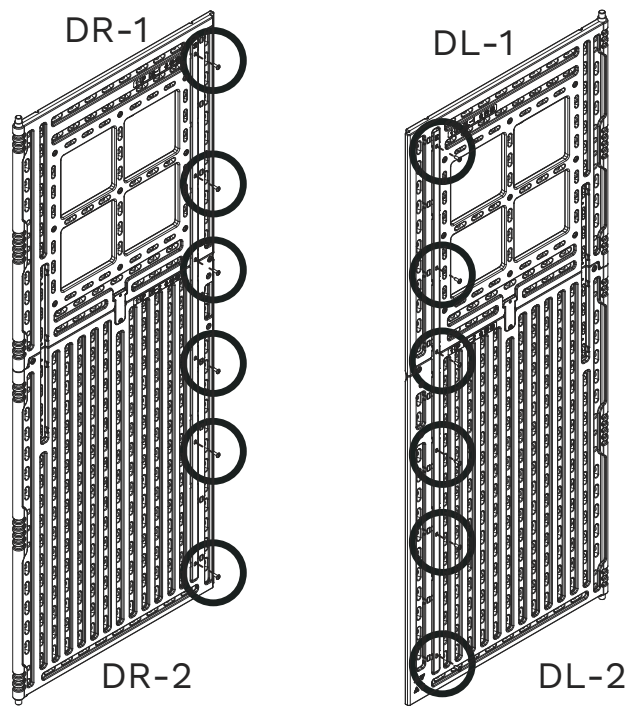


SP6-20
12 pcs


STEP 59

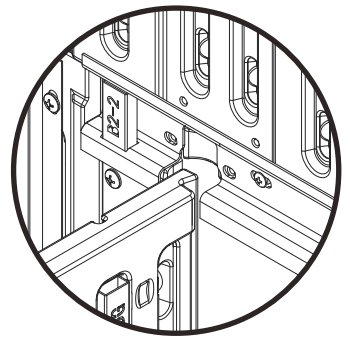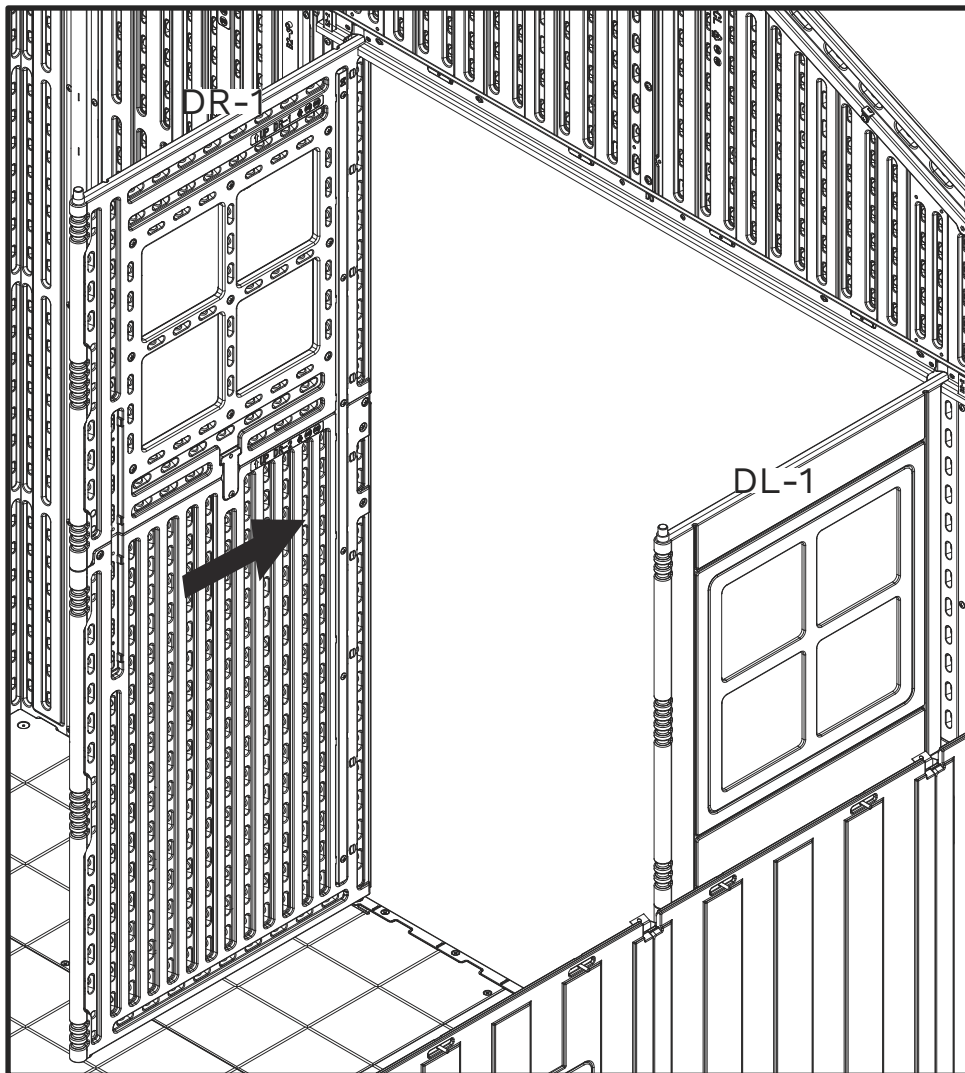


Take the **door** inside.
Push it forward into position.

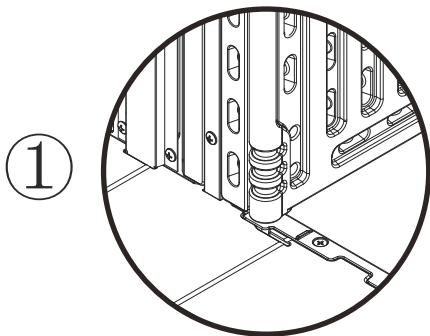


1 Push it into the groove of the floor.

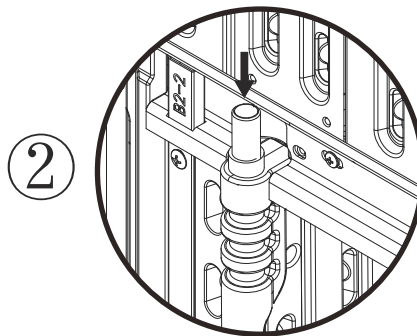

2 Press the DZ downwards.




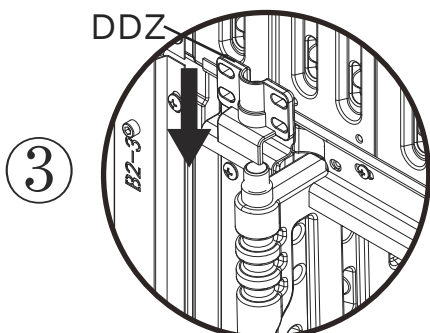


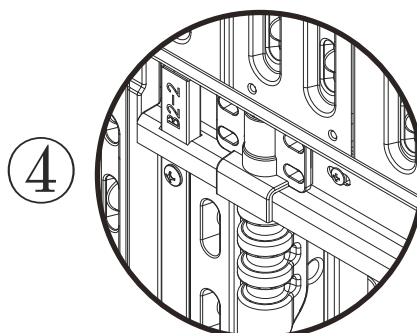

3 Tilting the **door** and snapping it into the DDZ.




4 After inserting the DDZ, push the **door** to the fitting position.

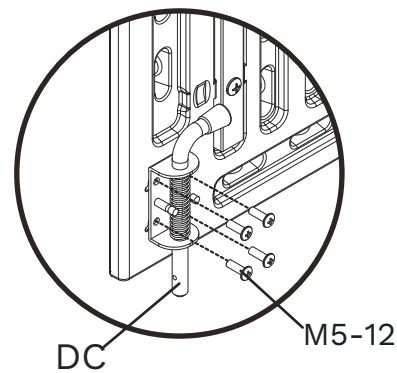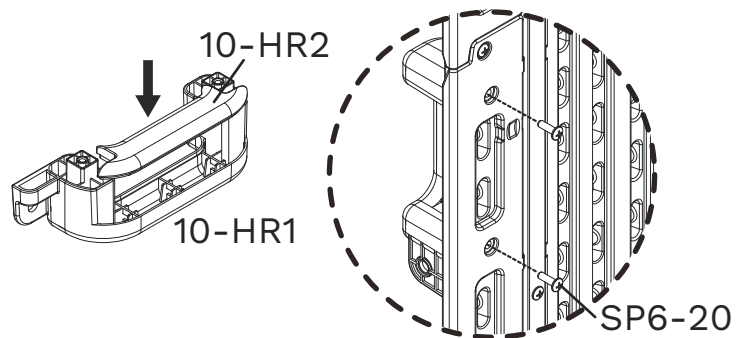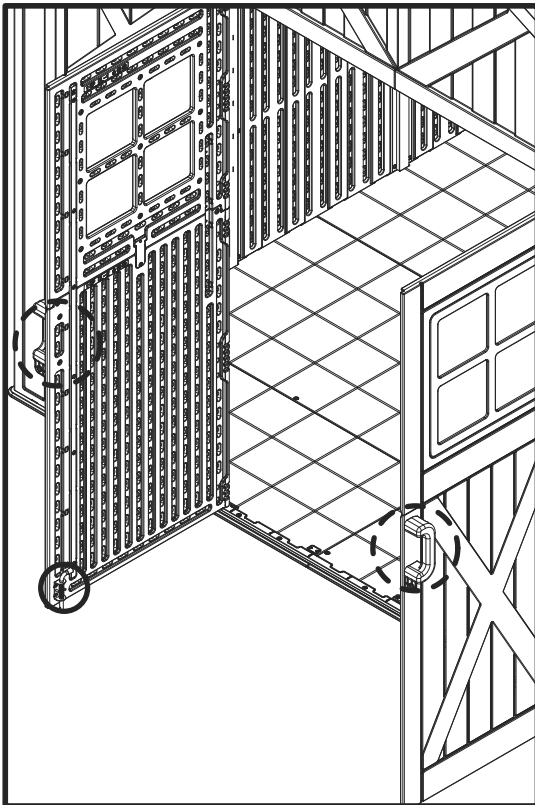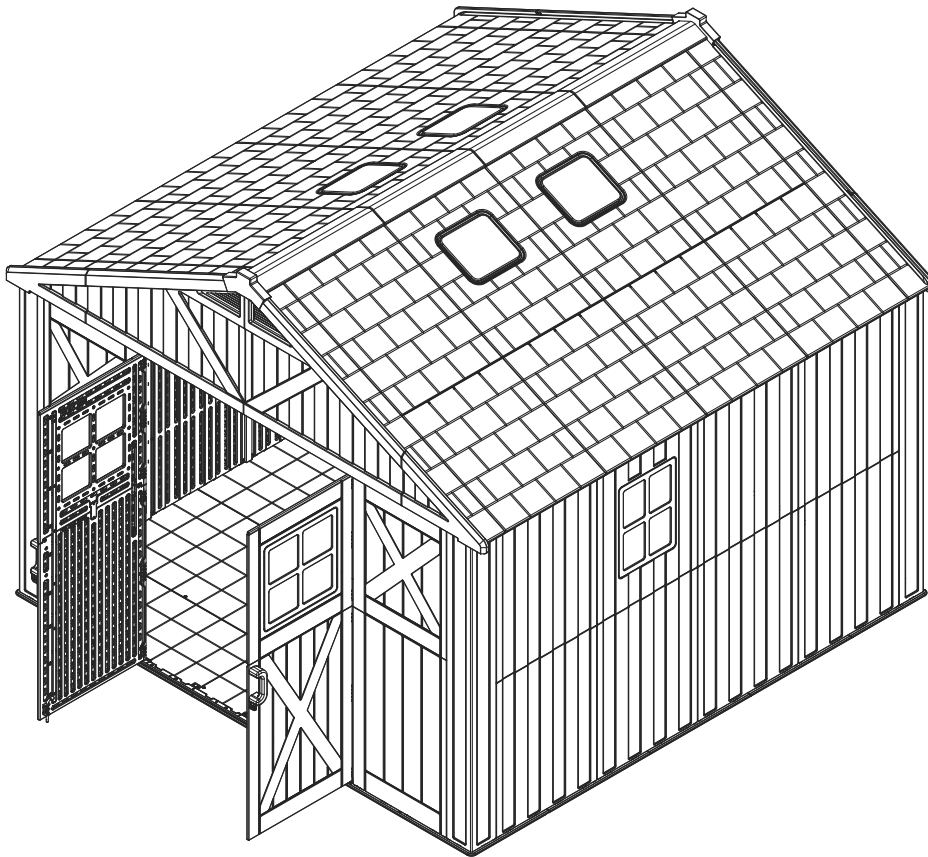STEP 60







	
SP6-20	M5-12
4 pcs	4 pcs

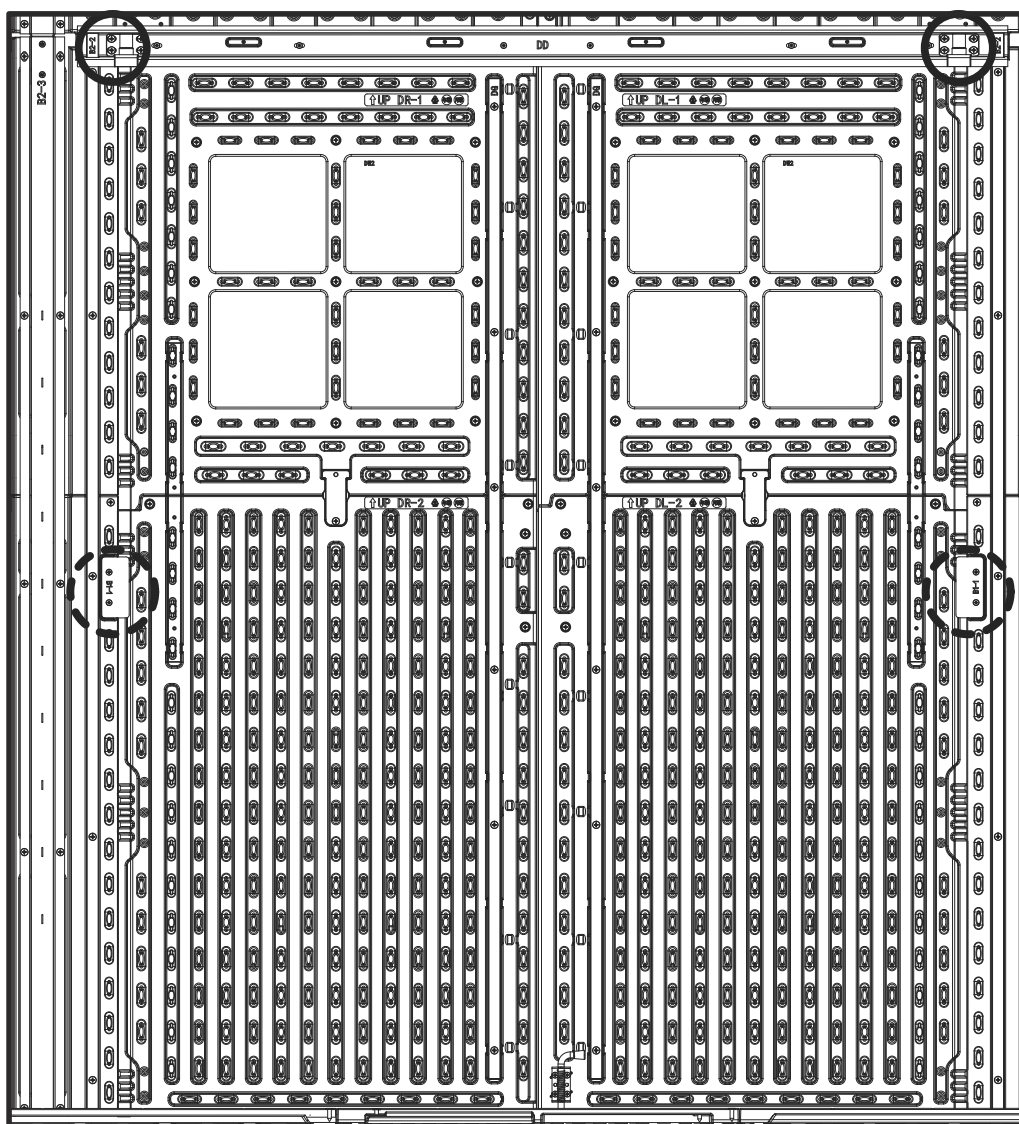STEP 61

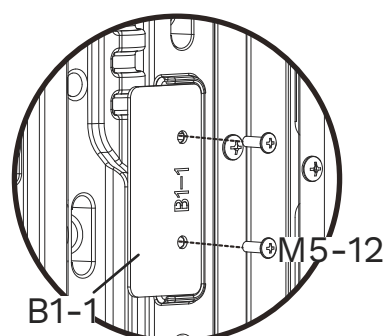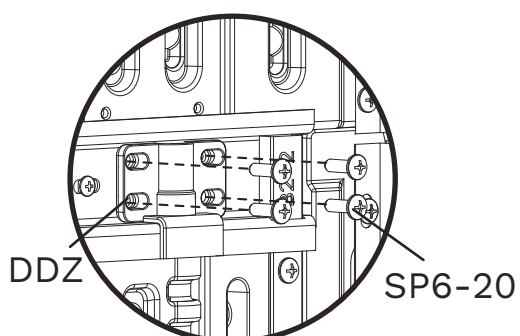

Two people are needed. One person closes the door and inserts the pin, while the other person adjusts the gap outside the door. After making sure the gap is even, the person inside installs DDZ screws SP6-20.



	
SP6-20	M5-12
8 pcs	4 pcs

CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water. Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9"-3", screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.