


Website : www.x-cosrack.com

E-mail : info@x-cosrack.com


Facebook: www.facebook.com/cosrackofficial/

Assembly Instructions


Attention: Better not tighten all screws until all they are in place!

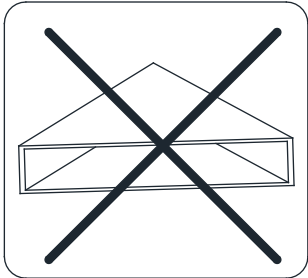


The plastic parts are protective for wooden board,
unrelated to product assembly.
It can be discarded if it isn't needed.

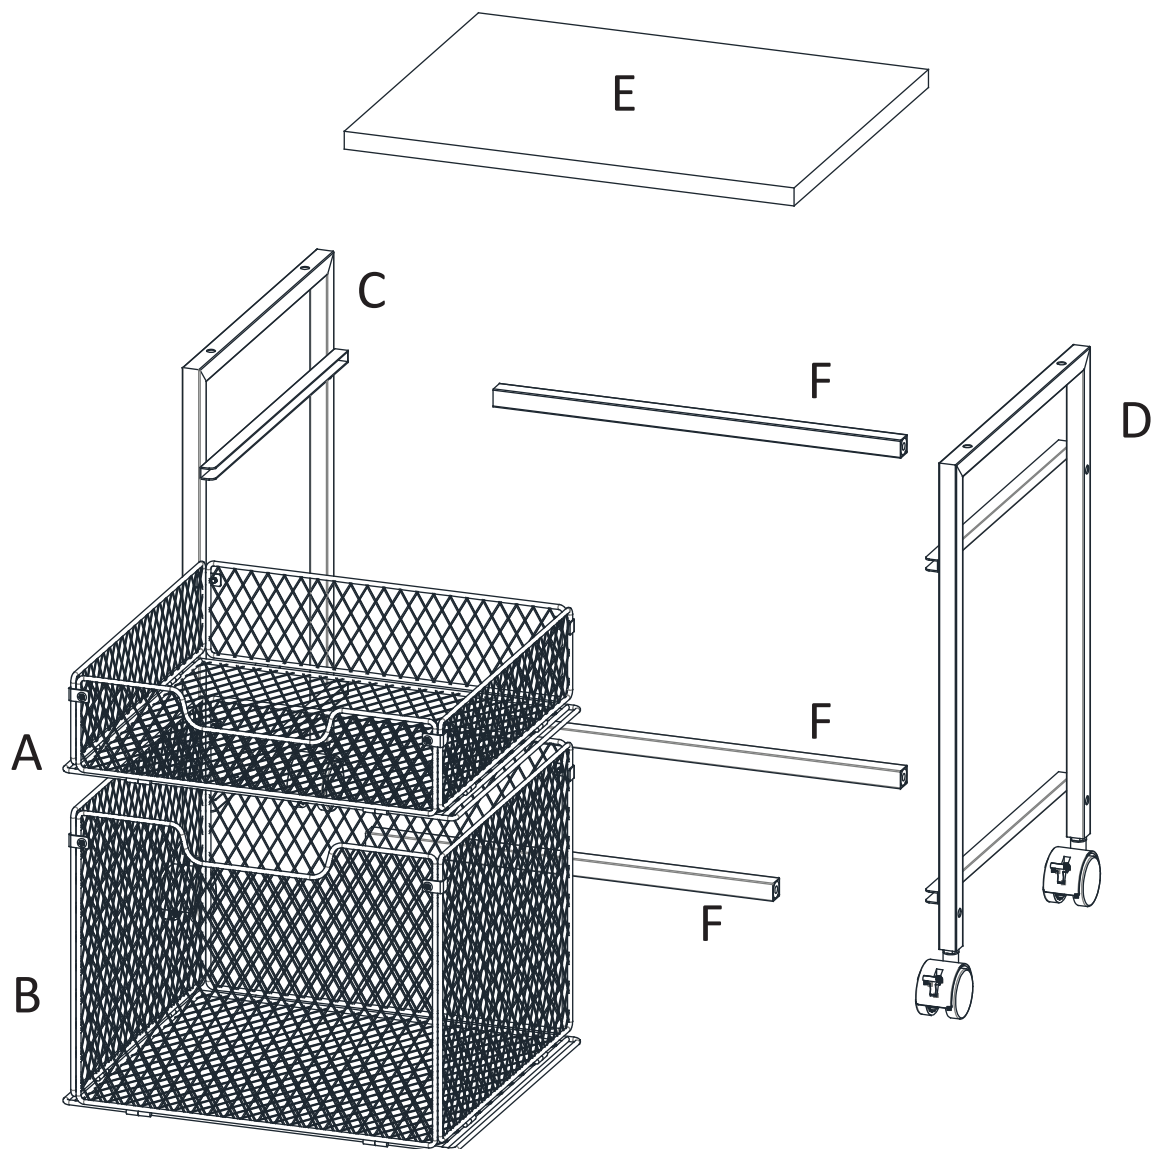


Parts Included

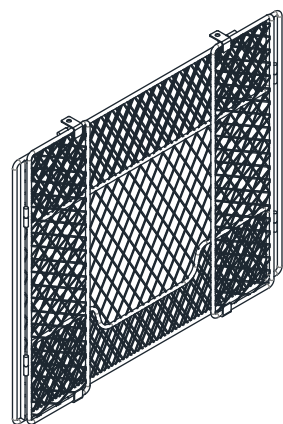


1pc
A

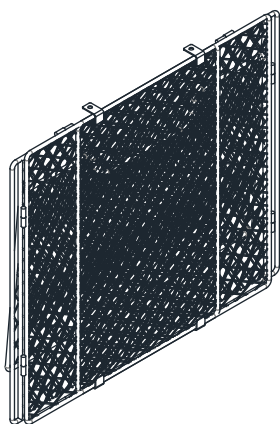


1pc
B

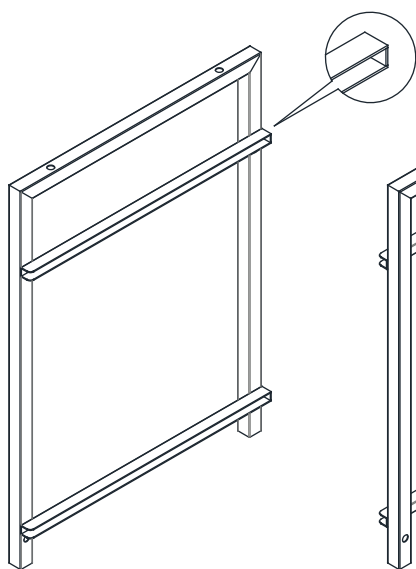

1pc
C

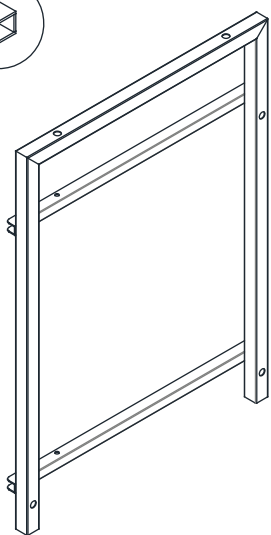


1pc
D

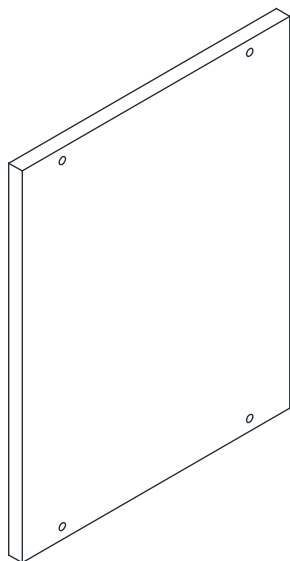


1pc
E




3pcs
F

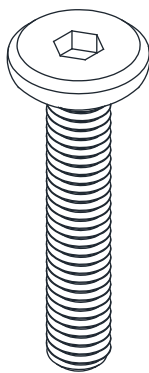


10+2pcs
①

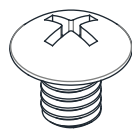


8+2pcs
②



2+1pcs
③

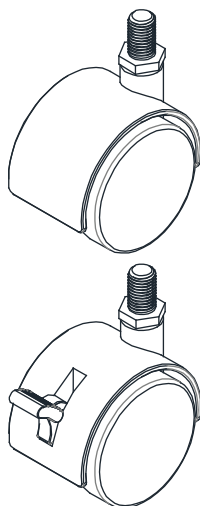

4pcs
④

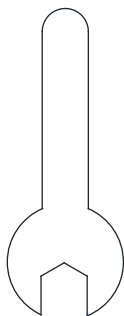


1pc
⑤




1pc
⑥

1. After unfolding basket A, fold it into shape as shown in the figure and fix it with screws ②*4.
(The screws do not need to go through the mesh, they only need to be stuck on the edges)

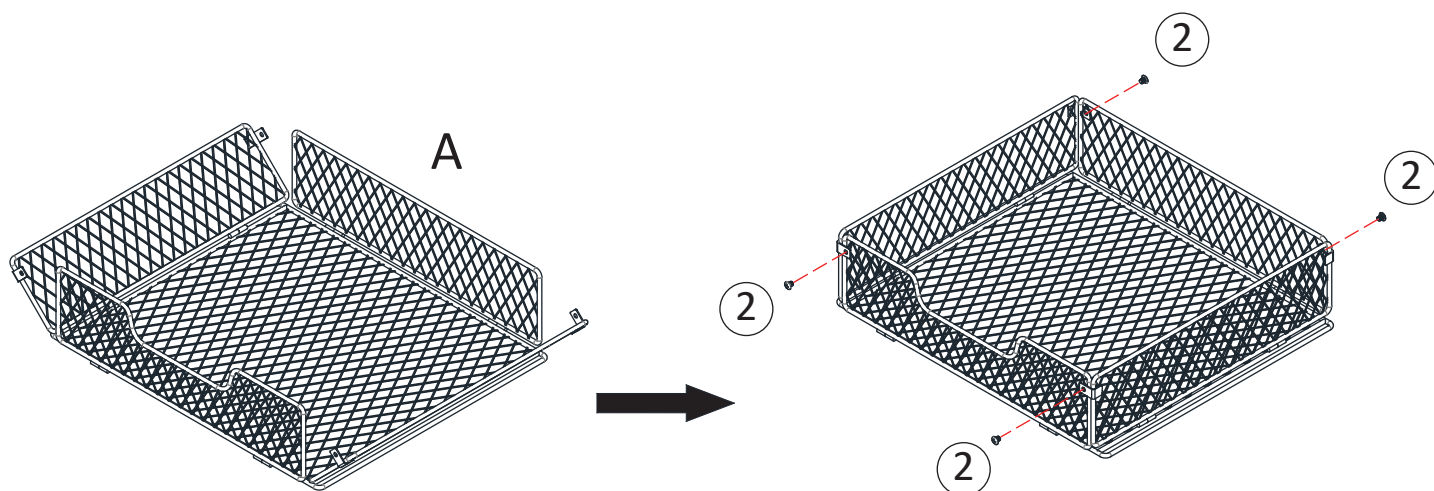


②  *4

2. After unfolding basket B, fold it into shape as shown in the figure and fix it with screws ②*4.
(The screws do not need to go through the mesh, they only need to be stuck on the edges)

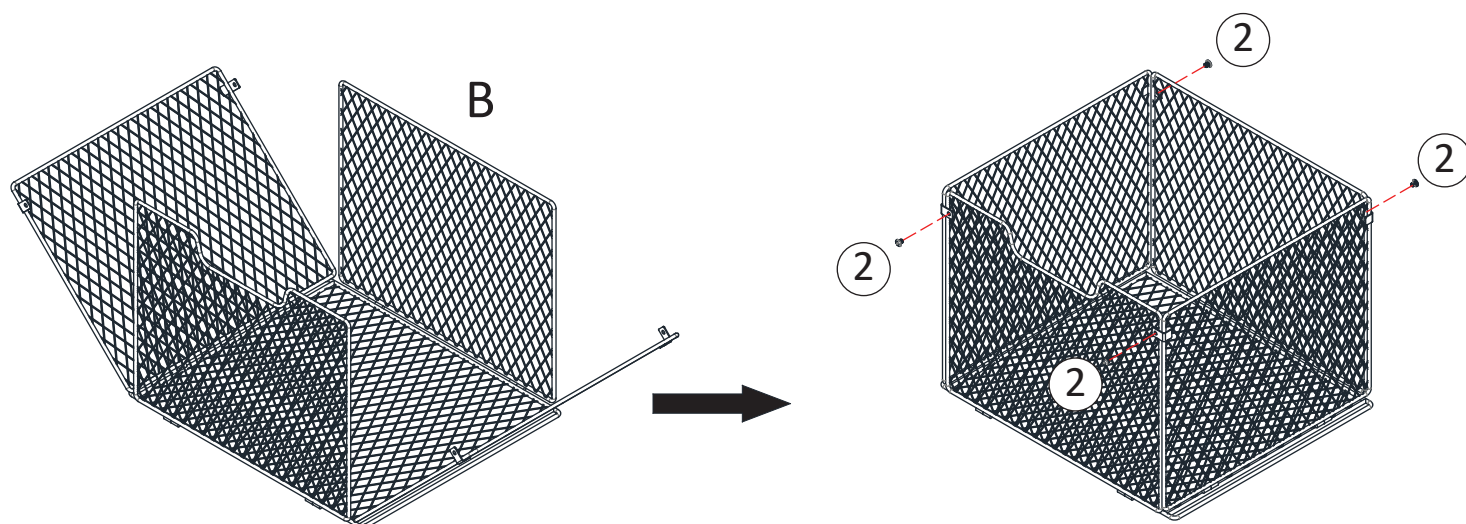


②  *4



3. Part F *3 are connected to part C and part D with screws ①*6.

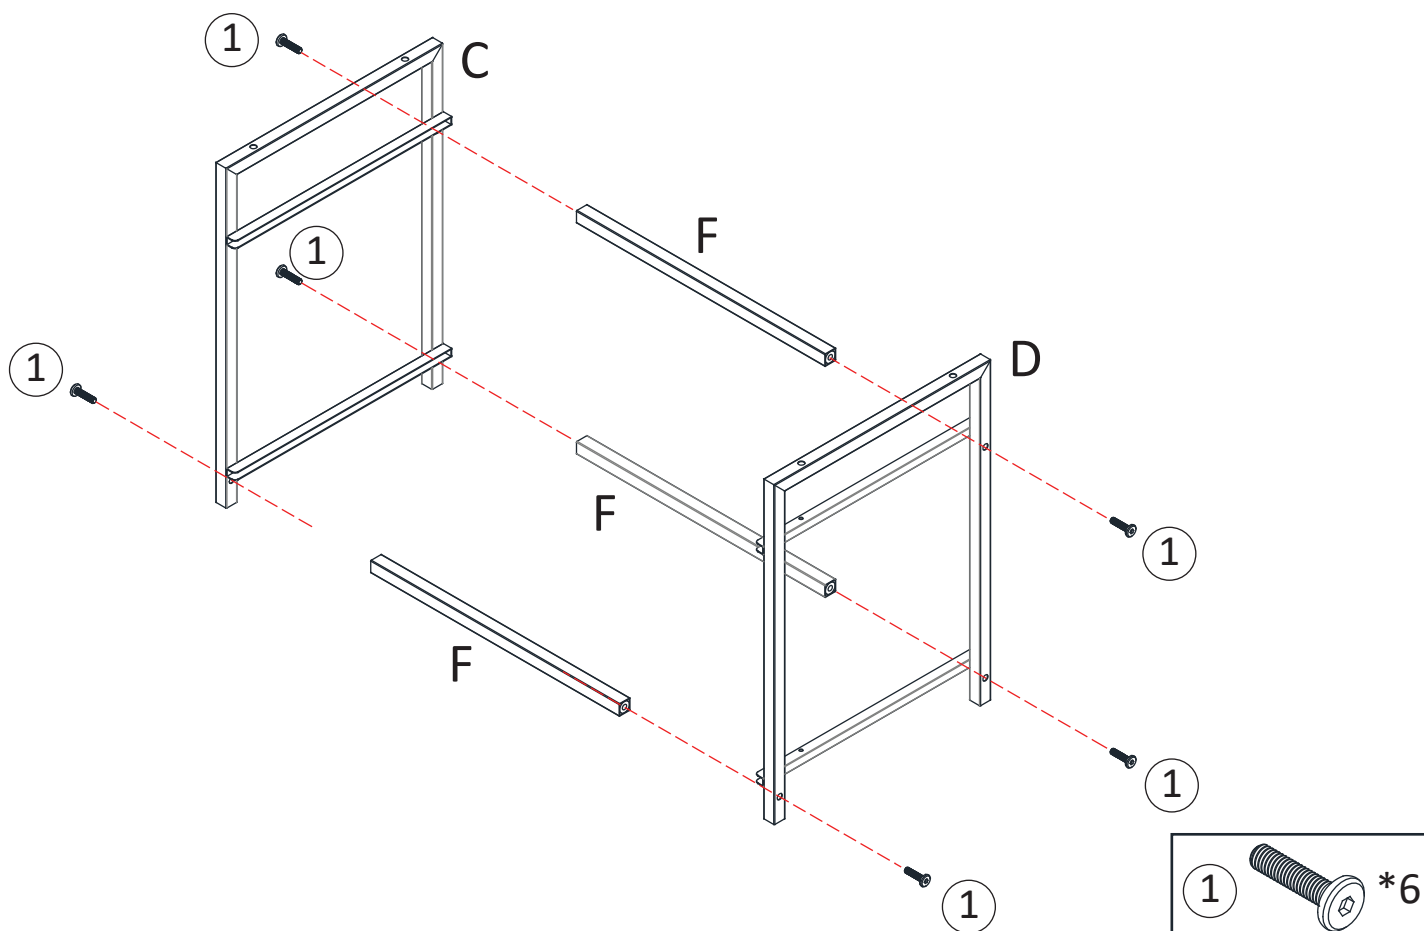

4. Board E is fixed on top of C and D with screws ①*4.

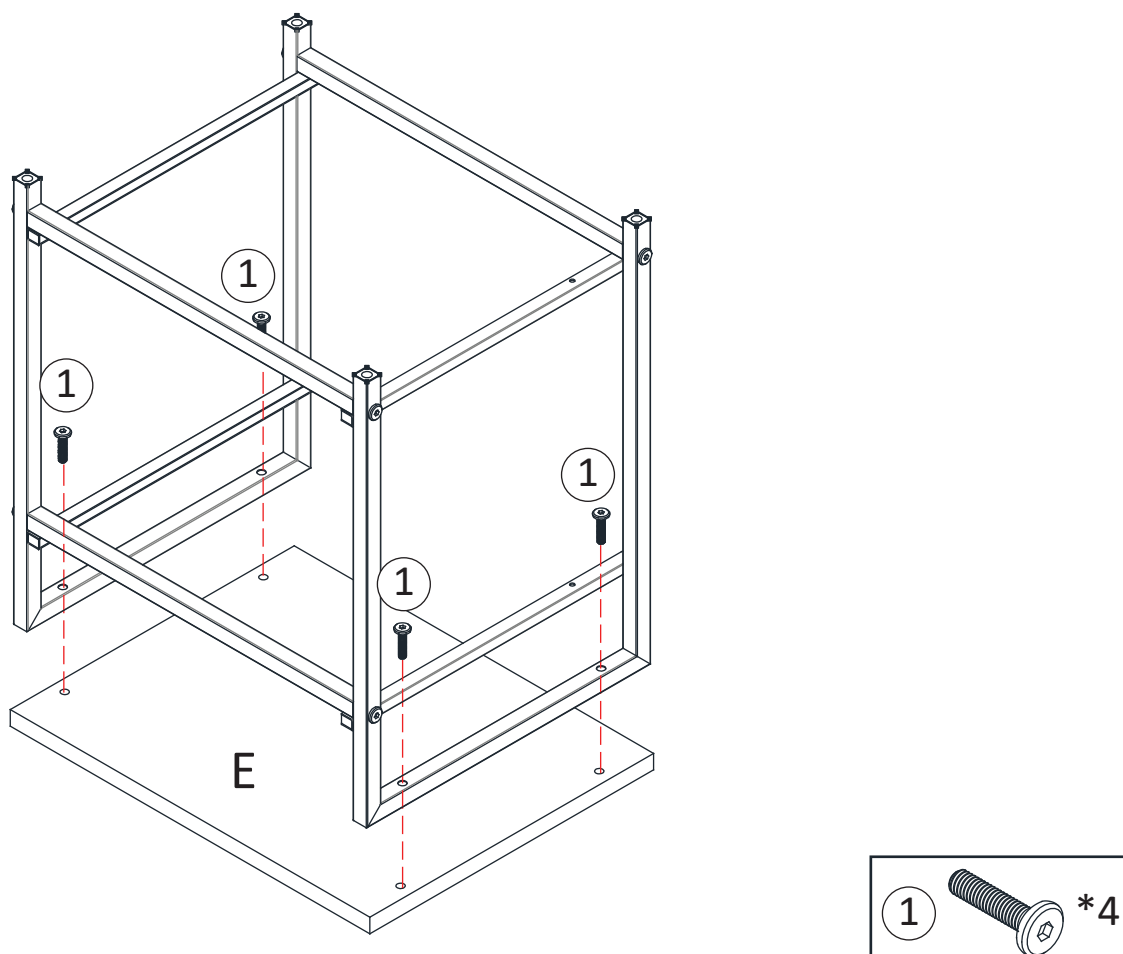

5. Use wrench (5) to screw wheel (4)*4 into the bottom of C and D.

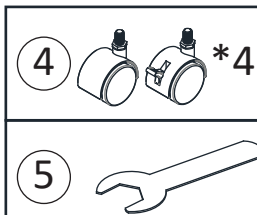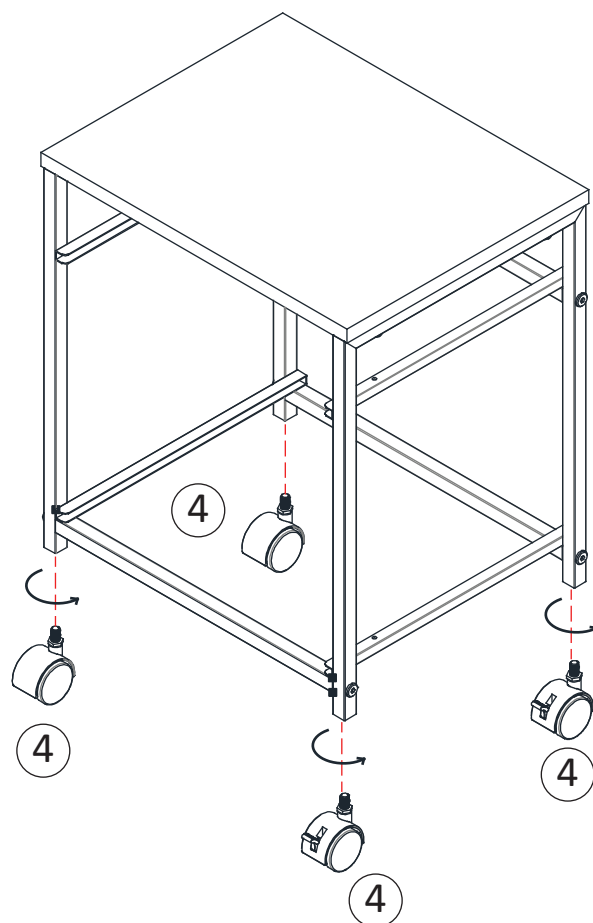

6. Put A and B drawers into the frame, then lock the screws (3) in the holes of the sliding side frame(as shown in the figure), and complete the assembly.

