


Storage Shed with Sun Room_SS16601

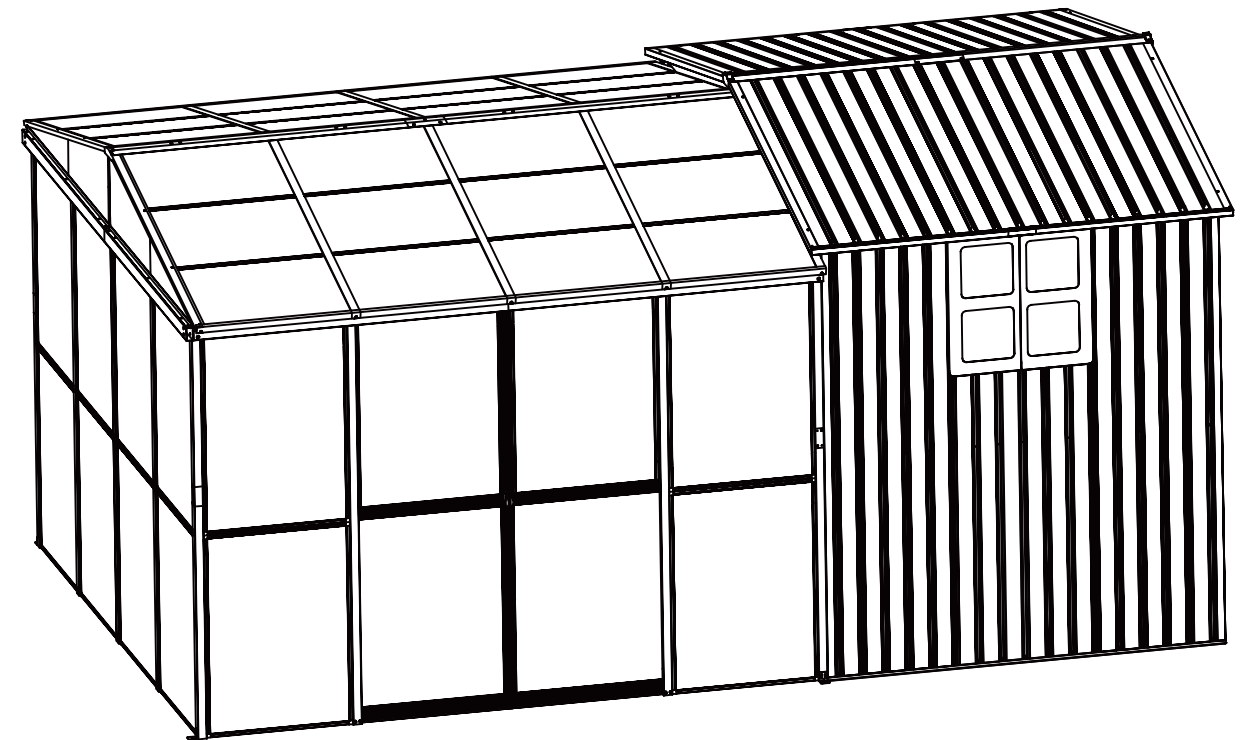


Customer Service:

If you have any problem, please contact us through the online platform.

All parts are packed in four boxes, please note that refer to the parts list to check if all parts are received.

Please prepare below tools before installation. (Not Included)

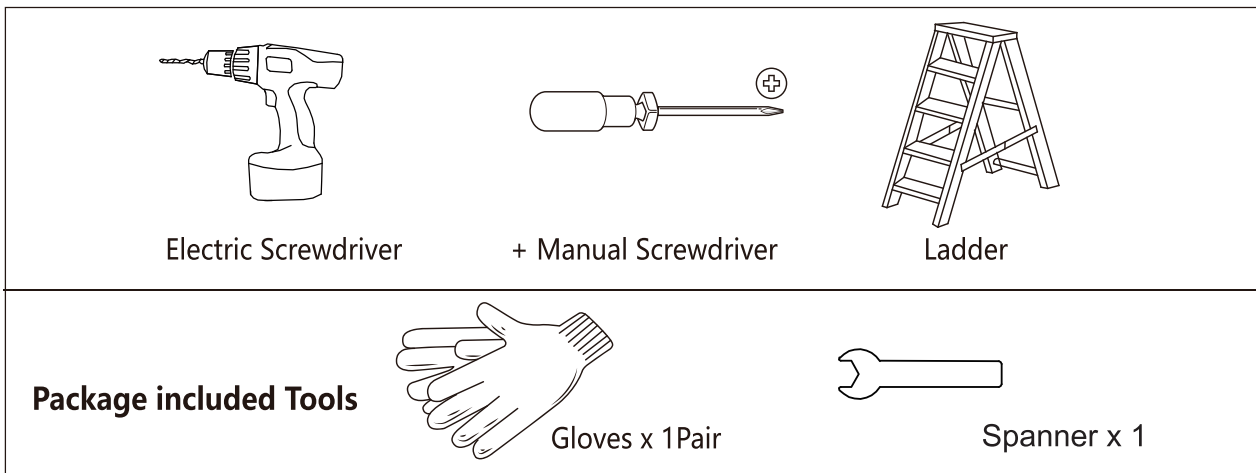

ATTENTION

Care **MUST** be taken when handing various pieces of your building since many contain sharp edges.

Do NOT attempt to assemble your building before double checking that you have all parts indicated in the parts lists. Any building left partially assembled may be seriously damaged by even light winds.

Do NOT attempt to assemble your building on a windy day, the large panels can catch the wind like a "sail", making construction difficult and unsafe. **Watch the weather closely.**

Keep children and pets away from the worksite during construction and until the building is completely assembled. This will help avoid distractions and any accidents which may occur. Never concentrate your weight on the roof of the building.

Before assembling any parts, your base should be constructed and an anchoring system should be ready to use. Your building must be anchored to prevent wind damage.

ASSEMBLY

The best location is a level area with good drainage.

Allow enough space outside the building to be able to access the roof with a ladder.

USE TEAMWORK: Two or more people are required to assemble your building.

CARE & MAINTENANCE

Do NOT use power washing to clean your shed.

Combustibles and corrosives must be stored in air tight containers designed for chemical and/or combustible storage.

Rust Protection Precautions







Avoid nicking or scraping the coating surface, inside and out.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.



Part List A

PART	NO.	QTY.	PART	NO.	QTY.
	W3-DS	30		DRY-4	1
	W3-DH1	6		DY-4	2
	W3-CS	2		K810-1	1
	W3-CS1	2		K810-1R	1
	UB3	2		Y106-2	2
	DLY-4	1			











Part List B

PART	NO.	QTY.	PART	NO.	QTY.
	W3-GB	3		K66-3L	2
	K810-7L	2		K710-4R	2
	K810-7M	4		Y106-3L	1
	K1010-7MM	2		Y106-3R	1
	K810-7R	2		K810-3L	1
	Y106-0	1		Y106-3M	1
	Y106-0L	1		Y106-3	1
	Y106-0R	1		Y106-5L	2




Part List B




PART	NO.	QTY.	PART	NO.	QTY.
	Y106-5R	2		C3-3	4
	K66-6L	4		T-F	2
	K66-6R	4		C2	2
	K810-8	4		C2-4	2
	K66-9L	2		GY	8
	K66-9R	2		Y46-12	1
	K66-10L	1		GC	4
	K66-10R	1		GE	2
	Y106-12	1		GB	2
	Y106-13	1		F1	429
	DX-3	2		V2	100
	DS-3	2		F4	4
	DCA-4	4		F2	100
	DCA-5	2		SL	42
	TCH	2		M4	1
	TCH3	1		ST	2
	TCH5	1		B	1
	TCH6	1		B1	1
	TCH7	1		B2	2
	C2-3	2		ø4.5*180 (PZ1)	2
	C4	4			

Part List C

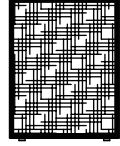
PART	NO.	QTY.	PART	NO.	QTY.
	A	x1		P	x1
	A1	x1		P1	x1
	A2	x2		S2	x32
	D	x16		X	x104
	P3	x3		S1	x108
	P2	x1		Y	x12
	N	x3		S3	x42
	N1	x1		X1	x32
	N2	x8		X2	x 16
	N4	x6		W	x4
	O1	x8		Z	x1
	N3	x6		H	x2
	O	x1		L1	x2
	N5	x10		L	x20
	J	x4		L2	x2
	Q	x4			
	Z1	x4			

Part List D


PART	NO.	QTY.
	E	x2
	E1	x2
	E2	x1
	E3	x1
	C	x4
	K	x2
	K1	x2
	M	x10
	H4	x2
	N6	x4


PART	NO.	QTY.
	G1	x1
	G	x1
	F	x2
	O2	x2
	H2	x1
	H3	x16
	R1	x1
	R2	x1
	R	x24

Shed Base Frame Assemble


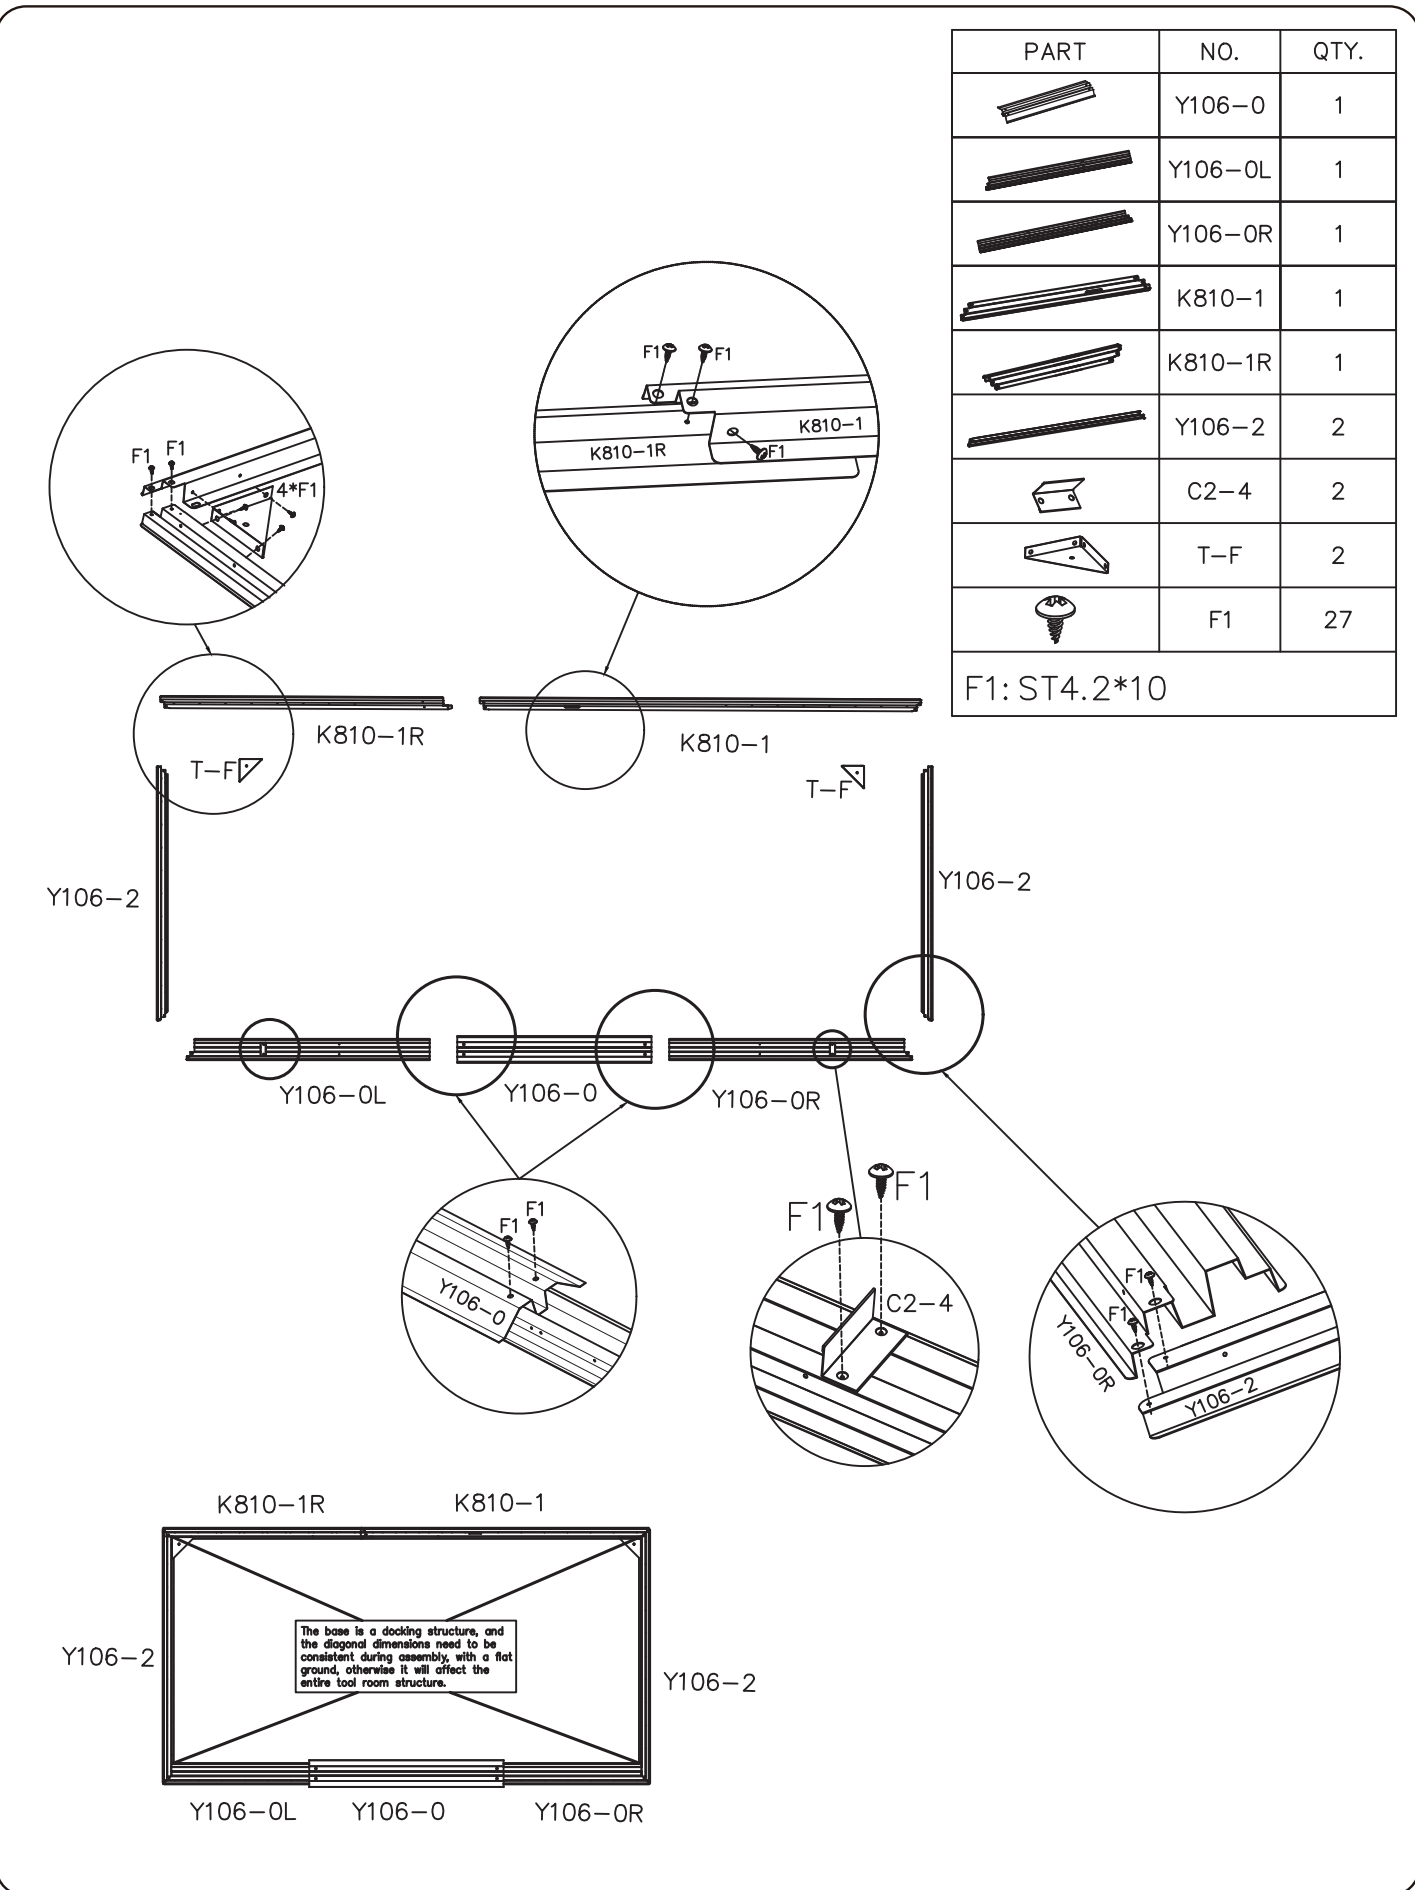


Shed Side Panels Assemble

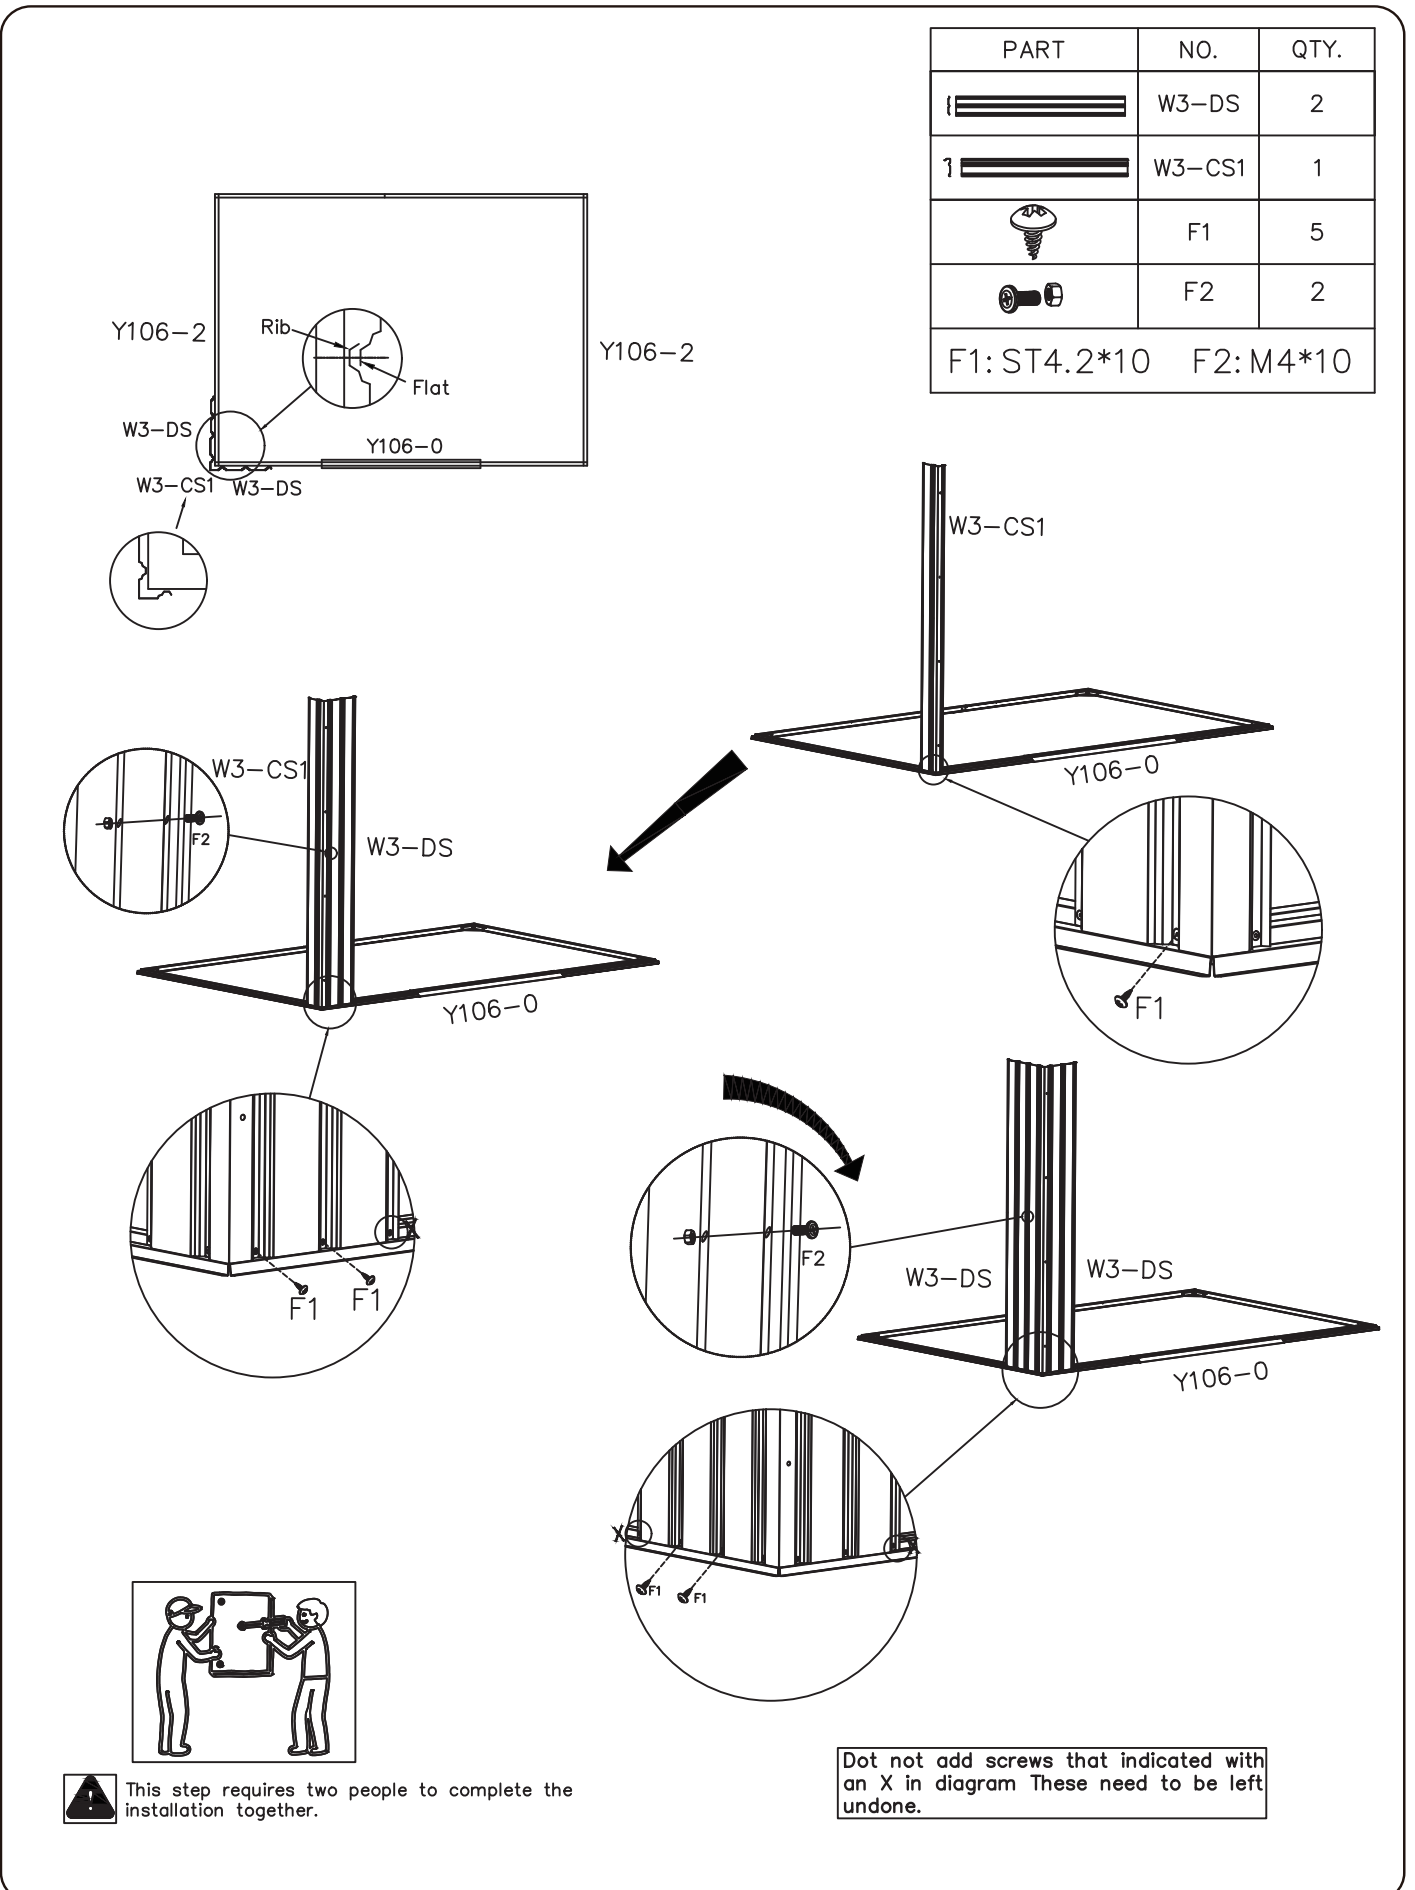

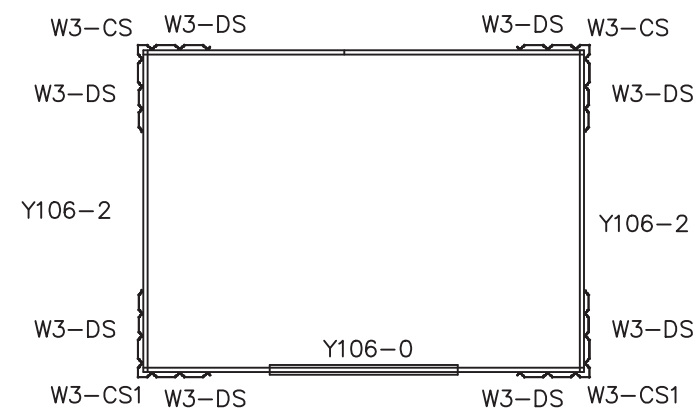


PART	NO.	QTY.
	W3-DS	6
	W3-CS	2
	W3-CS1	1
	F1	15
	F2	6
F1: ST4.2*10 F2: M4*10		

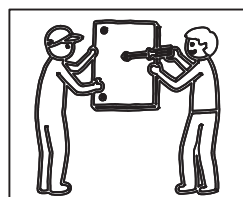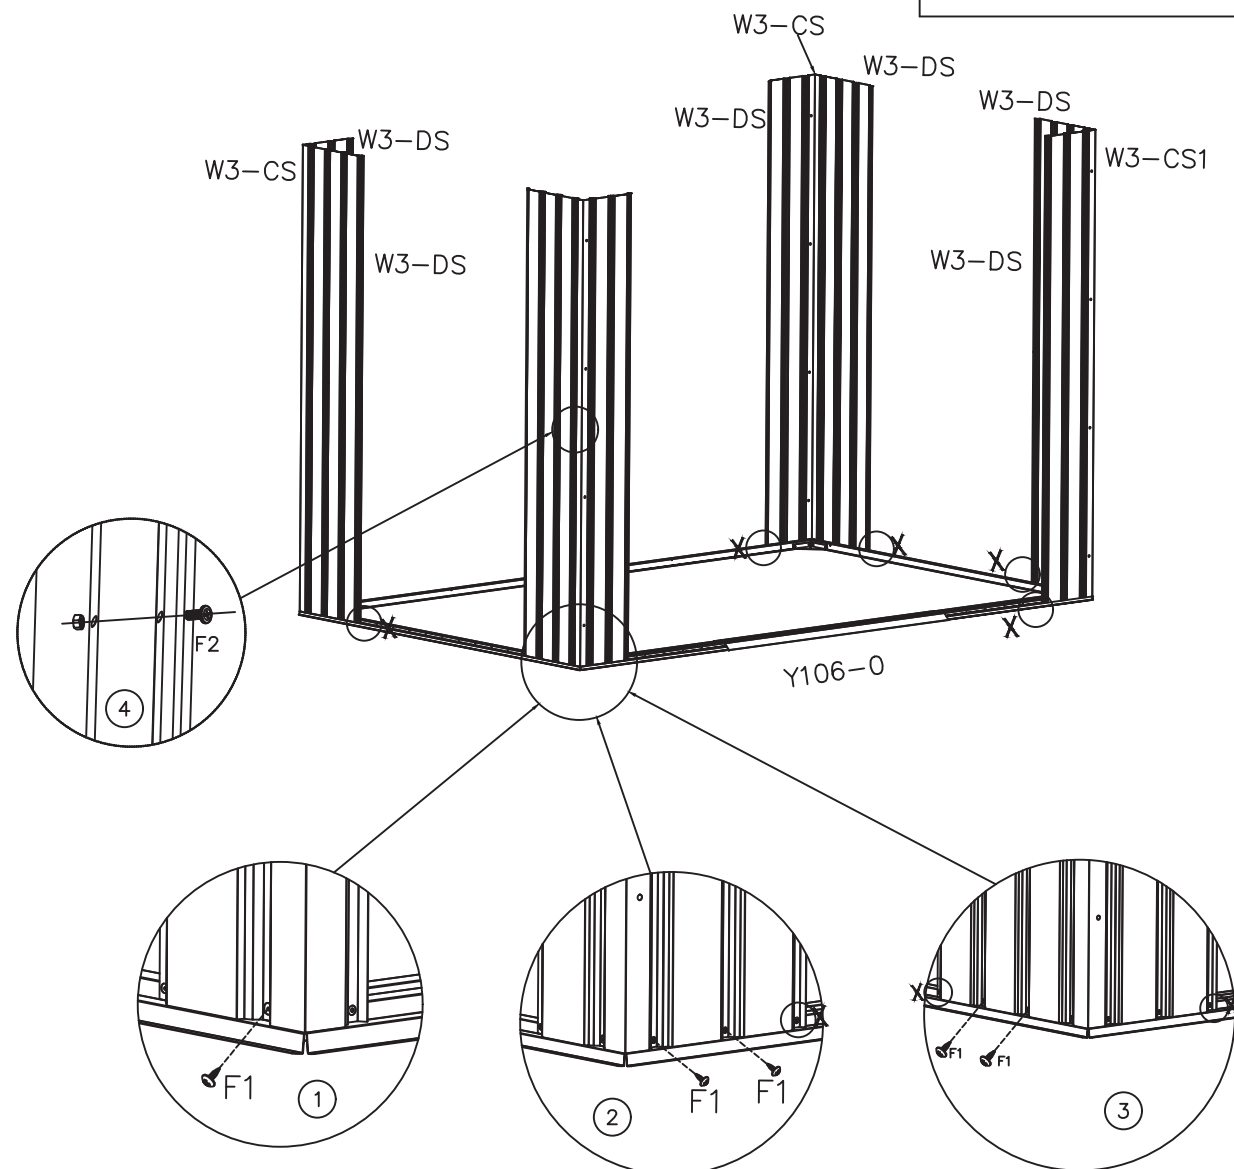



This step requires two people to complete the installation together.

Dot not add screws that indicated with an X in diagram These need to be left undone.


PART	NO.	QTY.
	K66-3L	2
	K710-4R	2
	F1	20
F1: ST4.2*10		

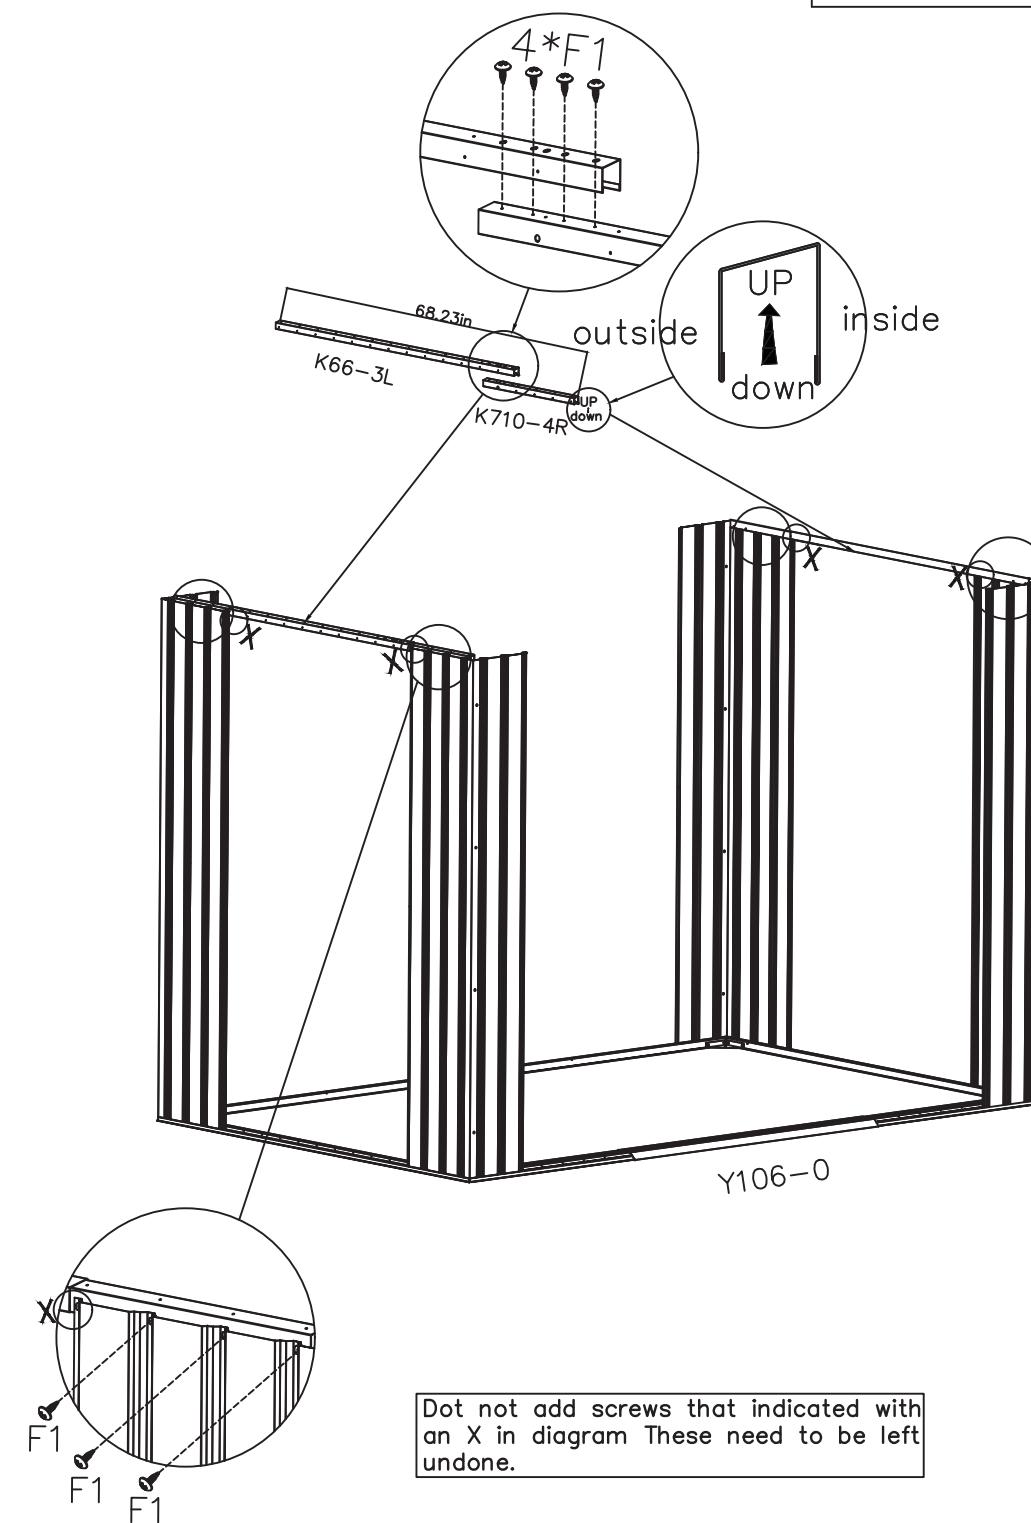


Dot not add screws that indicated with an X in diagram These need to be left undone.

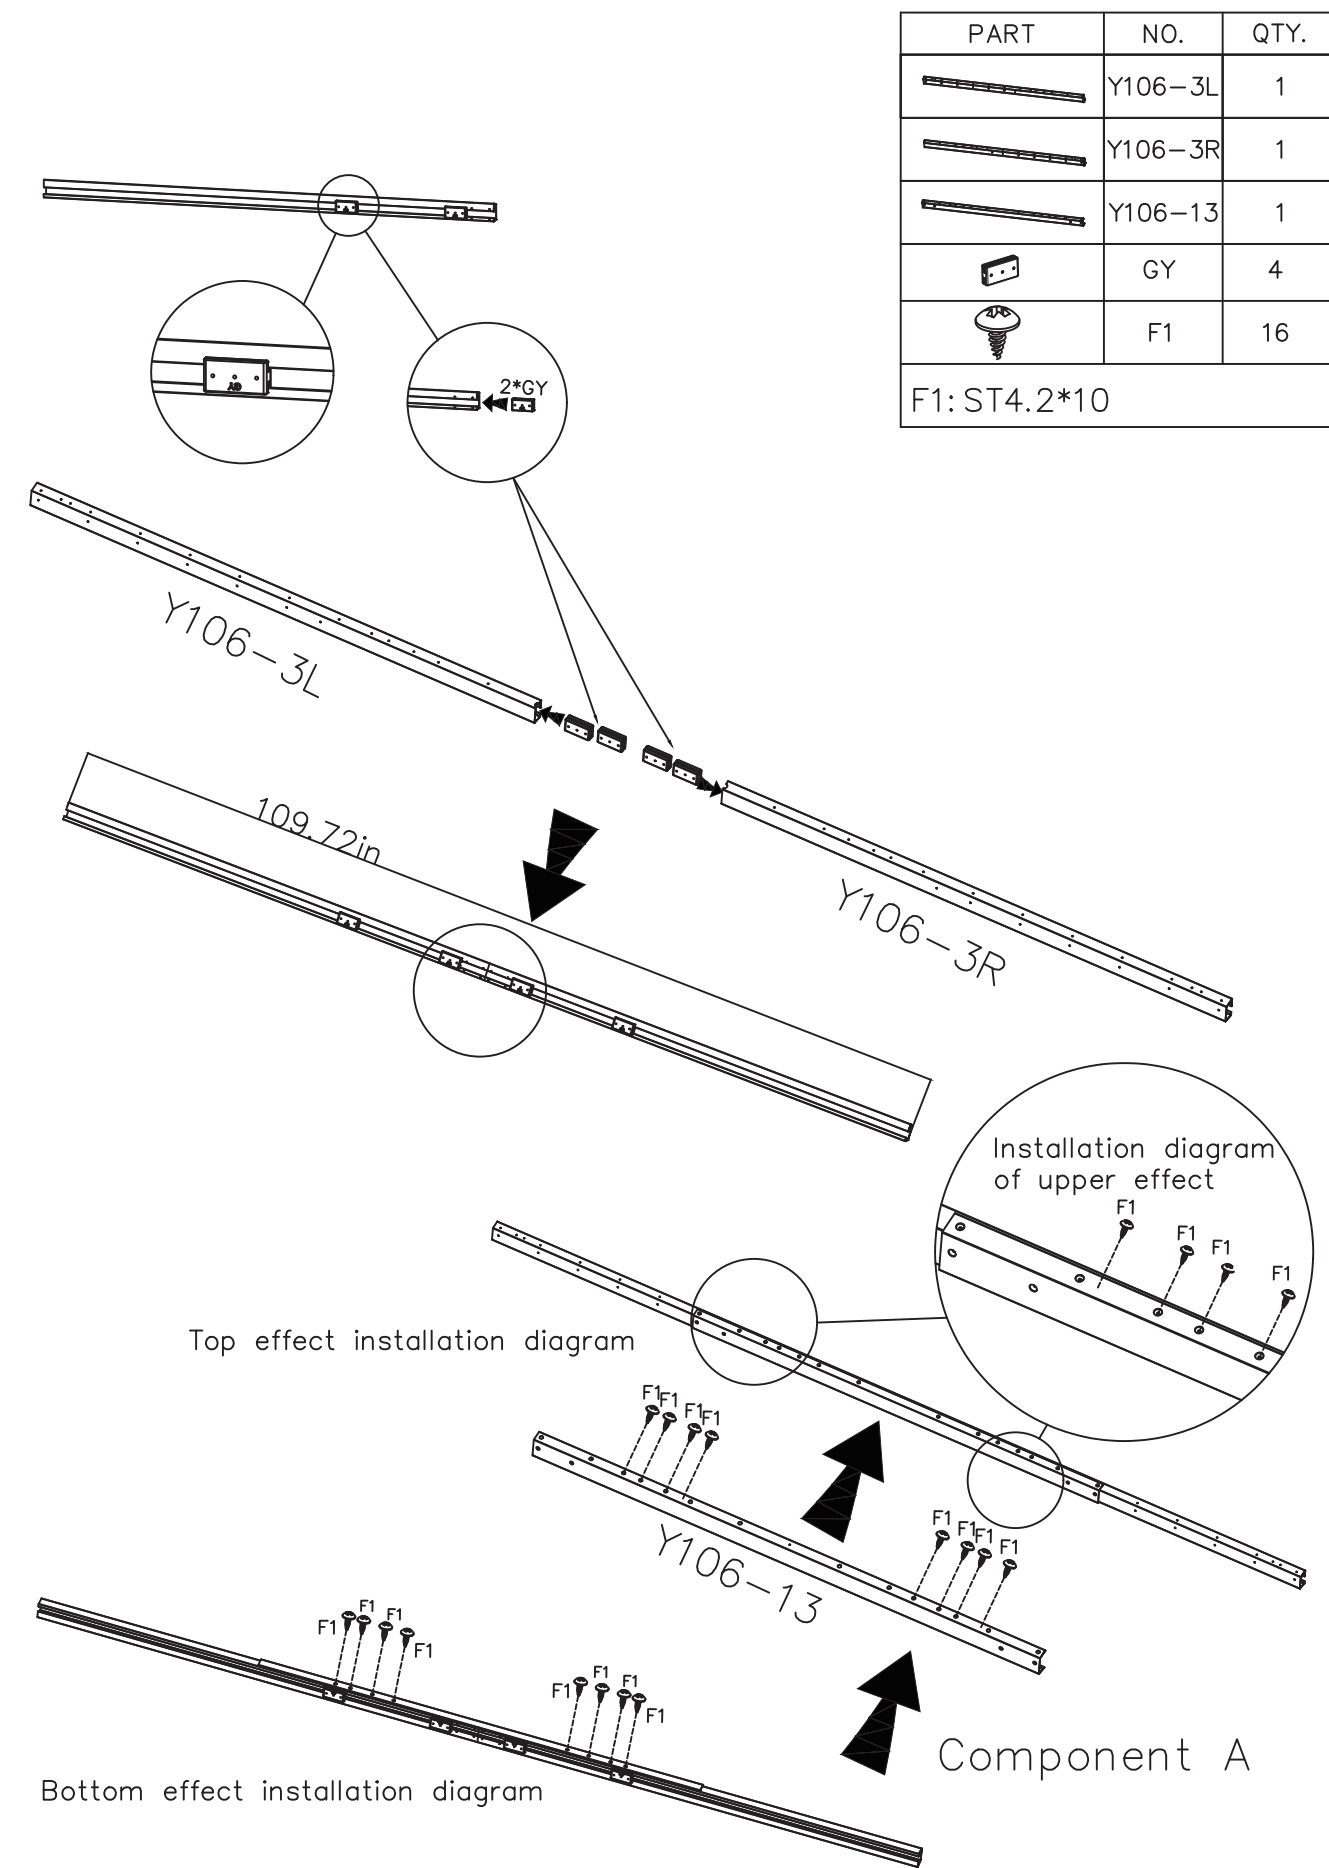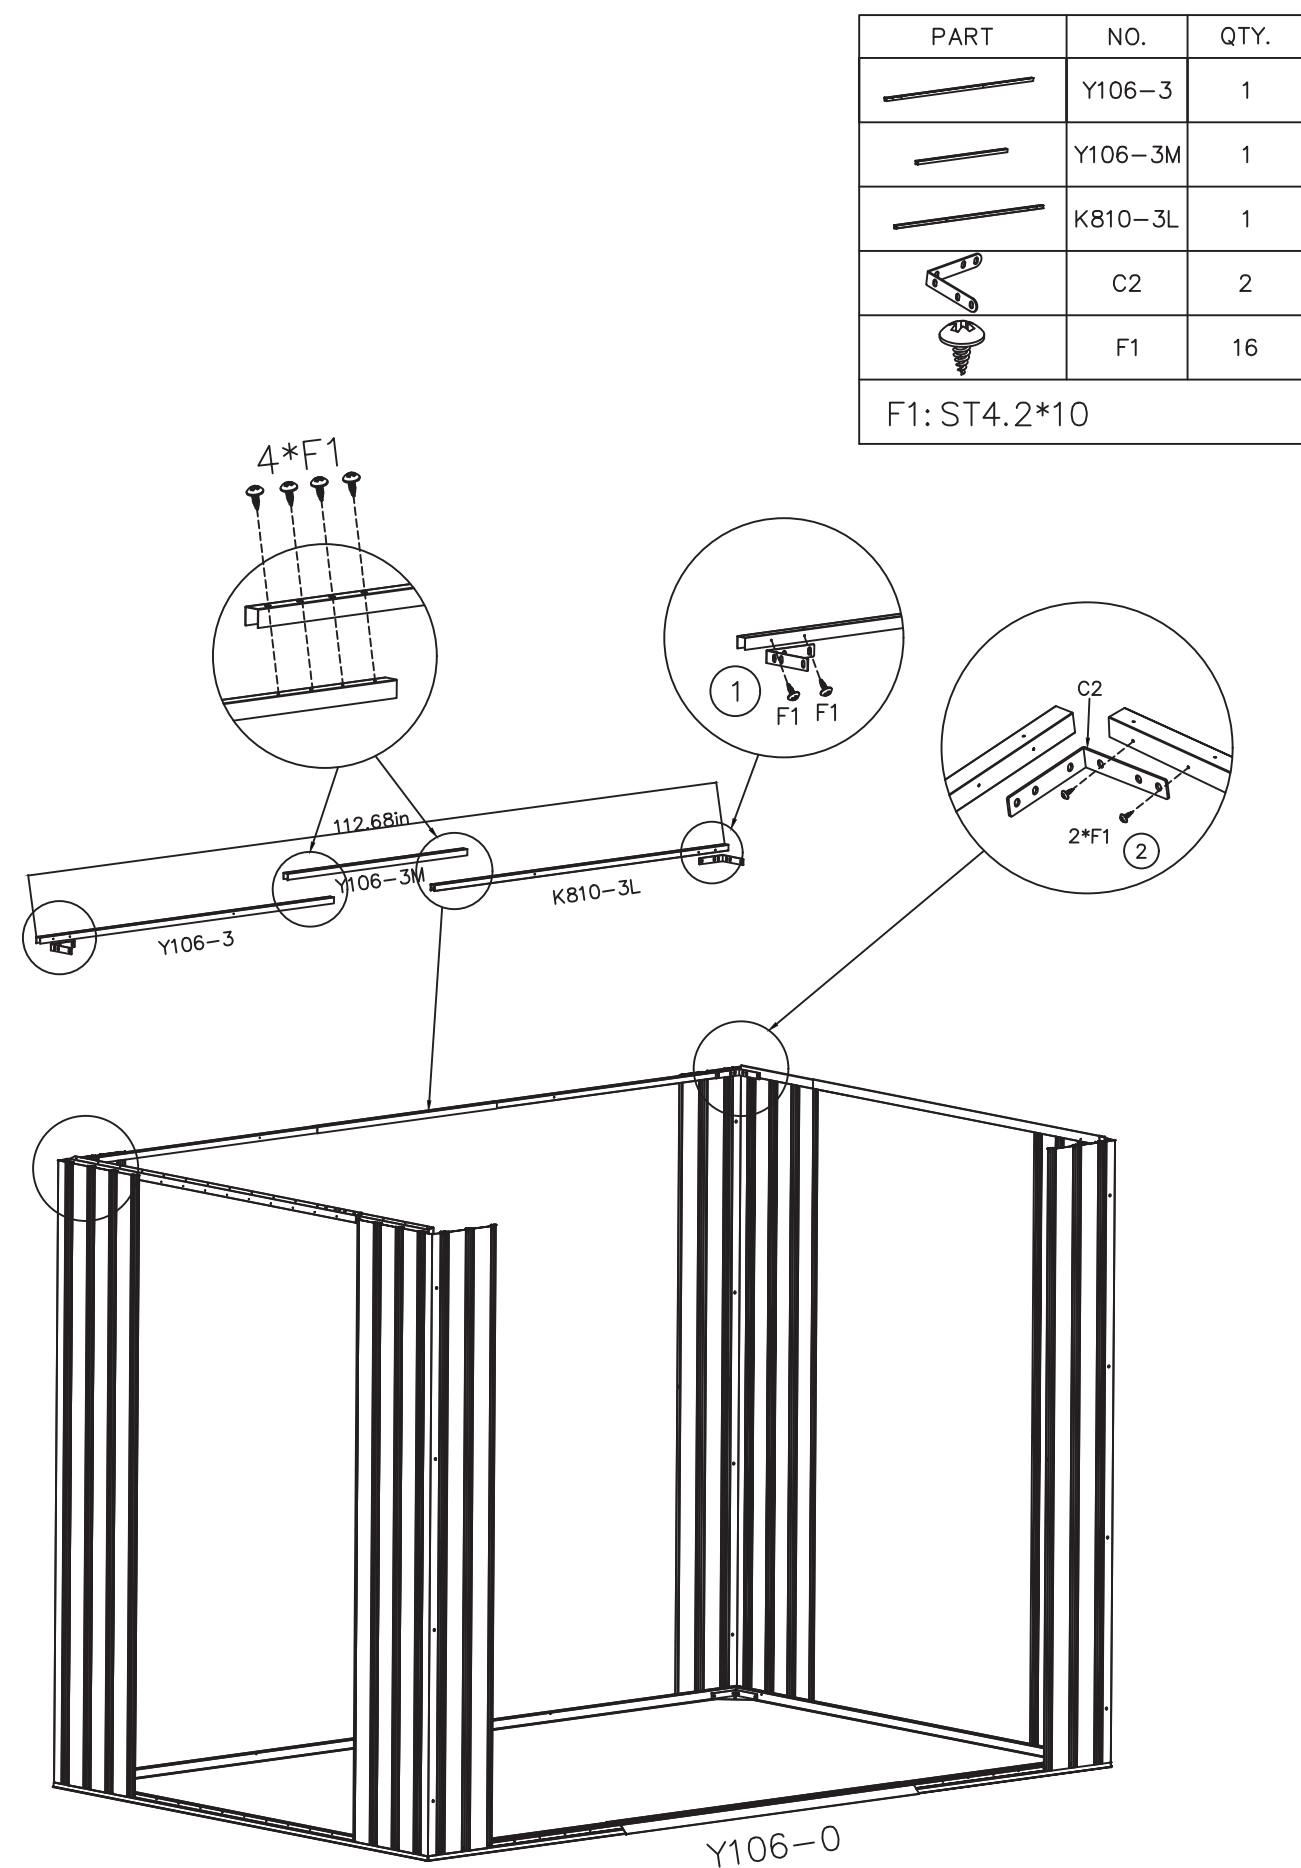

PART	NO.	QTY.
	Component A	1
	F1	4
F1: ST4.2*10		


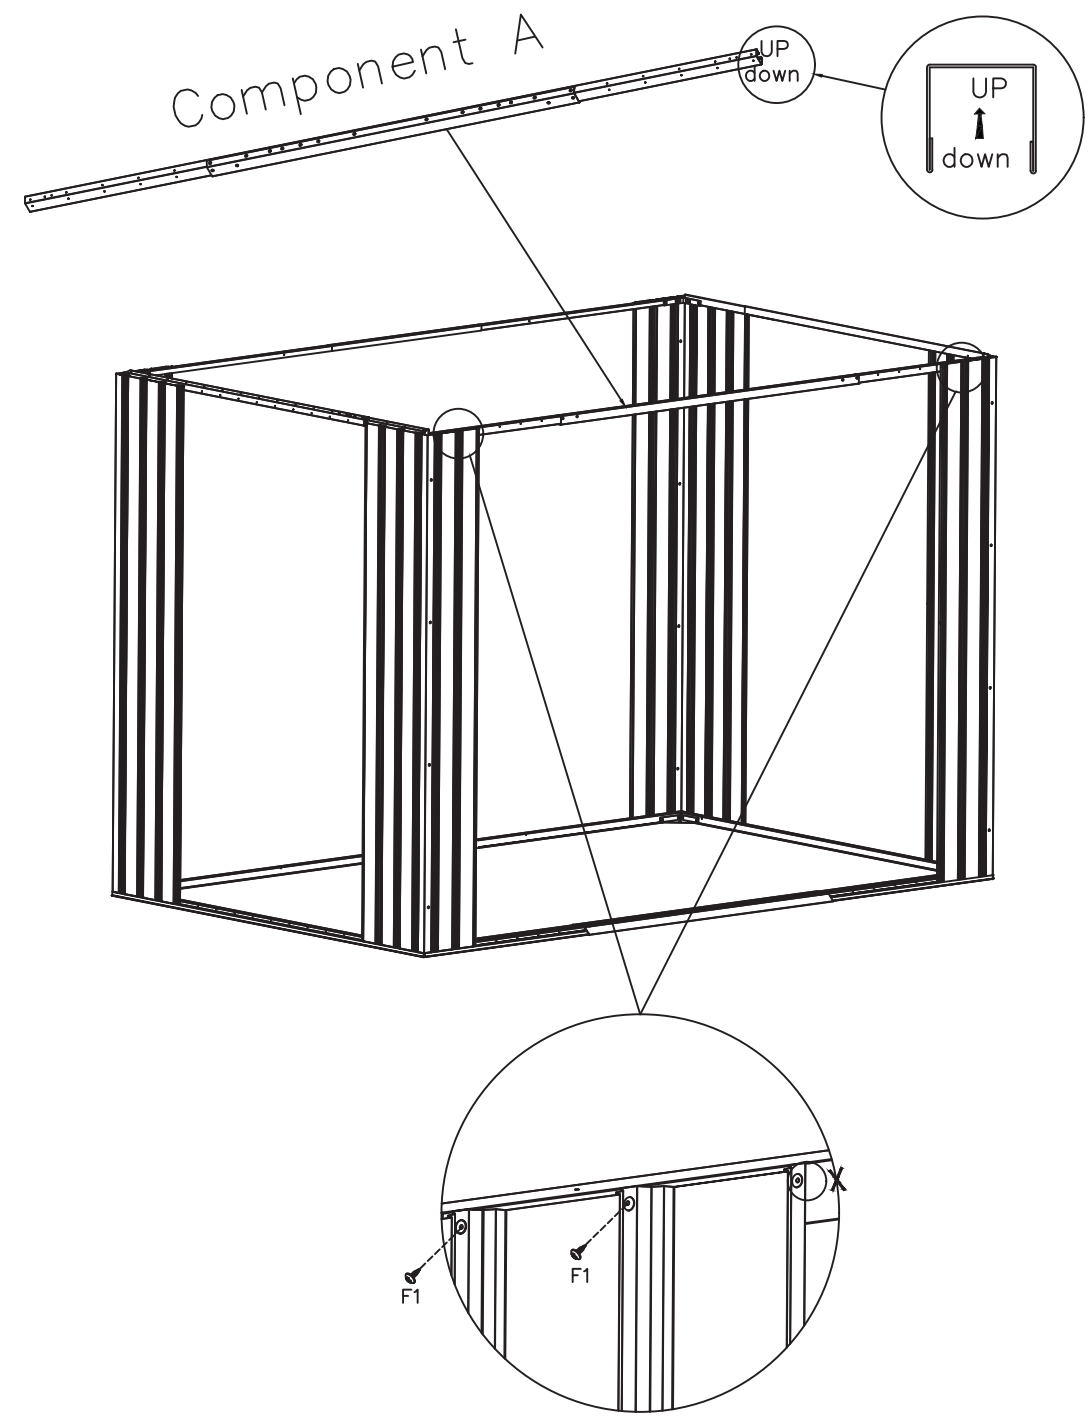


PART	NO.	QTY.
	W3-DS	11
	F1	50
	F2	12
F1: ST4.2*10		F2: M4*10

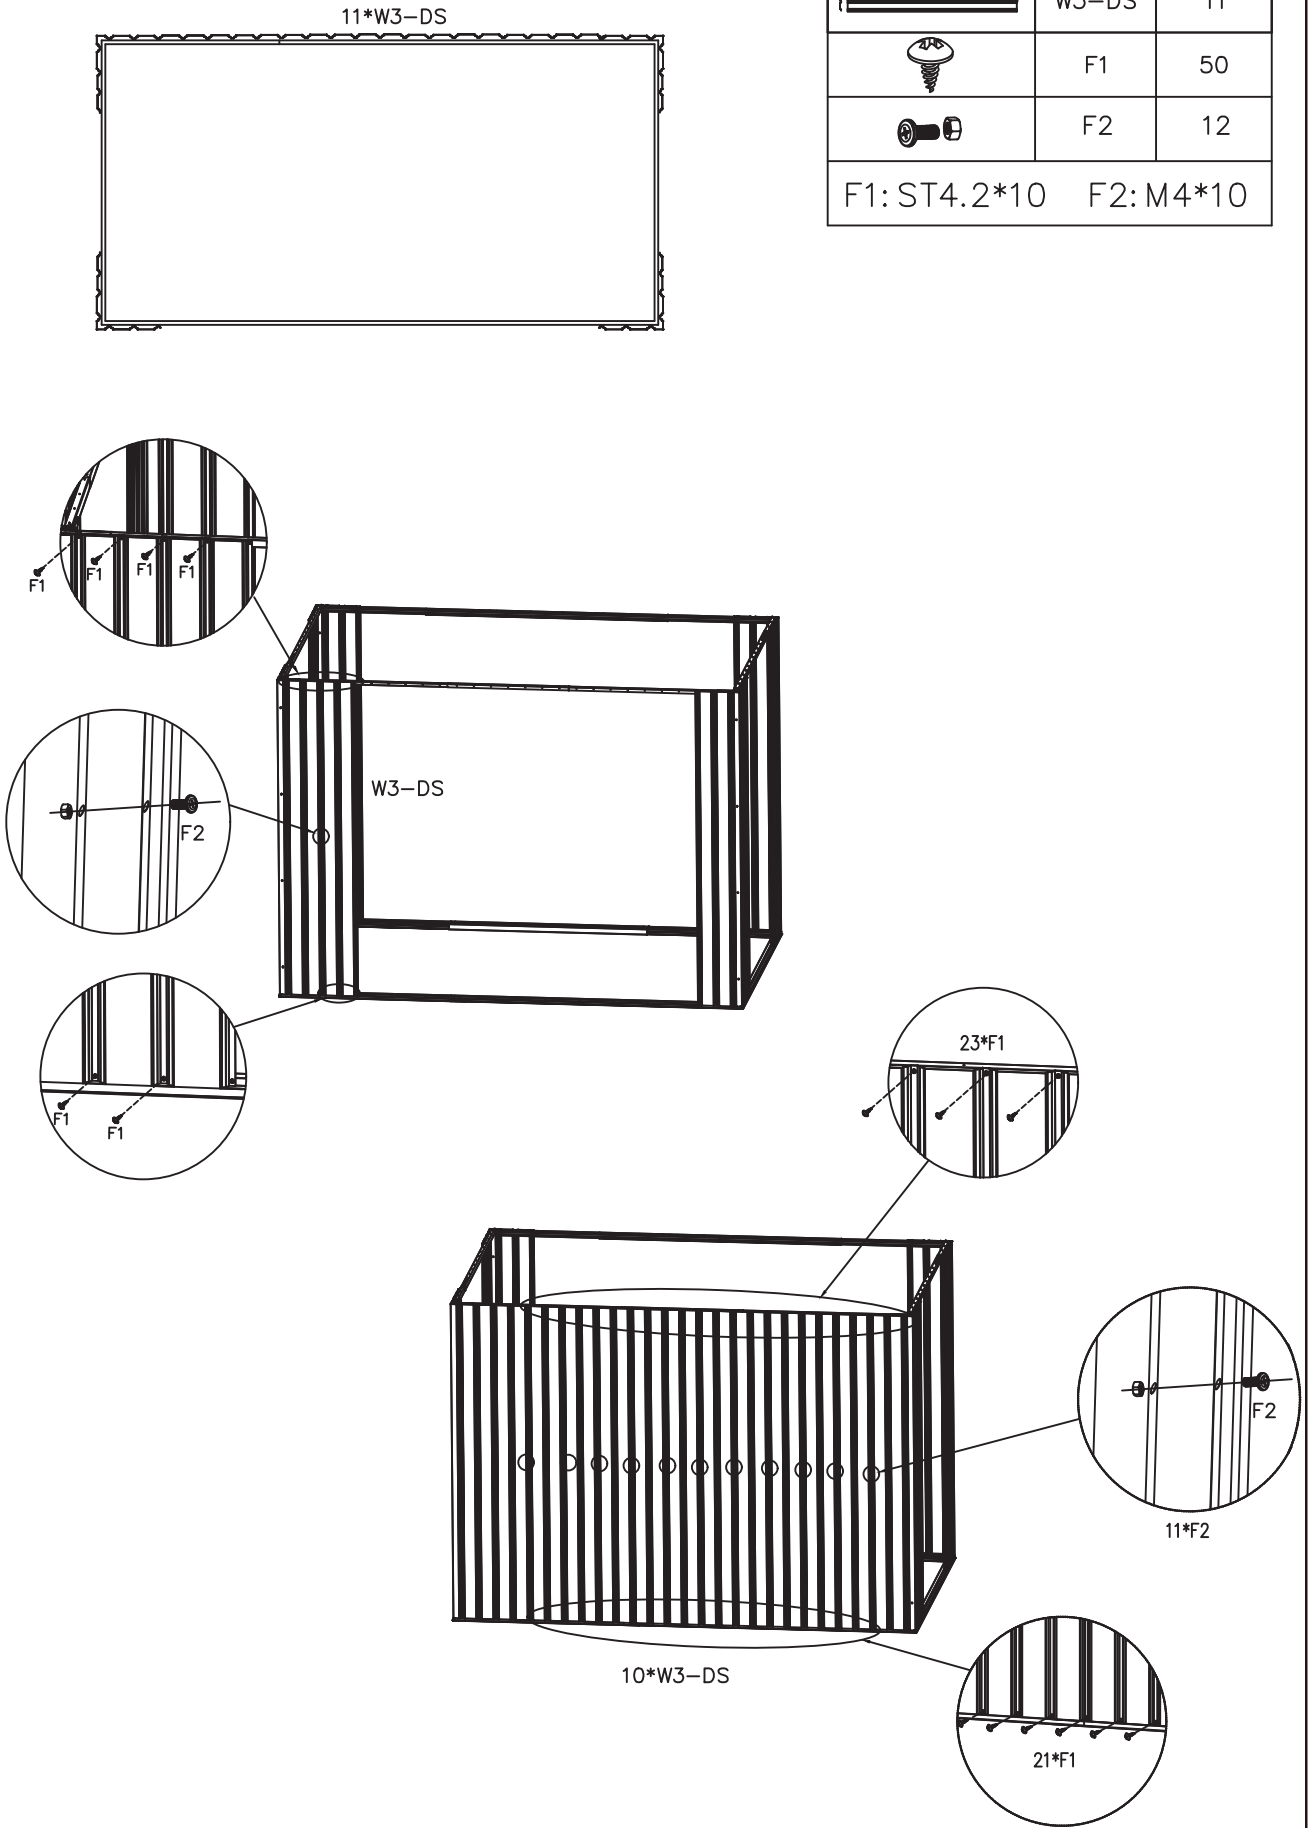


5*W3-DS

PART	NO.	QTY.
	W3-DS	5
	F1	22
	F2	6
F1: ST4.2*10 F2: M4*10		

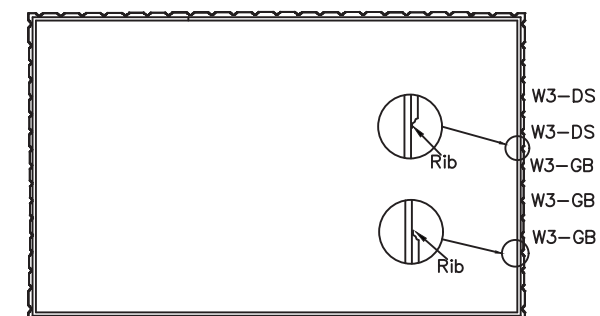
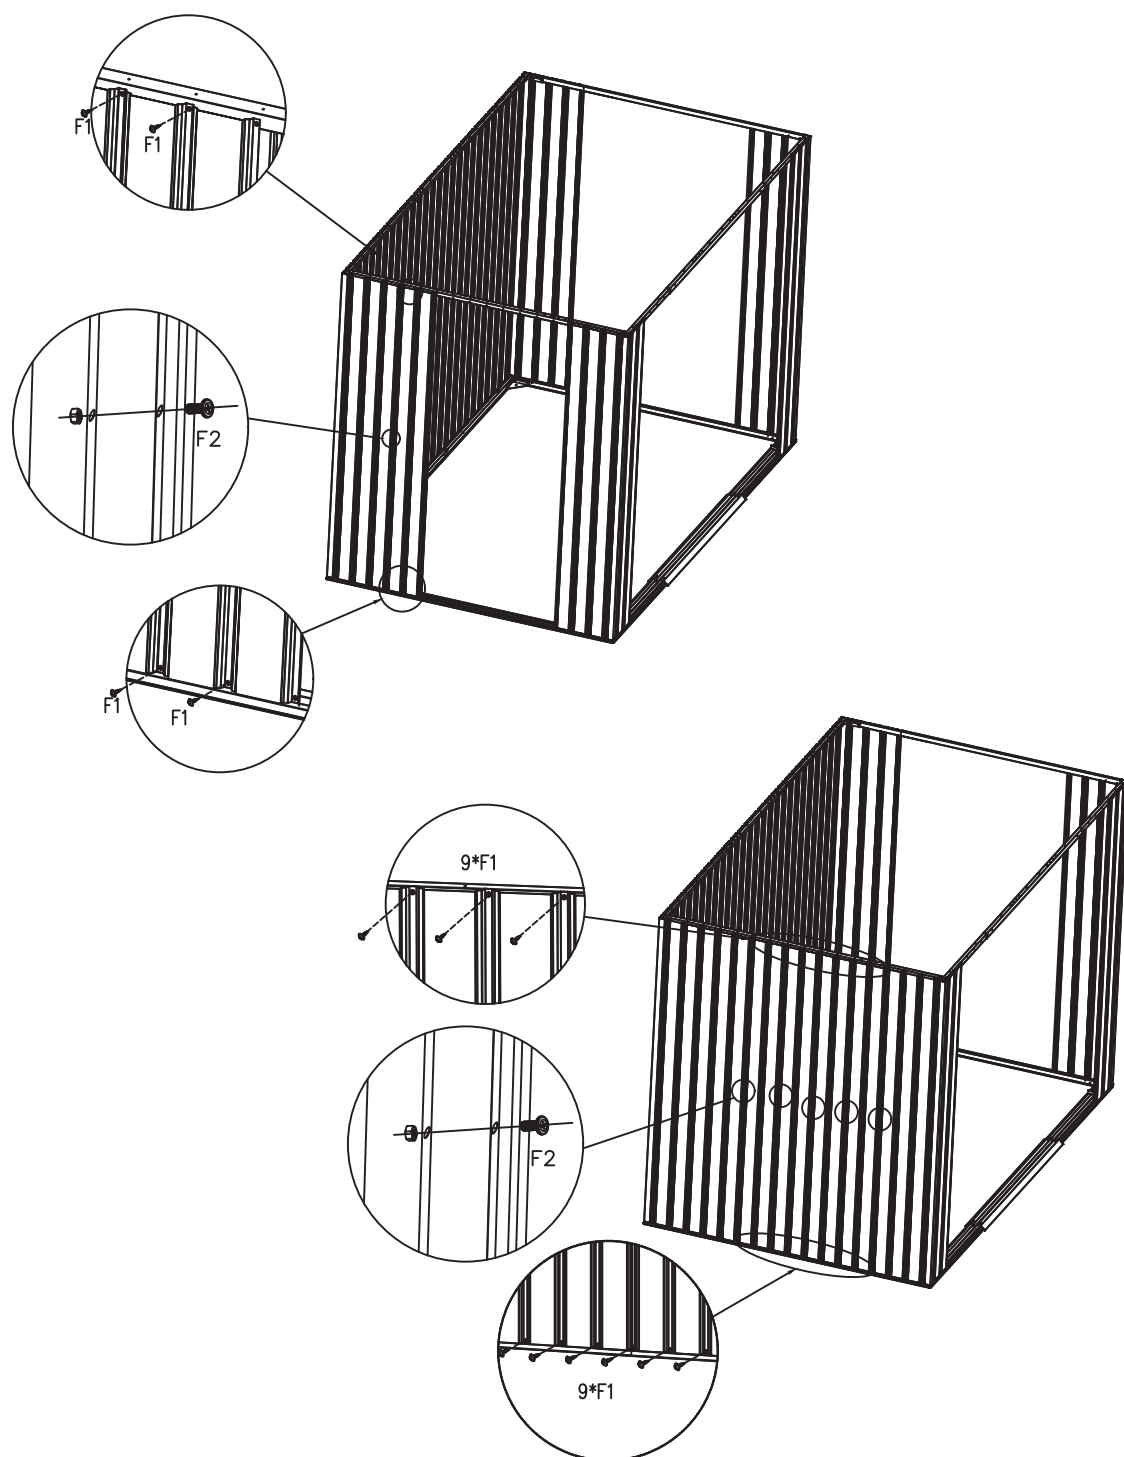


PART	NO.	QTY.
	W3-DS	2
	W3-GB	3
	F1	15
	F2	6
F1: ST4.2*10 F2: M4*10		


Dot not add screws that indicated with an X in diagram These need to be left undone.

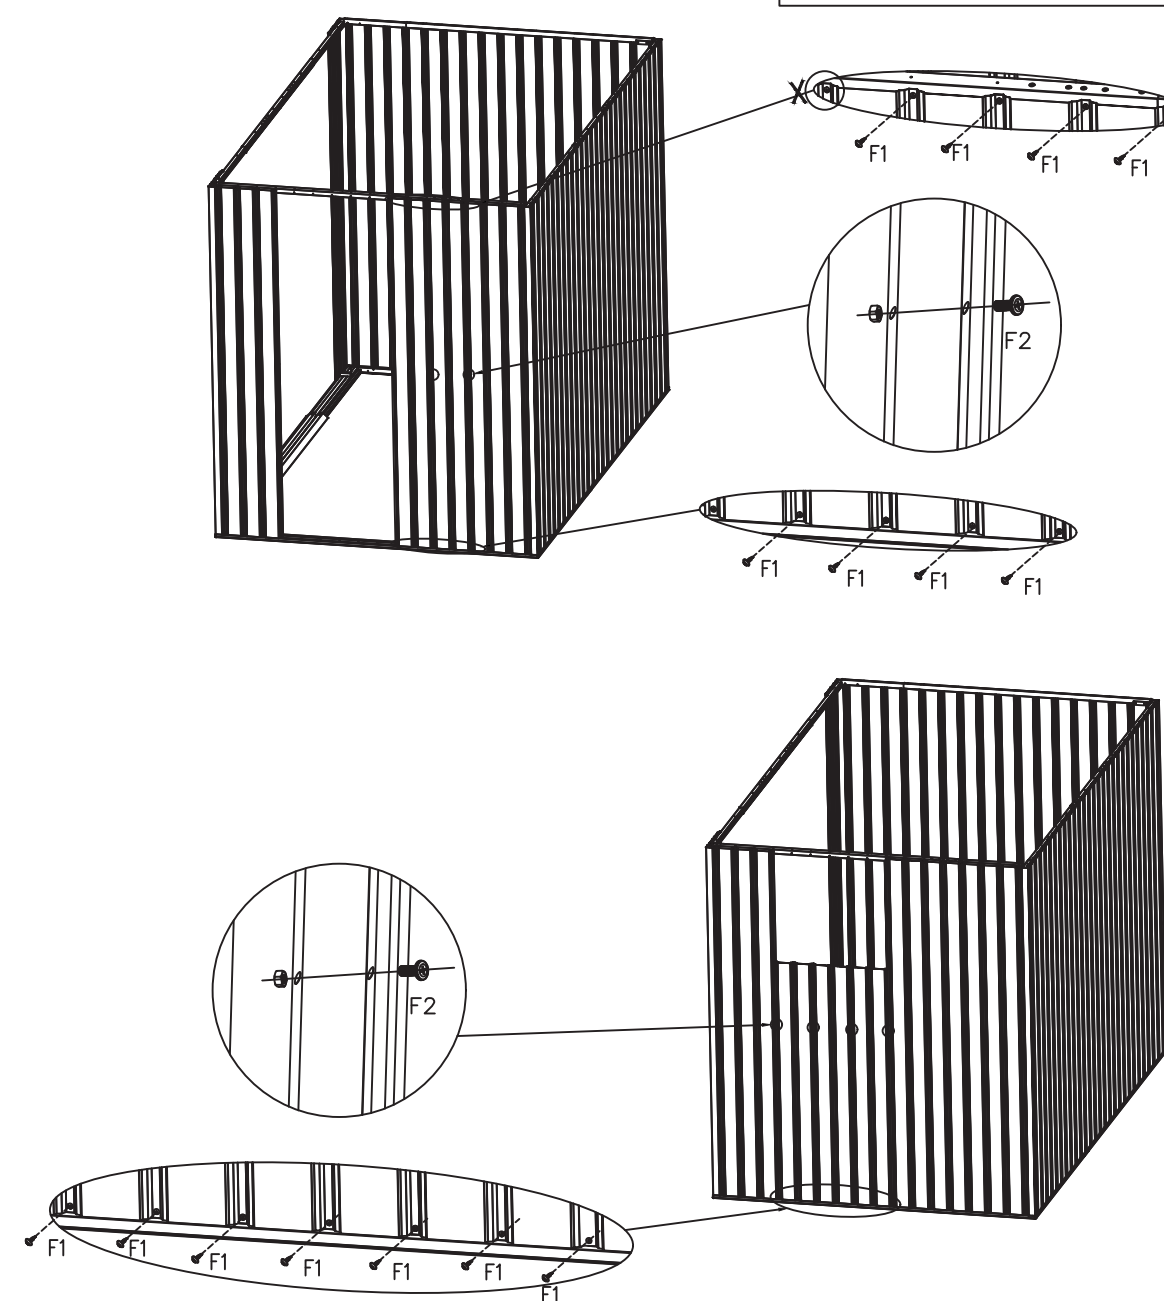



PART	NO.	QTY
	TCH	2
	TCH3	1
	F1	8

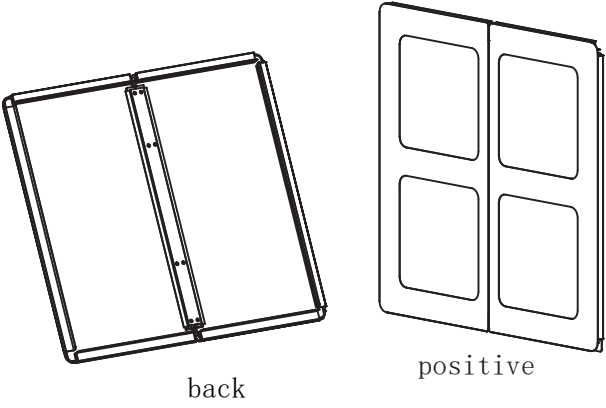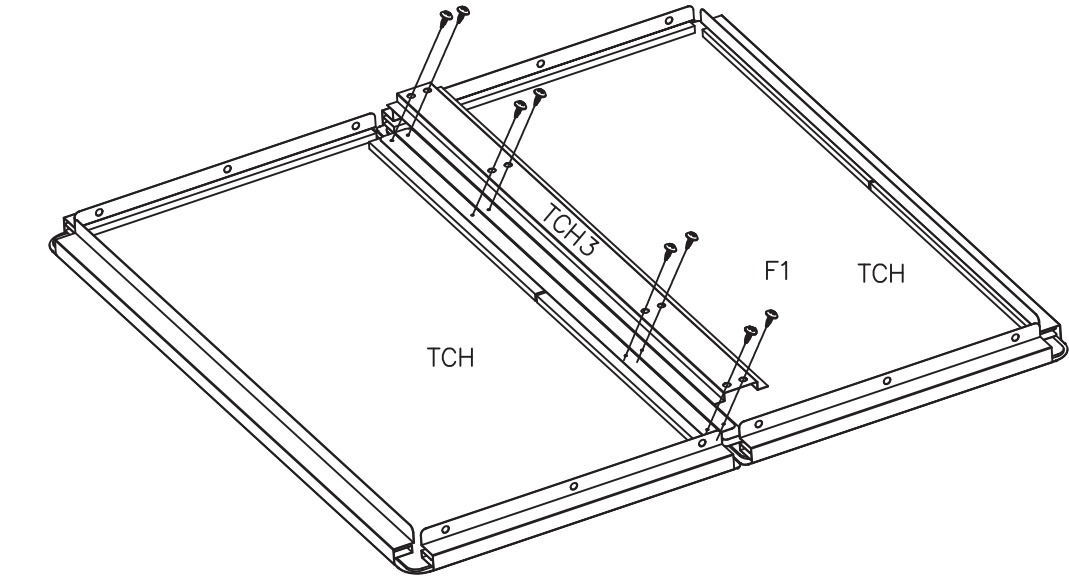

PART	NO.	QTY
	TCH5	1
	F1	6






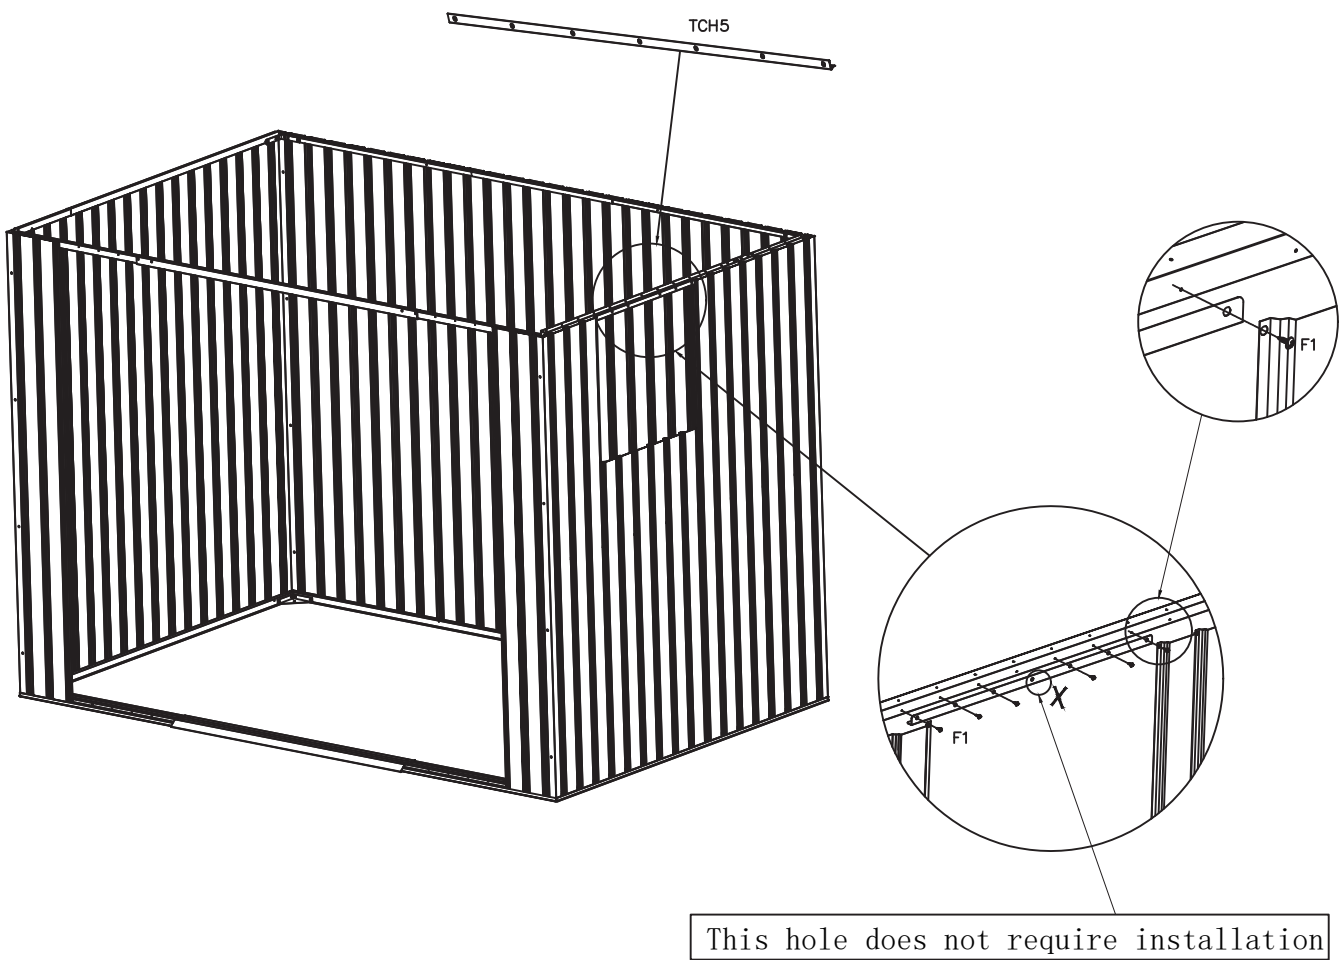



PART	NO.	QTY
	TCH6	1

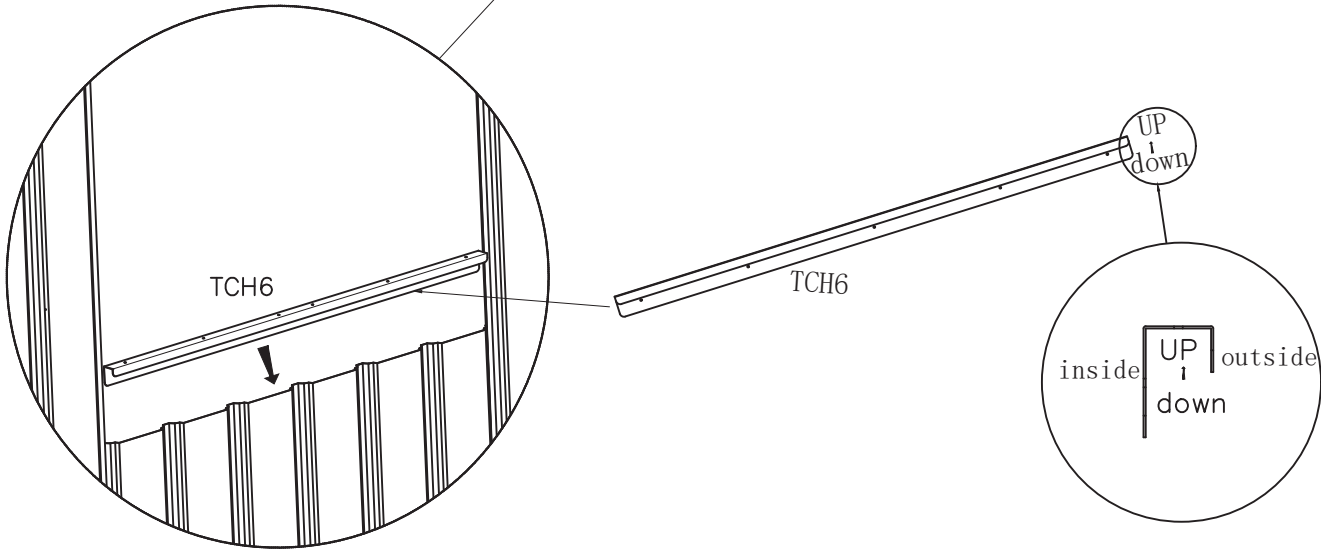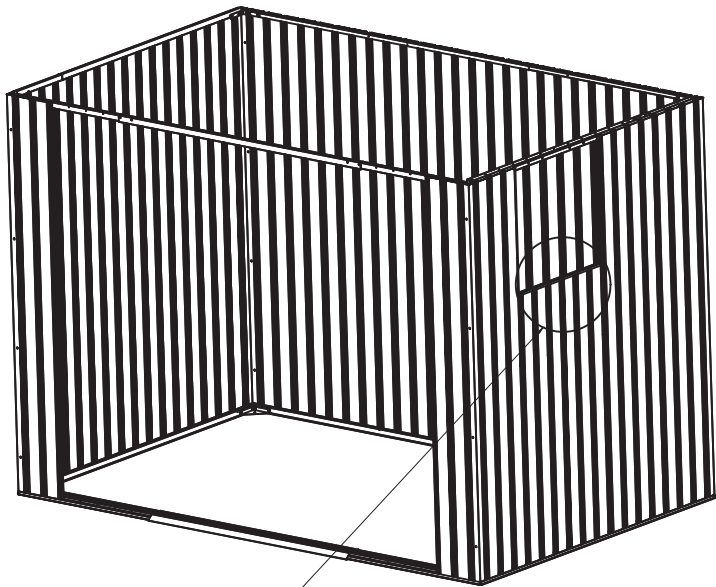


Installation method: Clip the TCH6 slot onto W3-GB, with the long side facing inward, without the need for screws to secure.

PART	NO.	QTY
	window	1
	TCH7	1
	F1	17

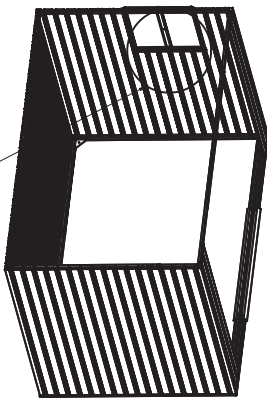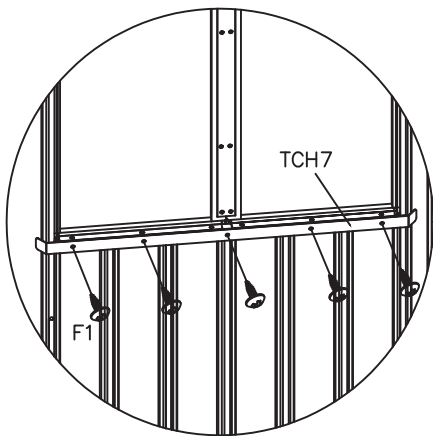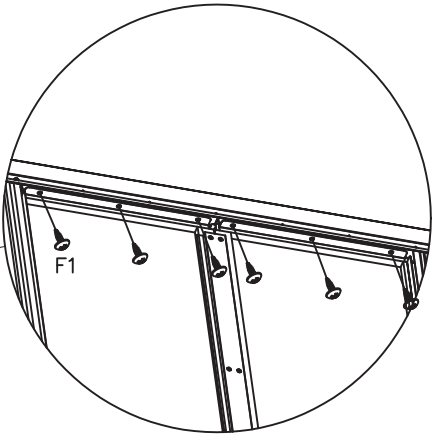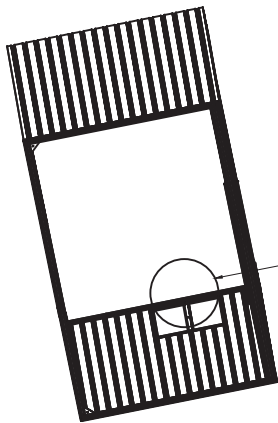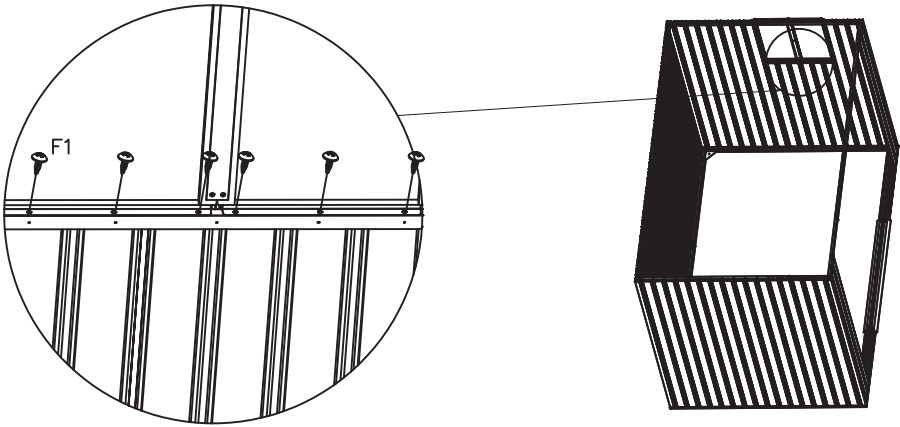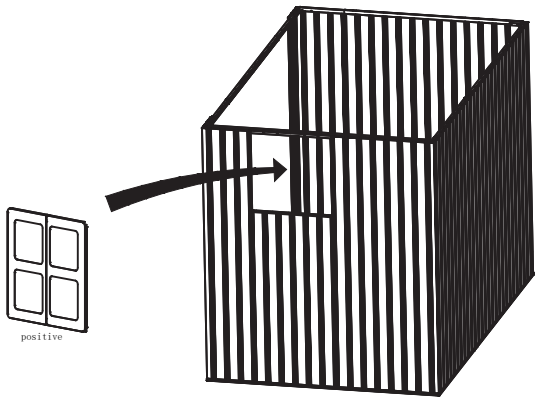

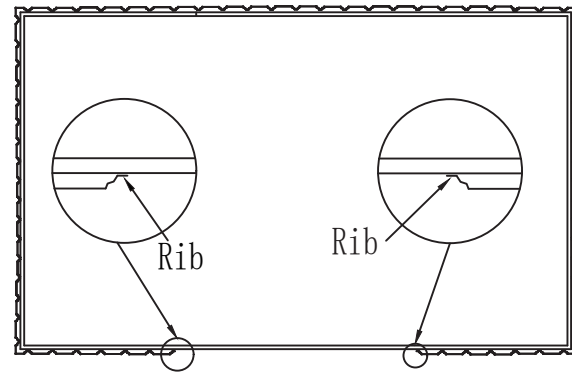


PART	NO.	QTY.
	W3-DS	4
	F1	16
	F2	4
F1: ST4.2*10 F2: M4*10		

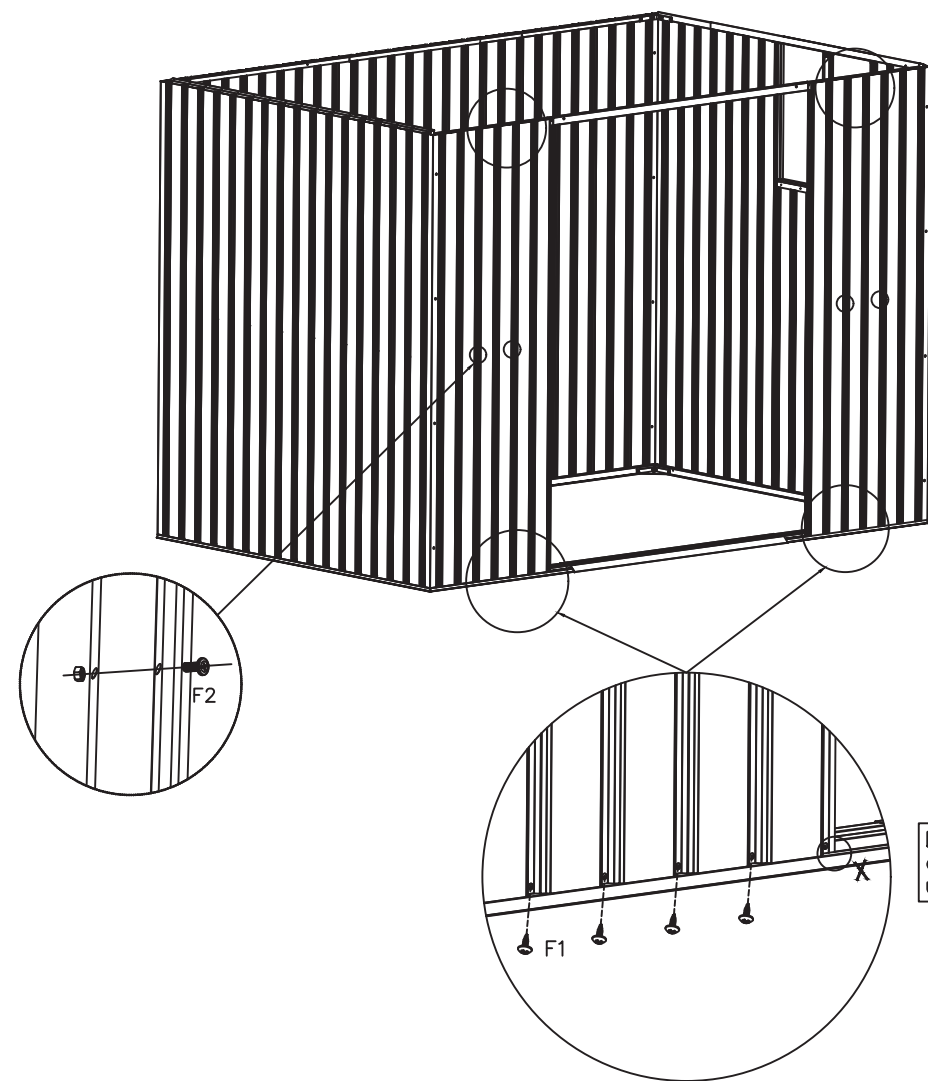


Dot not add screws that indicated with an X in diagram These need to be left undone.

PART	NO.	QTY.
	UB3	2
	F1	8
	F2	2
F1: ST4.2*10 F2: M4*10		

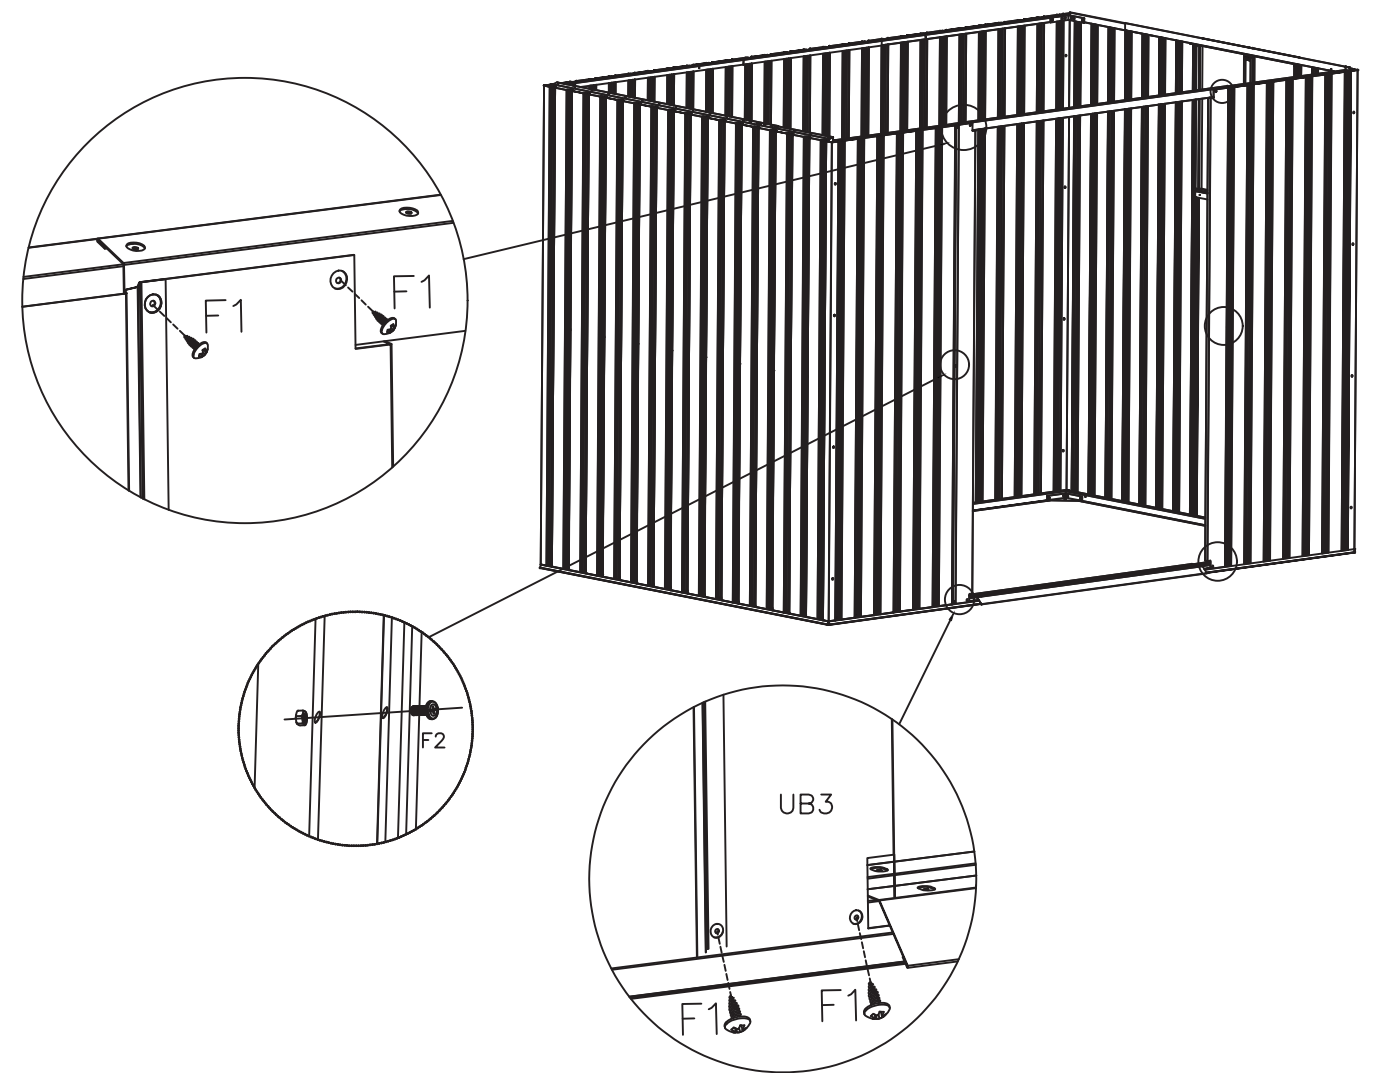




Shed Top Assemble


PART	NO.	QTY.
	Y106-5L	2
	Y106-5R	2
	F1	16
F1: ST4.2*10		

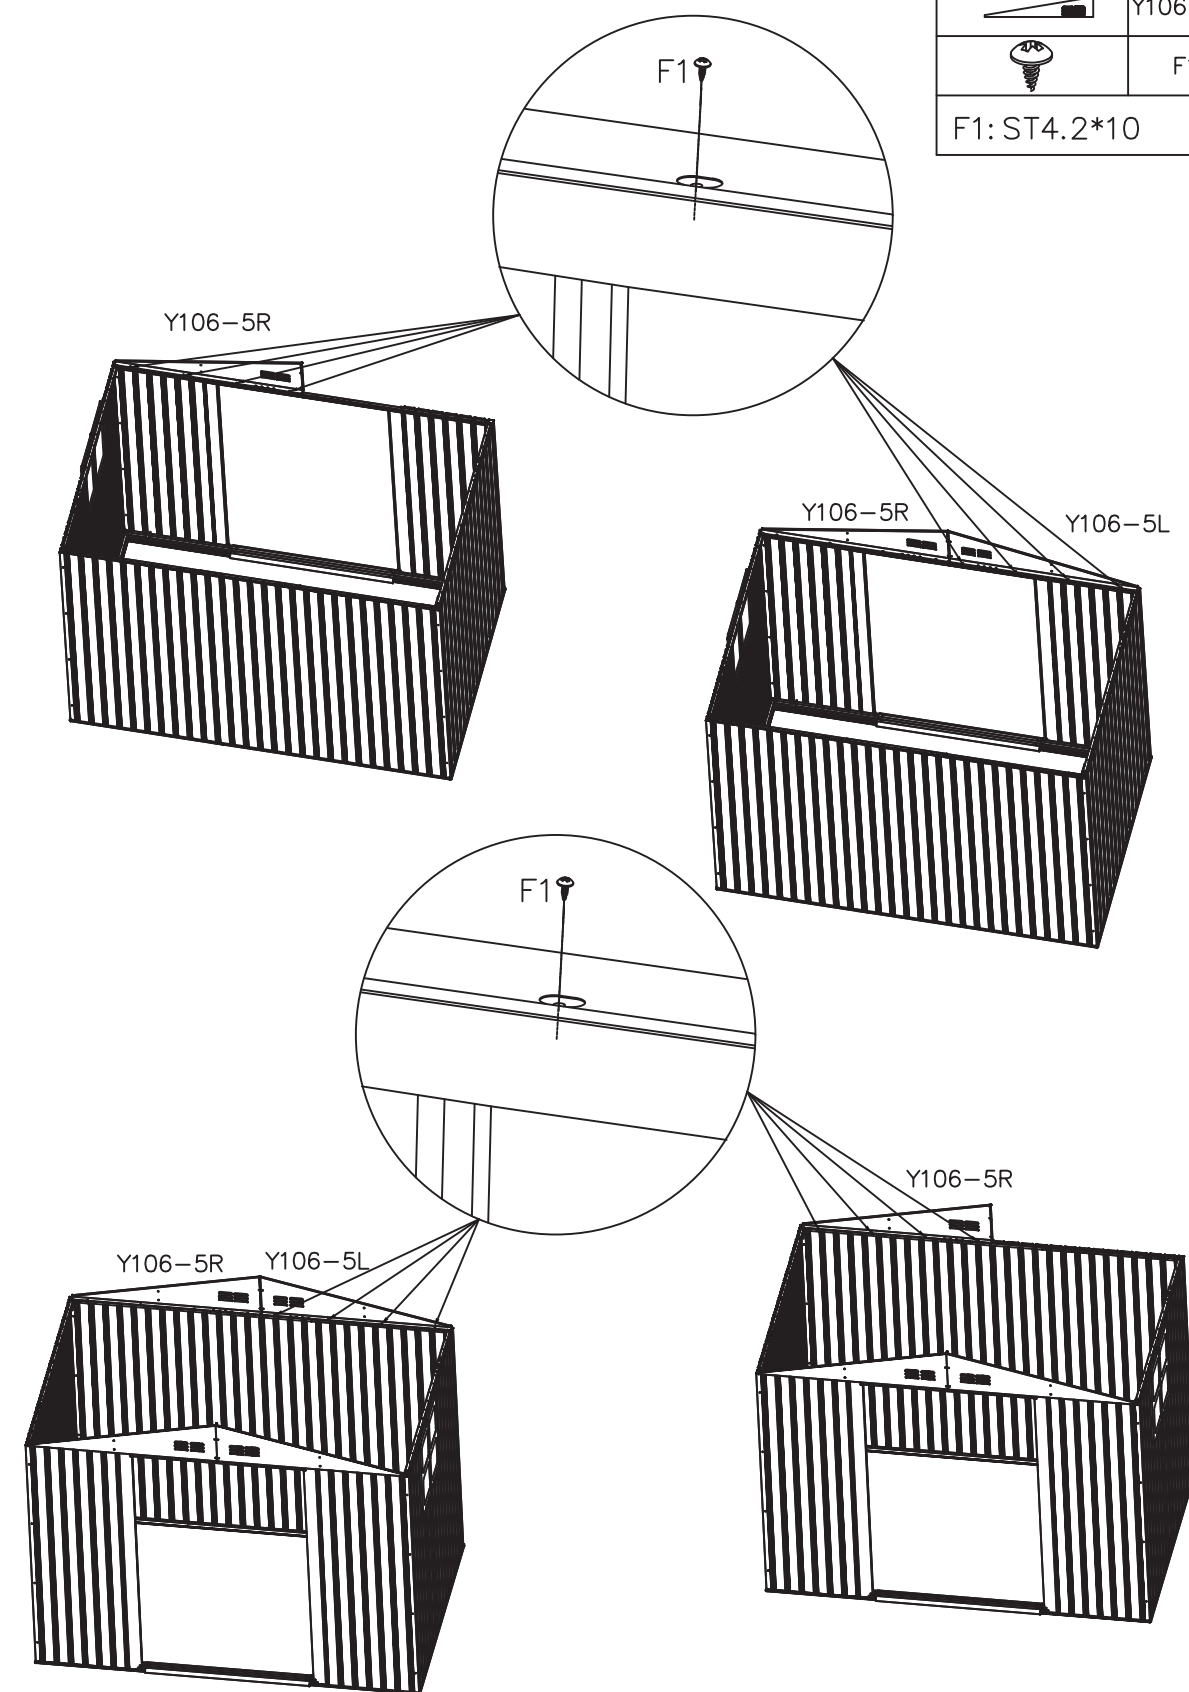


PART	NO.	QTY.
	C4	4
	C3-3	4
	F1	8
	F2	4

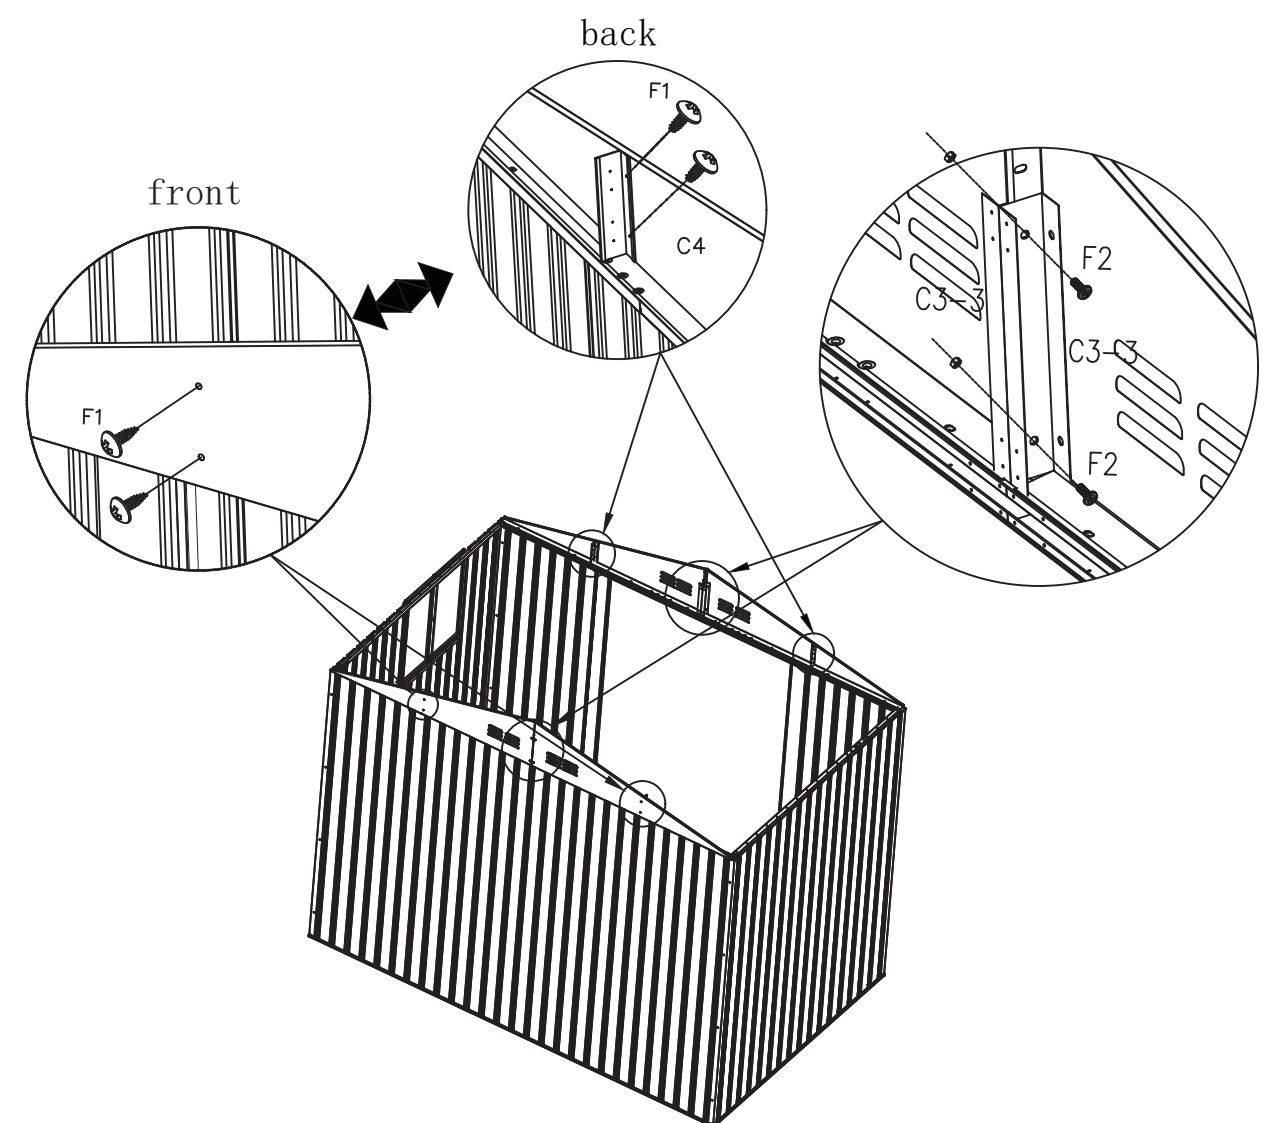

PART	NO.	QTY.
	P	1
	P1	1
	F2	4
F2: M4*10		


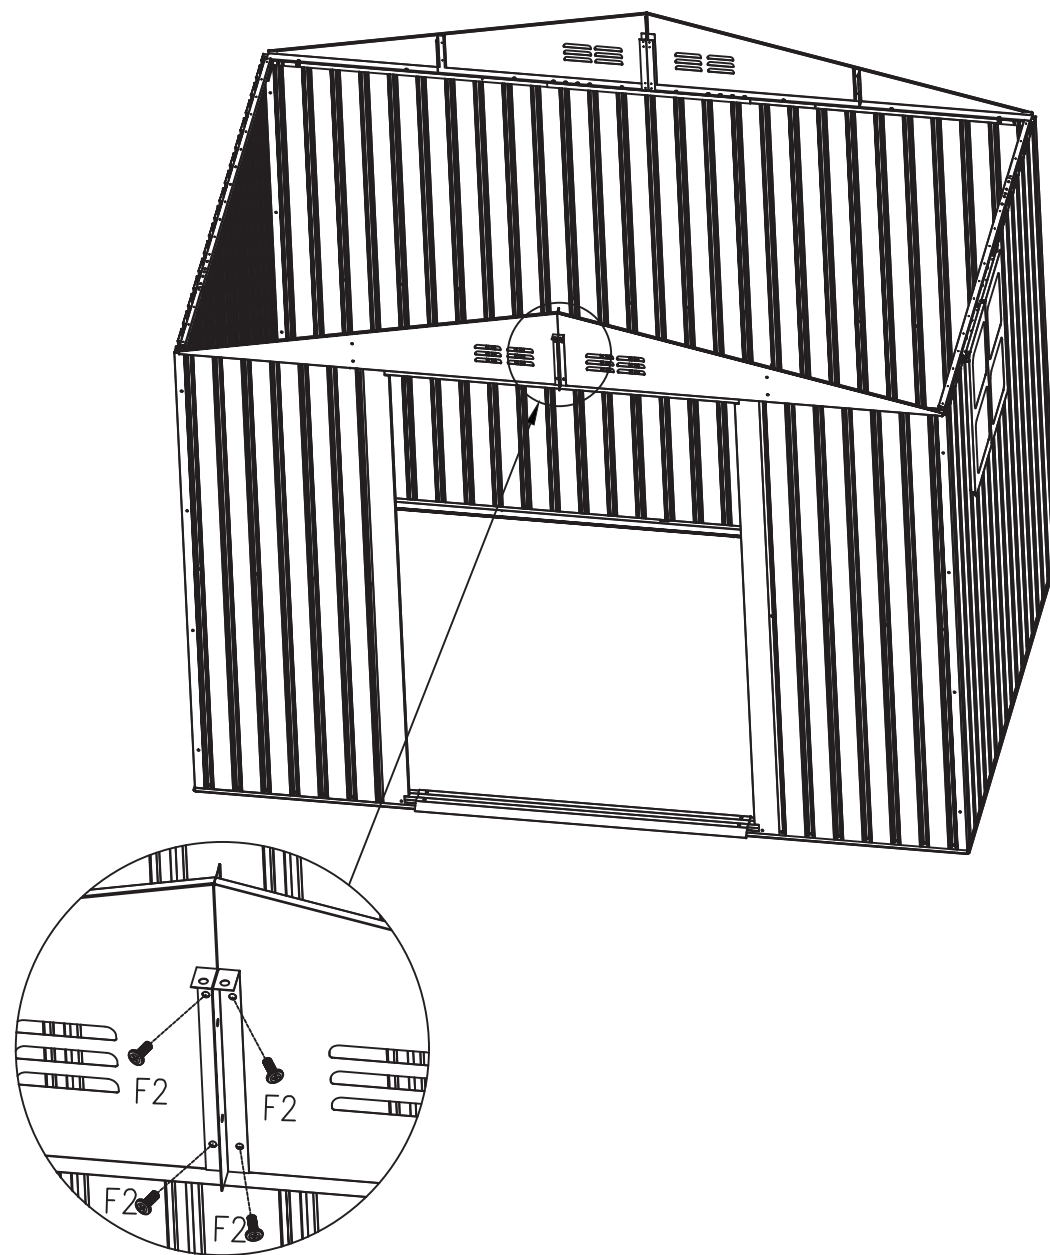


PART	NO.	QTY.
	K66-6L	2
	K66-6R	2
	F2	10
F1: ST4.2*10		

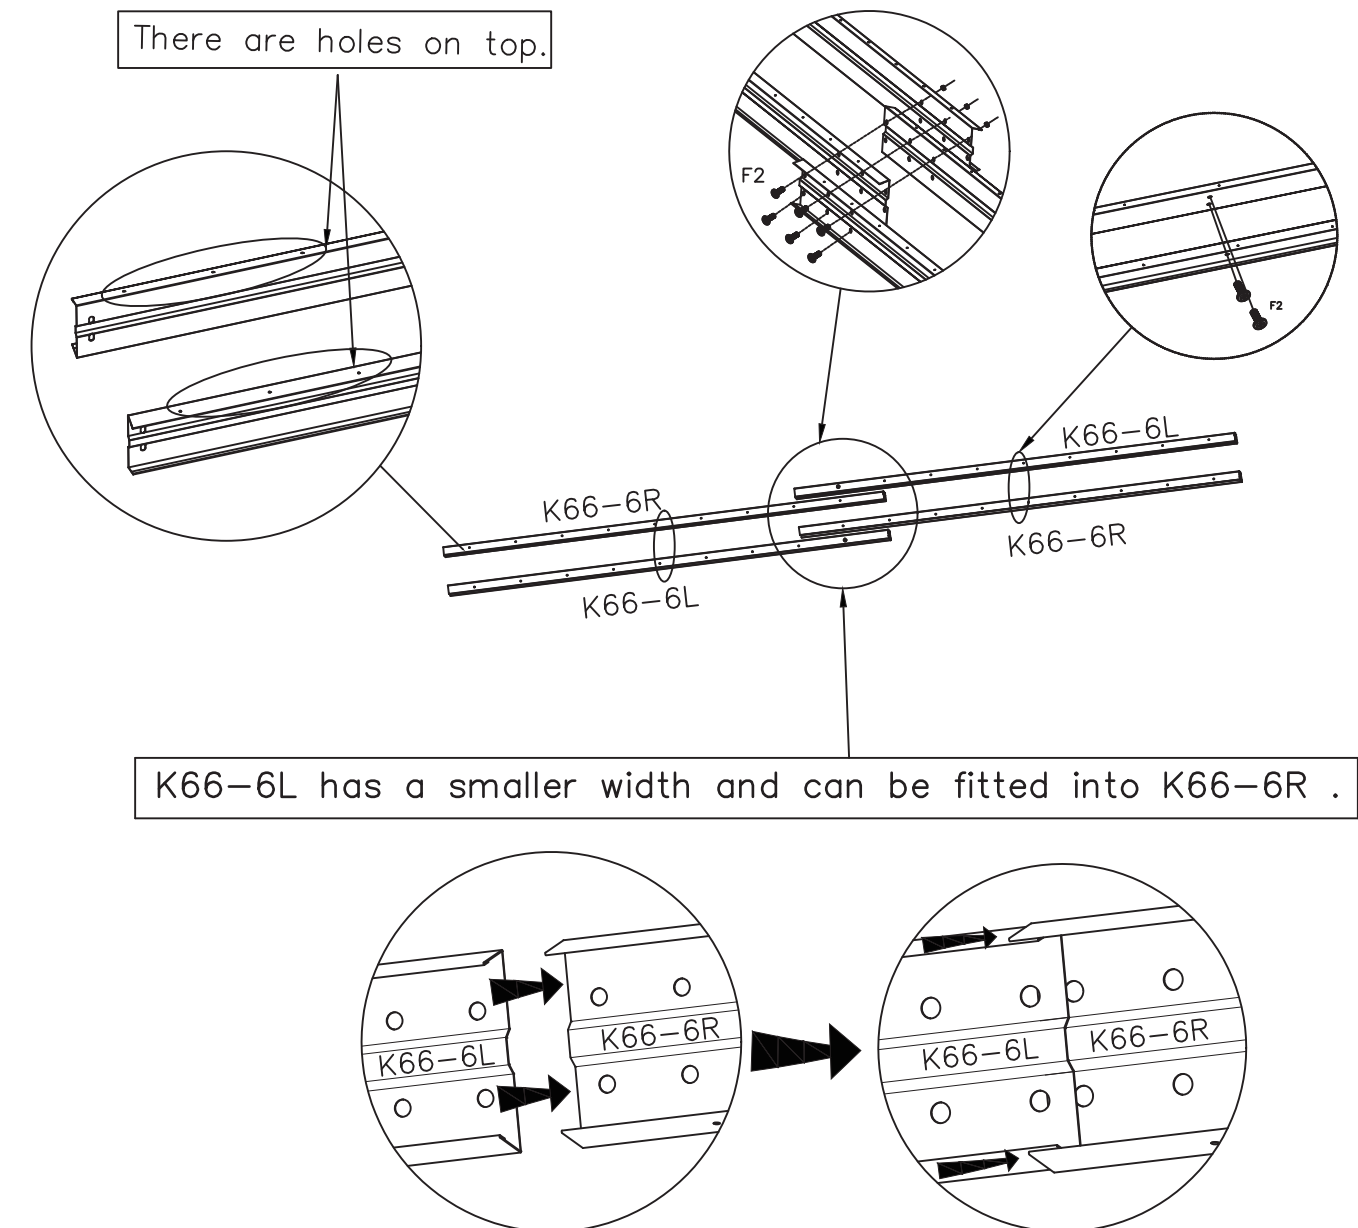






PART	NO.	QTY.
	F2	4
F2: M4*10		


There are holes on top.

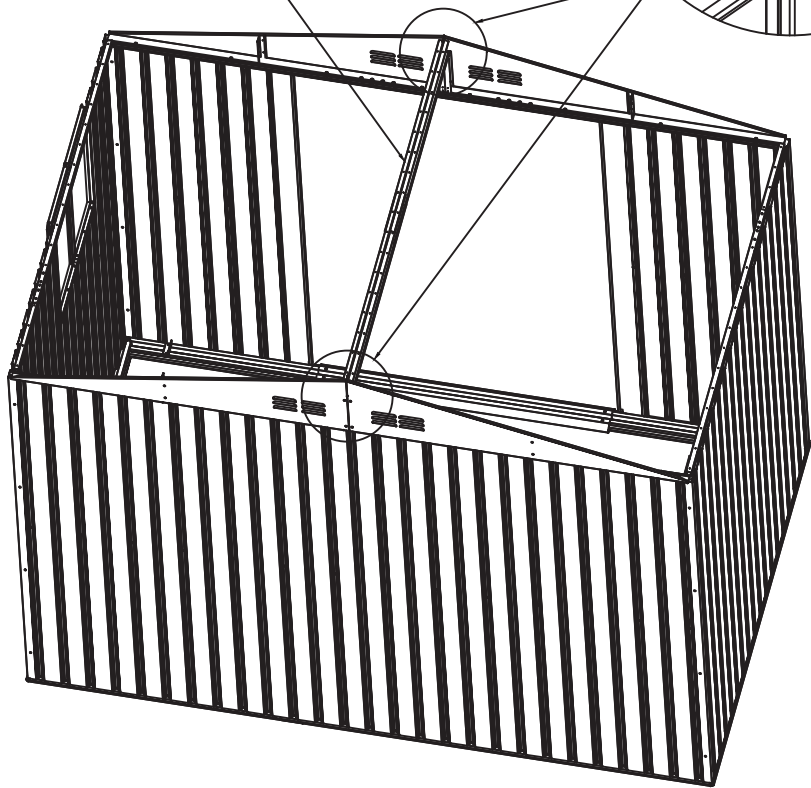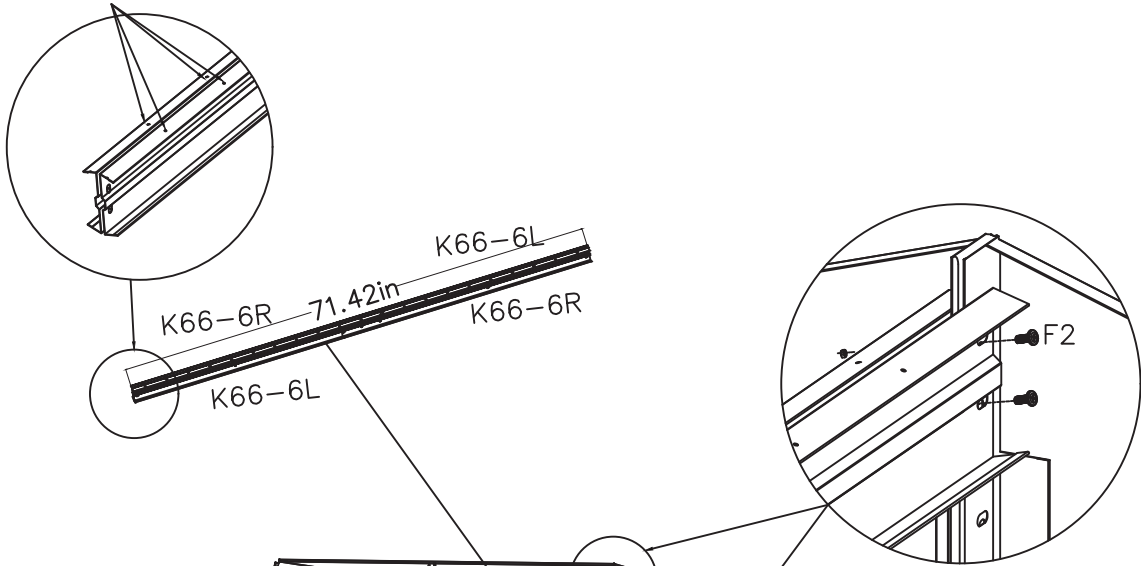


PART	NO.	QTY.
	K66-6L	2
	K66-6R	2
	F2	12
	F1	8
F1: ST4.2*10		F2: M4*10

K66-6L has a smaller width and is inserted into K66-6R with aligned holes.

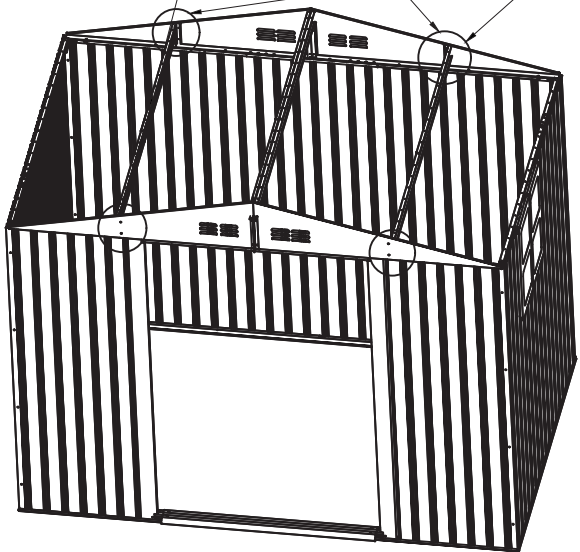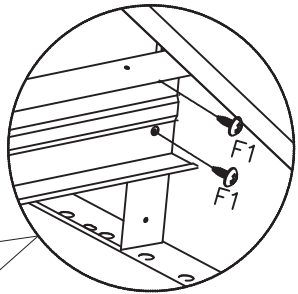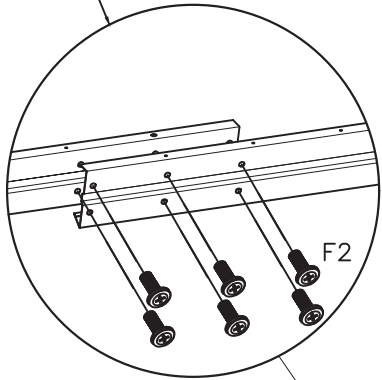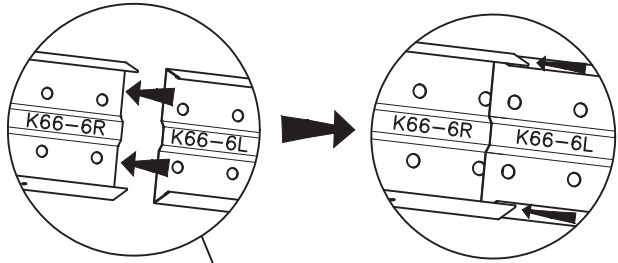

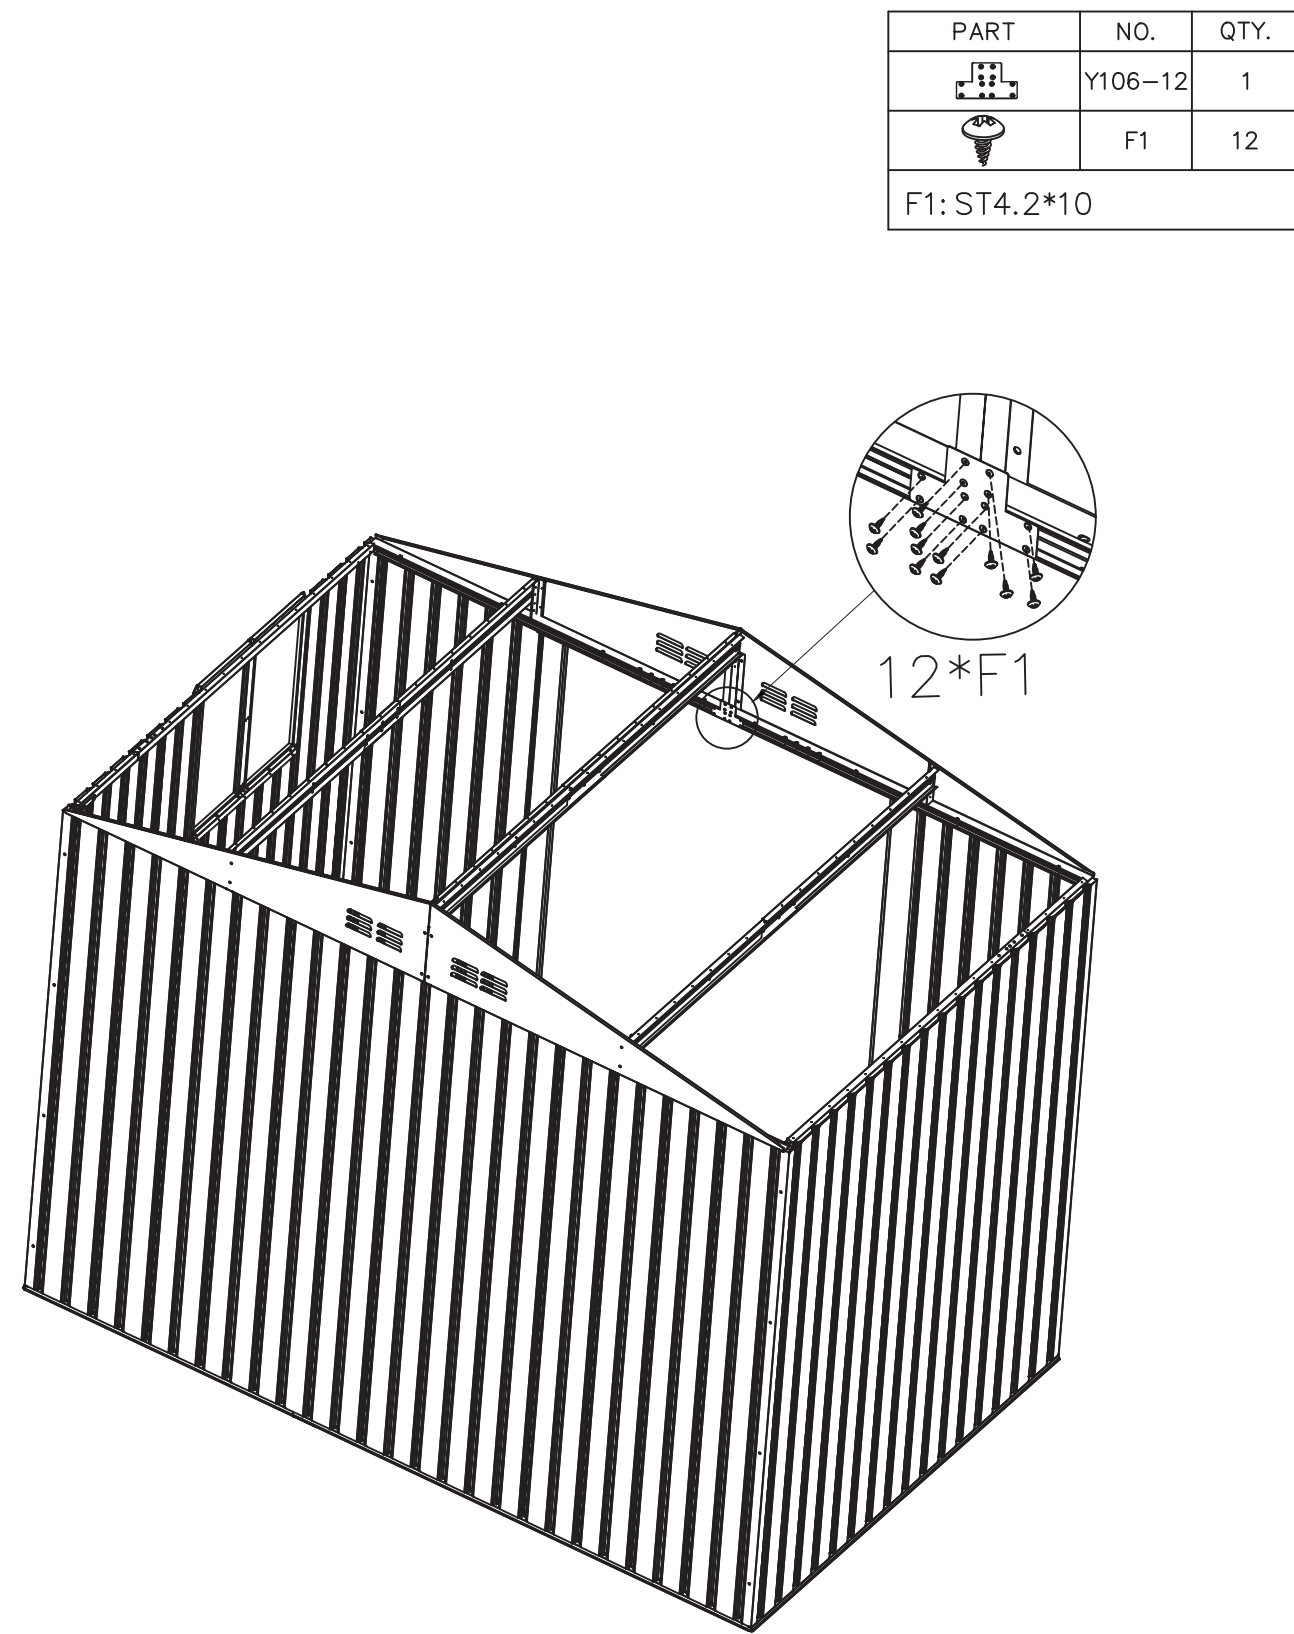


Left door panel splicing

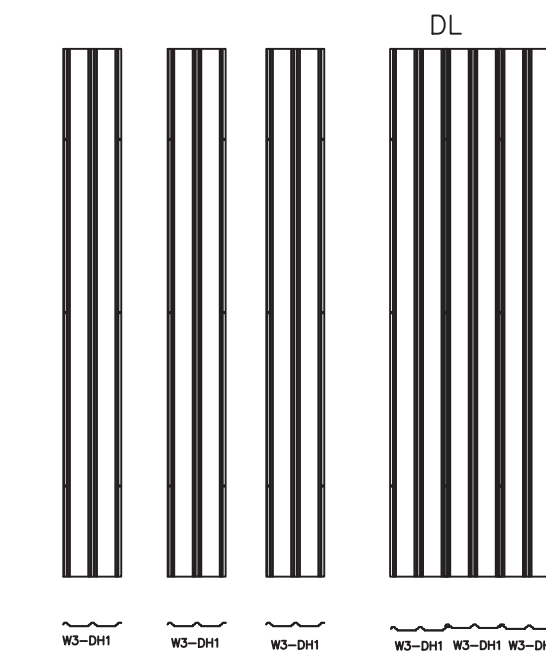

PART	NO.	QTY.
	W3-DH1	3
	DS-3	1
	DX-3	1
	DLY-4	1
	DY-4	1
	F1	4


F1: ST4.2*10

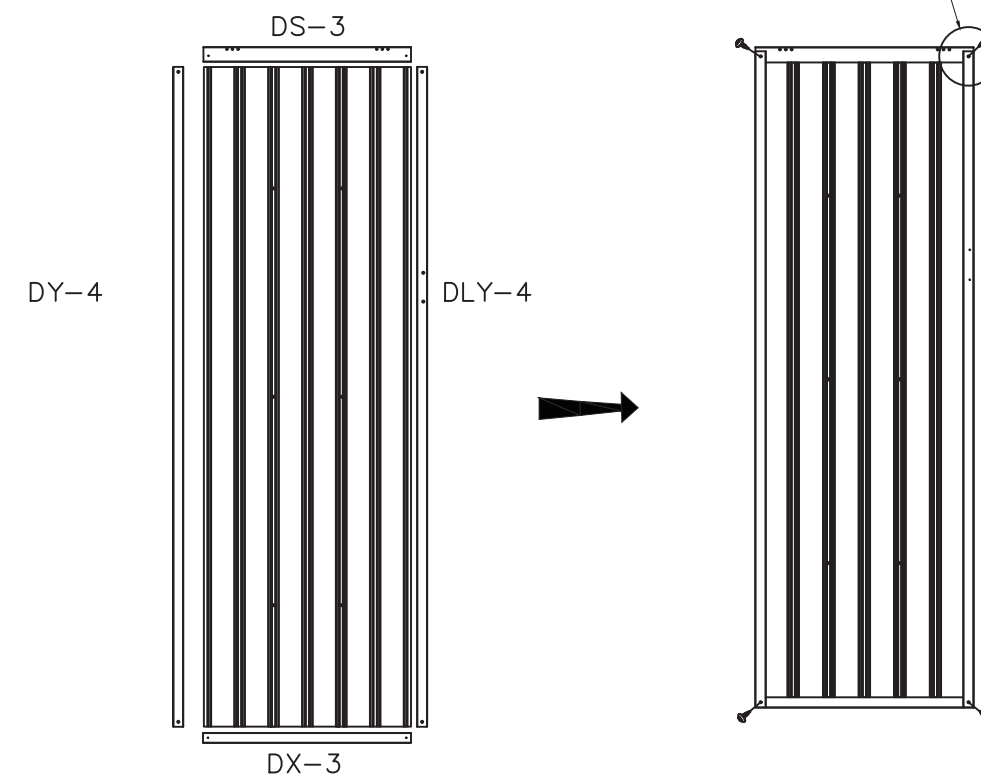

Door Assemble

PART	NO.	QTY.
	W3-DH1	3
	DS-3	1
	DX-3	1
	DLY-4	1
	DY-4	1
	F1	4
F1: ST4.2*10		



right door panel splicing

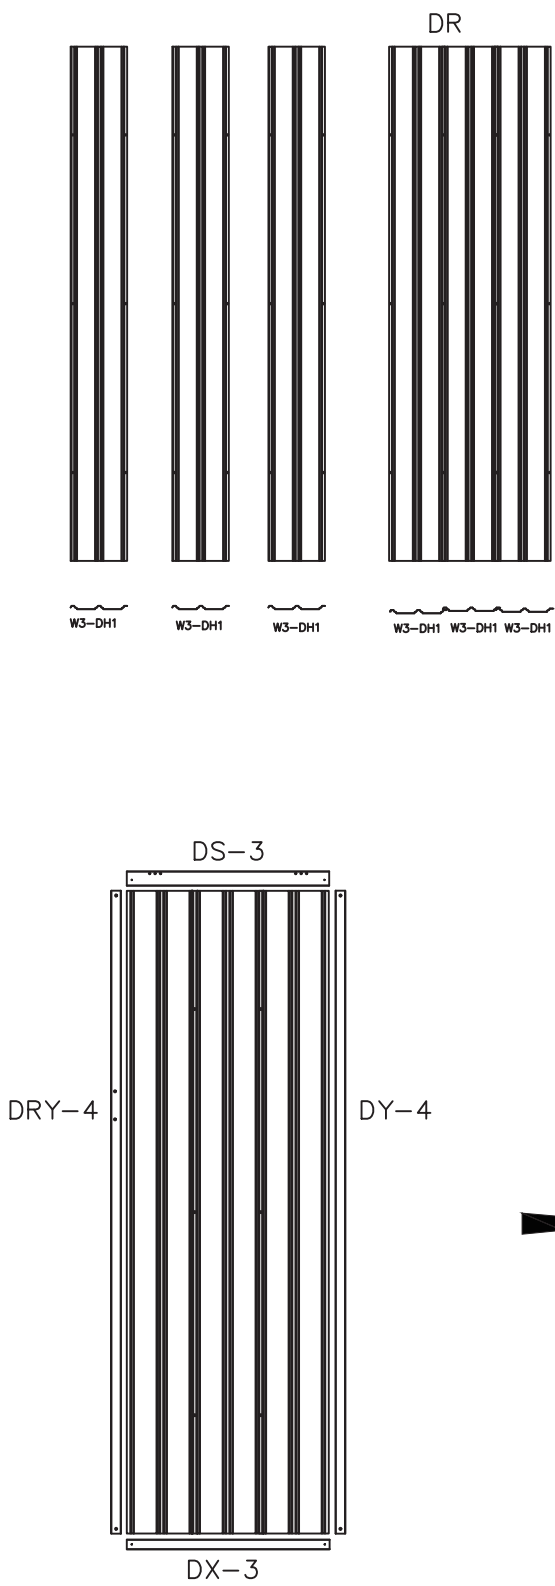

PART	NO.	QTY.
	DCA4	2
	DCA5	1
	F1	10
	F2	6
	GB	1
F1: ST4.2*10 F2: M4*10		

Left door panel splicing


Attention: Installation sequence of screws

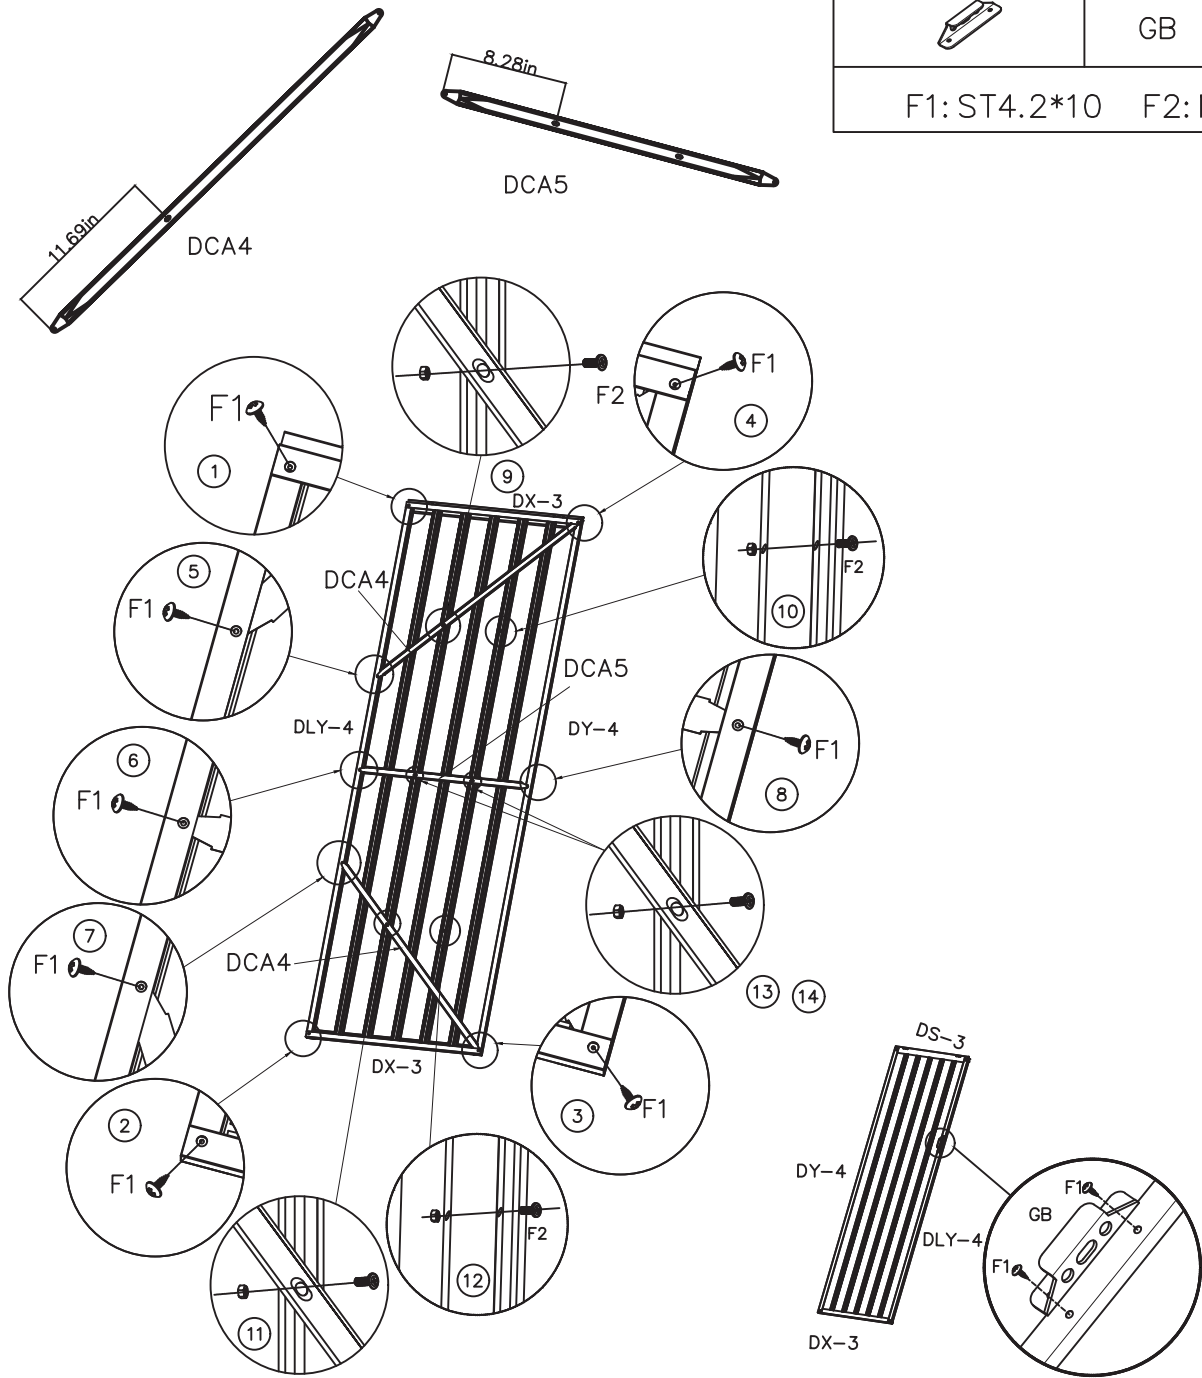


The cross pole DCA4 must be installed underneath DX-3 and DY-4.

Left door panel splicing

Attention: Installation sequence of screws




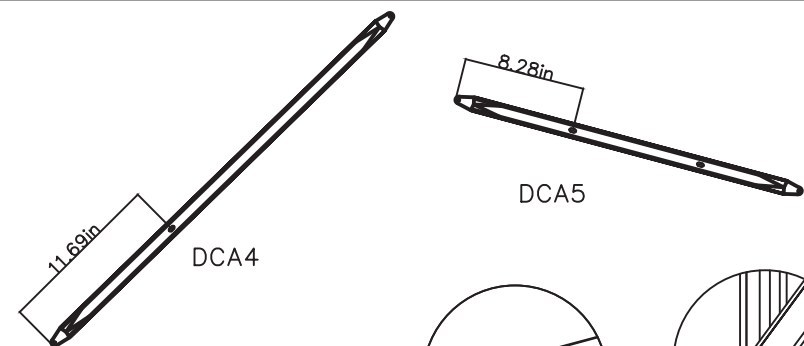


PART	NO.	QTY.
	DCA4	2
	DCA5	1
	F1	10
	F2	6
	GB	1
F1: ST4.2*10 F2: M4*10		

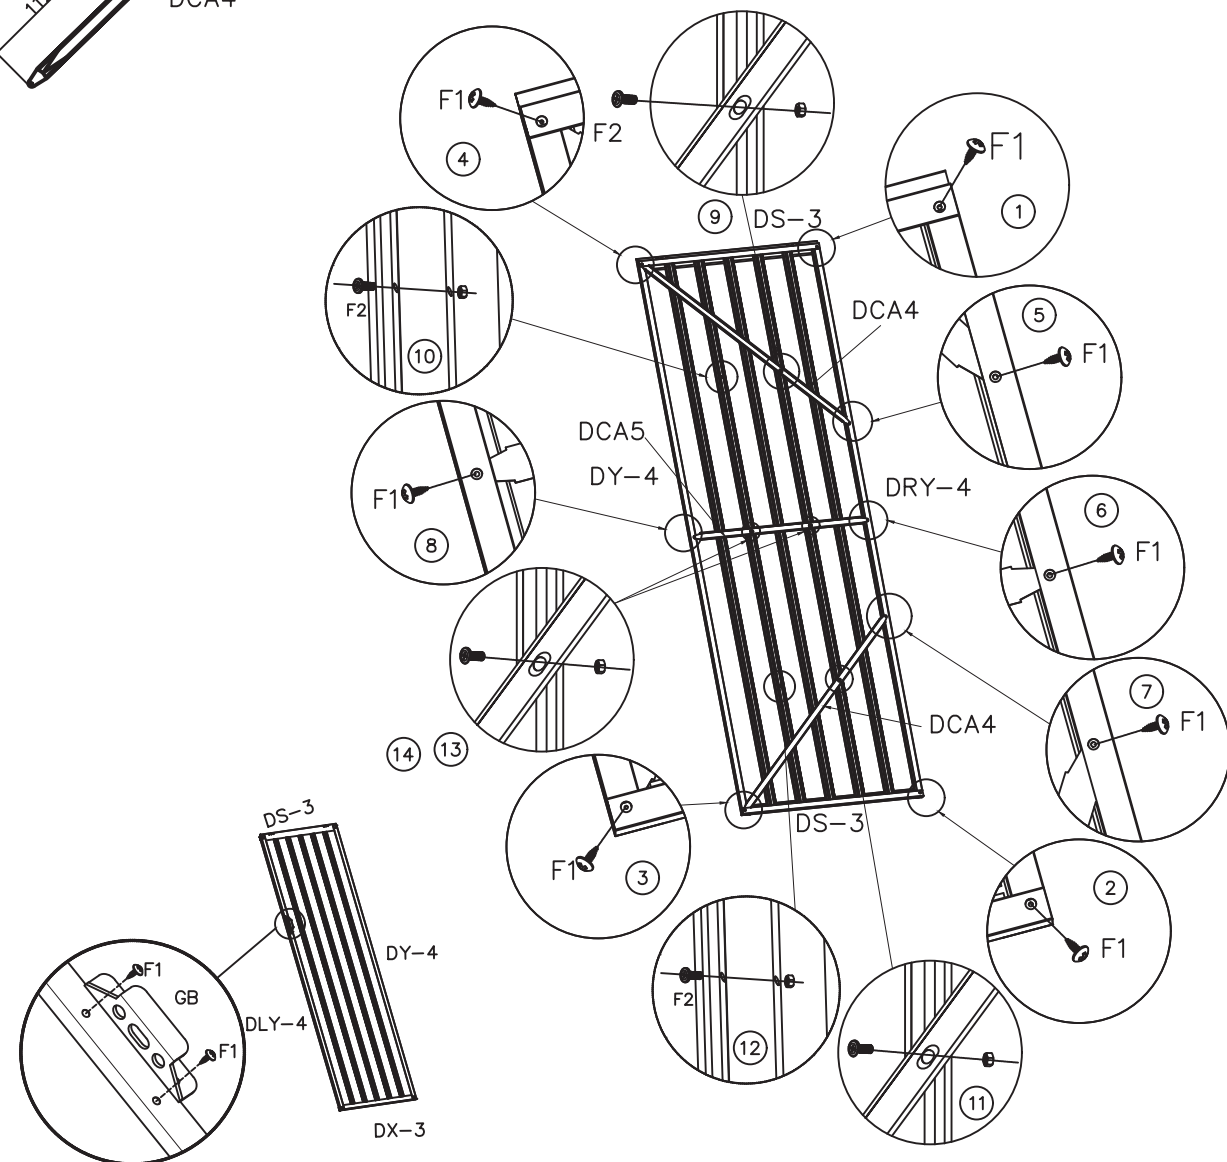


The cross pole DCA4 must be installed underneath DX-3 and DY-4.



PART	NO.	QTY.
	DL	1
	DR	1
	F1	12
F1: ST4.2*10		

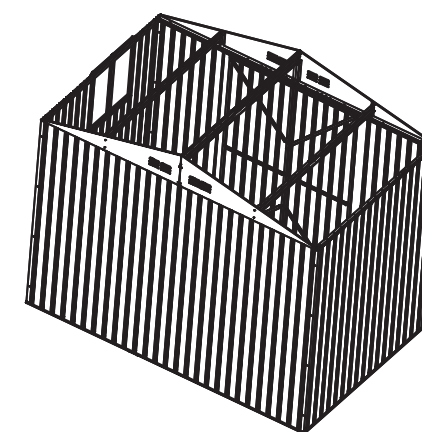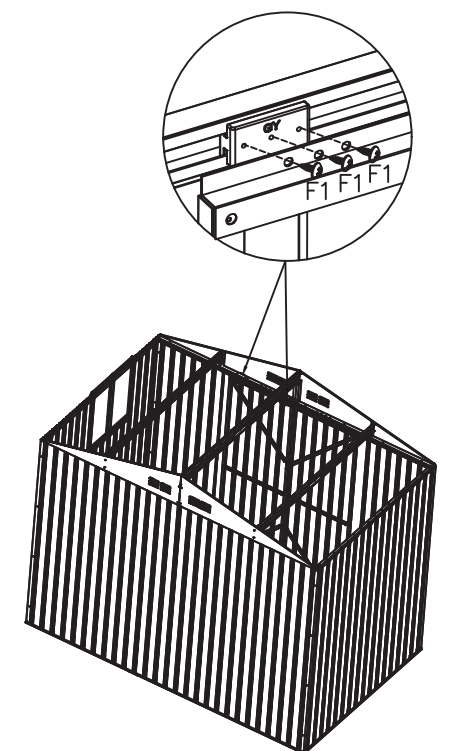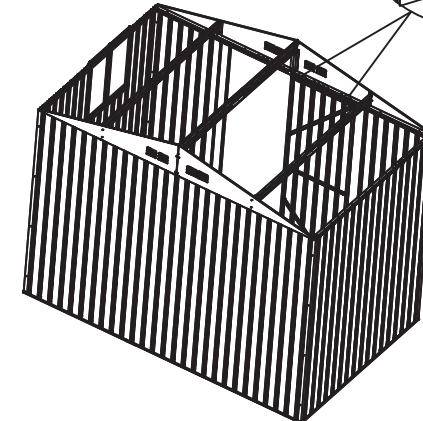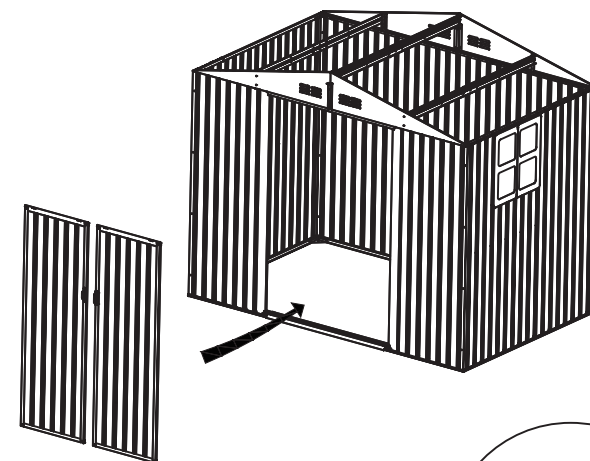


back side

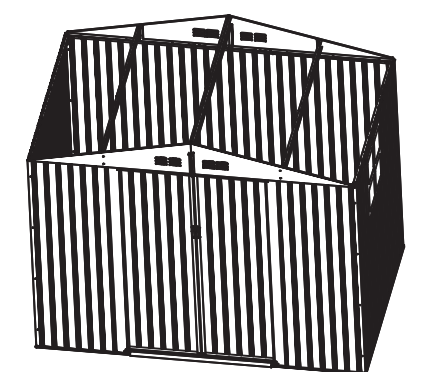



front

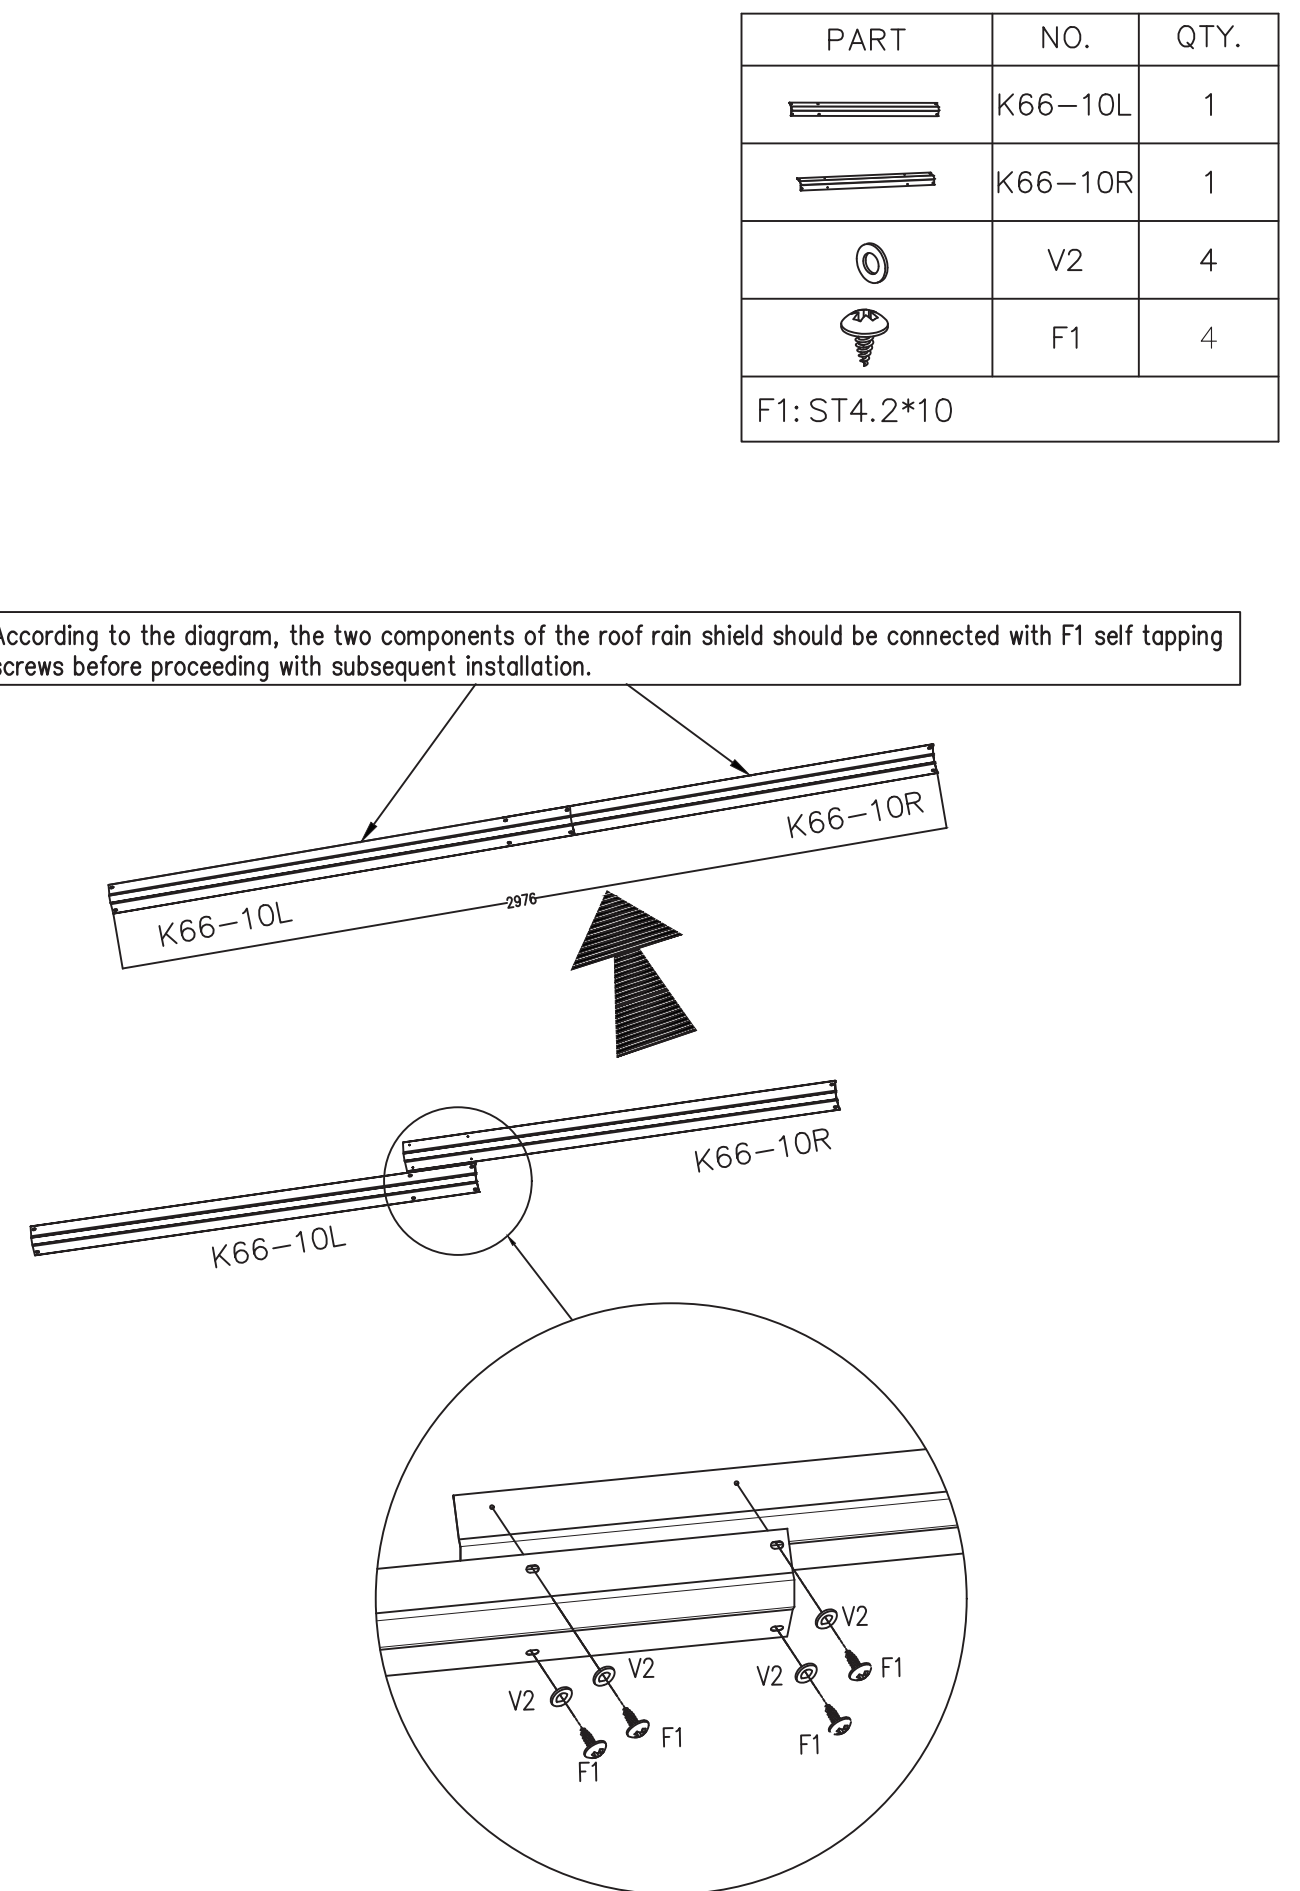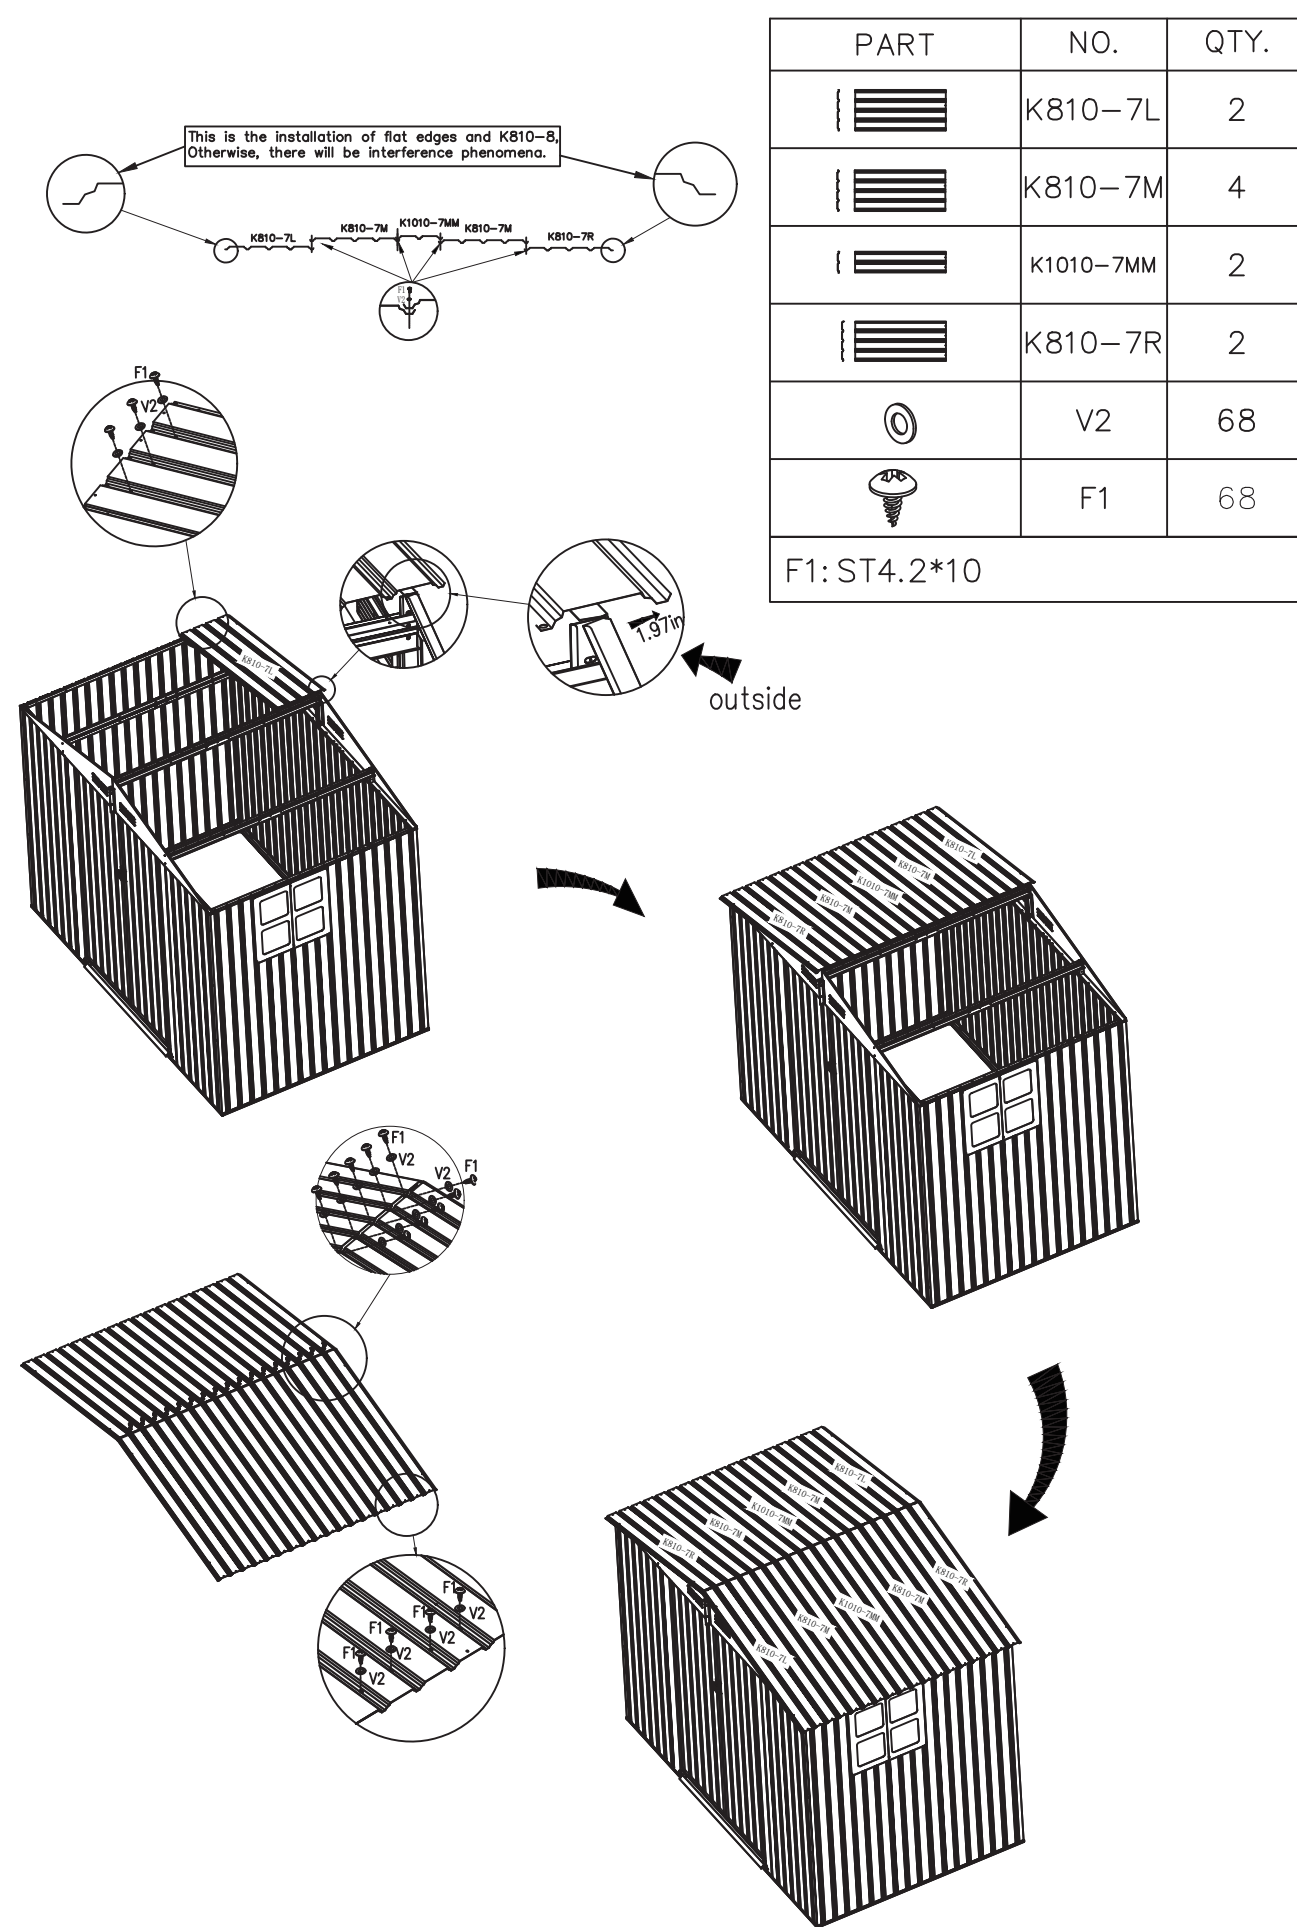


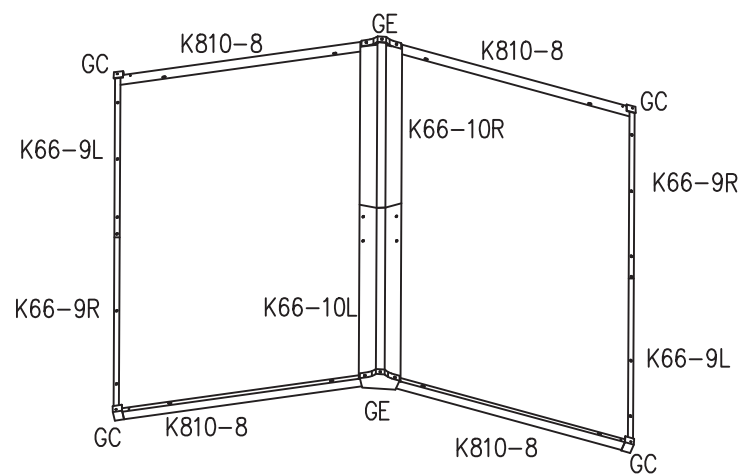

PART	NO.	QTY.
	K810-8	4
	K66-9L	2
	K66-9R	2
	GC	4
	GE	2
	F4	4
	V2	28
	F1	24
F1: ST4.2*10 F4: ST4*16		

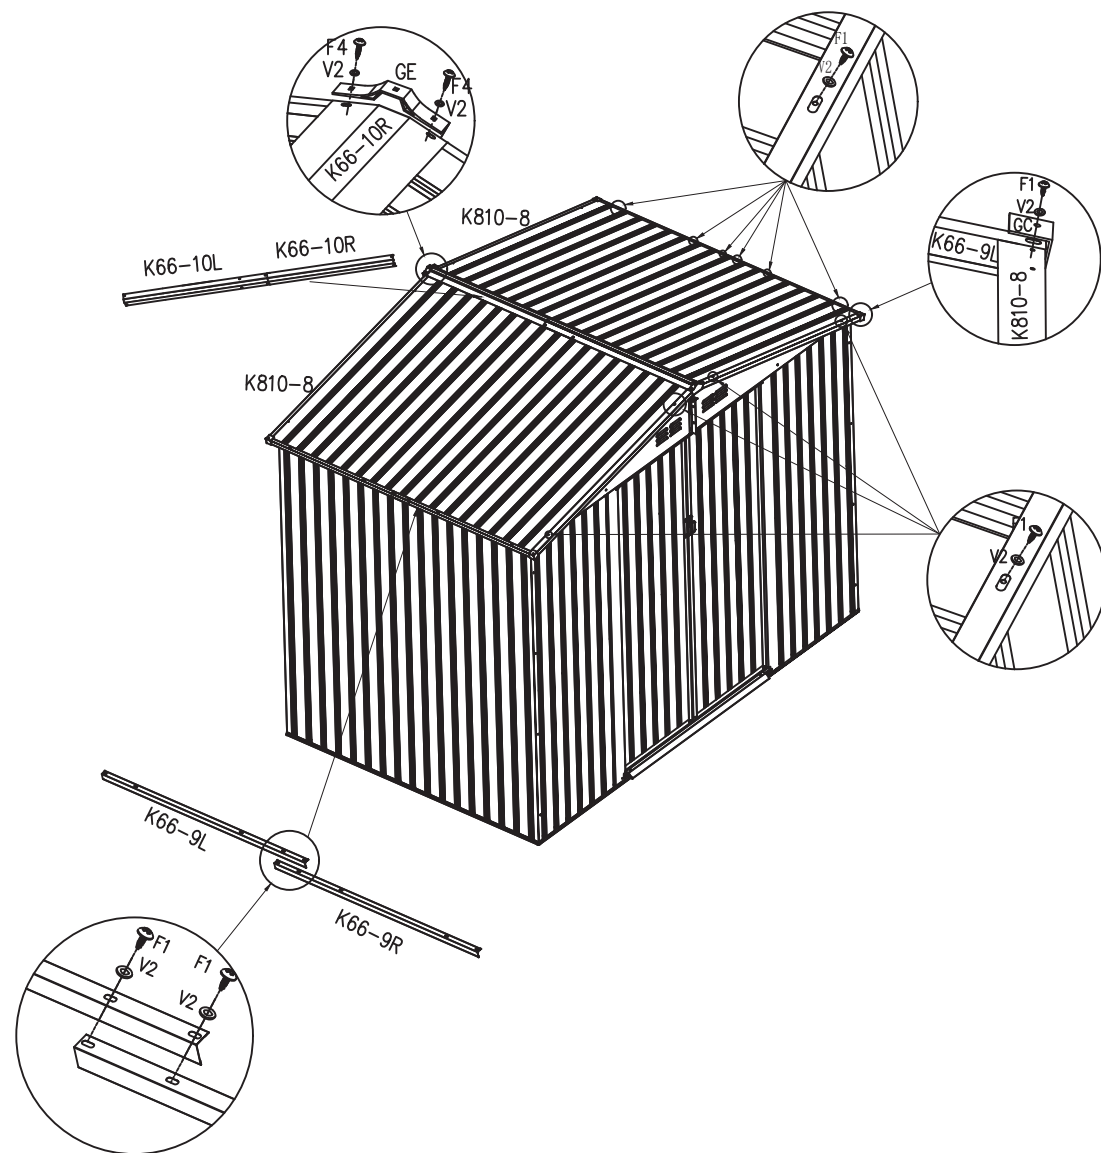


PART	NO.	QTY.
	F1	8
	C2-3	2
F1: ST4.2*10		

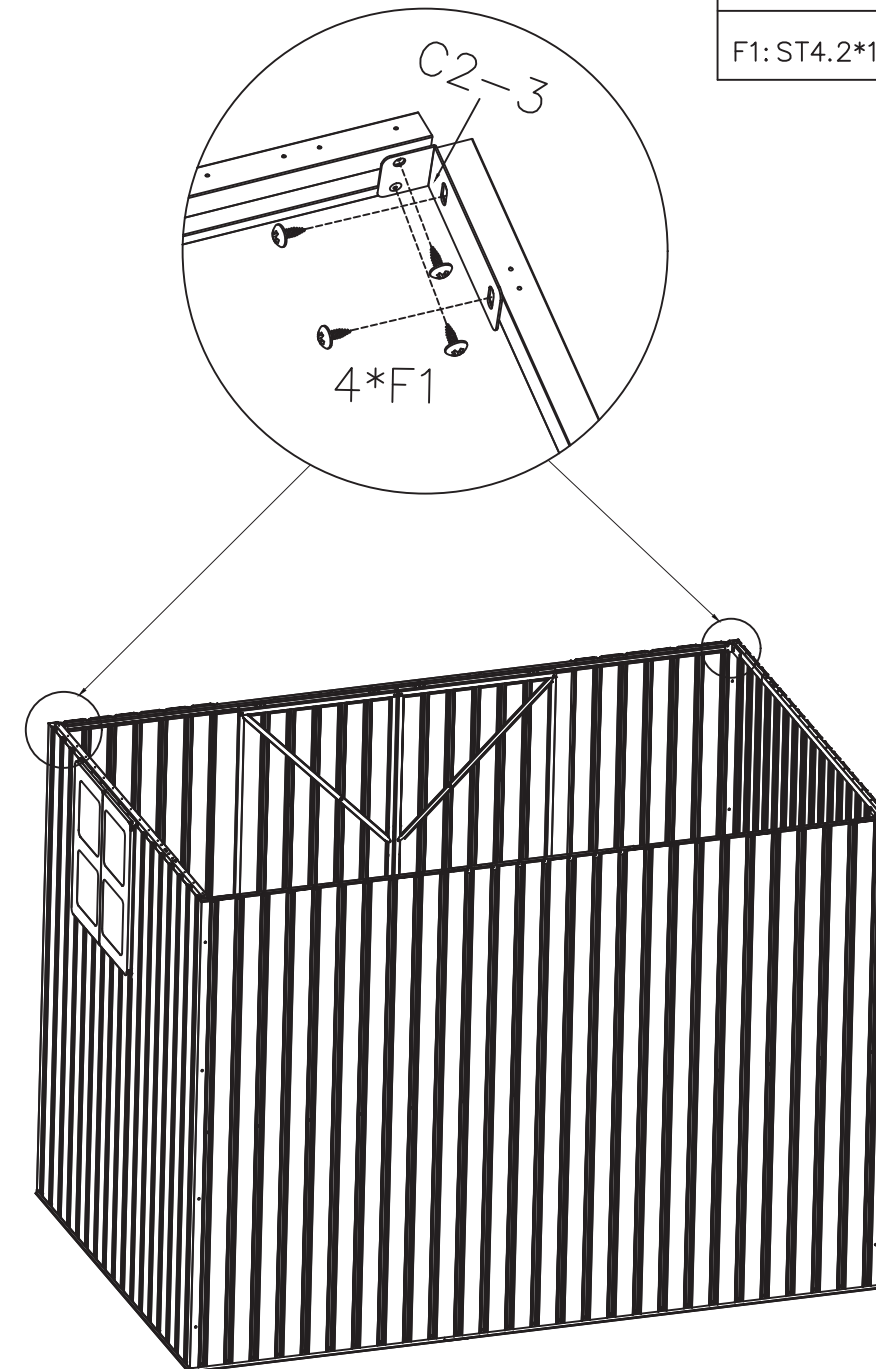


This installation diagram
is only applicable to C2-3



PART	NO.	QTY.
	SL	42




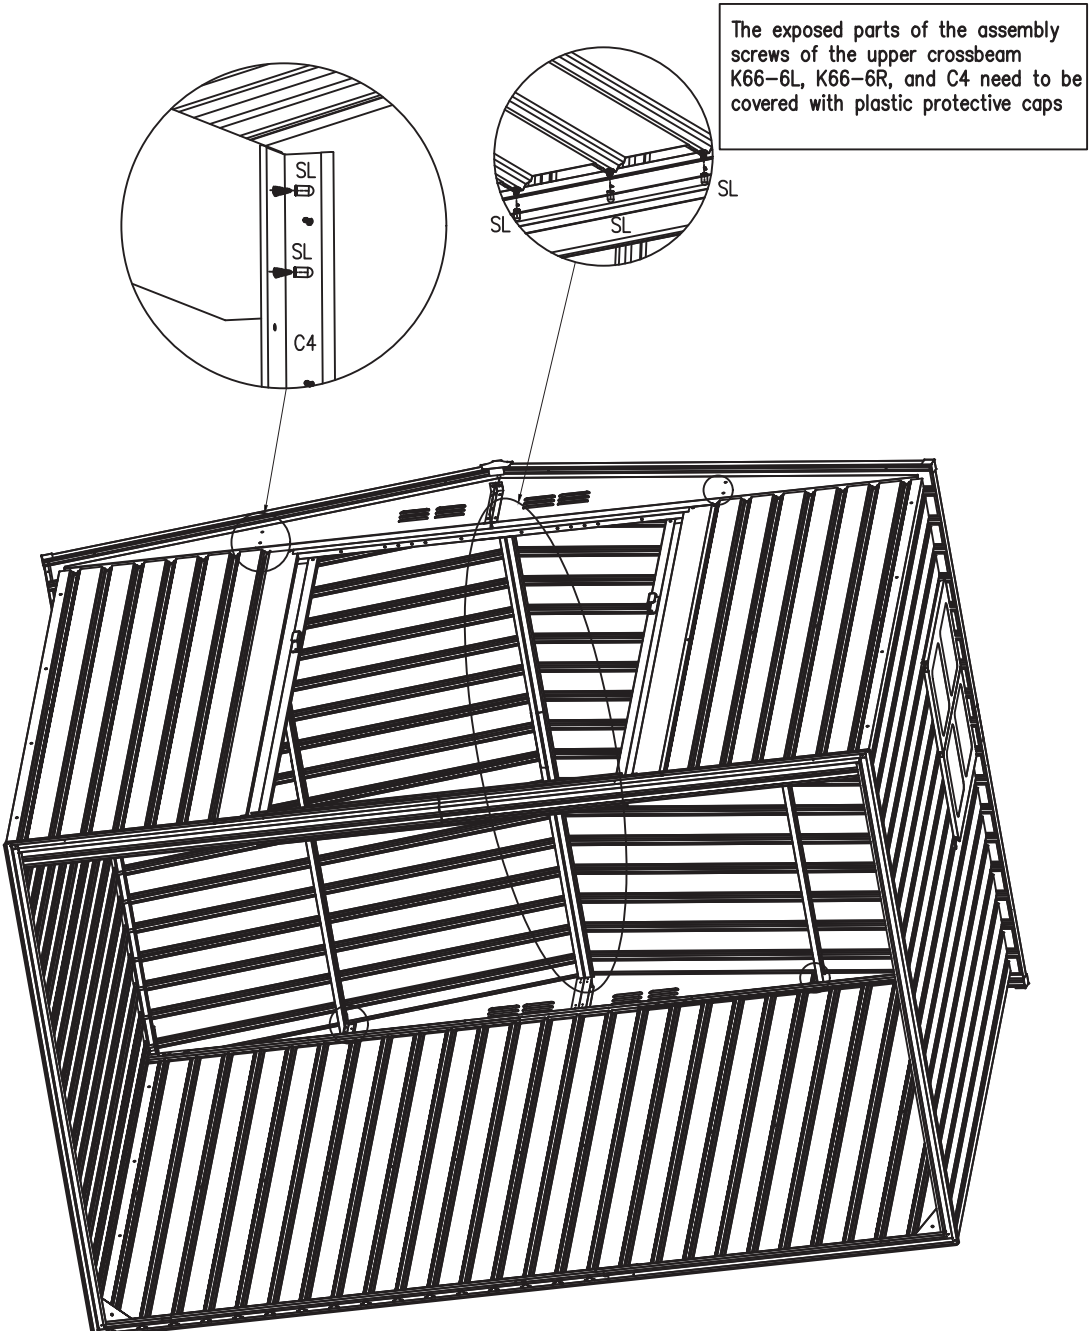


PART	NO.	QTY.
	PZ1	2





After the installation of the tool room is completed, insert PZ1 (T-F) from both corners and bury the base underground and fix it

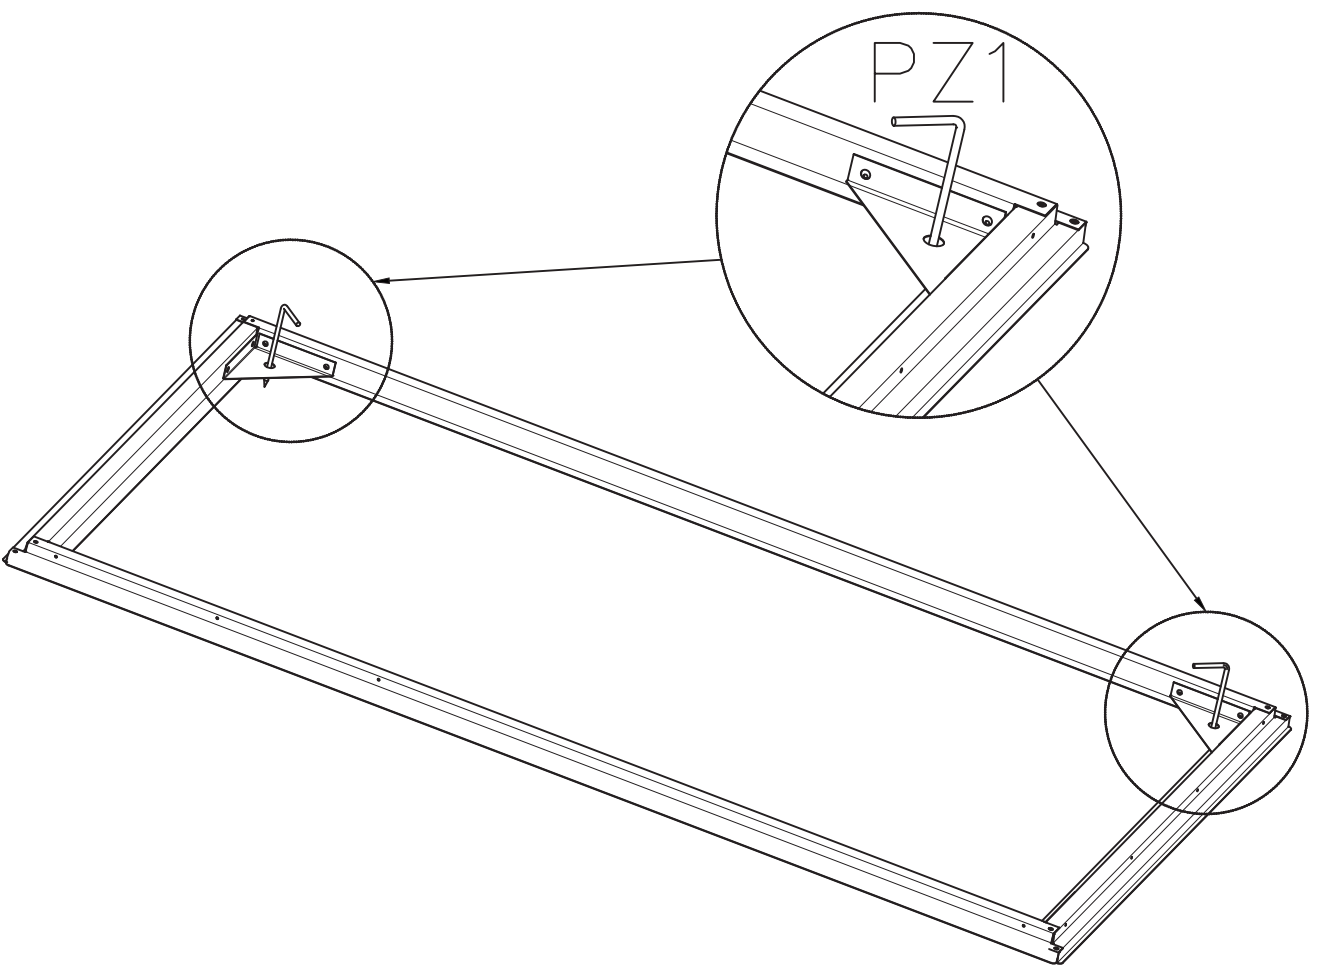


PART	NO.	QTY
	A	x1
	A1	x1
	A2	x2
	B	x1
	B1	x1
	B2	x2
	S2	x16

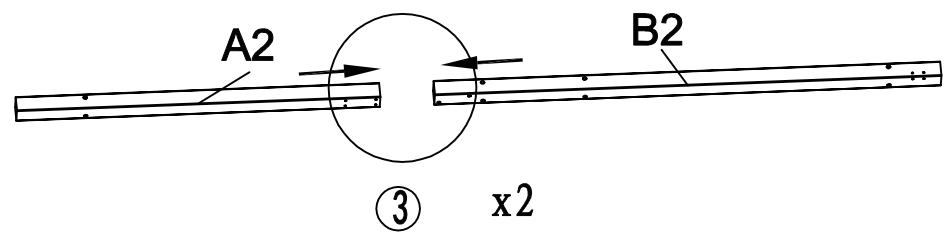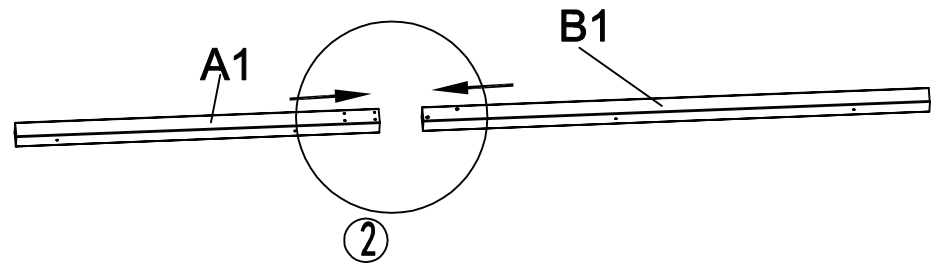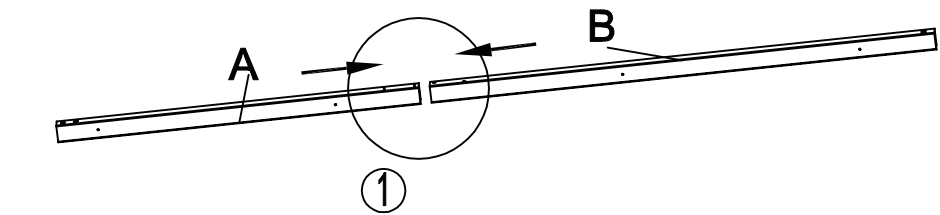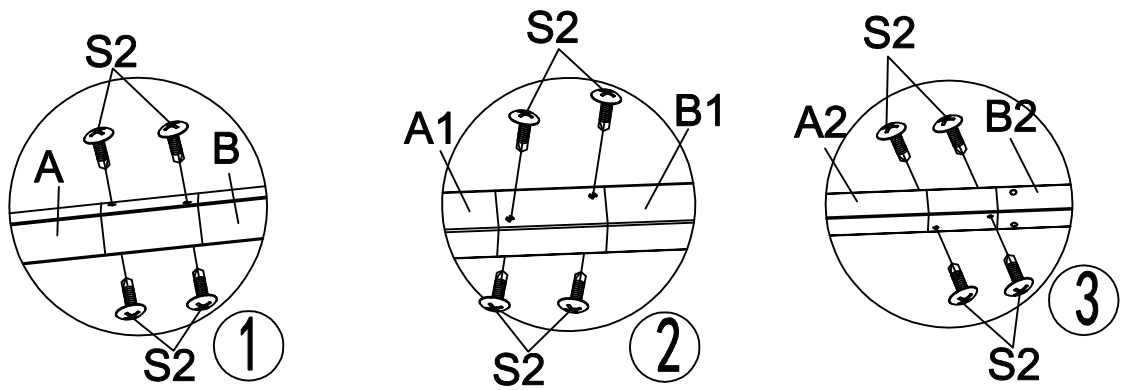

PART	NO.	QTY
	E	x2
	E1	x2
	E2	x1
	E3	x1
	N	x3
	X	x24
	Z1	x4

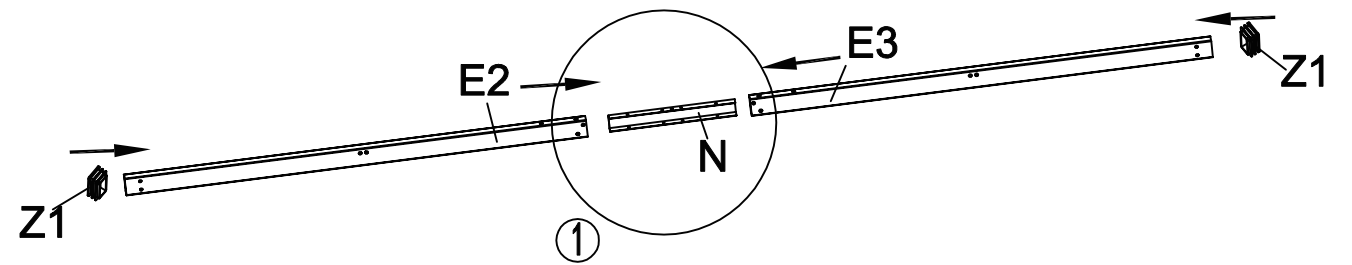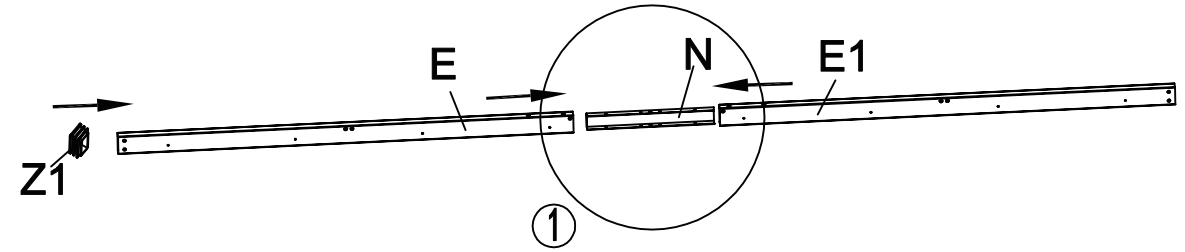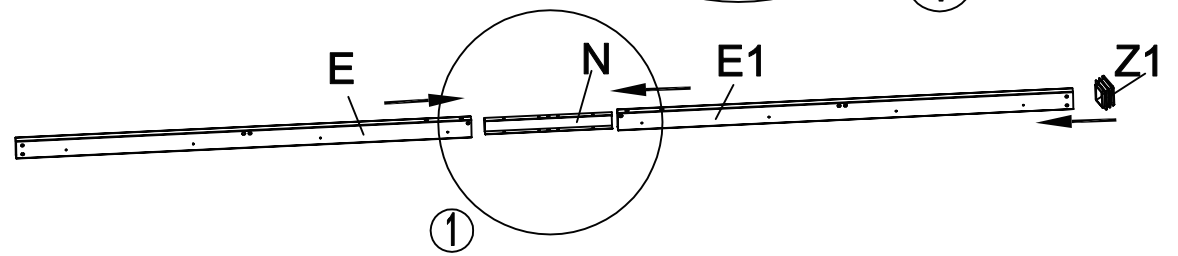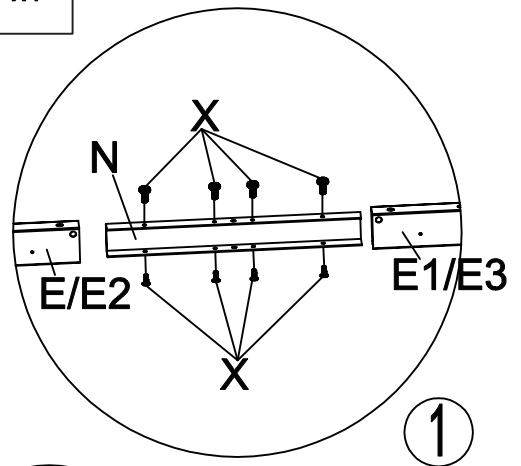


PART	NO.	QTY
	S1	x8
	Y	x12

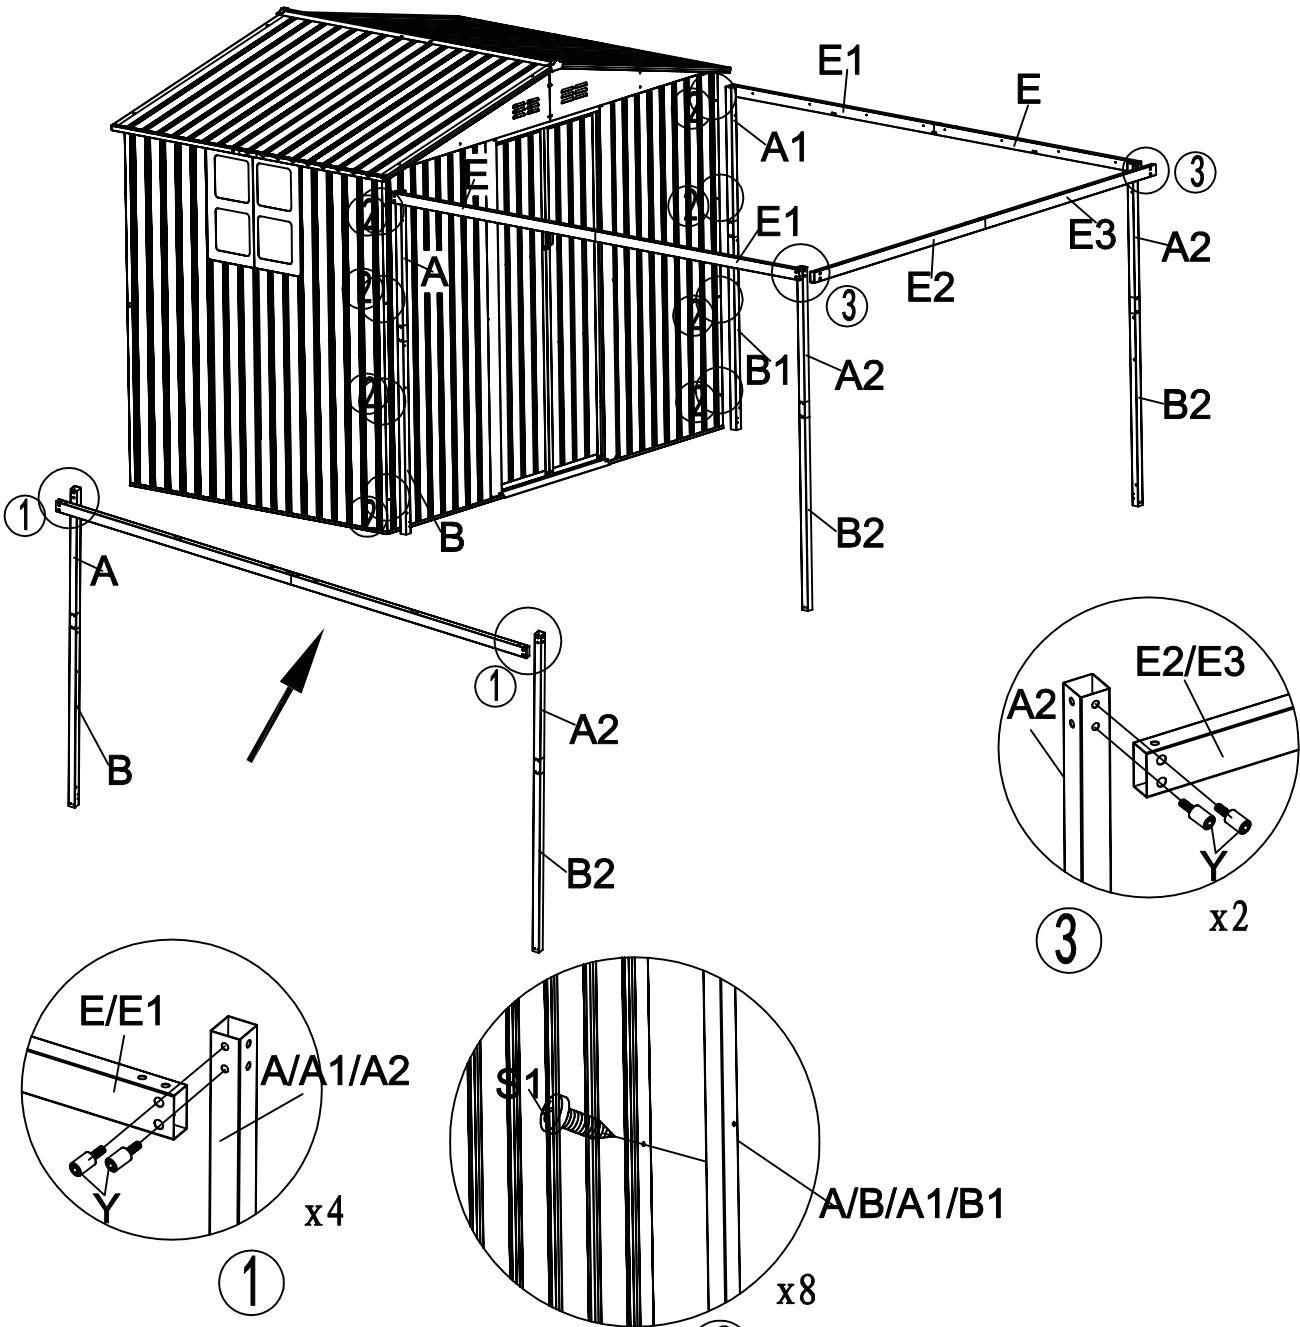


2 Note: Tighten the screws from the inside of the housing towards A/B/A1/B1.


PART	NO.	QTY
	C	x4
	N4	x2
	N3	x4
	S1	x8
	X	x8

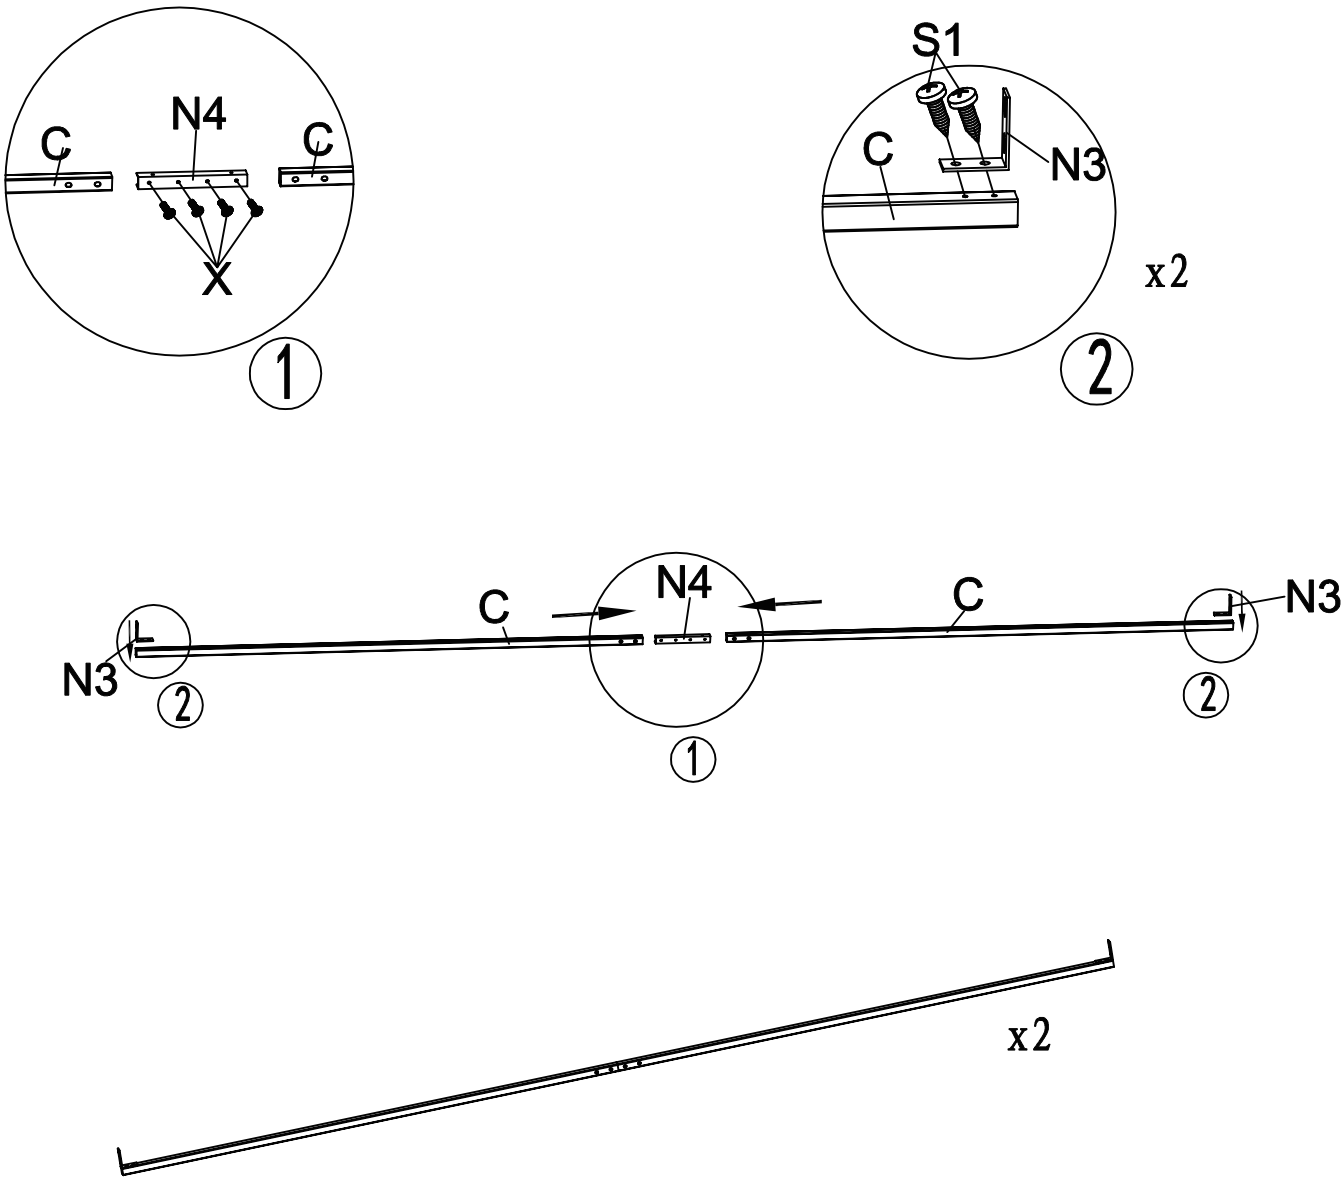


PART	NO.	QTY
	S1	x8

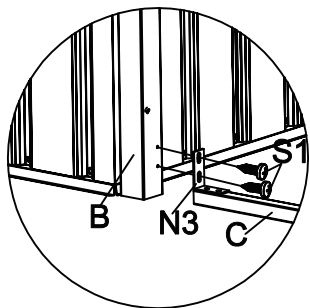


1

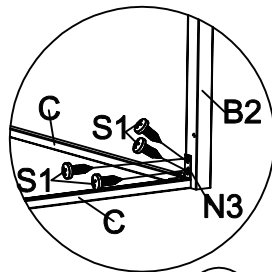



2

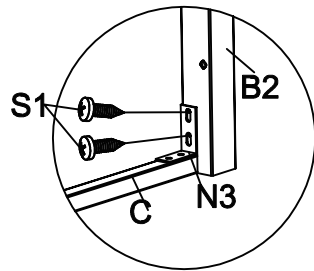


3

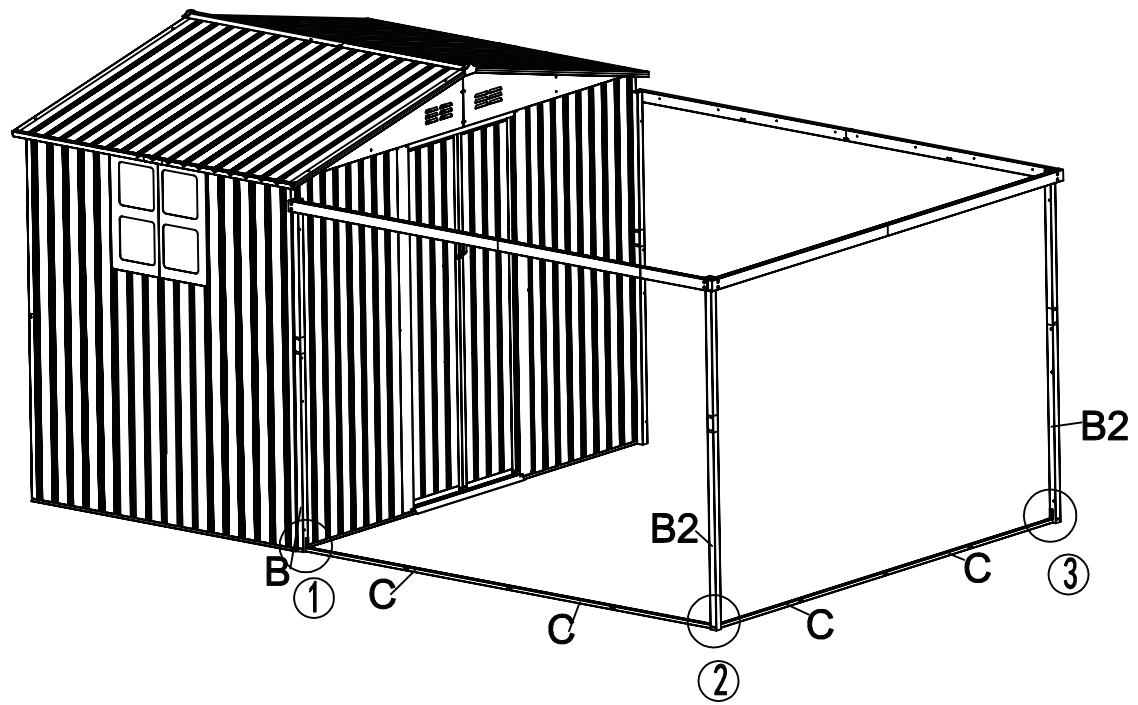





PART	NO.	QTY
	J	x4
	X	x8

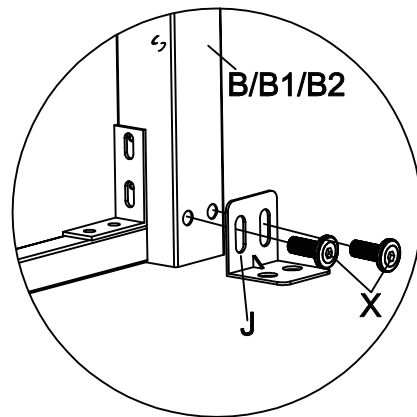




1

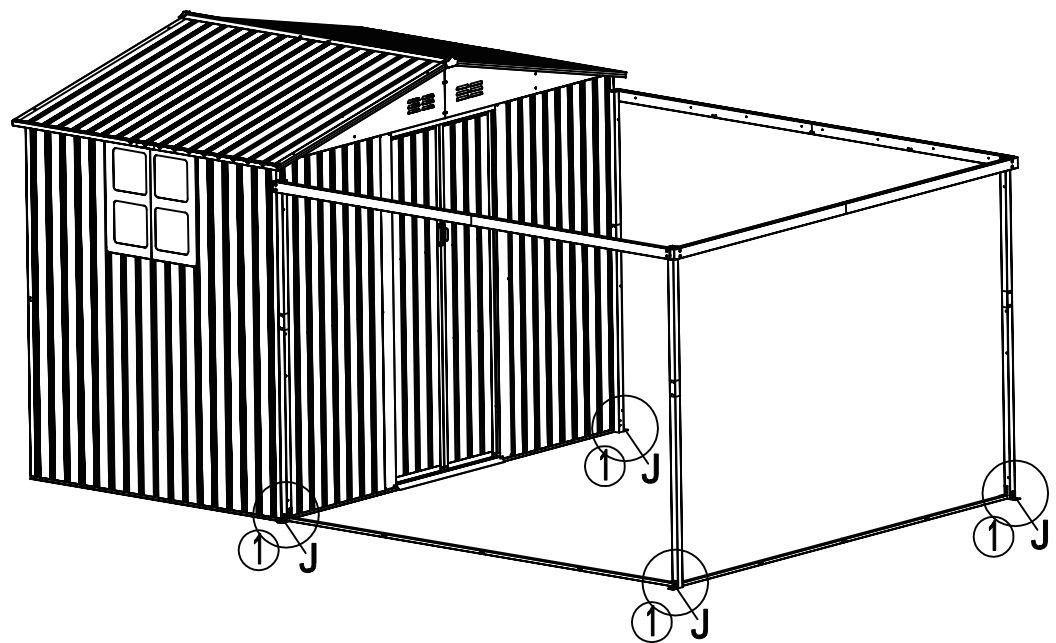





PART	NO.	QTY
	D	x16
	N2	x8
	S1	x48

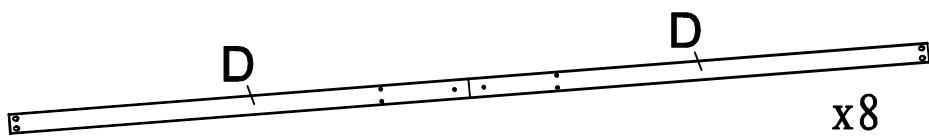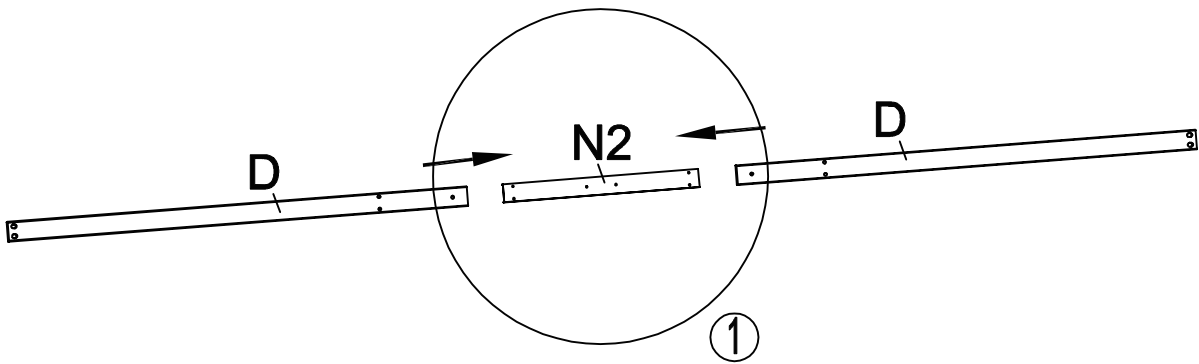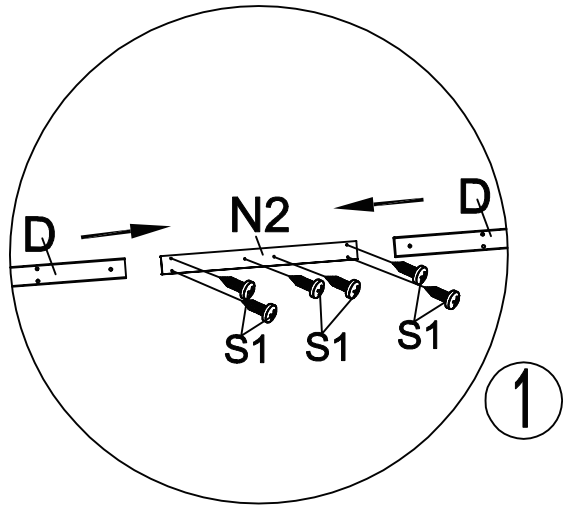




PART	NO.	QTY
	X1	x24

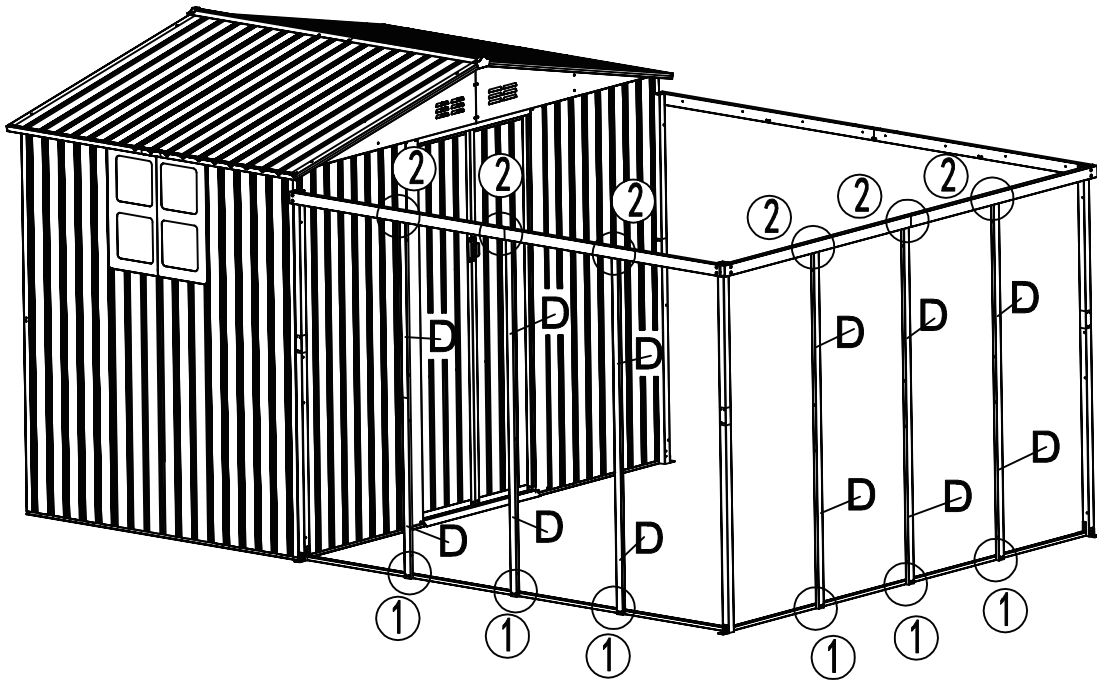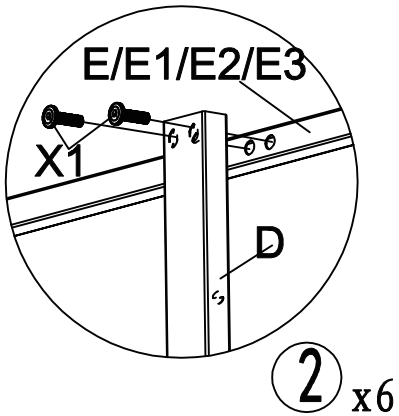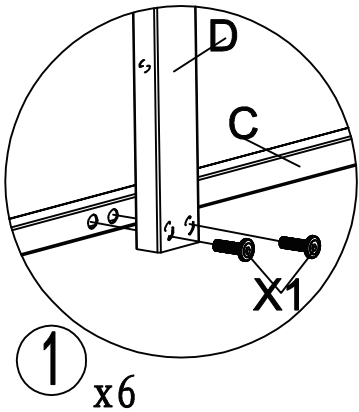


PART	NO.	QTY
	G1	x1
	G	x1
	N3	x2
	S1	x4
	W	x4

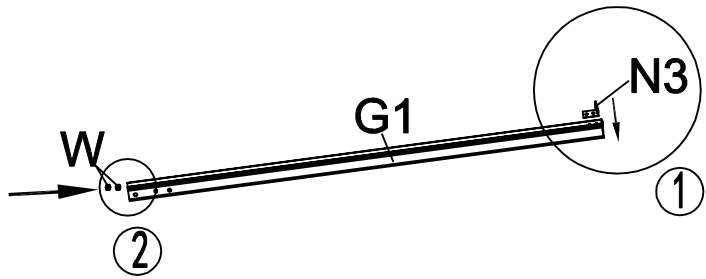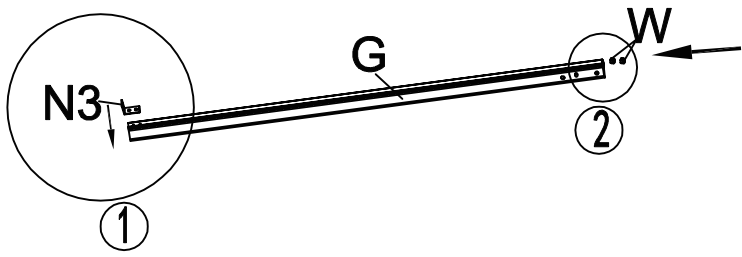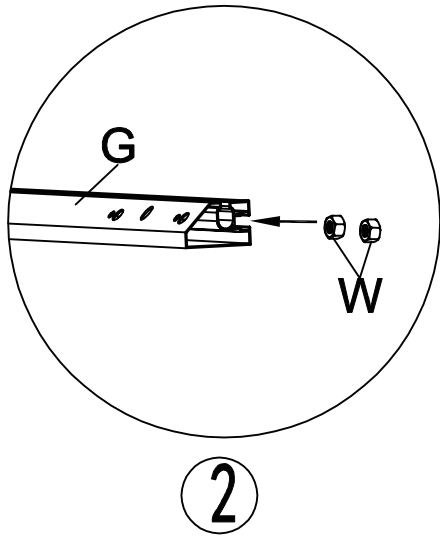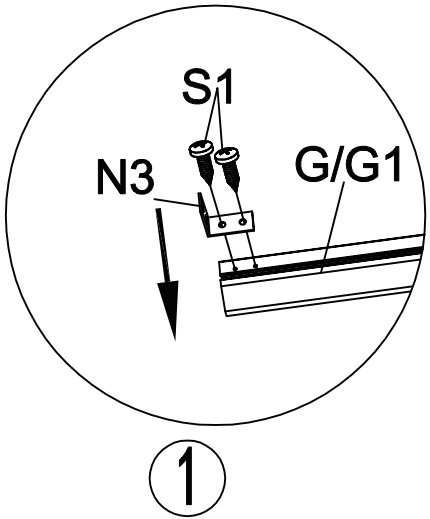


PART	NO.	QTY
	N1	x1
	X	x4

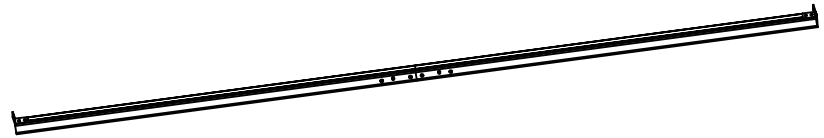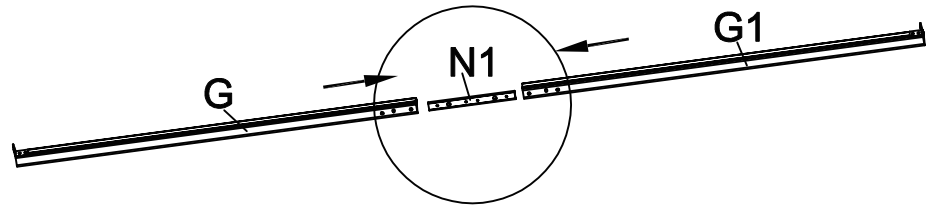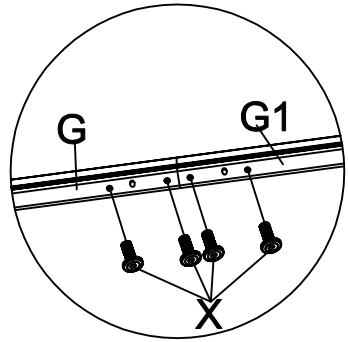




PART	NO.	QTY
	S1	x4
	X1	x8



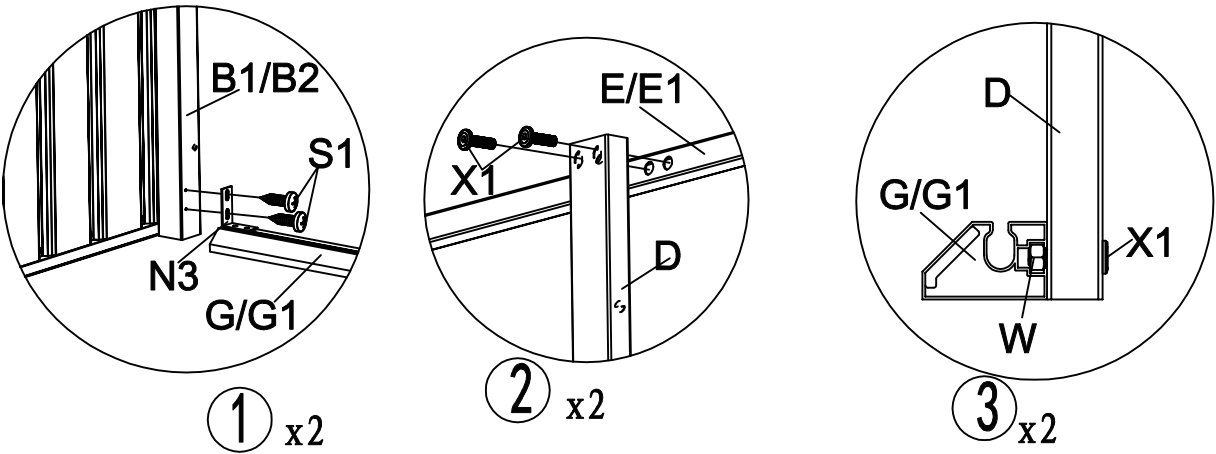



Note: When installing D, ensure the vertical distances are consistent.


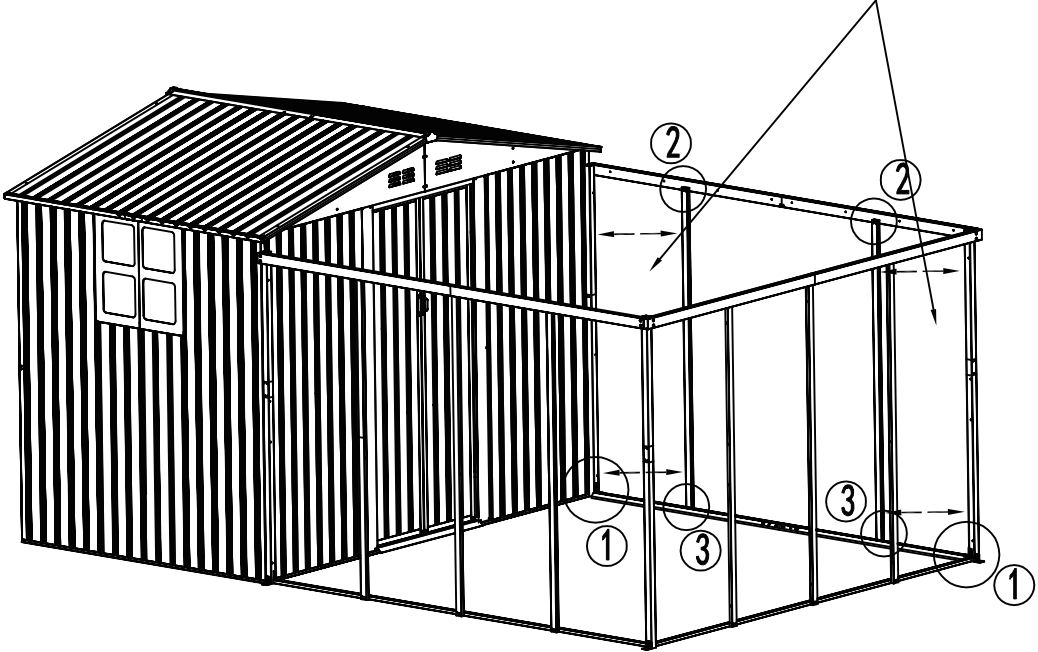



PART	NO.	QTY
	L1	x2
	H	x2
	GY	x4
	S3	x18

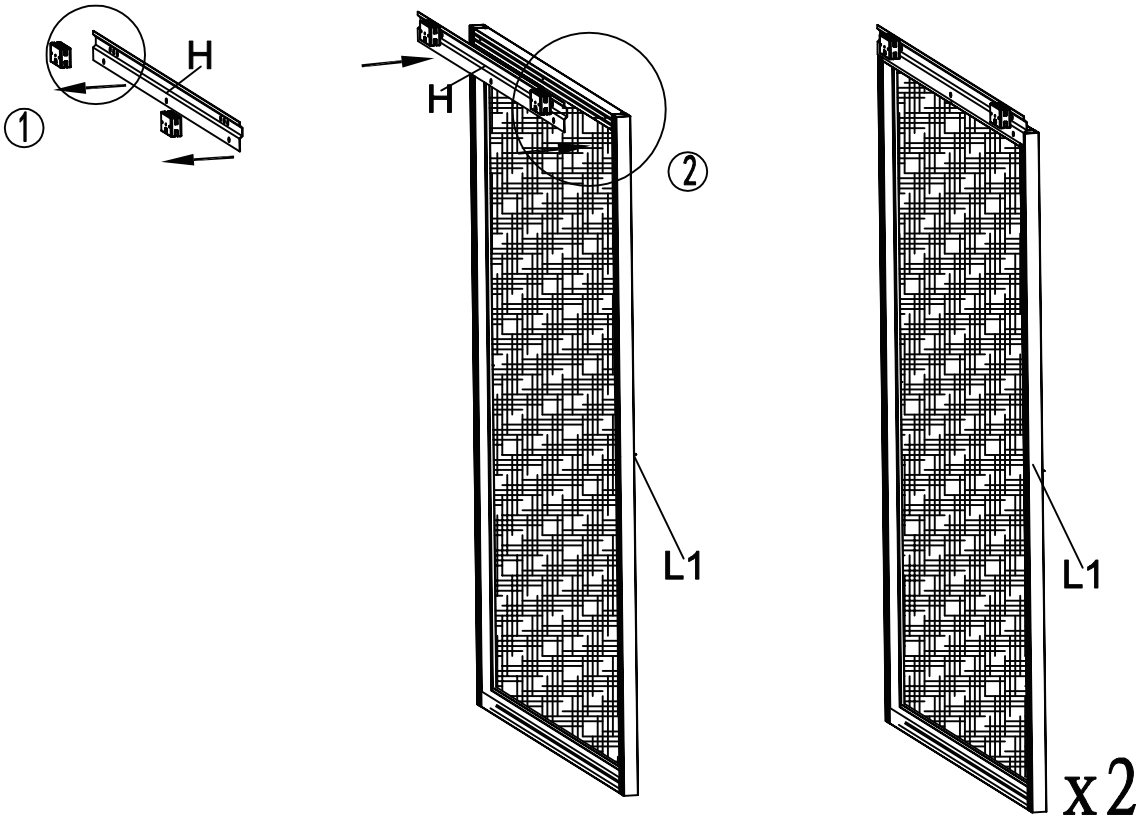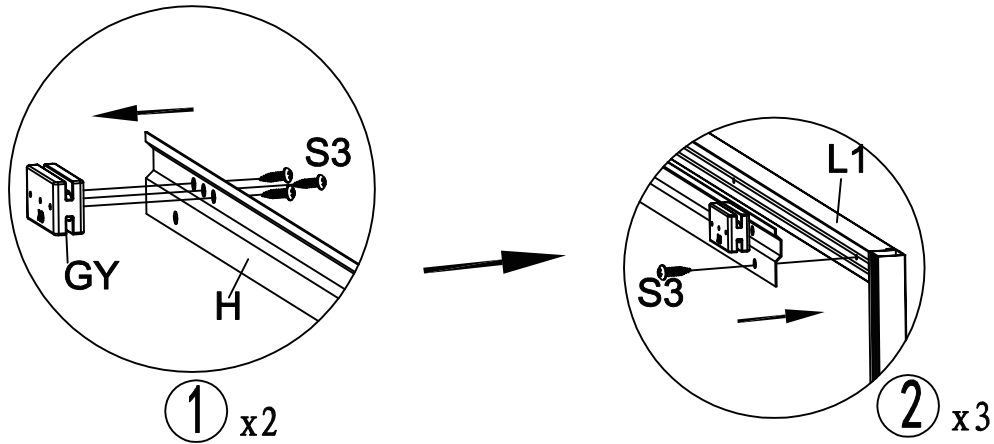


PART	NO.	QTY
	L2	x1
	Q	x2
	N4	x2
	S3	x8

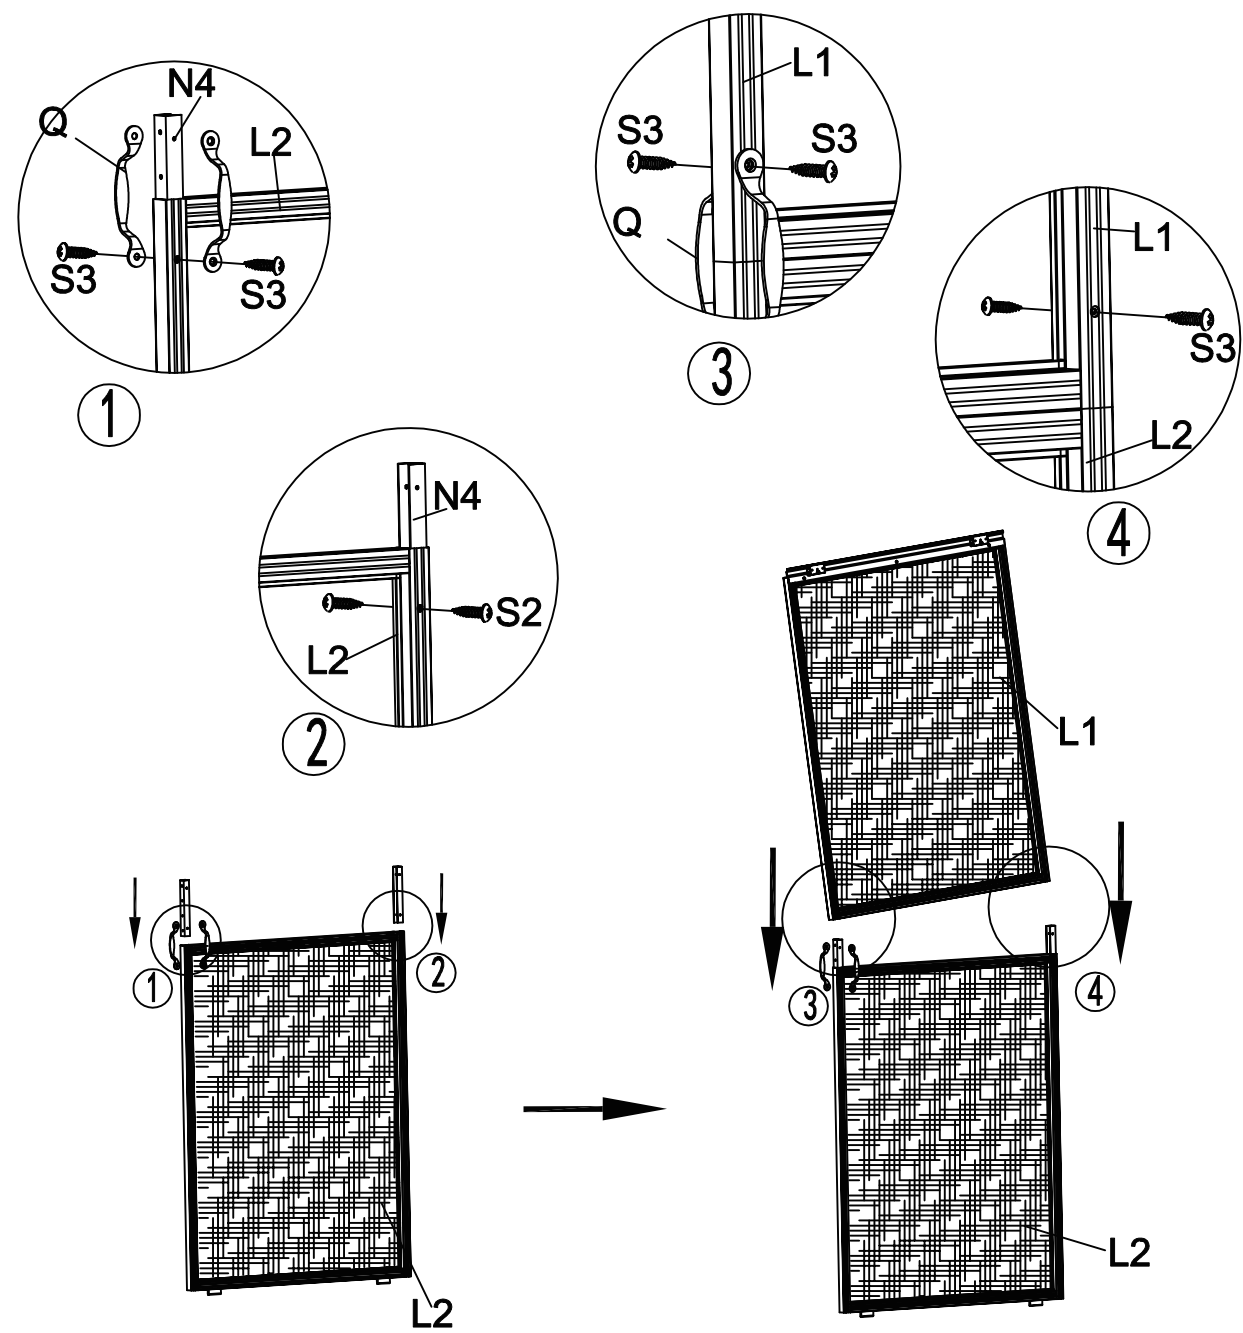

PART	NO.	QTY
	L2	x1
	Q	x2
	N4	x2
	S3	x8

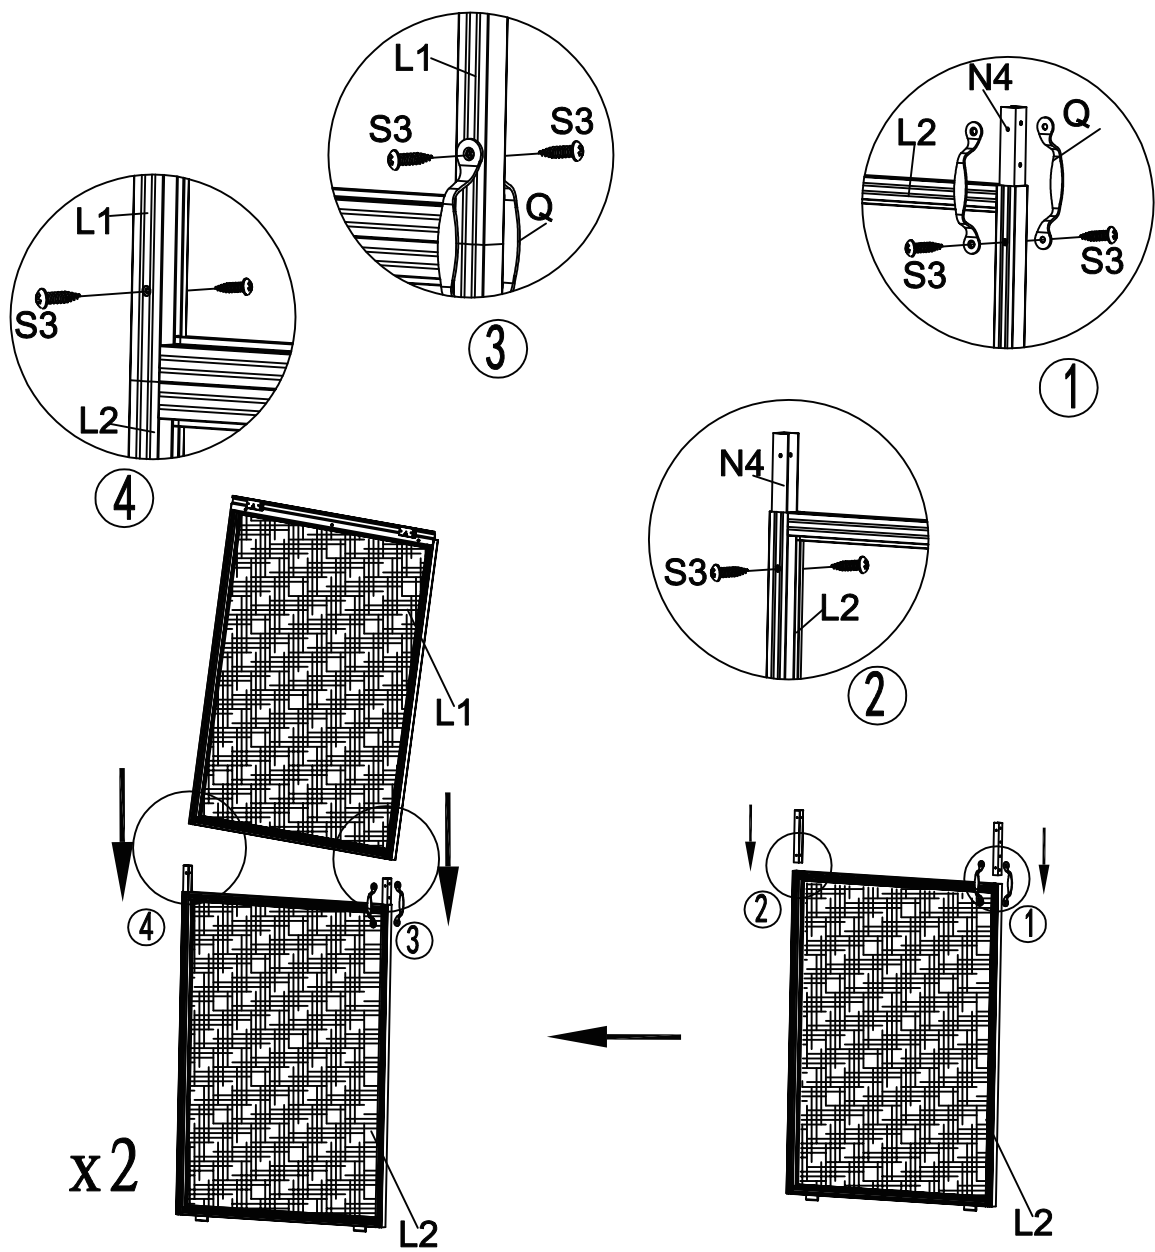



PART	NO.	QTY
	F	x2


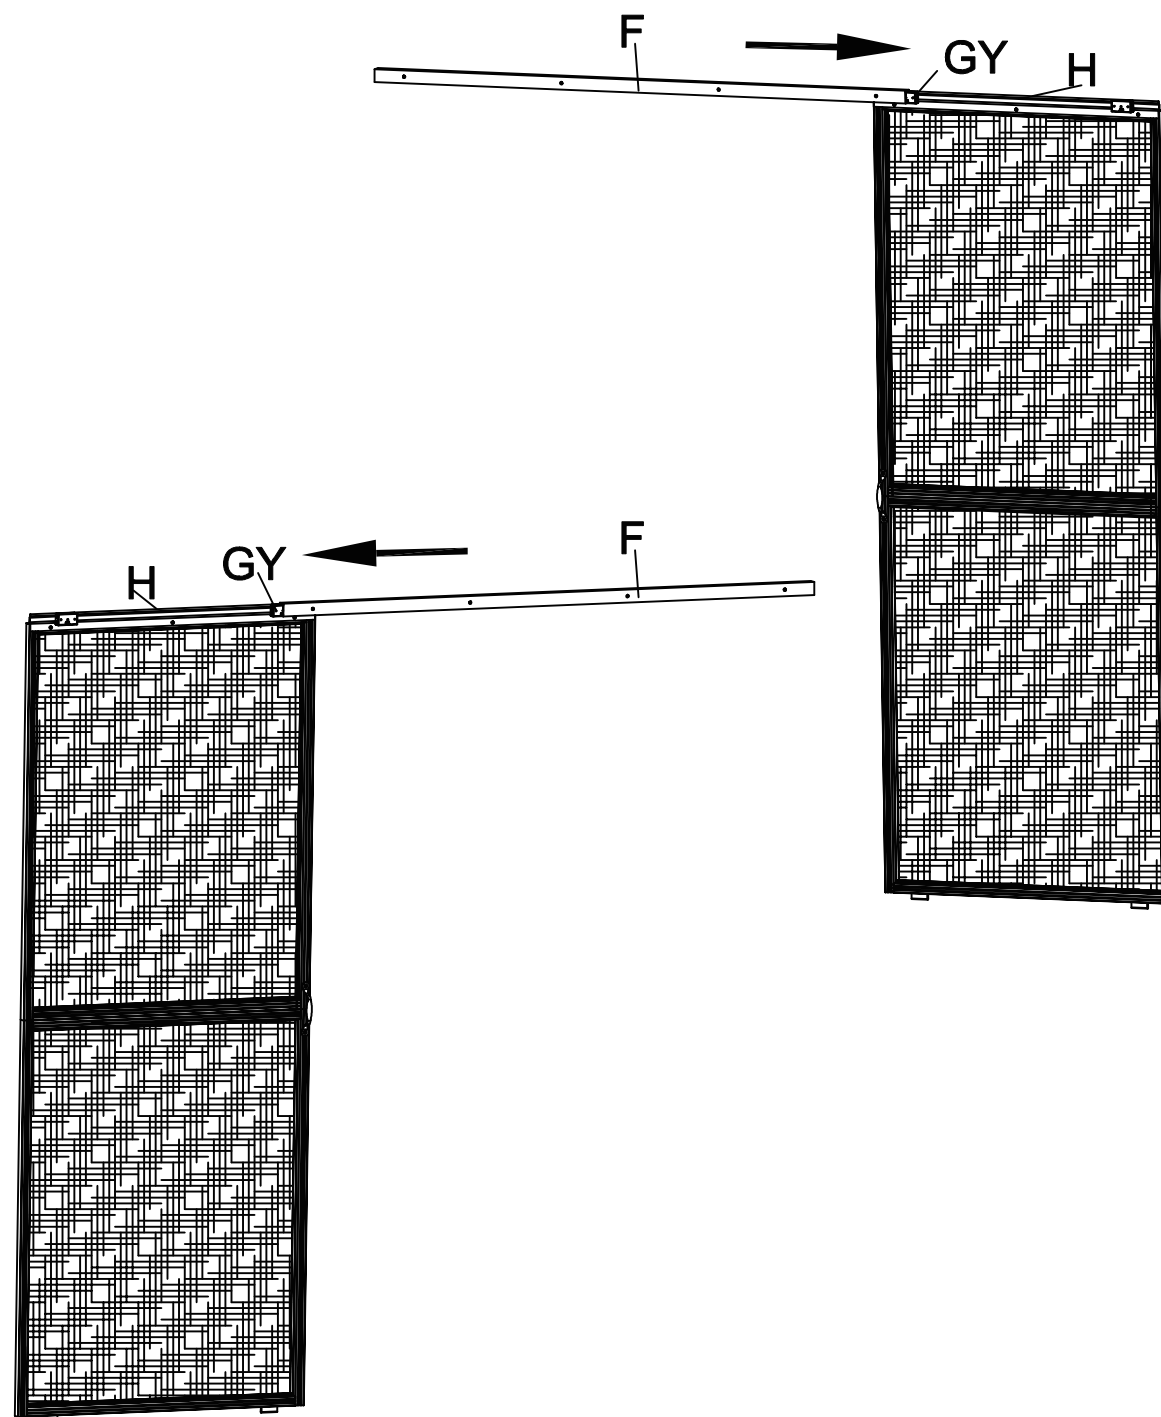



PART	NO.	QTY
	S1	x8


Note: Tighten two screws first, adjust the sliding door frame, then tighten the other two screws.

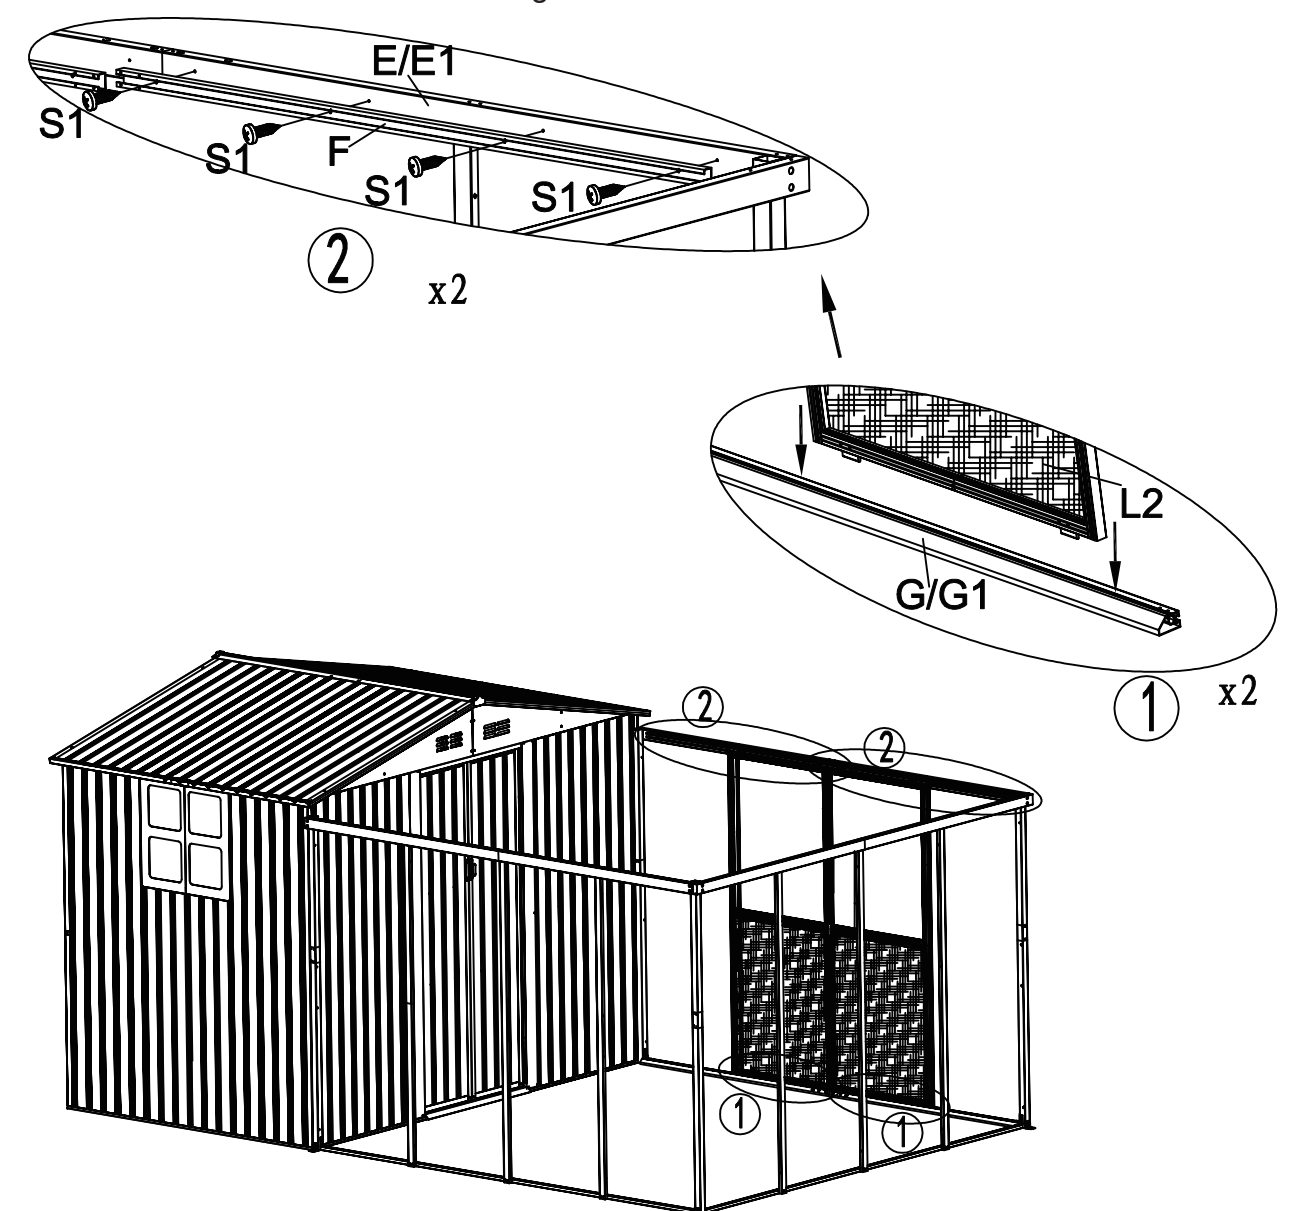


PART	NO.	QTY
	Y46-12	x1
	S3	x8

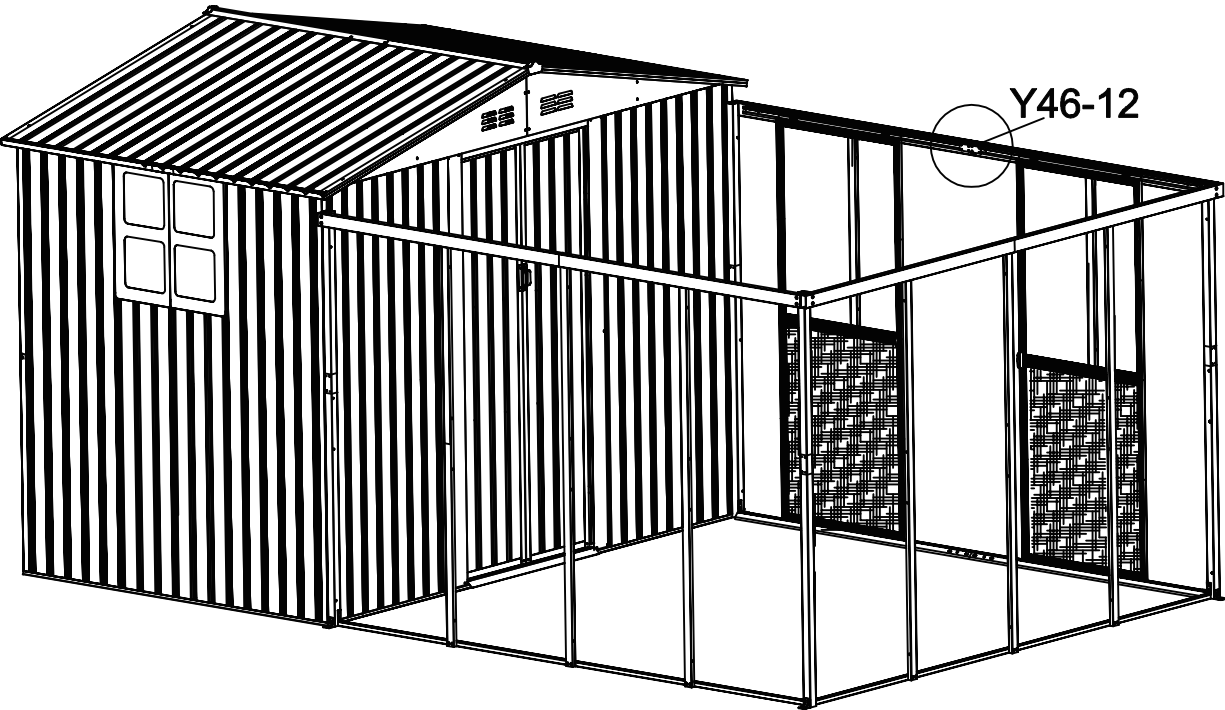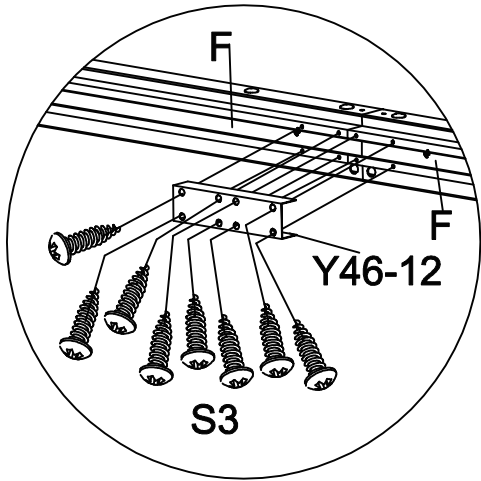



PART	NO.	QTY
	N5	x10
	S1	x20

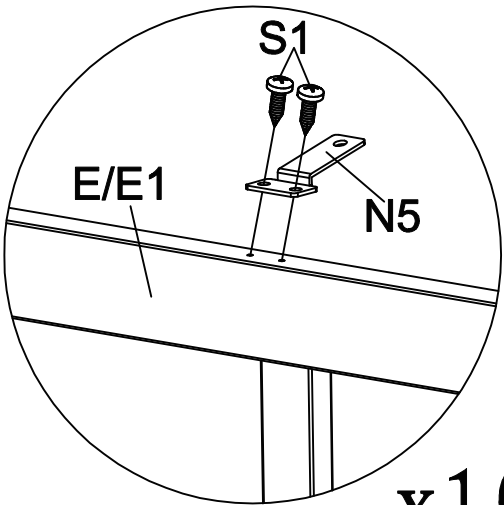


x10

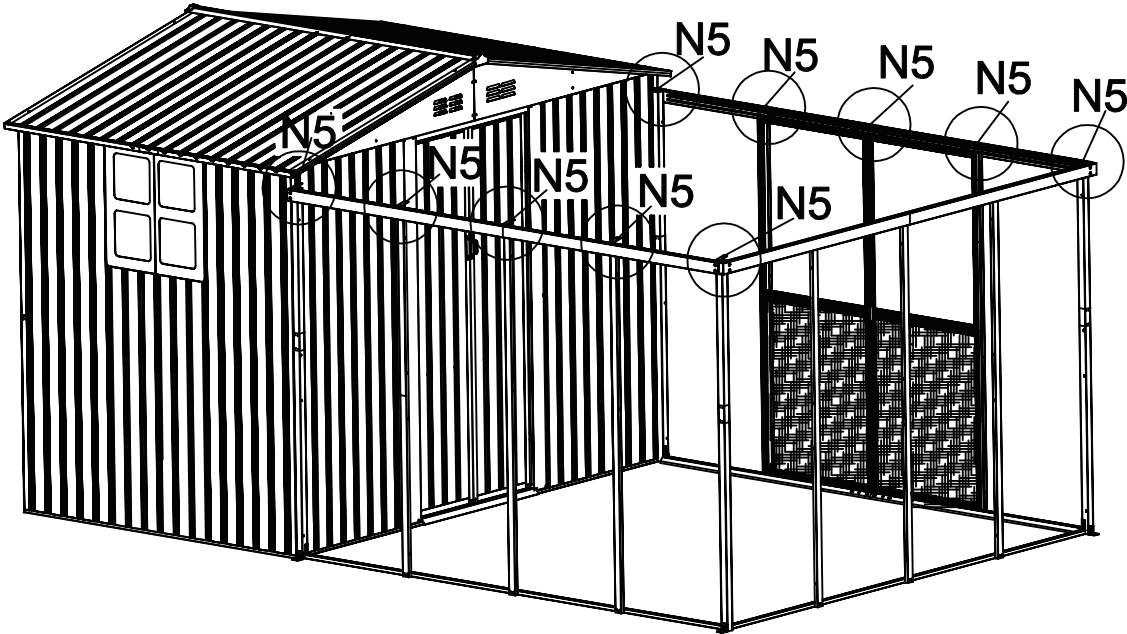


PART	NO.	QTY
	P2	x1
	X2	x2
	X	x2

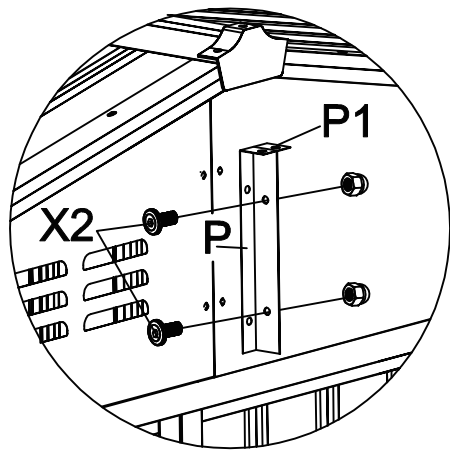



1

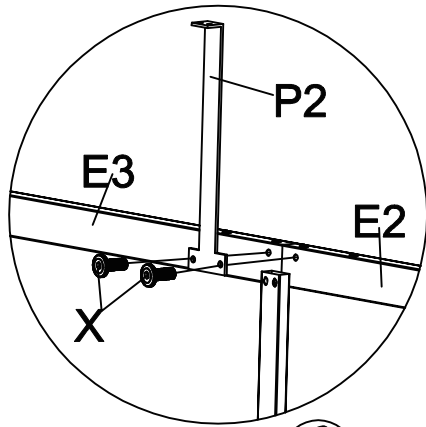


2

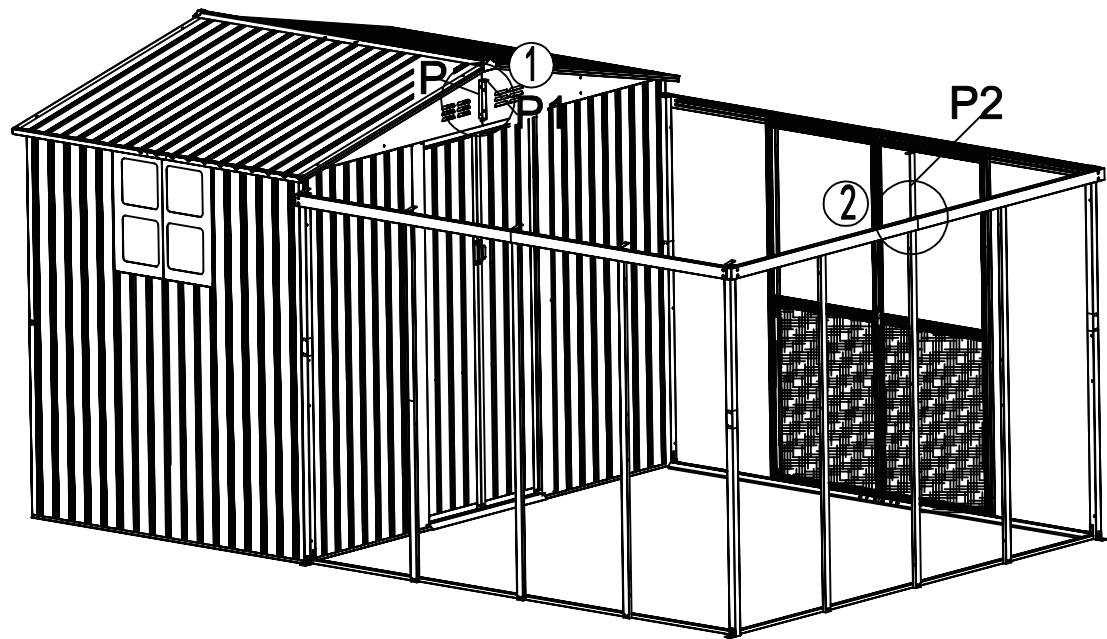


PART	NO.	QTY
	K	x2
	X2	x5

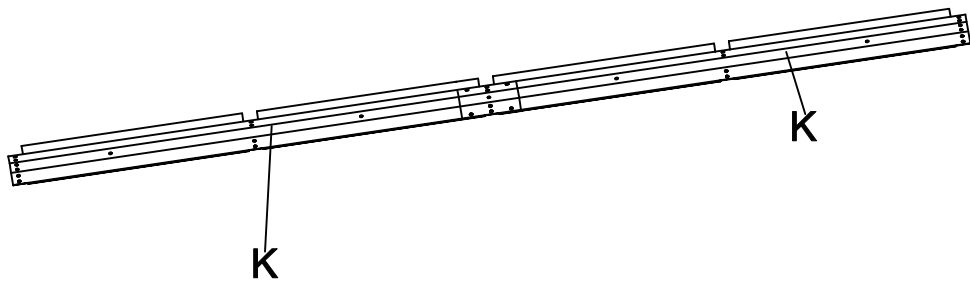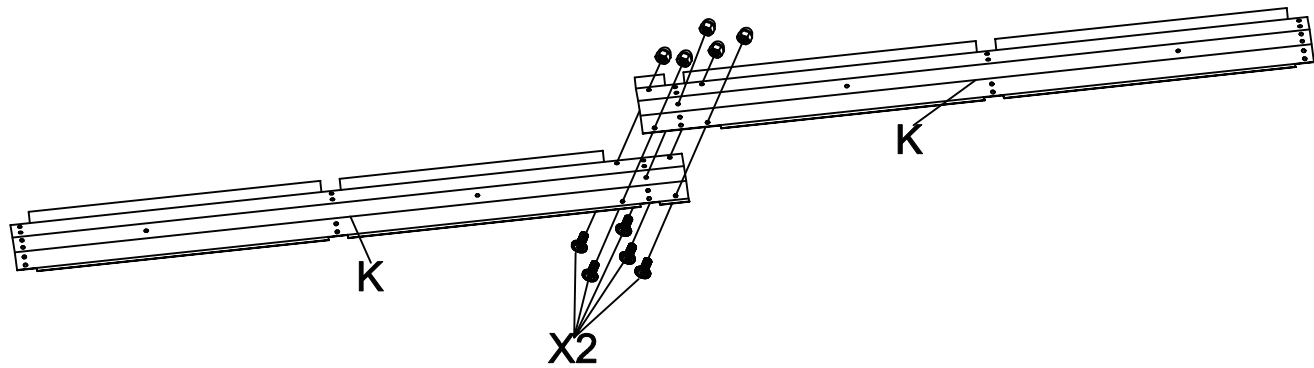


PART	NO.	QTY
	X2	x4

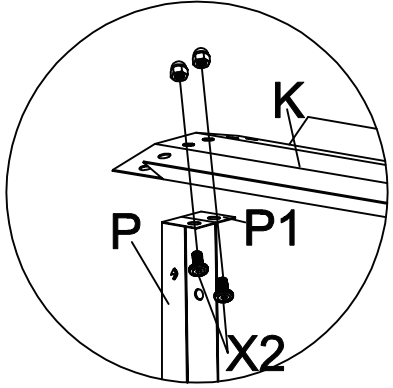


1

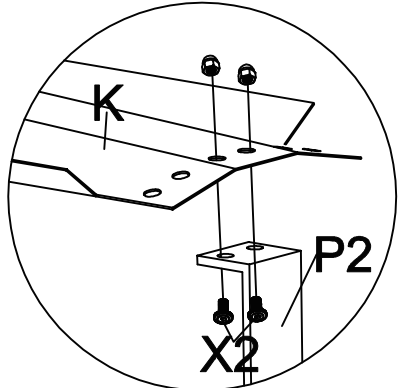


2

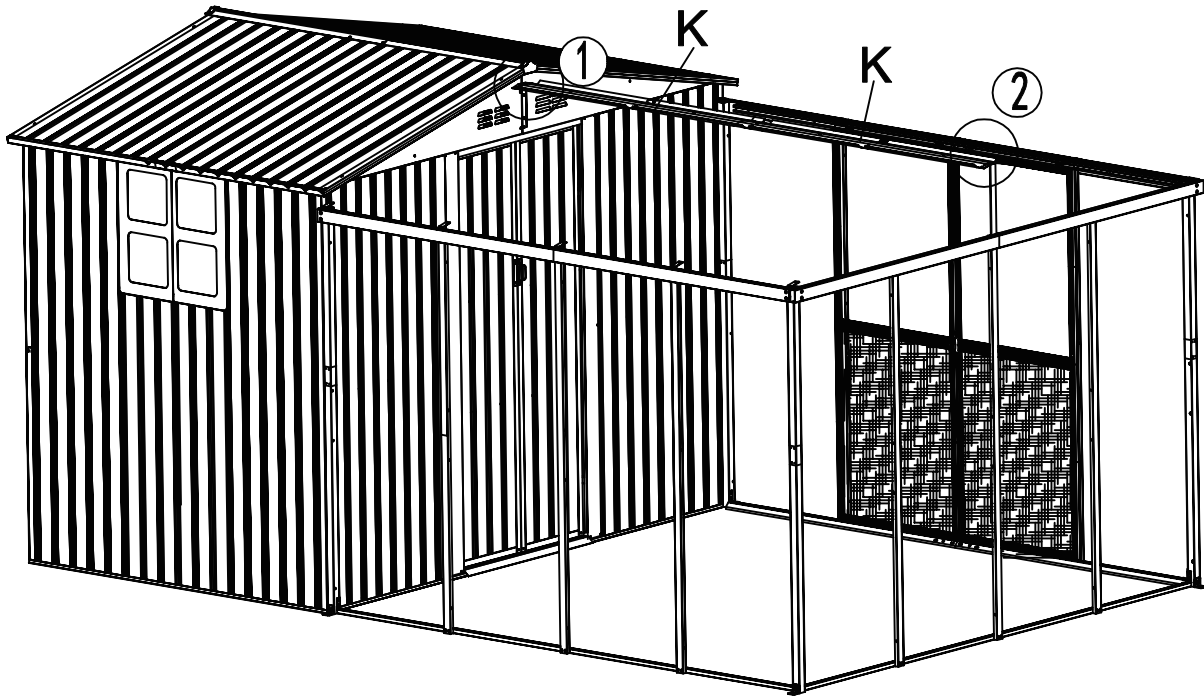


PART	NO.	QTY
	M	x10
	X	x30

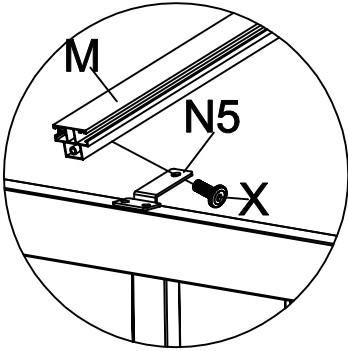



1

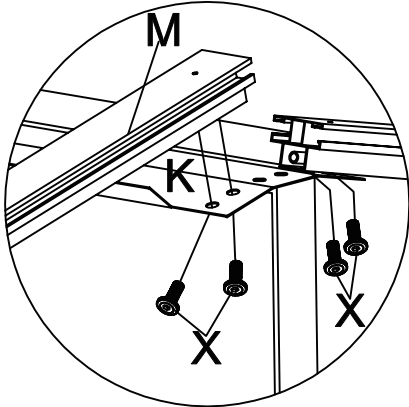

2


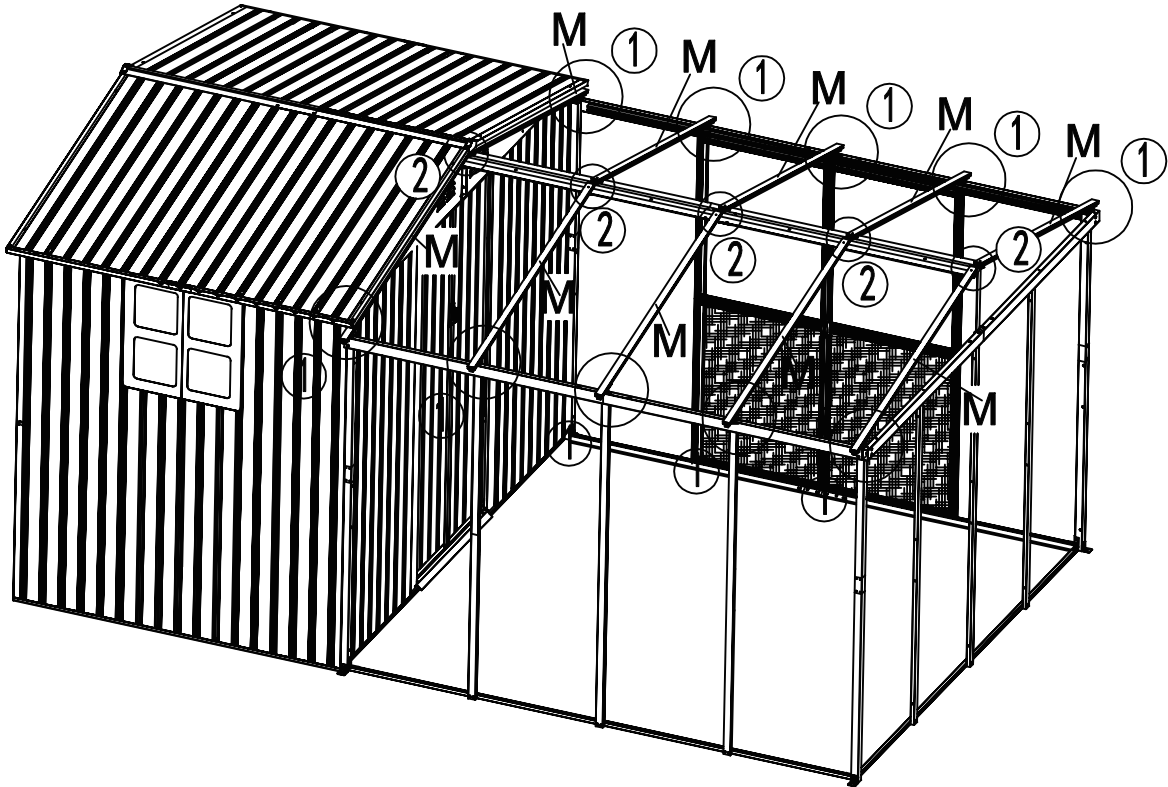





PART	NO.	QTY
	P3	x3
	X	x6


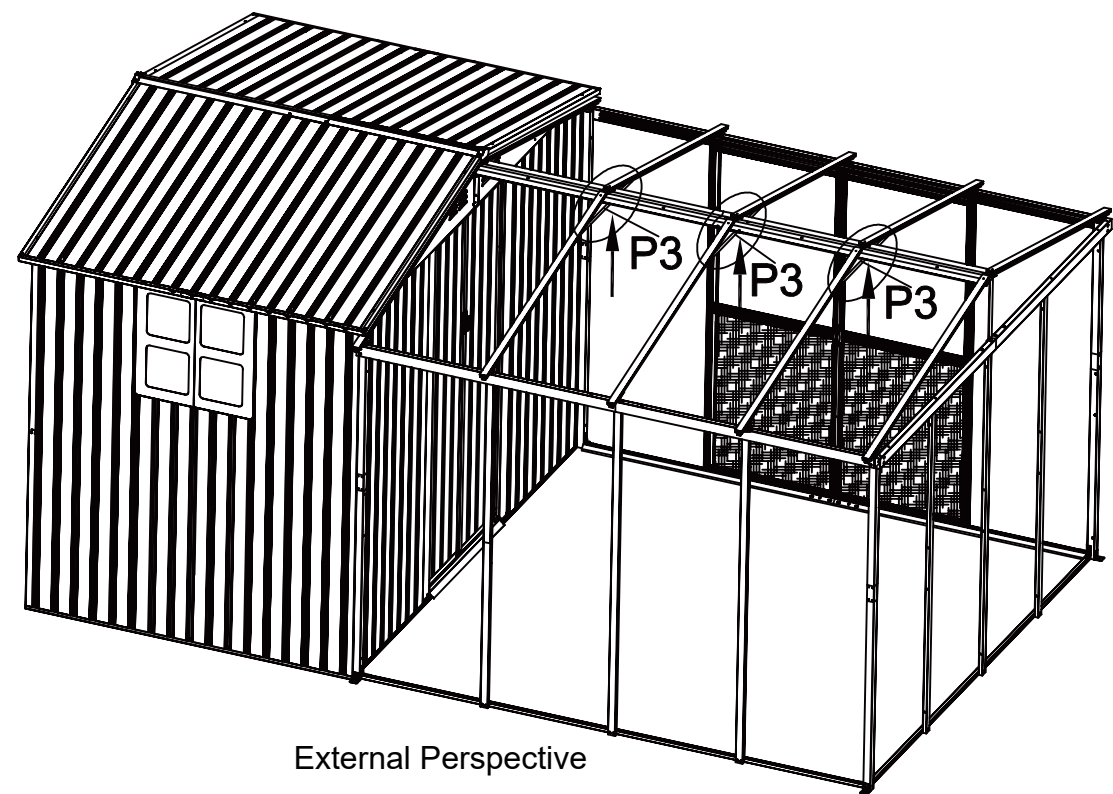
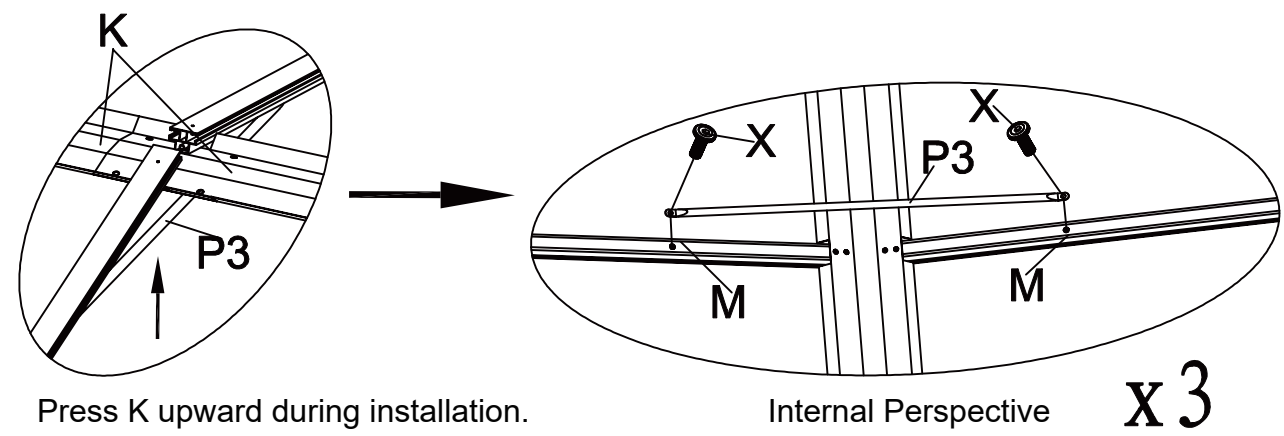



PART	NO.	QTY
	H4	x2
	S2	x6



Install with the U-shaped notch facing inward.

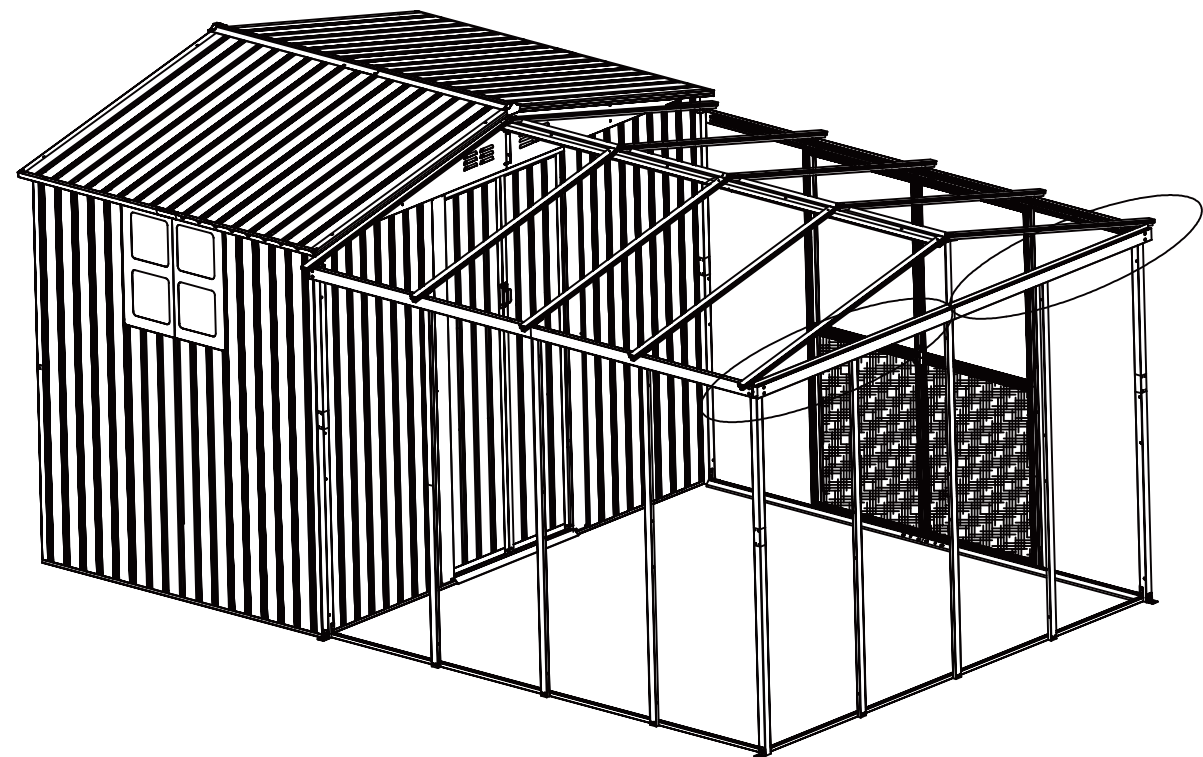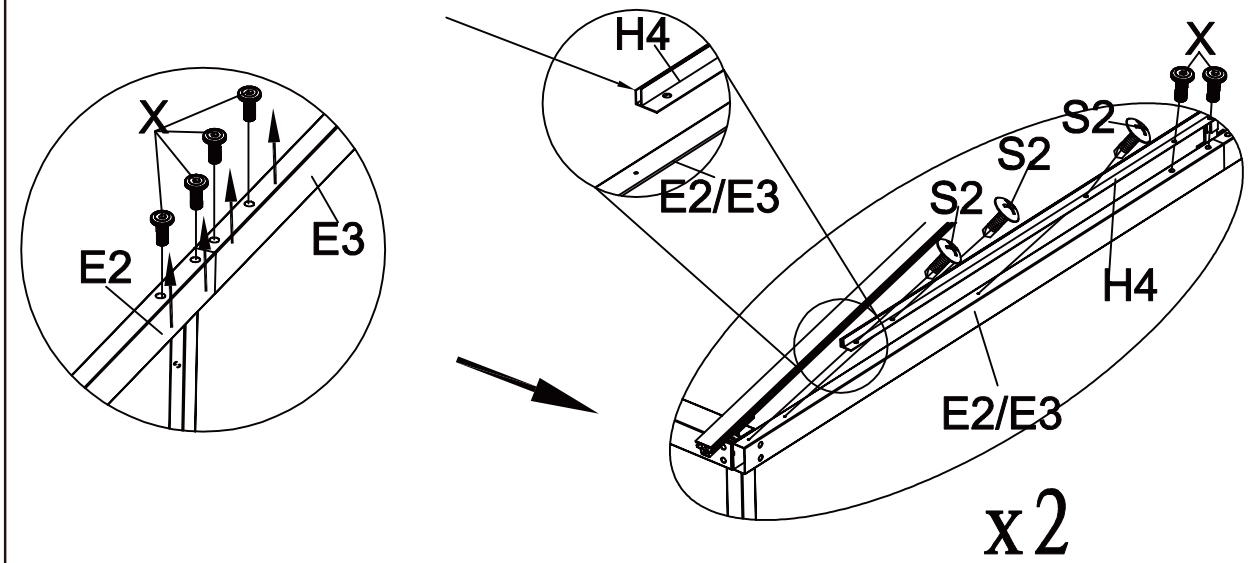


PART	NO.	QTY
	R1	x1
	R2	x1
	H2	x1

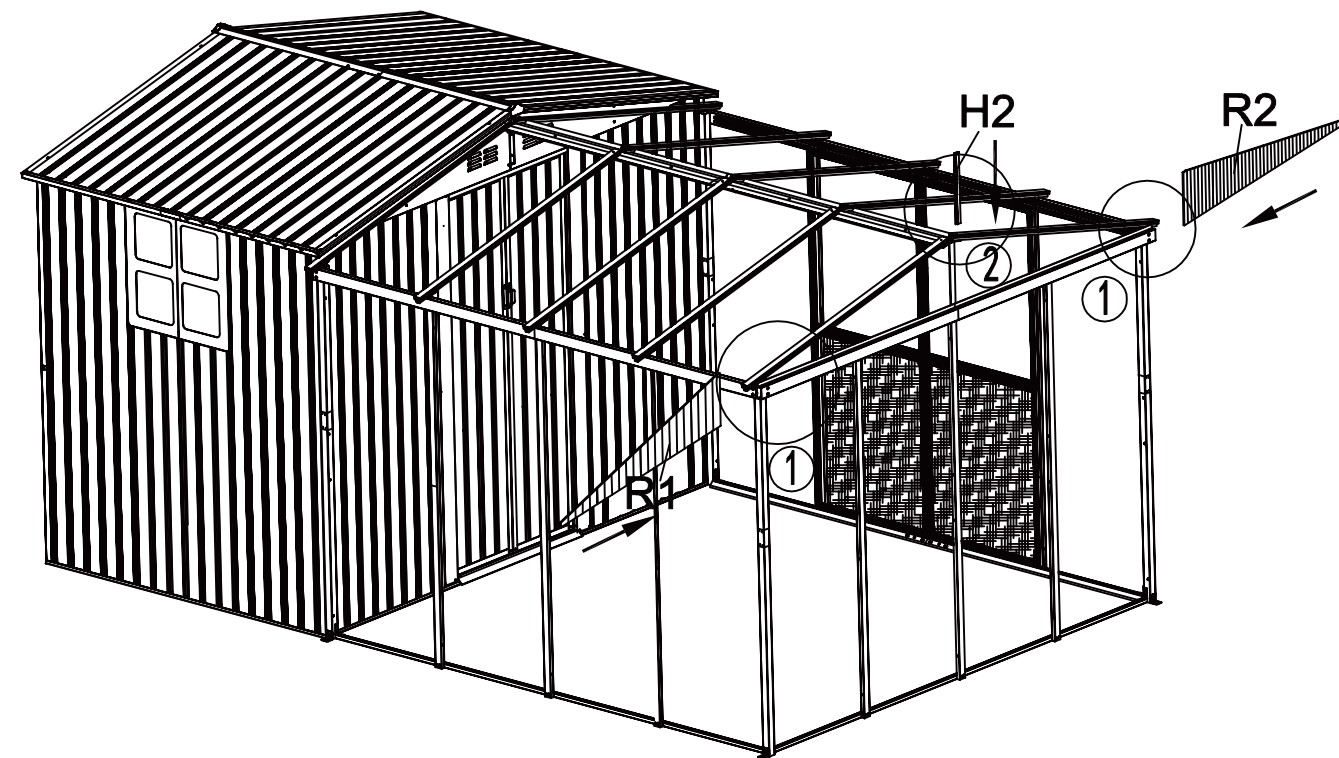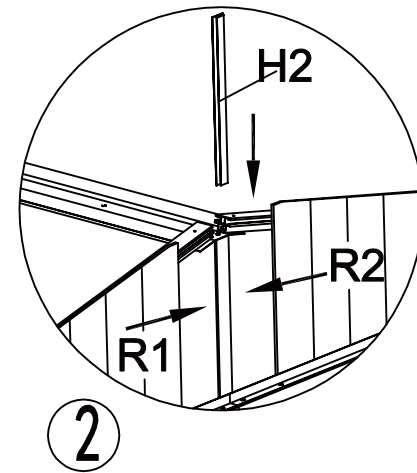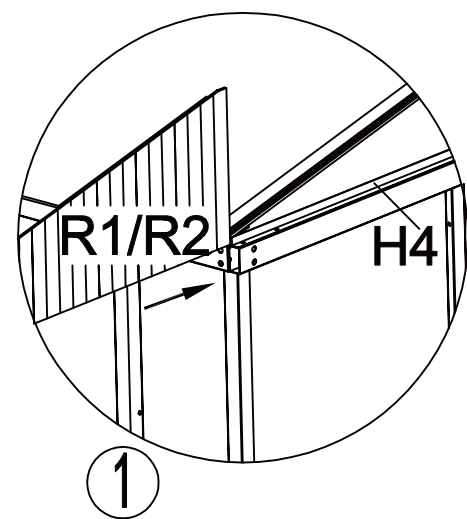


PART	NO.	QTY
	O2	x2
	S2	x8

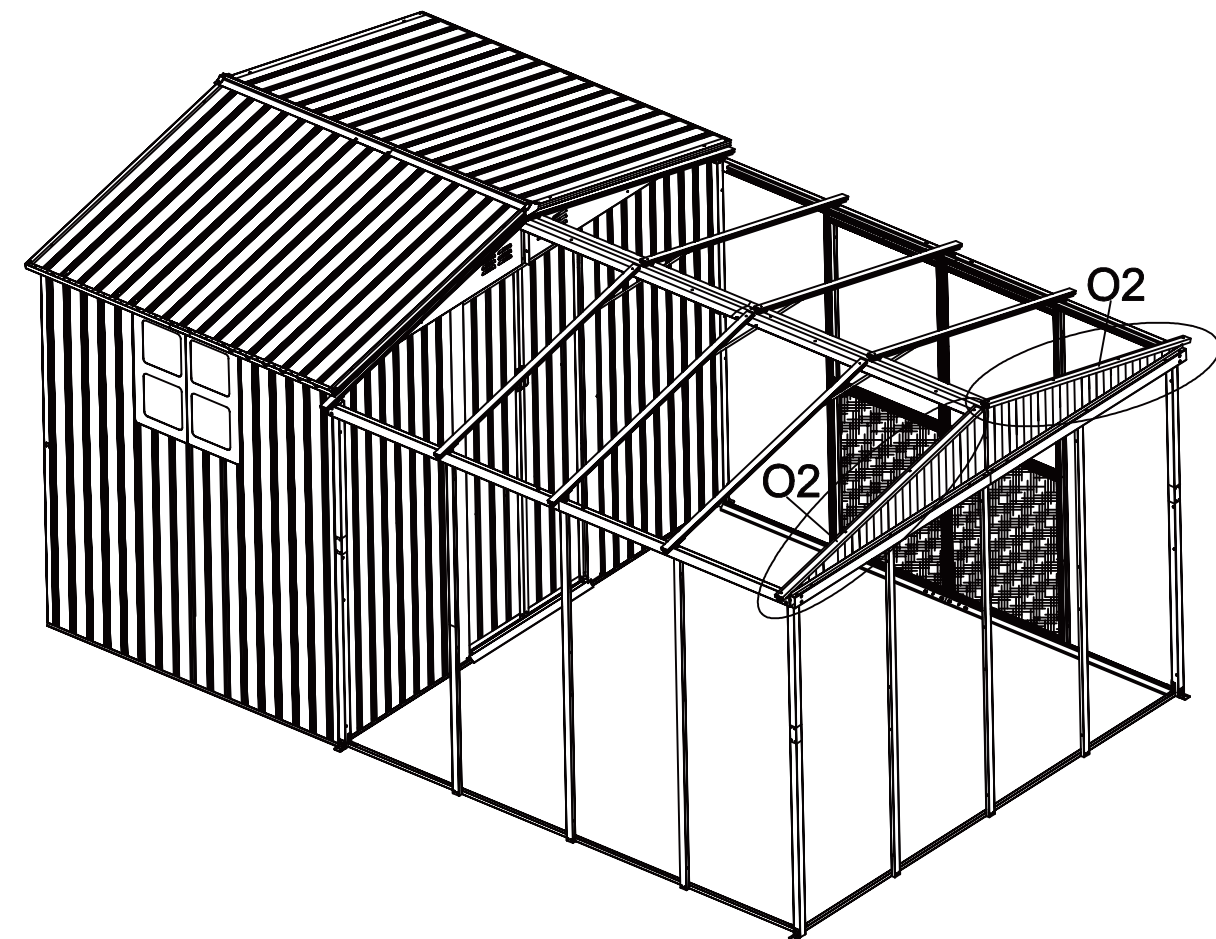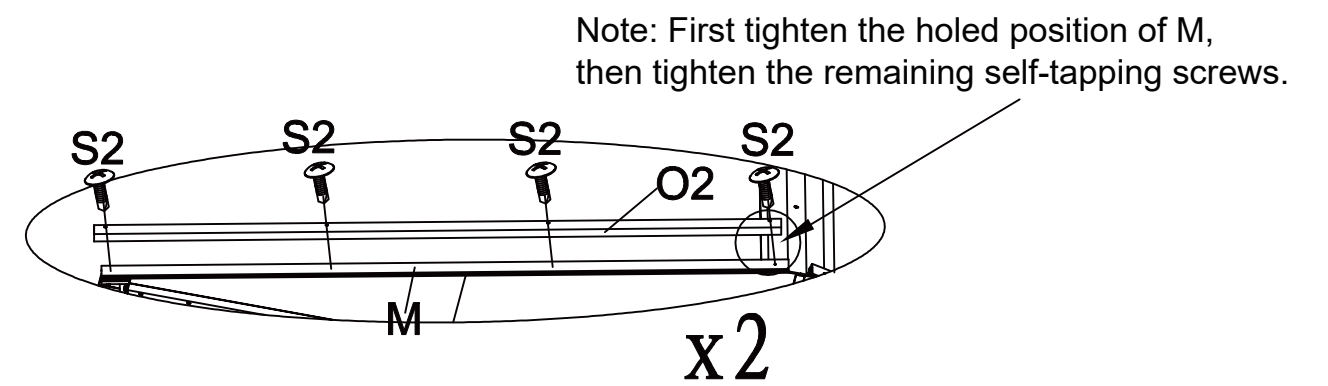



PART	NO.	QTY
	K1	x2
	X2	x5

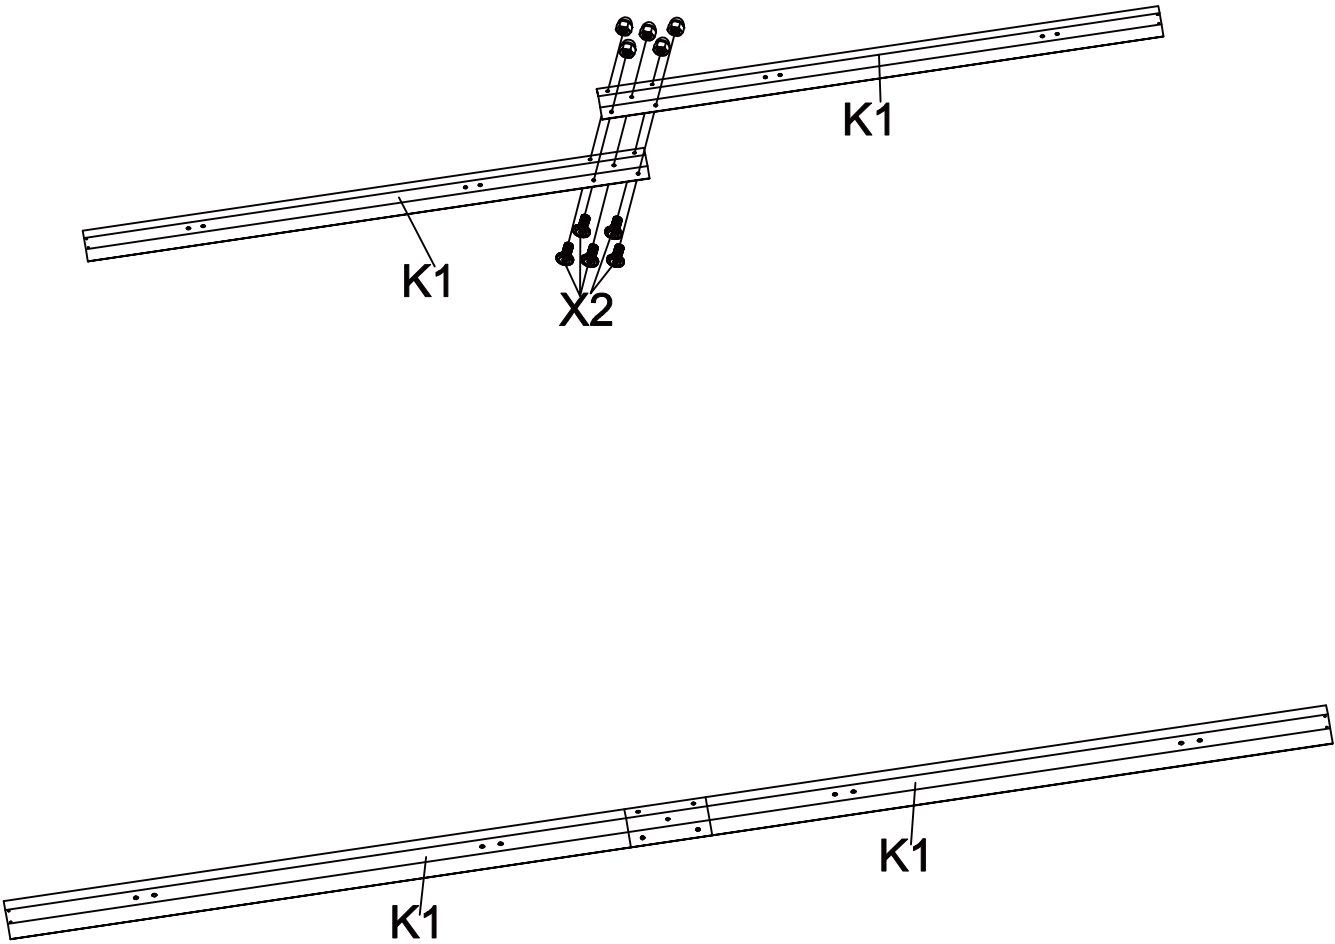




PART	NO.	QTY
	N6	x4
	X	x8

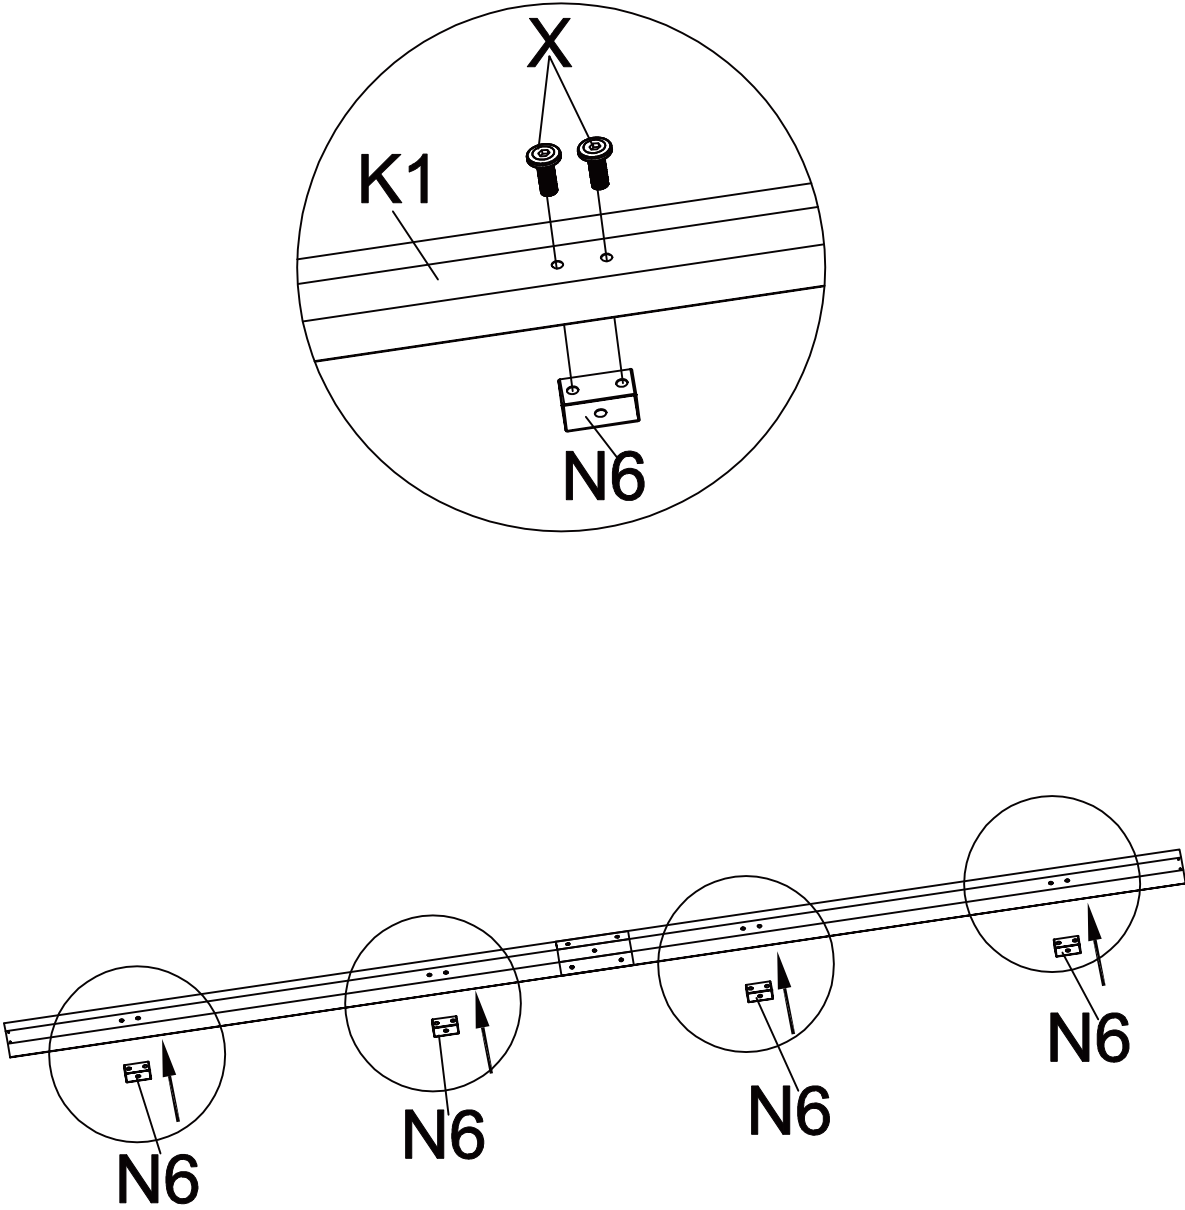




PART	NO.	QTY
	X	x4

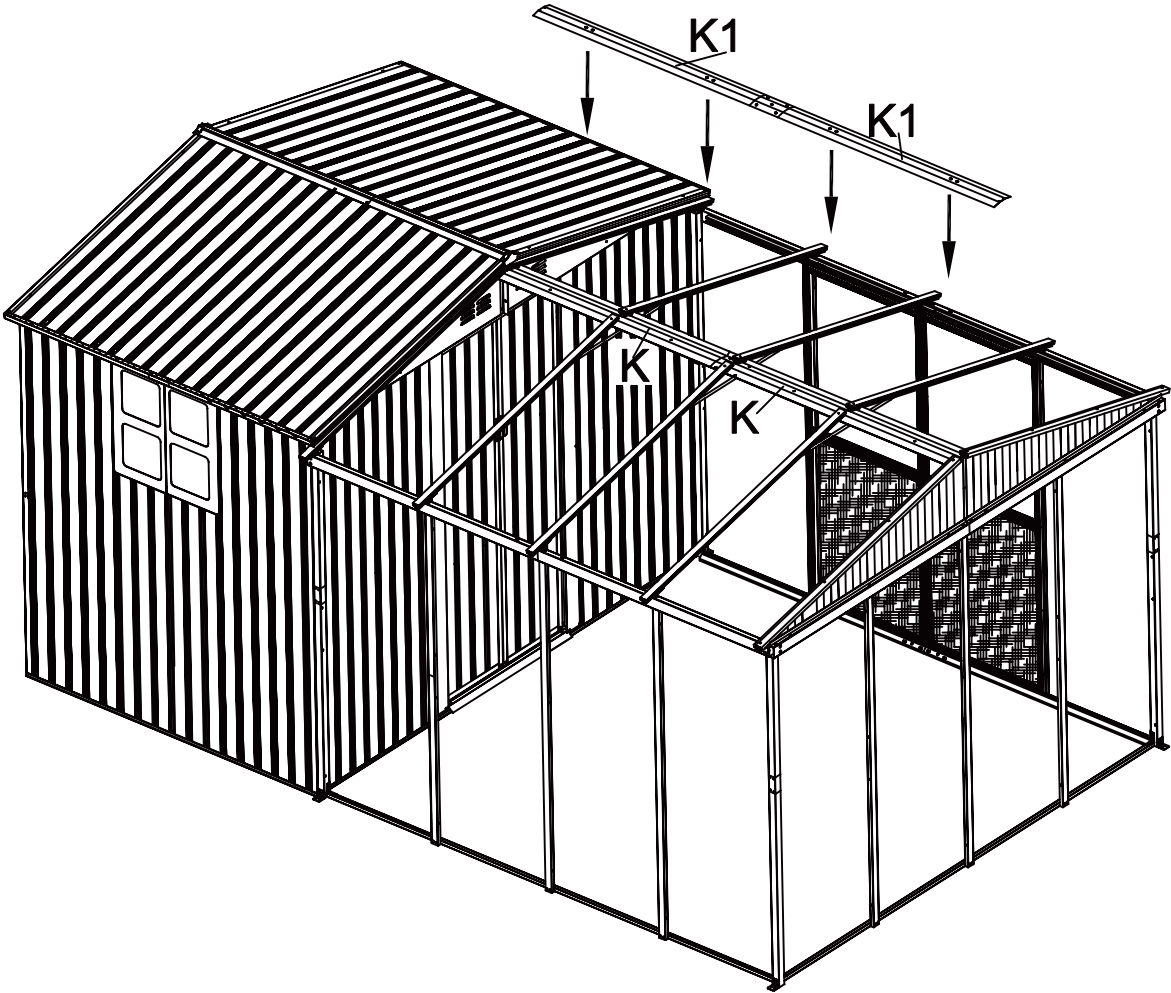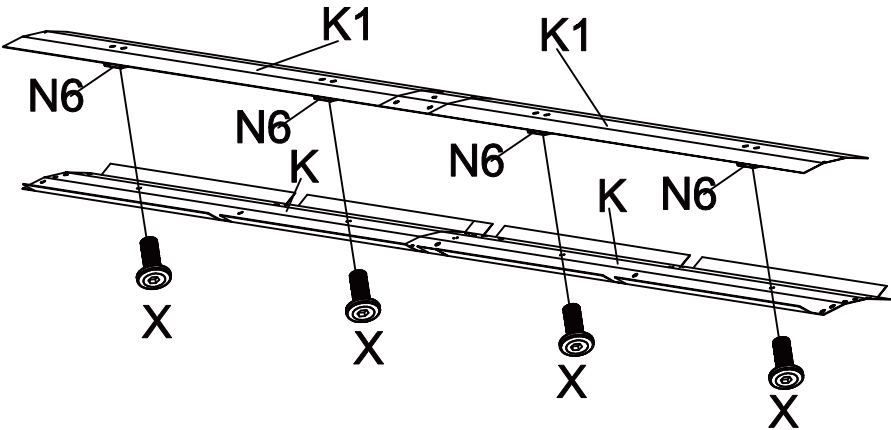



PART	NO.	QTY
	O	x1
	S2	x2

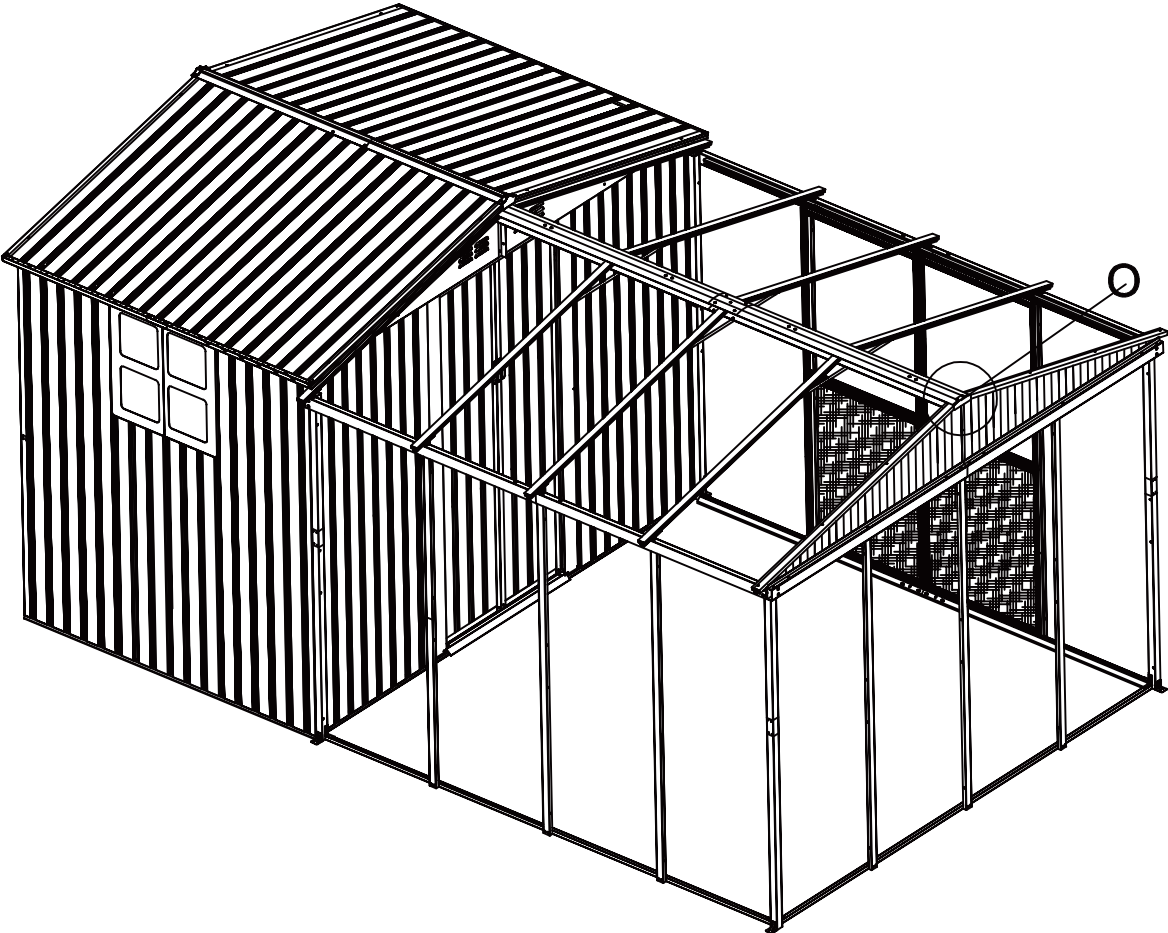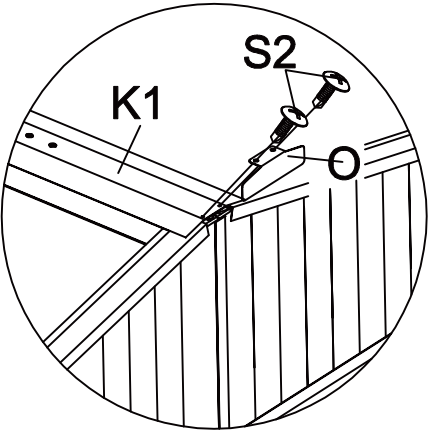




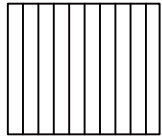
PART	NO.	QTY
	R	x24
	H3	x16

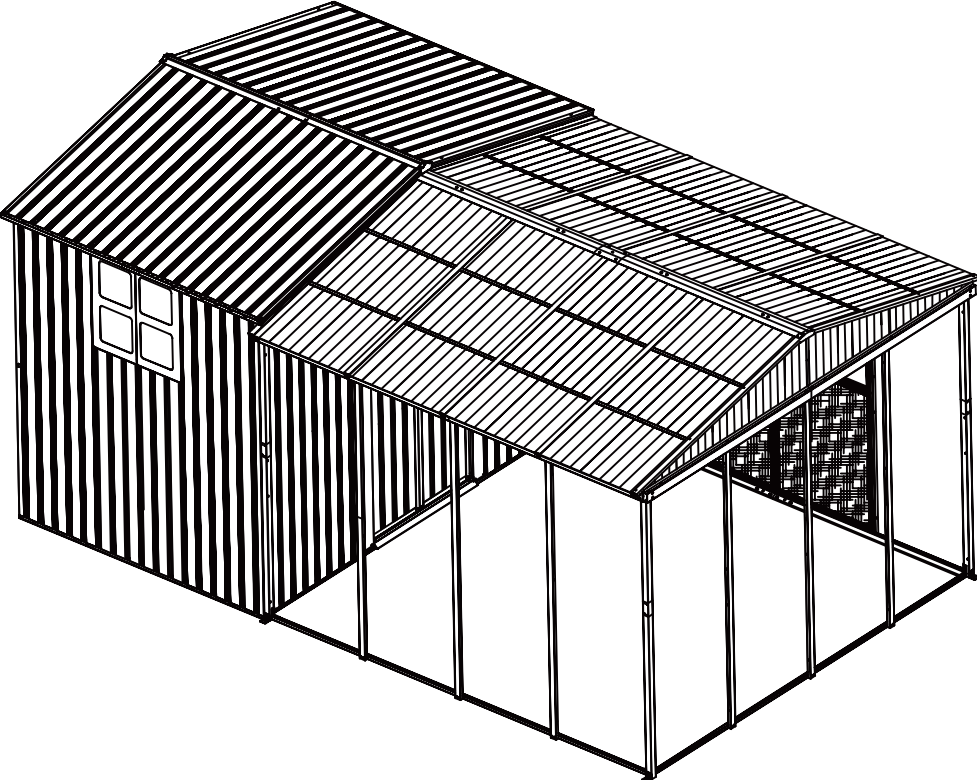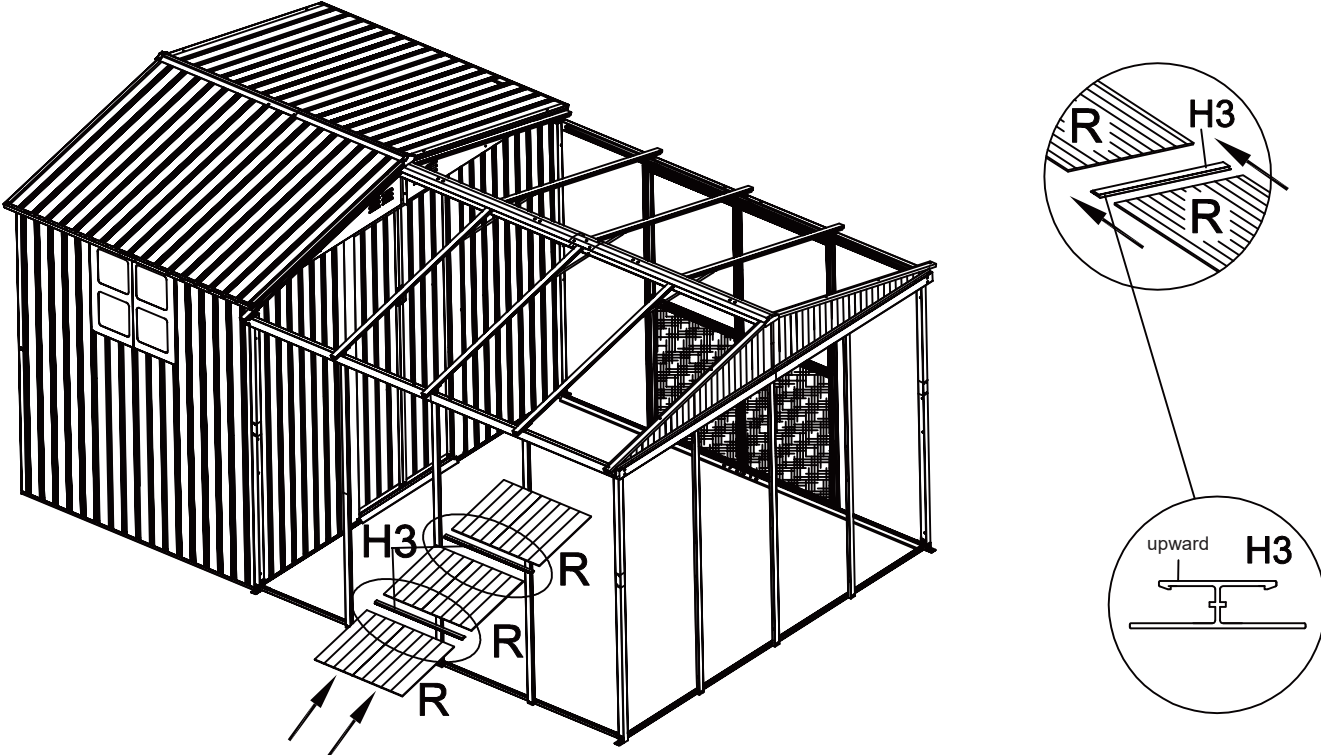




PART	NO.	QTY
	O1	x8
	X	x10

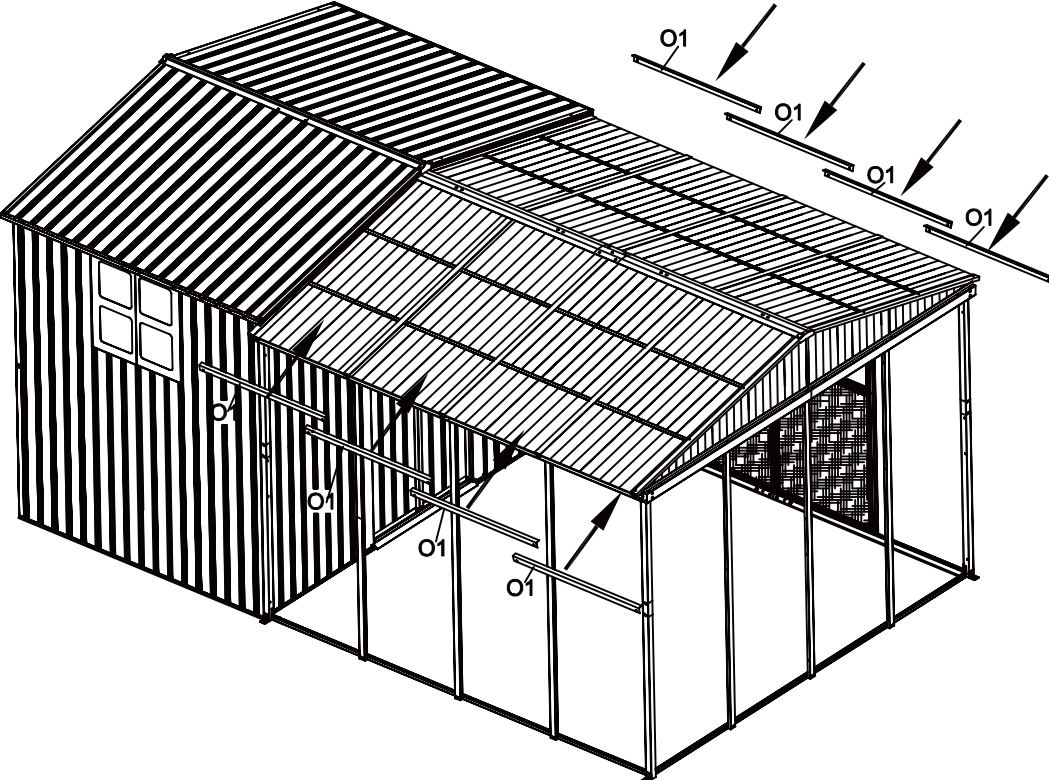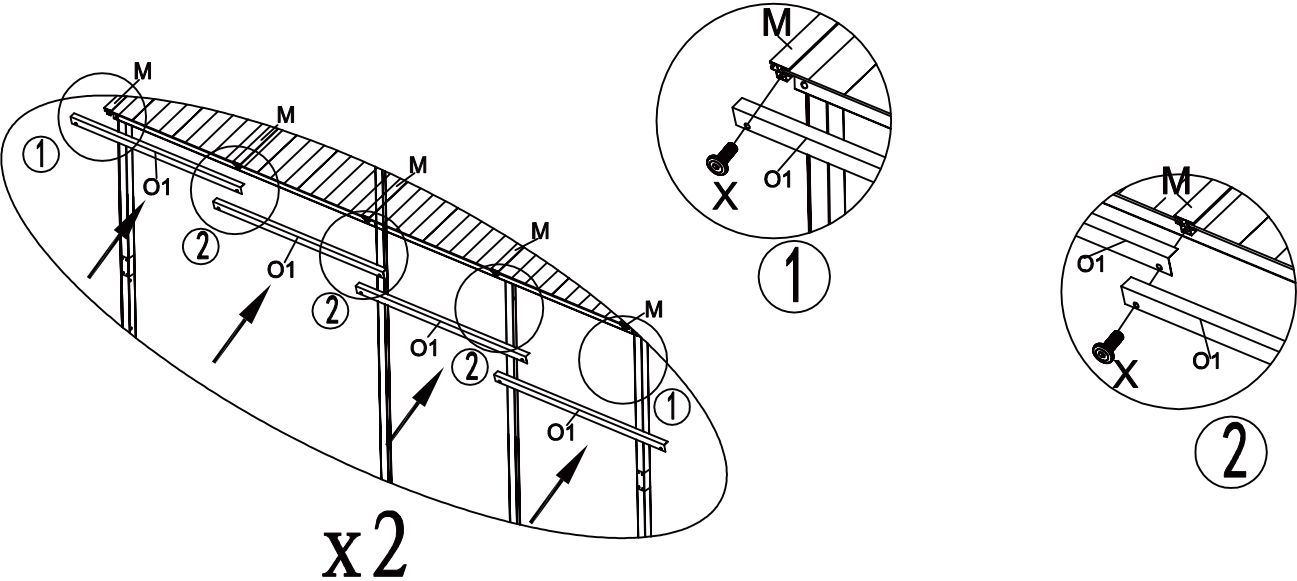

PART	NO.	QTY
	L	x8

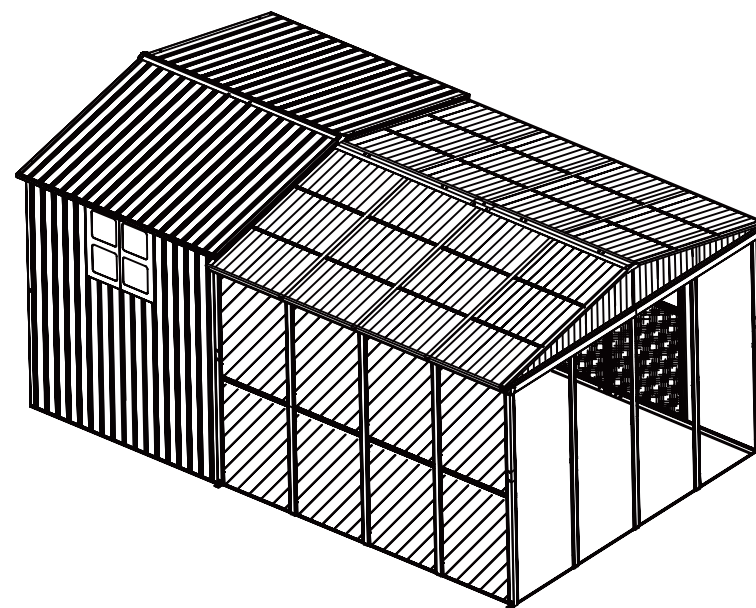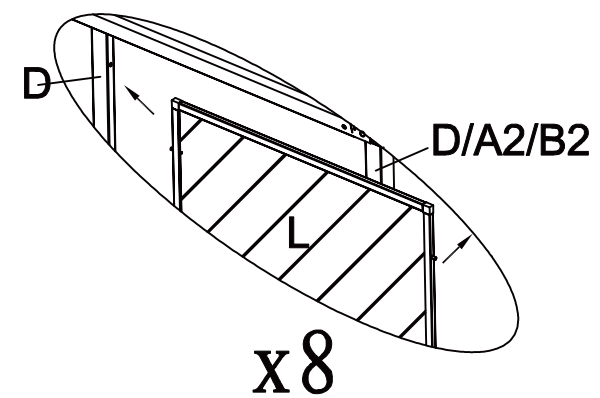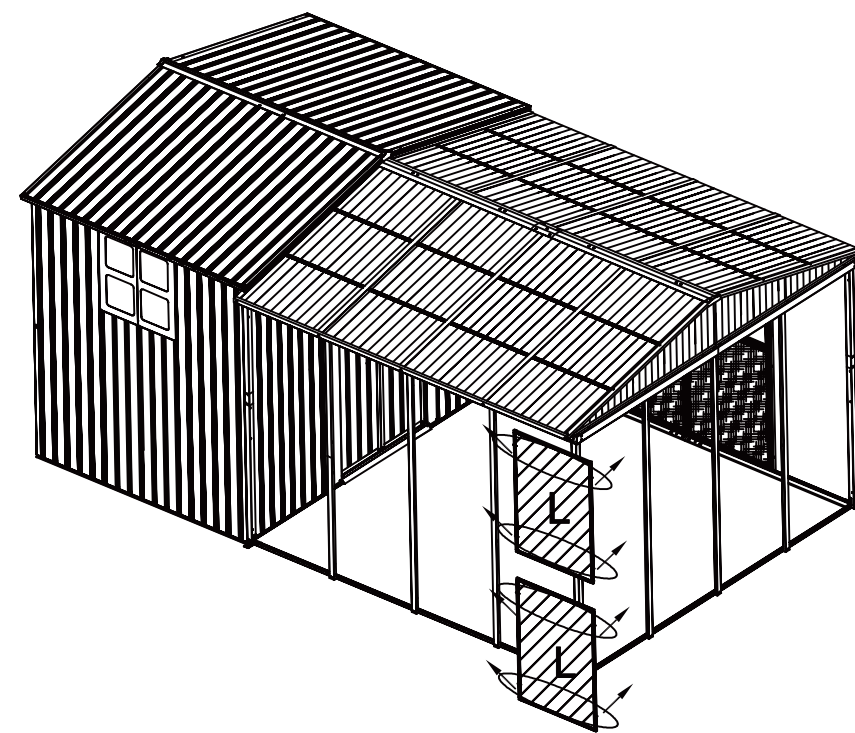

PART	NO.	QTY
	L	x12

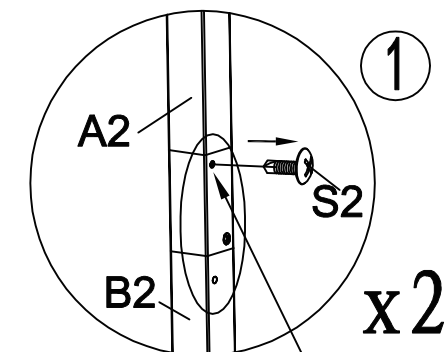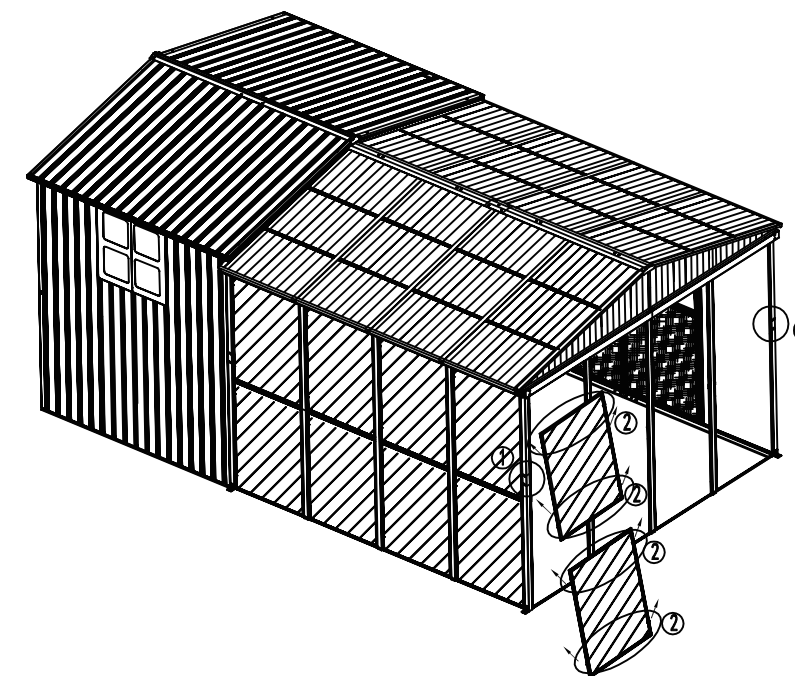

Before installing L, remove the screw S2 that is aligned with the mounting hole.

