


ASSEMBLY INSTRUCTIONS FOR YOUR DAL DOME PENDANT

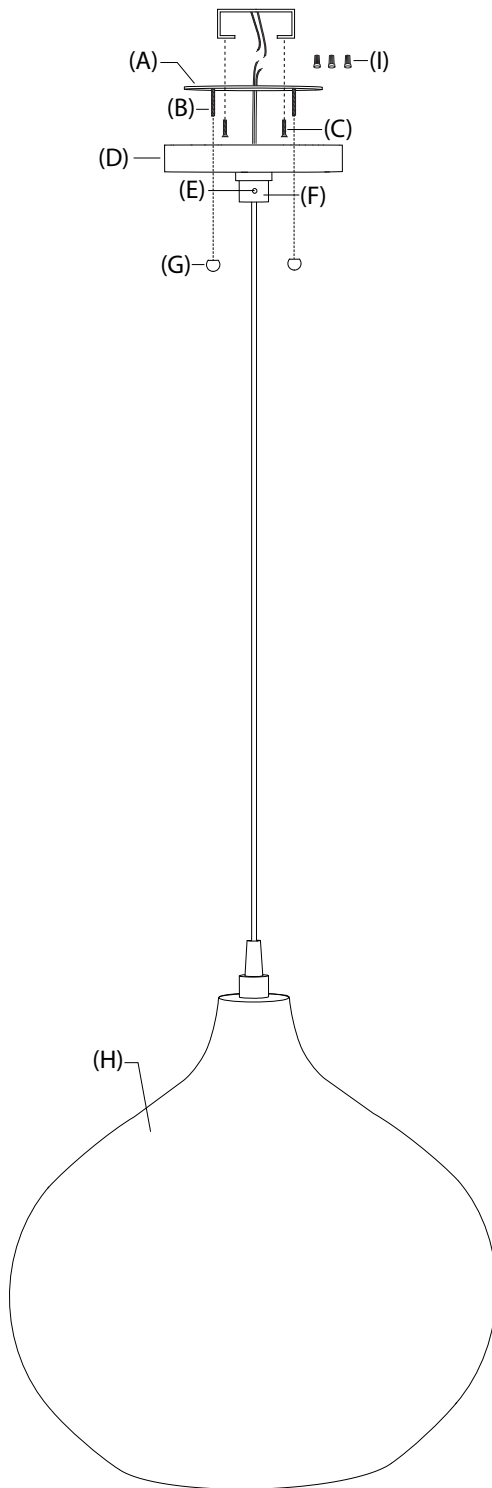

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety.
- *It is very important that they are read completely before beginning the installation of your fixture.
- *WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- *Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- *This fixture is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove mounting plate (A) from canopy (D). Do this by unthreading decorative nuts (G) from threaded tubes (B). Set decorative nuts (G) aside.
4. Carefully pull the wiring from the ceiling outlet box. Thread the wires through the center hole in mounting plate (A).
5. Affix mounting plate (A) to outlet box with mounting screws (C) provided.
6. Determine the desired height for the fixture to hang and adjust the cord length accordingly. To add or remove length from the cord, carefully loosen plastic screw (E) from housing (F) with small flat head screwdriver (not included) then pull cord up or down through canopy to achieve desired length. To secure cord in place, carefully tighten screw with screwdriver until hand tight. Note: Do not overtighten as this may cause damage to plastic screw.
7. If necessary, cut extra cord above canopy (D). NOTE: leave at least six inches of cord above the canopy in order to make proper wire connections.
8. Lift the canopy to the ceiling and make the proper electrical connections noted in steps 9 through 11. A LICENSED ELECTRICIAN IS RECOMMENDED.
9. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
10. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
11. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
12. Gently push the wire connections back into the ceiling outlet box.
13. Place canopy (D) over the mounting plate, aligning holes in canopy with threaded tubes (B). Slide canopy (D) over threaded tubes (B). Thread decorative nuts (G) onto threaded tubes (B) to secure fixture to ceiling.
14. Install one 60W MAX. Type A, medium base bulb into the socket located inside shade (H).
15. Reconnect the main electrical supply at the fuse box/ circuit breaker and test the fixture.

****To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.****