

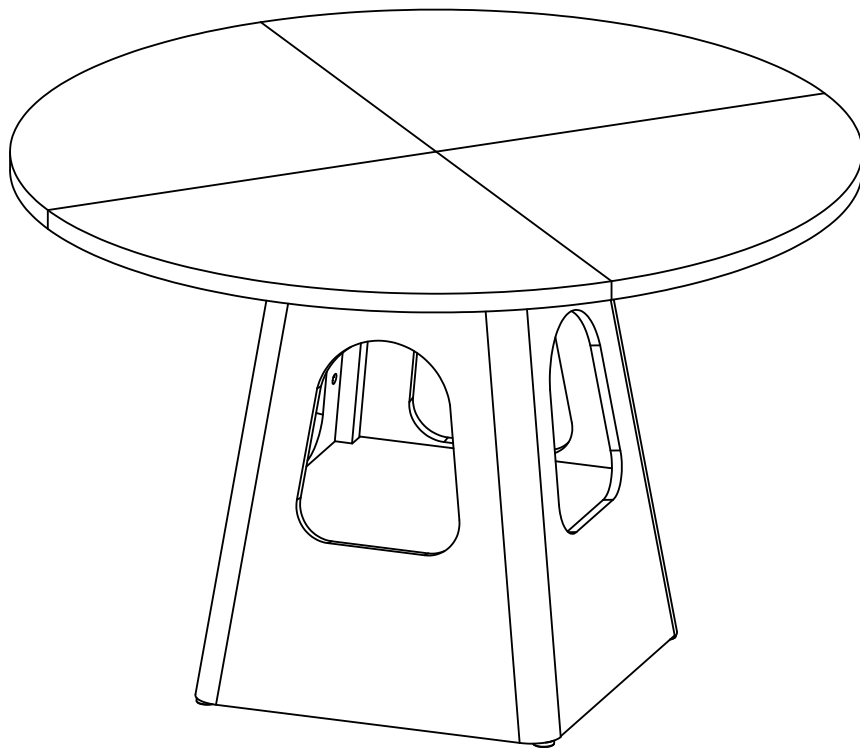
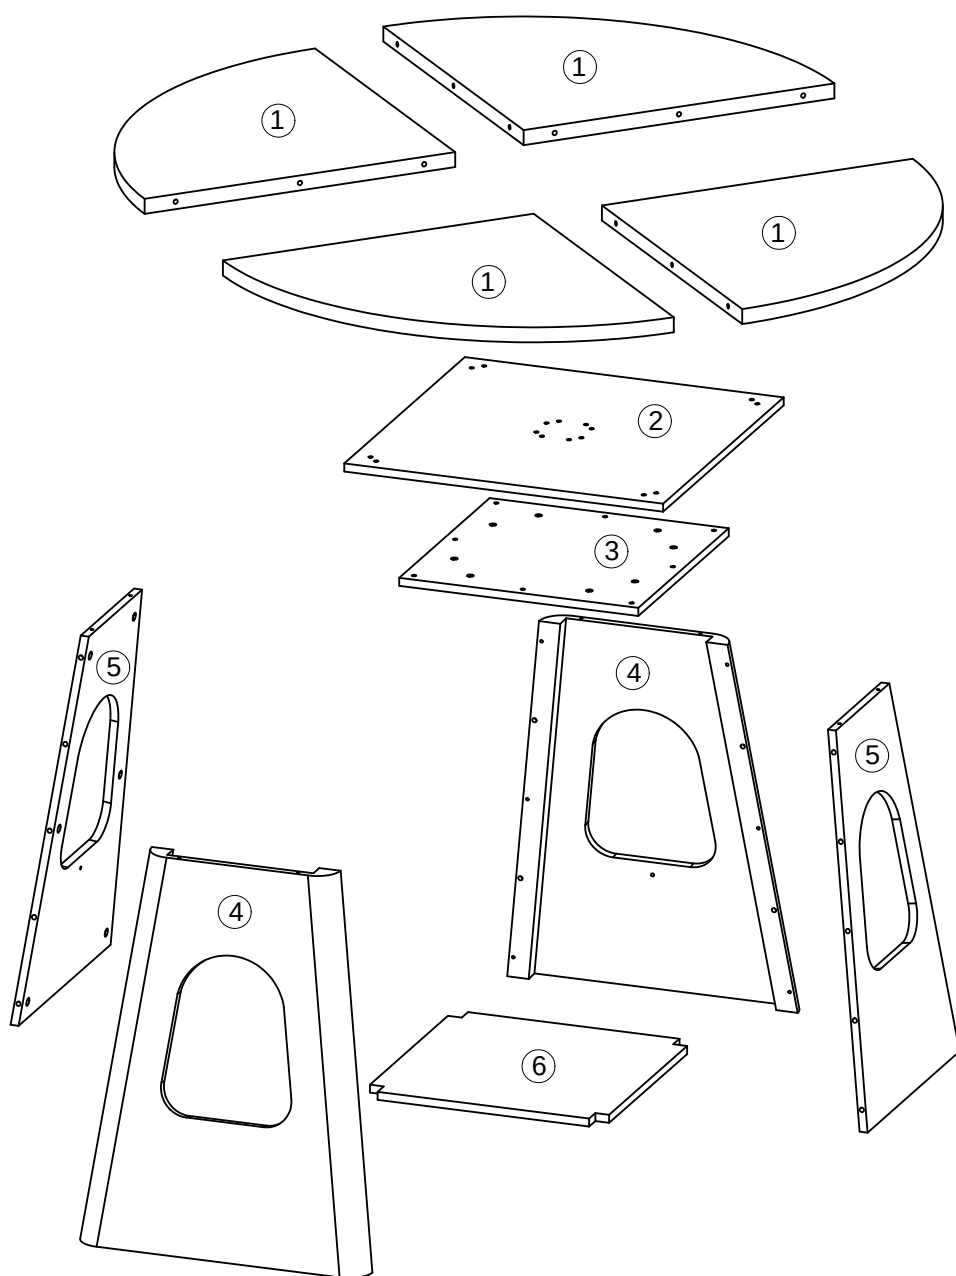
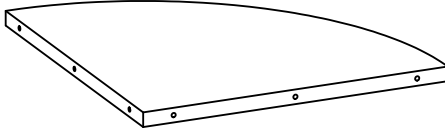
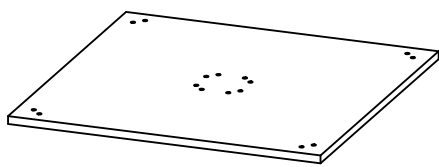
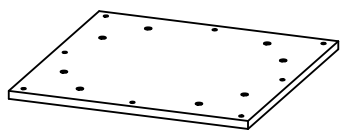
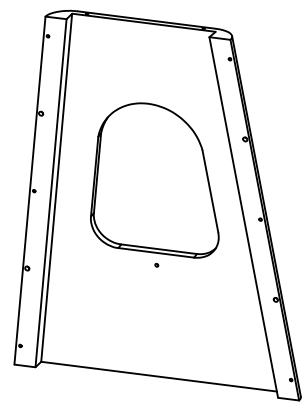
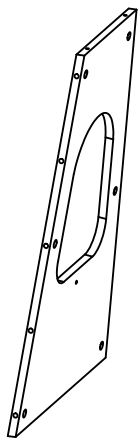
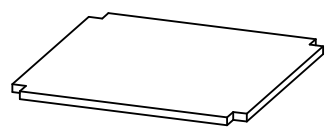
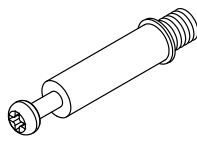

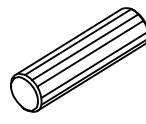
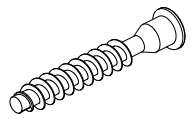







Assembly Instructions







①  4PCS	②  1PC	③  1PC	
④  2PCS	⑤  2PCS	⑥  1PC	
A  Ø6.3×35mm 12PCS	B  Ø15×12mm 12PCS	C  Ø8×30mm 20PCS	D  Ø7×48mm 8PCS
E  4PCS	F  4PCS	G  4PCS	H  Ø4×12mm 16PCS
I  M6×25mm 24PCS	J  4mm 1PC		


1

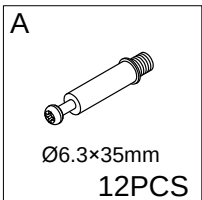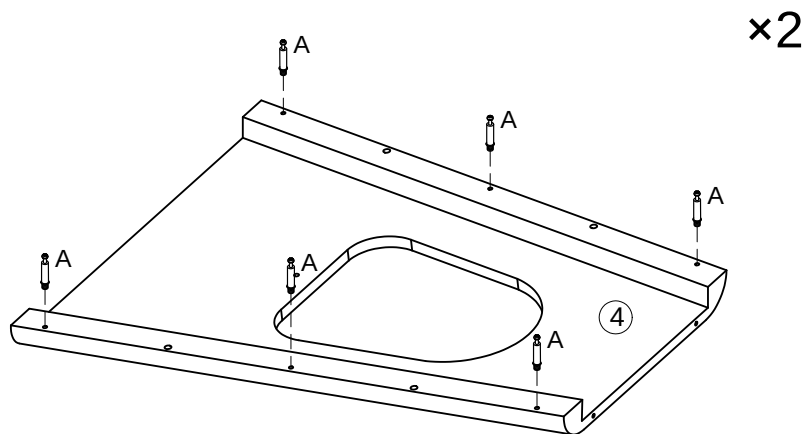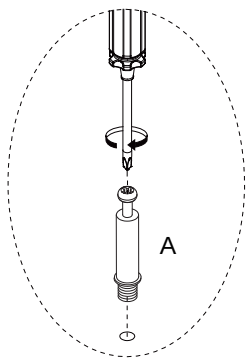


2

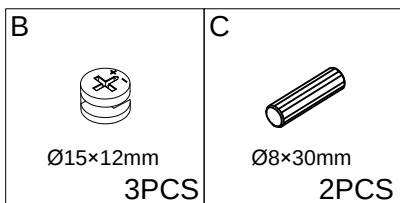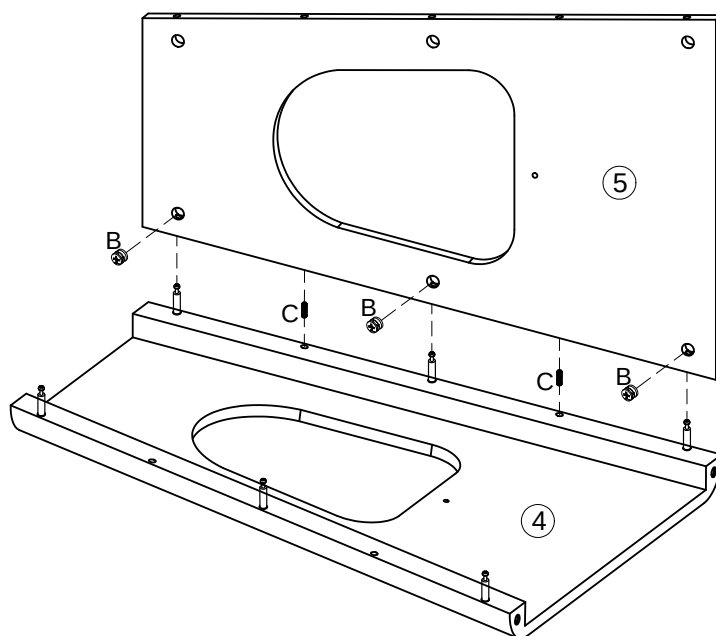


Step 1

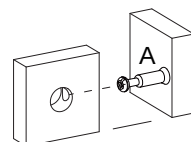


Step 2

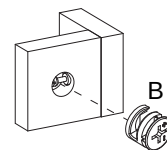


Step 3

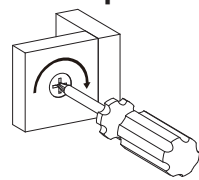


3

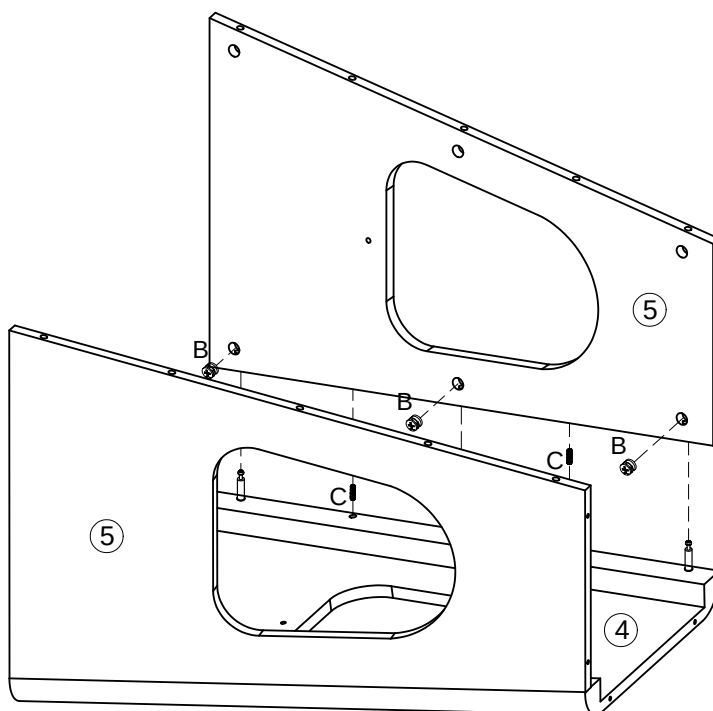



Step 1

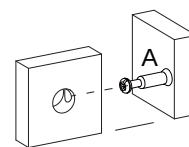


Step 2

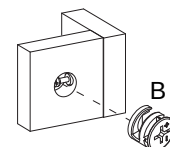


Step 3

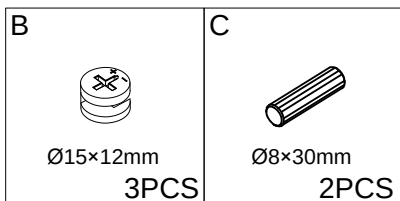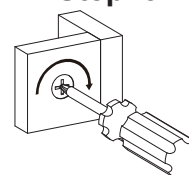


4

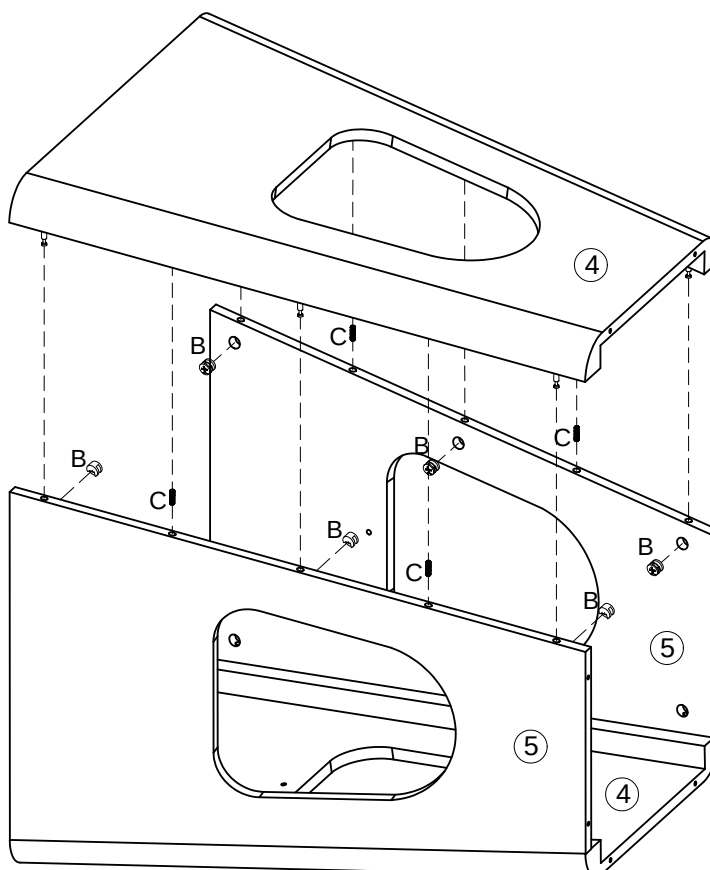



Step 1

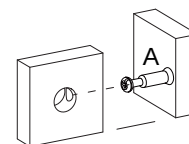



Step 2

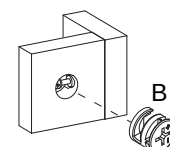

Step 3

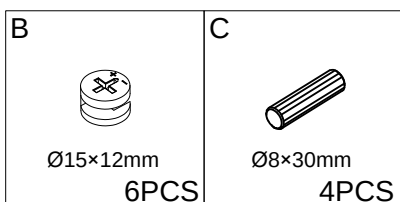
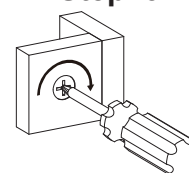


5

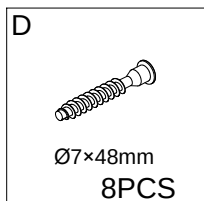
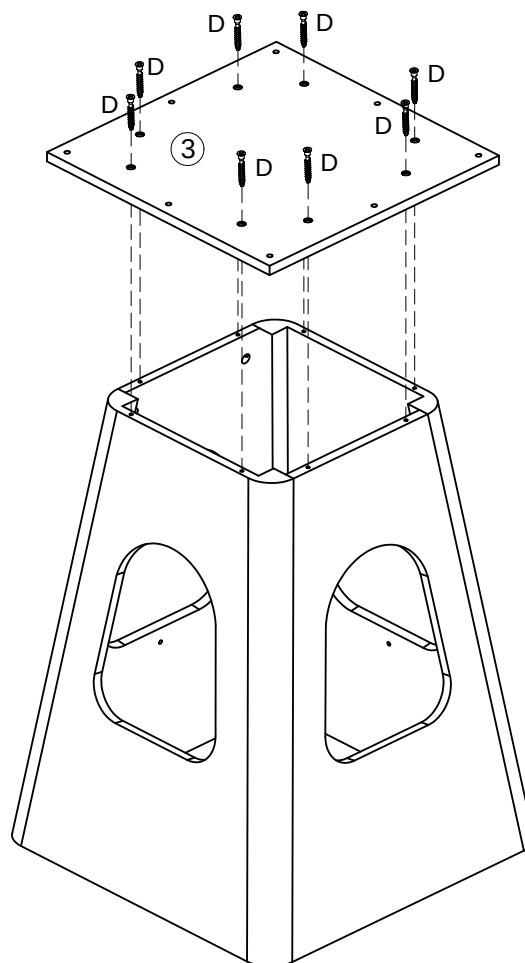


6

×2


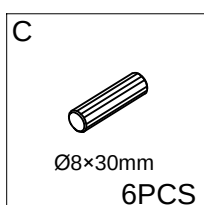
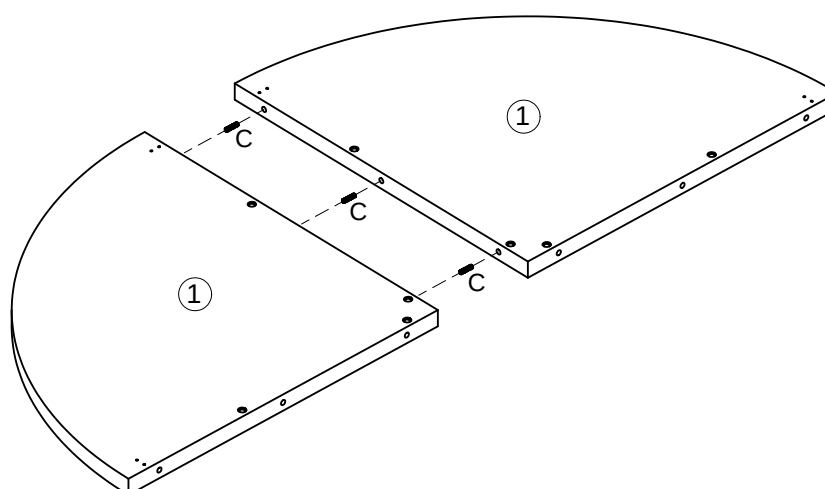


7

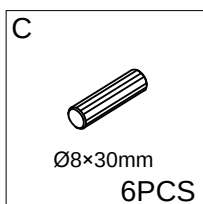
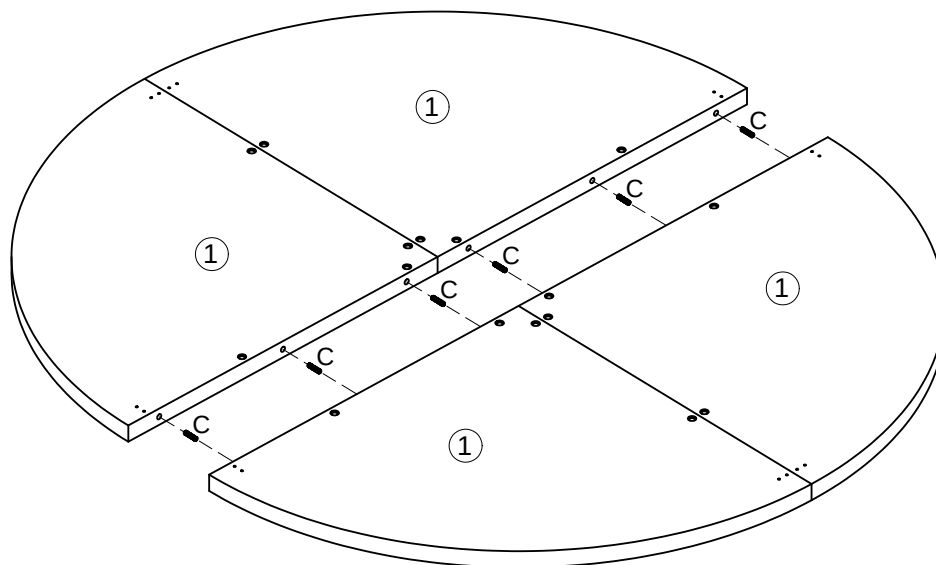


8


When connecting and locking each desktop panel, make sure the panels are tightly aligned with minimal gaps. Loose connections or over obvious gaps may affect the overall appearance of the finished desktop. Proper alignment is essential for a clean, seamless look.

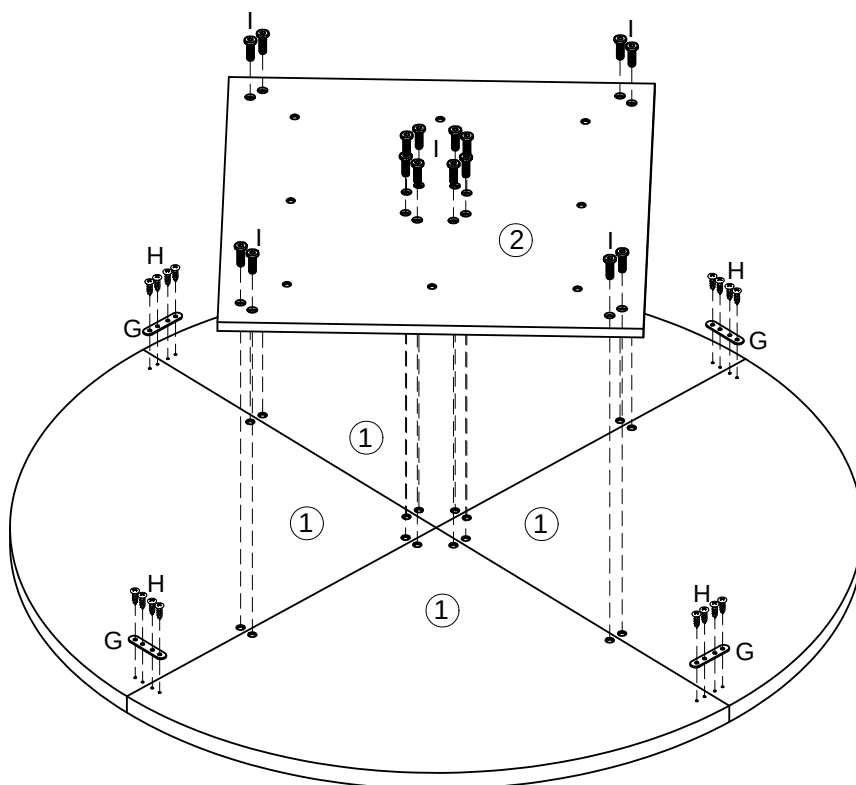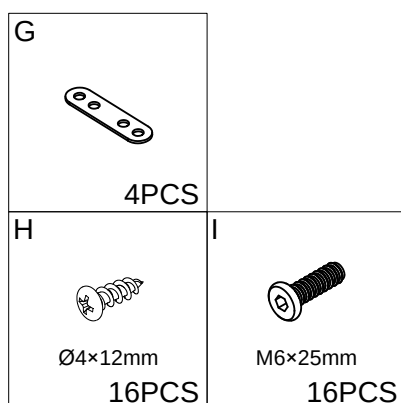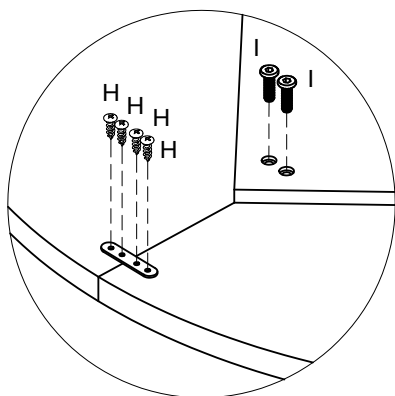



9

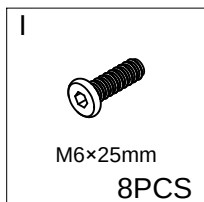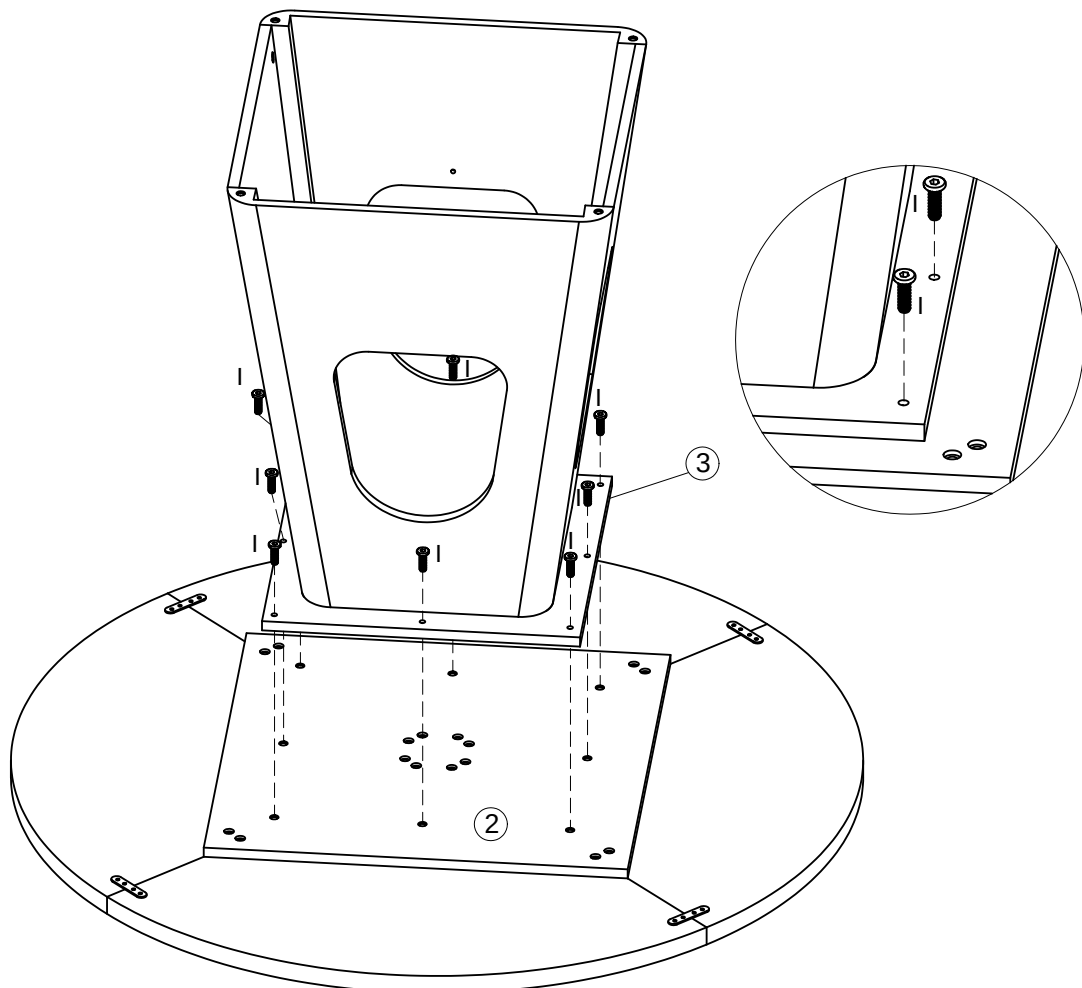

10

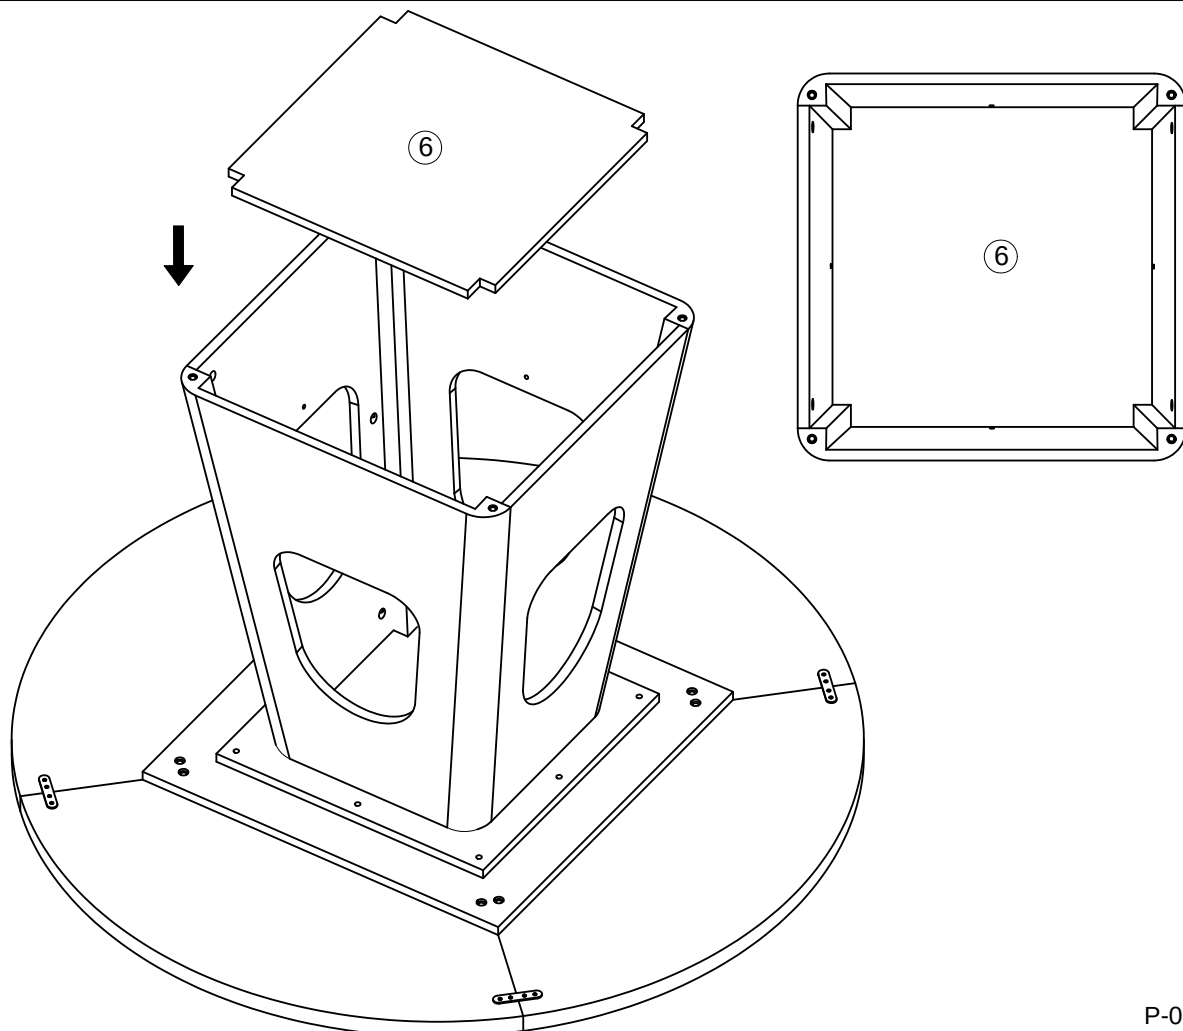

11

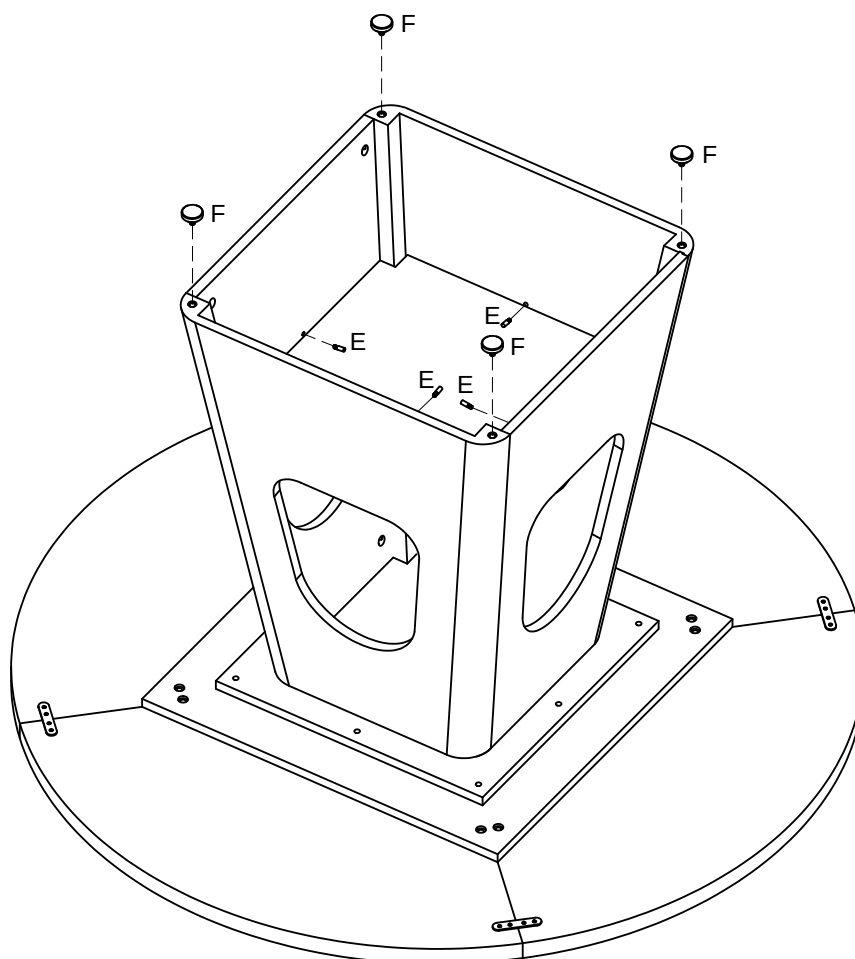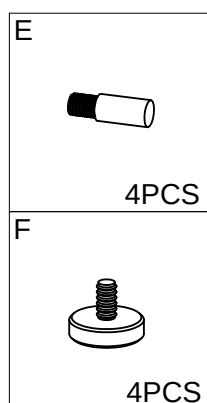

12

