


### 3. Chair to Base Assembly

Set chair assembly and place a  $5/16"$  washer on a  $2-1/2"$  machine bolt then insert through bottom holes in armrest supports. Add a  $5/16"$  washer to bolt before pushing bolt through remaining hole in glider brace and adding a  $5/16"$  locking nut.

Repeat process for the other 3 holes in the armrest assemblies.

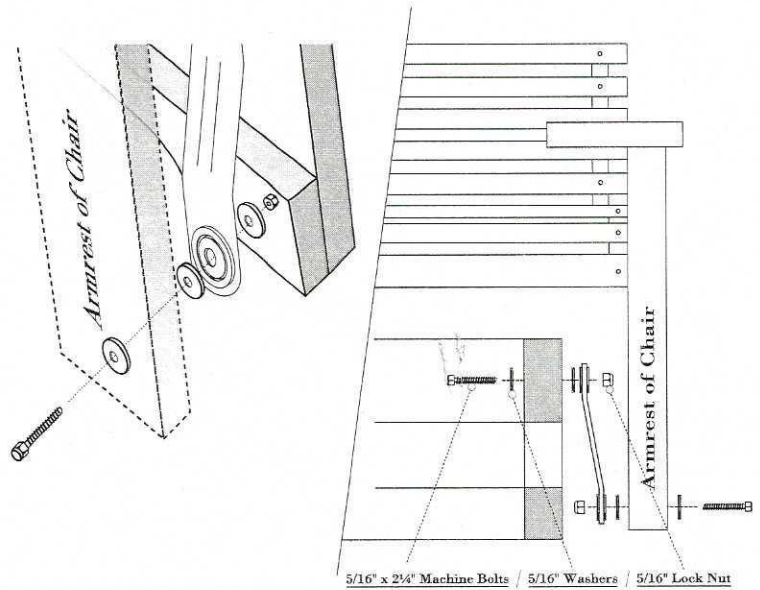

### Assembly Overview

