


Manual Retractable Awning Assembly Manual

SKU: AWN-8X6 / AWN-10X8

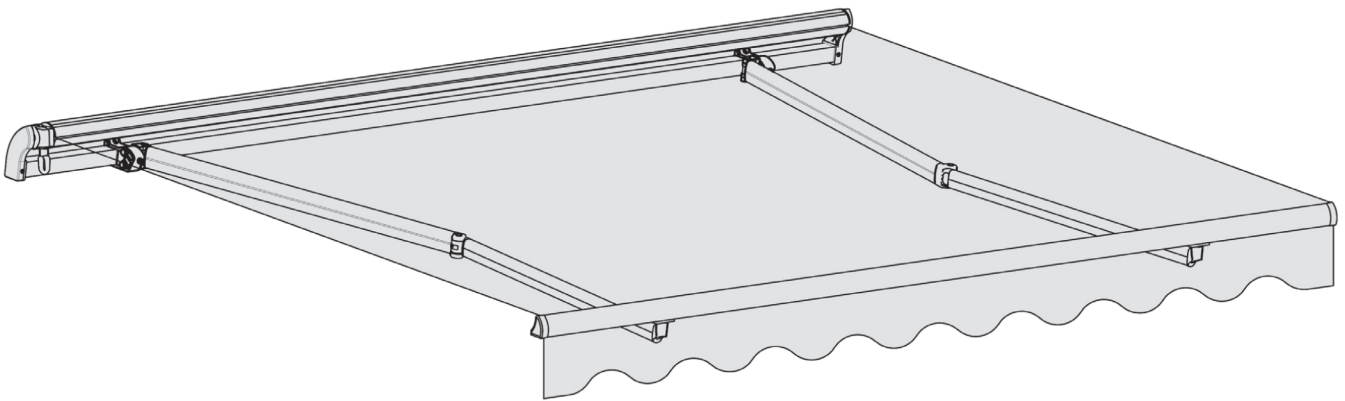

Thank you for purchasing our Retractable Awning! We hope you will find joy in our product for many years to come.

Please read, understand, and follow this user manual before assembling and using the awning. Save this manual for future reference. It's the responsibility of the user for potential risks of injuries due to inappropriate use not obeying safety instructions in this manual.

We recommend installing this awning by two people. If you feel that this process is too difficult to do on your own, we advise that you seek assistance from a local building or home improvement contractor.

For any query, missing parts or damage, please contact us with your order number at **aftersale2020@outlook.com**, we will offer you an ideal resolution within 24 hours.

We can also offer you the assembly video if you want.

ASSEMBLY INSTRUCTIONS

WARNING

Improper installation and operation of your awning can result in severe personal injury as well as product failure not covered by warranty. Please follow all instructions carefully or contact technical support for assistance.

Before you proceed, please read the following safety precautions:



DO NOT remove the safety wrap that secures the awning arms until instructed to do so. The awning arms will spring open and can cause serious injury if handled inappropriately. DO NOT stand facing front of the awning when cutting off binds between arms. Hold tightly and stretch slowly until completely open.



Proper location and fastening of the wall brackets is critical. Please follow instructions in the manual. Failure to securely fasten all brackets could result in the collapse of the awning and cause personal injury or death.



Keep children away from assembly area.

Safe Installation and Operation








1. Never install it in high and windy places, as the sunshade may drop and hurt someone.
2. Don't use it in places that have vibrations or impulsions.
3. Don't use it in places with high temperature such as walls near furnaces.
4. Don't put heavy things on the frame as it may fall down and cause damage.
5. Please close the awning in storm conditions, such as excessive windy and rain.
6. Never use it for other purposes other than suggested.
7. Be careful with your fingers during installation.
8. Two adults are needed to move and install the awning as the item is big and heavy.
9. Please use all the screws and nuts correctly during installation as it is very dangerous if you leave it loose.




CATALOGUE

Parts List	1
Assembly	3
Preparing Your Work Place	3
Connecting Roller Tubes	4
Connecting Front Bars	4
Connecting Torsion Bars	5
Fabric Assembly	7
Roller Support Assembly	9
Wall Mounting	11
Measuring the Mount Site	13
Drilling the Bolt Holes	14
Preparing for Mounting	14
Mounting the Wall Brackets	15
Mounting the Awning	16
Optional Installation	16
Common Mistakes	17


Parts List

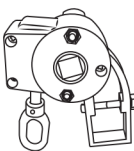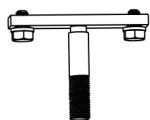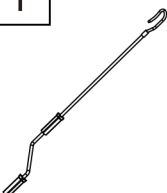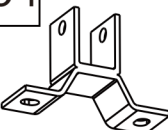A-1		A-2					
							
Roller(Left) 1PC		Roller(Right) 1PC					
B-1		B-2					
							
Torsion bar (Left) with L-1 (Left arm) 1PC		Torsion bar (Right) with L-2 (Right arm) 1PC					
C-1		C-2					
							
Front bar (Left) 1PC		Front bar (Right) 1PC					
D	D-3	Q	M	N	O		
							
Right Roller support 1PC	Gear Box & Left Roller support 1PC	Arm-bar Link 2PCS	Fabric 1PC	Fabric liner 3PCS	Valance 1PC		
P	N-1	N-2	Q-2	A-A-1	A-A-2	T	
							
Bolt for cover & fabric Liner 2PCS	Left Plastic Cover of Front Bar 1PC	Right Plastic Cover of Front Bar 1PC	Plastic washer 2PCS	M4x10mm 10PCS	M5x10mm 2PCS	Hand Crank 1PC	
G-1	G-2	G-3	G-4	Q-1	E-1	E-2	E-3
							
Wall bracket 2PCS	M10x60 Hex Screw 2PCS	M10x80 Wood Screw 4PCS	M10x100 Expansion bolt 4PCS	Screw nut 2PCS	Threaded square nut 2PCS	plastic bolt sleeve 2PCS	M8x55 Bolt 2PCS

Please prepare below tools before assembly. (Not included)

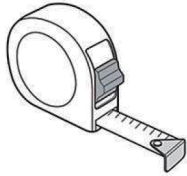

Measuring tape

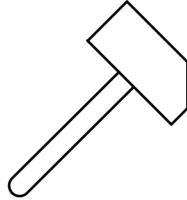

Non-metallic mallet



**Wrench
(wrenches of M17 and M14)**



Cross screwdriver




**Power drill with
14 mm drilling bit**



Chalk line leveler




8 mm wrench

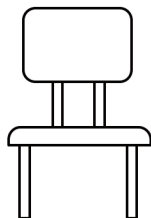

Two ladders or very sturdy chairs

Parts Exploded View

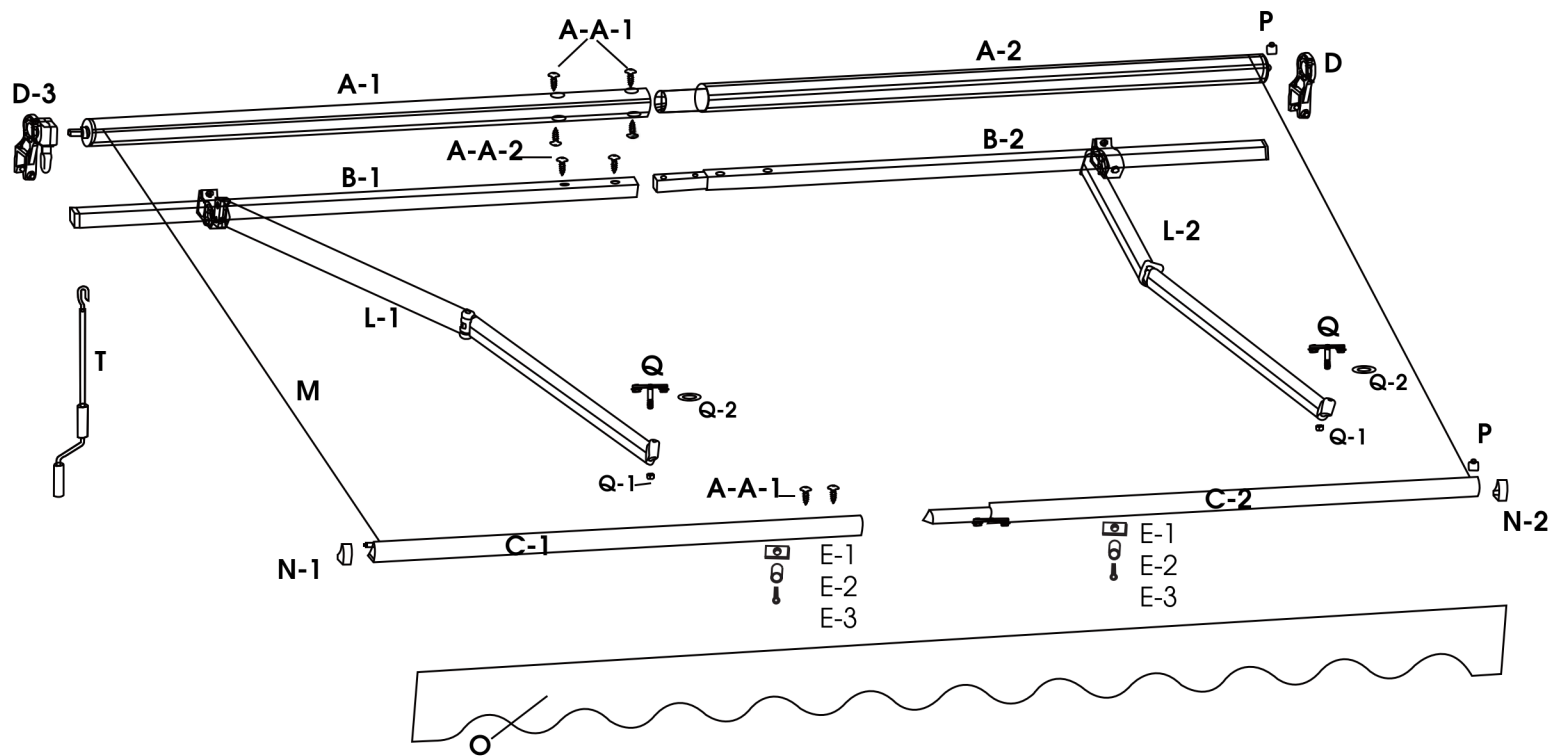

ASSEMBLY

STEP 1

Preparing Your Work Space

1. Before you start, it is better to list all the necessary tools to make the installation process smoother. For a list of necessary tools, please refer to the Tool Requirements section.

WARNING !


Do not remove the safety wrapping that holds the awning arms in place. Premature removal of the protective tape may cause the curved arm to pop open and cause serious injury.

2. Open the awning box and unwrap each piece carefully to avoid damaging the product.
3. Lay out each piece of the awning to ensure that all pieces are present. Refer to the parts diagram for detailed information regarding parts.
4. Open the small, inner box that contains the small parts and lay them out as well.


STEP2

Connecting Roller Tubes

1. Gather the two long, round silver tubes (**A-1**, **A-2**) and lay them in a line.



2. Insert the roller tube (**A-2**) into the interior end of the roller tube (**A-1**). If insertion is difficult, use a mallet to tap it gently into place. Once inserted, screw (**A-A-1**) it into place.

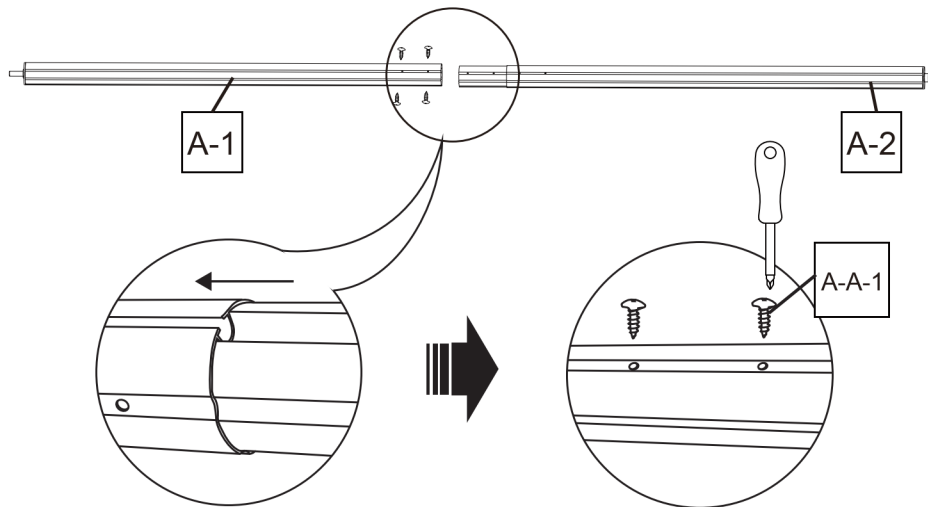


3. At this time, you will have one full-length roller, with both roller tubes connected and screwed securely into place.




STEP3

Connecting Front Bars


1. Gather the two long, wedge-shaped front bars (**C-1**, **C-2**) and lay them in a line.

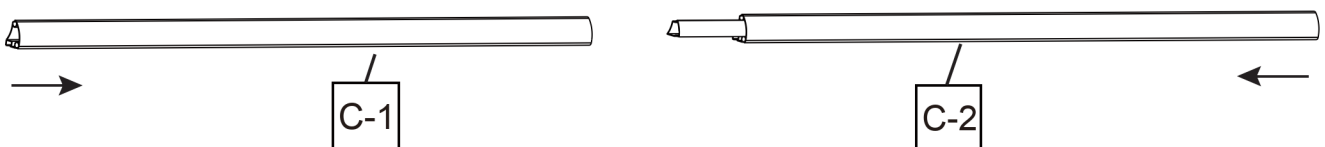

2. Insert the front piece (**C-2**) into the interior end of the front bar (**C-1**). If insertion is difficult, use a mallet to tap it into place. Once inserted, screw (**A-A-1**) it into place and tighten the screw nut on the bar.

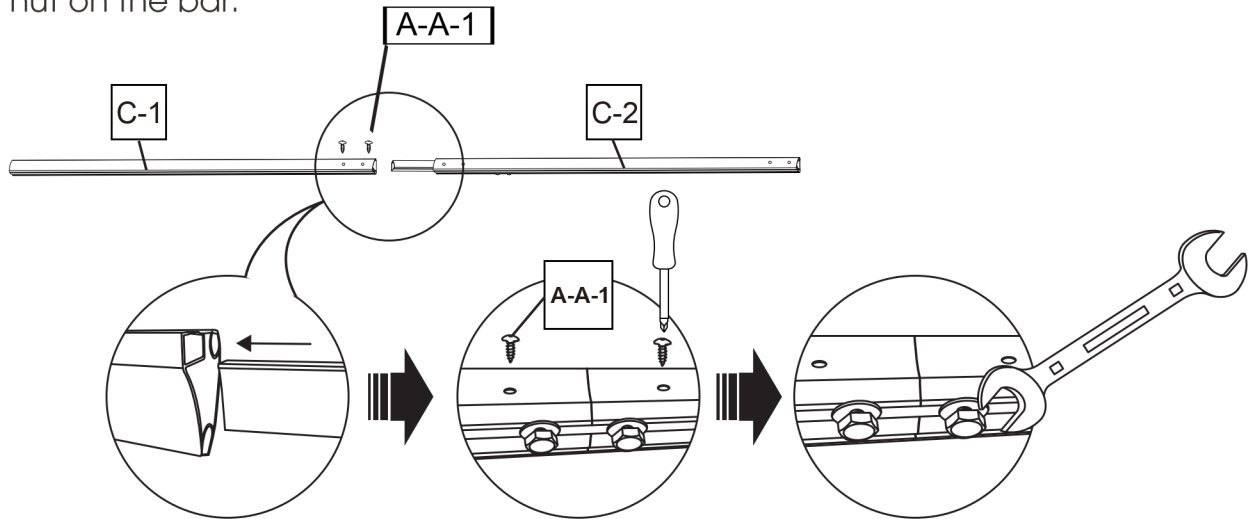

3. At this time, you will have one full-length front bar, with both pieces connected and screwed securely into place.

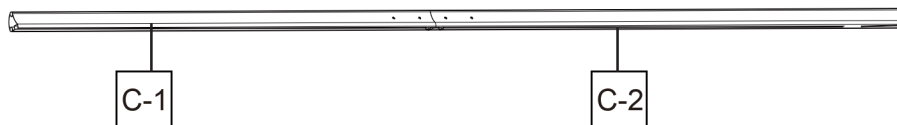


STEP4


Connecting Torsion Bars

WARNING


DO NOT remove the safety wrap that holds the arms down!

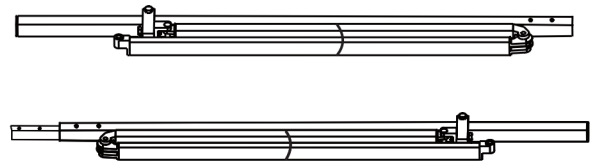


1. Gather the two white torsion bars with pre-assembled arms (**B-1,B-2**), and lay them in a line.

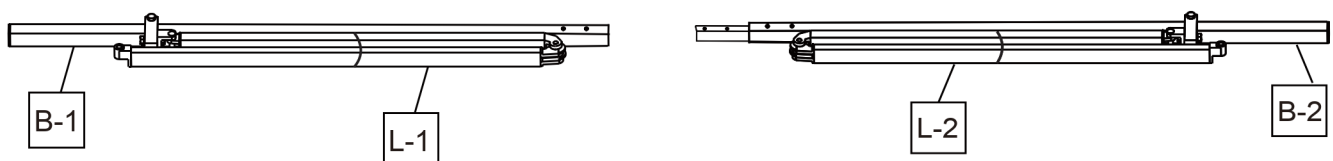

2. Connect the torsion bar (**B-1**) to the other side of the bar (**B-2**). Once inserted, screw (**A-A-2**) it into place.

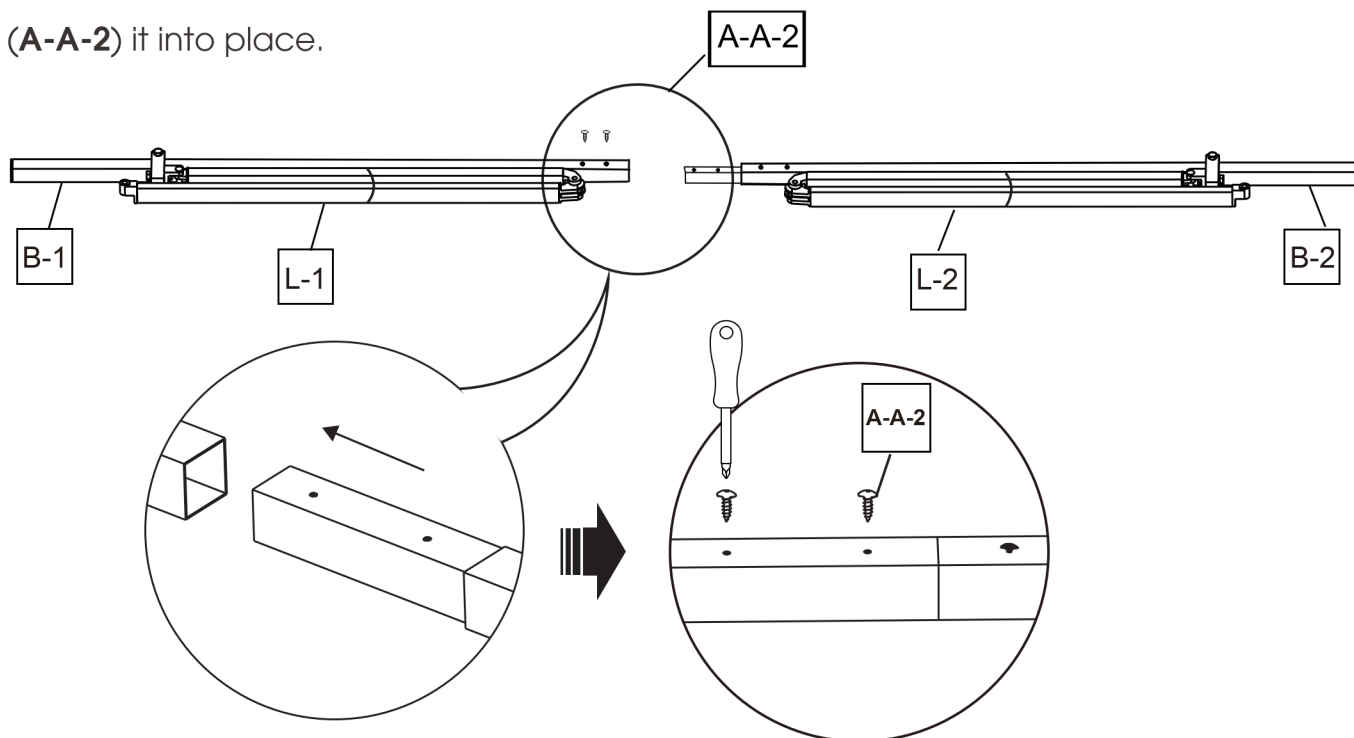


3. Hammer Left roller support with gear box (**D-3**) into the Left side of the torsion bar with gentle strength. Tighten the screw nuts with screwdriver.

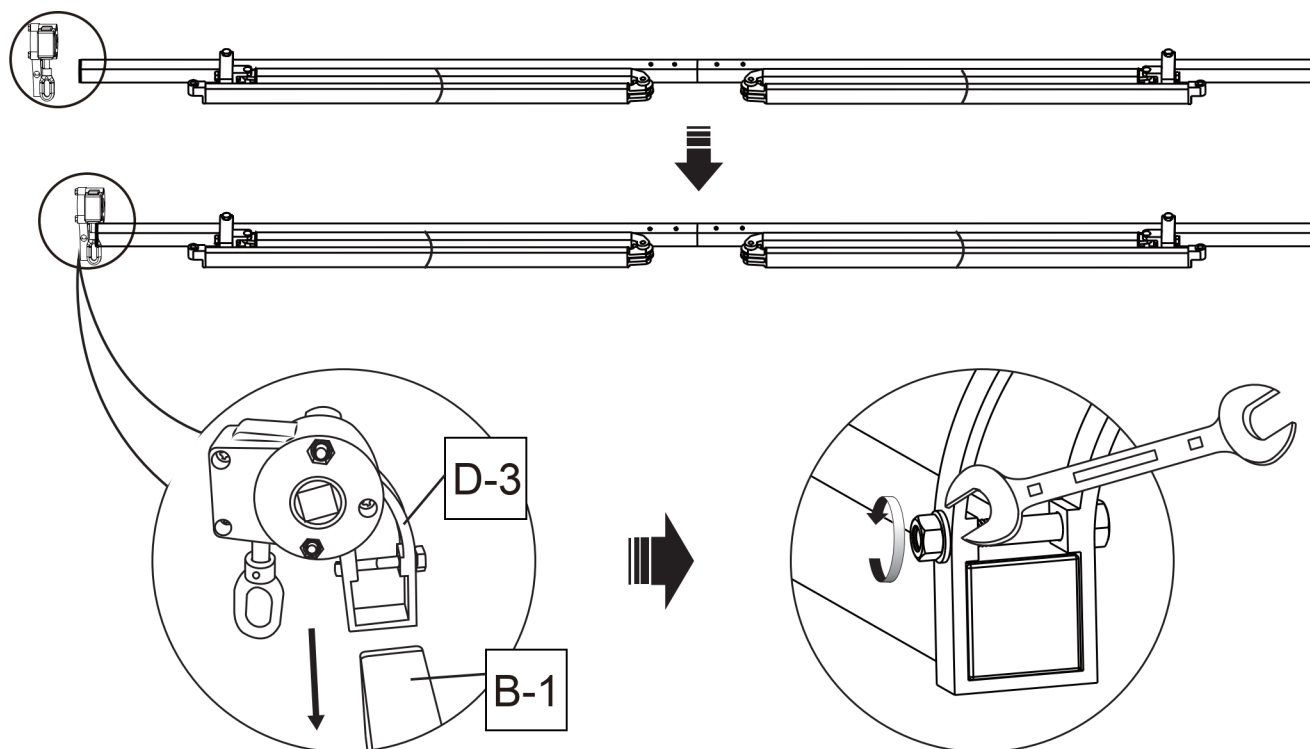

STEP5

Fabric Assembly




1. Open the fabric box carefully to ensure that the product is not damaged.
2. Unfold both pieces of awning fabric. You should have one large fabric piece (**M**) and a valance with scalloped edge (**O**). You should also have three fabric liner cords (**N**).
3. Thread the fabric liners through both ends of the large awning fabric (**M**) as well as the valance (**O**). This can be a slow process and it is recommended that a minimum of two people be threaded together.

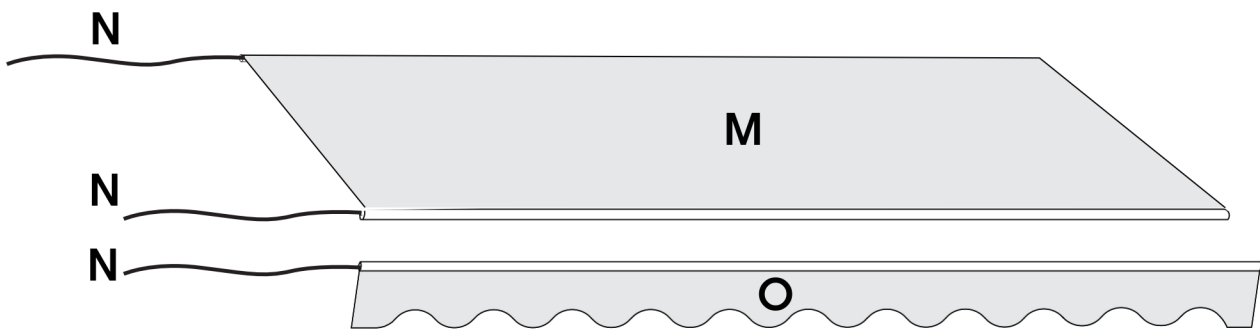


4. Once the liners are threaded through the fabric, find the roller tube **A(A-1&A-2)**. Thread the fabric (**M**) and its liner through the slot in the roller tube **A(A-1&A-2)** all the way to the end.

Note: the fabric has a front and a back side. The back side has a hem, and should face downwards.



5. Then thread the other end of the awning fabric (**M**) through the slot in the front bar **C(C-1&C-2)** (wedge-shaped piece).

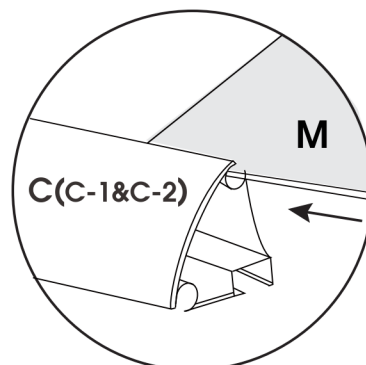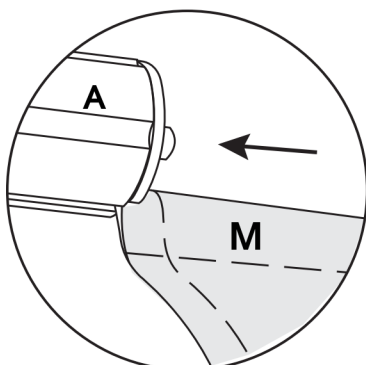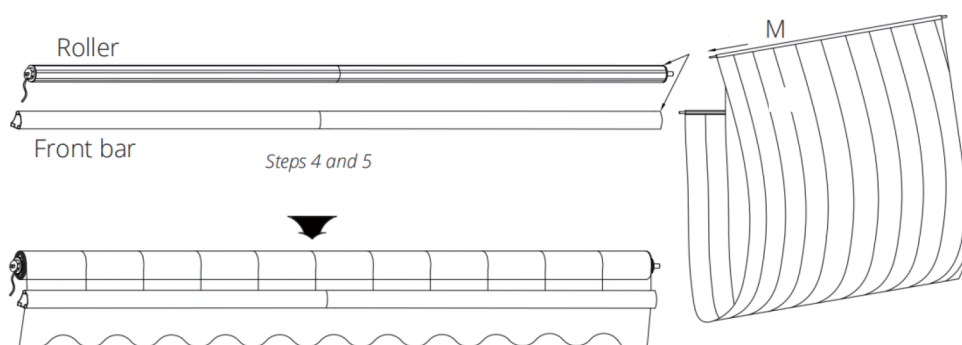


6. Roll the awning fabric counterclockwise around the roller tube as tightly and evenly as possible.
7. Thread the valance (O) through the other slot in the front bar all the way to the end.

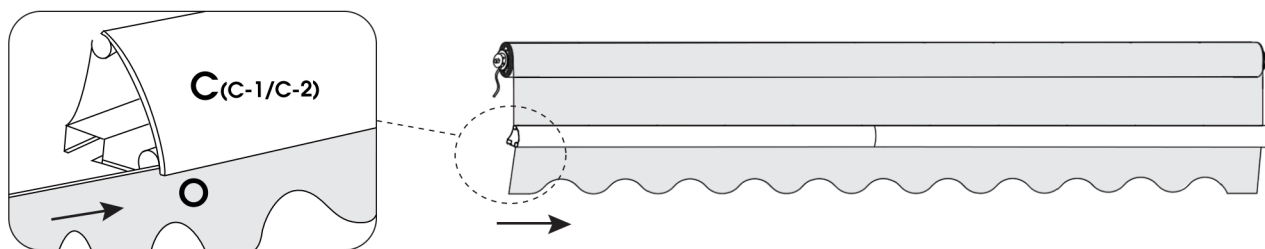




8. Please make sure that the E-1 had been slid in C-1 before the arm-bar link (Q) into the groove of the front bar on **left side**. Then fix plastic cover (N-1) on the end (C-1).

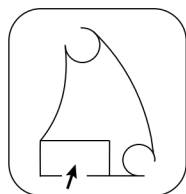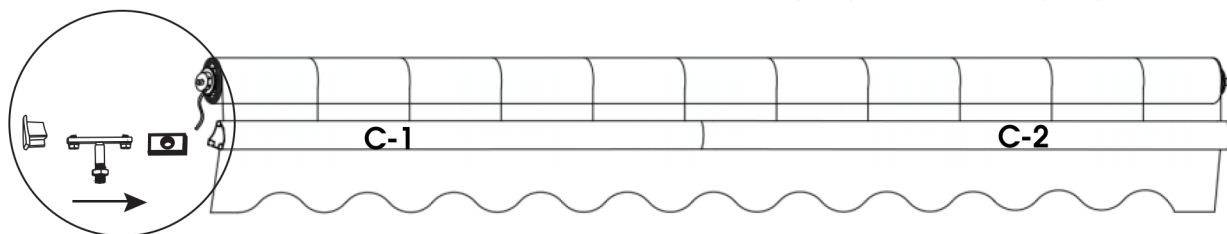

Note: Please note that the curved side of the front bar should face outwards.

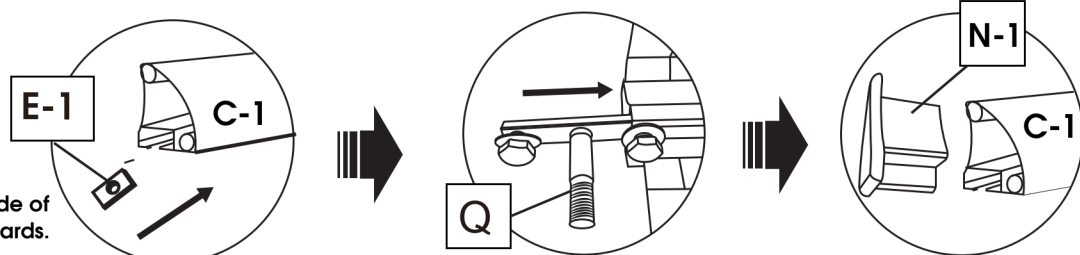

9. Please make sure that the E-1 had been slid in C-2 before another arm-bar link (Q) into the groove of the front bar on the **right side**. Insert the bolt for fabric (P), fix the bar end with a plastic cover (N-2), then tighten the screw on the bolt (P).

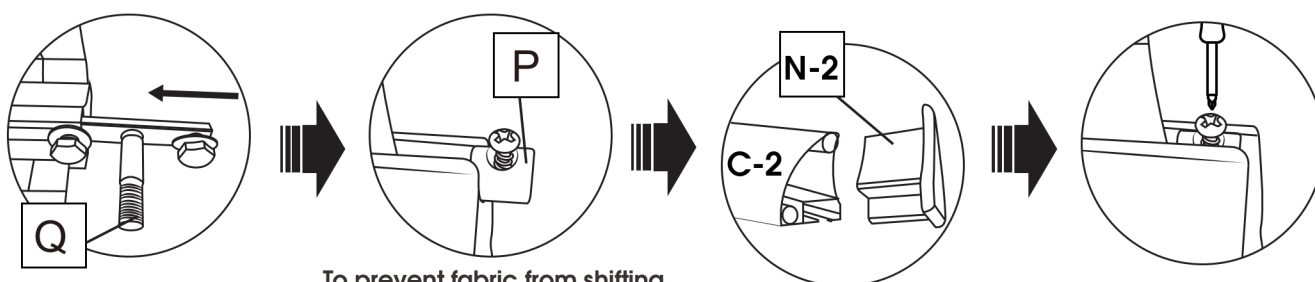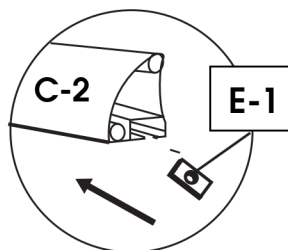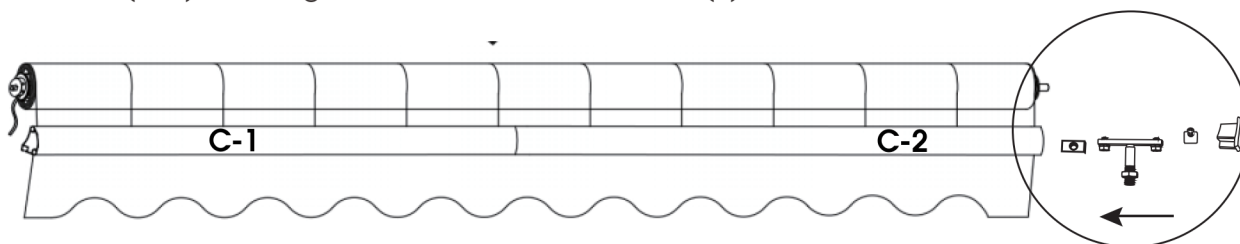

To prevent fabric from shifting

STEP6

Roller Support Assembly


WARNING

Be sure that the safety wraps holding the two front arms are secured on the torsion bar. Failure to check this could result in injury.


1. Fix the bolt (P) on the hole of the roller bar (A-2) on the right side. Screw it tightly to prevent fabric from shifting.




2. Find the inner square shaft on the roller tube. Insert this into the square hole on the gear box (D-3) on the torsion bar.

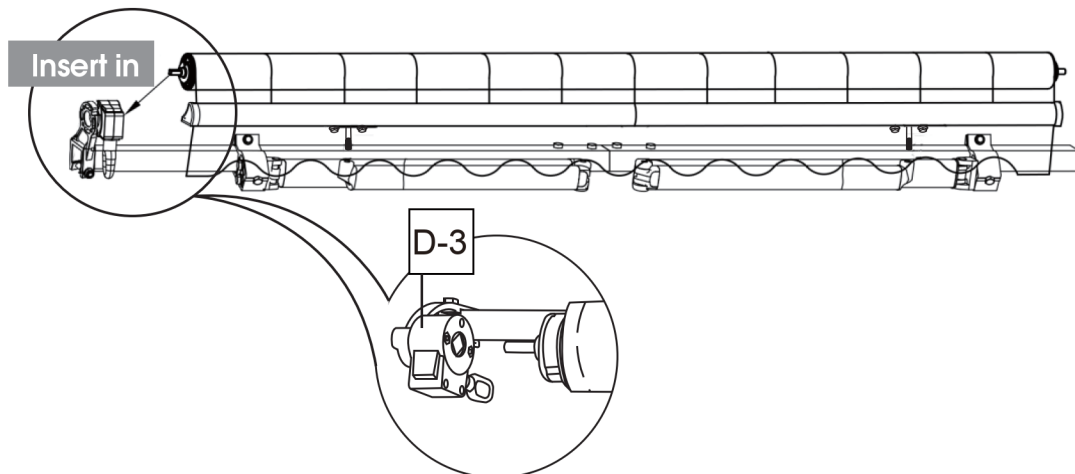


3. Using a mallet, knock the right roller support (D) into the right end on the roller tube (A-2). Use a wrench to tighten the screw nuts on the roller support.

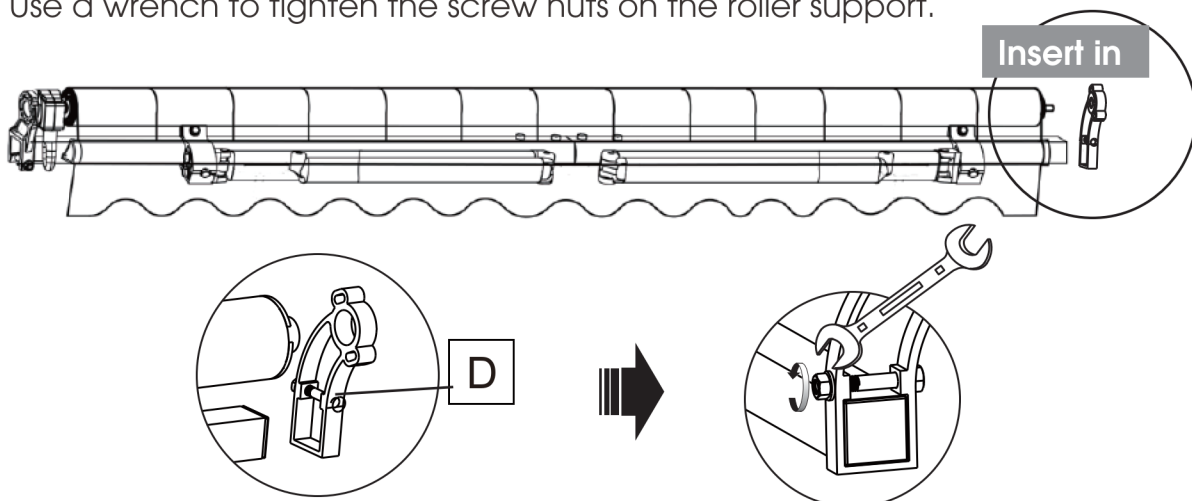


4. Screw two plastic washers (**Q-2**) into the Arm Bar Link (**Q**). Move the Arm Bar Link (**Q**) on both sides until it is connected to the hole on the arm. Tighten the screw nuts on the Arm Bar Link (**Q**) and then fix the links and arms with another two screws nuts (**Q-1**).

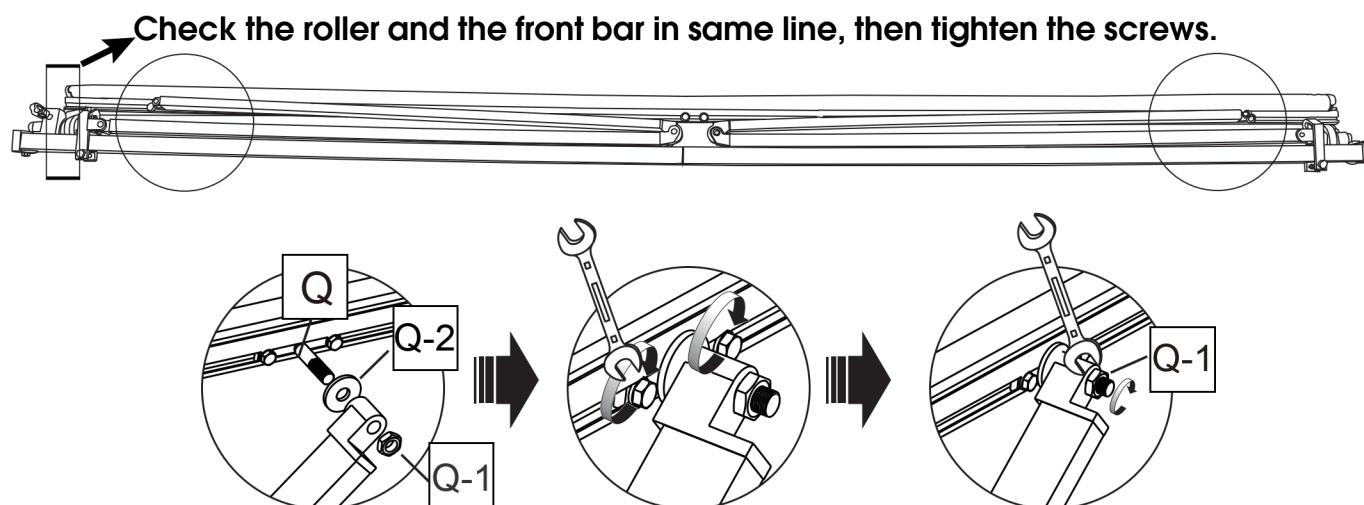

5. Check the distance from end of arm to **E-1** is 9.9 inches (25cm), then screw **E-2** and **E-3** into **E-1**, use 8mm Allen wrench.

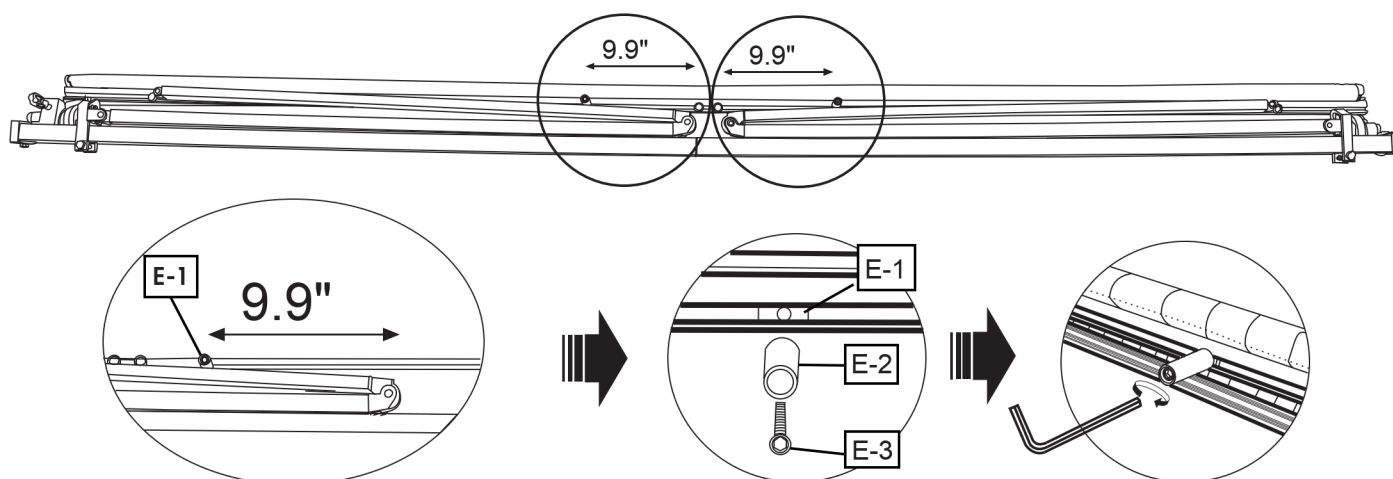

6. After above steps, it is safe to cut the safety sleeves that hold the arms and torsion bars. Awning assembly is complete now!

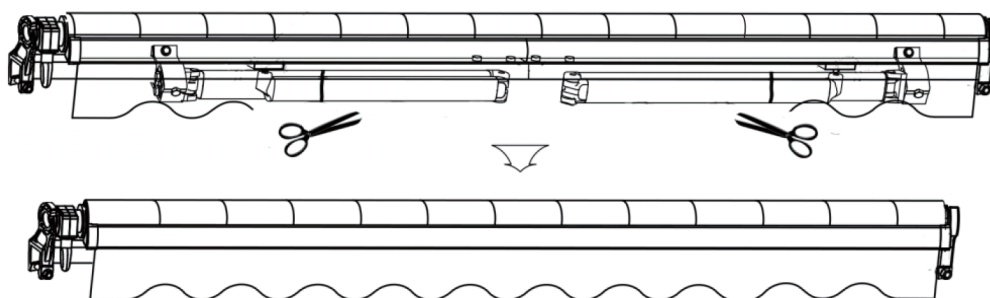



If you find that the fabric wrapping is not uniform, or the two arms can not be opened at the same time, check the stability of the two arms.

Solution: Adjust the Arm Bar Link "Q", if necessary, turn the Torsion Bar outward.

Specification

Product name	Material and surface treatment	Applicable wall type	Recommended installation height	Applicable weather
Retractable awning (Please see details on the package)	Materials: Steel tube, aluminum alloy, plastic parts, polyester fabric. Service treatment: Tubes: spray paint and oxidation Cloth surface: PU, UV, waterproof	Reinforced concrete walls, brick walls, and wooden walls	2.5m-4m 8ft-13ft	The products are used to shield sunshine. Applicable when wind is under level 5.






Wall Mounting

Notes about Wall Mounting

This awning can be secured to reinforced concrete, brick and wood wall. However this awning kit only supplies screws suitable for mounting to brick and reinforced concrete walls.

If you wish to secure your awning to wood, please use wood screw (**G-3**) of adequate length and of an appropriate diameter to secure the awning to wood beams. The bolt size depends on the size of wood; these can be purchased at a hardware store. We recommend a professional installer for the safest and most secure installation.

Never attempt to secure the wall brackets to loose wall stones or any surfaces that are not absolutely firm!

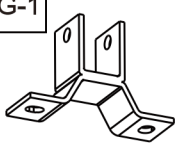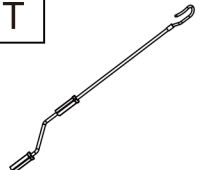G-1  Wall bracket 2PCS	G-2  Hex screw 2PCS	G-3  Wood screw 4PCS	G-4  Expansion bolt 4PCS	T  Hand crank 1PC
---	--	---	--	--

CAUTION


Proper location of the brackets is the most important aspect of the awning installation. It is critical that you fasten all the mounting brackets to studs, joists, headers or other major structural components.

WARNING

Failure to securely fasten all the brackets to the wall could result in the collapse of the awning and cause personal injury or death.

Mounting Height

It is important to take the awning's drop area into consideration before bolting your wall mounts. If you would like to mount above a patio door, for example, please leave at least 8 inches above the door frame and be sure that the awning does not interfere with opening and closing the door. The drop angle can only be changed minimally, so take this into consideration when deciding where to place your awning.

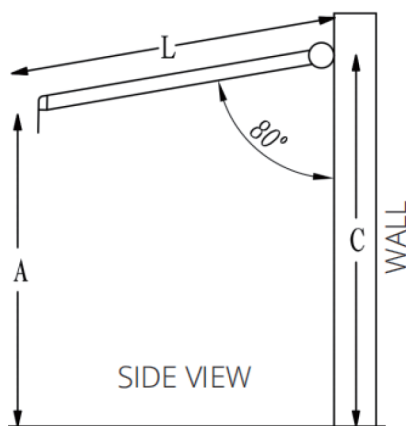

We recommend that the awning surface make an angle of about 80 degrees to the wall when open.

Recommended installation height: 8-13 feet.

The ideal drop angle (when fully extended) has already been set in the factory, so you may not have to change the pitch / angle.

CALCULATIONS:

You can use the following formula to calculate the appropriate angle.

$$C = A + 0.17 * L$$

A = The desired height of the front bar

L = The length of the arm stretched out

C = The height of the wall brackets


STEP1

Measuring the Mount Site

1. Measure the length of your awning along the wall where you intend to install it. This line will be the highest point of your awning and align with the top of the wall bracket. Use a leveler to make a chalk line across the distance.
2. Important: Double check that the line is level all the way across.
3. Be sure that the line is centered over the patio door, window, or other feature, if applicable.
4. Now that you have a straight, centered line, measure the middle point and mark it. This is where the middle wall bracket will be installed.
5. Take a wall bracket and place the top of it, completely level, under the line, as shown in the diagram below. With chalk or a pencil, mark the position of all the wall brackets and their bolt holes. Please note the distance between each wall bracket should be the same.

Awning < 10.8 Feet	Requires only 2 wall brackets total: one for each end of the torsion bars.
Awning = 10.8-14 Feet	Requires 3 wall brackets total: one for each end, and one in the middle.


The distance between eaves and wall bracket ≥ 3.9 inch (10cm)

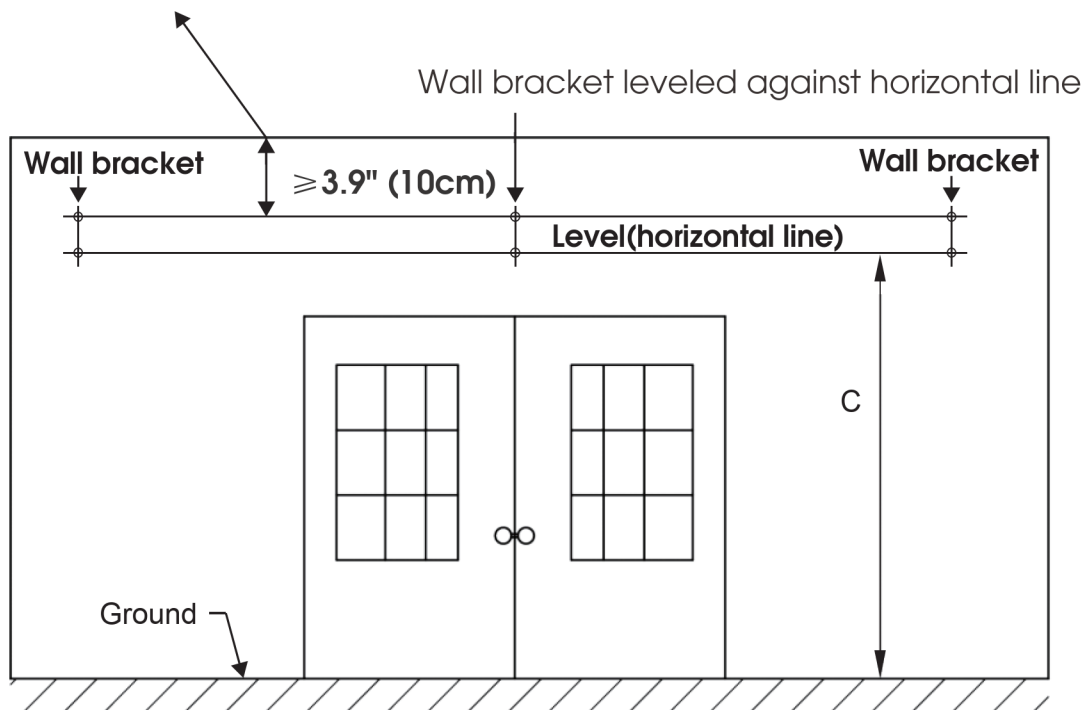

STEP2

Drilling the Bolt Holes

1. Now that you have a straight level line across the wall with the locations of the wall brackets and their bolt holes marked, you can drill holes to mount the brackets.

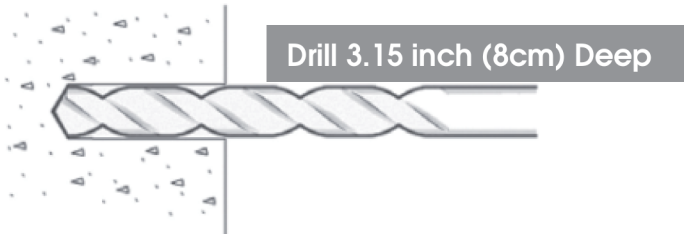

2. Using a 0.55" (14mm) masonry drill bit, drill the first bolt hole approximately 3.15 inch (8 cm) deep, as shown in the diagram. This must be drilled through solid brick or concrete to offer the necessary support for the awning.

3. Drill the remaining holes exactly as in step 2.

WARNING

All bolt holes must be aligned vertically and horizontally to ensure that the awning hangs straight.
Double check alignment before drilling if you are not certain.

WARNING

The diameter and depth of your mounting holes must be the same size as the expansion bolts.

STEP3


Preparing for Mounting

1. Now that all of your holes are drilled, then insert the expansion bolts.
2. It may be necessary to drive the bolts in with a wooden (or other non-metallic) mallet.



If a mallet is necessary for installation, we recommend placing the nut on the screw (loosely) before hammering to avoid damaging the bolt threads.


3. Make sure that the bolts are firm in place, yet let them stick out of the wall approximately 1 inch or less—enough that the wall bracket can be installed onto them. Firmly tighten the bolts with a 0.75" (19 mm) hex key. It is best to use the hex key with a closed end rather than an open end to avoid damaging the nut, should it slip.

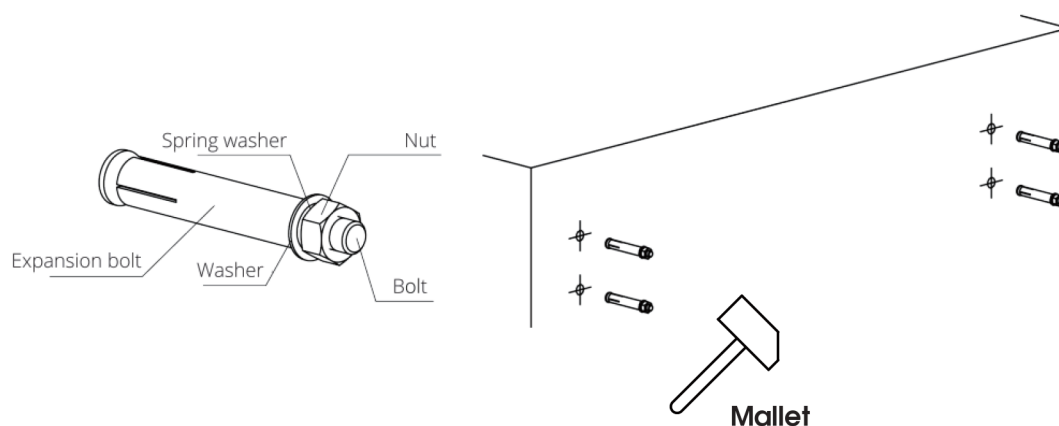

STEP4

Mounting the Wall Brackets

1. Now that the bolts are securely installed in the wall, remove the nuts that are loosely placed over the bolts.
2. Place a wall bracket onto one set of bolts. This should be an easy fit if the bolt holes are properly aligned.
3. Once the wall bracket is resting on the bolts, place a washer over the bolt. Then secure it with a nut, as shown in the diagram.

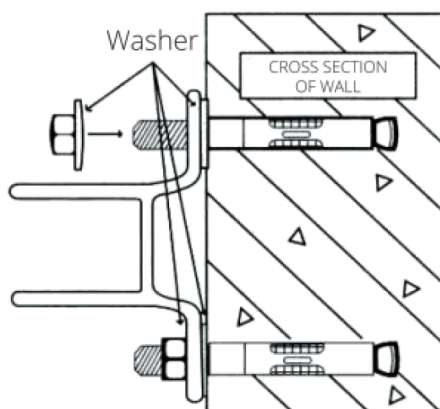


4. The brackets **MUST** sit firmly on the wall. If there is any movement, you must tighten it more.
5. Repeat this step for each of the wall brackets. Once you do this, all wall brackets will be securely installed in place.

STEP5

Mounting the Awning


1. Now that the wall brackets are secure and in place, it is time to install the awning onto the brackets.
2. At least two ladders or sturdy chairs are required to install the awning.
3. Put the torsion bars on the wall brackets and tighten them with the hex screws.
4. Finally, fasten all expansion bolts.
5. Using the hand crank or a motor (if applicable), fully open your awning. The front bar should be level.
6. Congratulations! Your awning is installed. If you are happy with the height of the front bar (awning pitch), sit back and enjoy! If not, please read on.

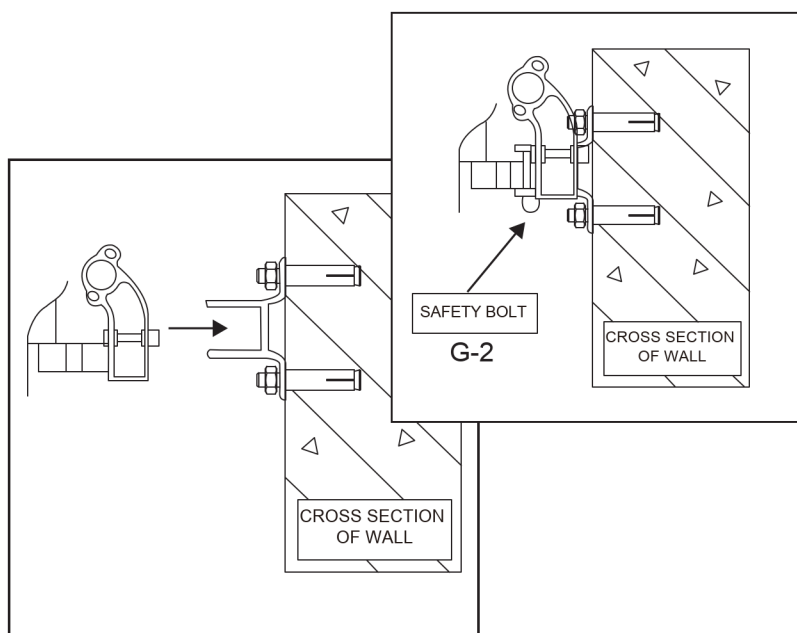

OPTIONAL INSTALLATION

Adjusting the Awning

Each awning comes with a pre-set pitch/angle that is considered ideal. However, if you need to make an adjustment, it can be done in just a few easy steps.

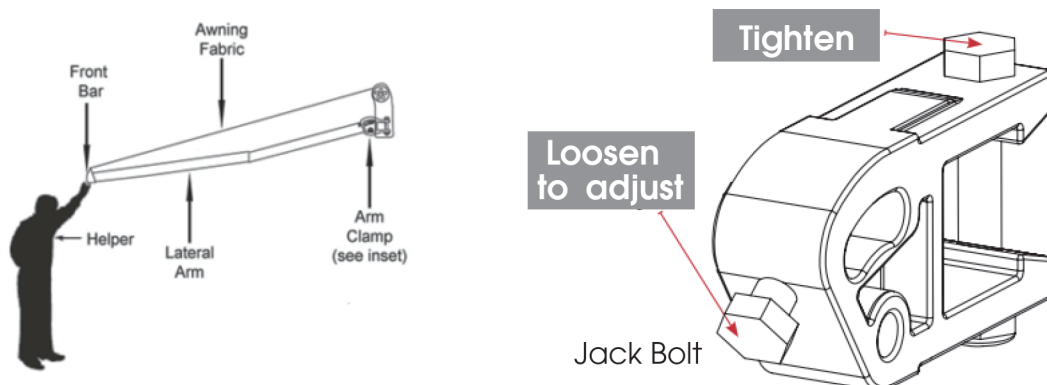


WARNING

Raising the front bar will reduce the pitch/angle of the fabric, thus increasing the risk of rain water pooling on the fabric. To prevent the awning from collapsing due to rain water weight, you must retract the awning when unattended. Failure to do so could result in a broken awning or personal injury.

Note: Be sure that the front bar is adjust to be completely even. Any misalignment will result in improper retraction.

COMMON MISTAKES

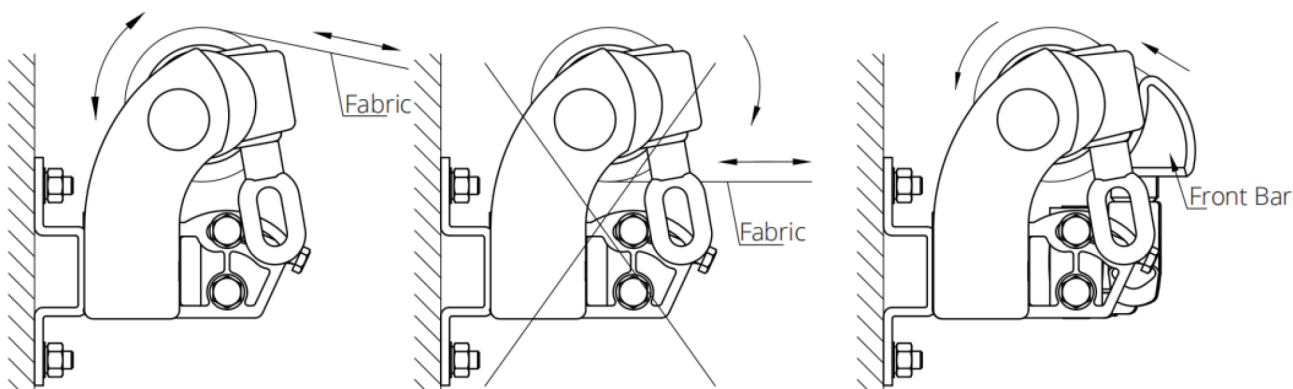

Correct operation

Wrong operation

WARNING

When the front bar touches the roller as shown in the figure, don't try to make them closer, otherwise the product may be damaged.