


ASSEMBLY INSTRUCTIONS


30" BATHROOM VANITY



N710P194129C

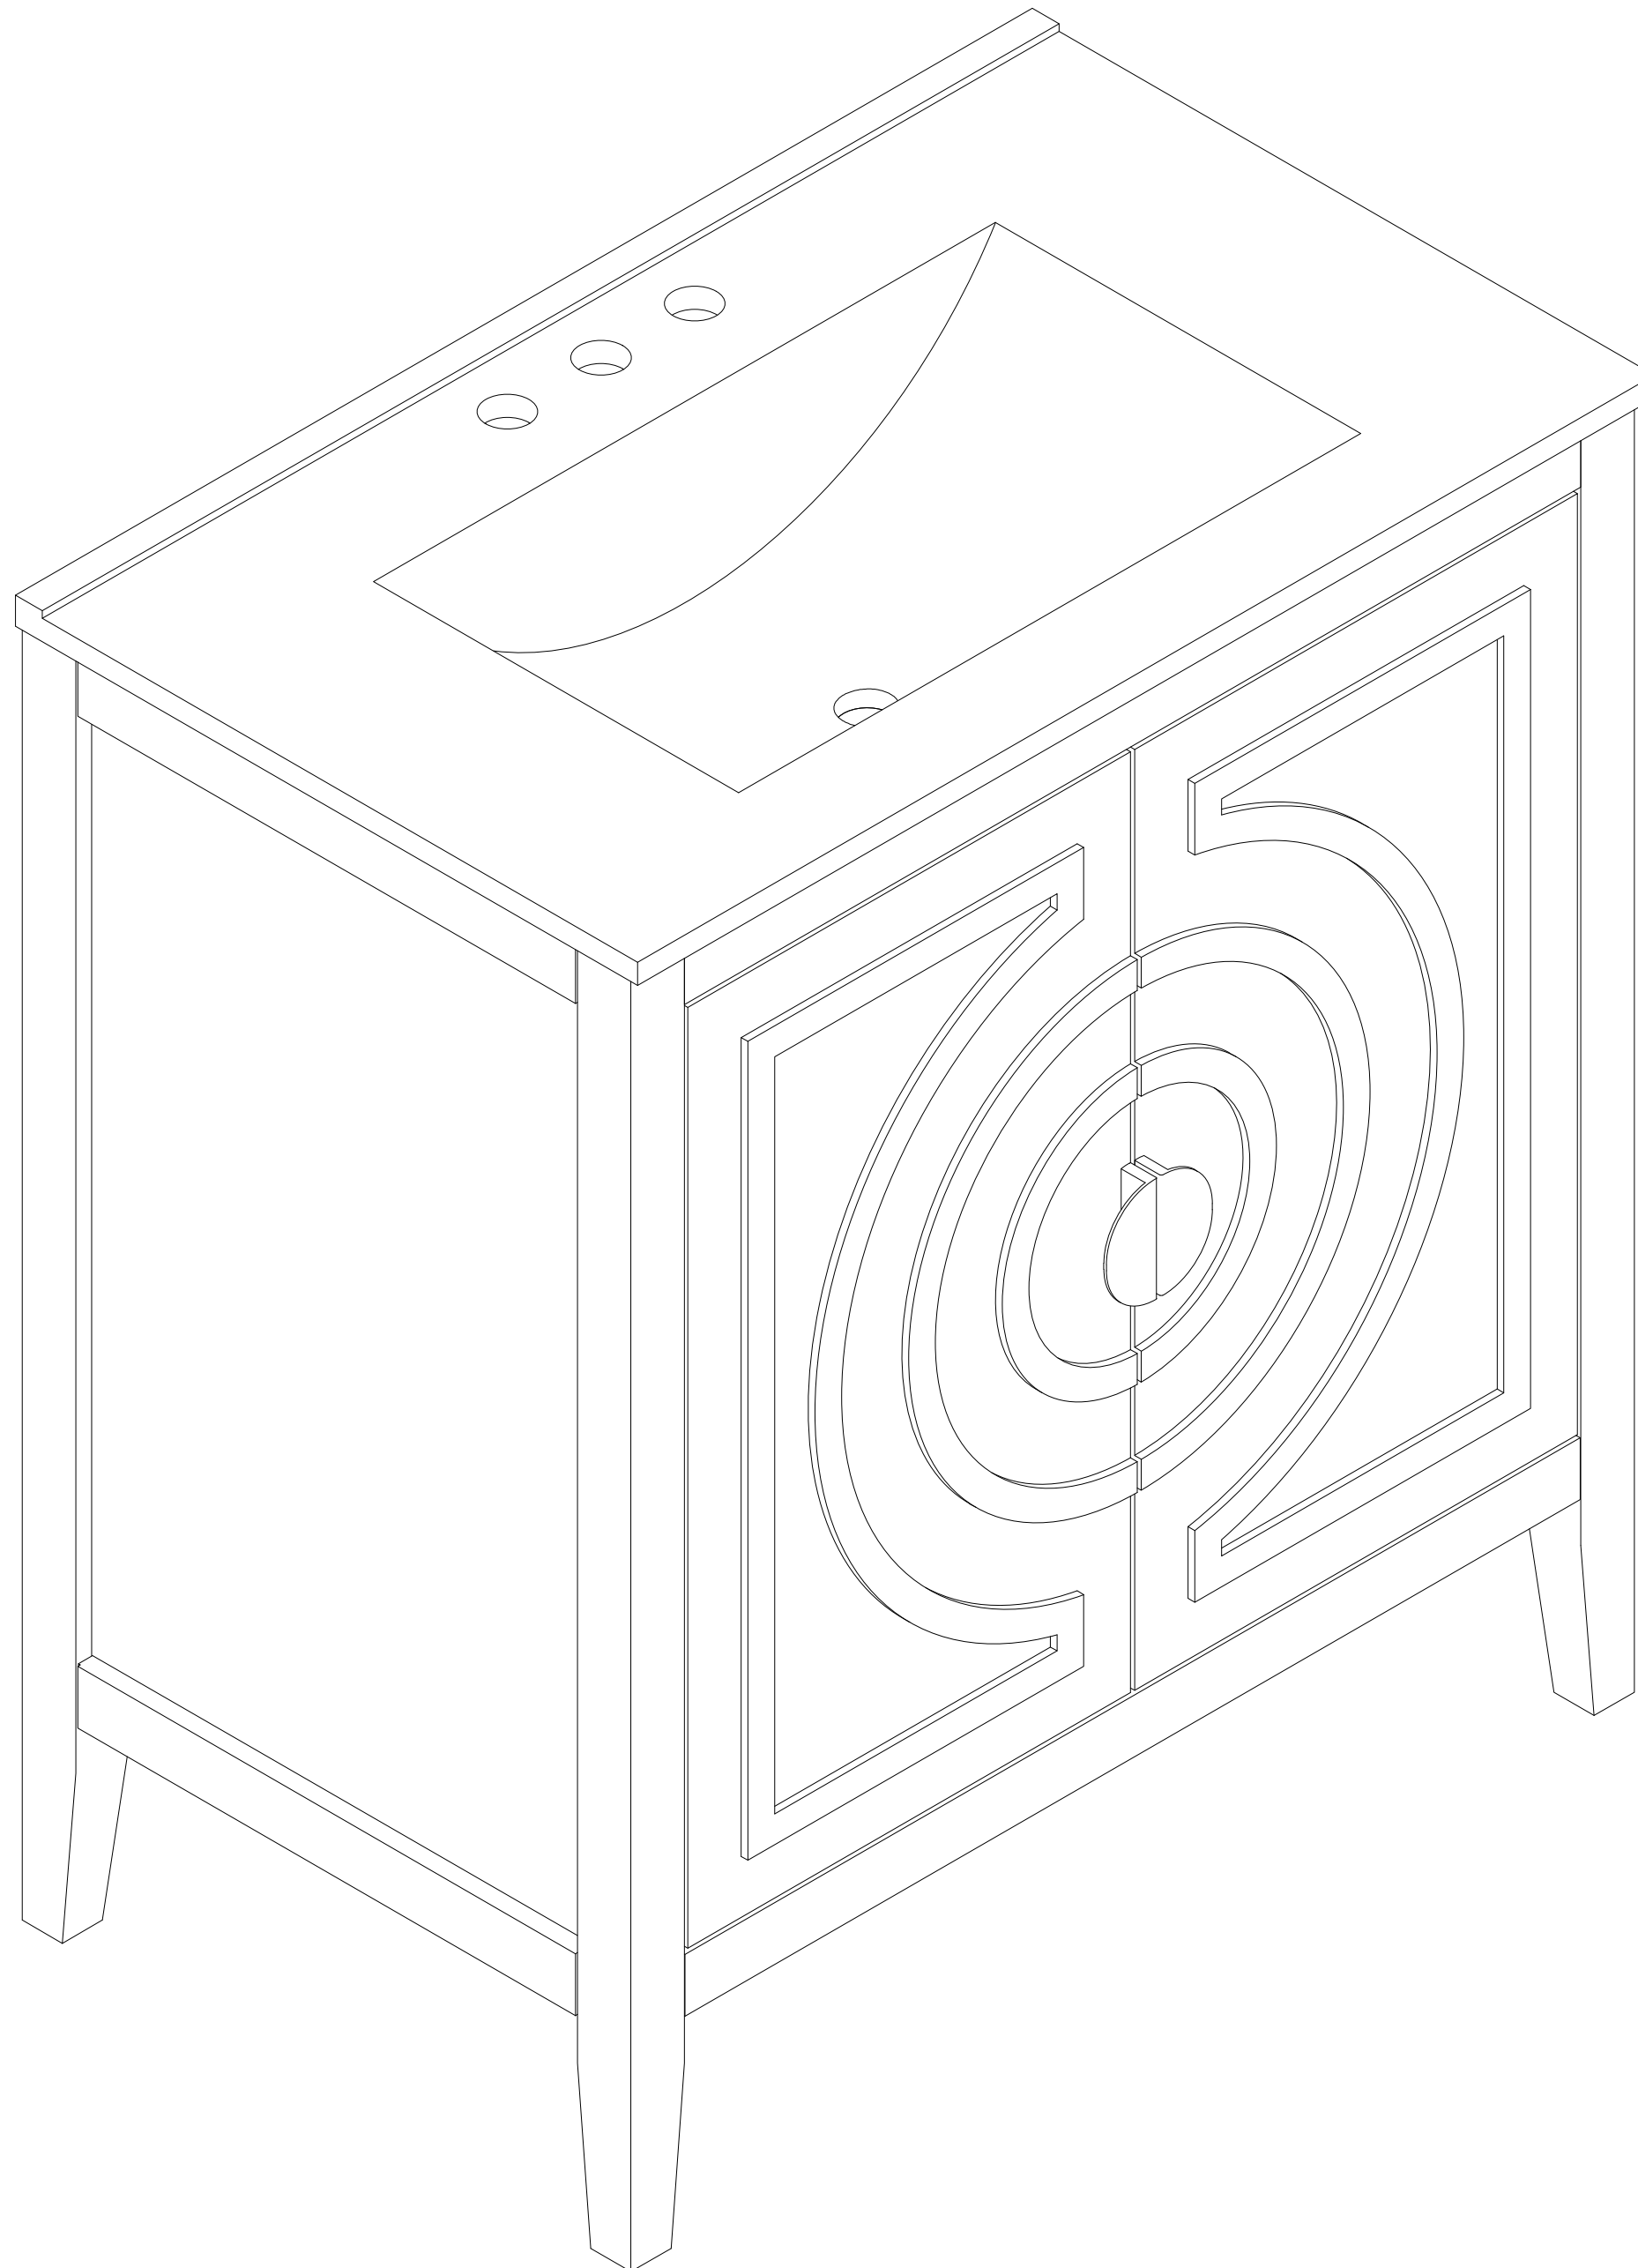


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

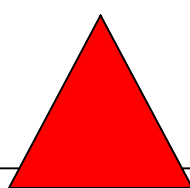
 * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
*Please assemble on a clean soft surface to avoid damage.

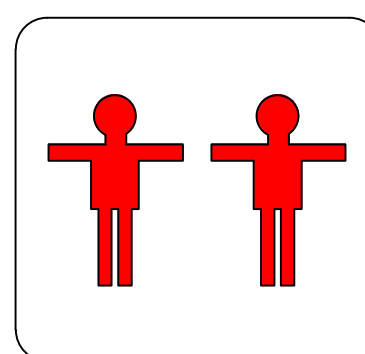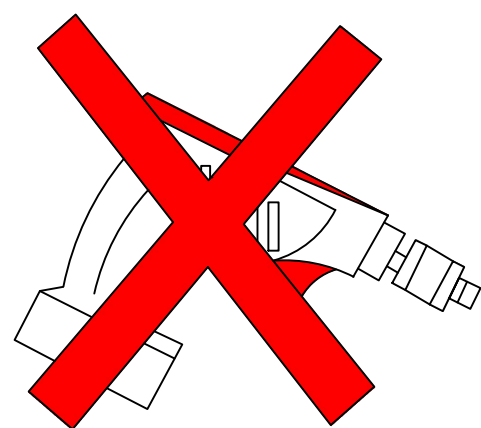

+

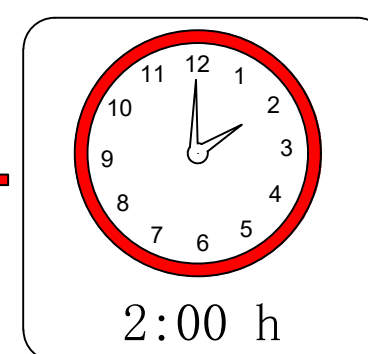

Tools Required

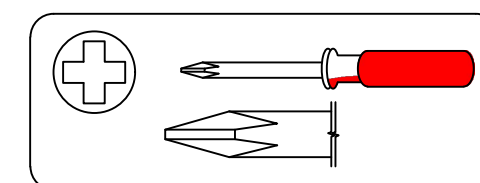

(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.
























- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions












	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

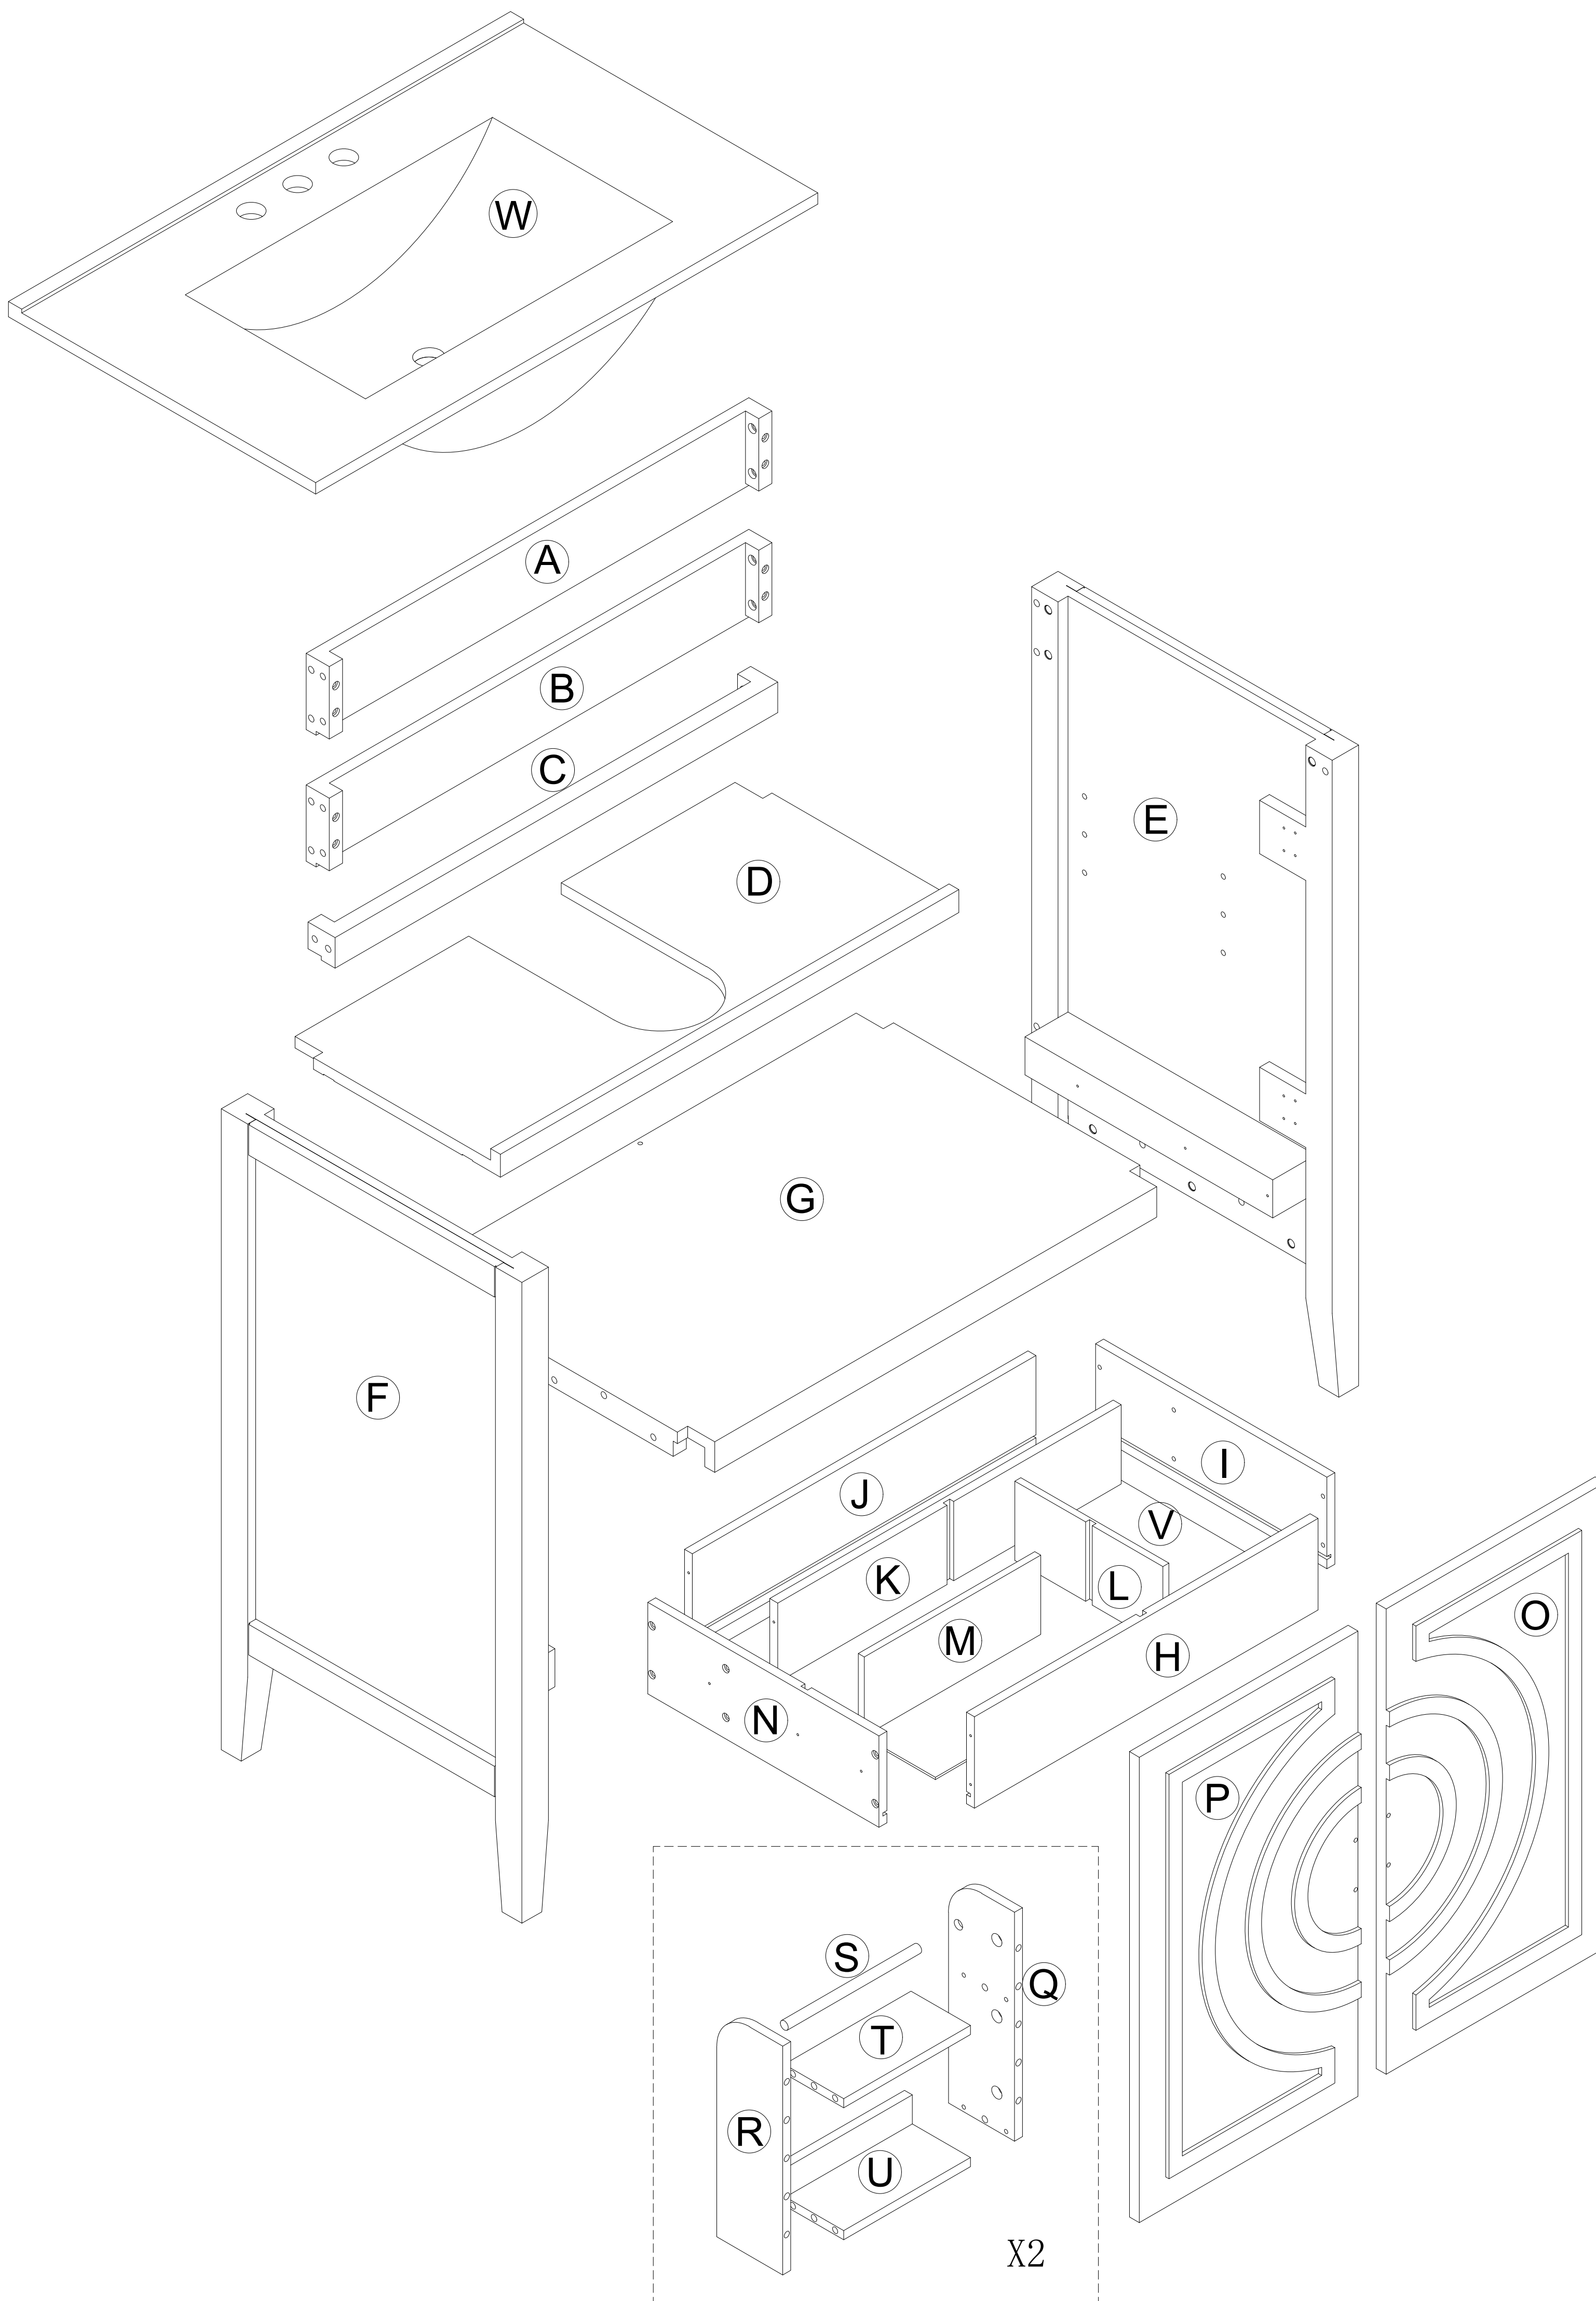

PRODUCT PARTS :

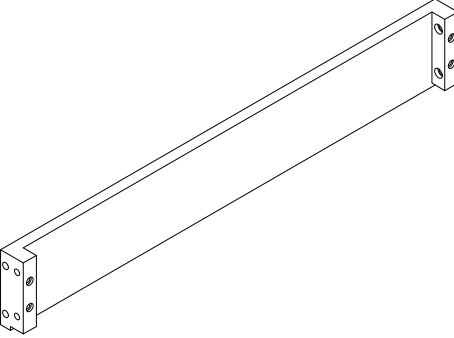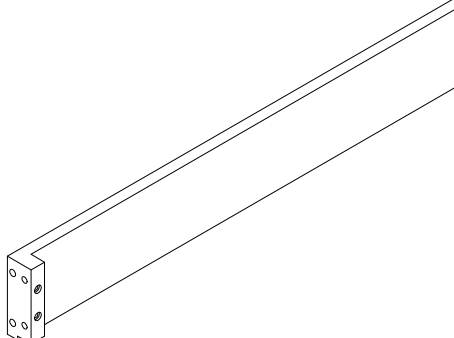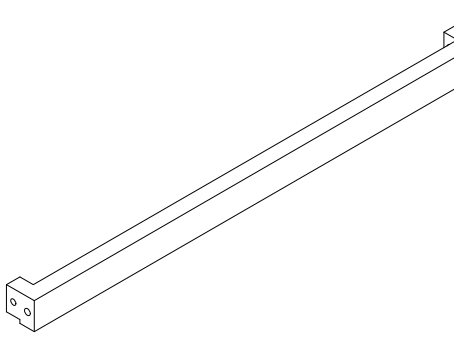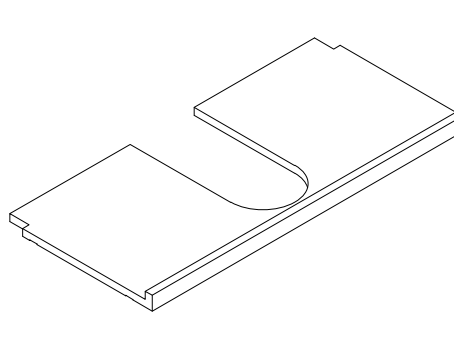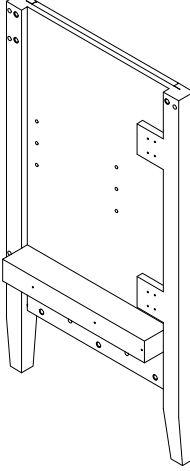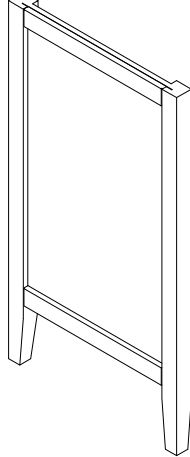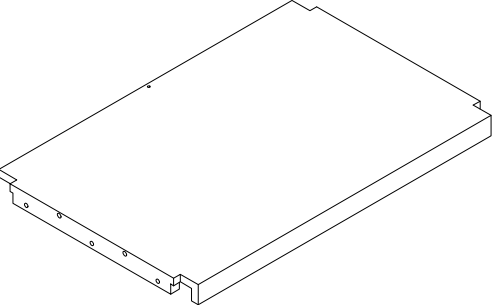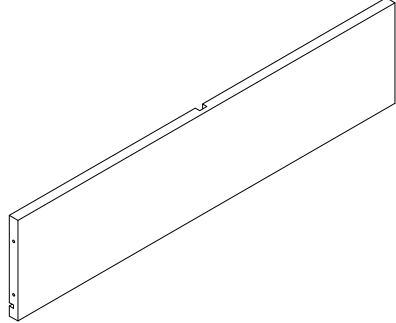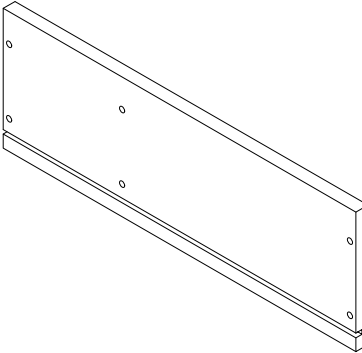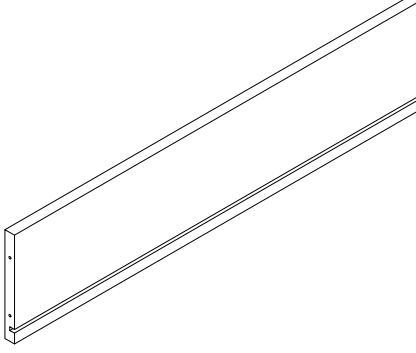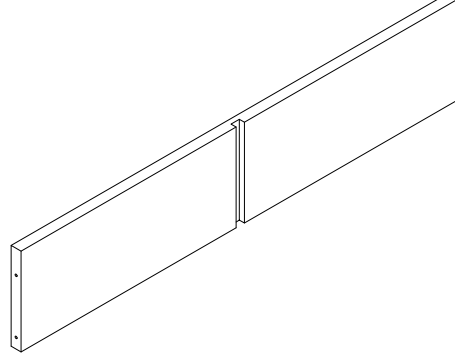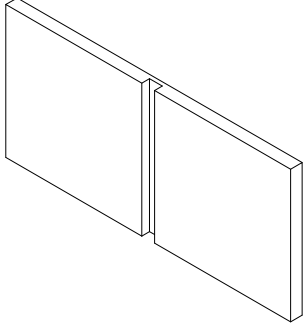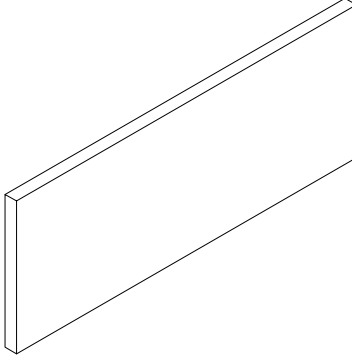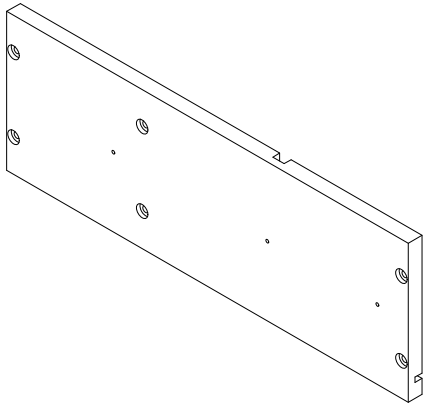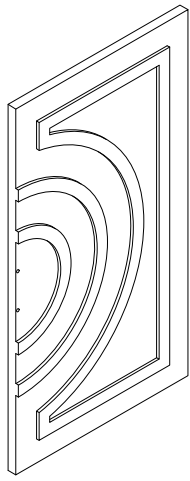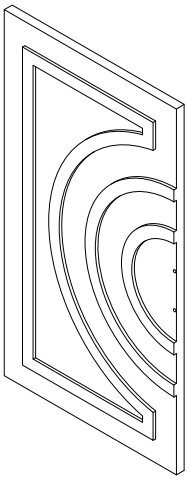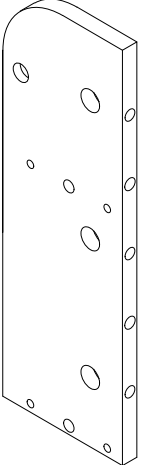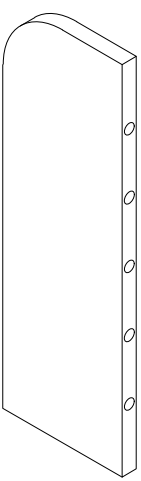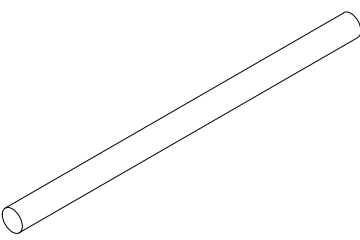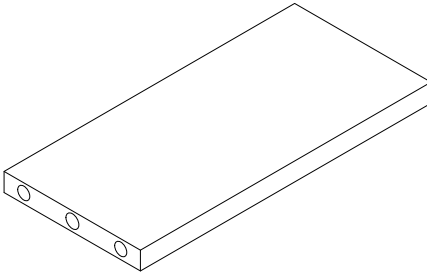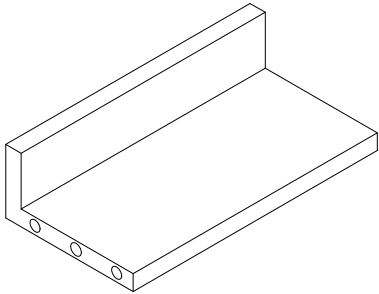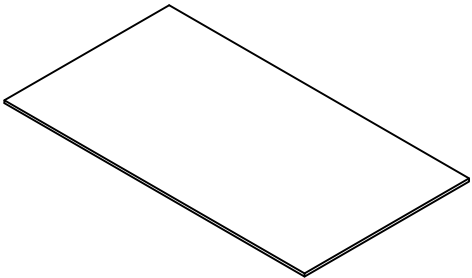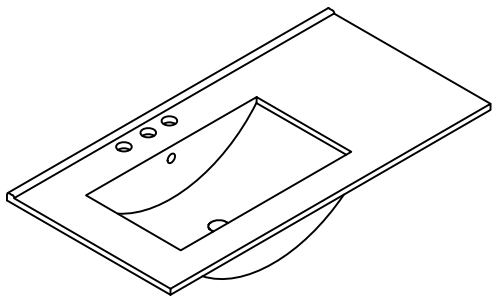
A	B	C	D	E	F
					
1PC	1PC	1PC	1PC	1PC	1PC
G	H	I	J	K	L
					
1PC	1PC	1PC	1PC	1PC	1PC
M	N	O	P	Q	R
					
1PC	1PC	1PC	1PC	2PCS	2PCS
S	T	U	V	W	
					
2PCS	2PCS	2PCS	1PC	1PC	

HARDWARE :

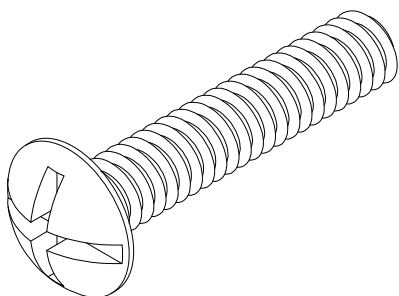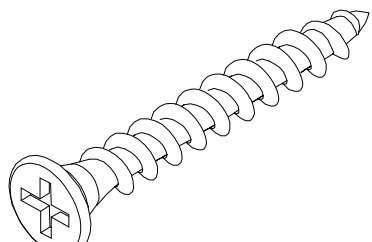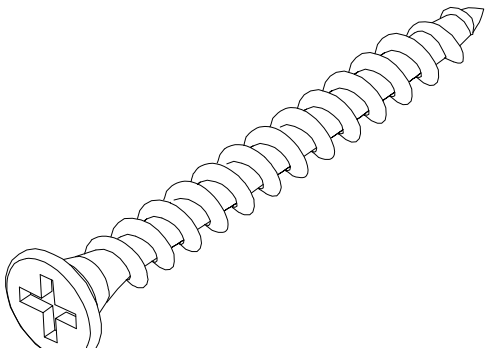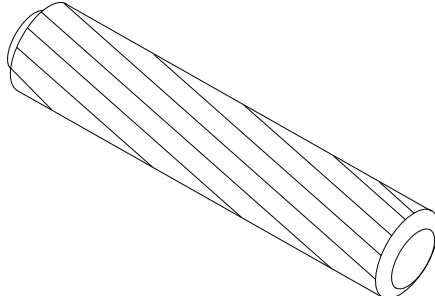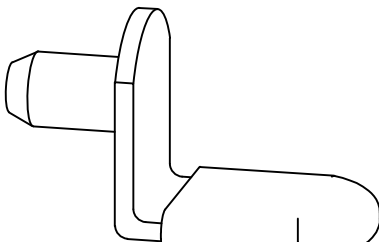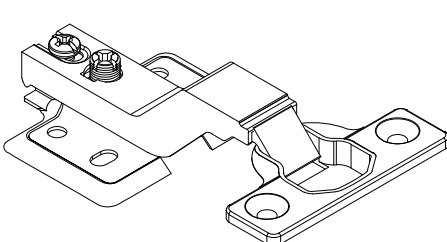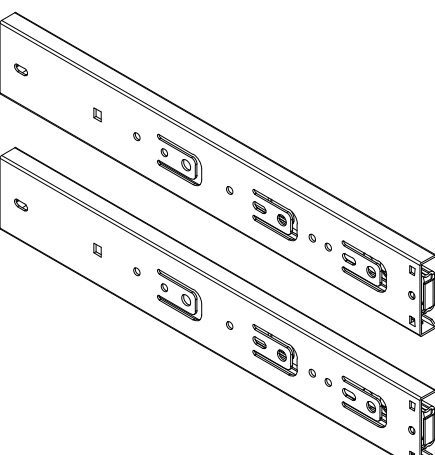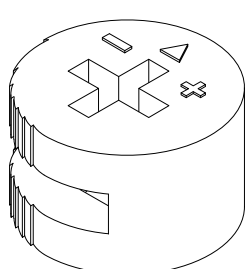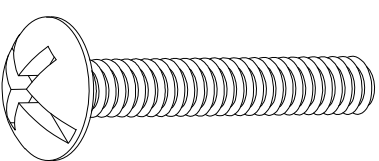①	②	③	④	⑤	⑥
 1/4"x25mm	 Ø4x25mm	 Ø4x35mm	 Ø8x30mm		
16+1 PCS	12+1 PCS	1 PC	30+2 PCS	4 PCS	4 PCS
⑦	⑧	⑨	⑩	⑪	⑫
	 Ø4x12mm	 14"x45mm	 Ø3x10mm	 Ø6x33mm	 Ø15x9mm
2 PCS	24+2 PCS	1 SET	12+1 PCS	28+2 PCS	28+2 PCS
⑬					
 5/32"x22mm					
4 PCS					


STEP 1

4  10pcs
Ø8x30mm

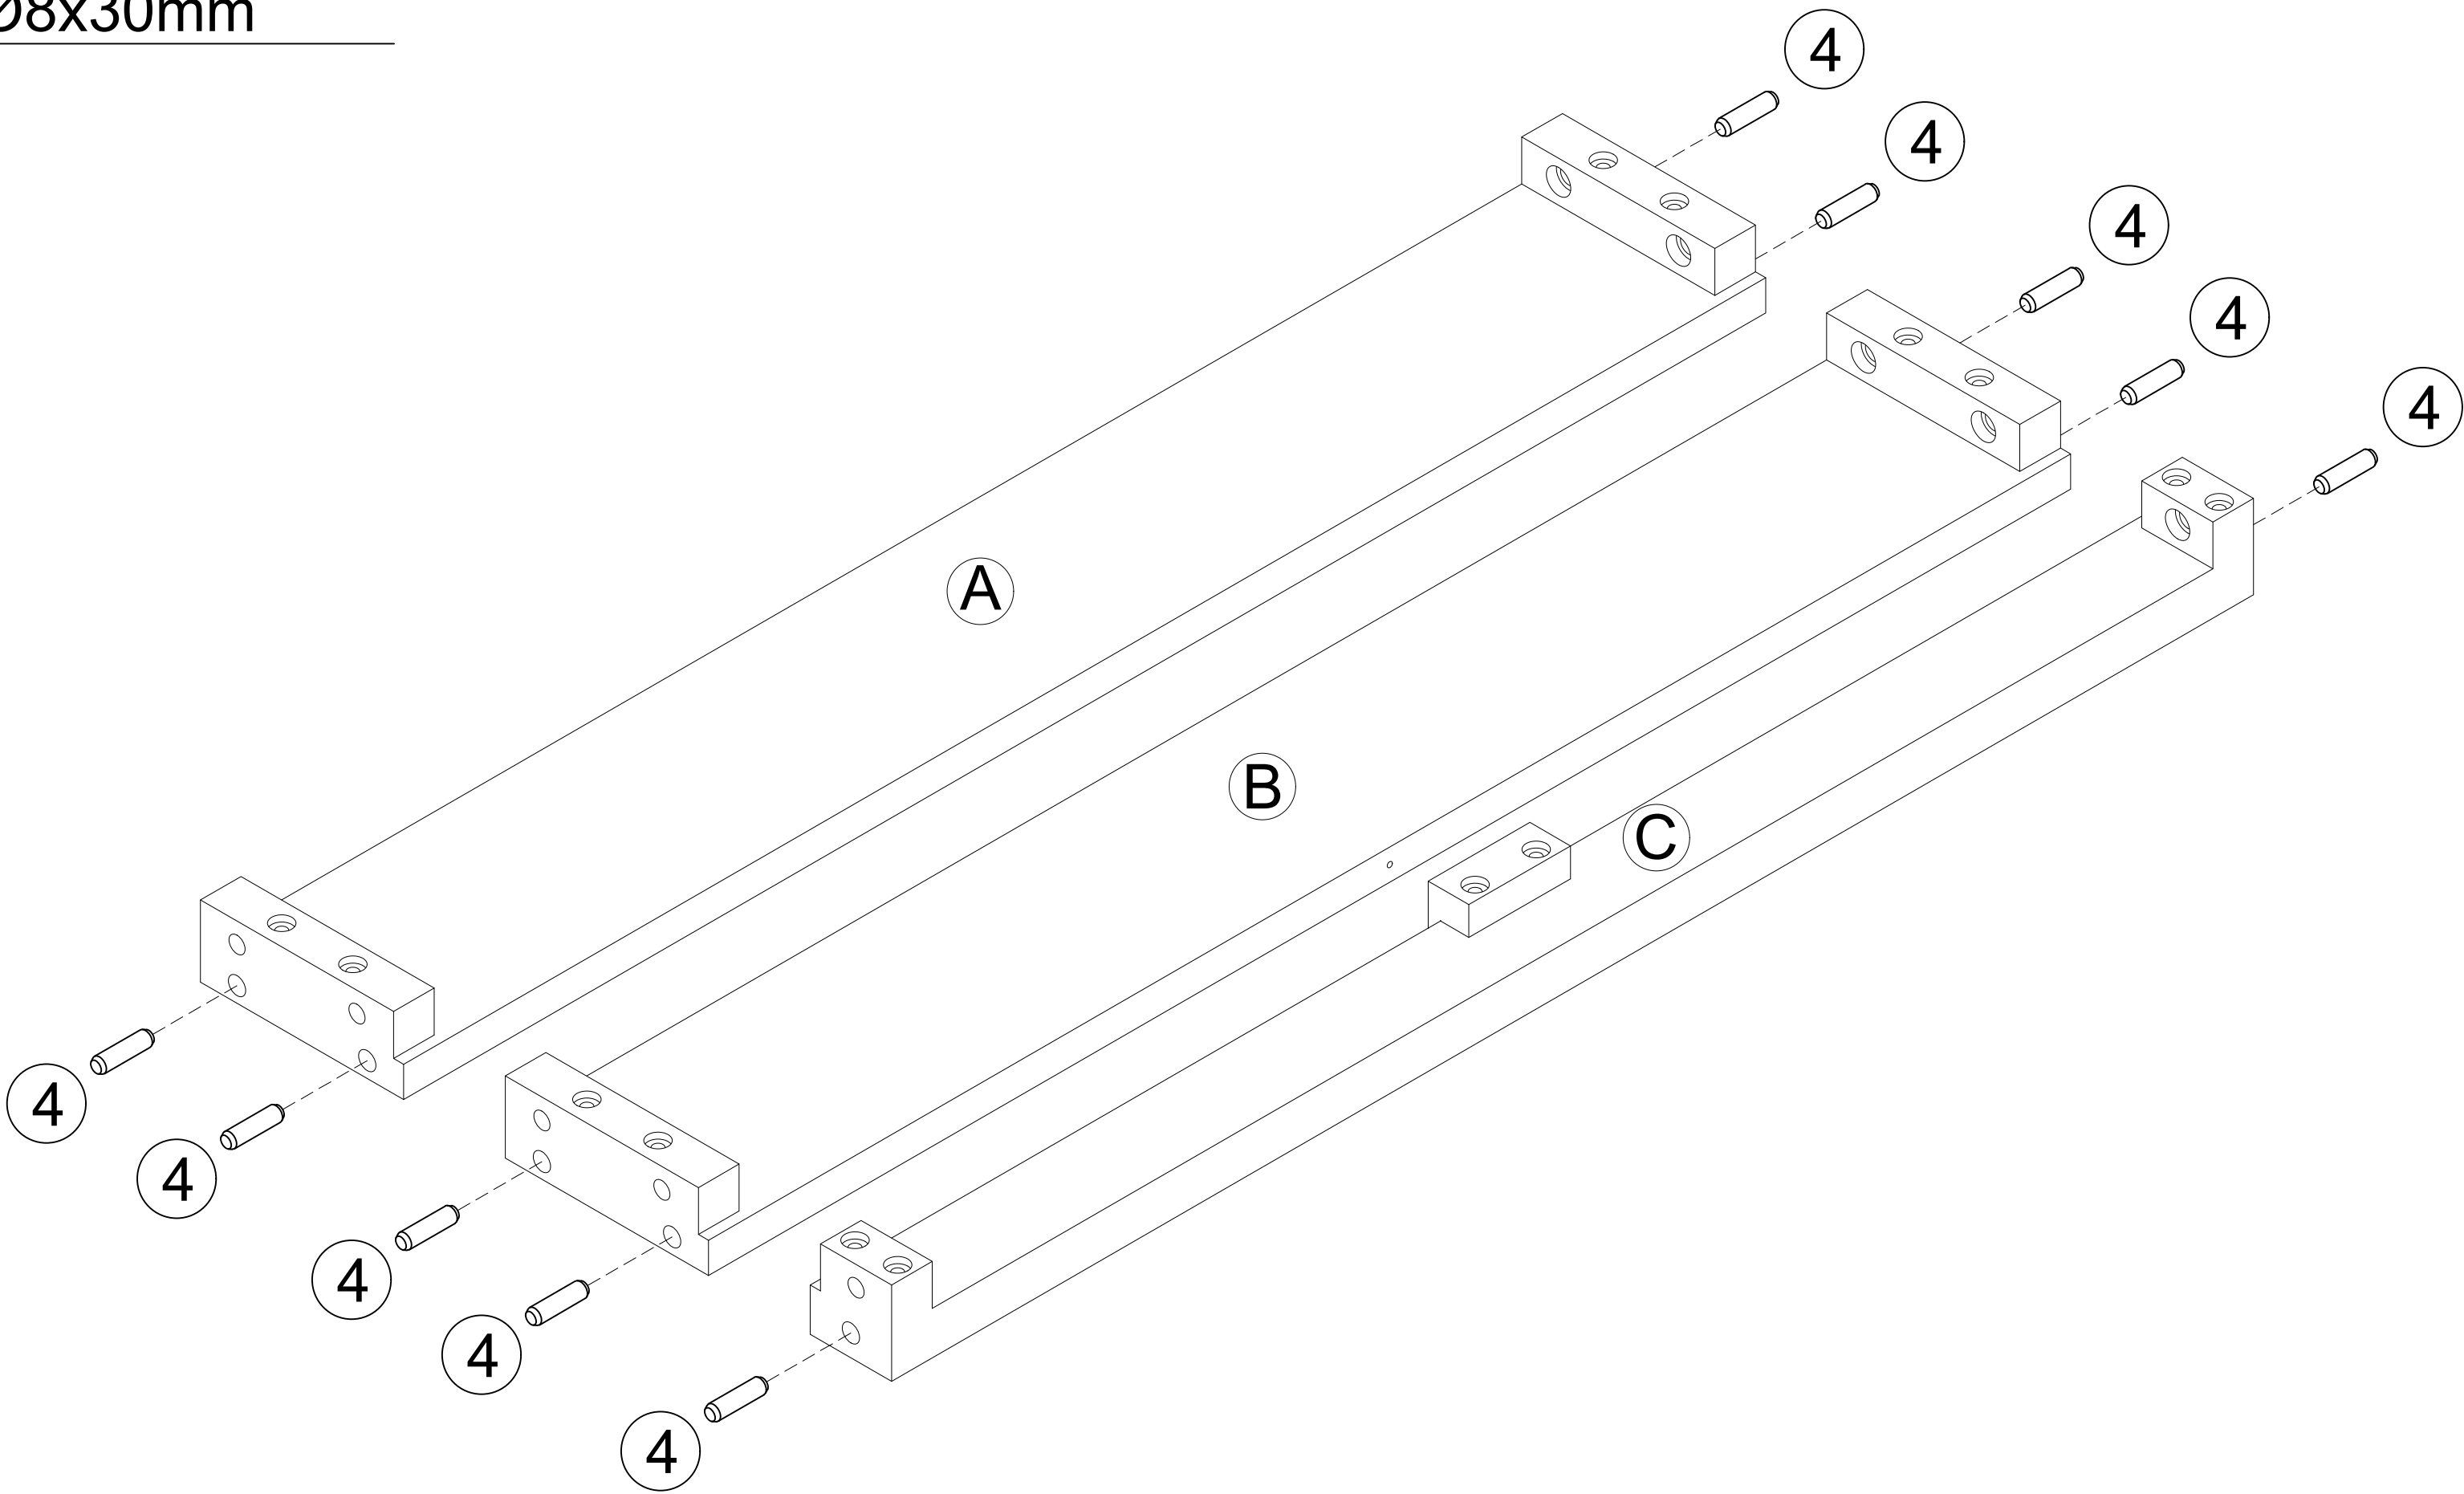


STEP 2

4  4pcs
Ø8x30mm

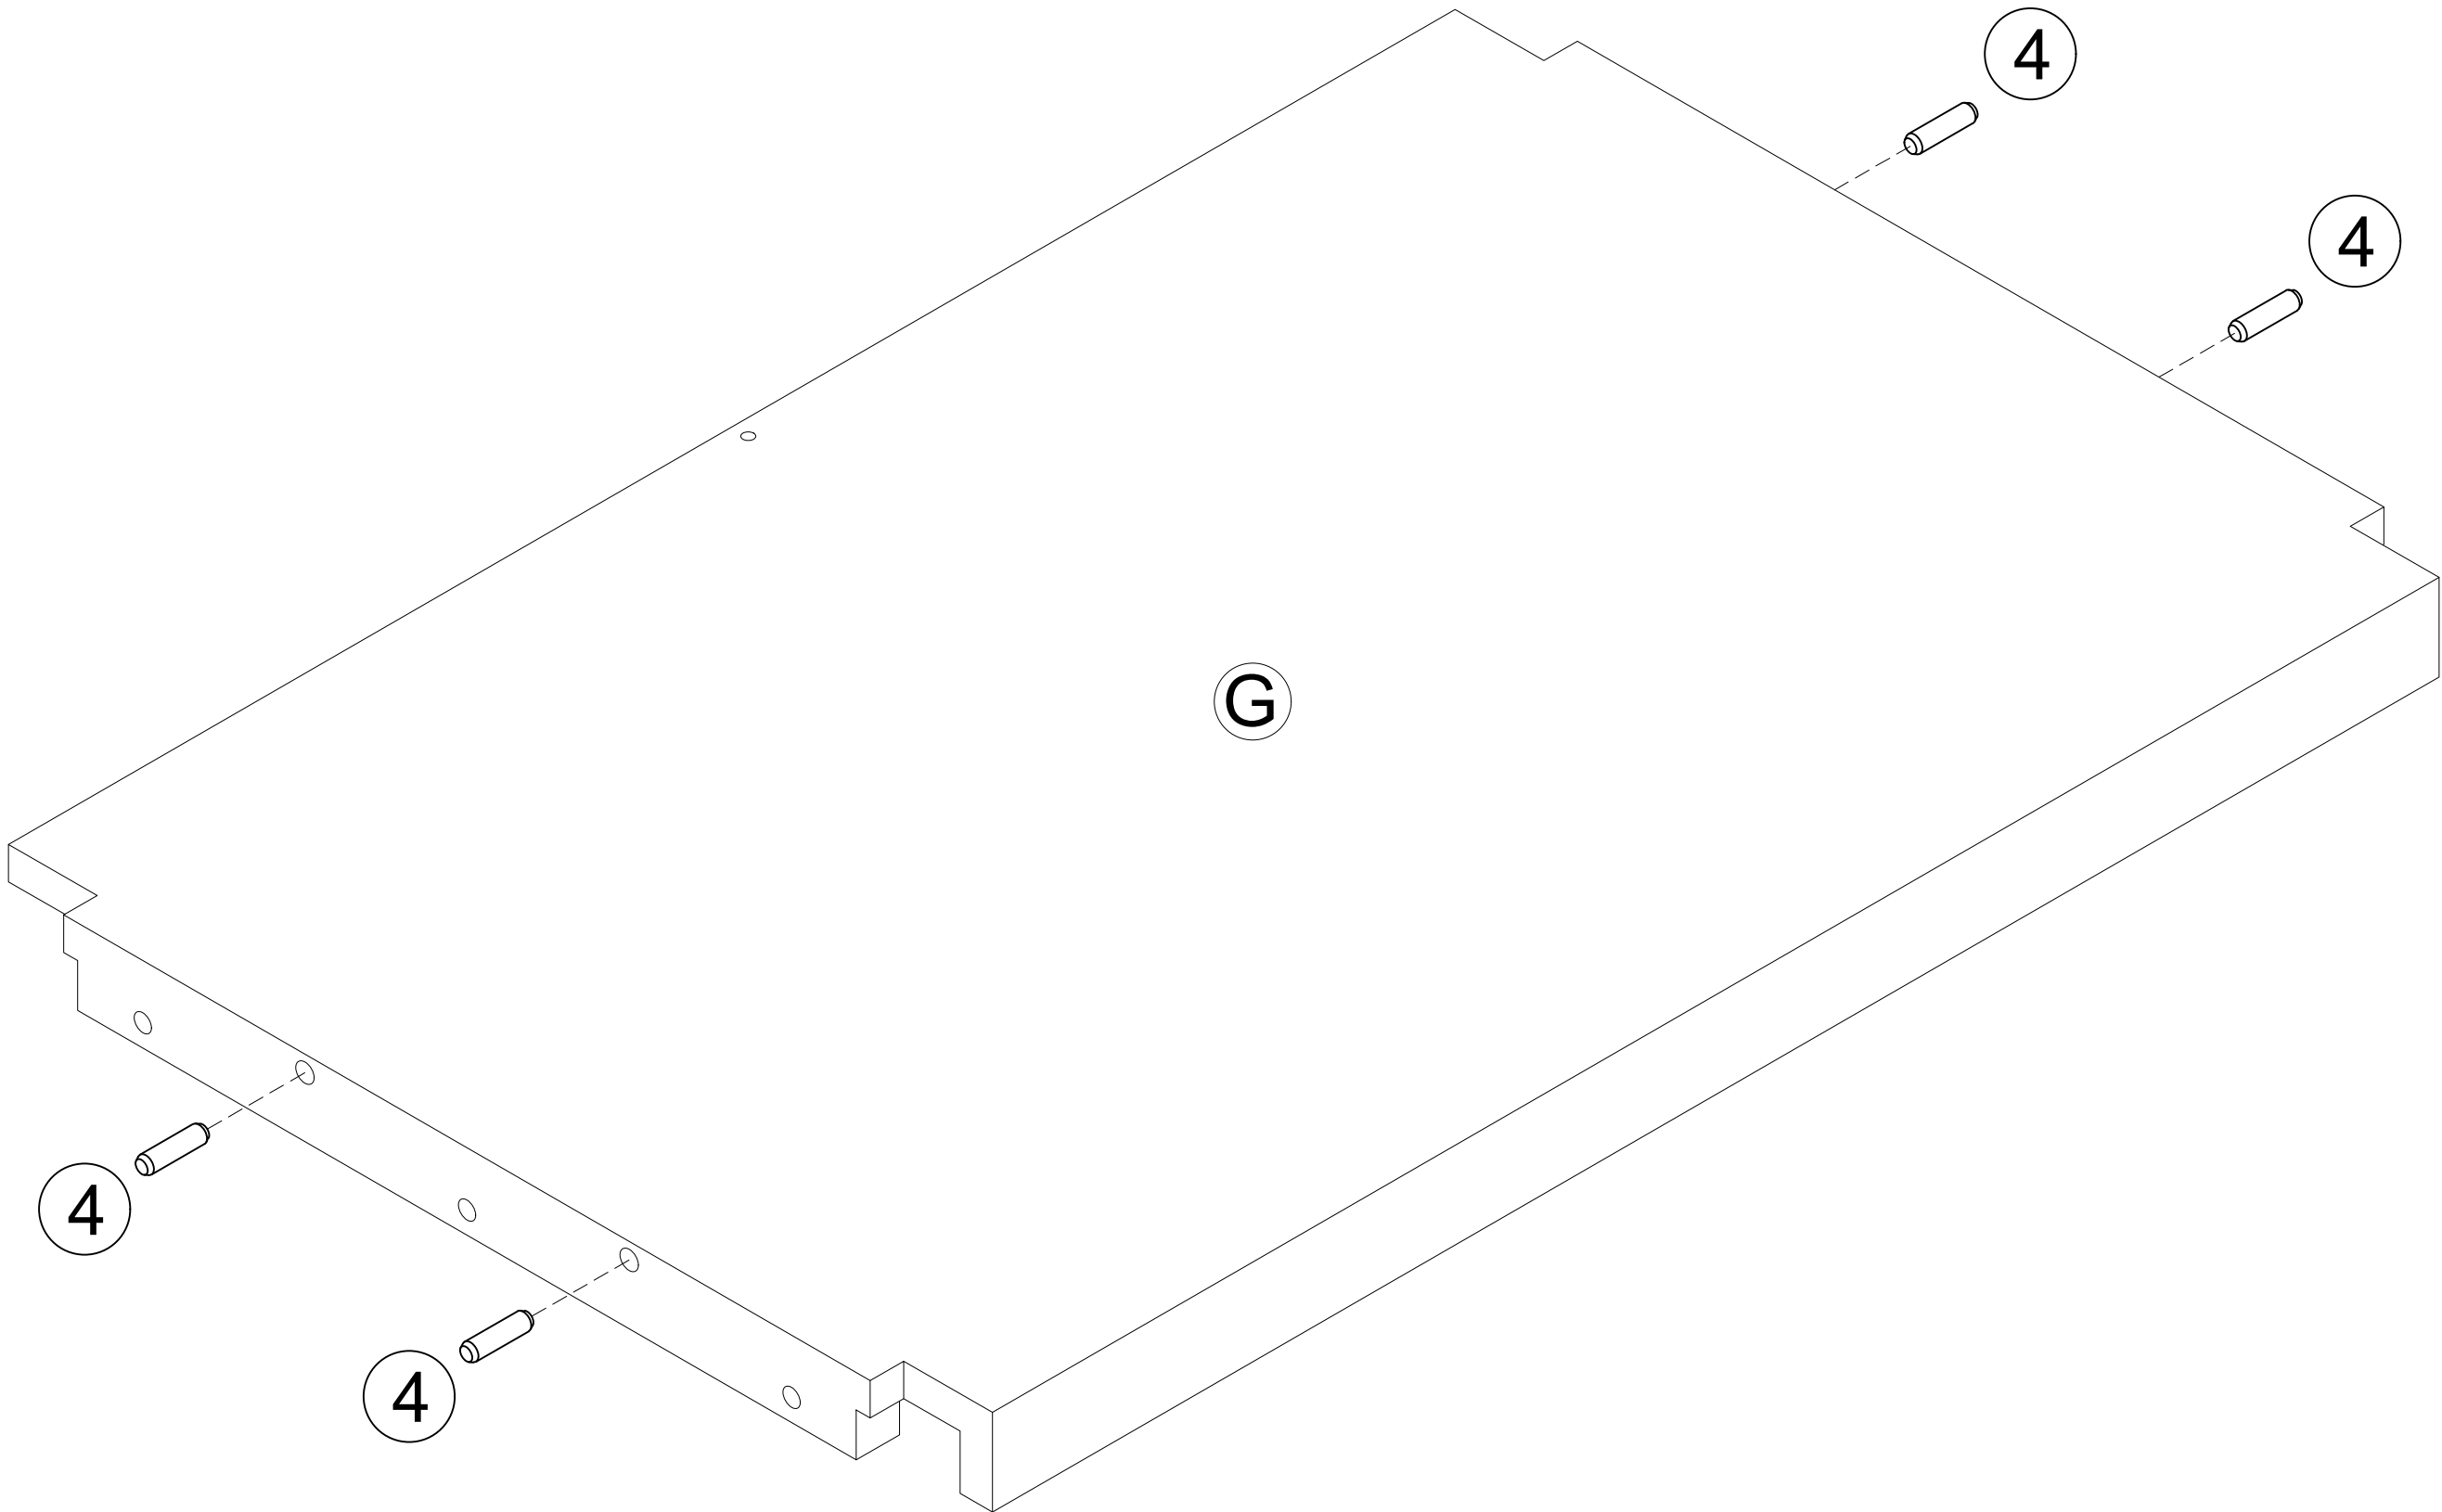


STEP 3

9 12"x45mm 1SET

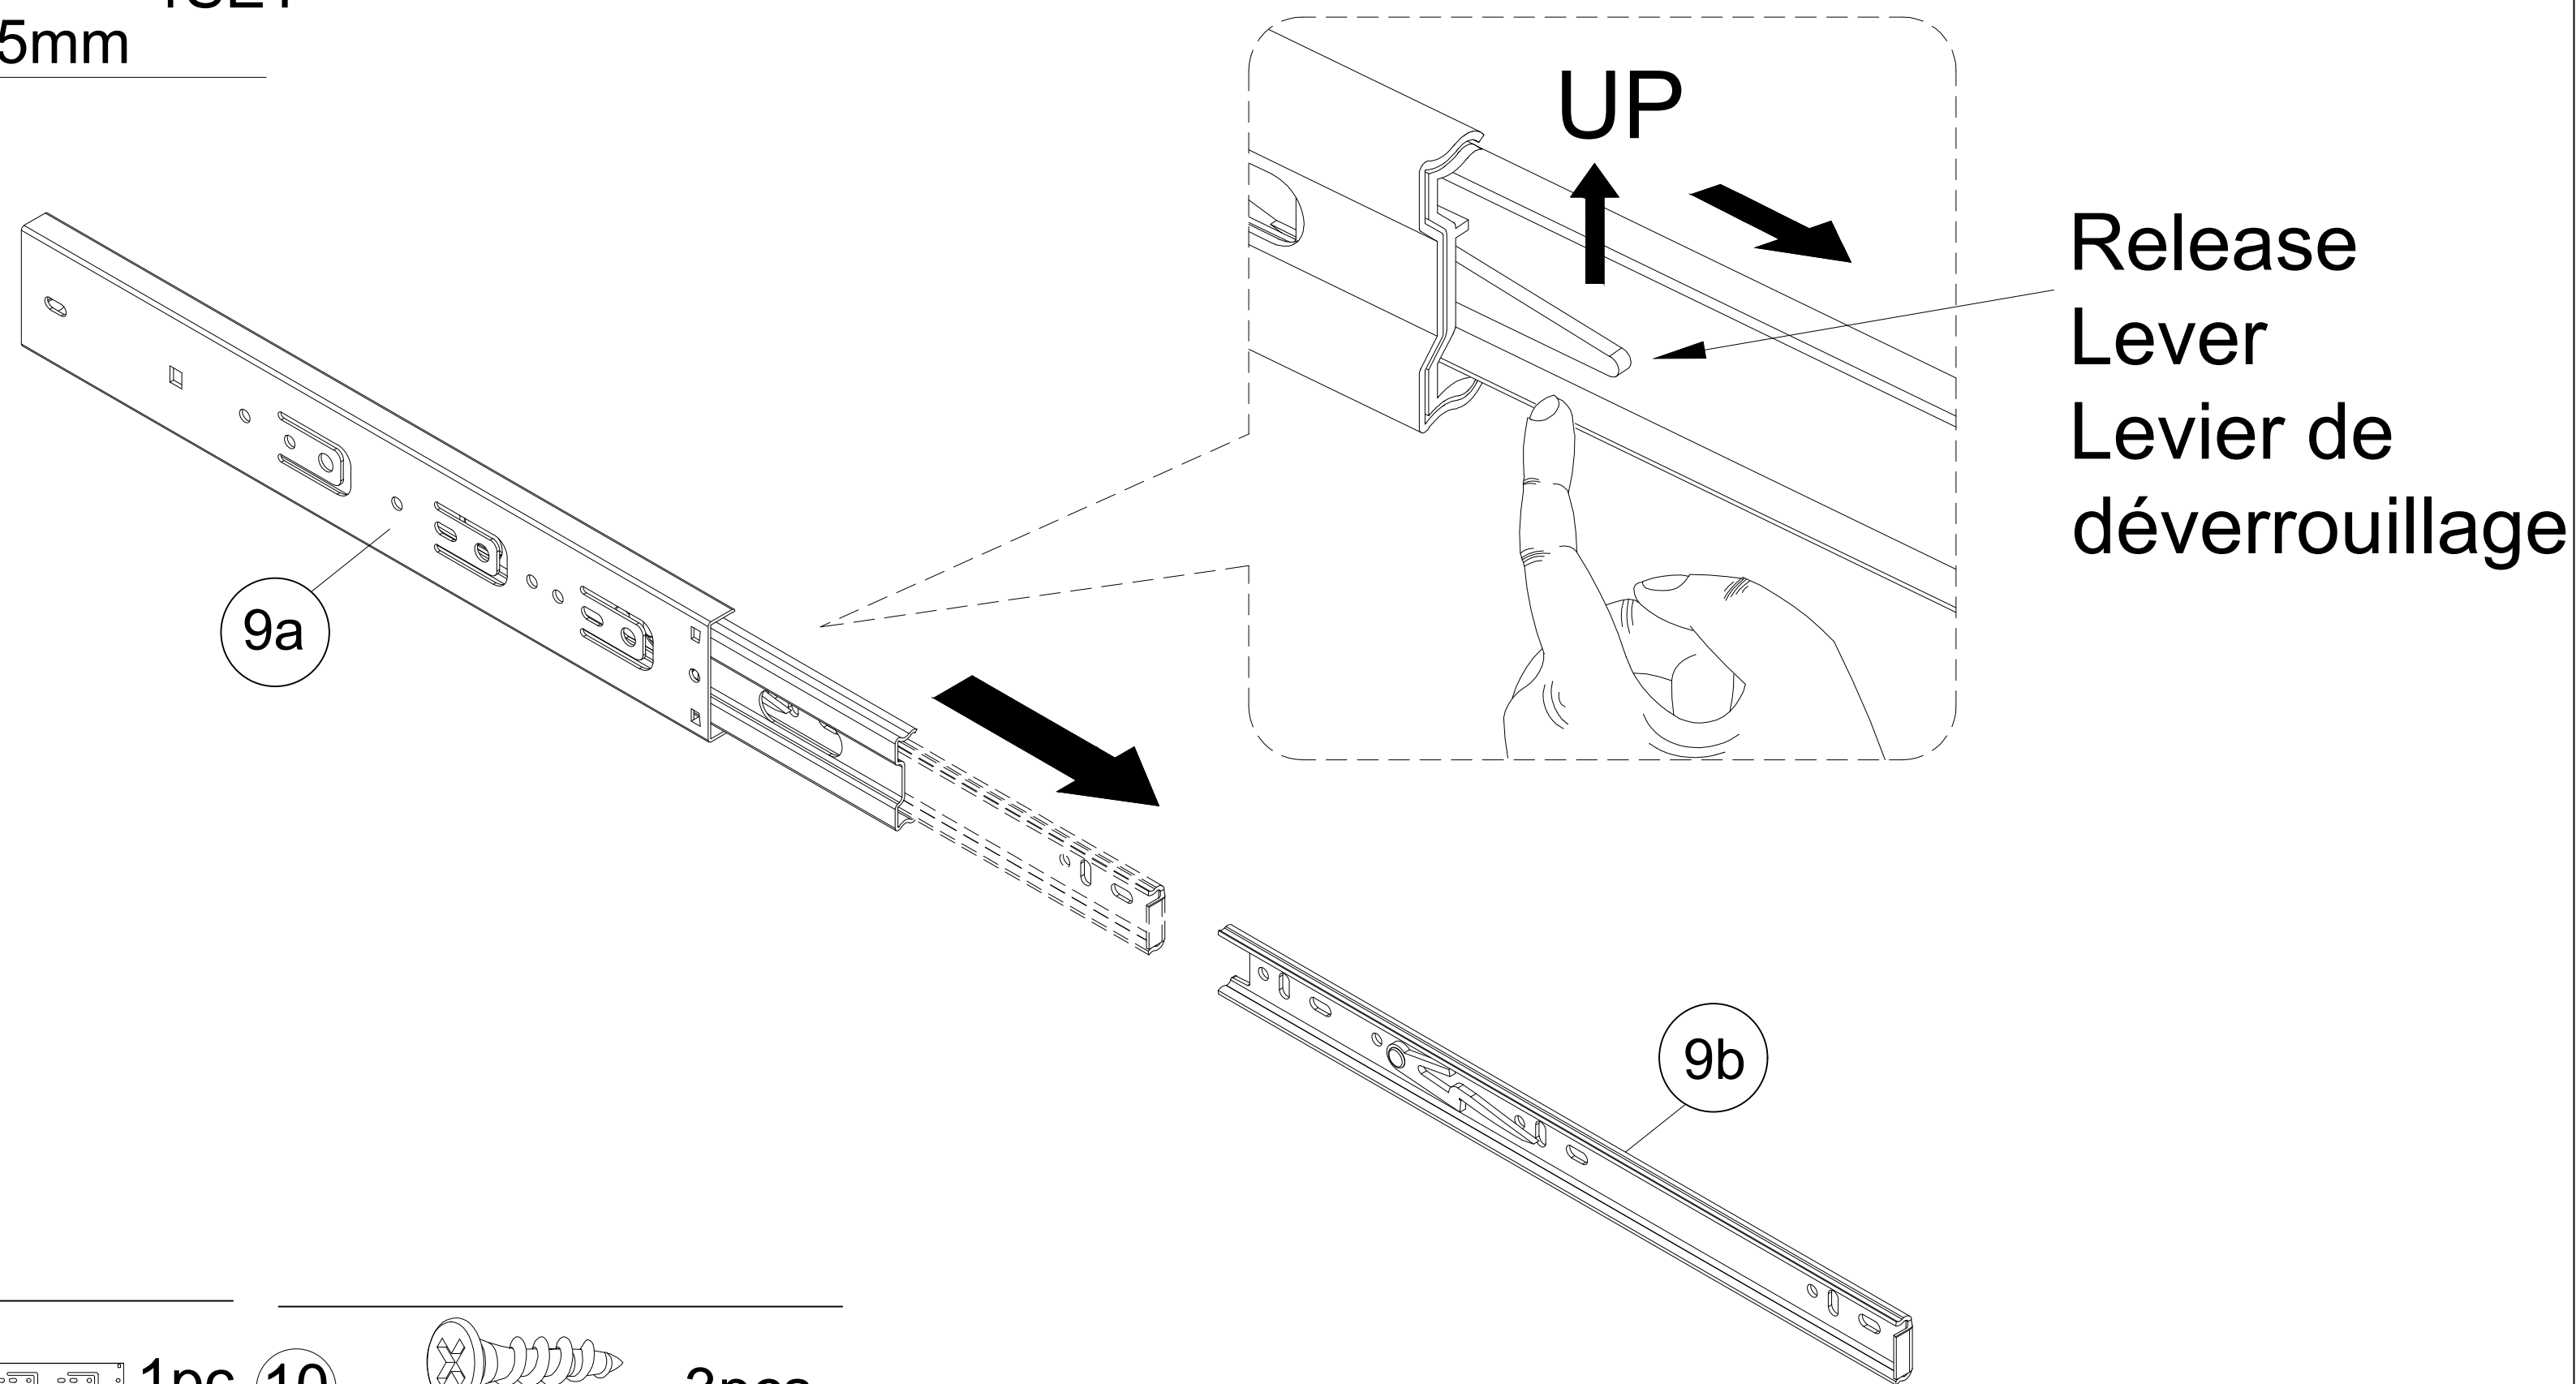


STEP 4

9a 12"x45mm 1pc 10 Ø3x10mm 3pcs

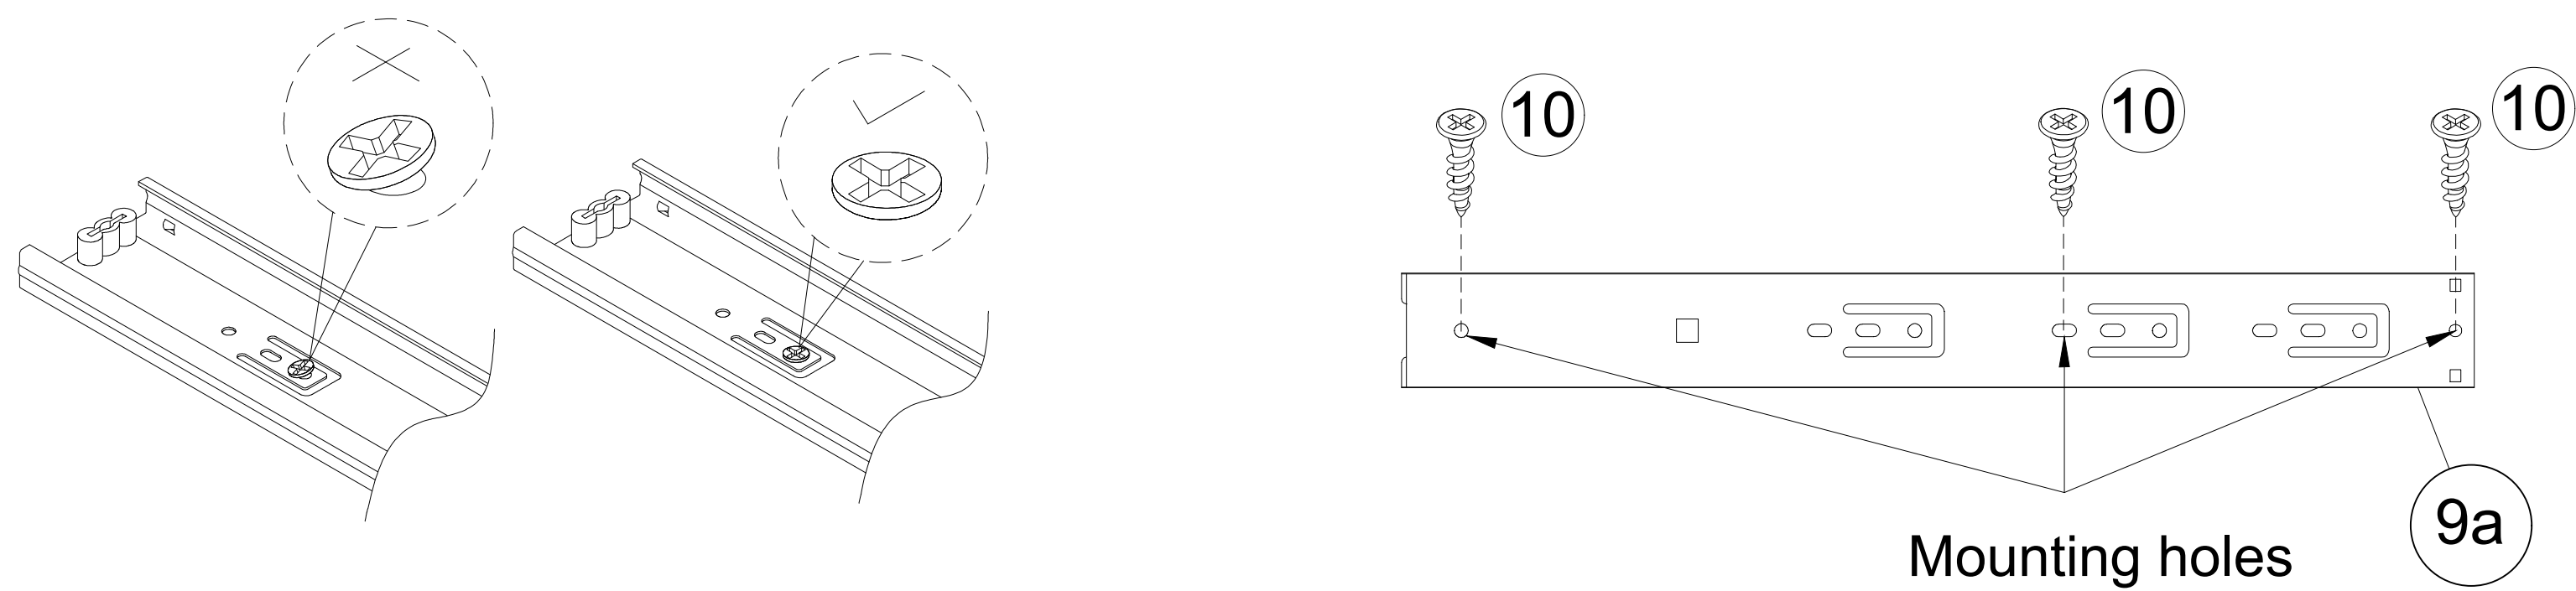


Please make sure that the screw is VERTICAL
so as not to affect the sliding of the drawer.

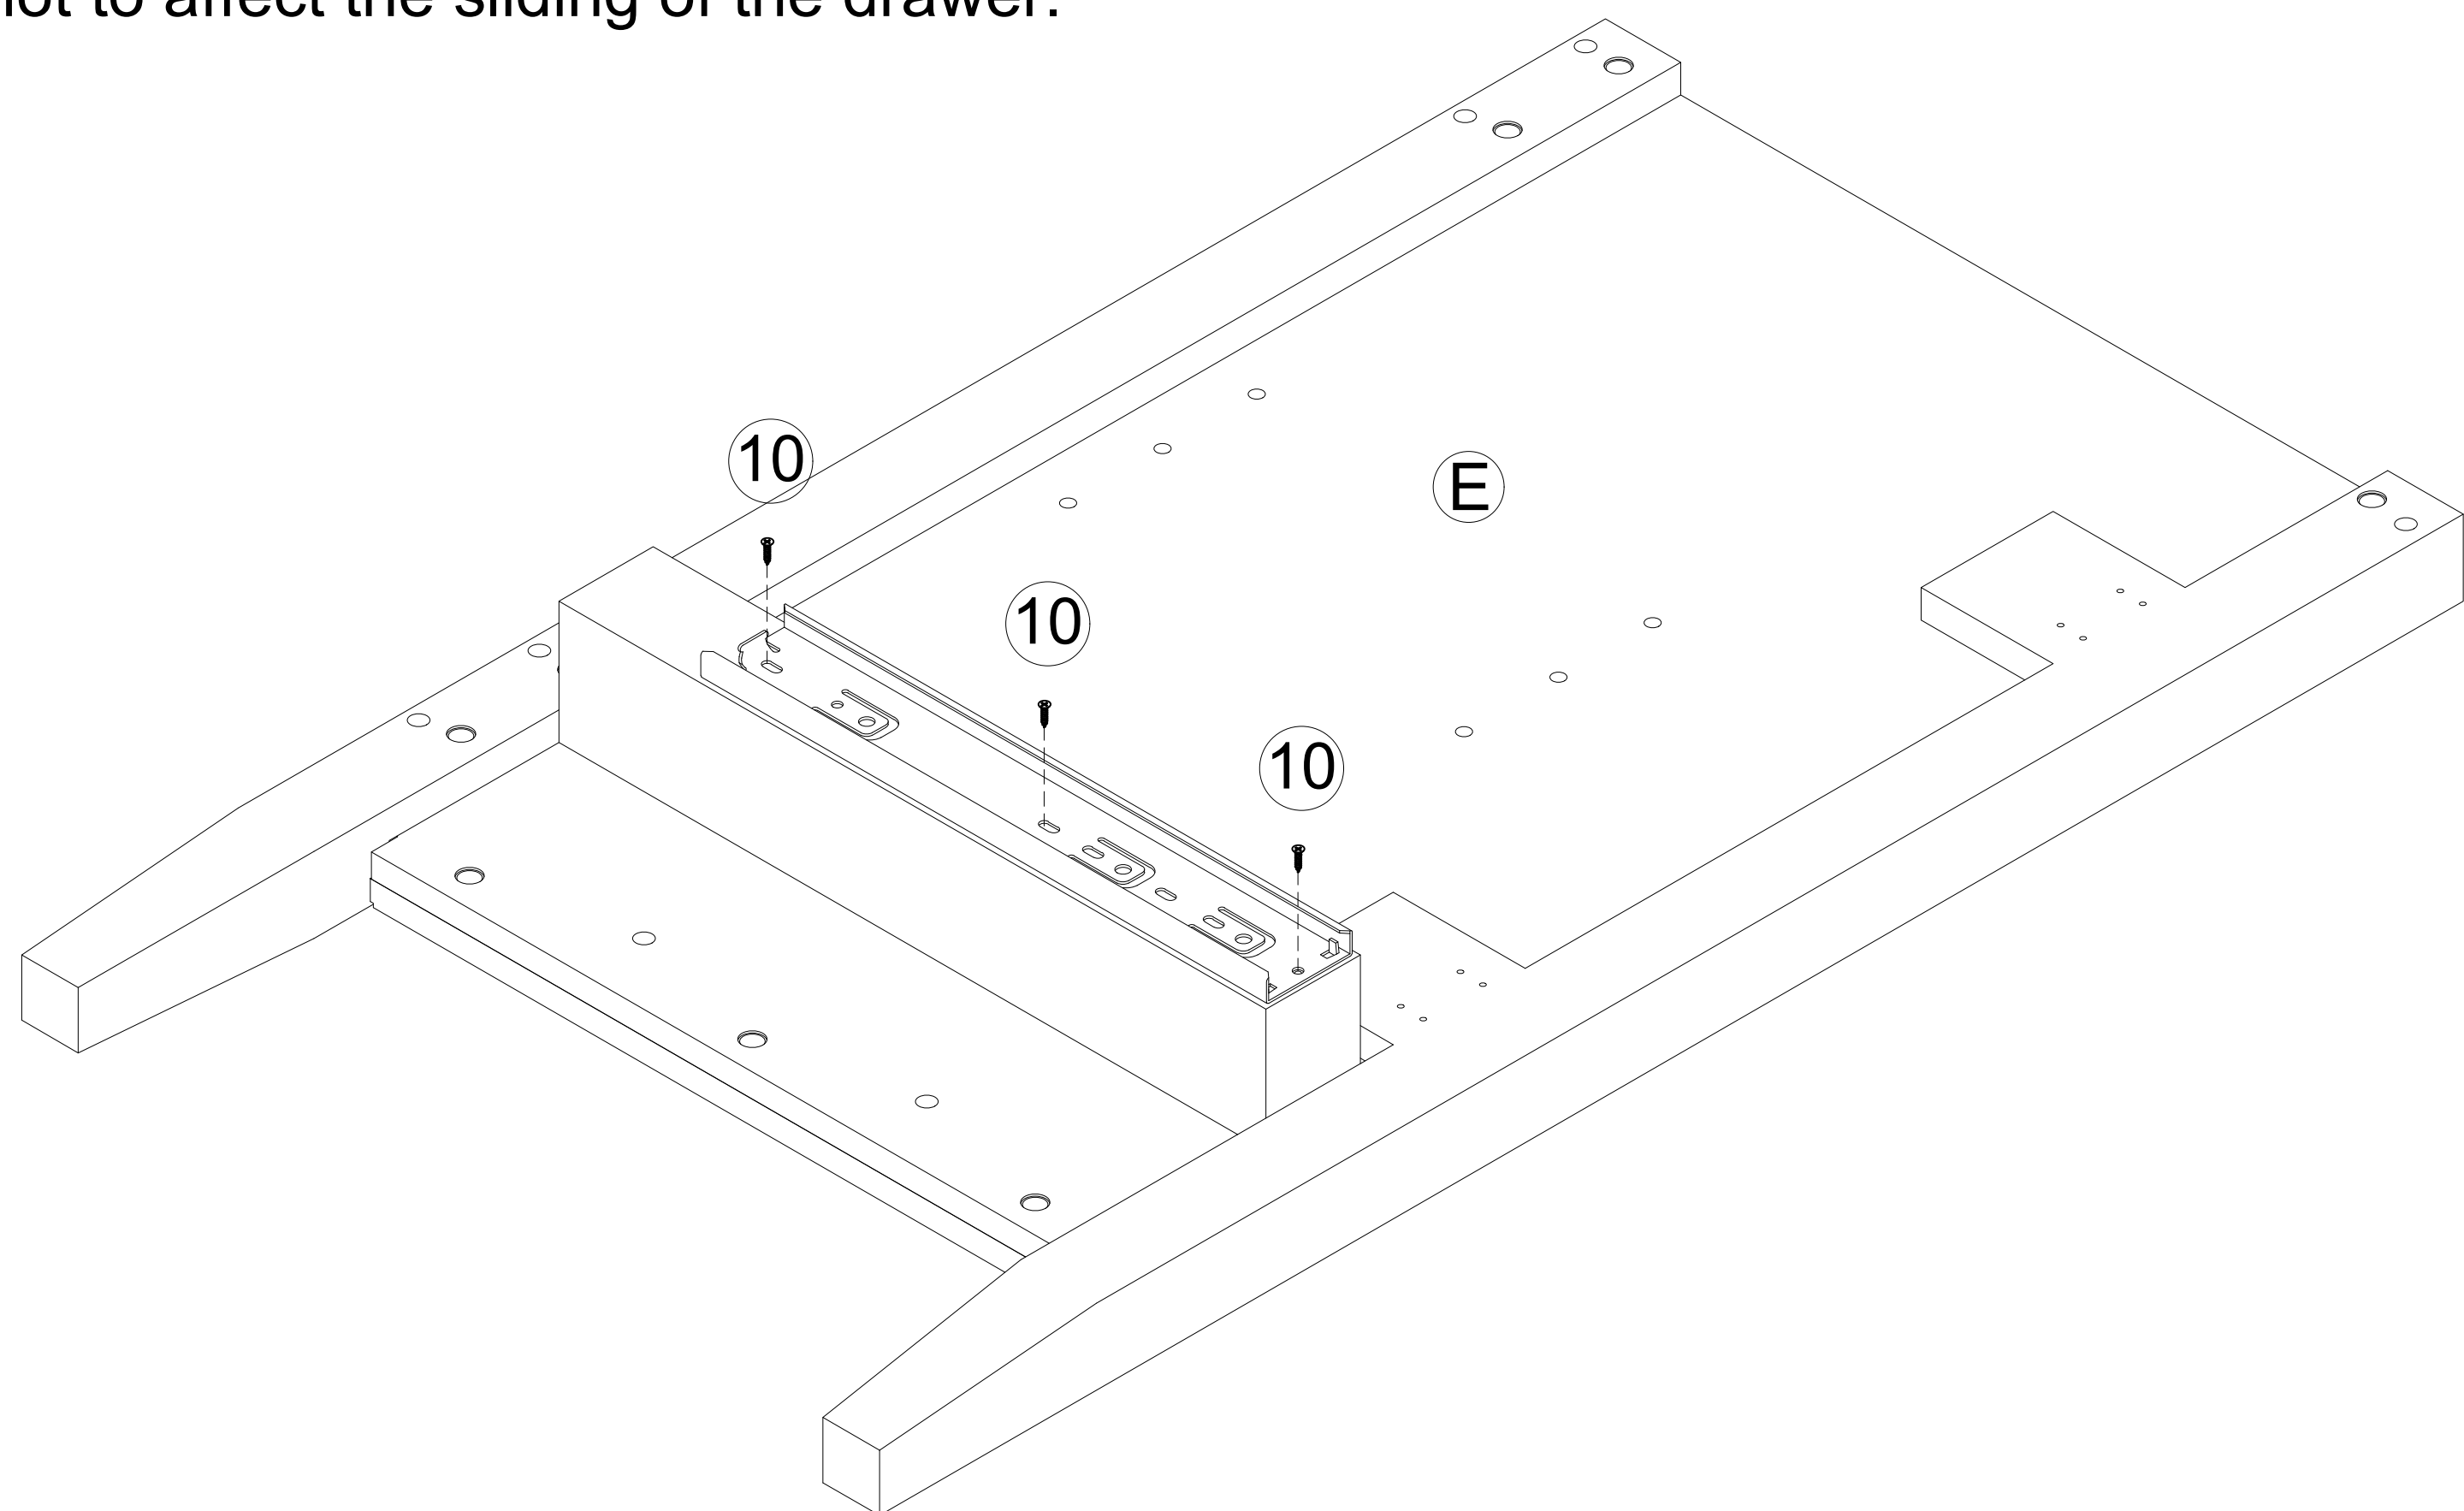


STEP 5

9 12"x45mm 1SET

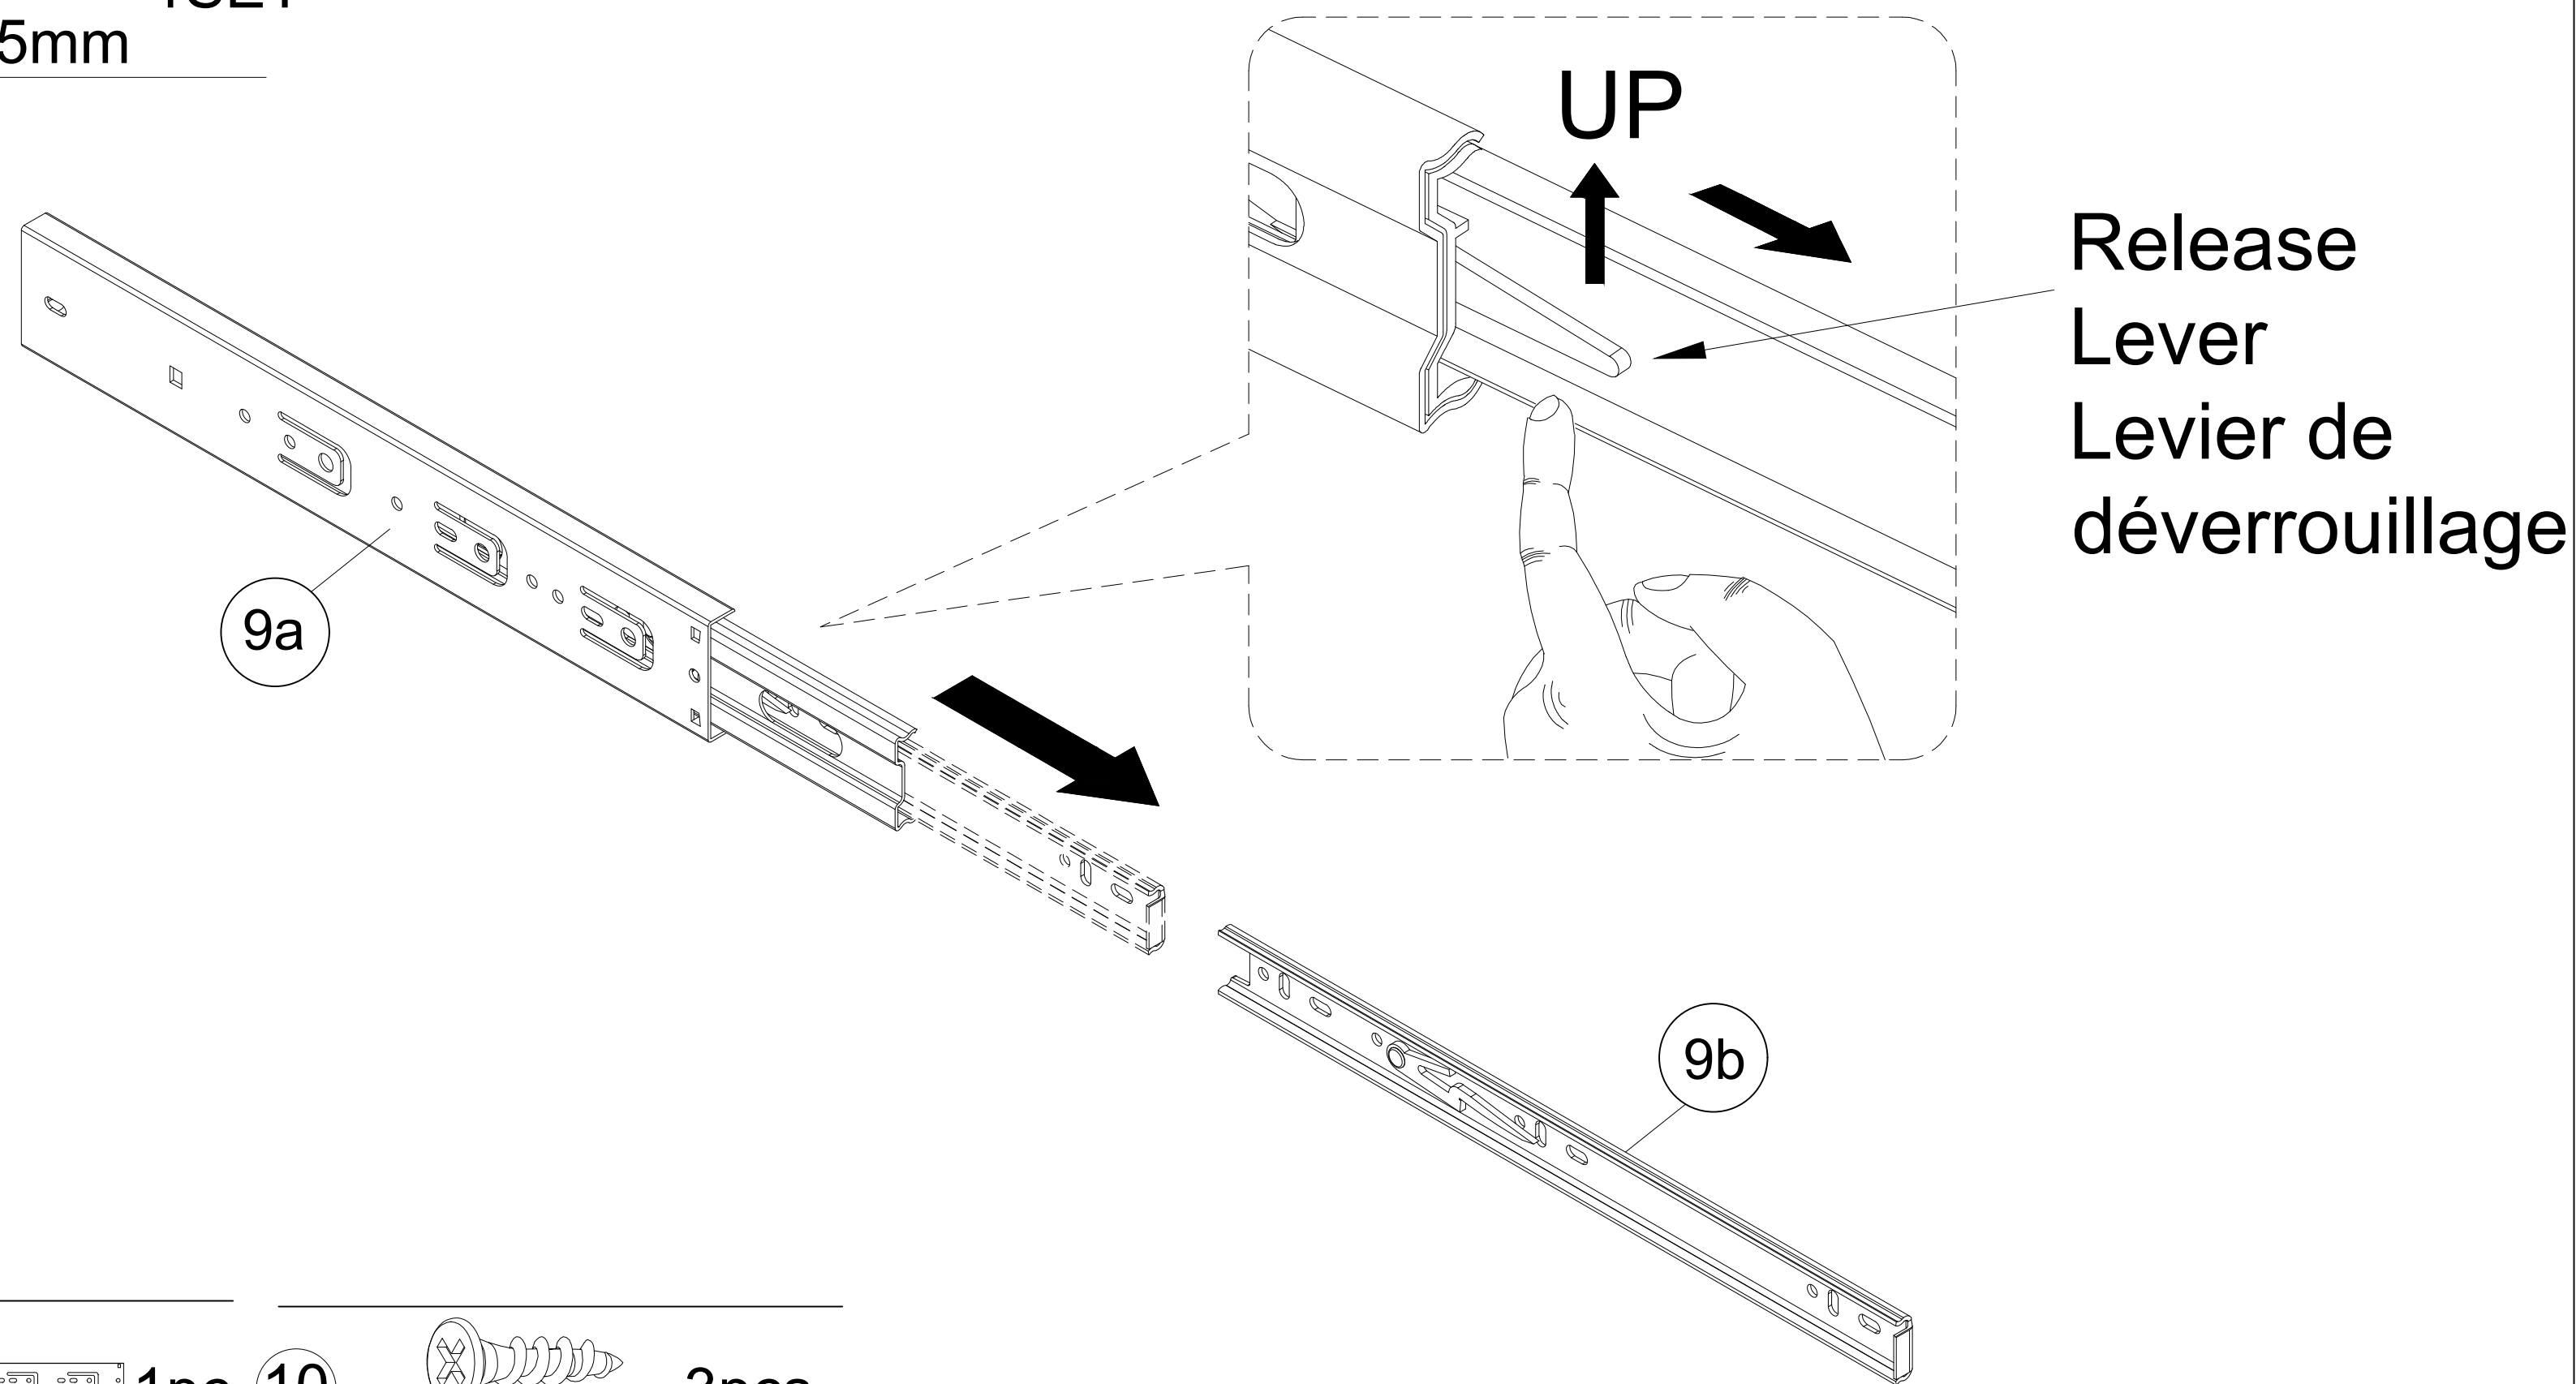


STEP 6

9a 12"x45mm 1pc 10 Ø3x10mm 3pcs

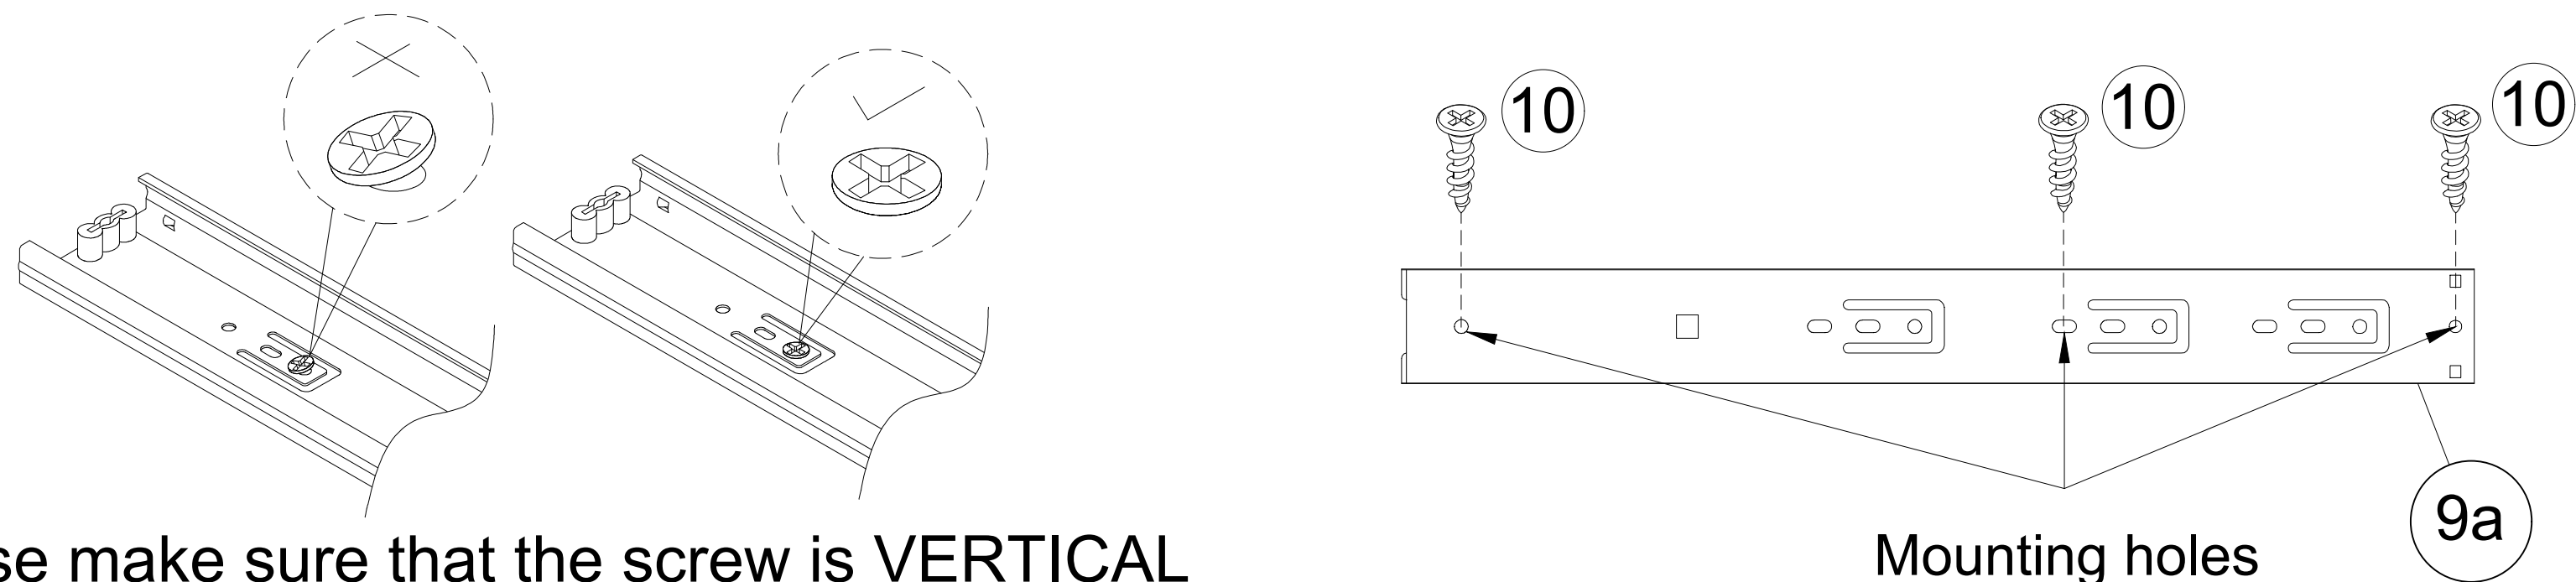


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

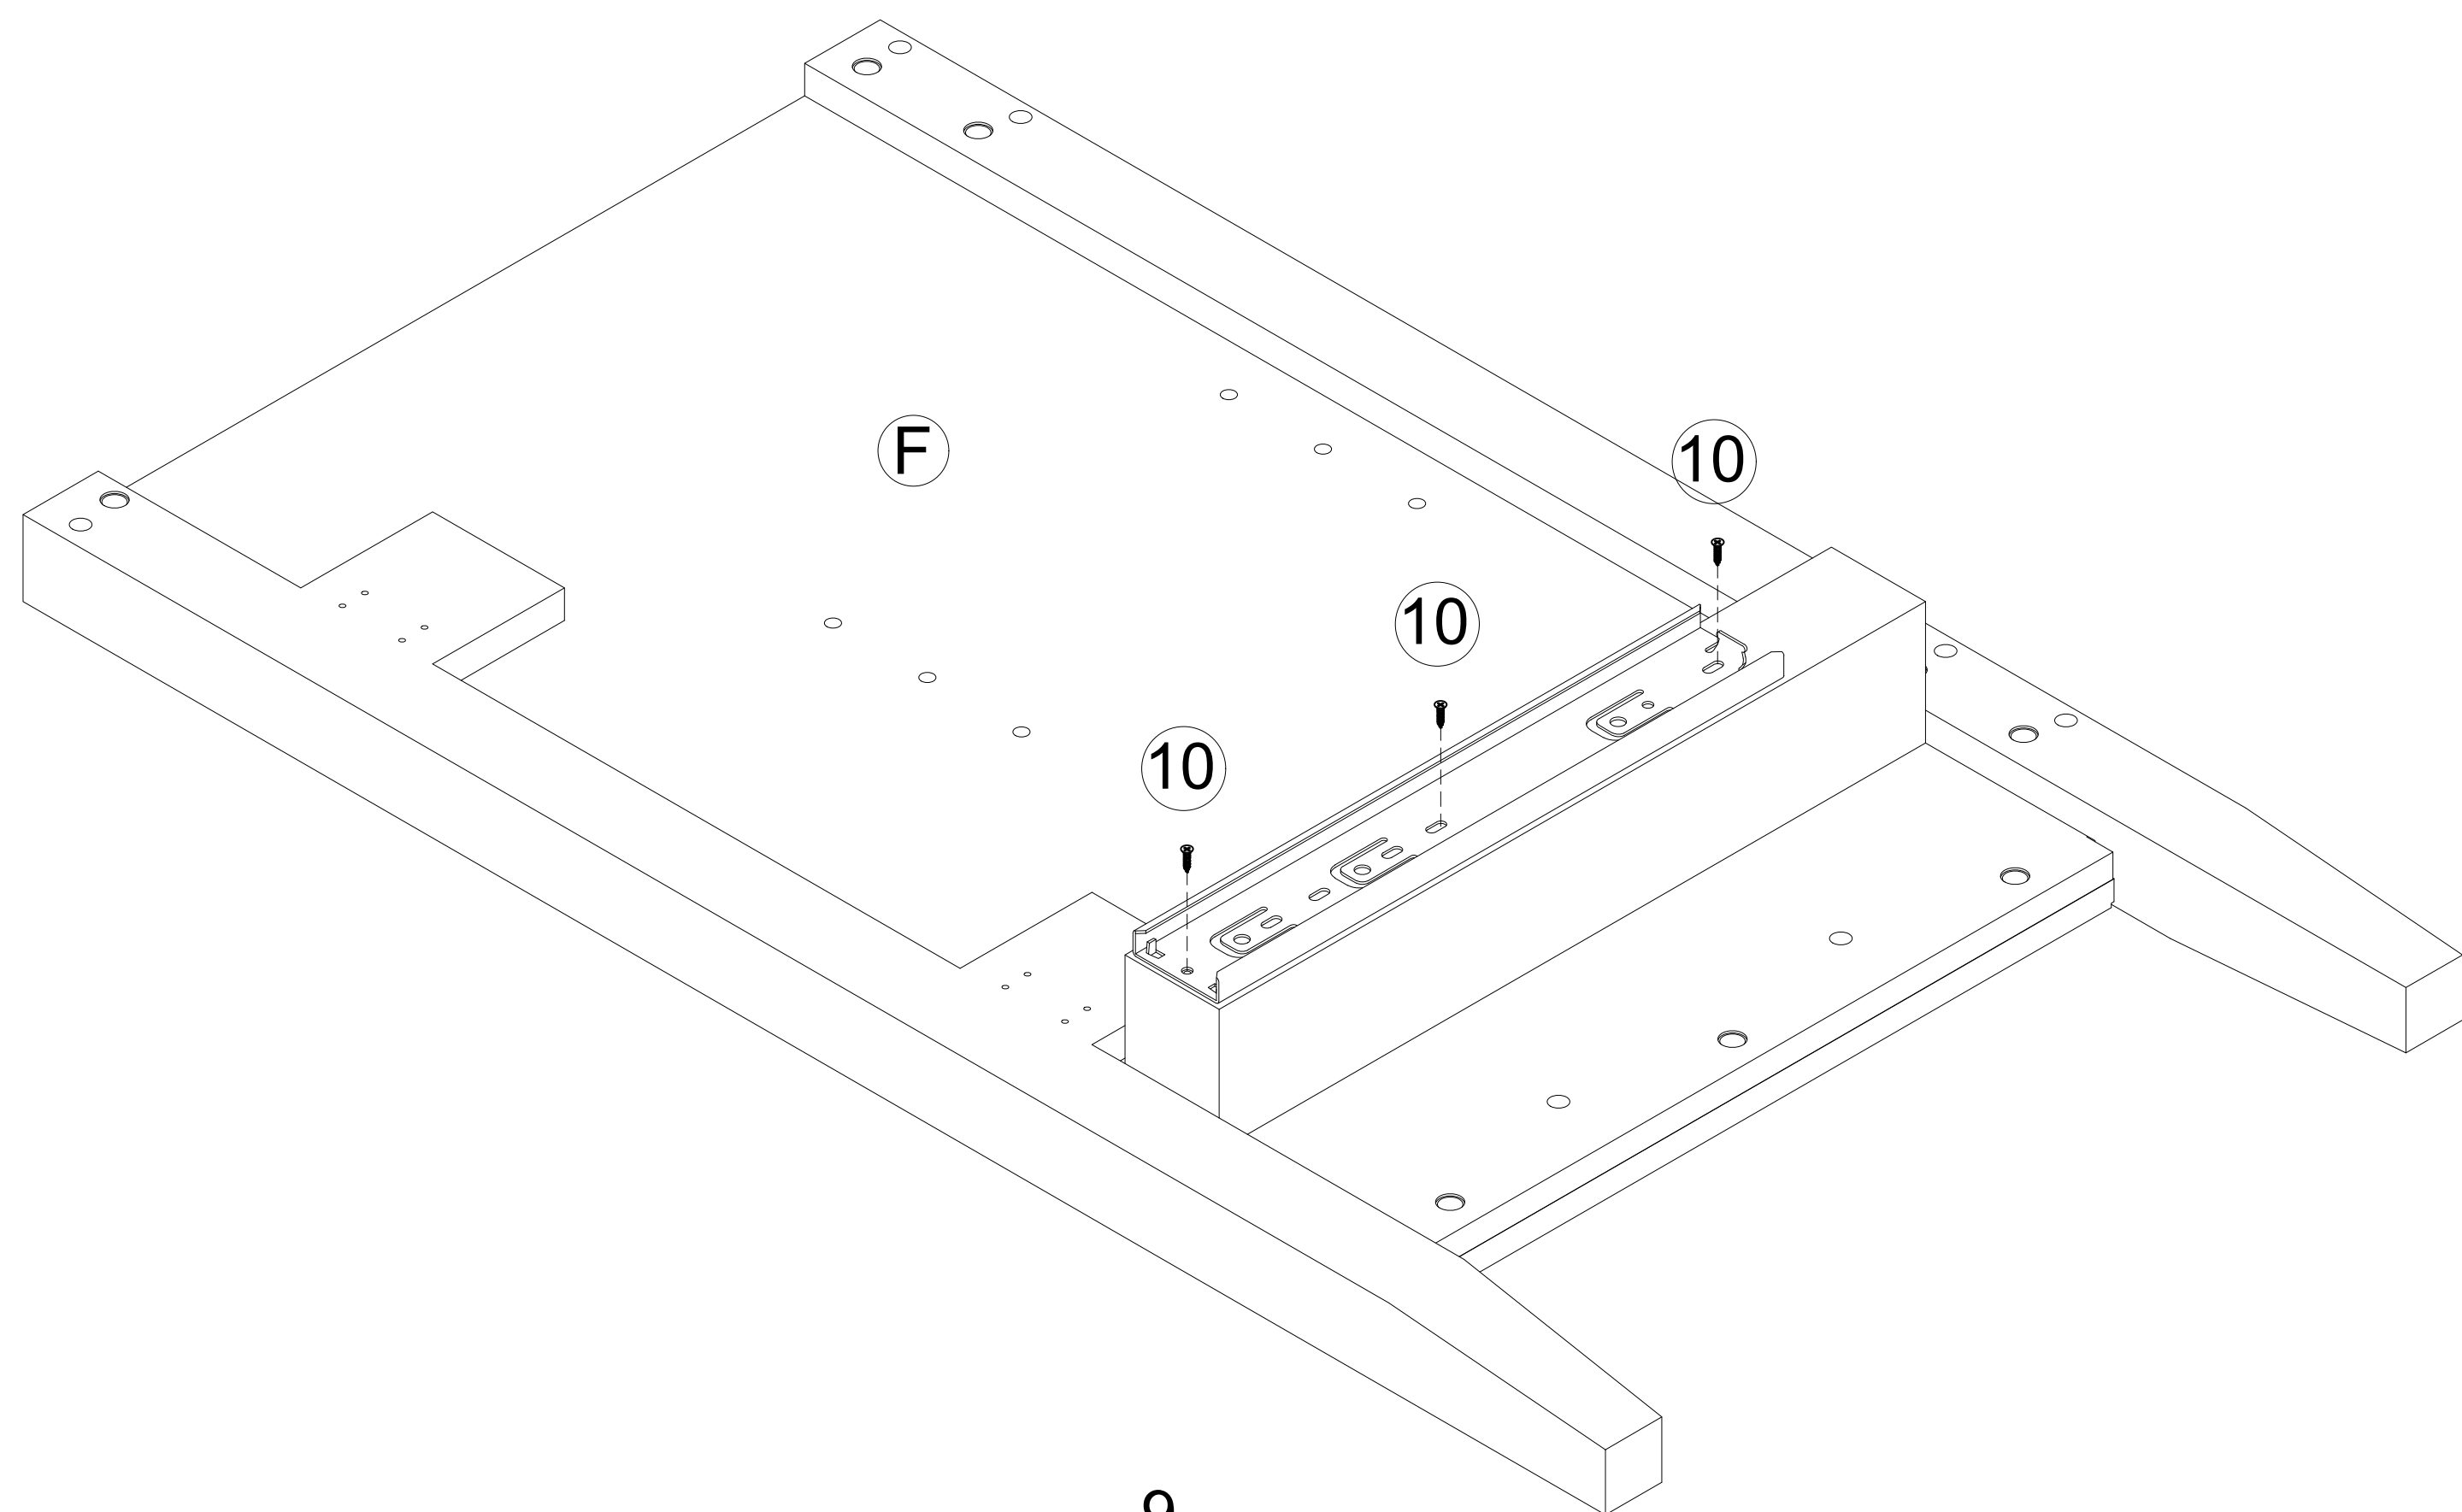


STEP 7

- 1




8pcs

1/4"x25mm

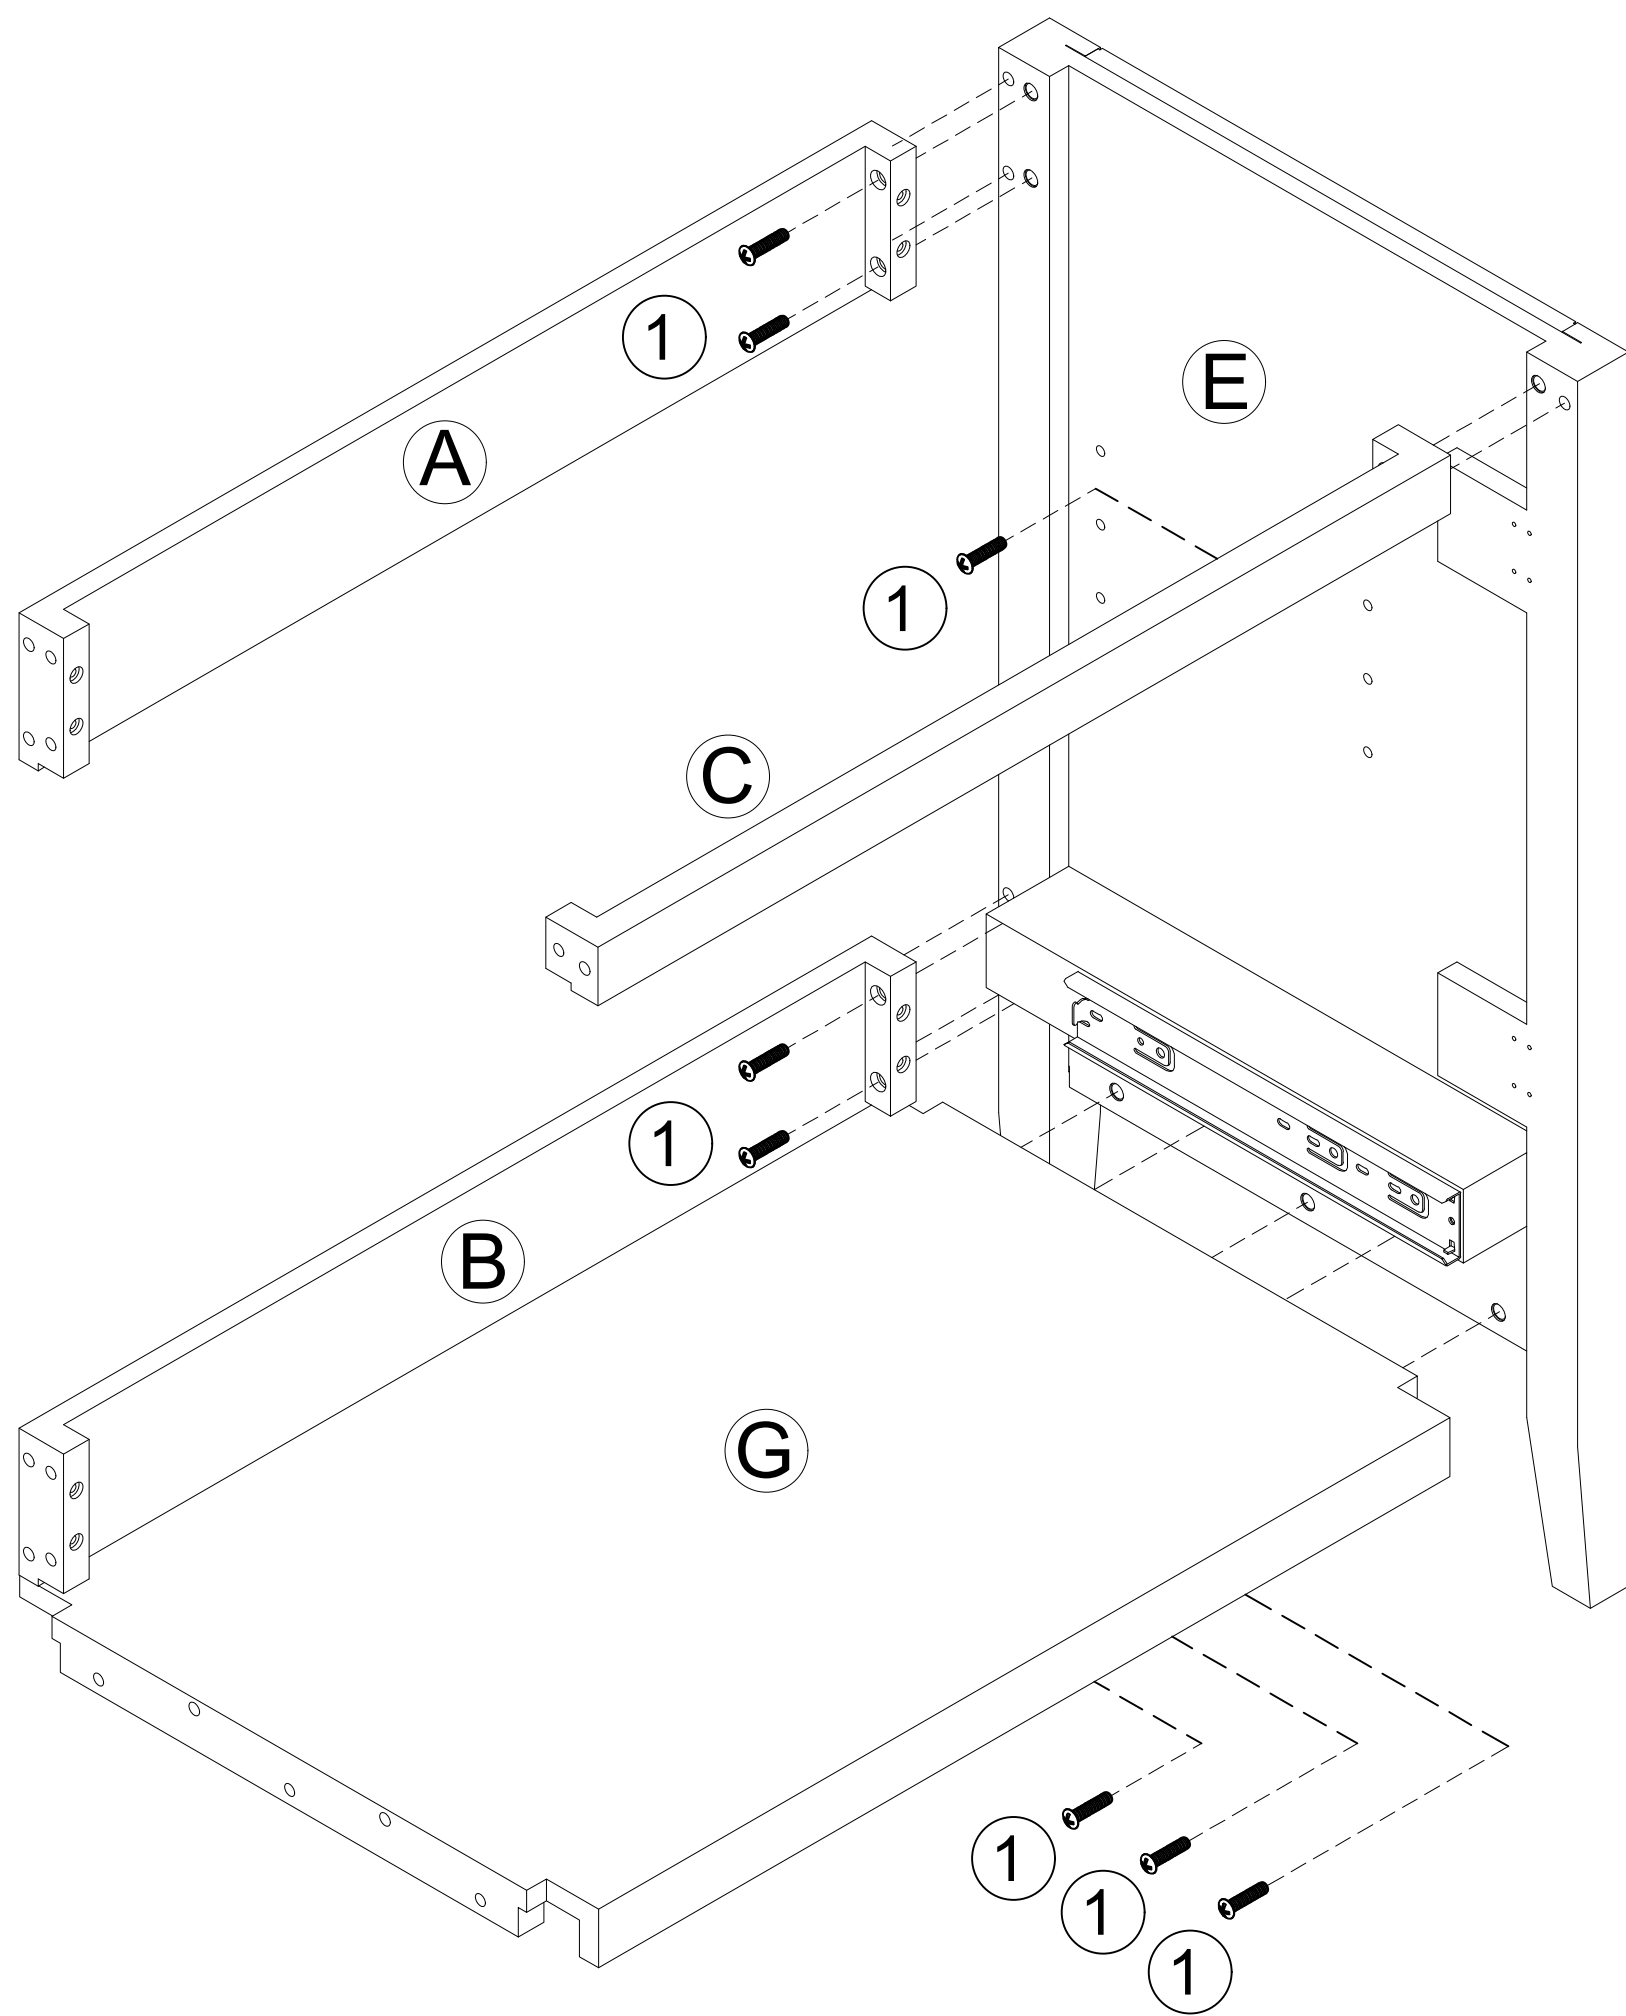


STEP 8

- 1




8pcs

1/4"x25mm

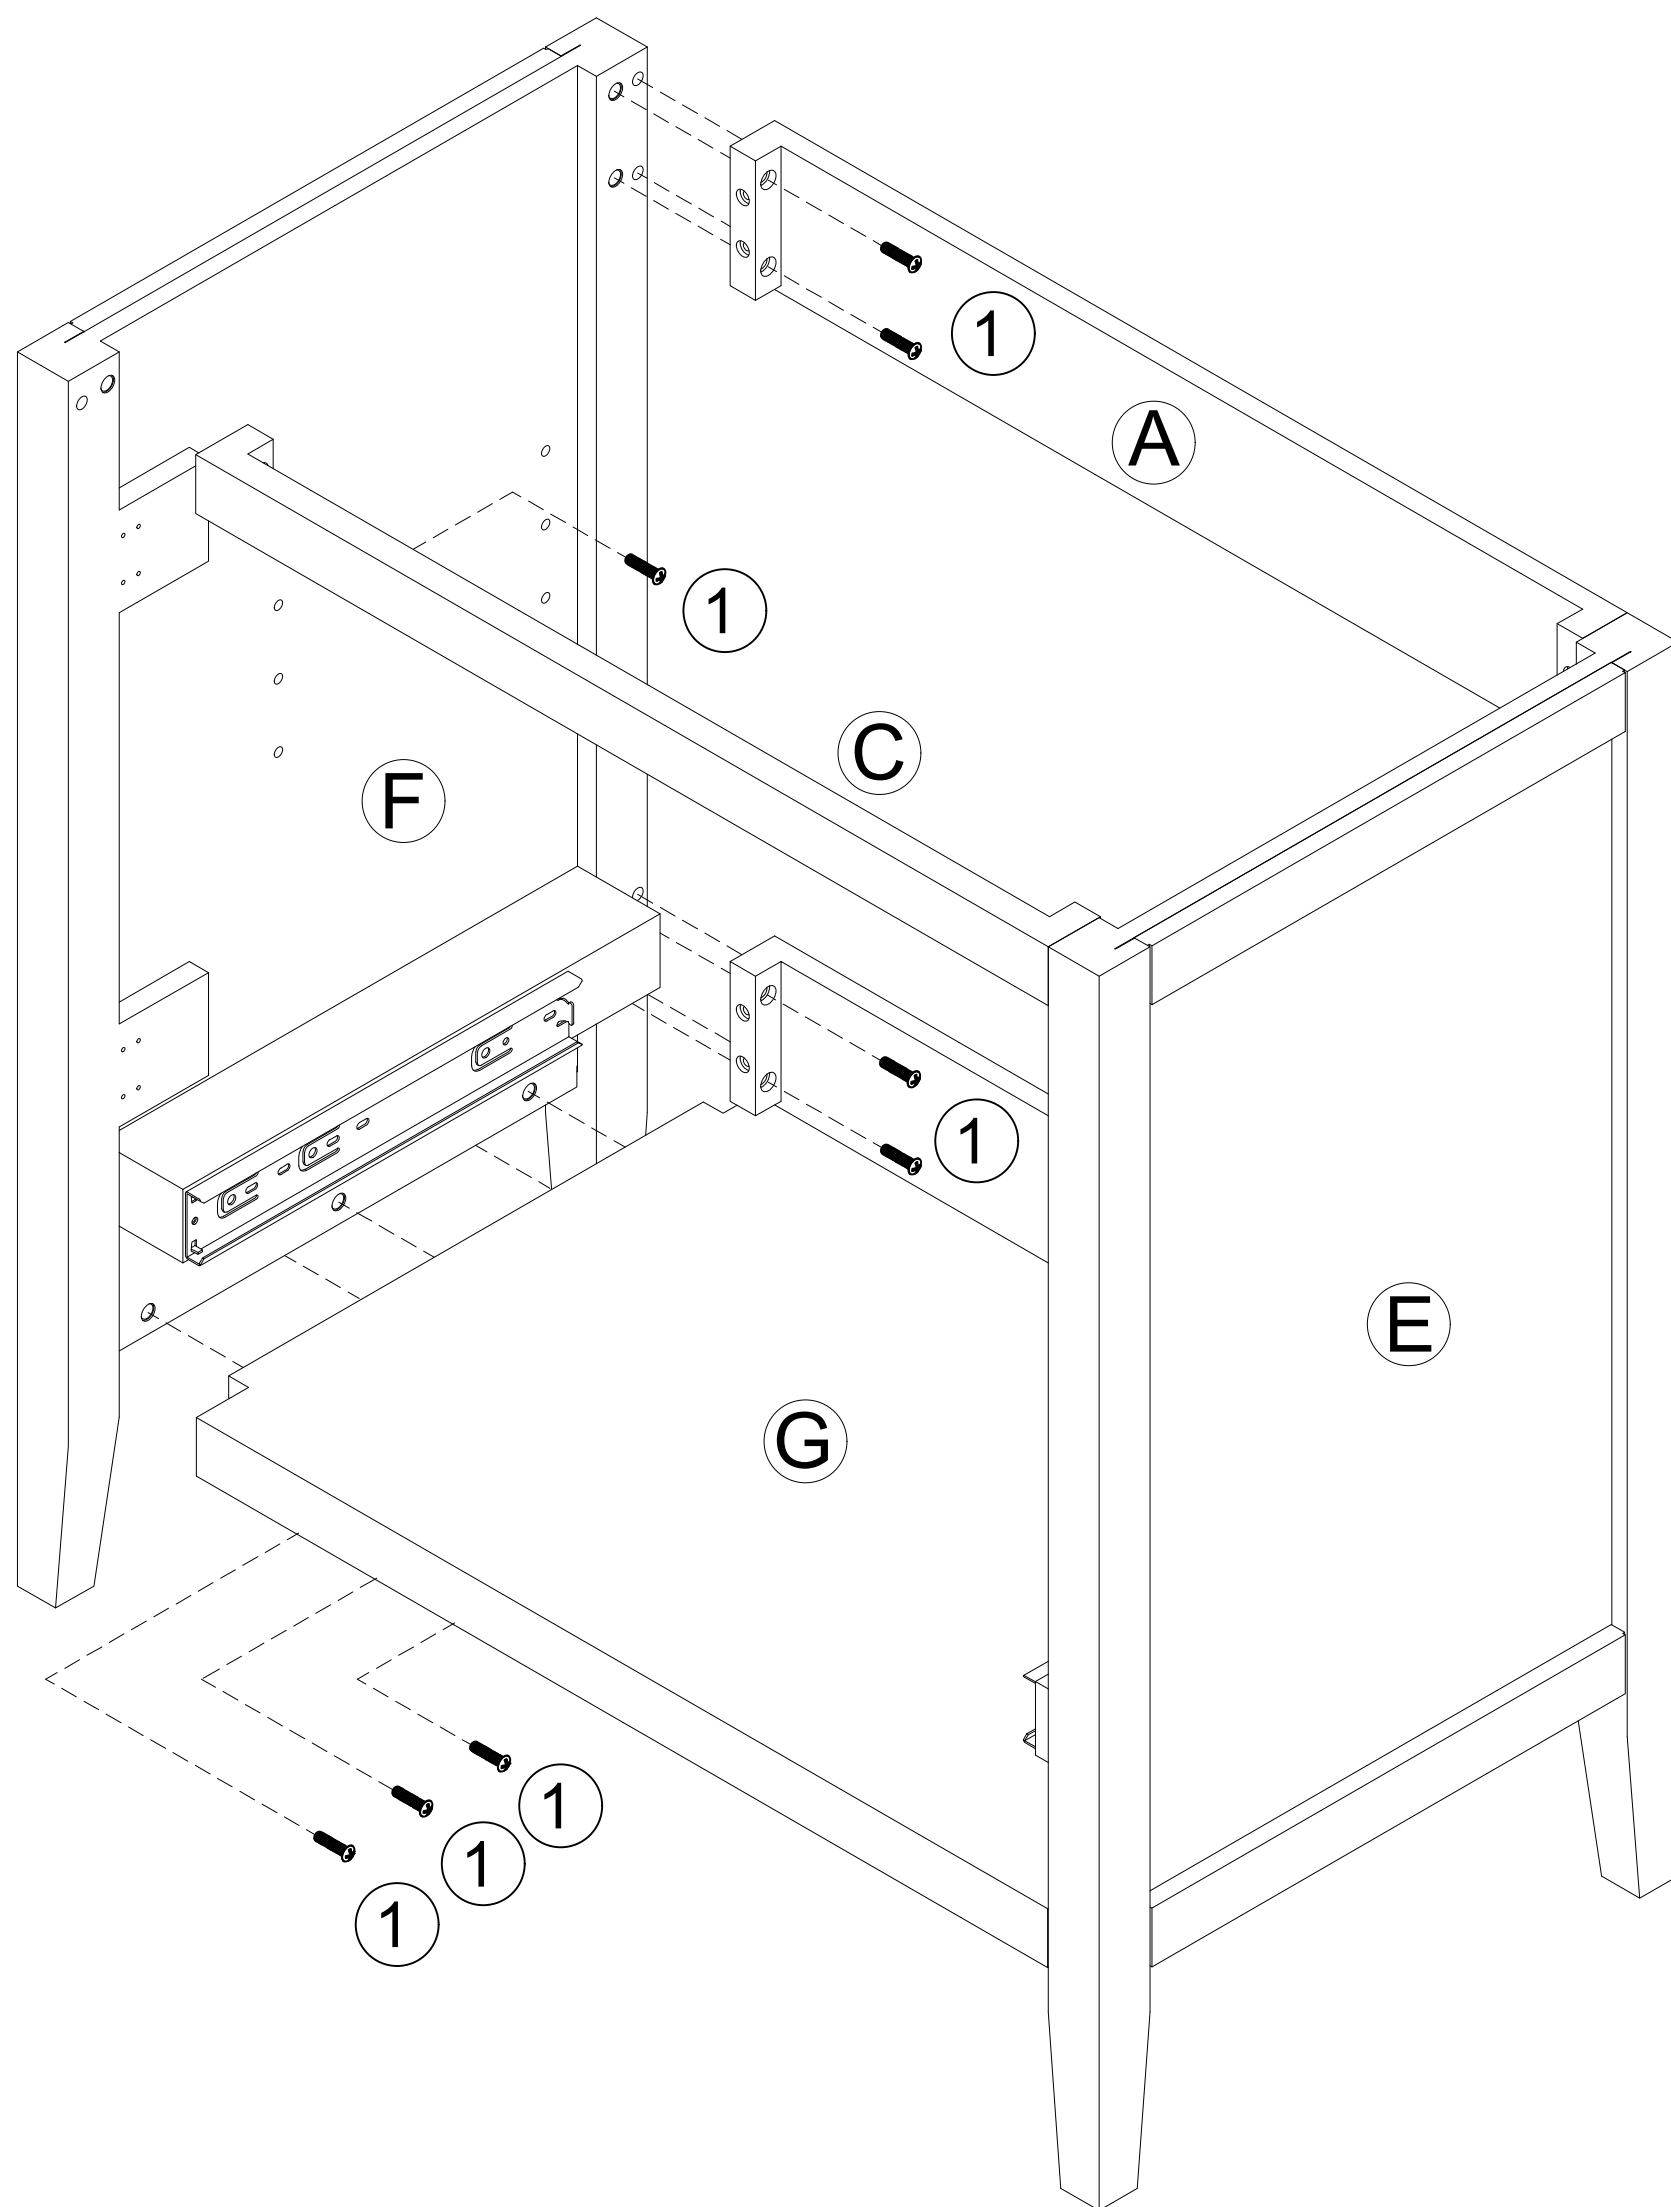


STEP 9

- 3




1pc
Ø4x35mm

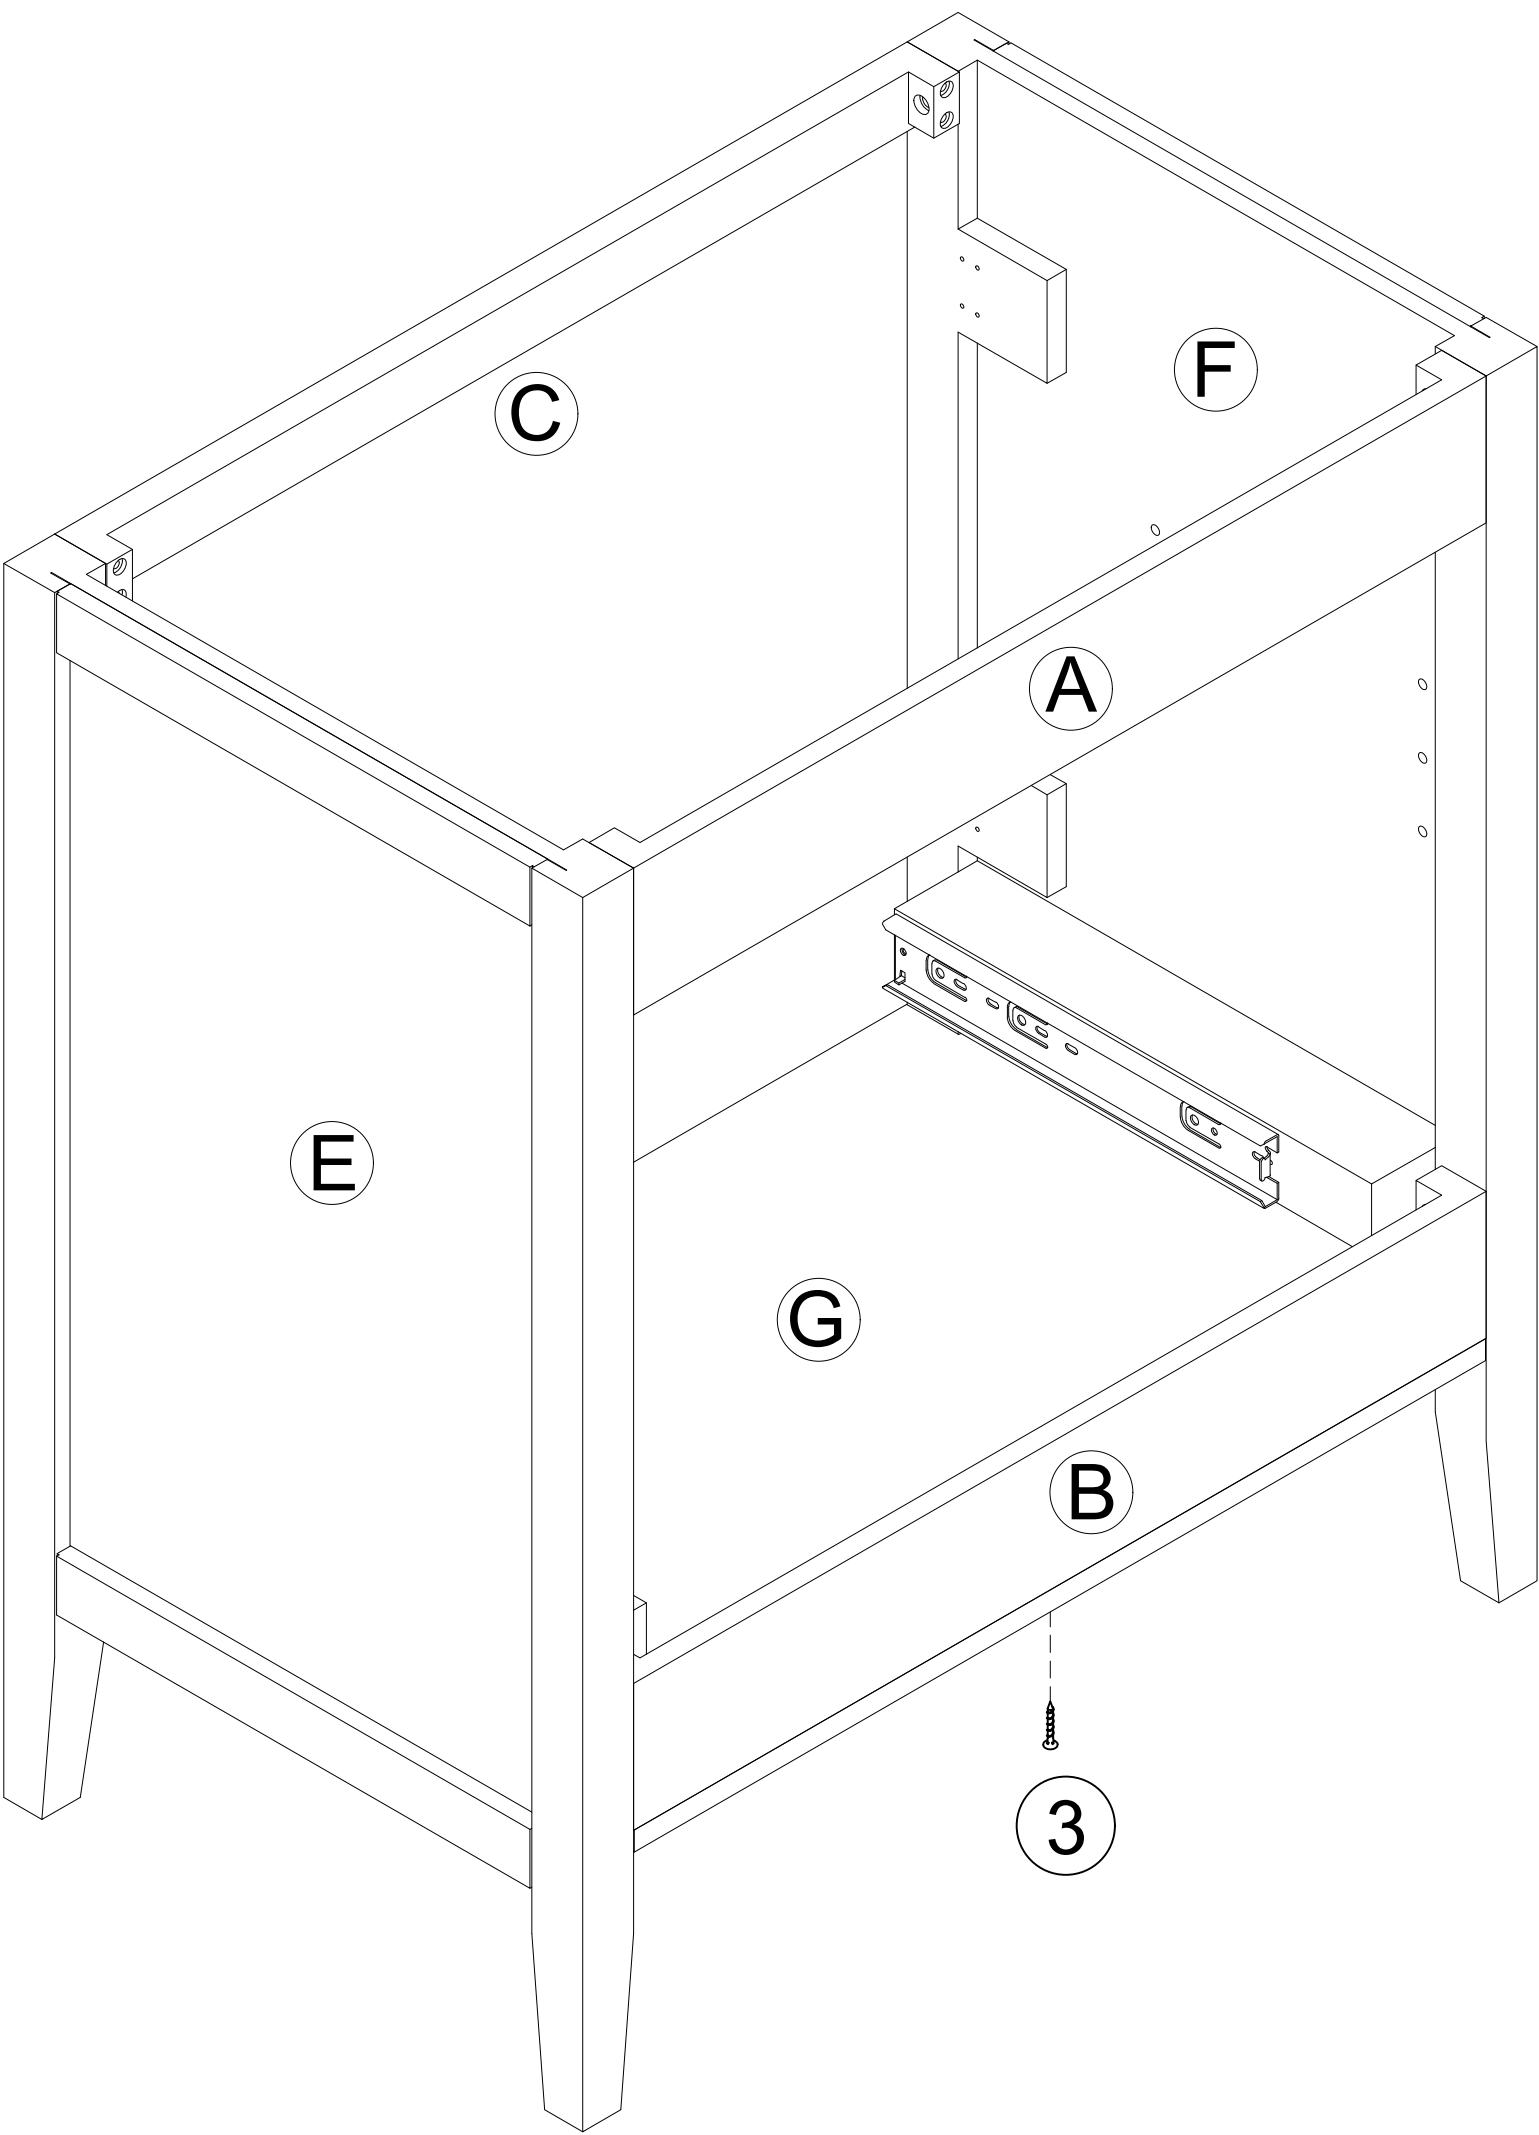


STEP 10



- 9b




2pcs
14"x45mm
- 10




6pcs
Ø3x10mm

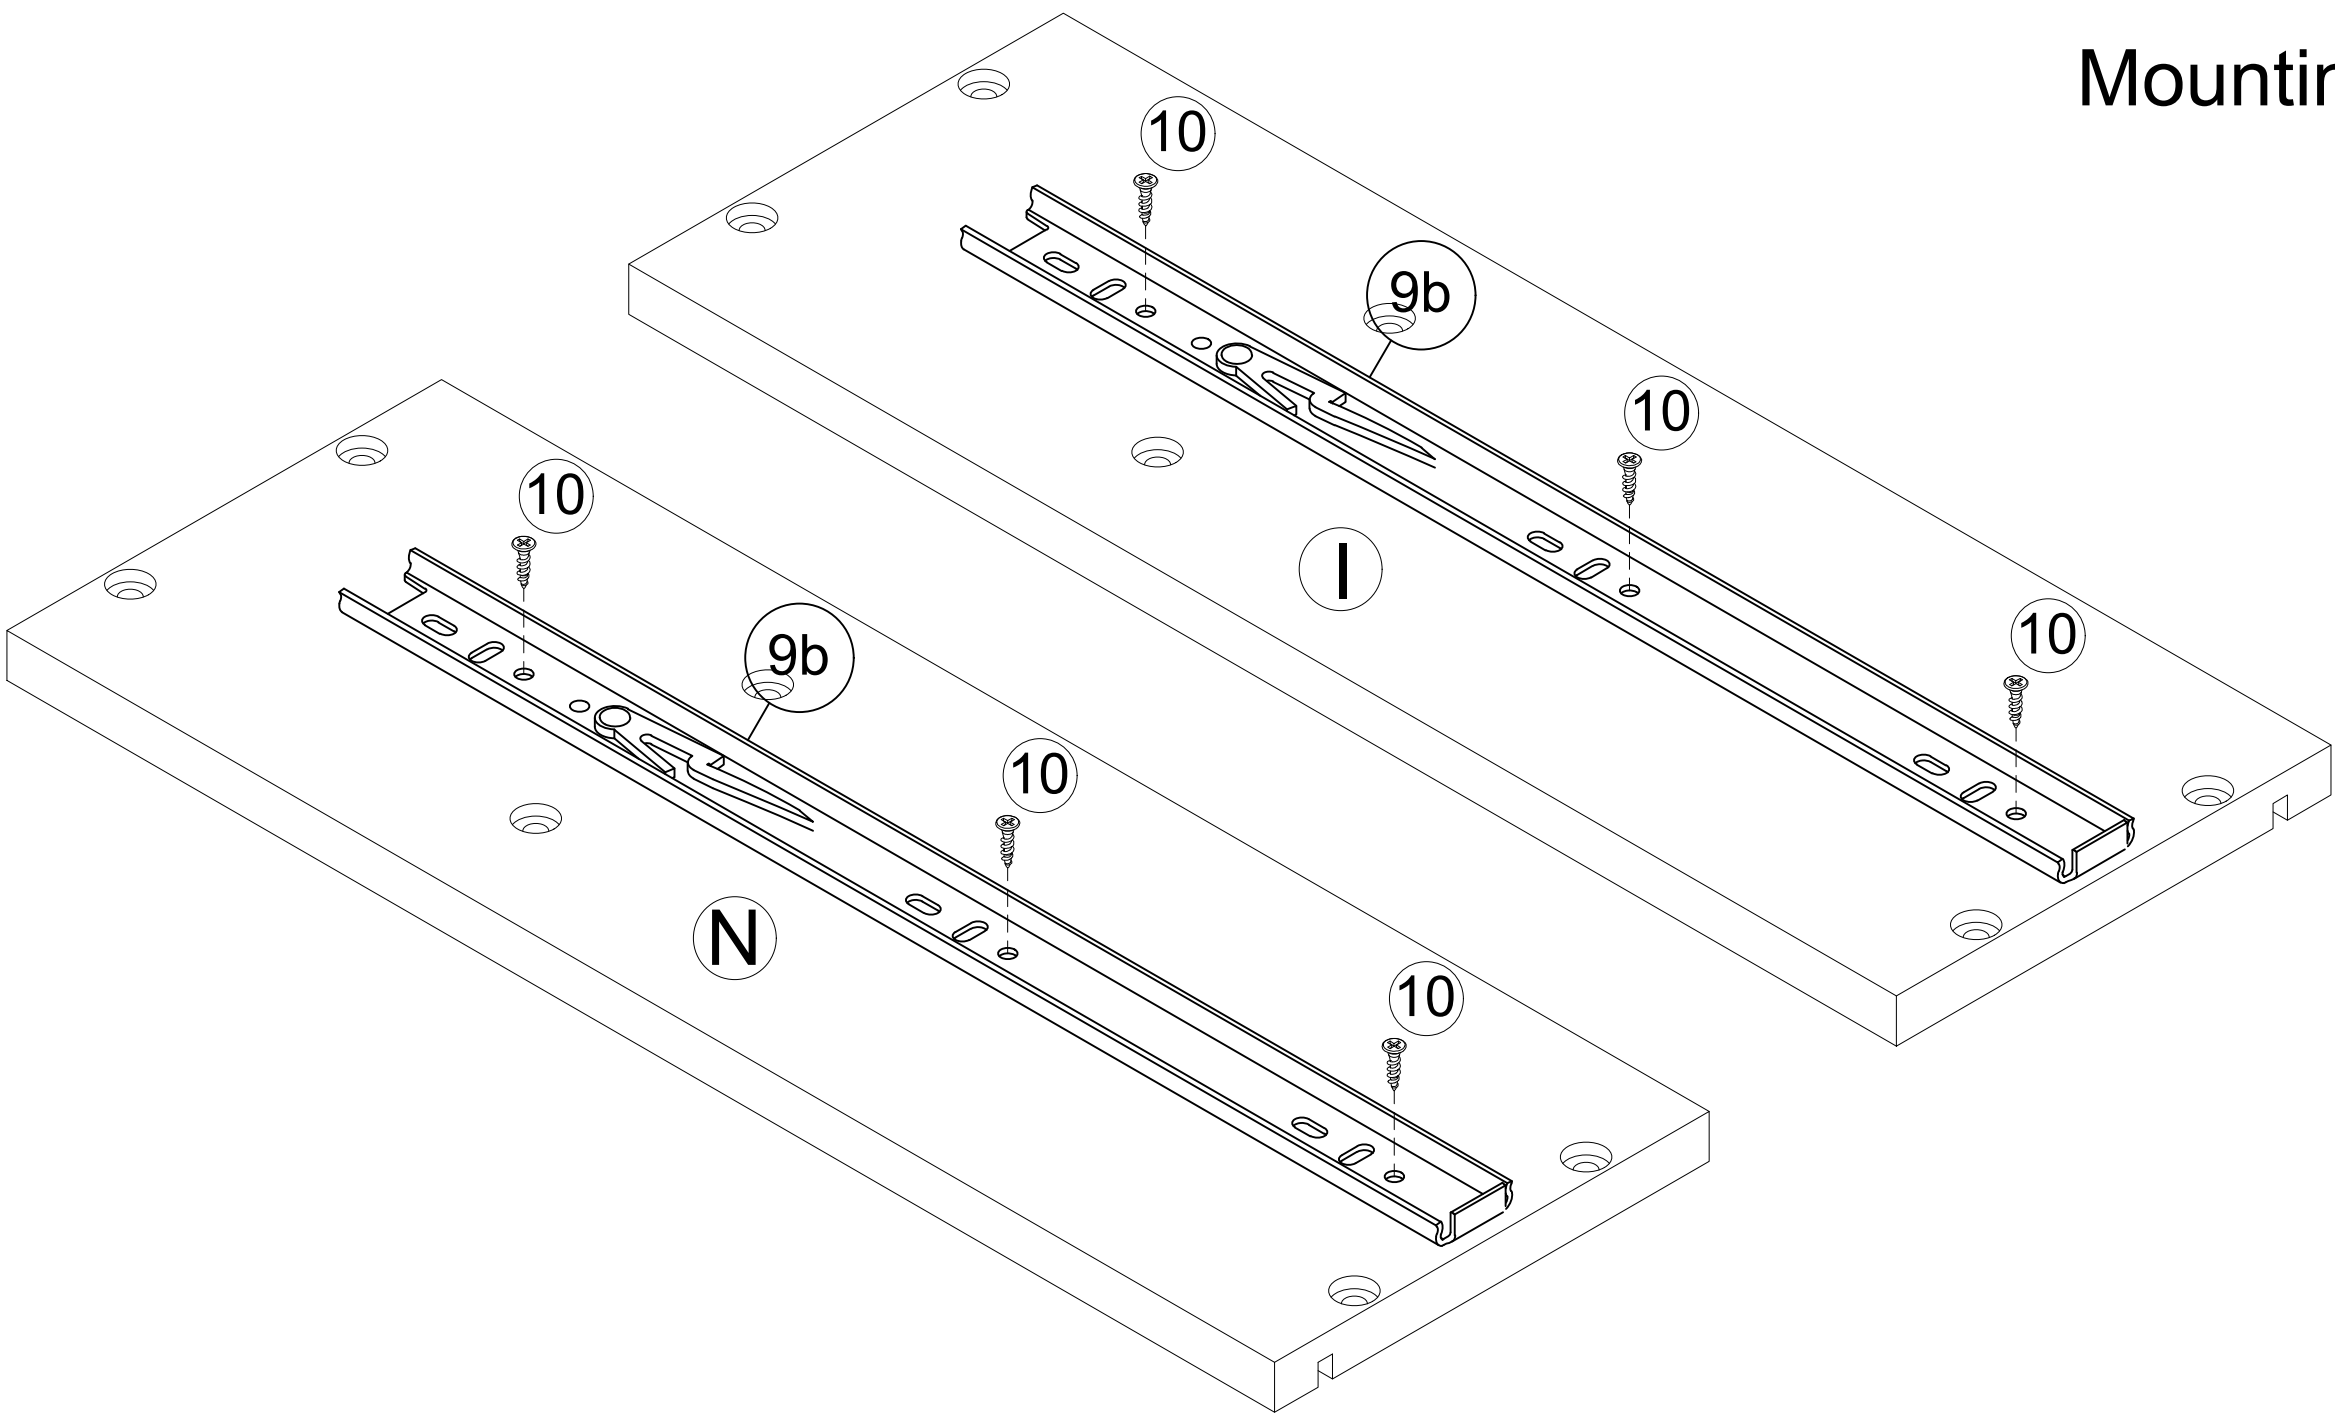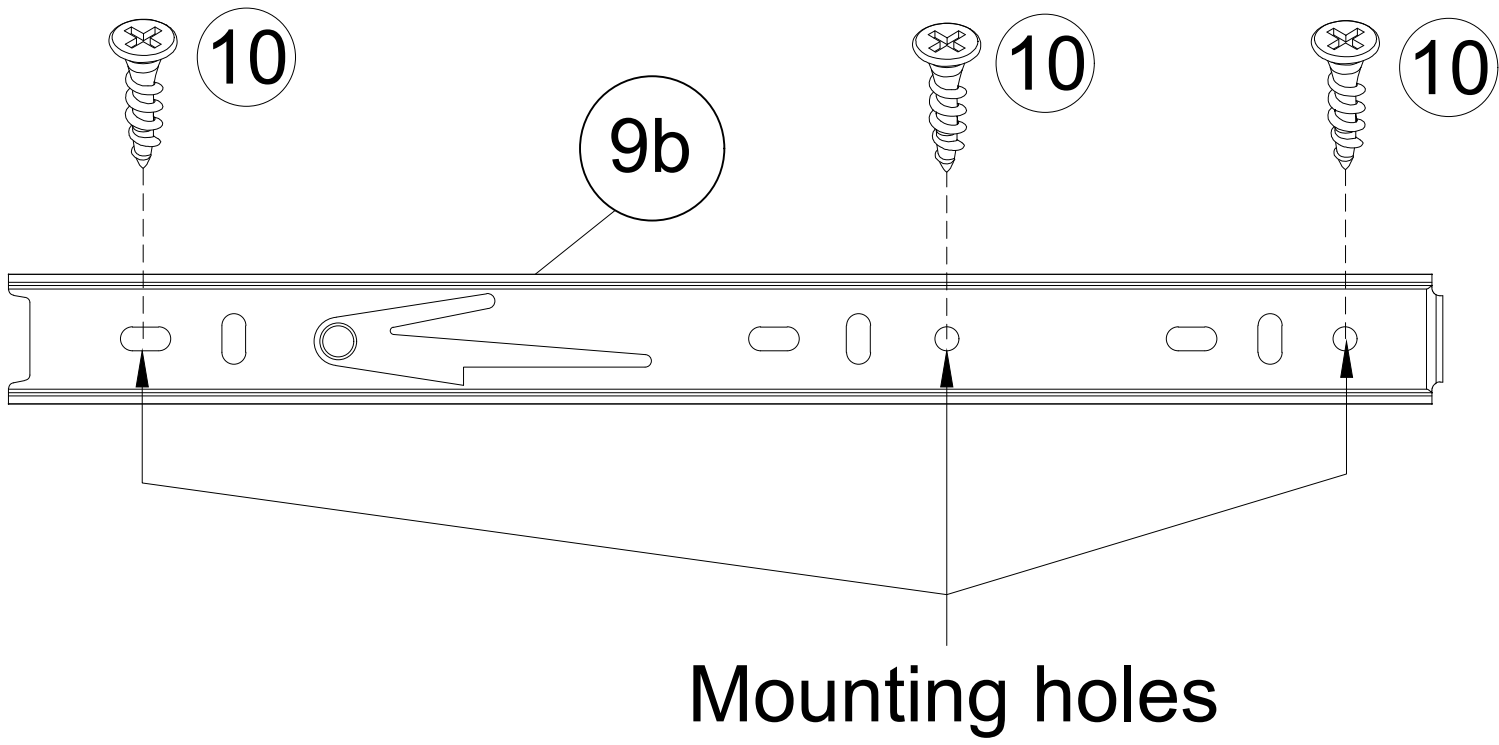


STEP 11


2  6pcs
Ø4x25mm

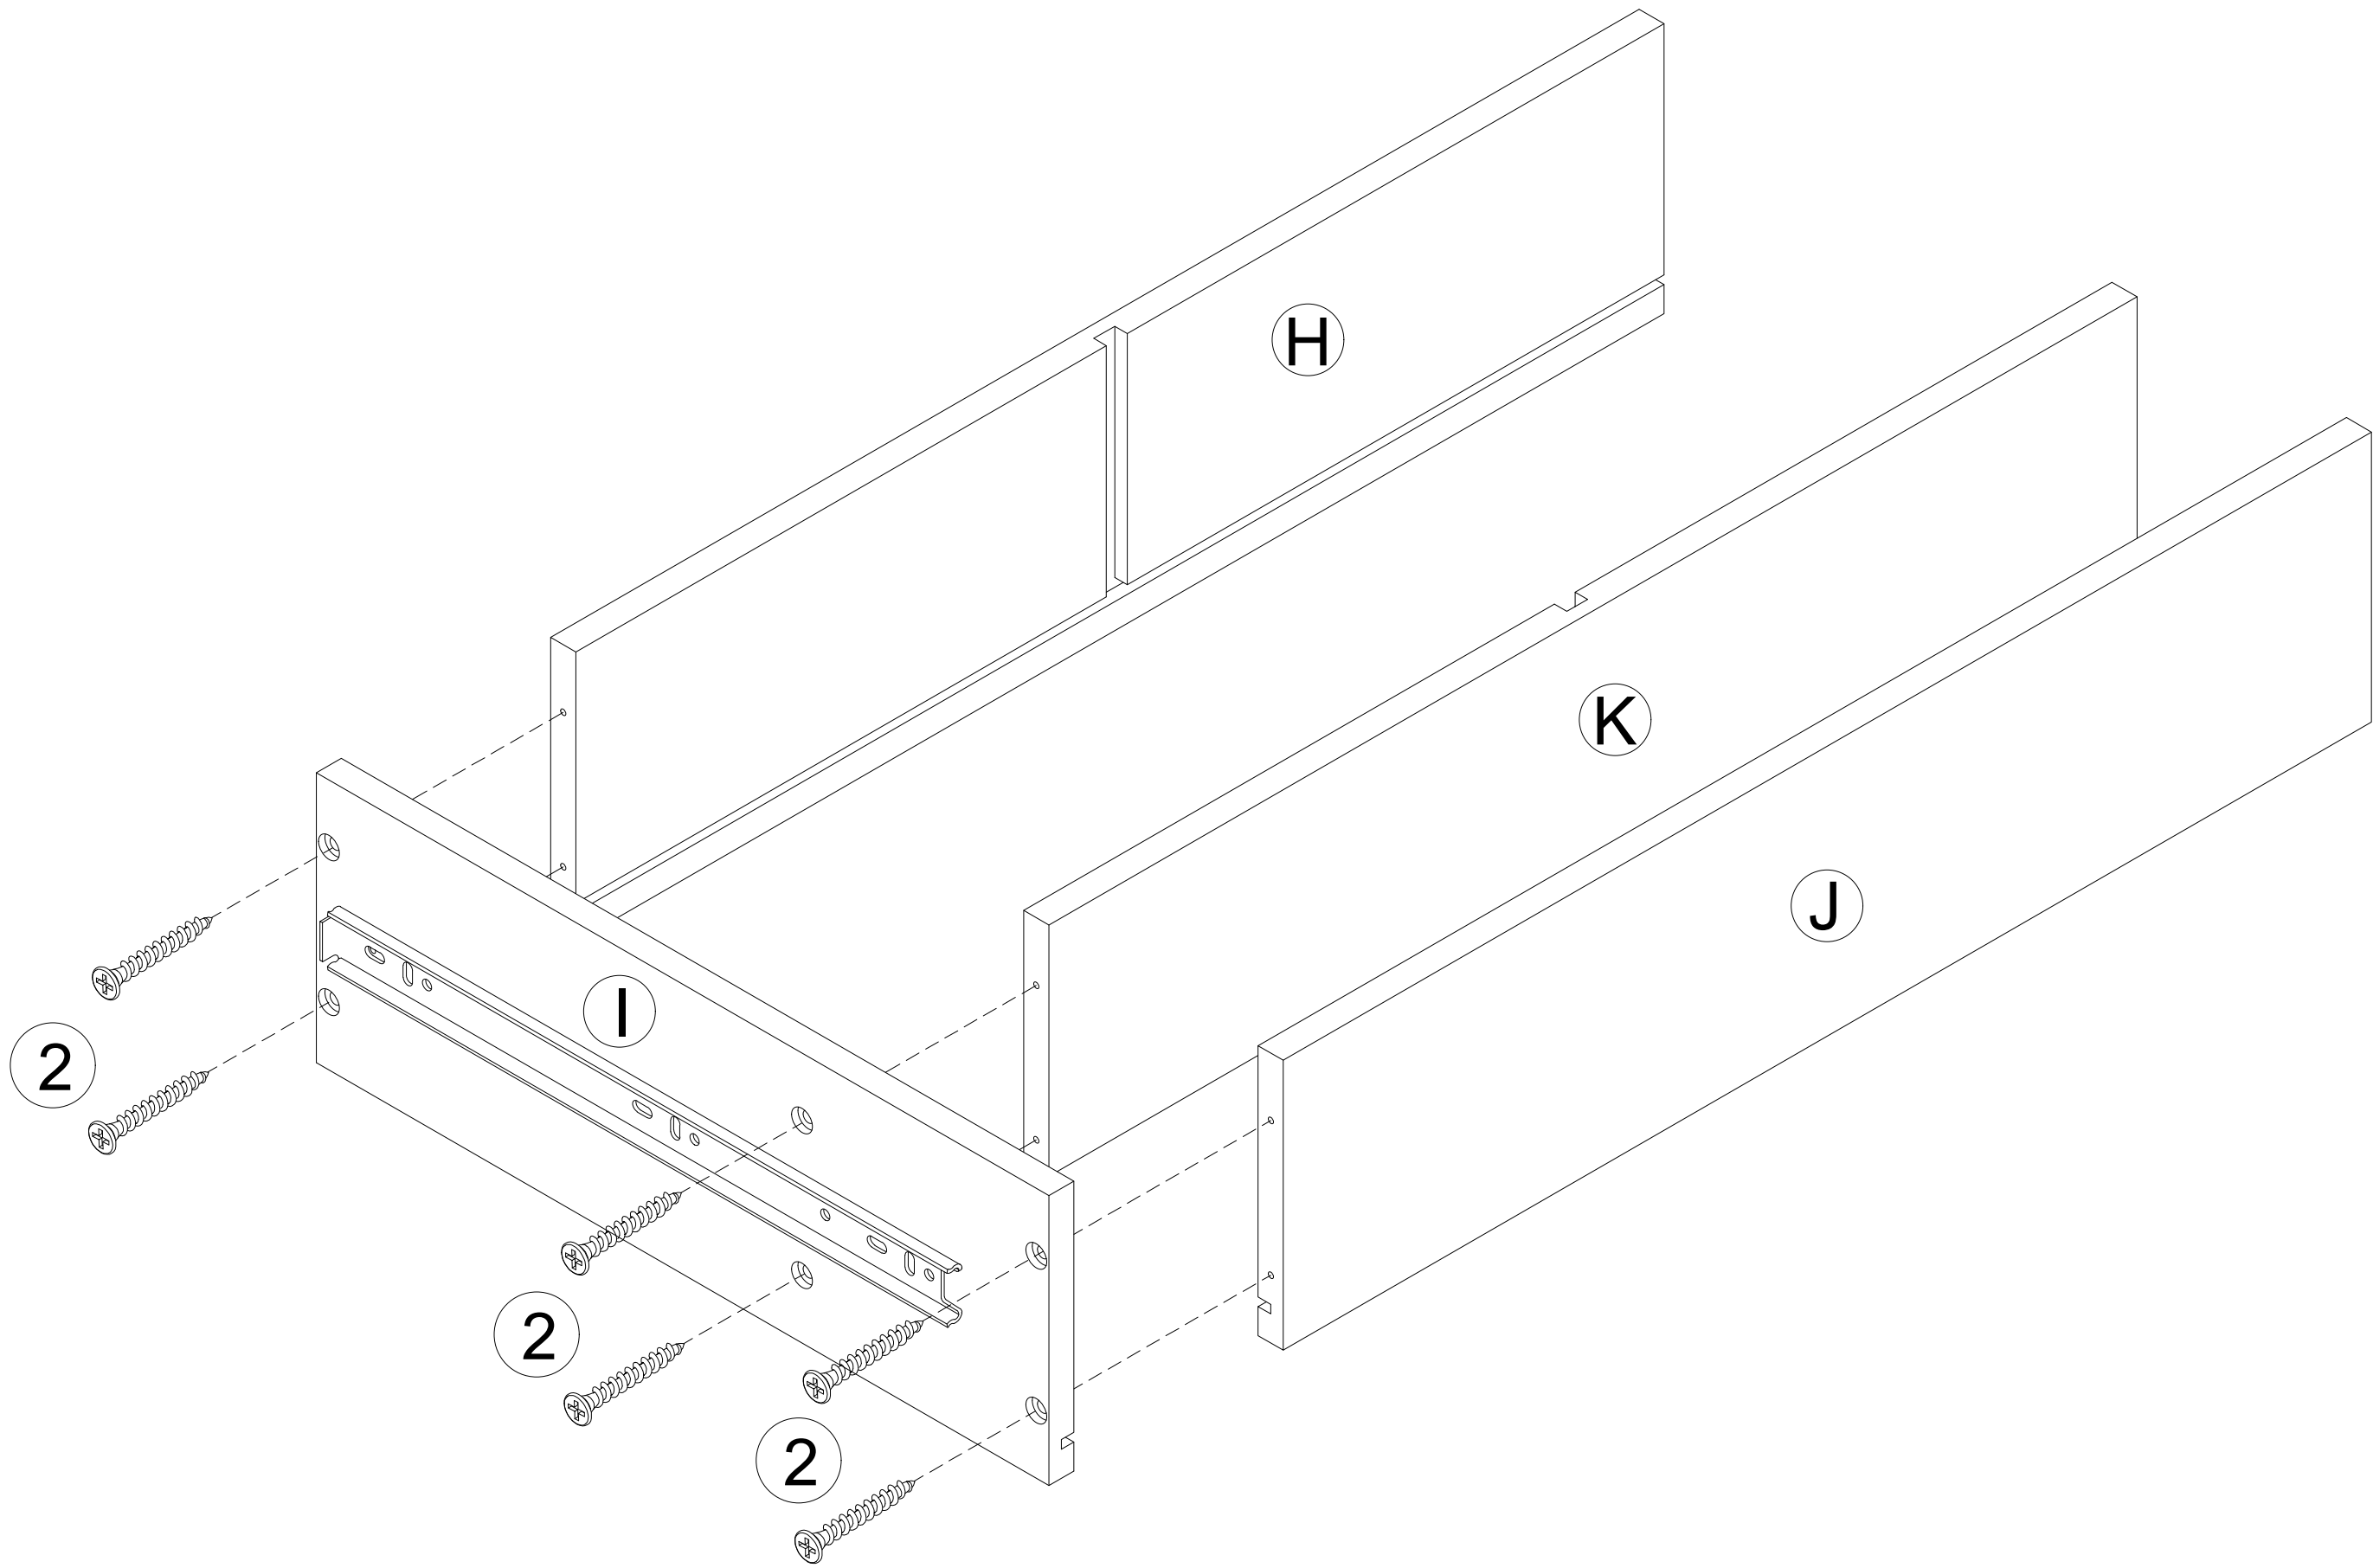


STEP 12

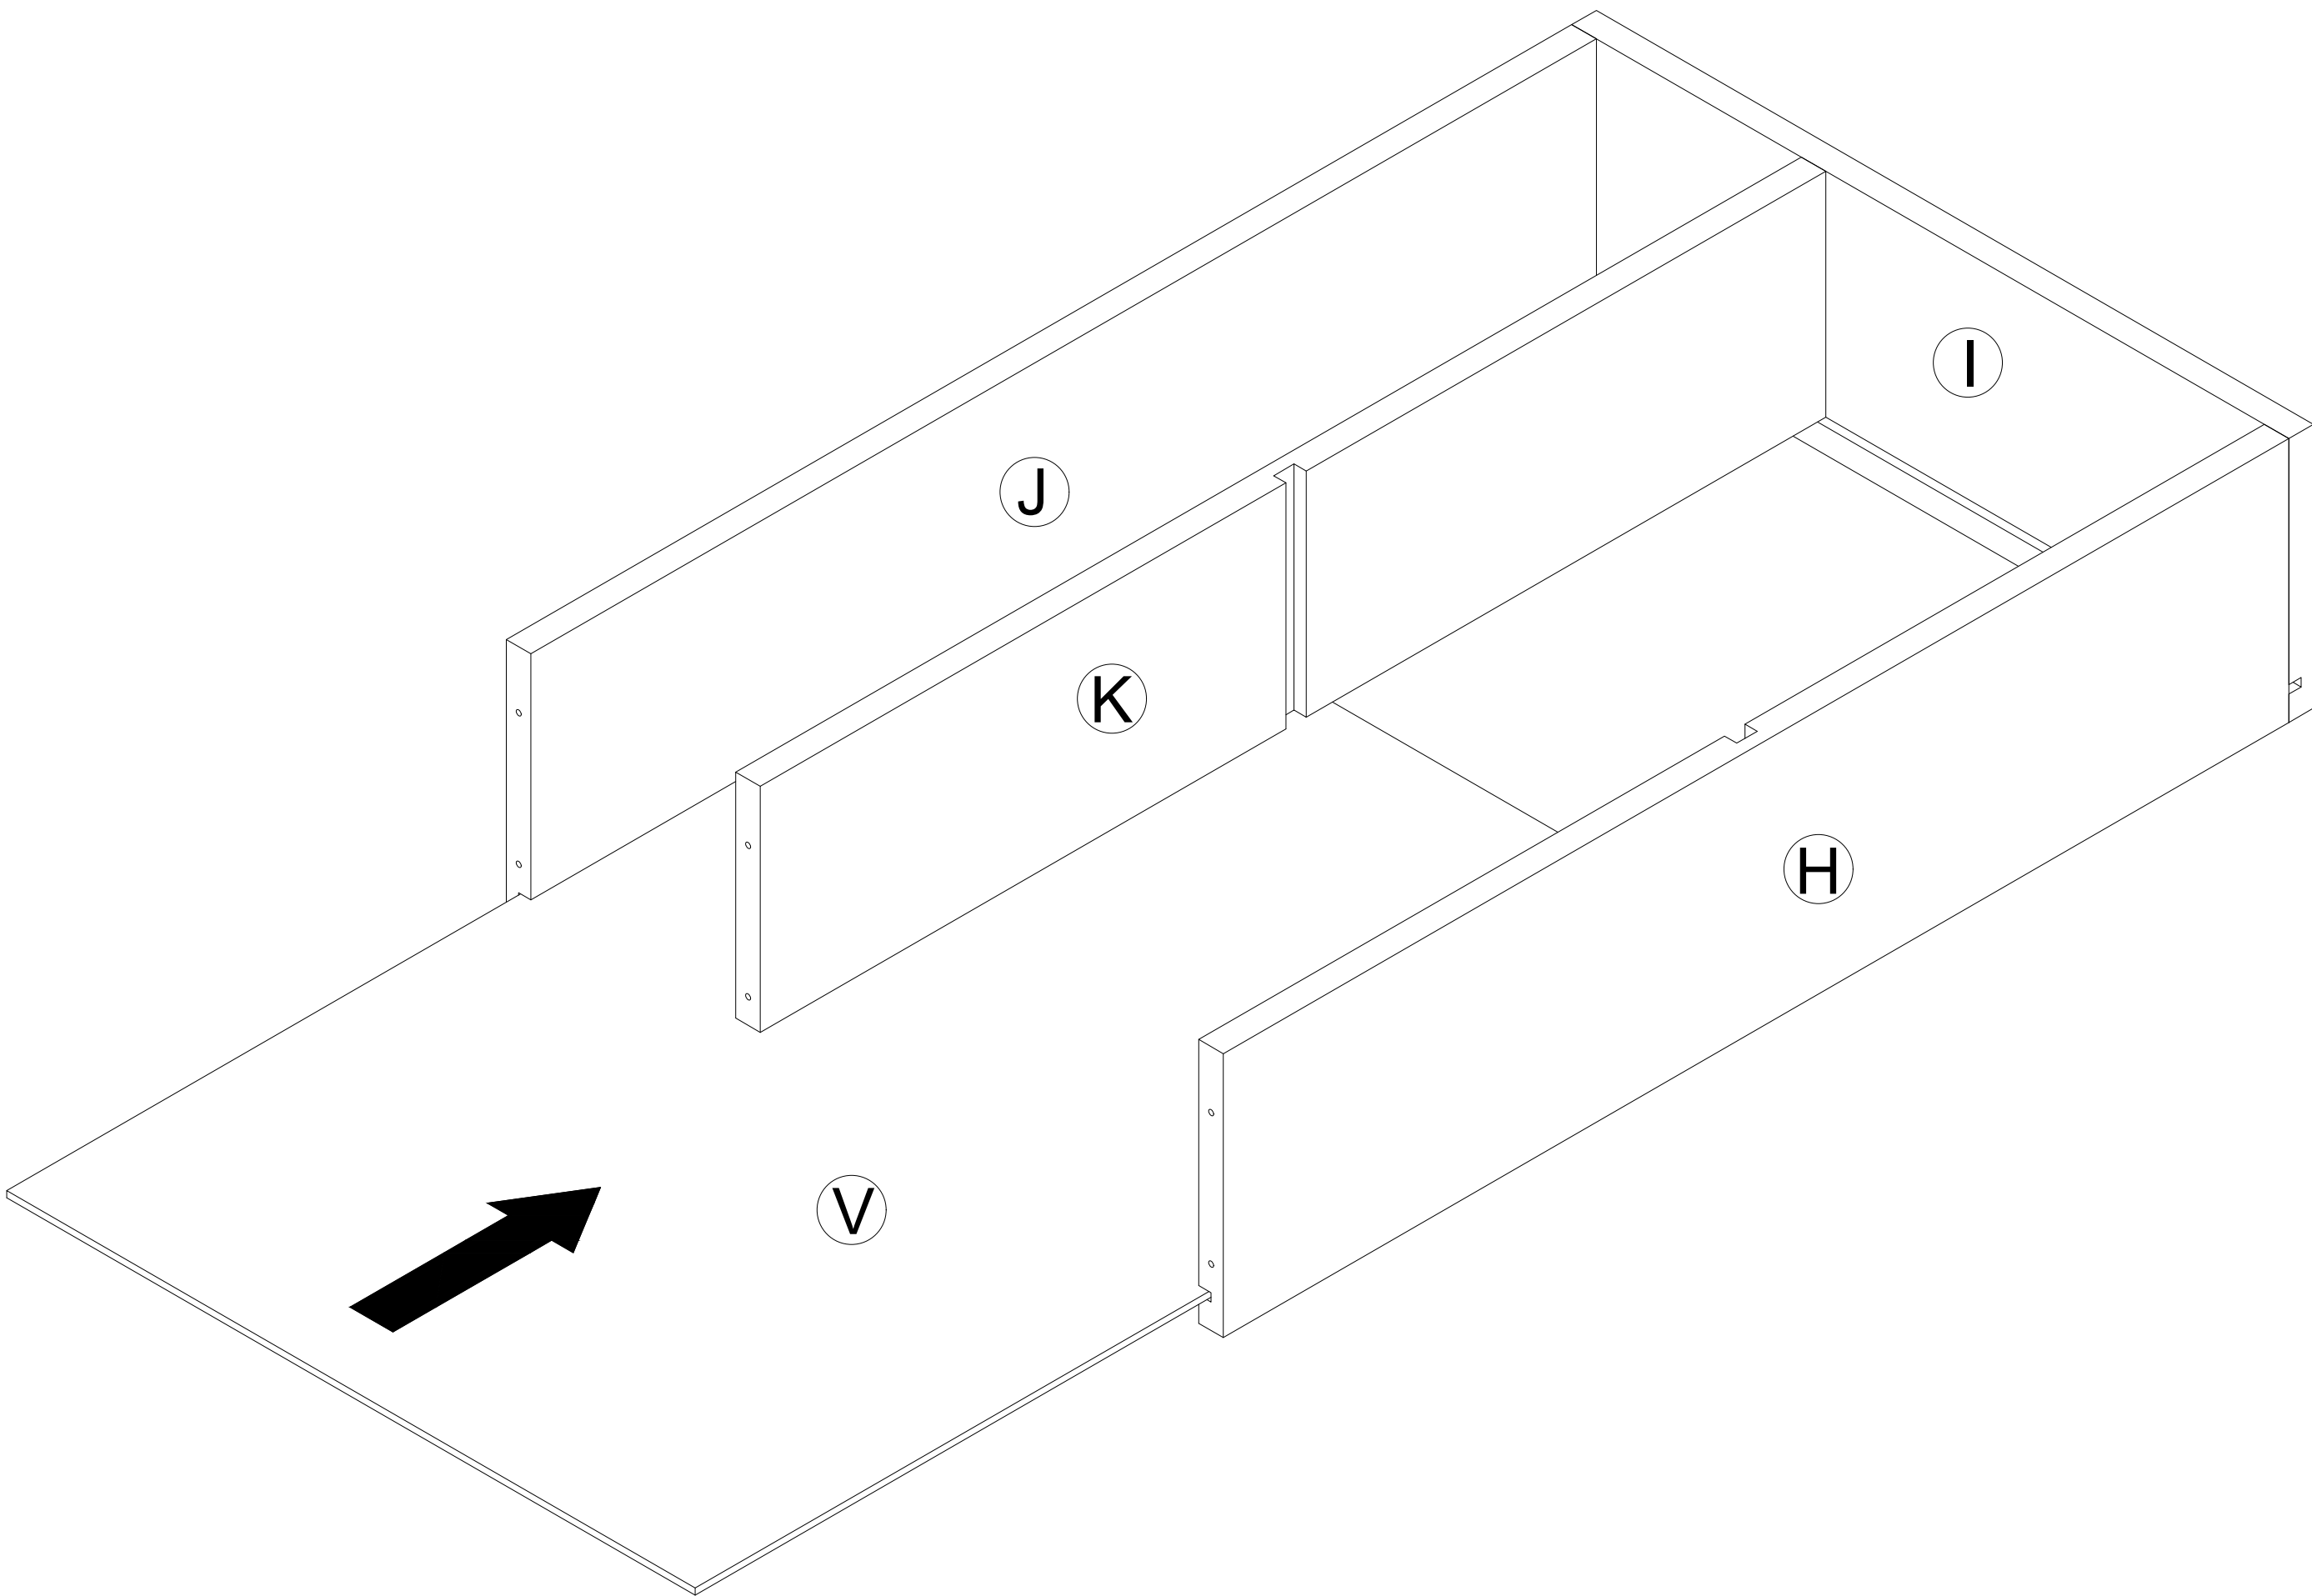


STEP 13





2  6pcs
Ø4x25mm

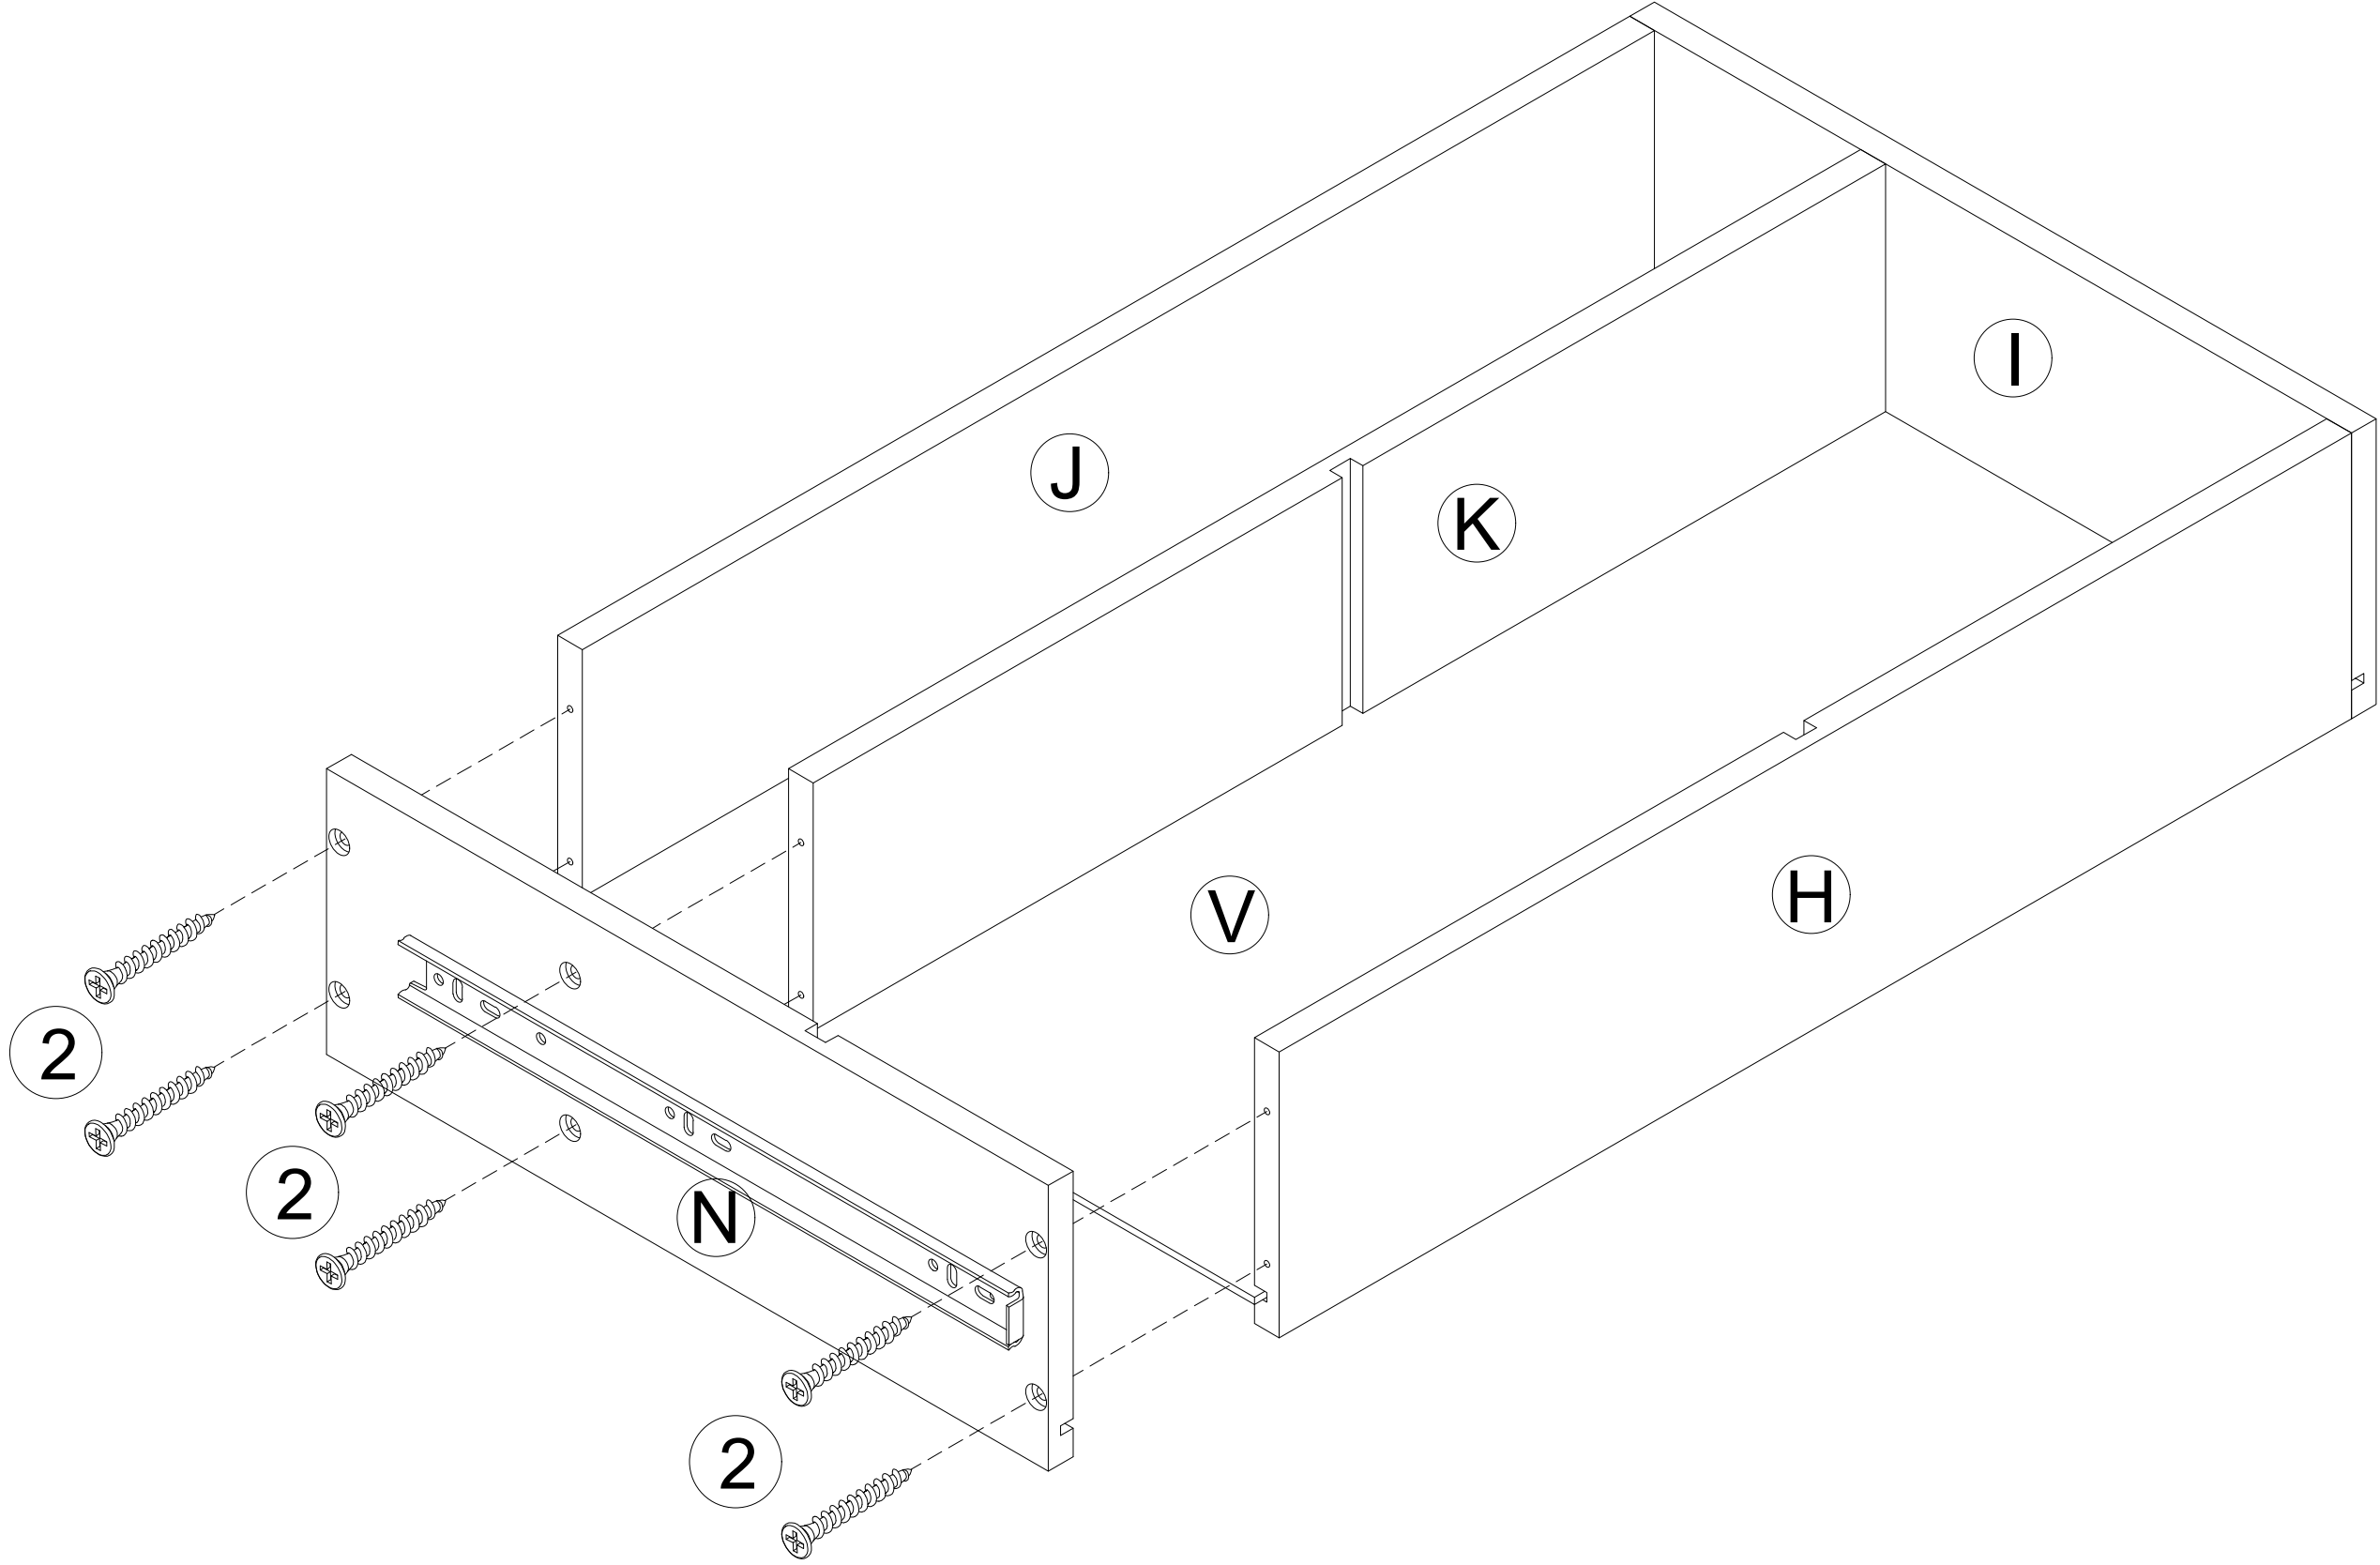

STEP 14

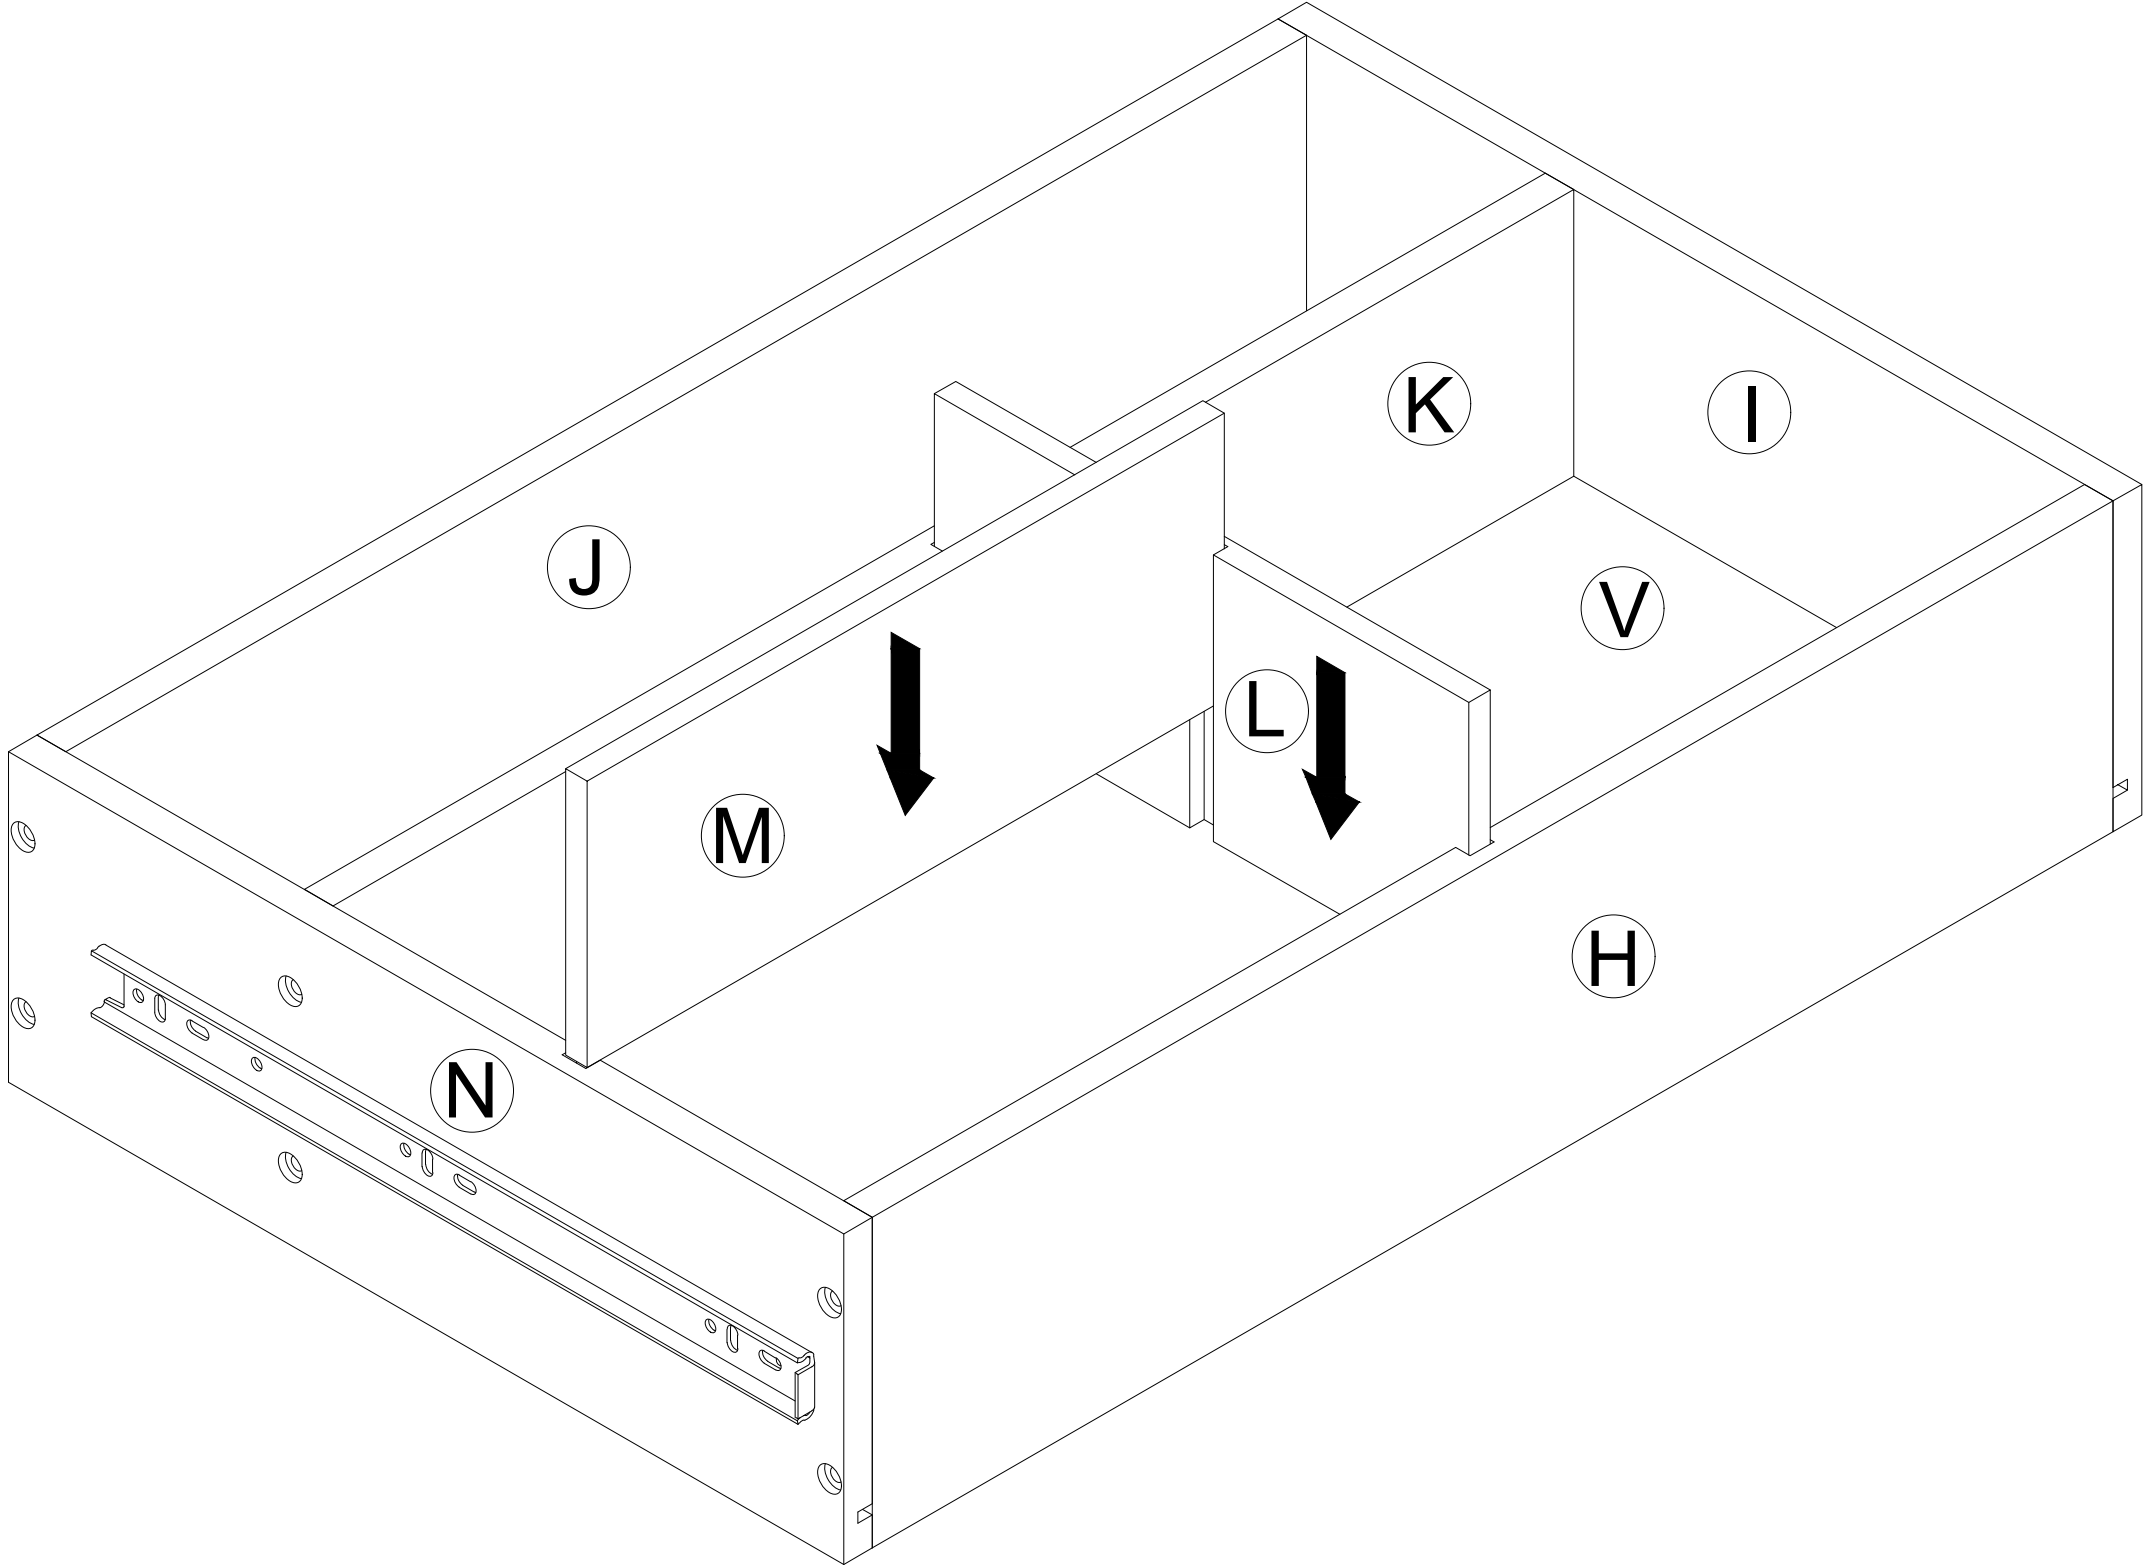





STEP 15

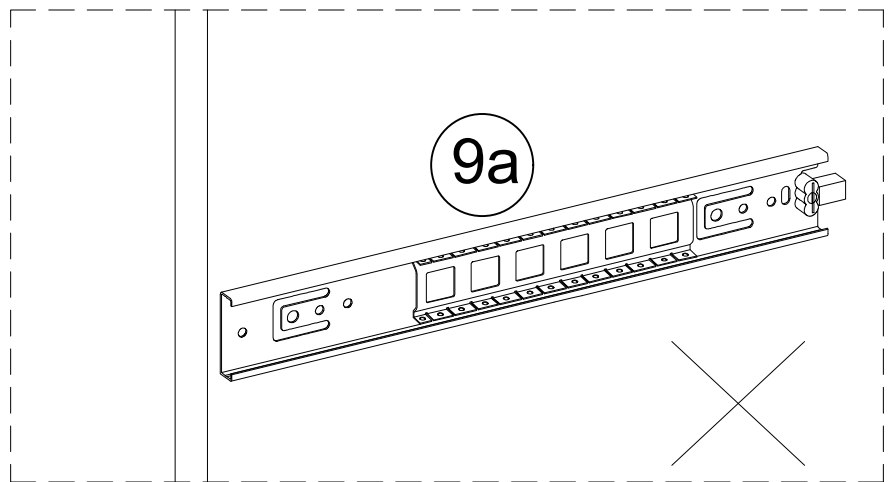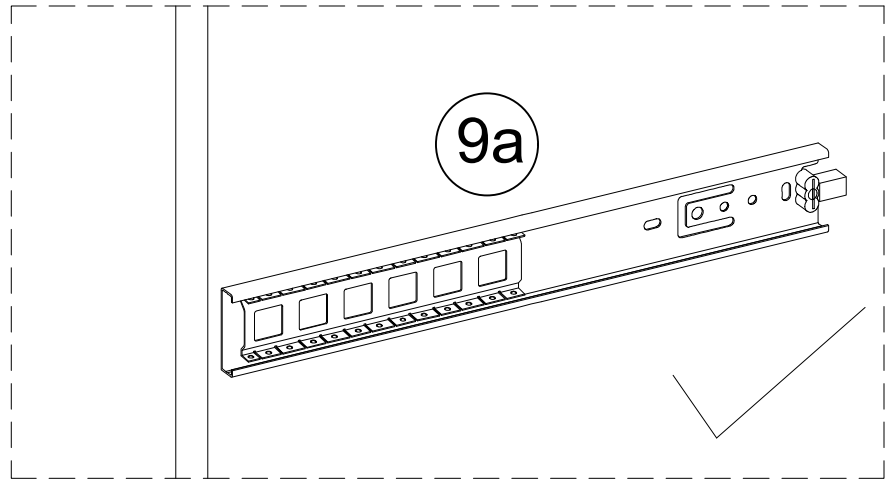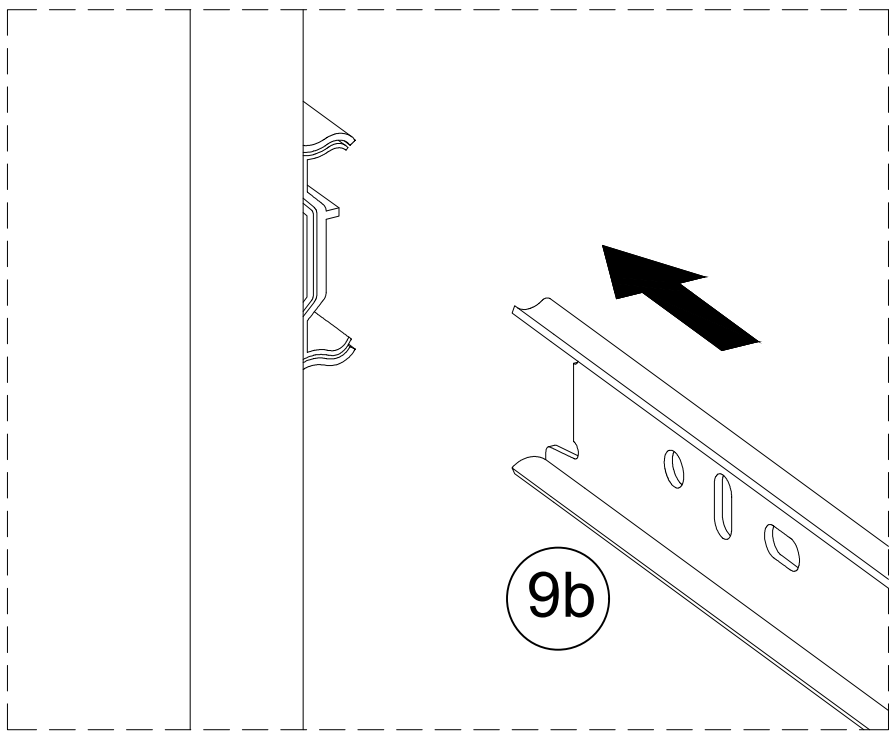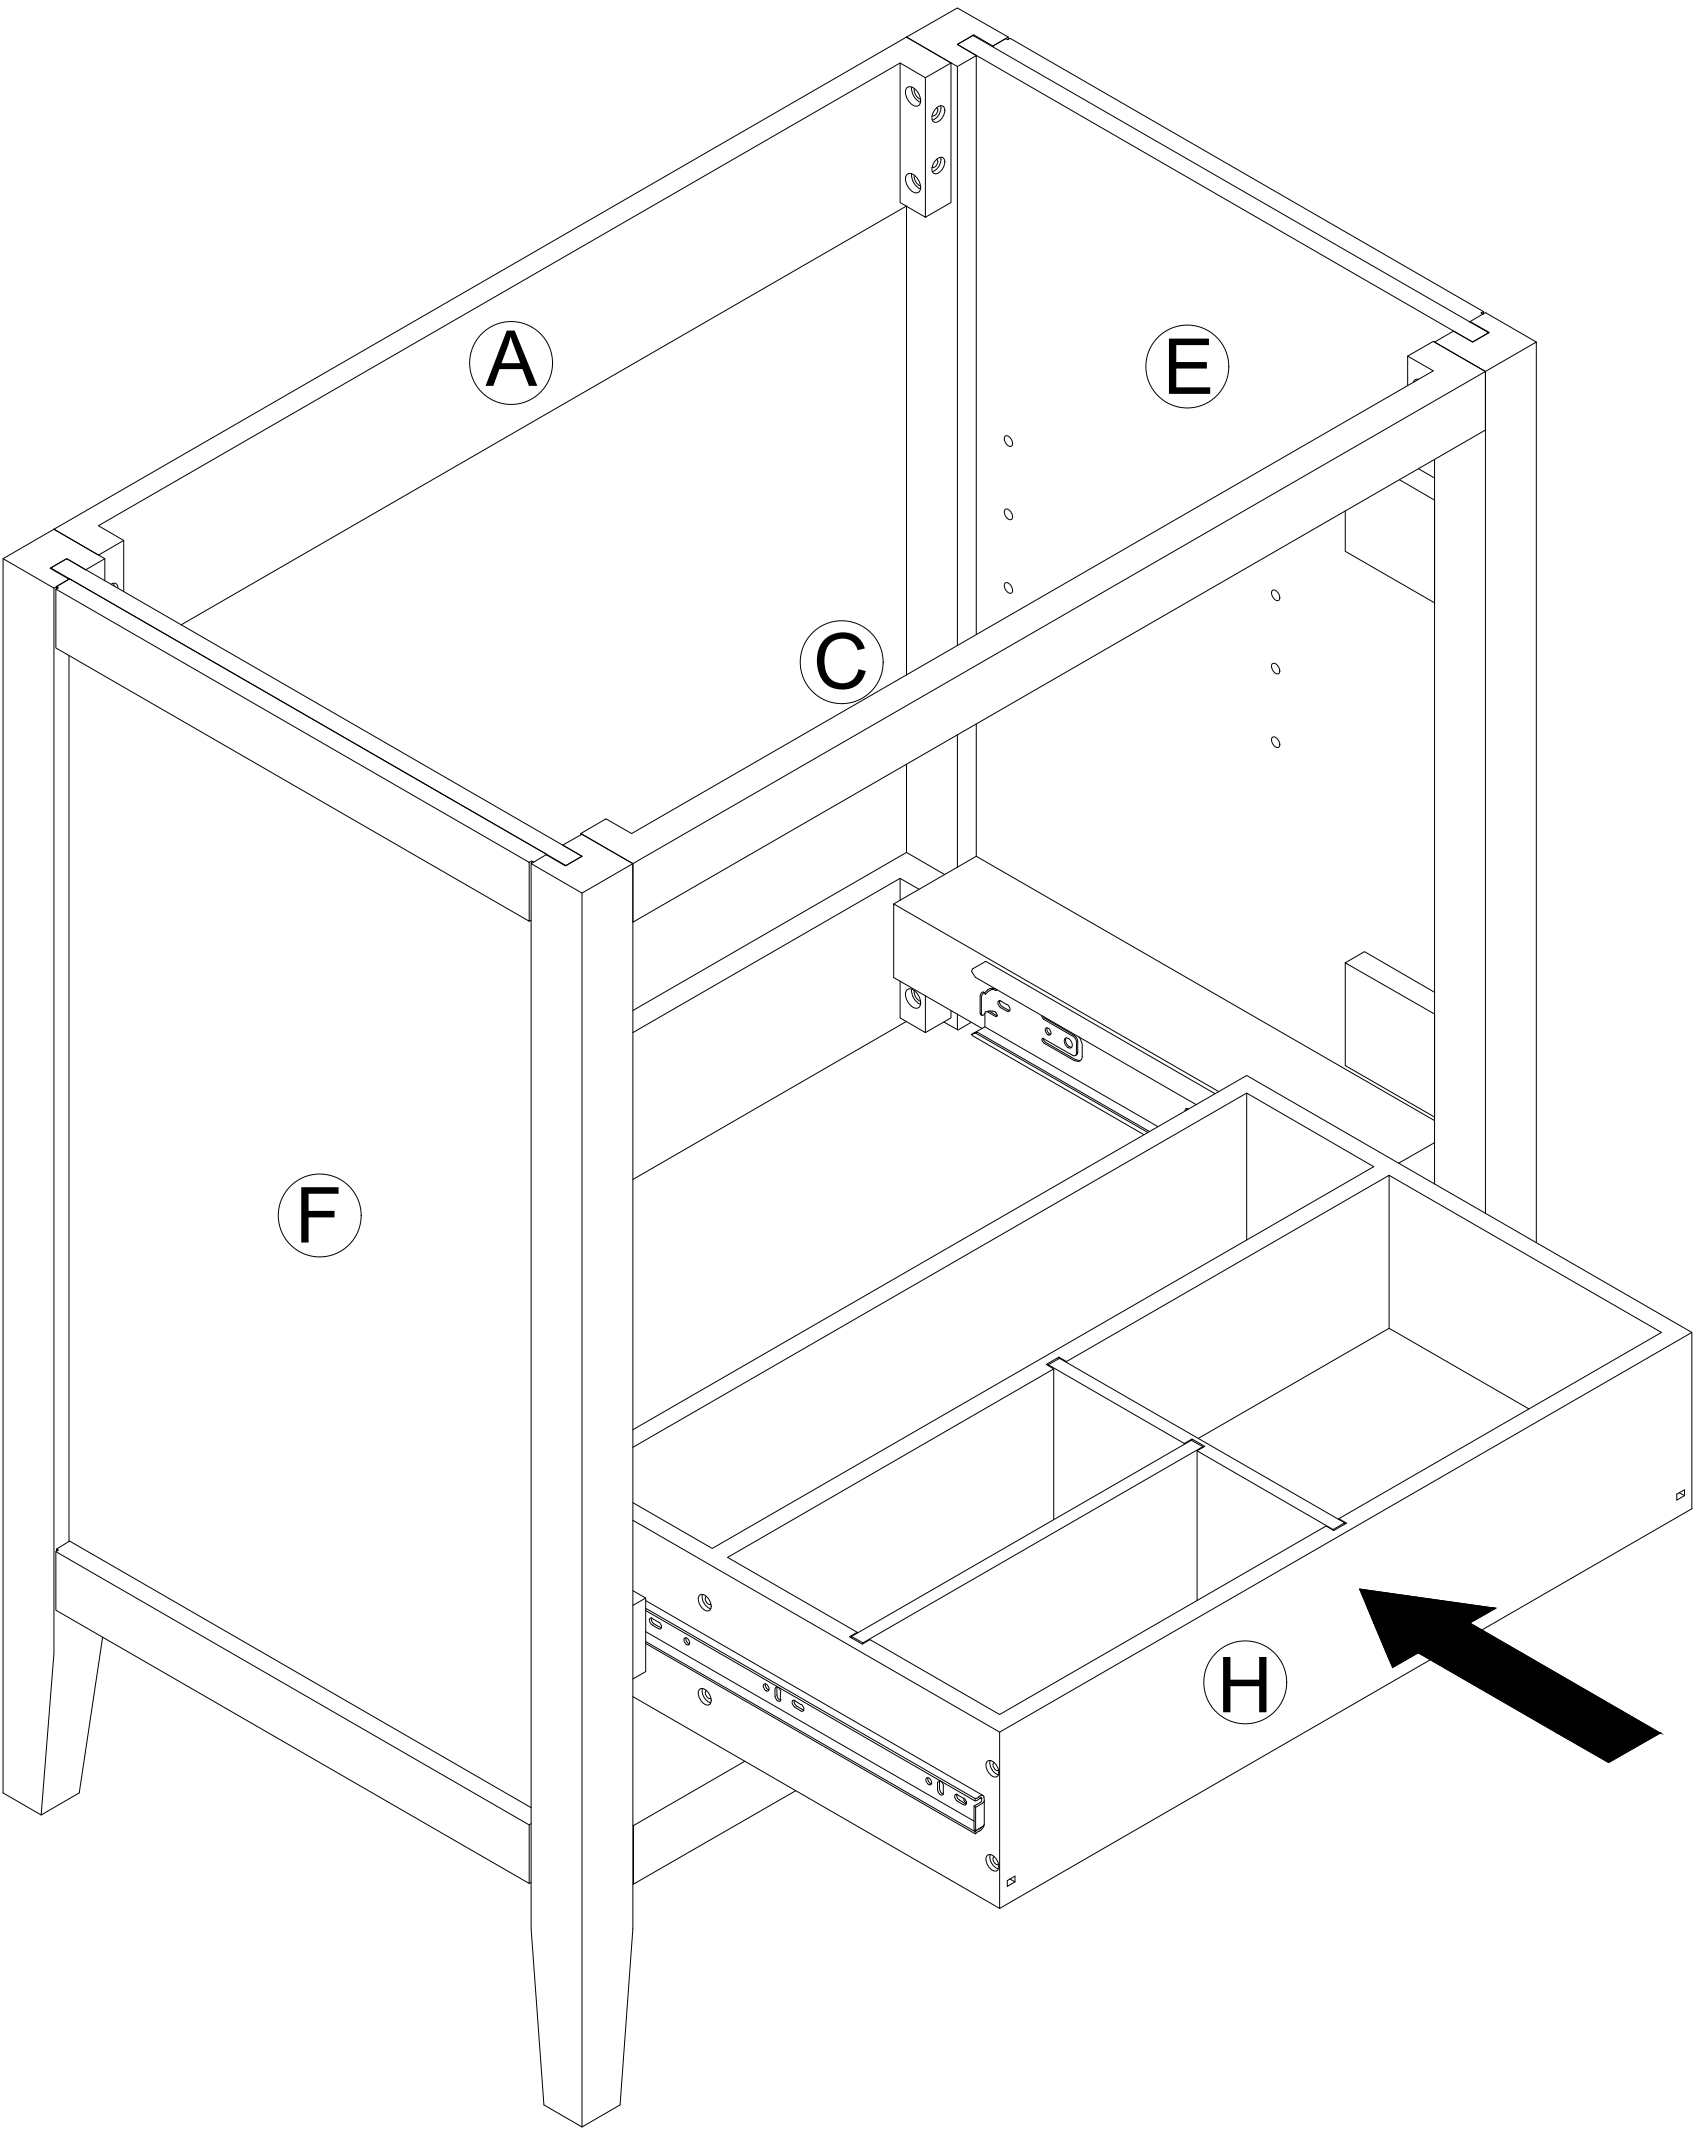

STEP 16


4  8pcs
Ø6x30mm

11  16pcs
Ø6x33mm

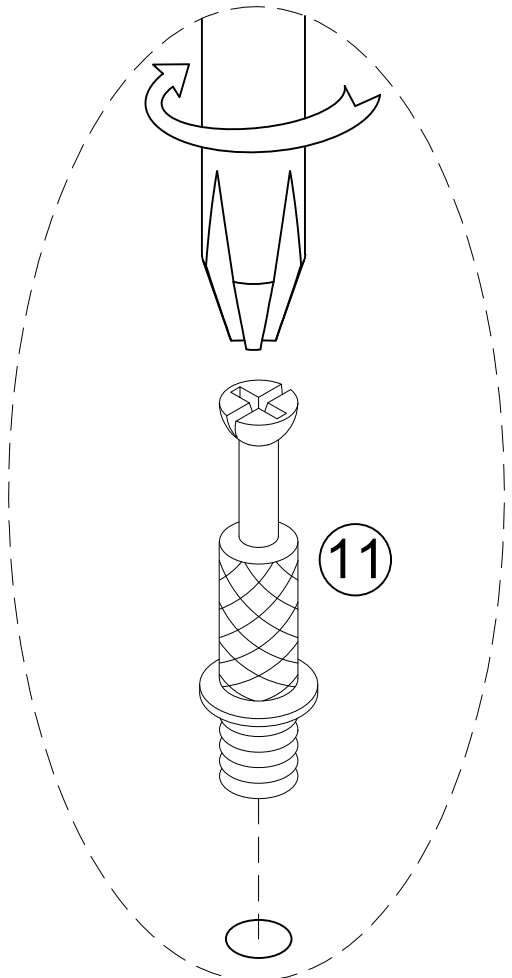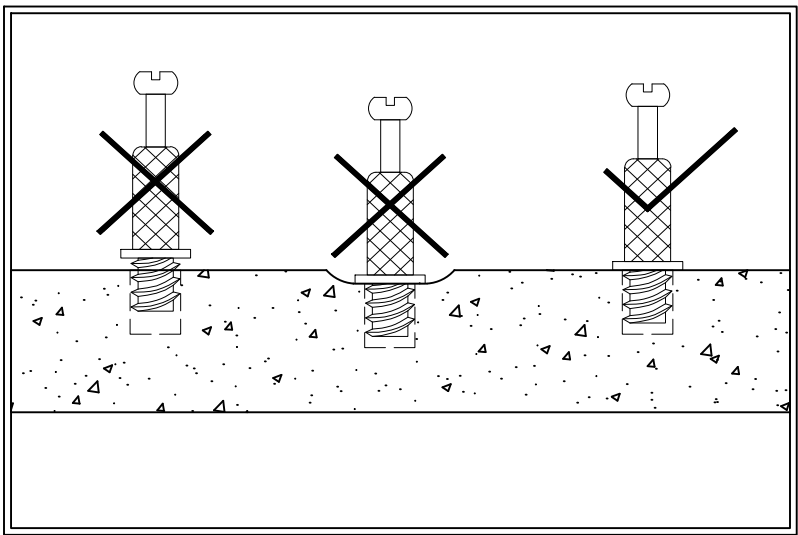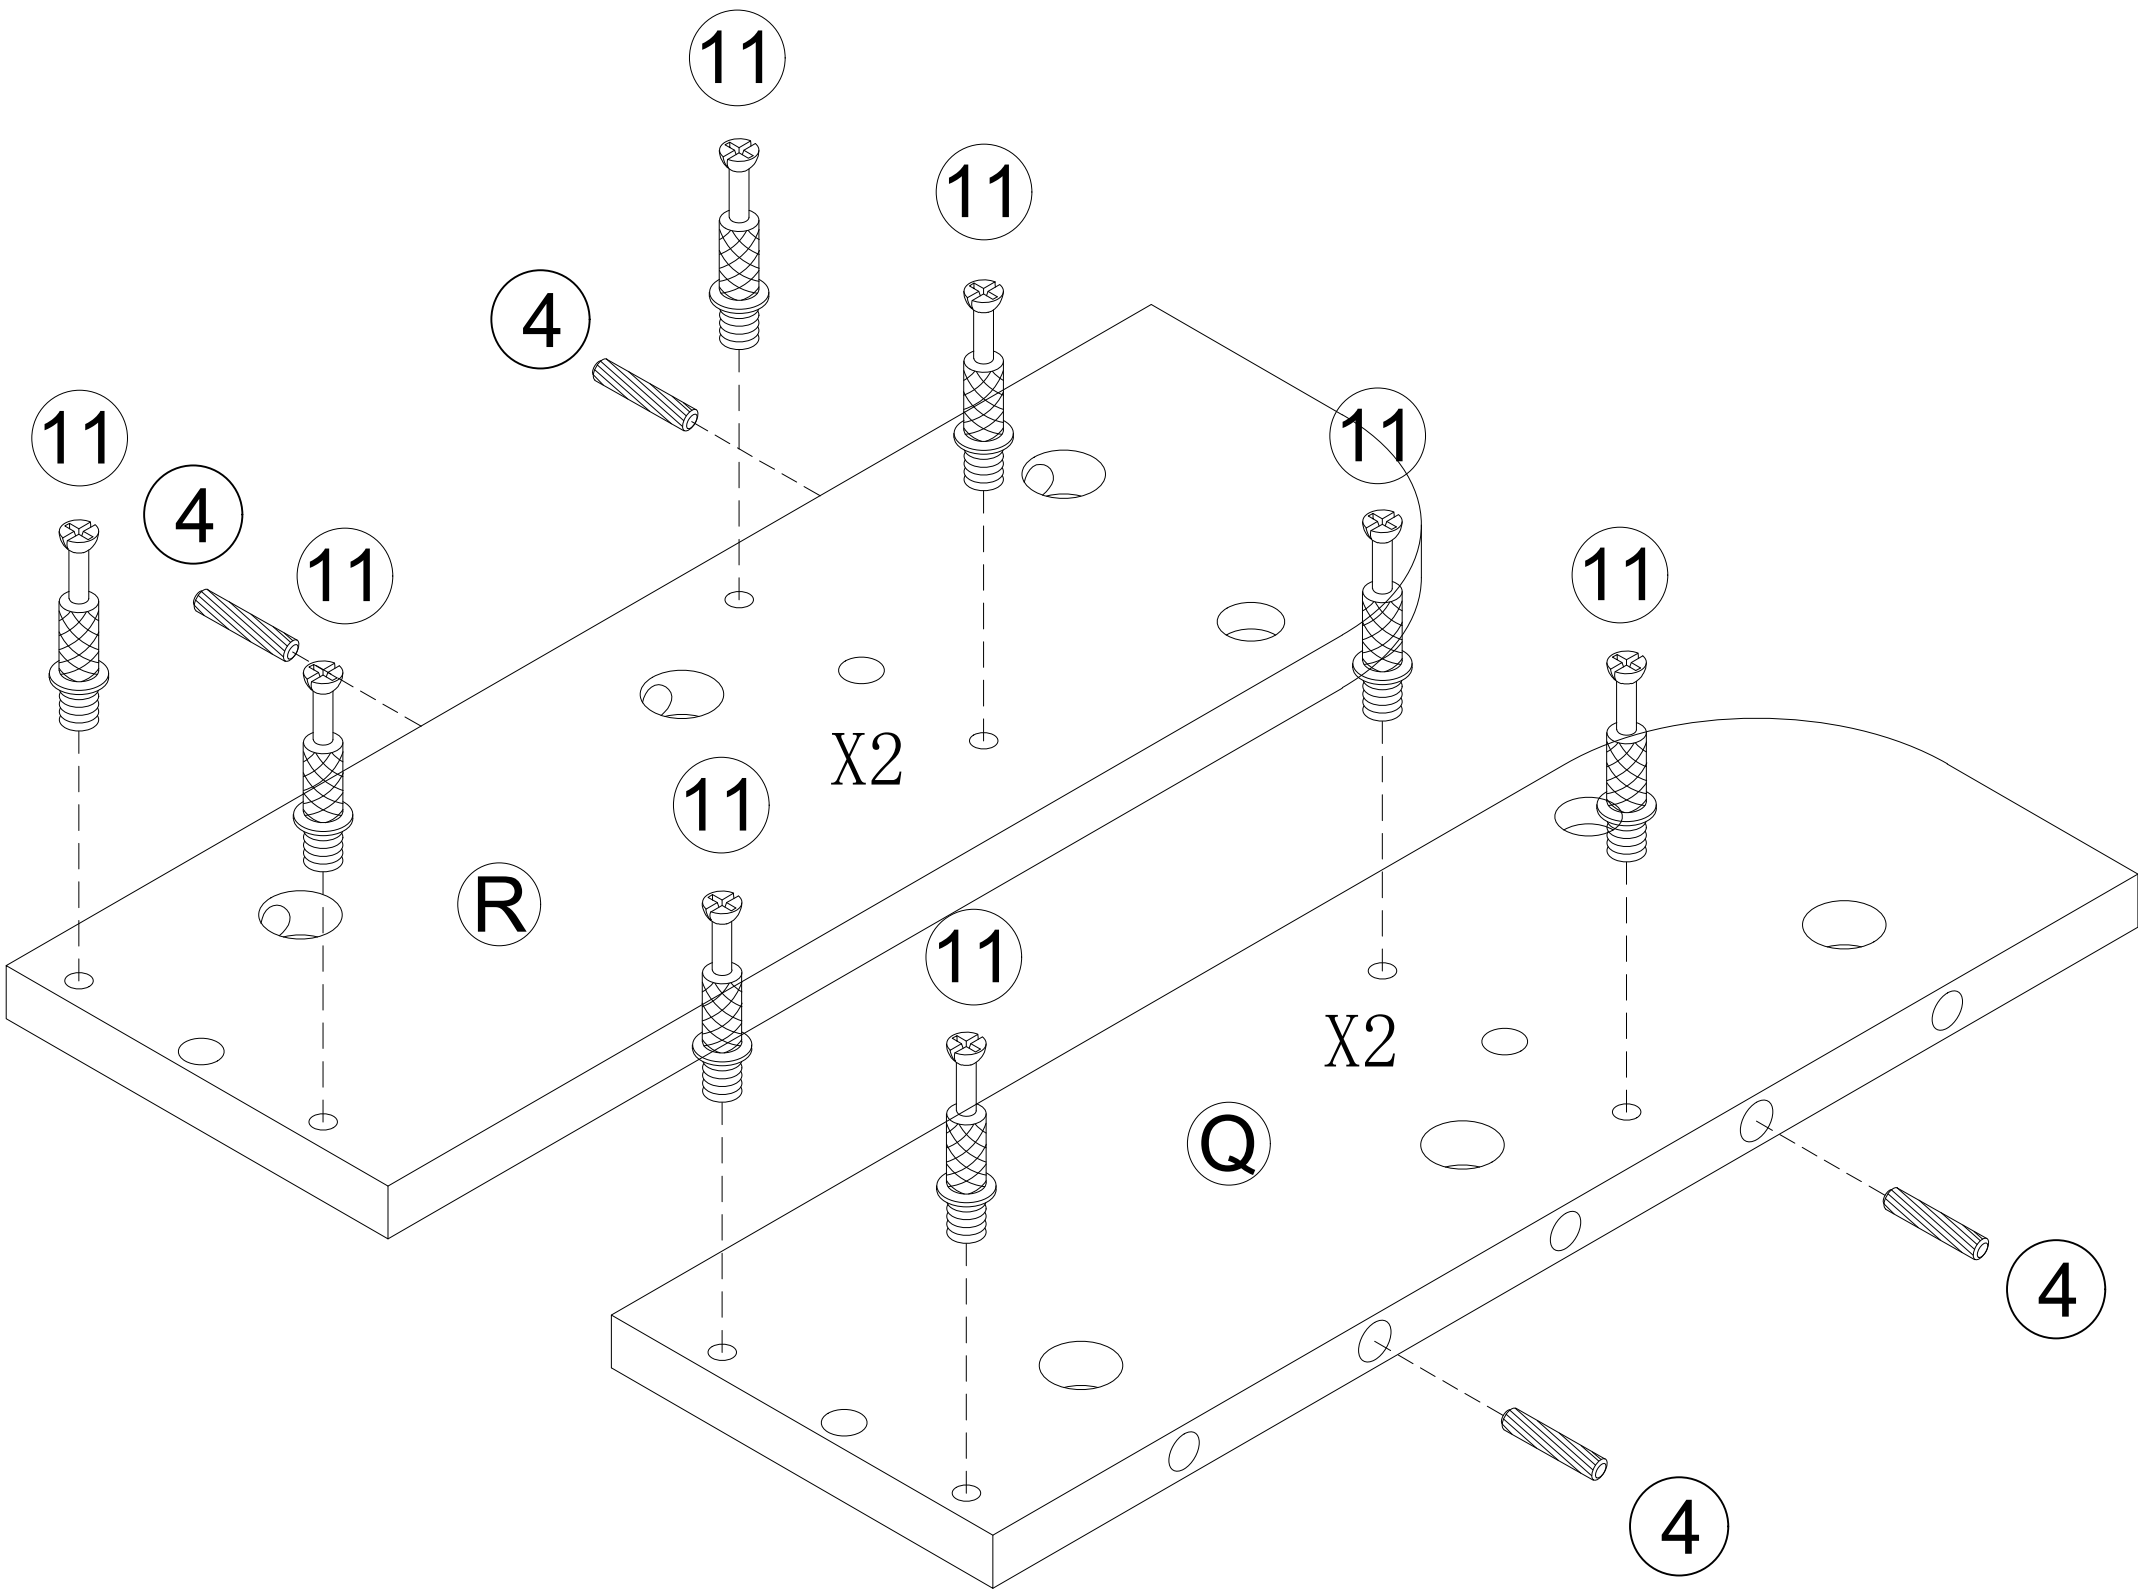




STEP 17

4  8pcs
Ø6x30mm

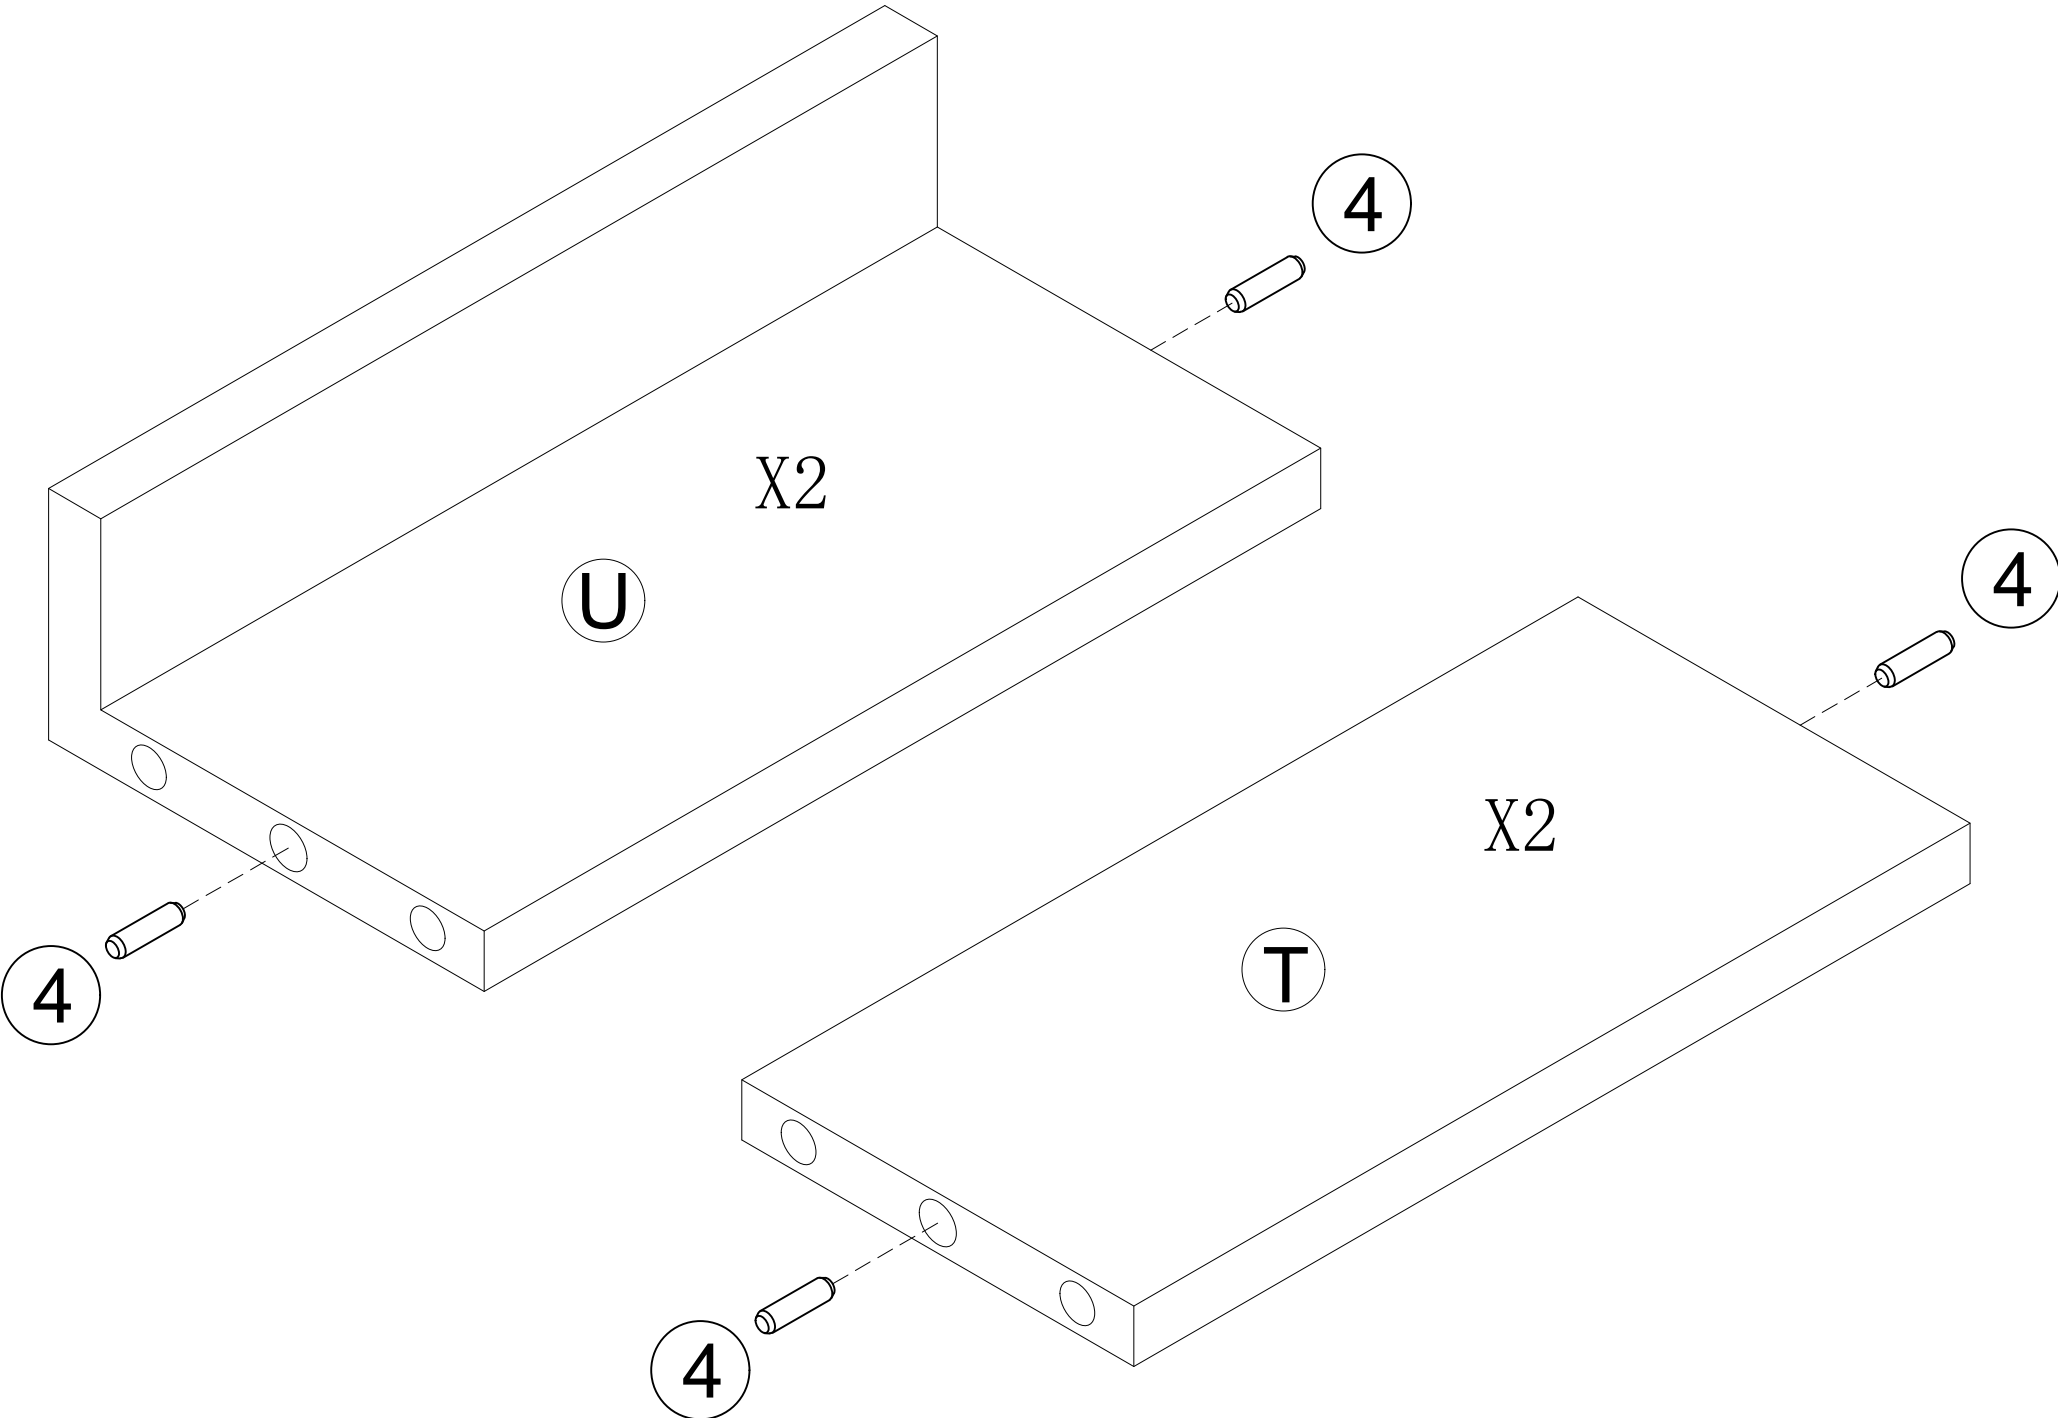


STEP 18

12  16pcs
Ø15x9mm

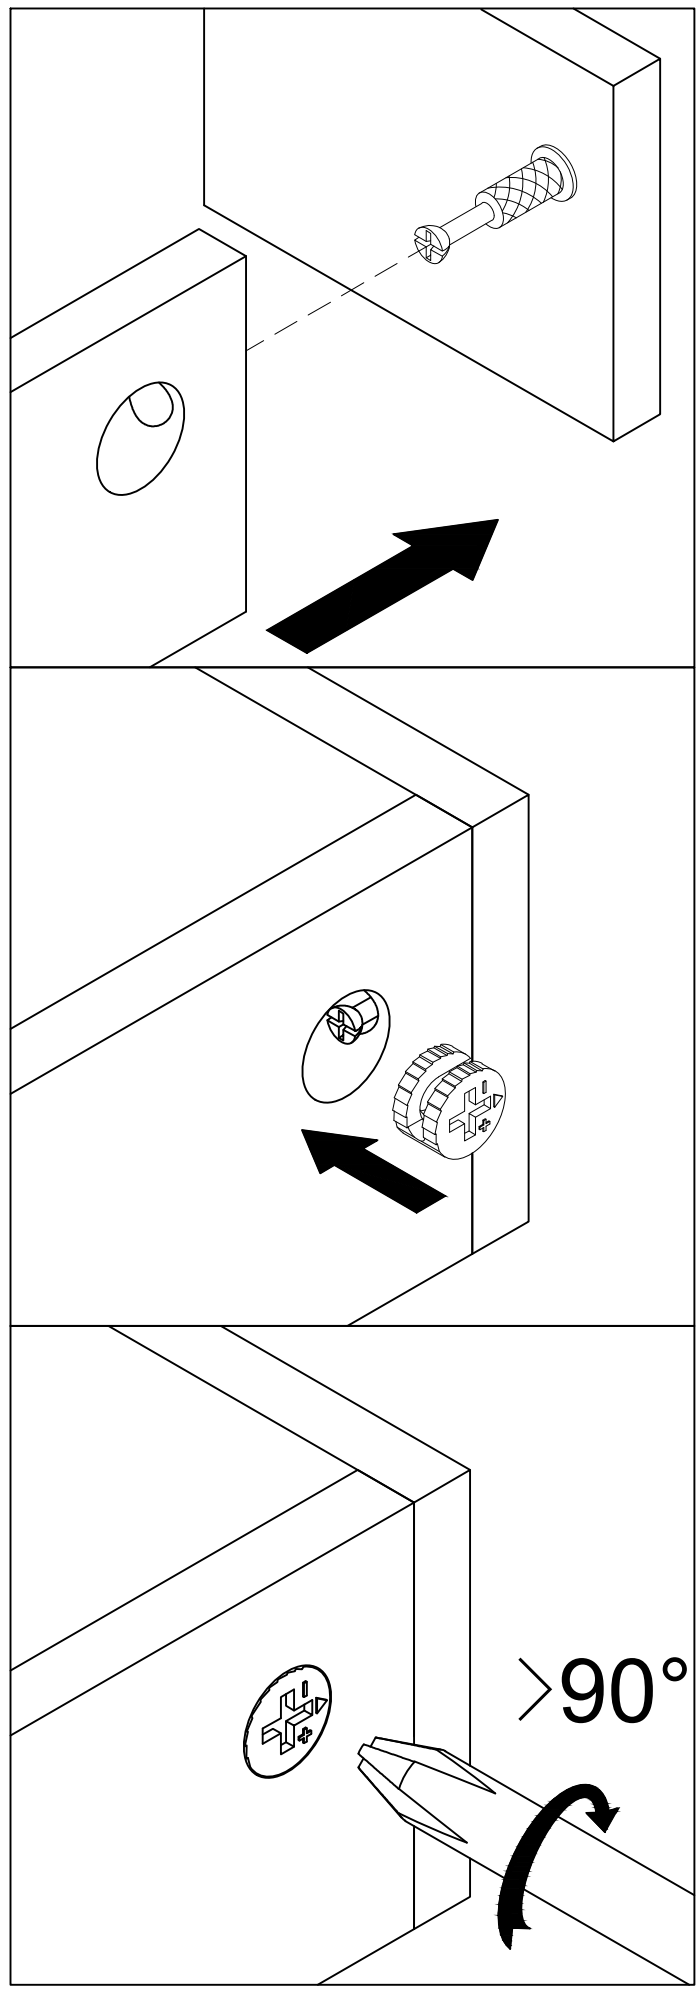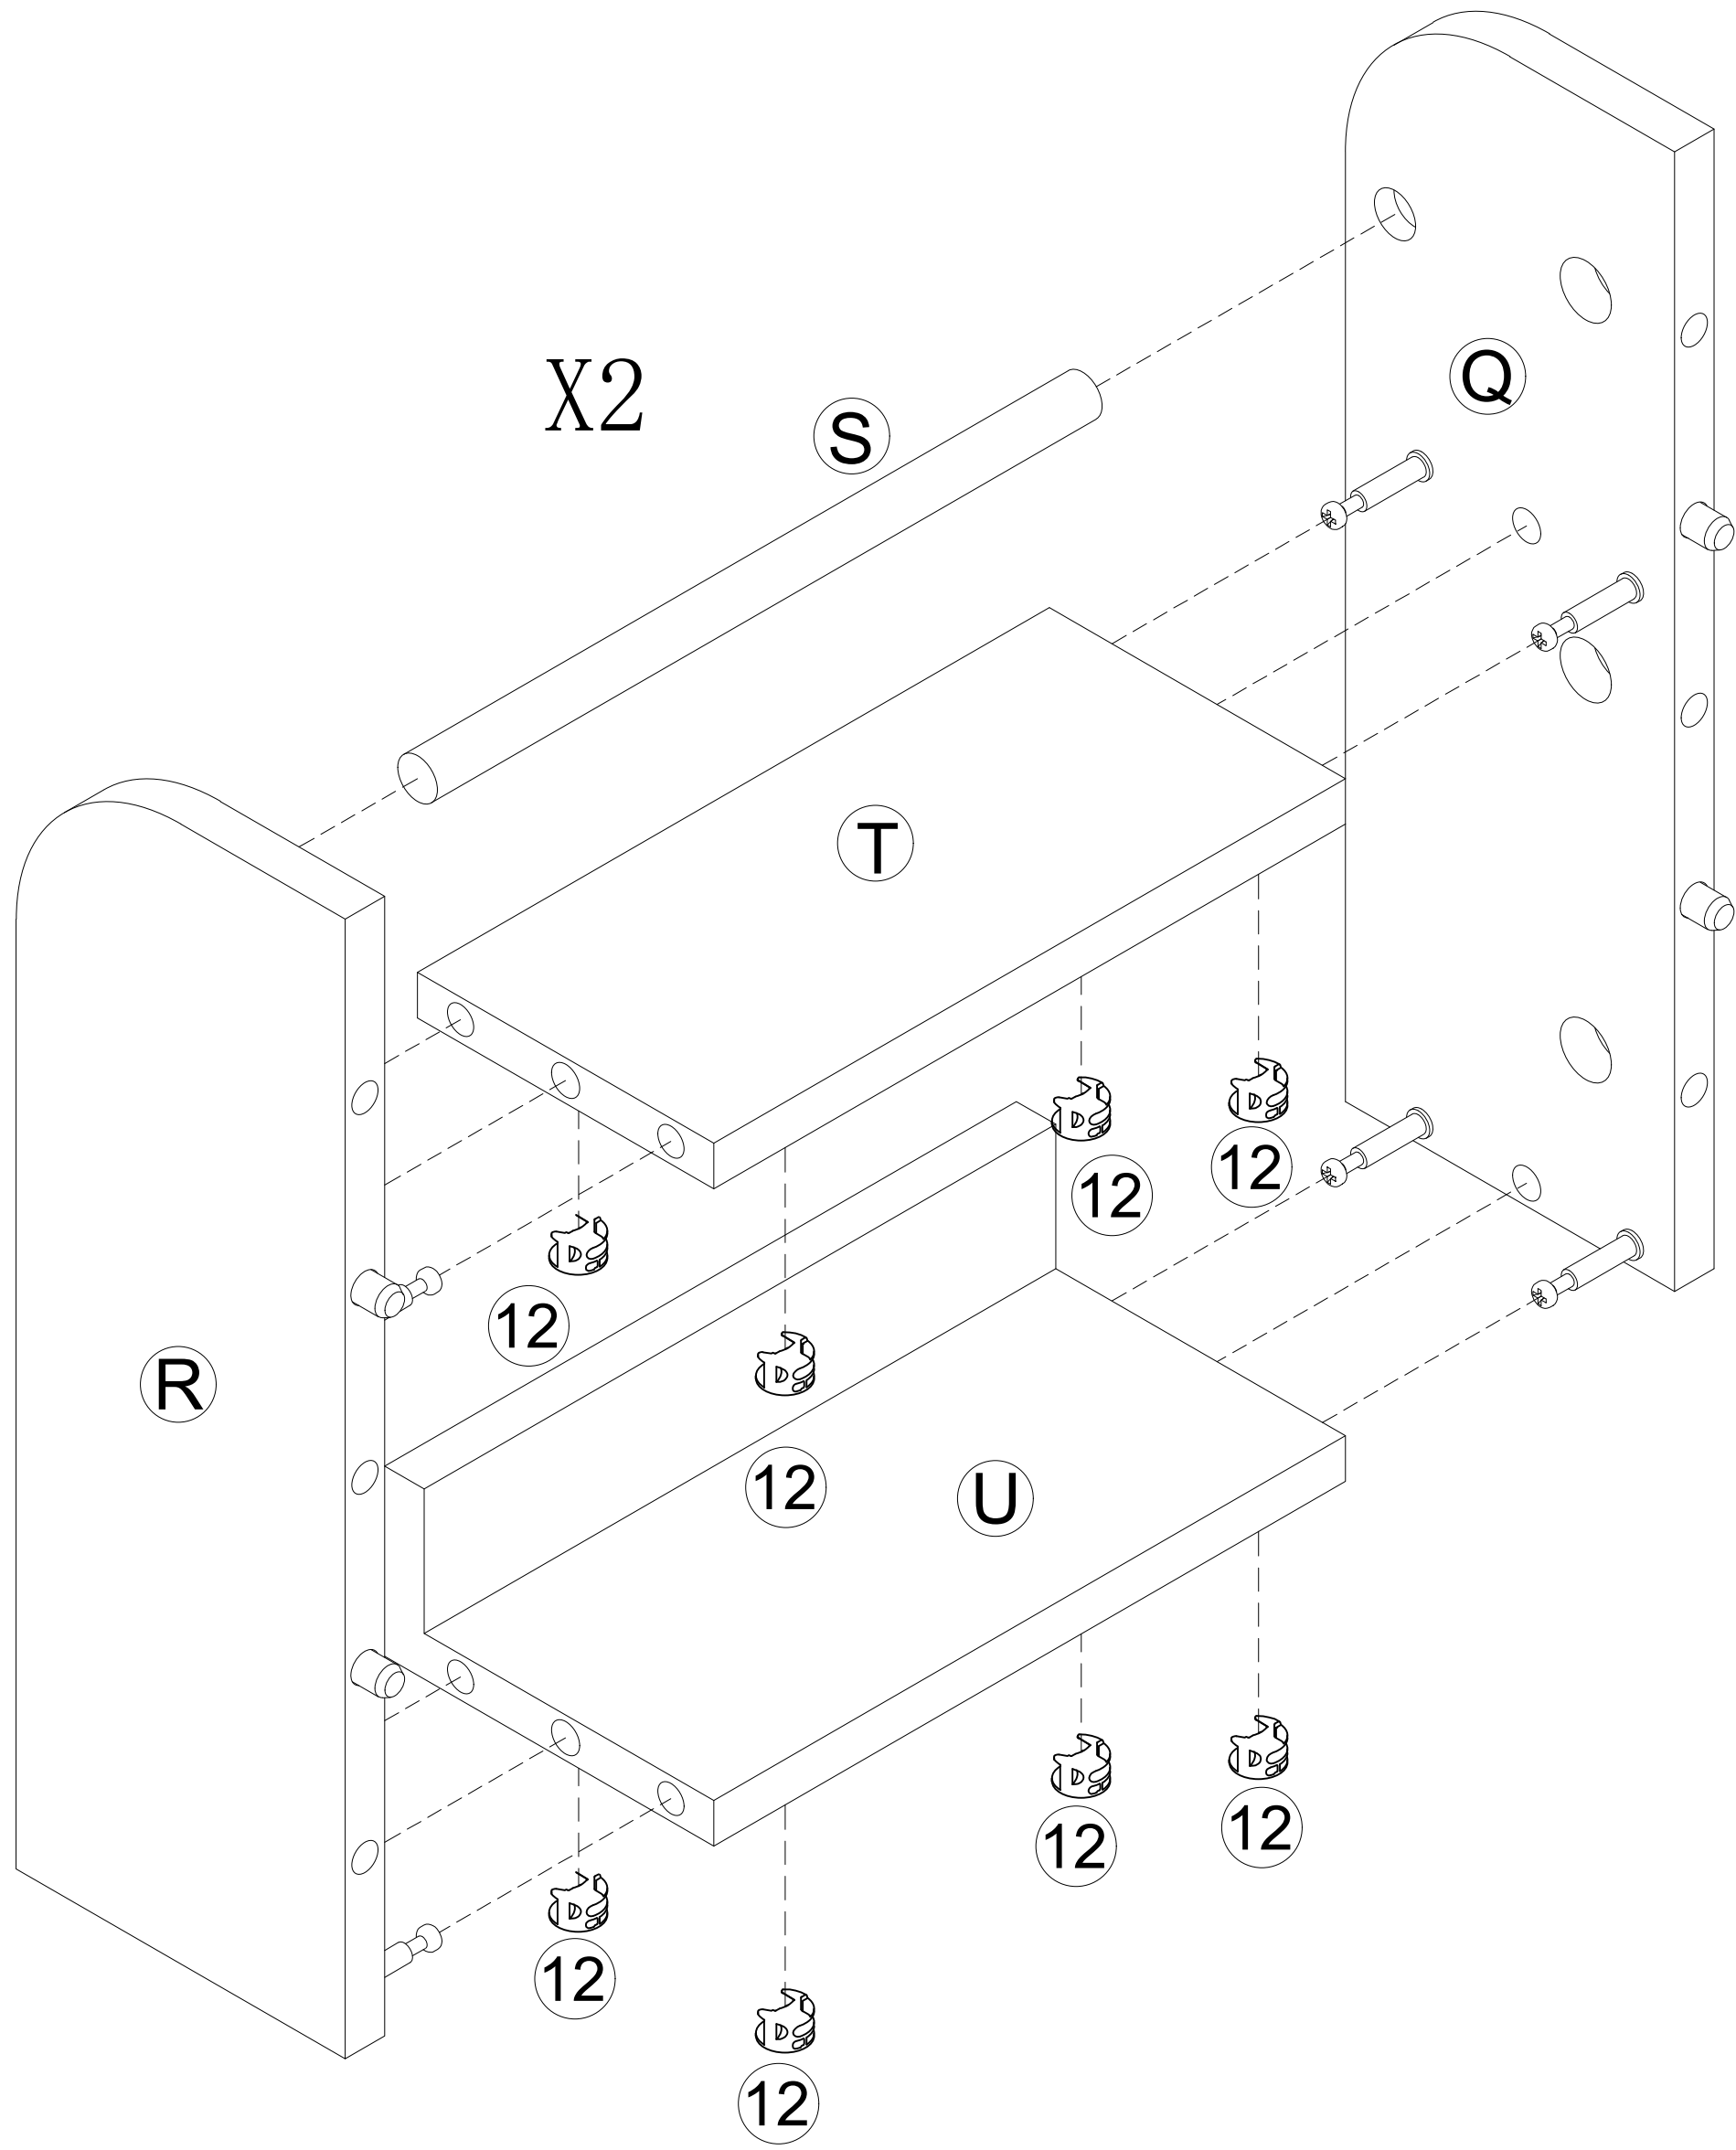


STEP 19


- 6

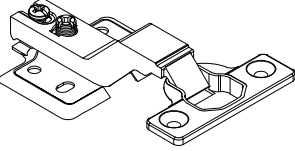




2pcs
- 8



4pcs
Ø4x12mm
- 11




6pcs
Ø6x33mm

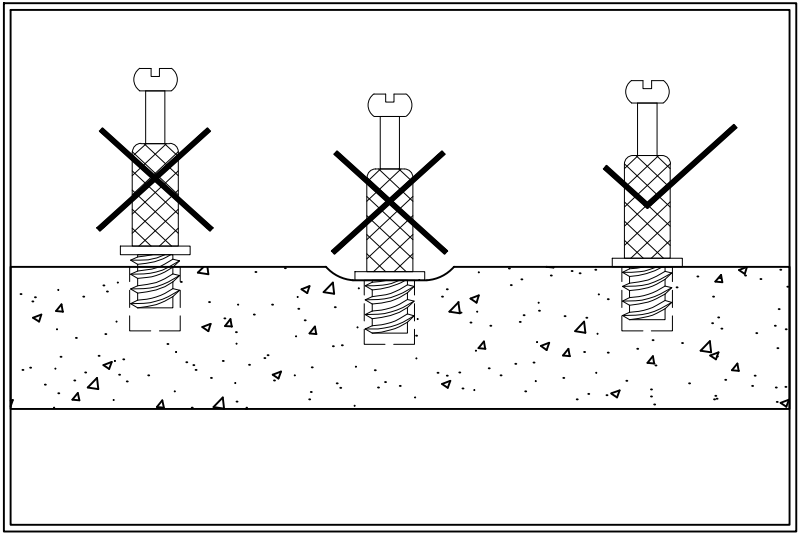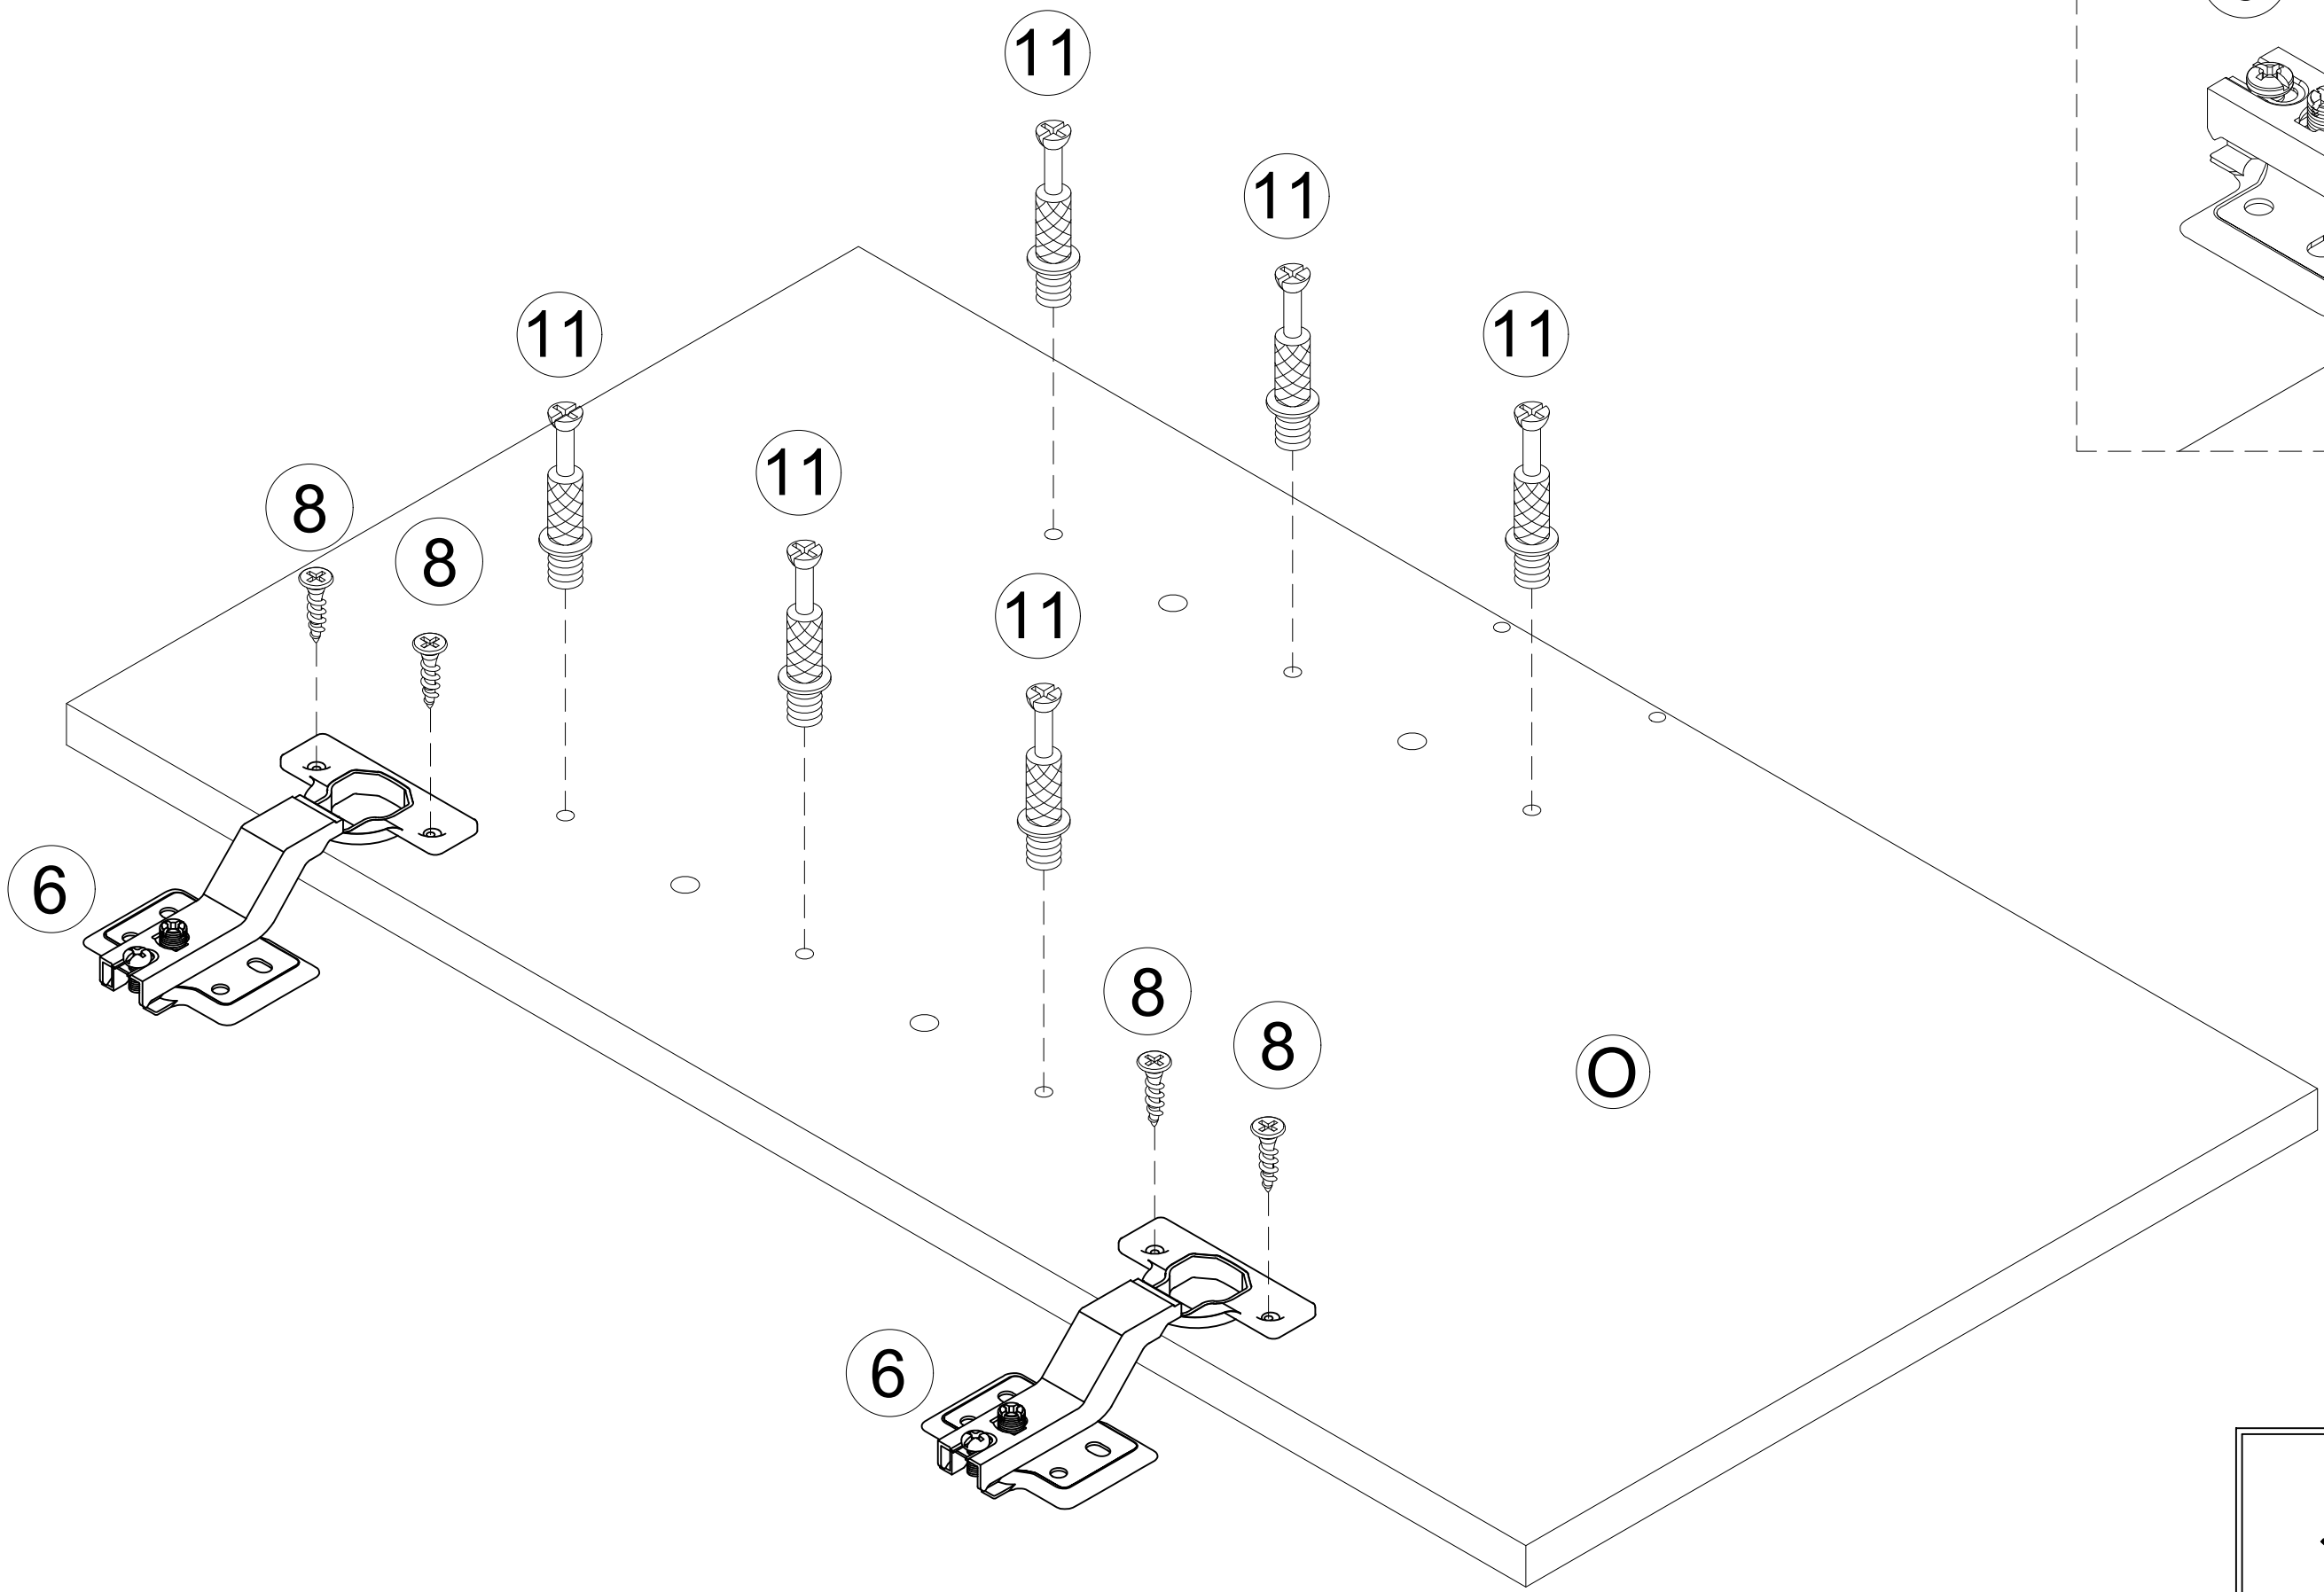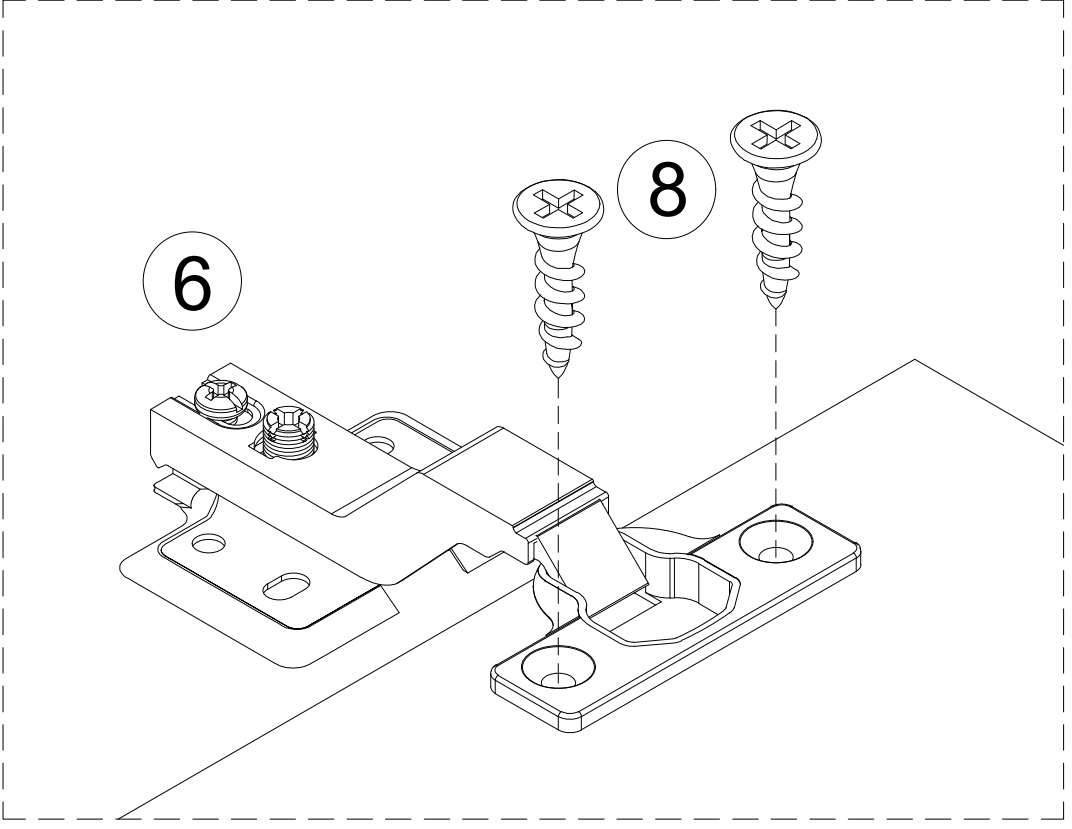


STEP 20

- 6

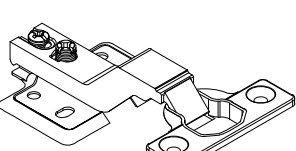




2pcs
- 8




4pcs
Ø4x12mm
- 11




6pcs
Ø6x33mm

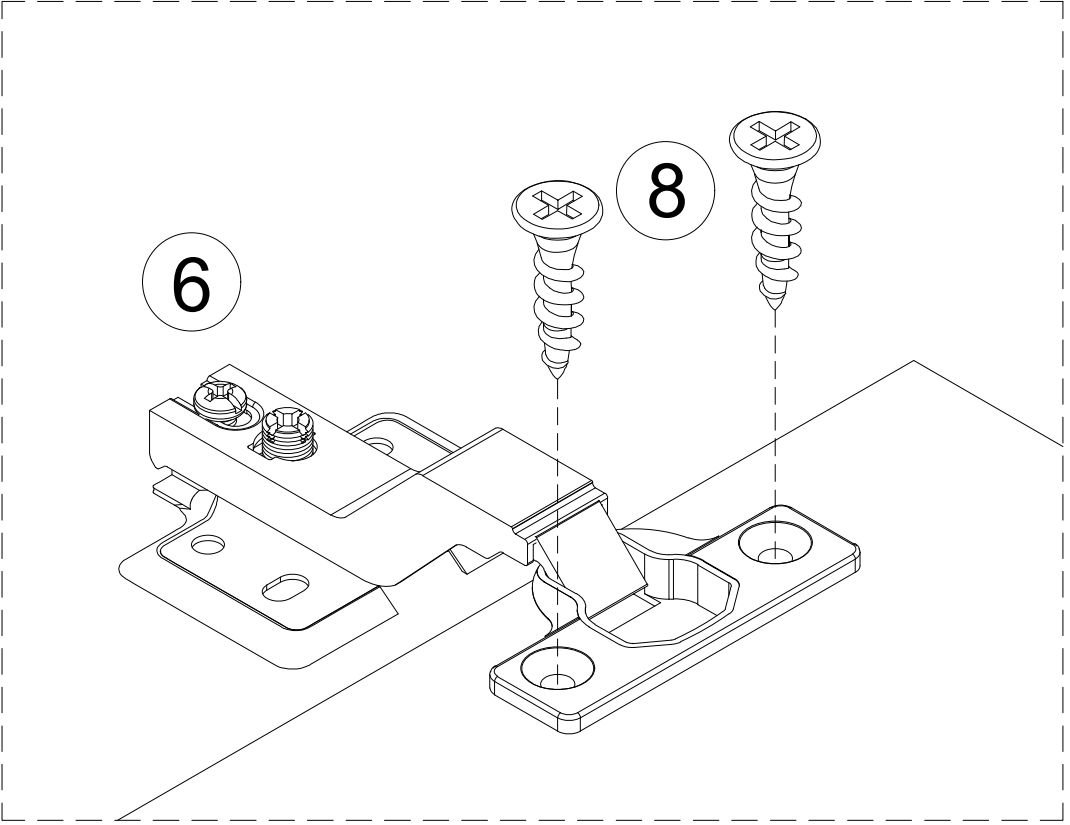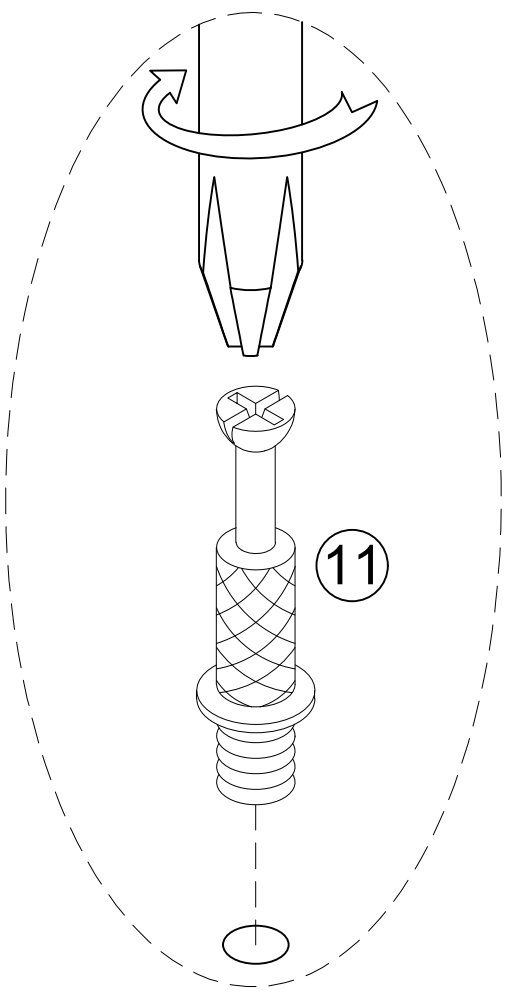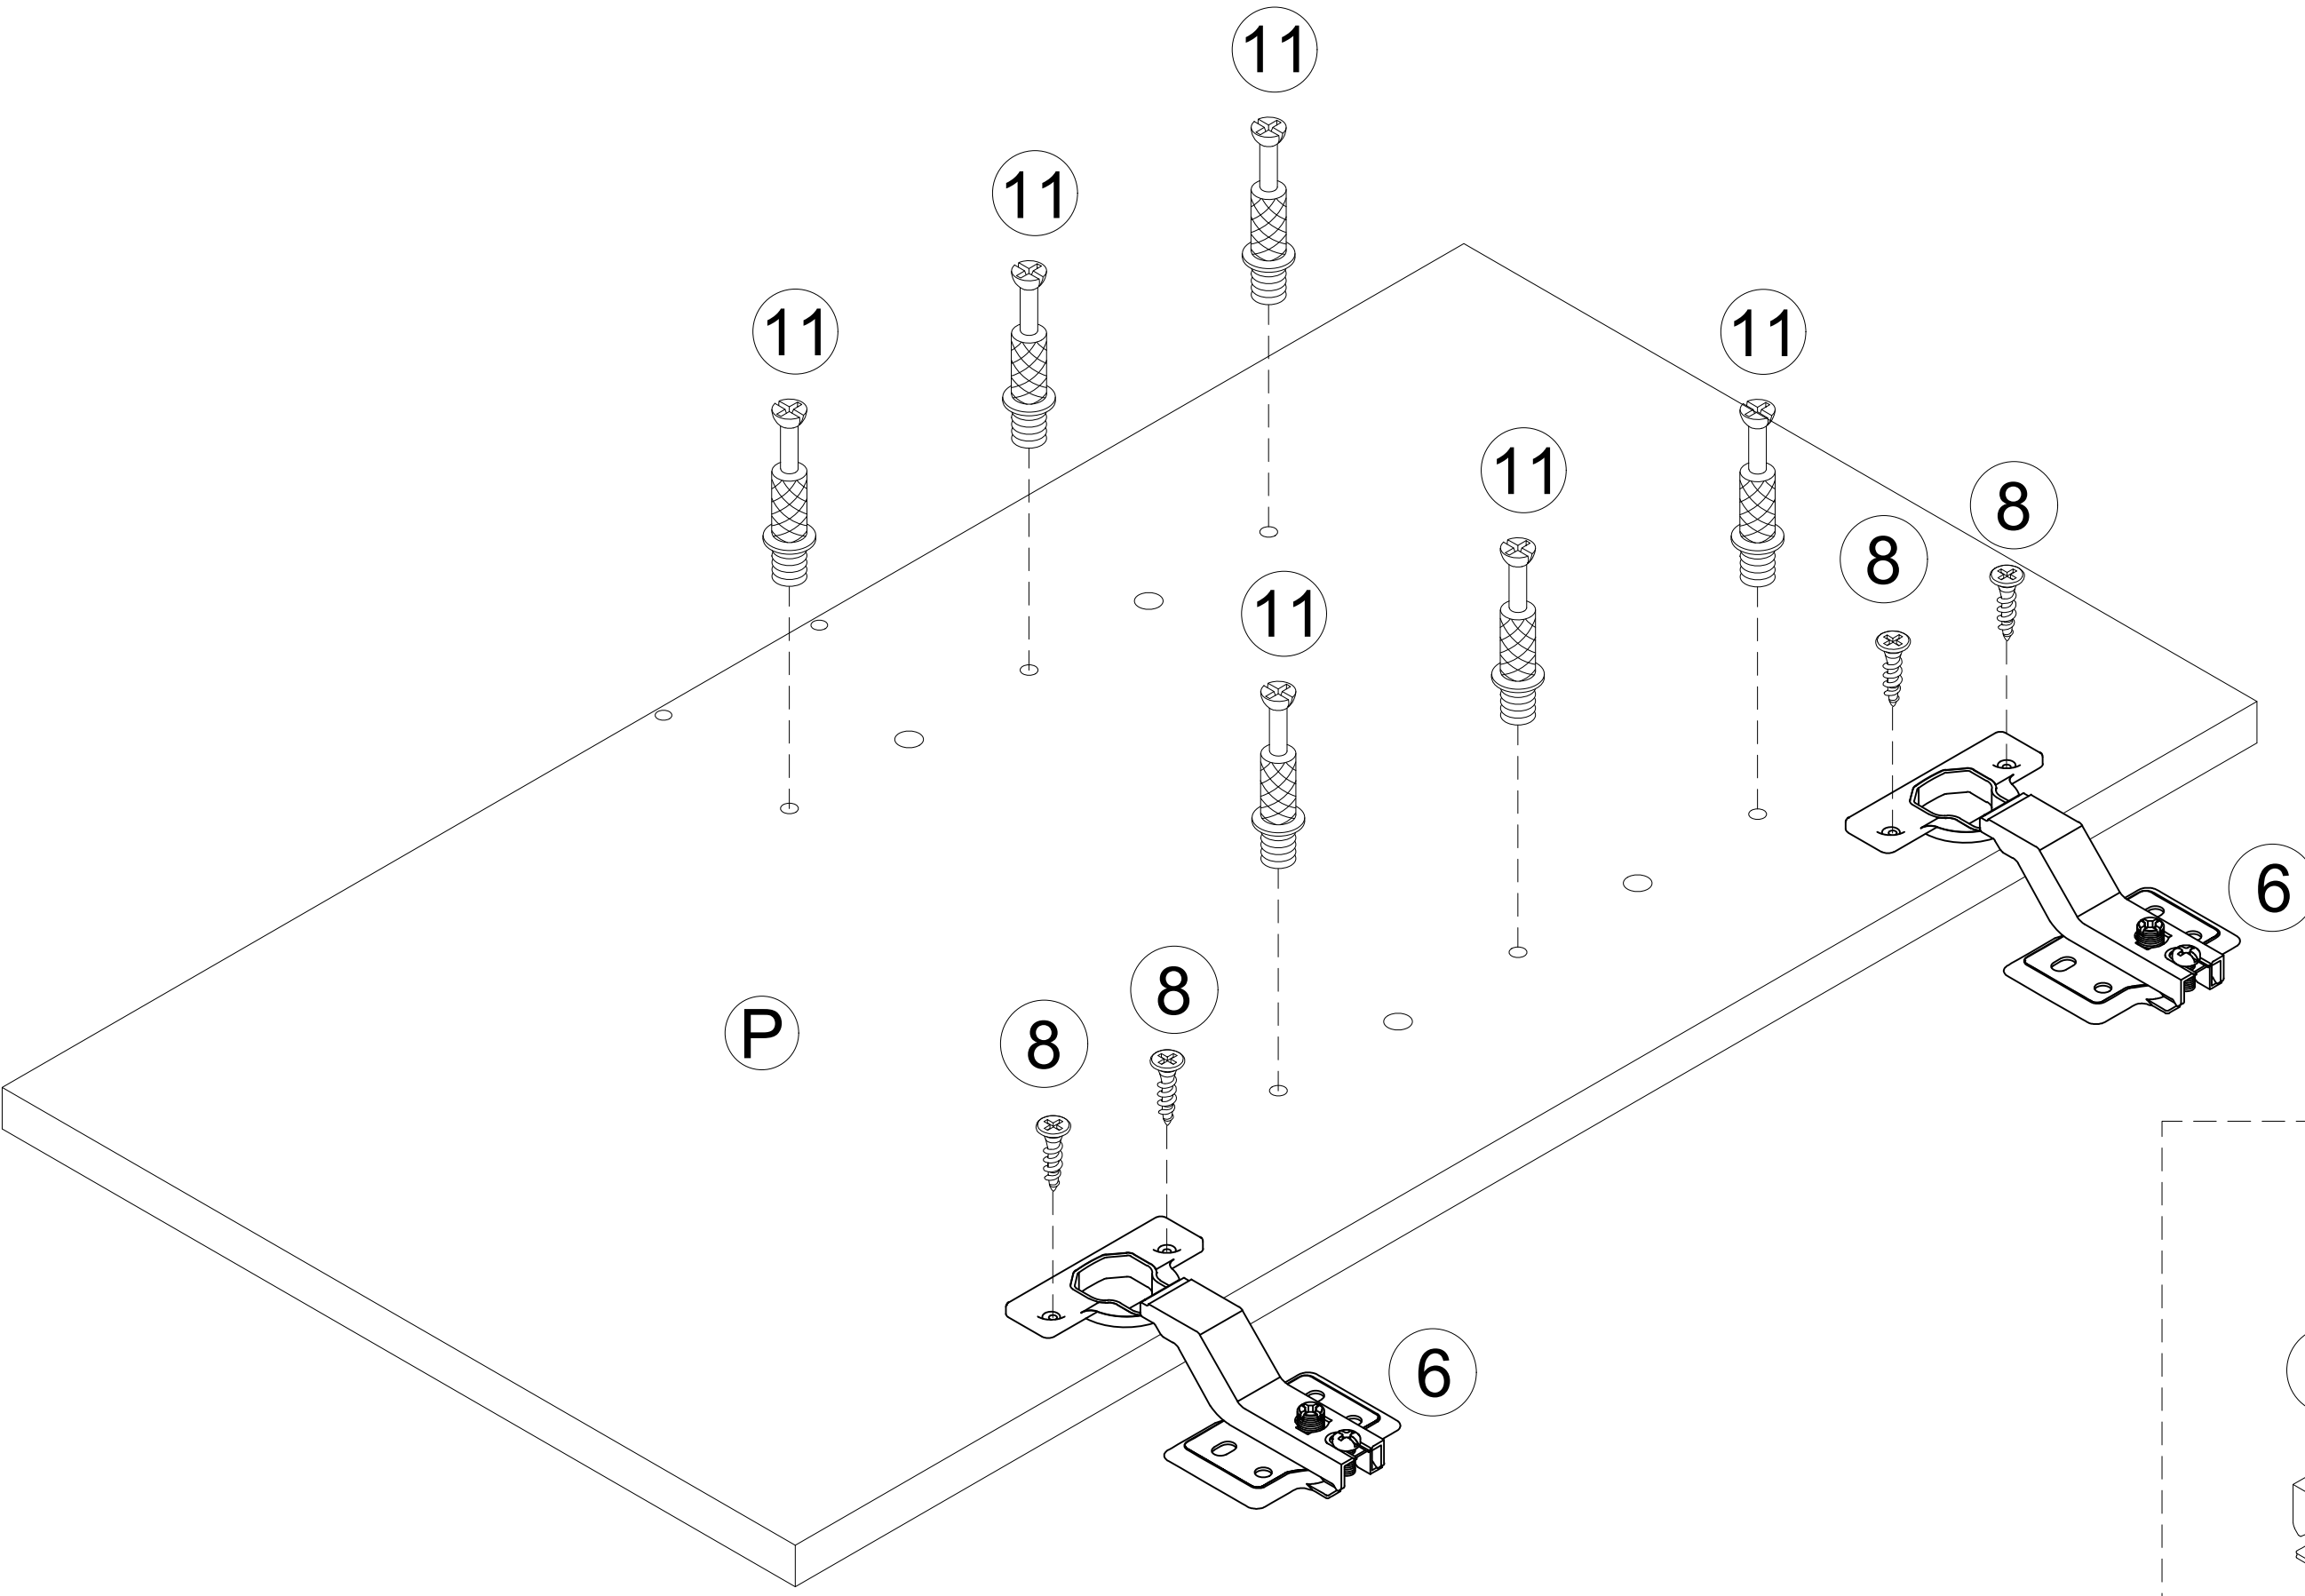




STEP 21

12  6pcs
Ø15x9mm

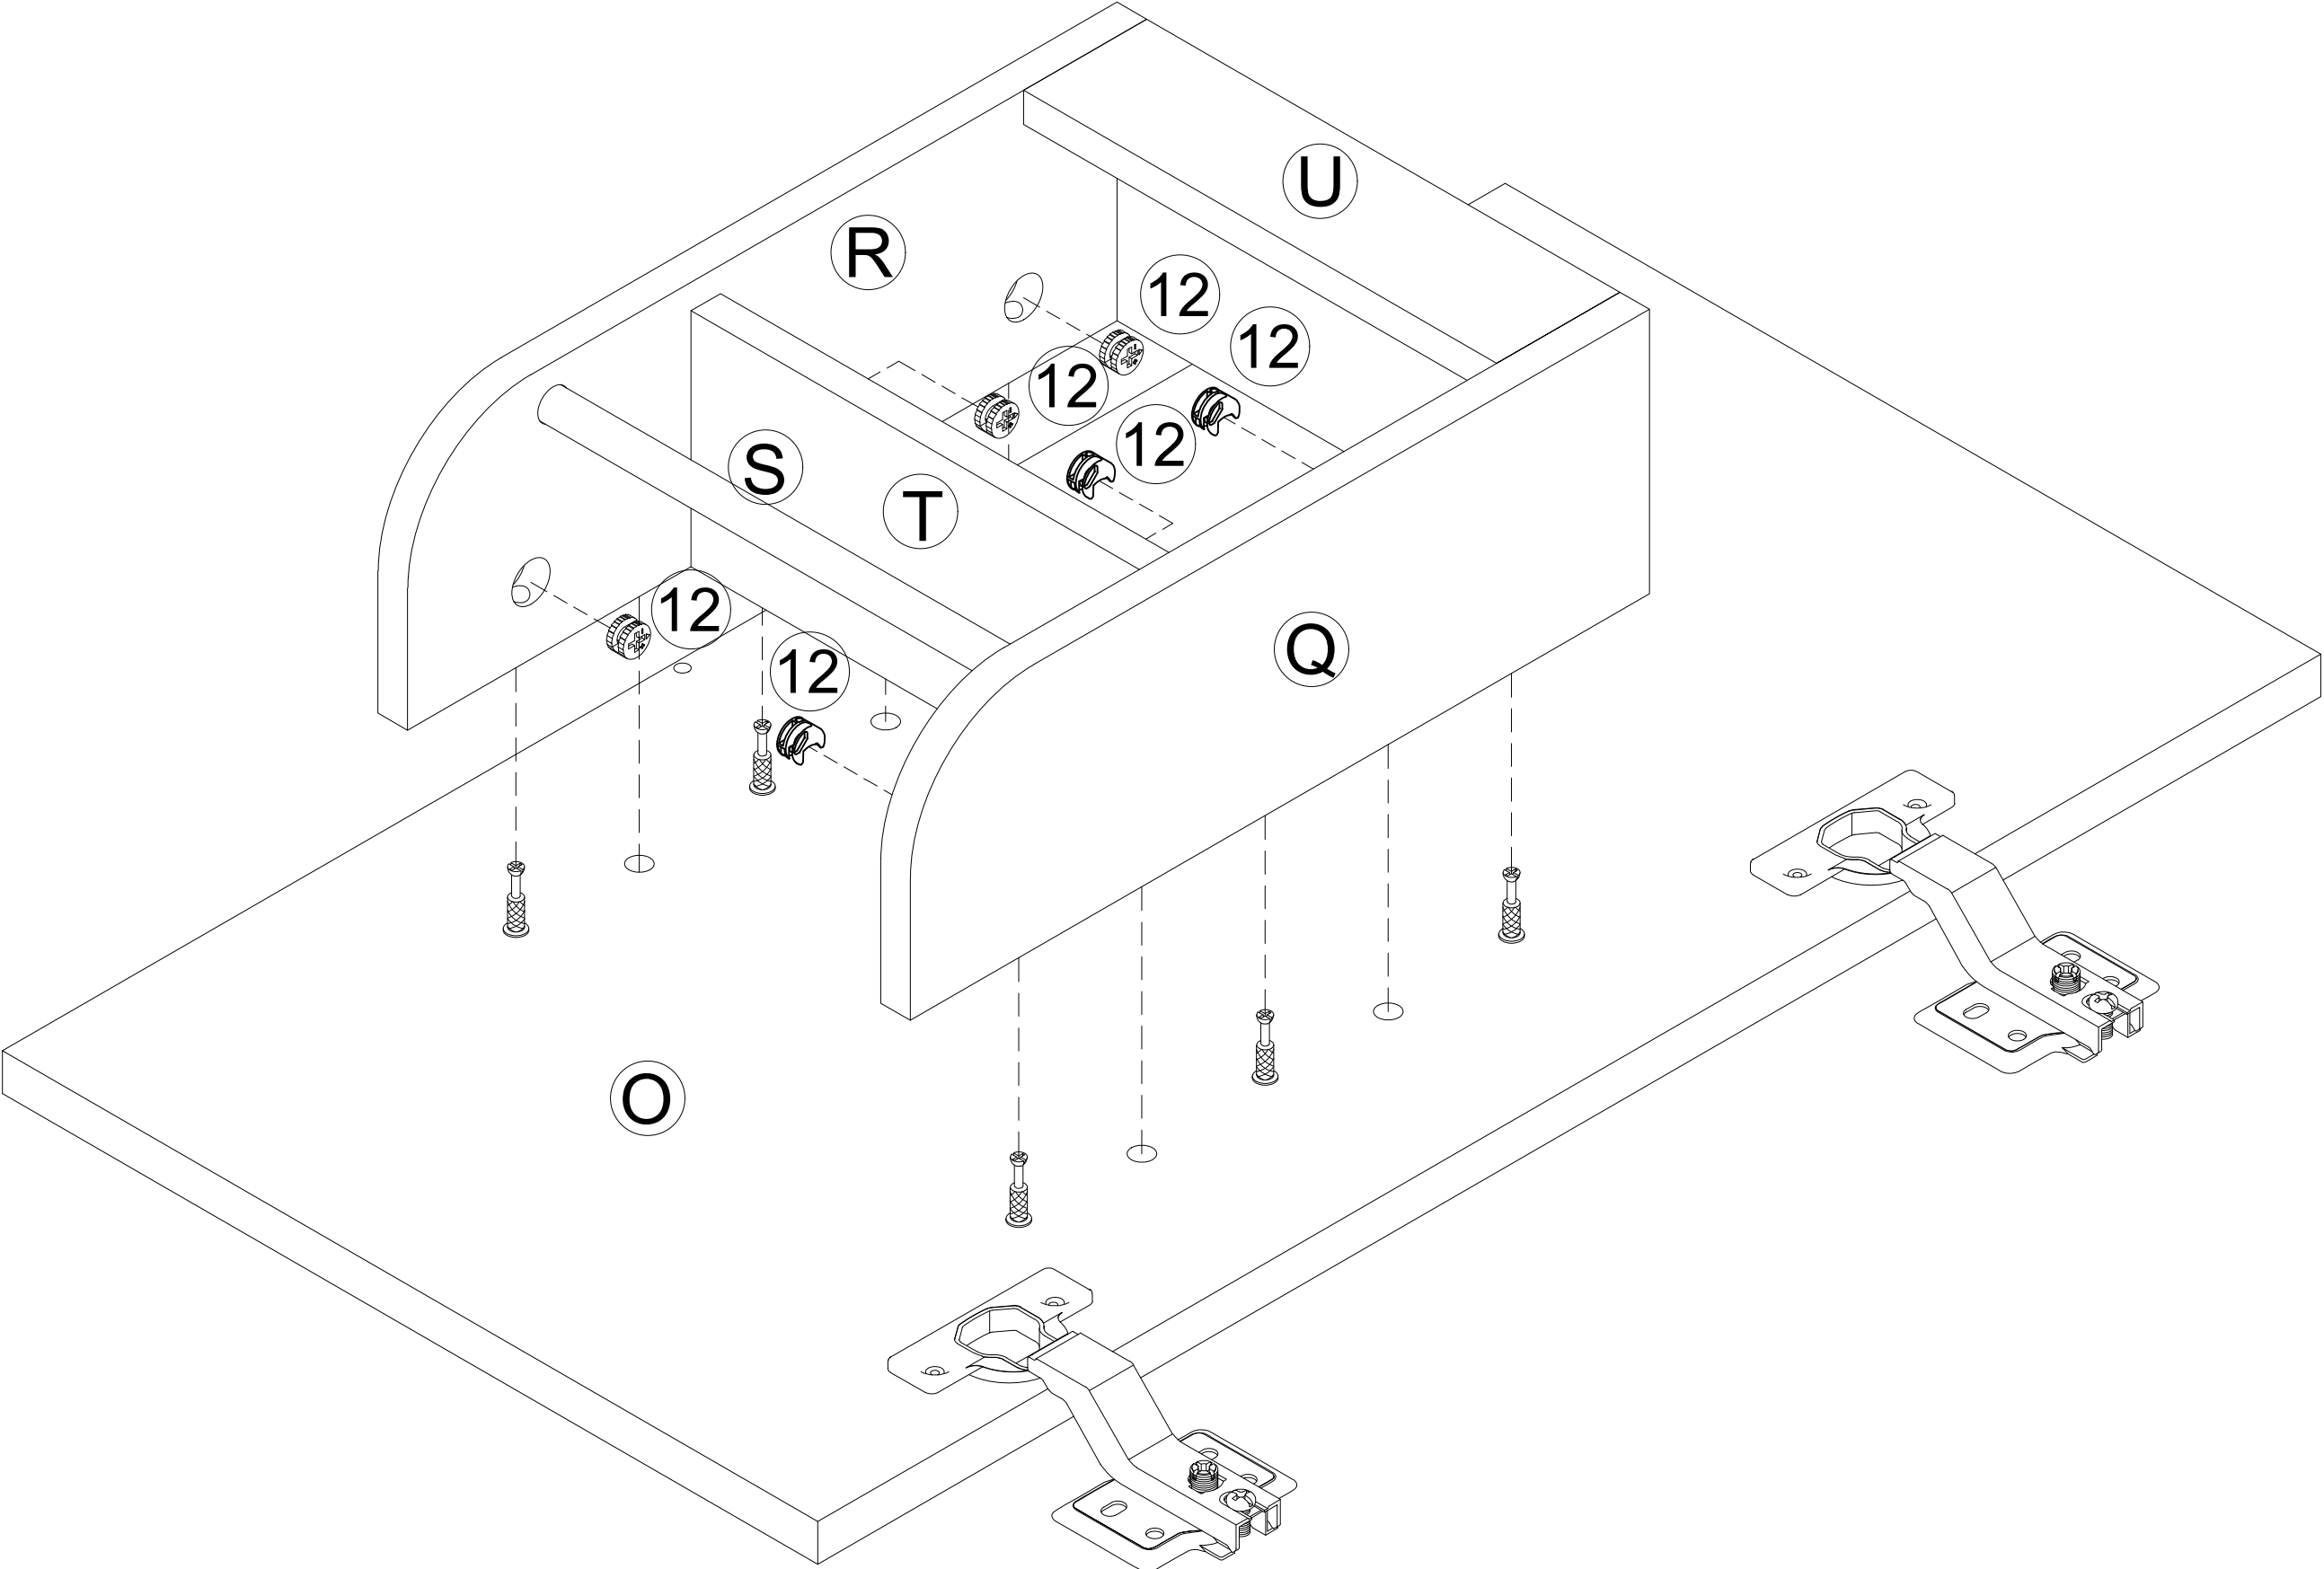


STEP 22

12  6pcs
Ø15x9mm

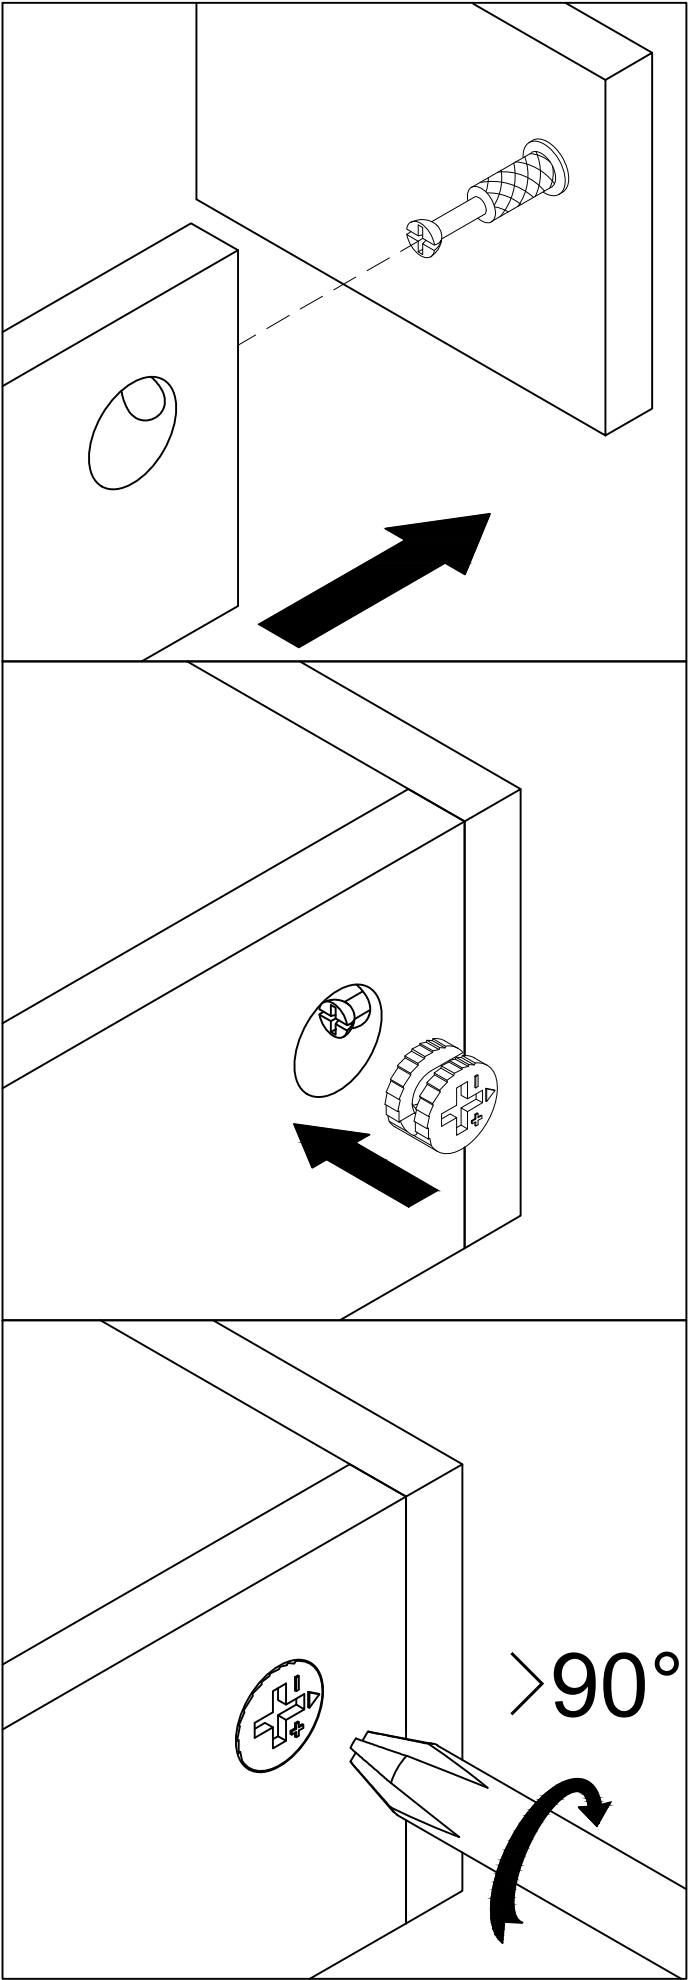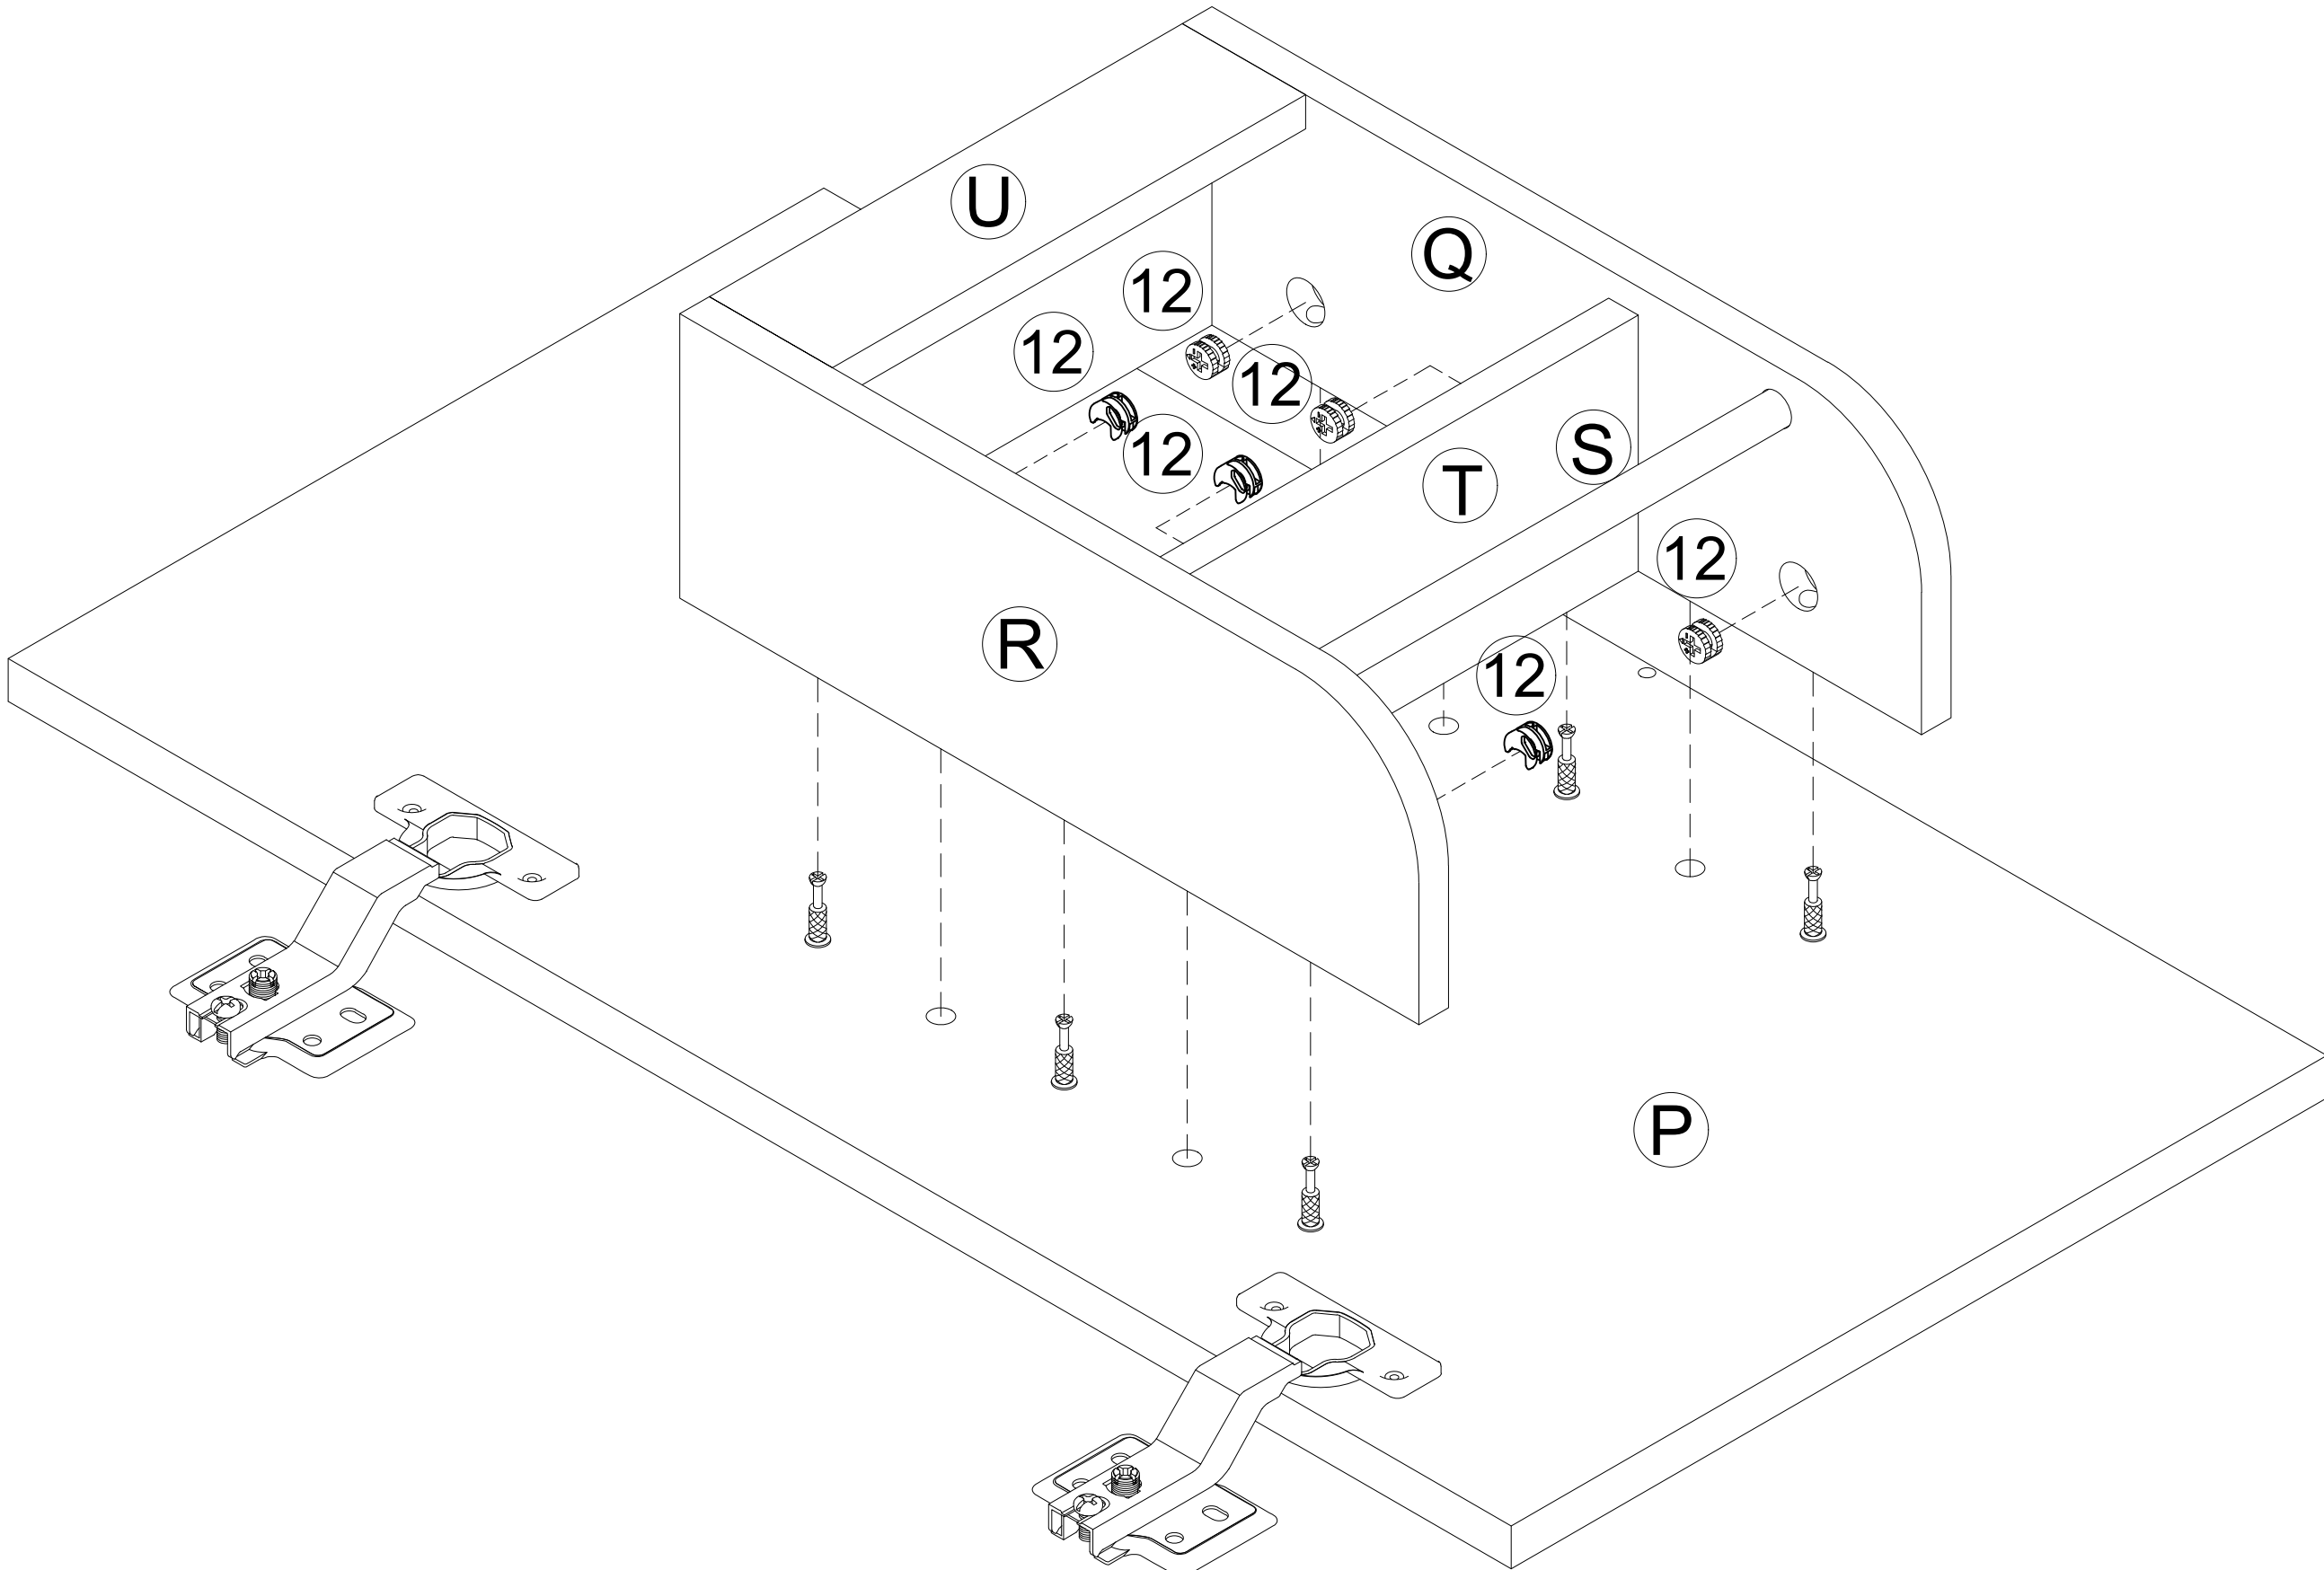


STEP 23


- 8



16pcs
- 7








2pcs
- 13




4pcs
- Ø4x12mm
- 5/32"x12mm

Three-way adjustable hinge for perfectly aligned doors
1.TO ADJUST DOOR FORWARD OR BACKWARD.
2.TO ADJUST DOOR TO RIGHT OR TO LEFT.
3.TO ADJUST DOOR UP OR DOWN.

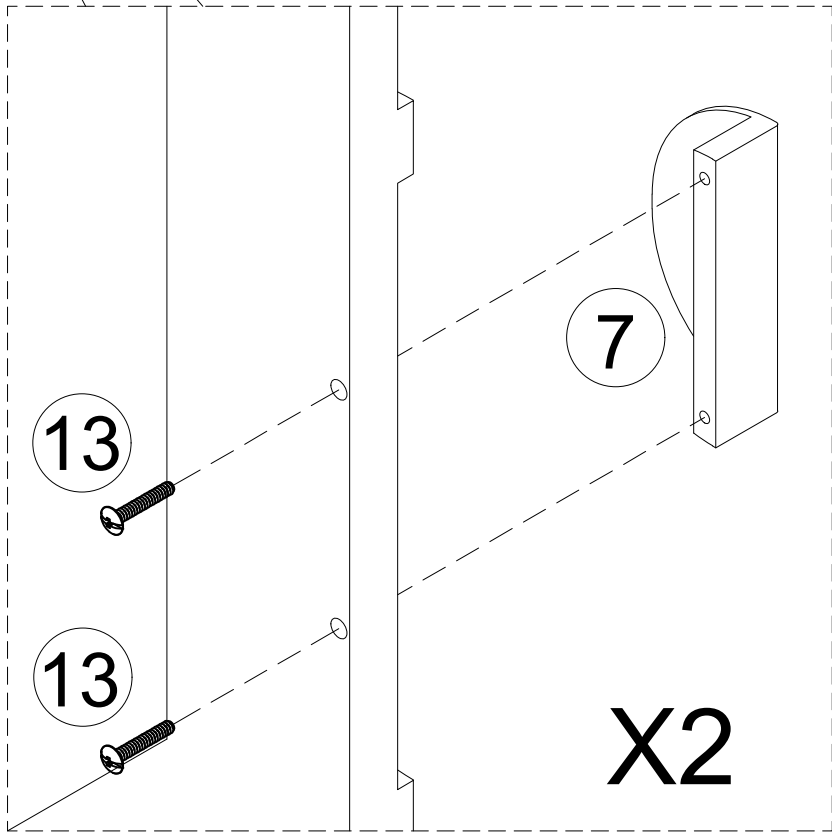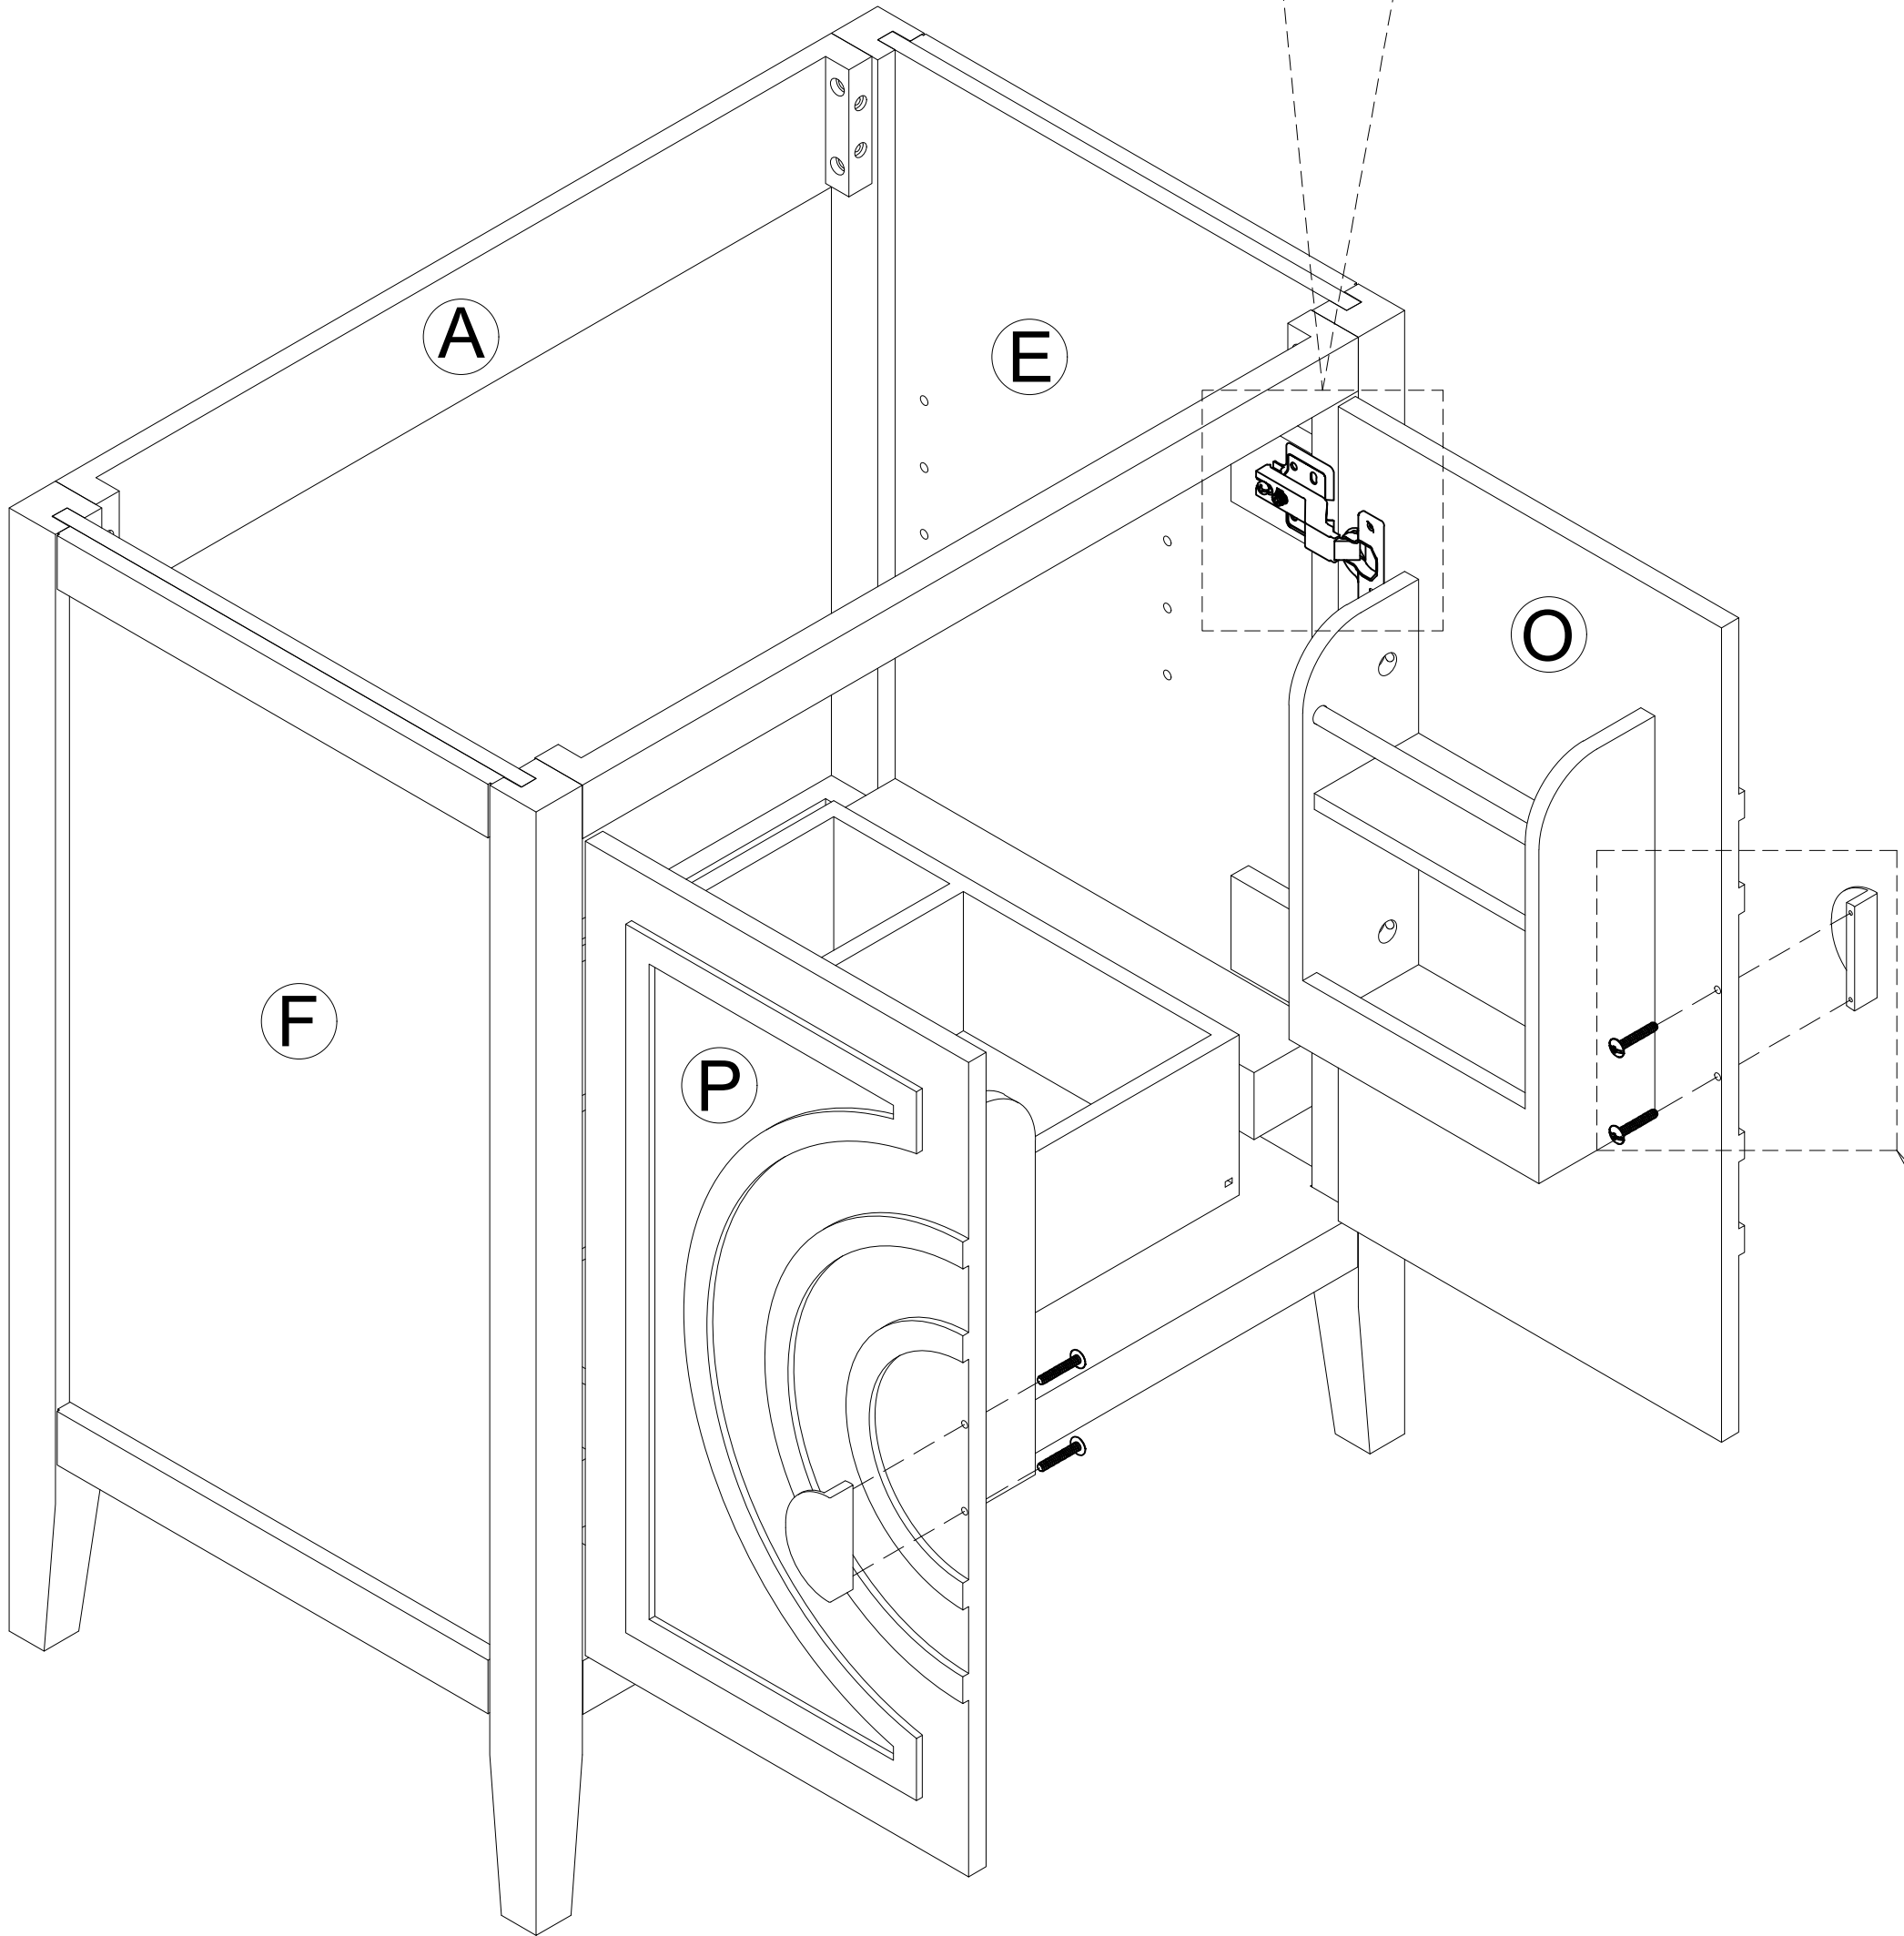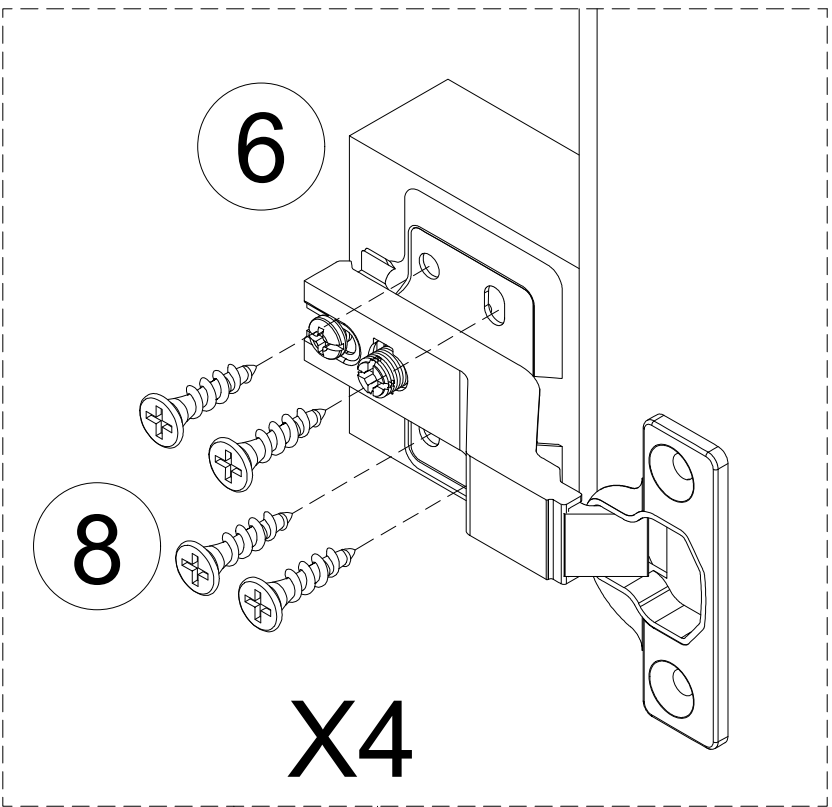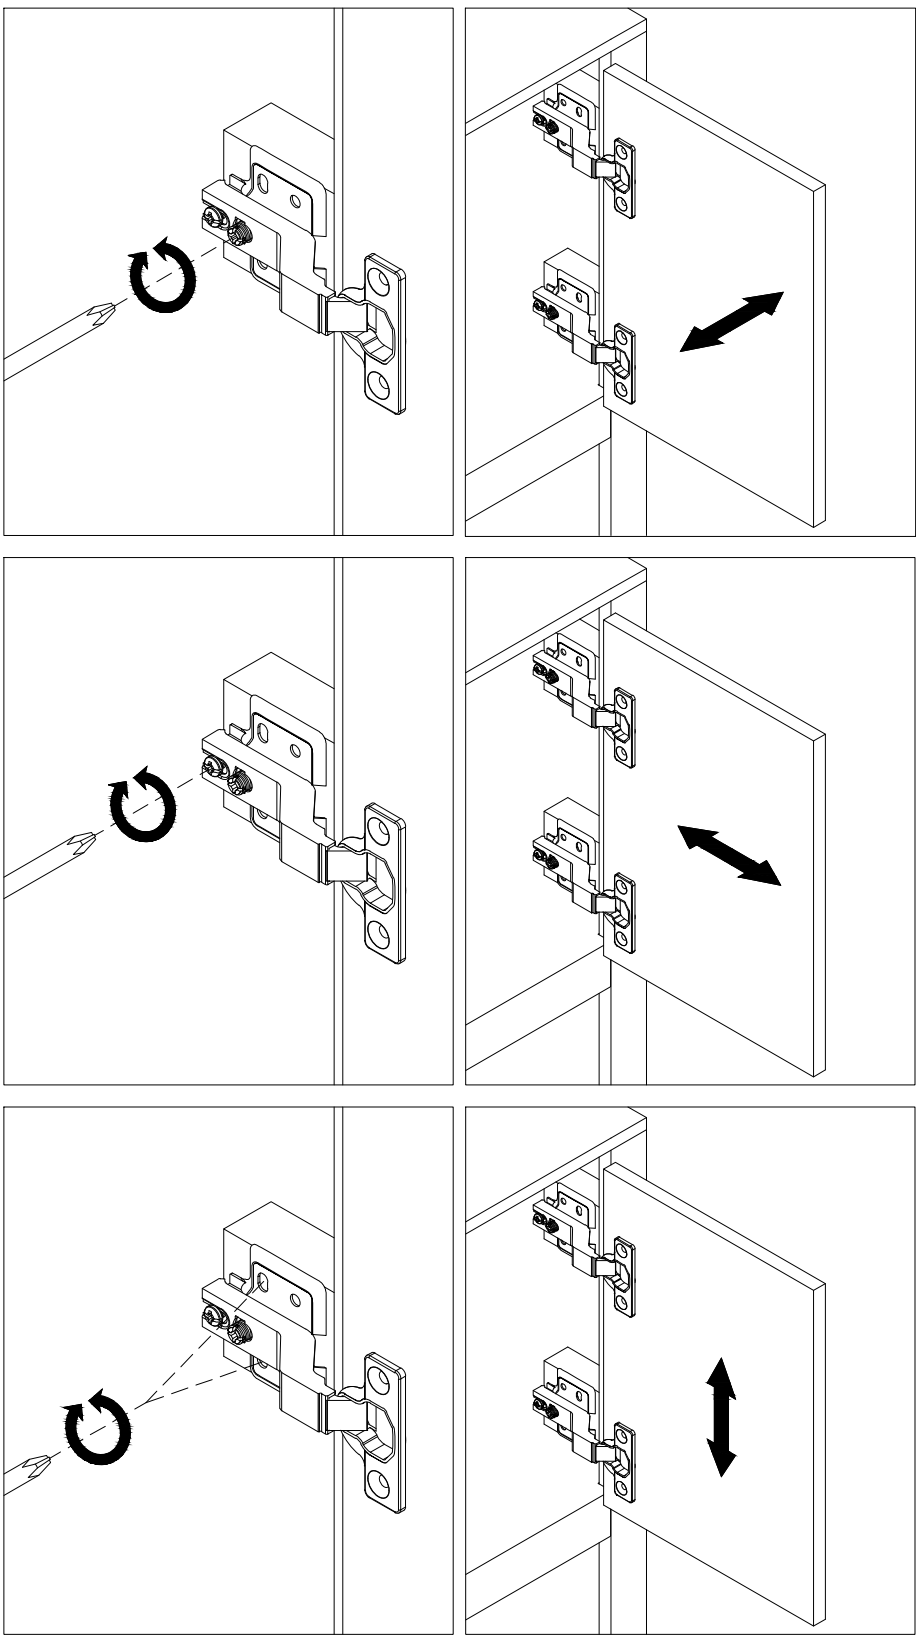
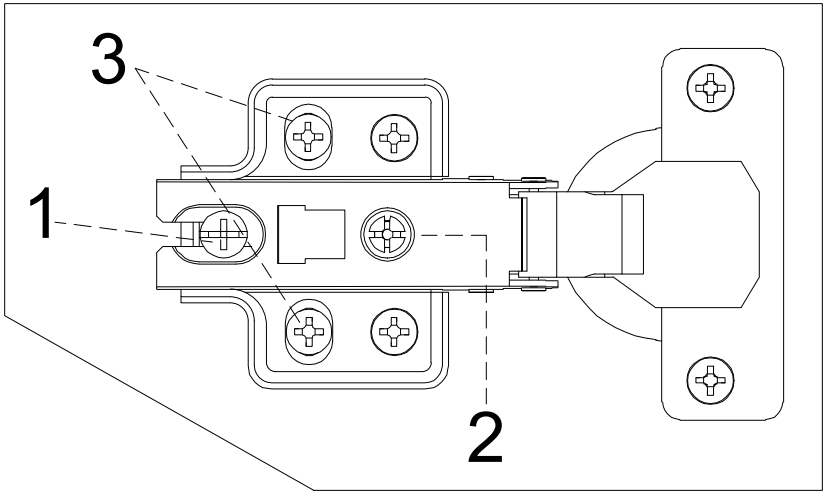


STEP 24



5

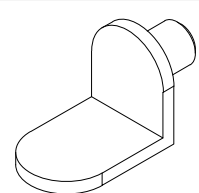

4pcs

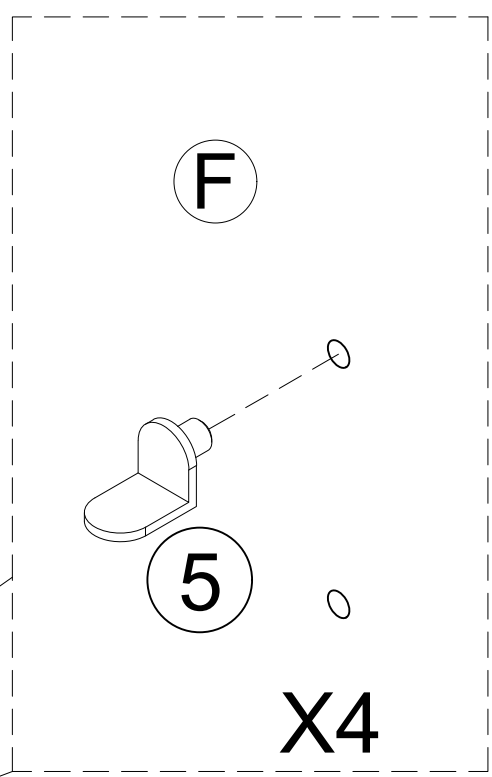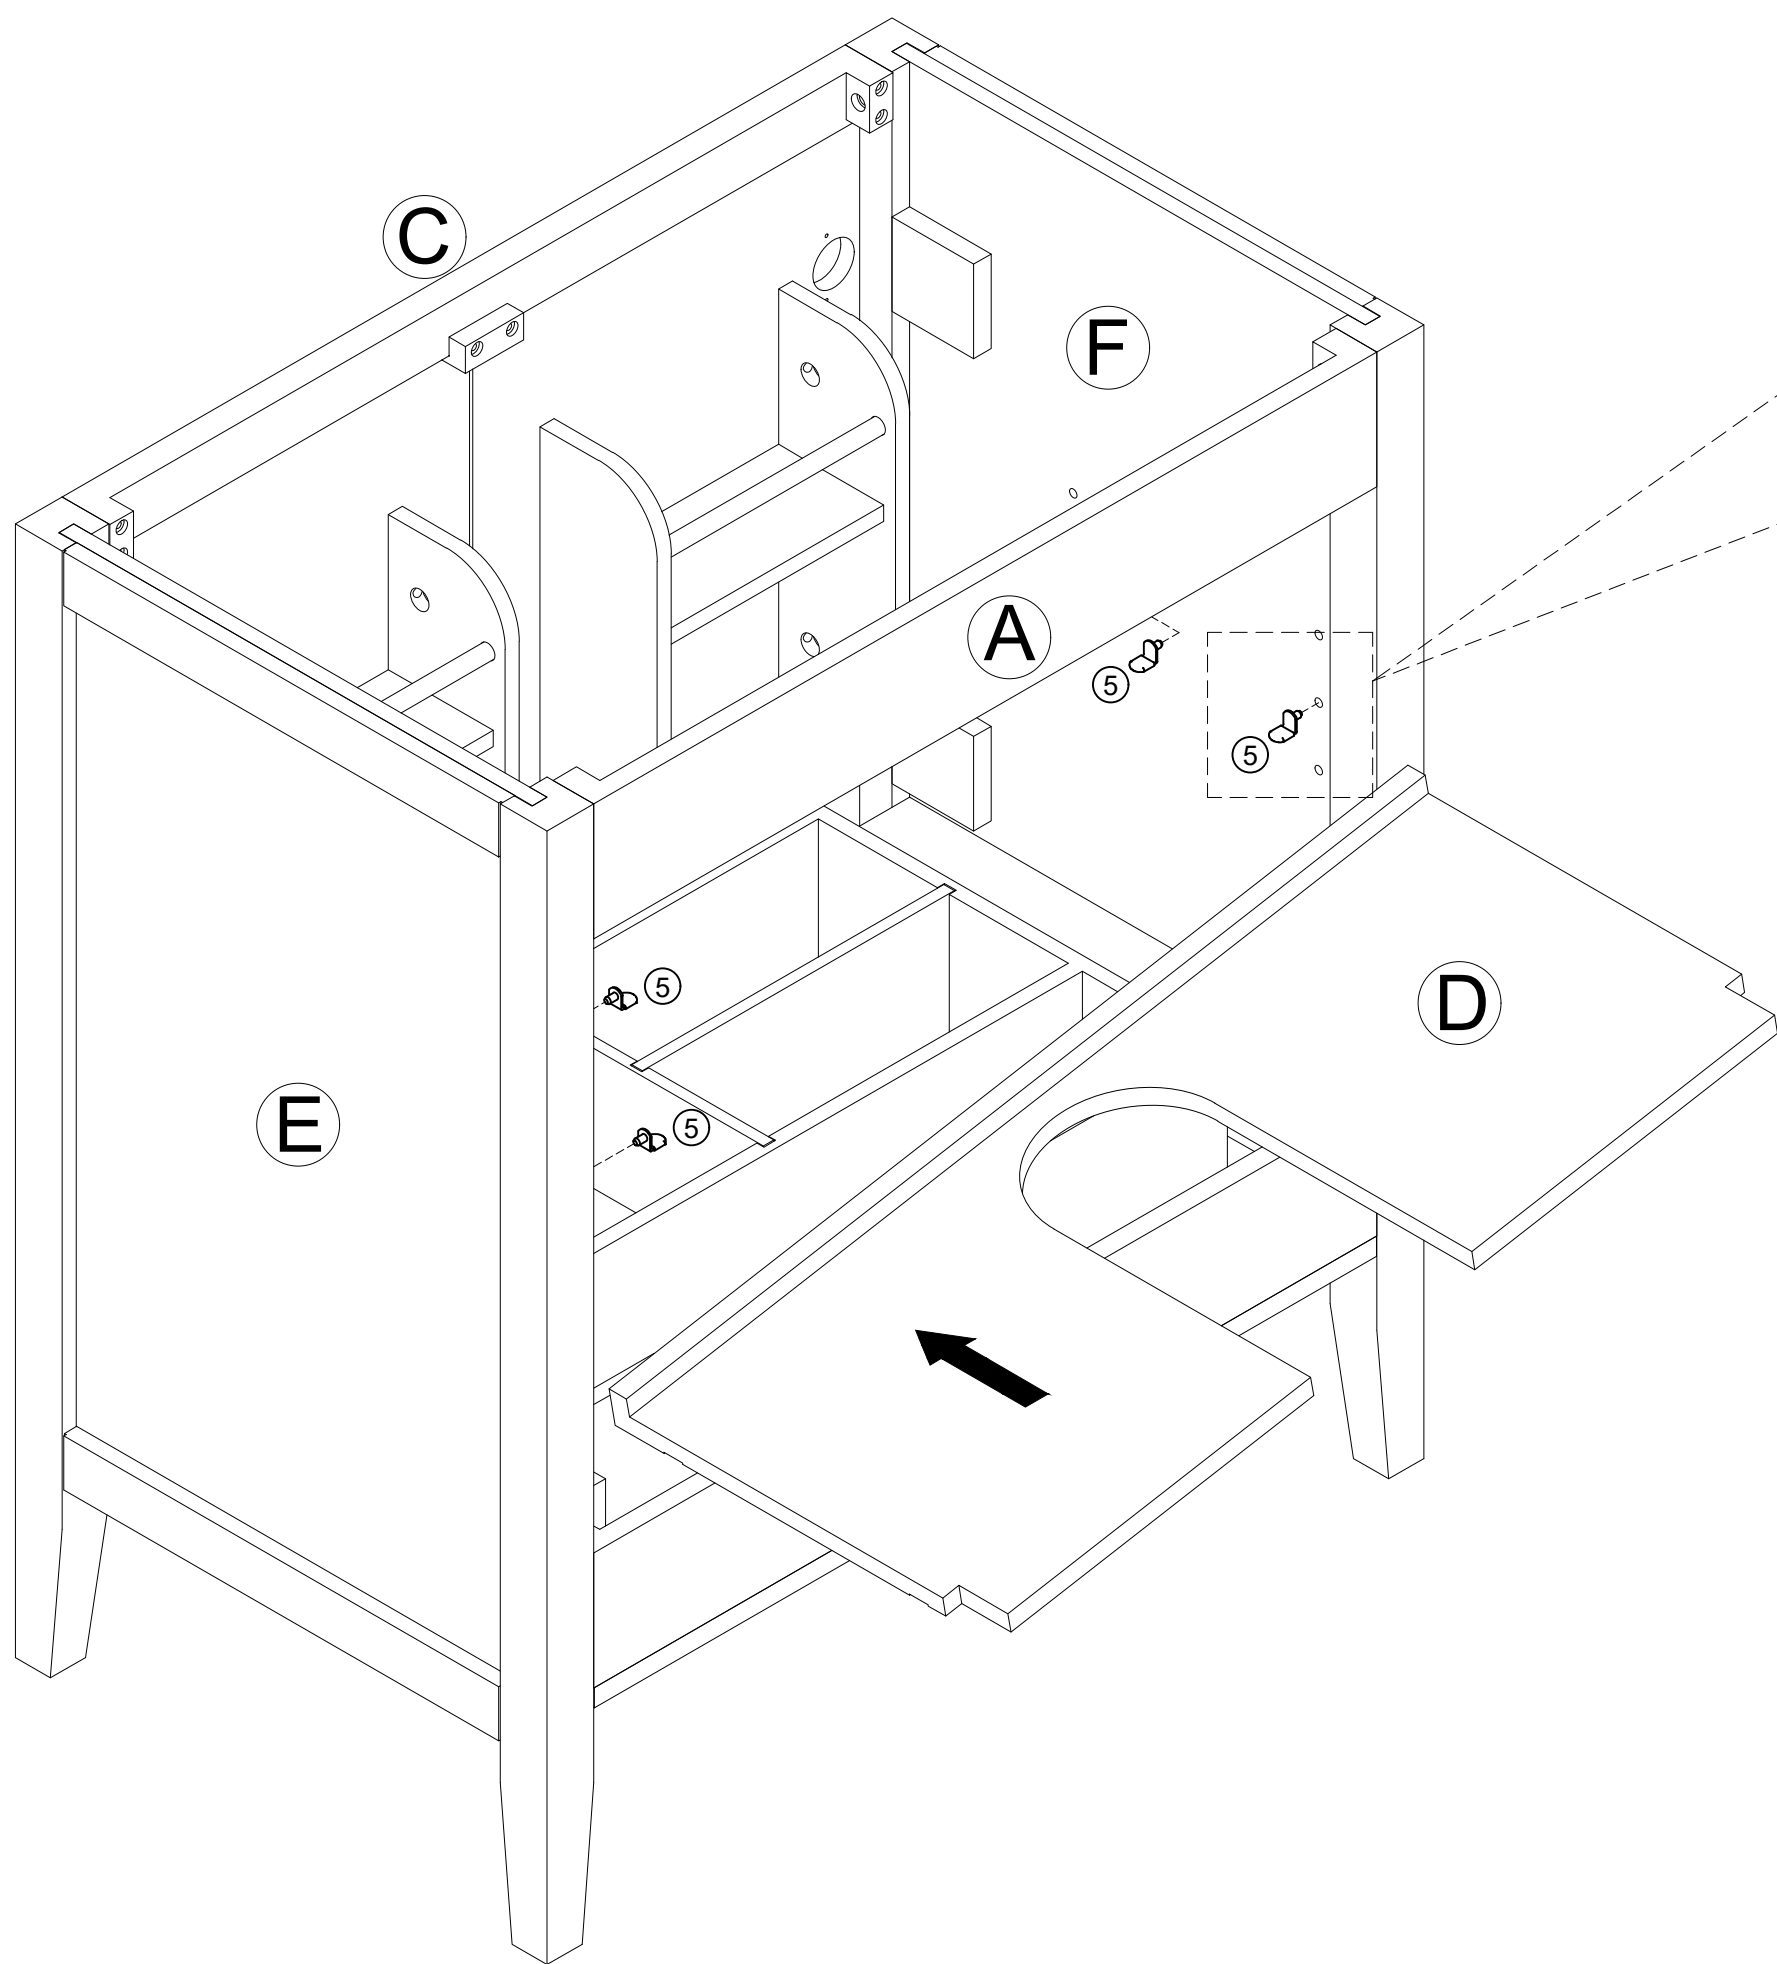

STEP 25

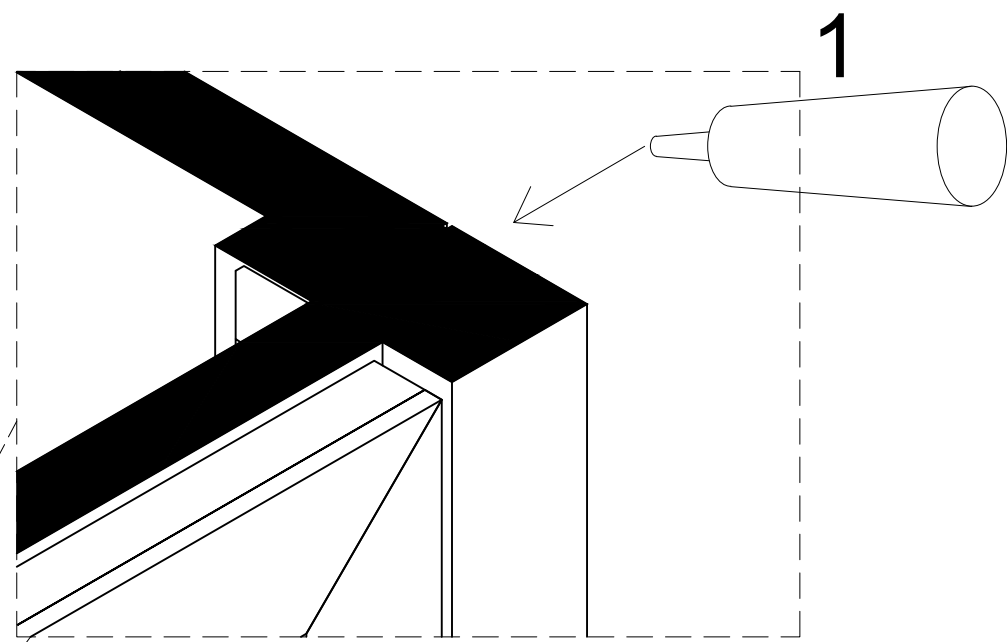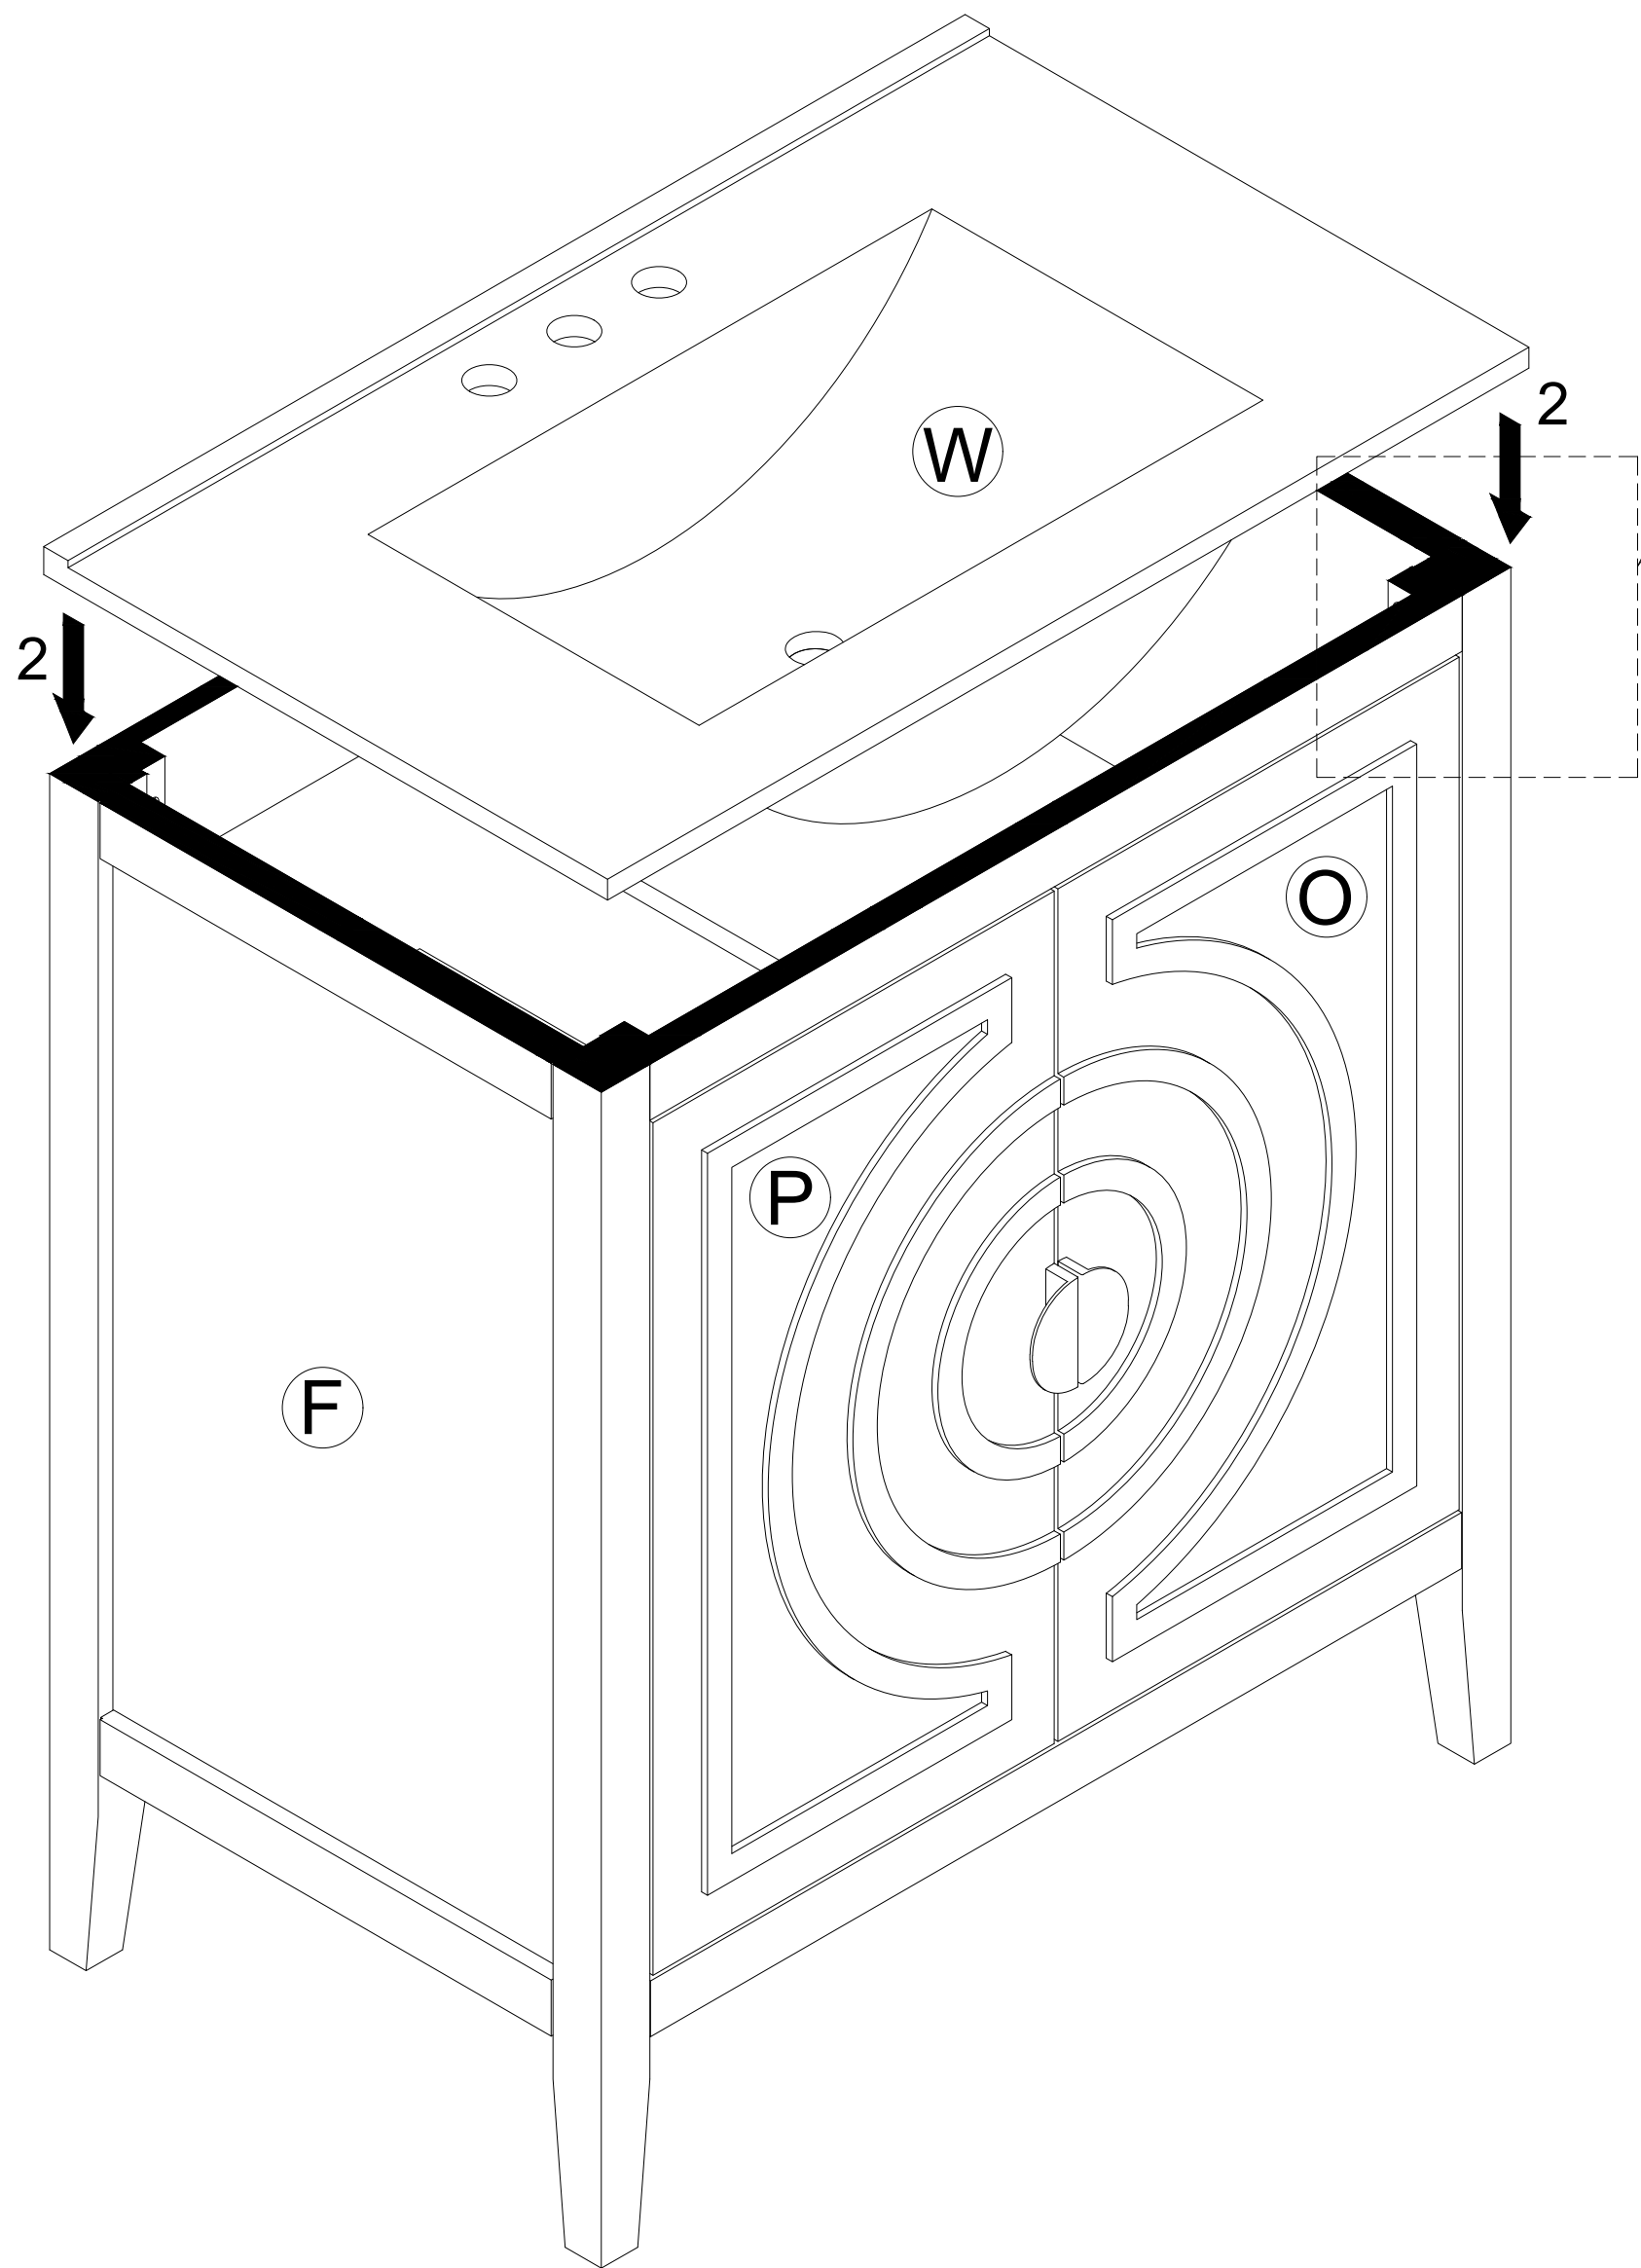

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.