
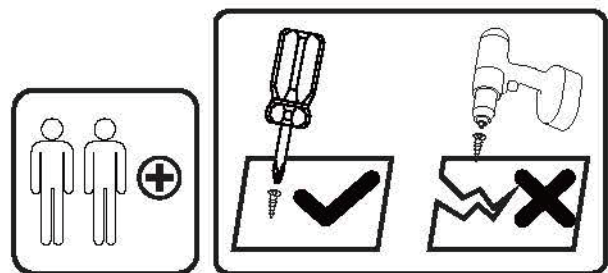


ASSEMBLY INSTRUCTIONS

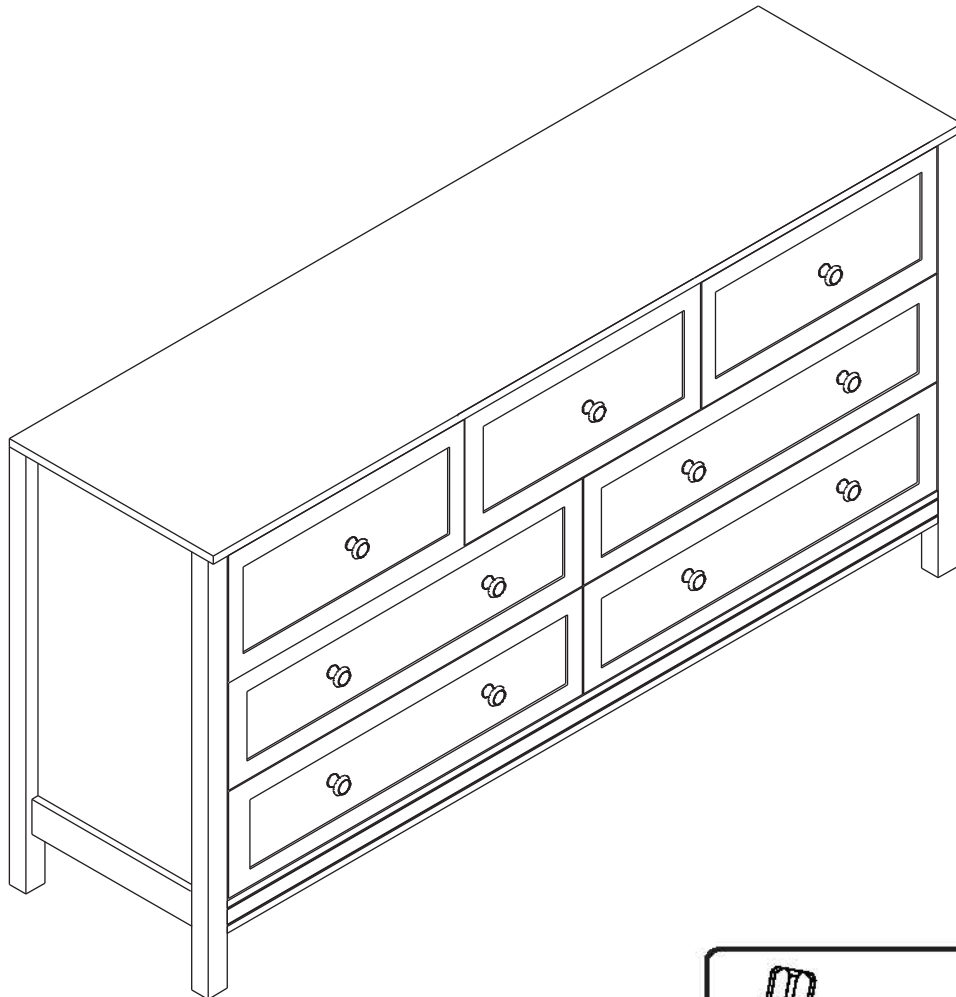

Tools Recommended

THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

IMPORTANT NOTICE

- This product contains small components, please ensure that they are kept away from small children.
- THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.
- Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included. Most parts are labelled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be used.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or pull your furniture (especially on carpet)






PLEASE DO NOT RETURE PRODUCT TO US IMMEDIATELY










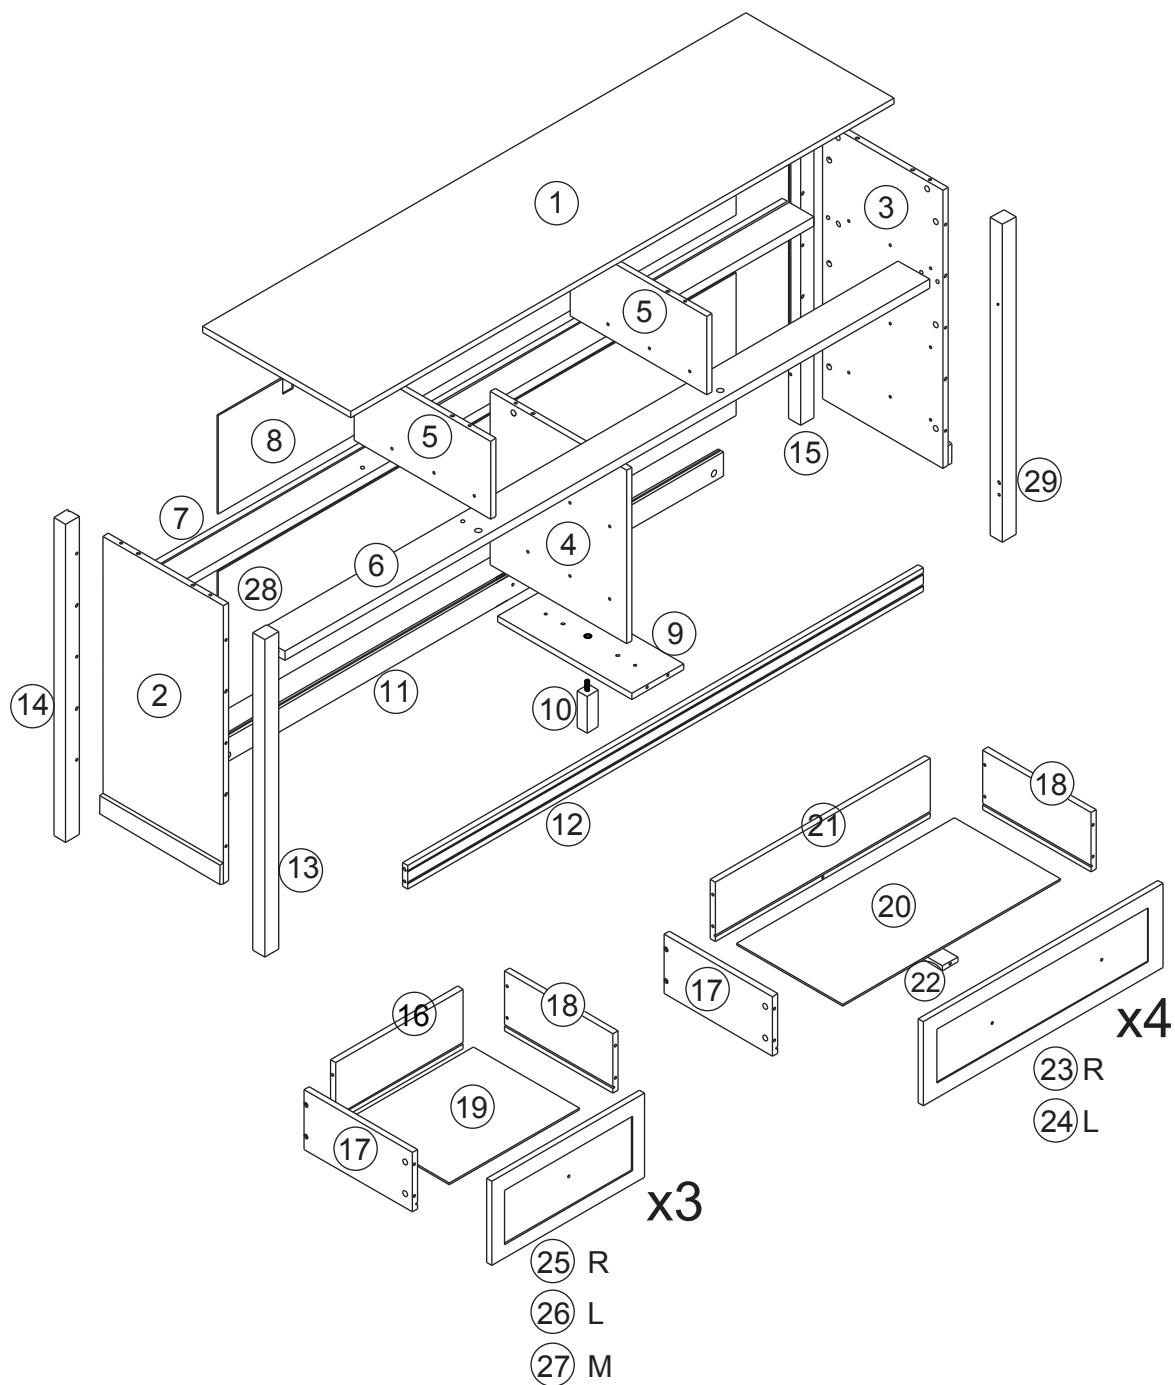










If a part is missing or damaged, email our customer service.
We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance? Email us

For Prompt, reliable service, please have your assemble instruction ready.


! WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: <ul style="list-style-type: none">• ALWAYS install anti-tip device provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.
	<p><i>This is a permanent label. Do not remove!</i></p>



A x66  6x35mm	B x66  6x30mm	C x27  6x30mm	D x8  5x40mm	E x32  4x30mm	F x84  3.5x12mm	G x4 
H x2  4x12mm	I x2 	J x2 	K x11  4x18mm	L x11 	M x1 	N x12 
O x12  3x14mm	P x2  4x35mm	CL x7 	CR x7 	DR x7 	DL x7 	


STEP 1

Install the screw A on the part 15,29
Insert the dowel C into part 3,
and then put the eccentric B into the corresponding hold and
use a flat-blade screwdriver to turn it clockwise to tighten,
the installation is as shown below.

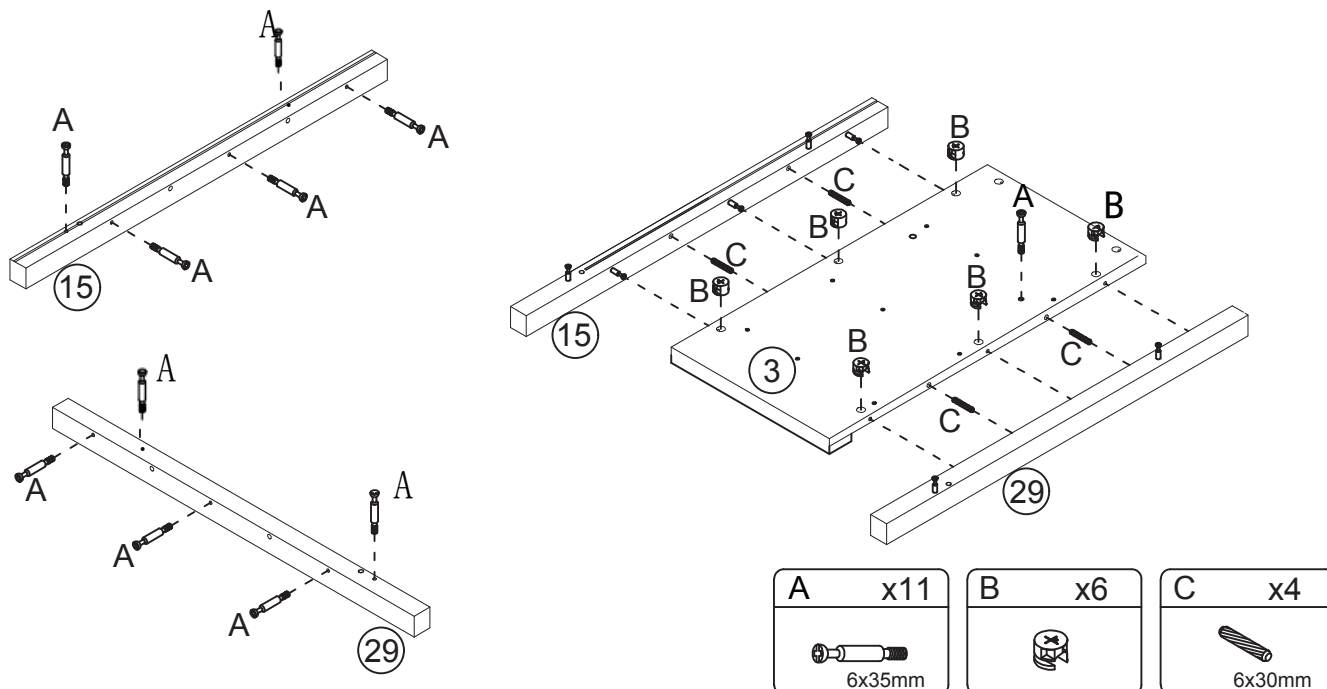


STEP 2



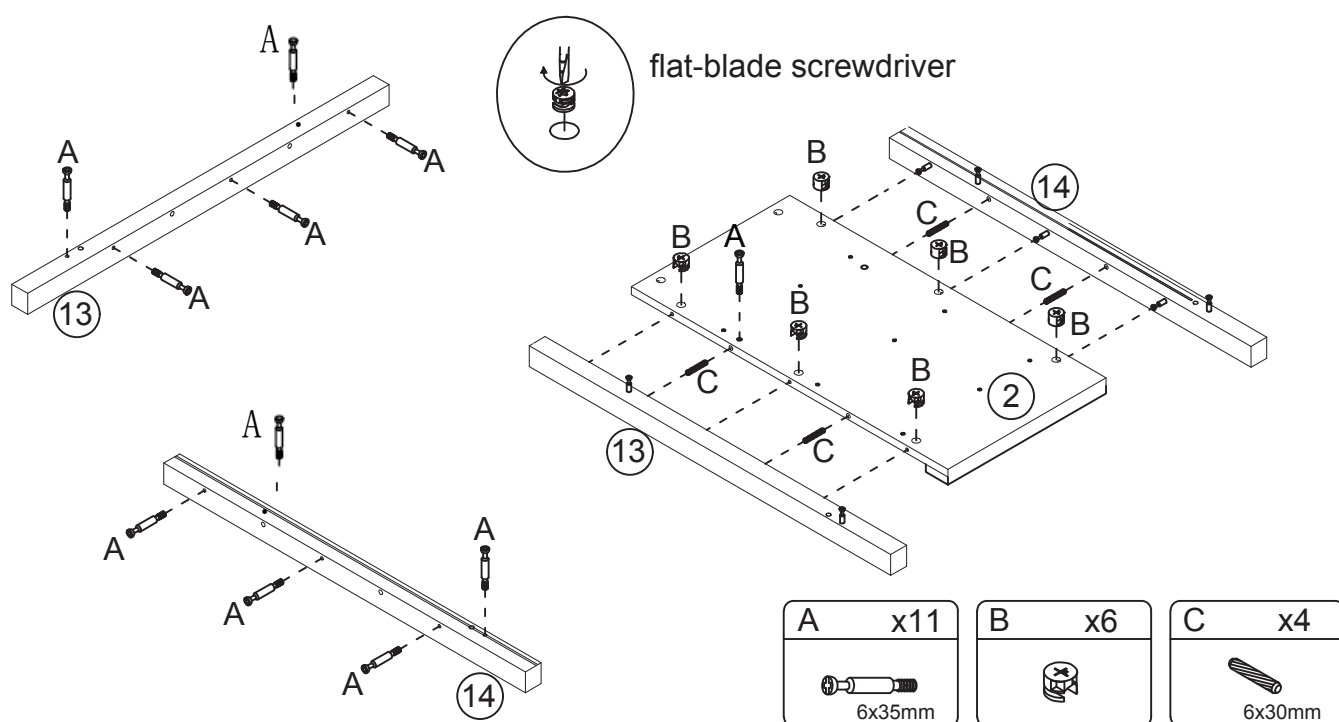

Install the screw A on the part 13,14
Insert the dowel C into part 2,
and then put the eccentric B into the corresponding
hold and use a flat-blade screwdriver to turn it clockwise to tighten,
the installation position is as shown below.

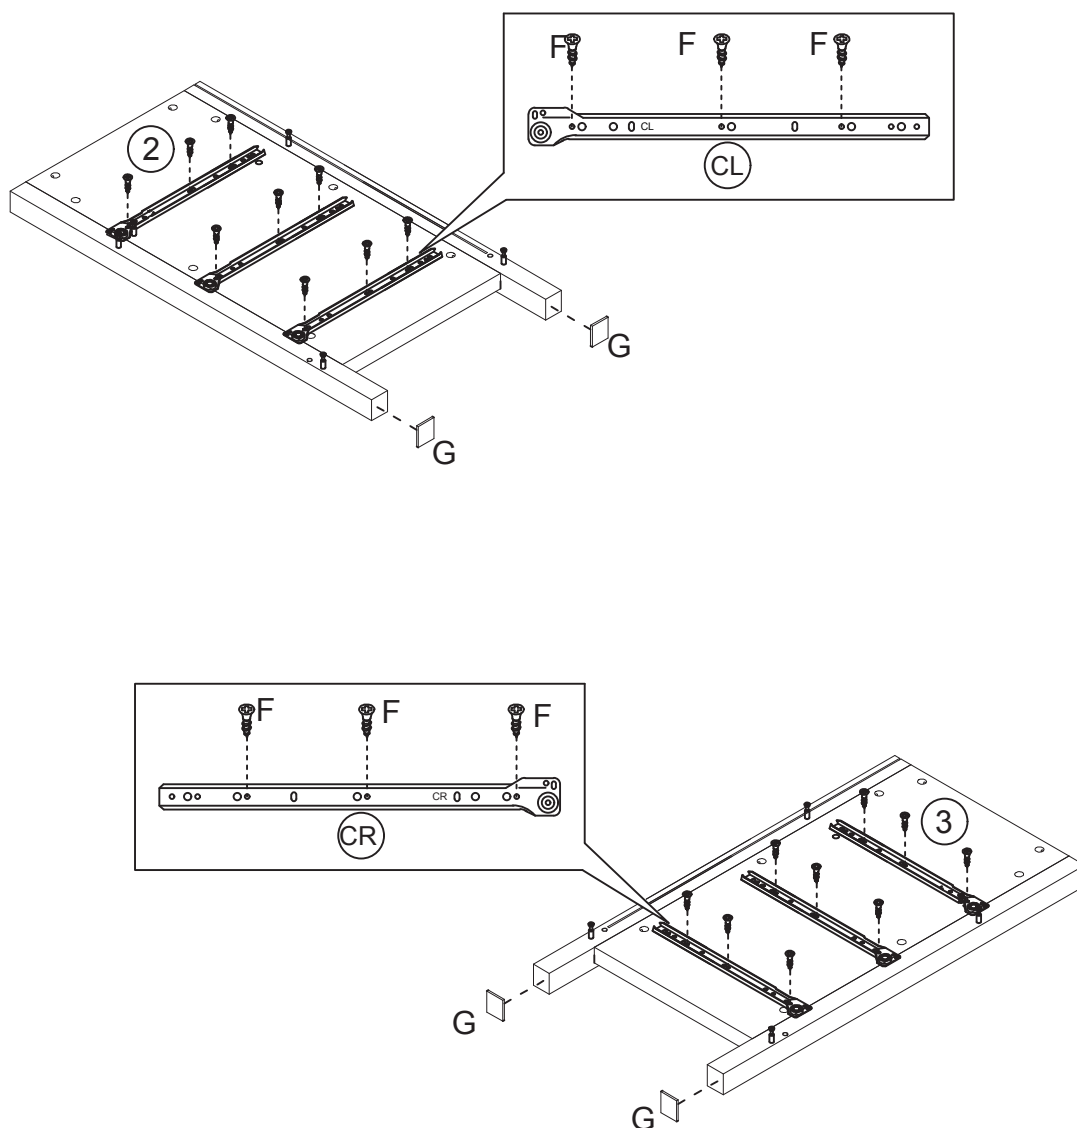

STEP 3


Use the screw F to install the guide rail CL on the side panel 2, and install the guide tail CR on the side panel 3. the installation position is as shown in the figure below.




F	x18	G	x4	CL	x3	CR	x3
							
3.5x12mm							

STEP 4 x2


Use the screw F to install the guide rail CL on the side panel 5, and install the guide tail CR on the side panel 5. the installation position is as shown in the figure below.

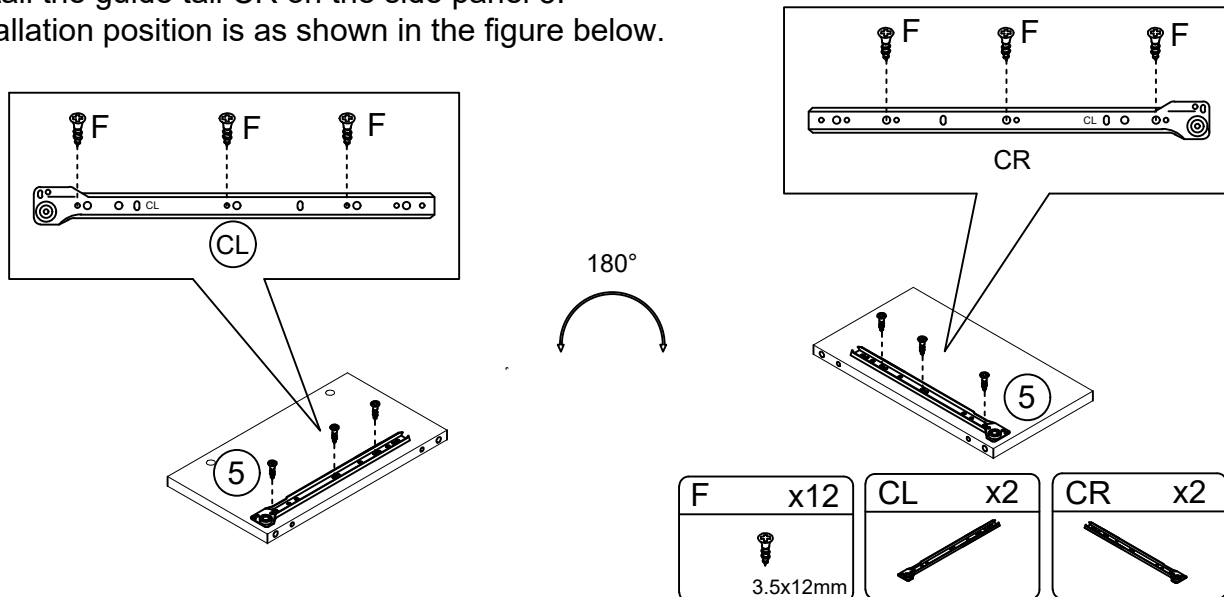

STEP 5

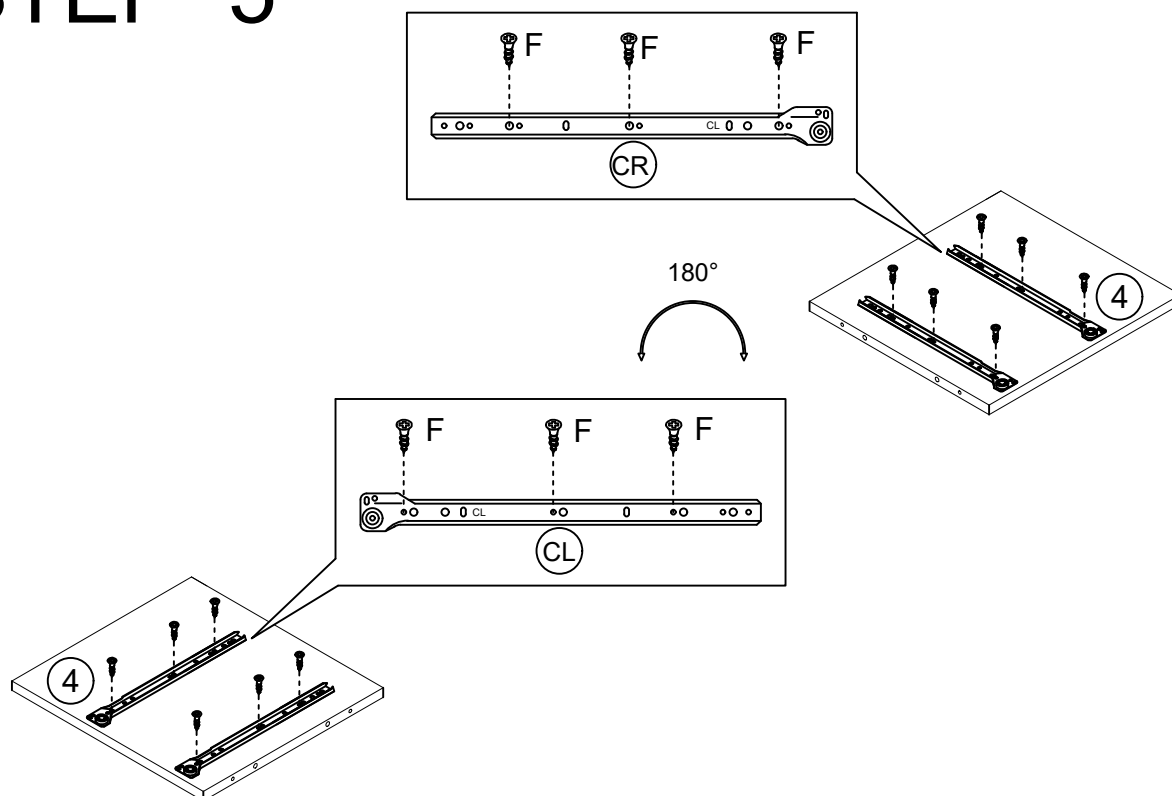


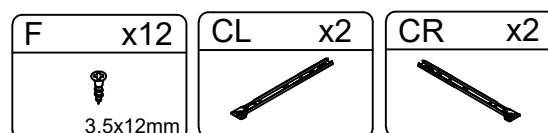

Use the screw F to install the guide rail CL on the side panel 4, and install the guide tail CR on the side panel 4. the installation position is as shown in the figure below.



STEP 6

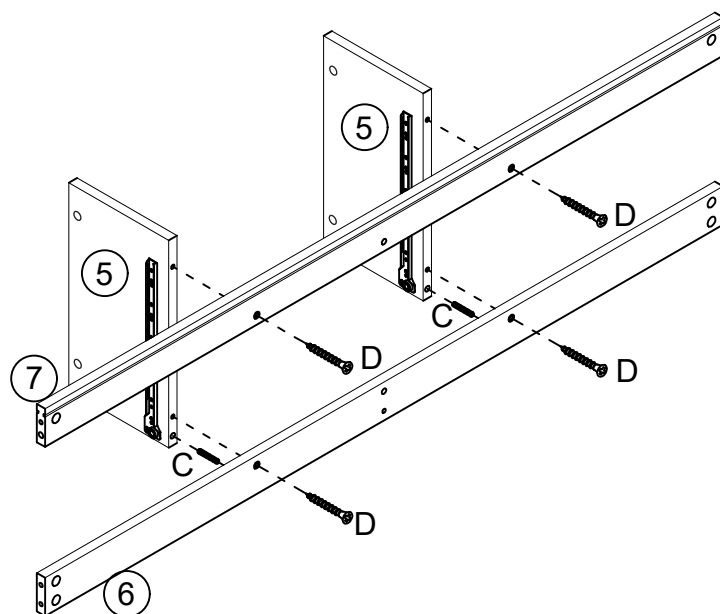
Insert the dowel C into part 5 first, then assemble parts 7,6 and part 5 by screw D, the installation position is as shown below.





C	x2	D	x4
			
6x30mm		5x40mm	

STEP 7

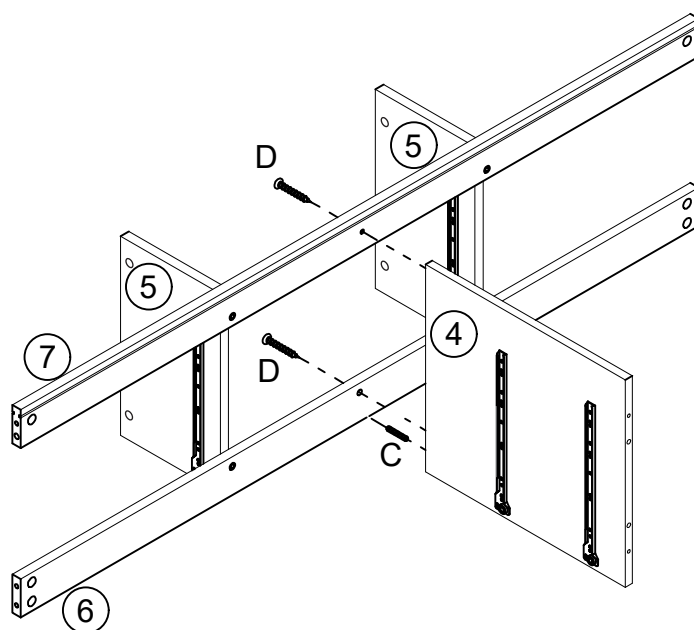
Insert the dowel C into part 6 first, then assemble parts 7,6 and part 4 by screw D, the installation position is as shown below.








C	x1	D	x2
			
6x30mm		5x40mm	

STEP 8

Assemble parts 10 and part 9 by screw M,the installation position is as shown below.

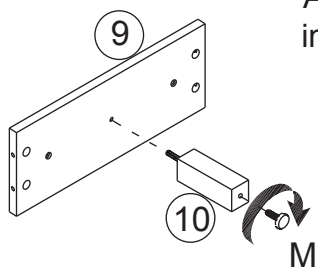


Install the screw A on the part 11,12 and then put the eccentric B into the corresponding hold and use a flat-blade screwdriver to turn it clockwise to tighten,the installation position is as shown below.

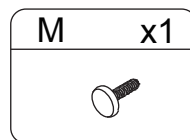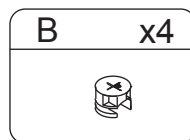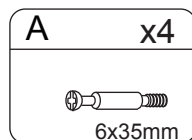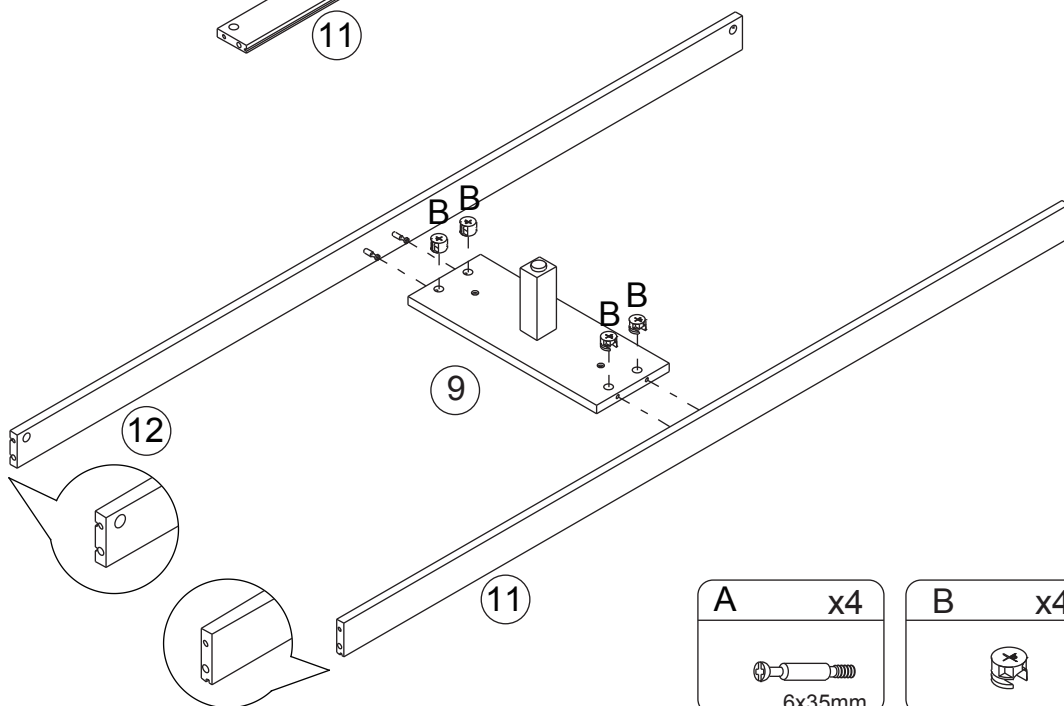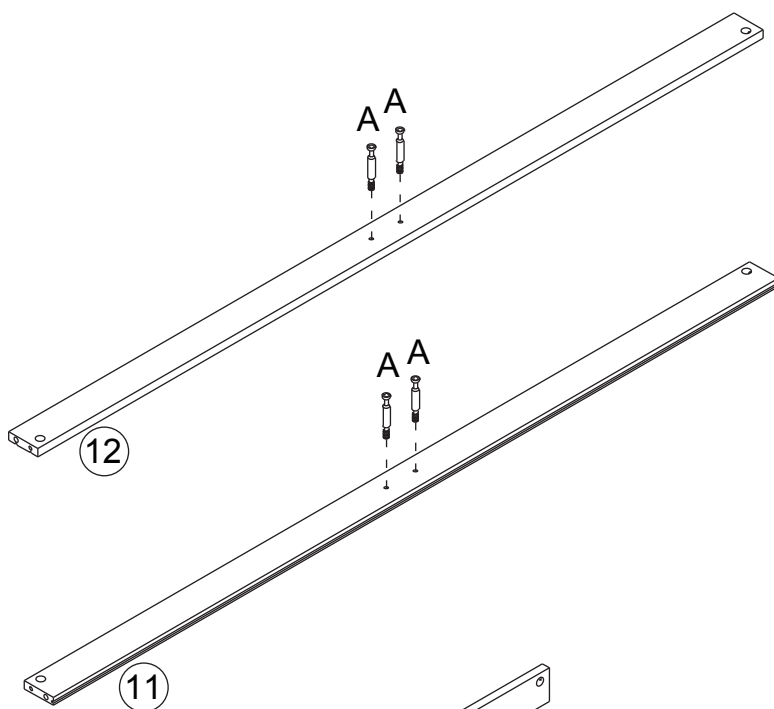

STEP 9



Insert the dowel C into part 4 first, then assemble parts 11, 12 and part 4 by screw D, the installation position is as shown below.

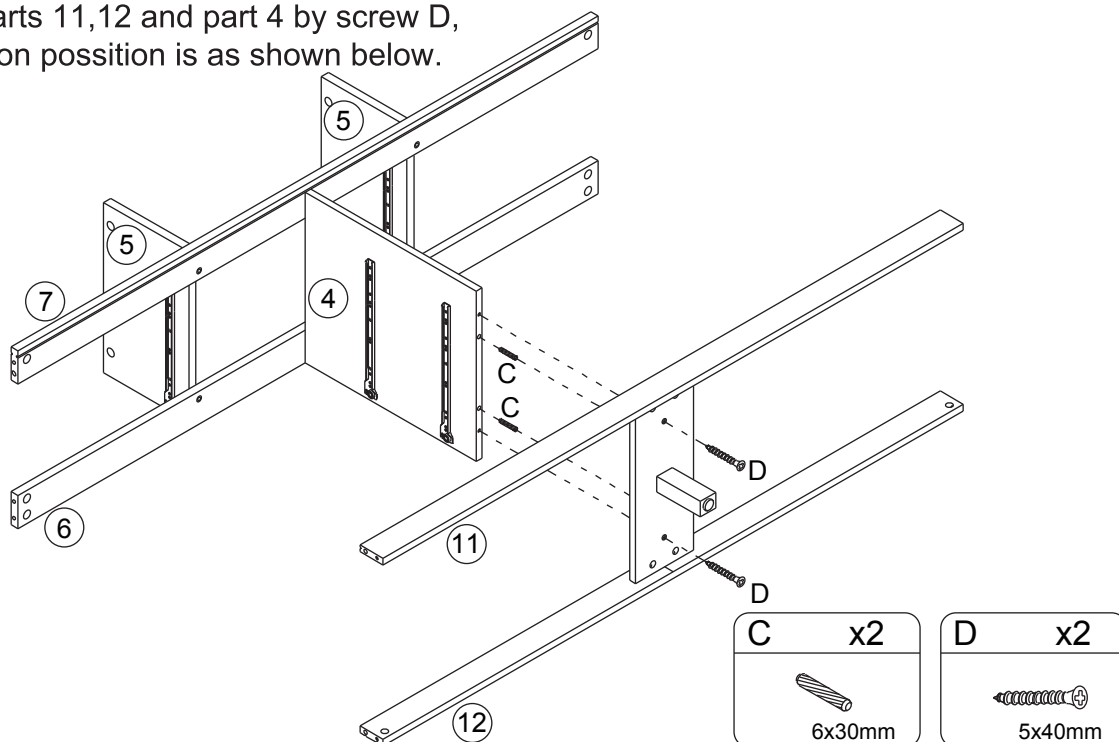

STEP 10


Put the eccentric B into the corresponding hold (part 6; 7; 11; 12); Insert the dowel C into part 4 and use a flat-blade screwdriver to turn it clockwise to tighten, the installation position is as shown below.

flat-blade screwdriver

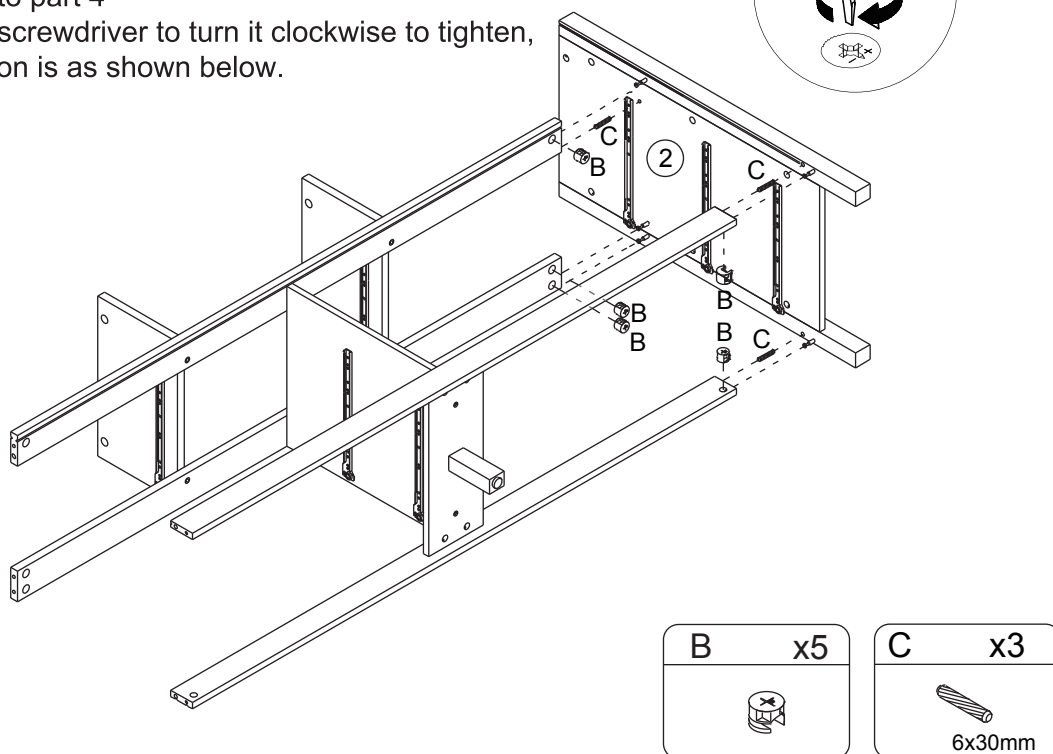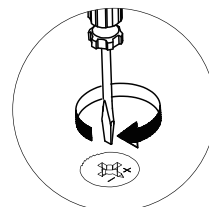

STEP 11





Insert part 28 along the slot, the position is as shown below.

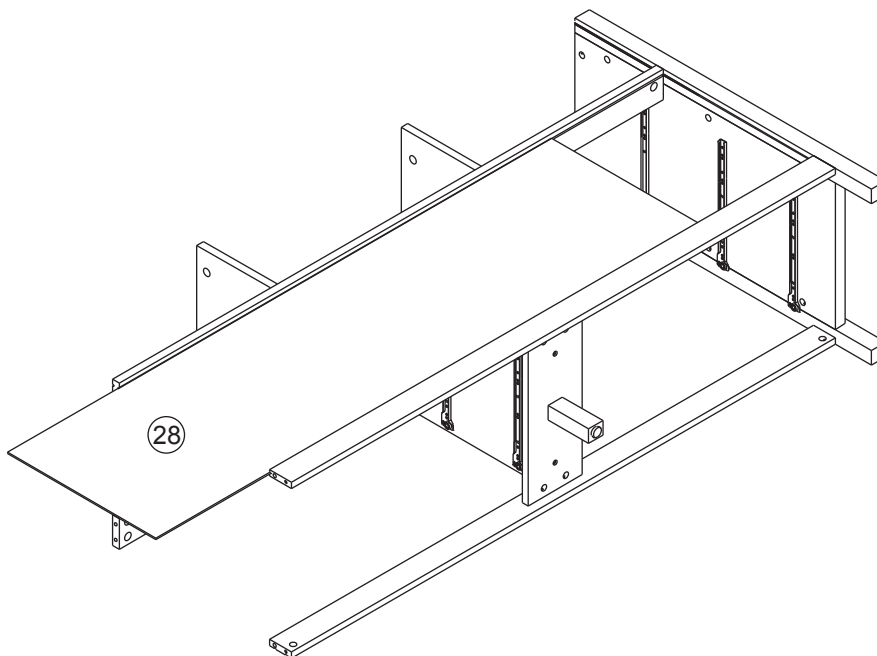

STEP 12



Insert the dowel C into part 7/6/11/12 first, put the eccentric B into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten, the installation position is as shown below.

flat-blade screwdriver

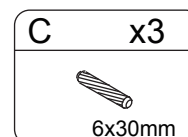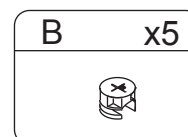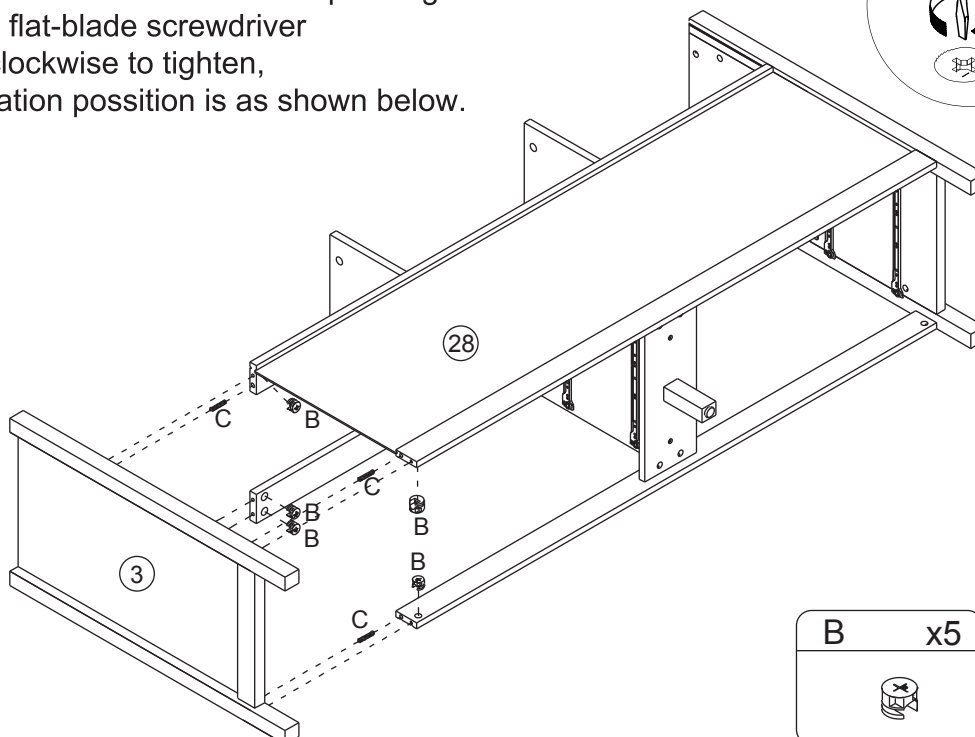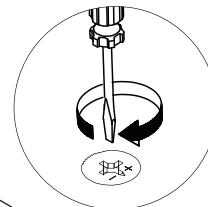





STEP 13

Insert the dowel C into part 3/5;
Insert part 8 along the slot, the position is as shown below.

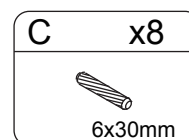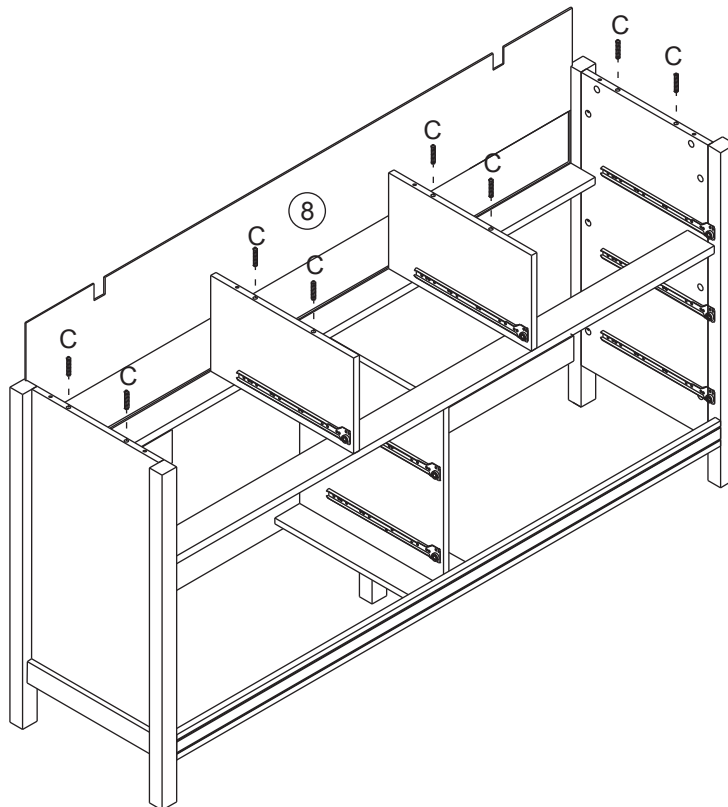

STEP 14



Install the screw A on the part 1,
fasten the L-shaped iron piece I with screw H;
the installation position is as shown below.

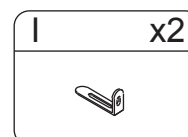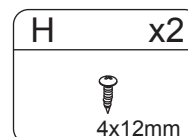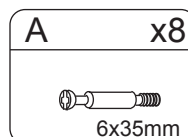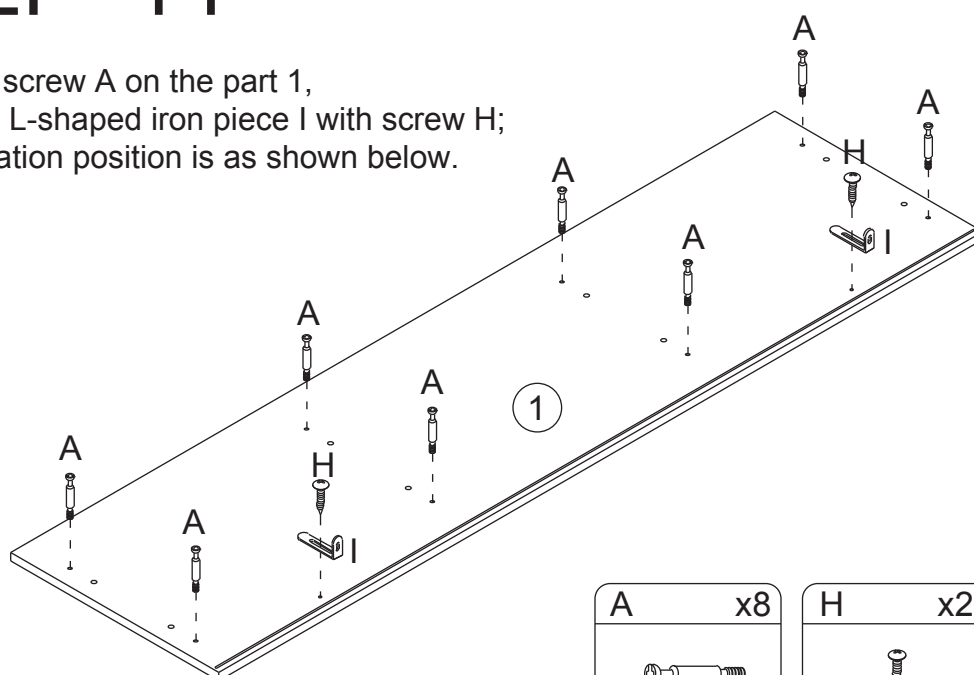

STEP 15

Put the eccentric B into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten, assemble parts 1, the installation position is as shown below.



flat-blade screwdriver

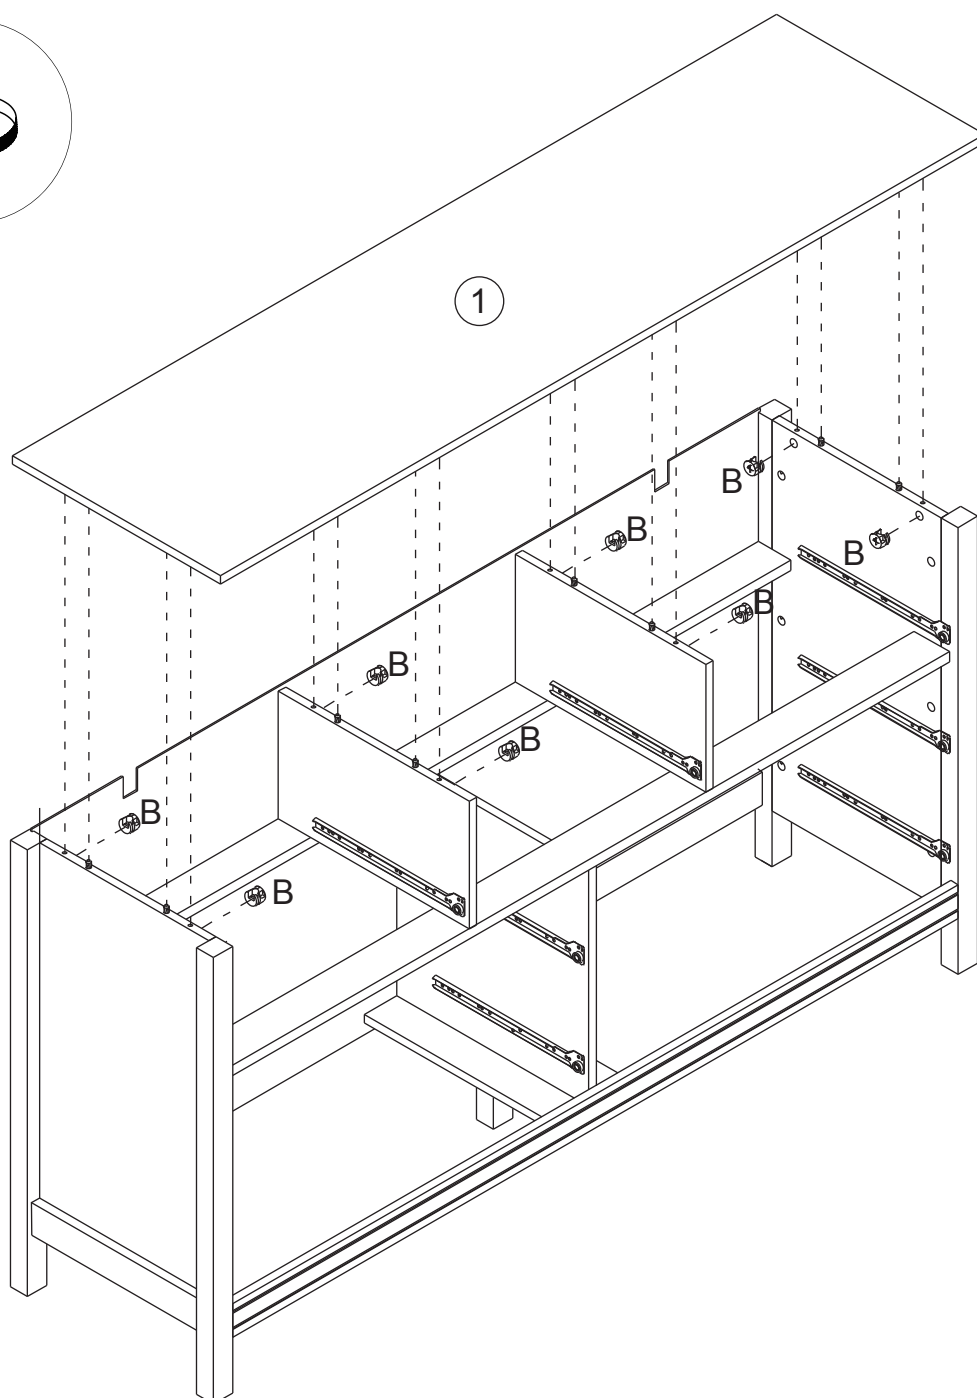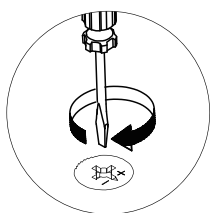

B	x8



STEP 16 x4

Assemble parts 17,18,22 and part 21 by screw E,the installation position is as shown below.

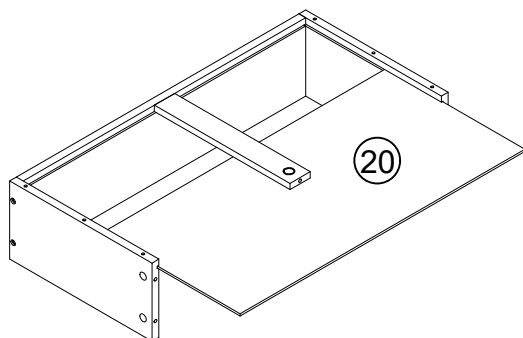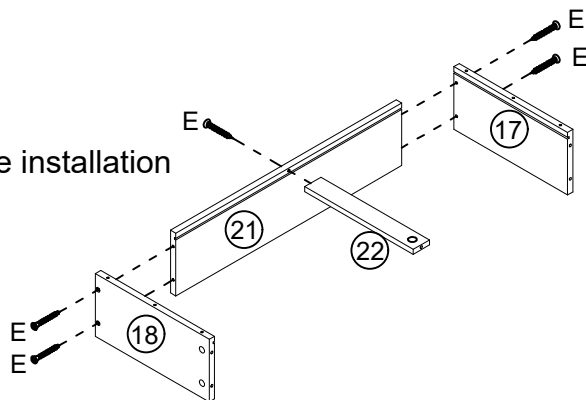


Insert the bottom plate 20 according to the slot of side plate.









Install the screw A on the drawer panels 23,24 first,and then use the screw K to lock the handle L on the drawer panels 23,24.

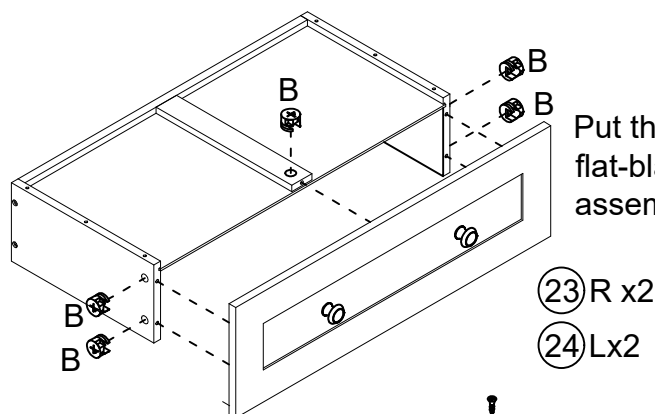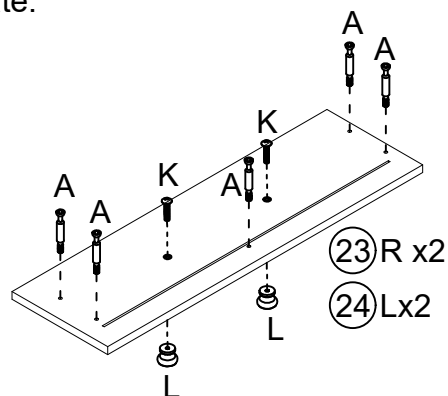


Put the eccentric B into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten, assemble drawer front.

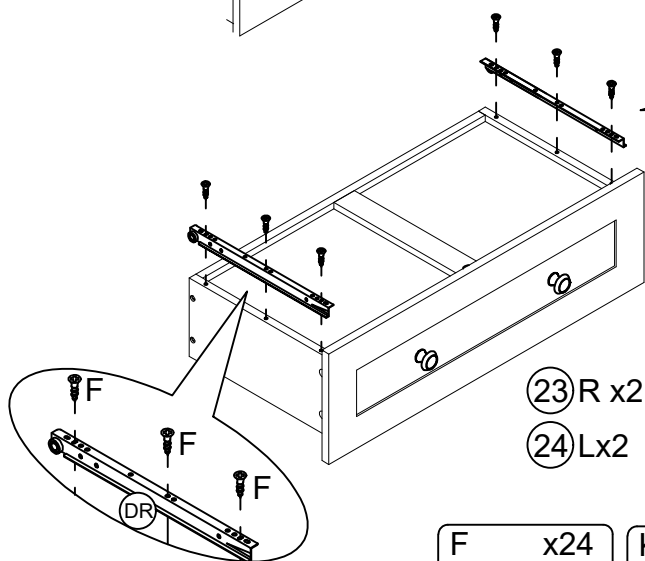


Use the screw F to install the guide rail DR/DL on the drawer side panel.
the installation position is as shown in the figure below.

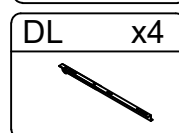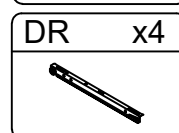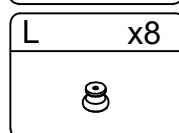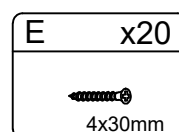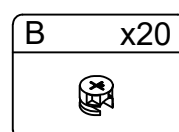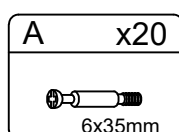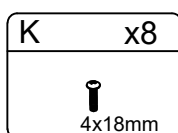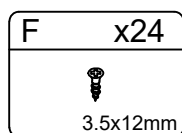


STEP 17 x3

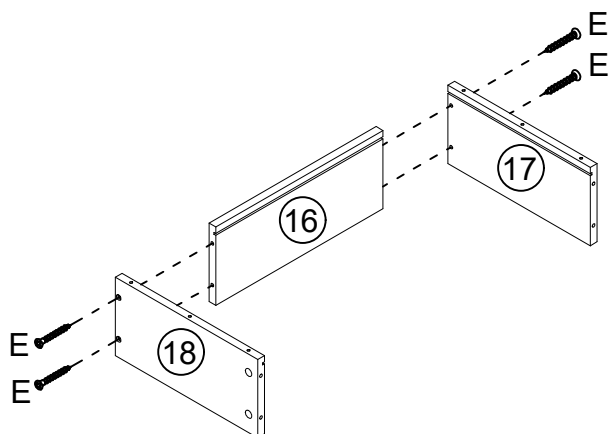


Assemble parts 17,18 and part 16 by screw E, the installation position is as shown below.

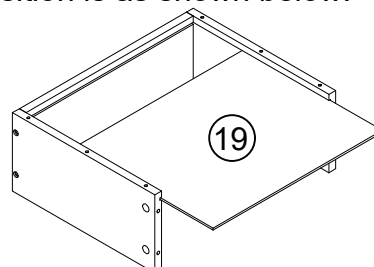

Insert the bottom plate 19 according to the slot of side plate.

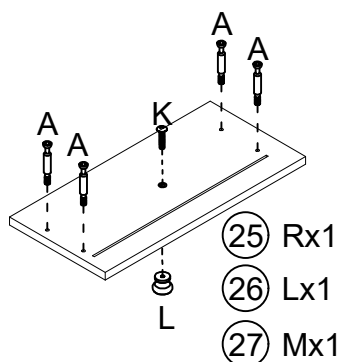


Install the screw A on the drawer panels 25,26,27 first, and then use the screw K to lock the handle L on the drawer panels 25,26,27.

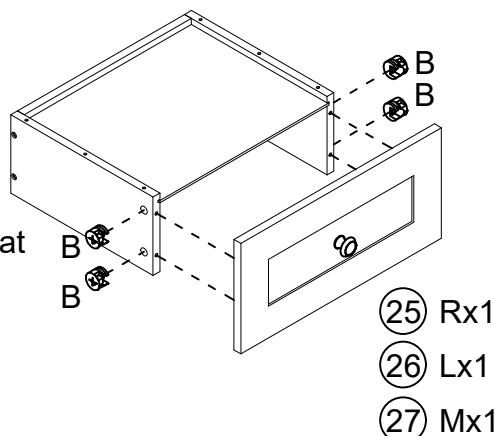

Put the eccentric B into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten, assemble drawer front.

Use the screw F to install the guide rail DR/DL on the drawer side panel. the installation position is as shown in the figure below.

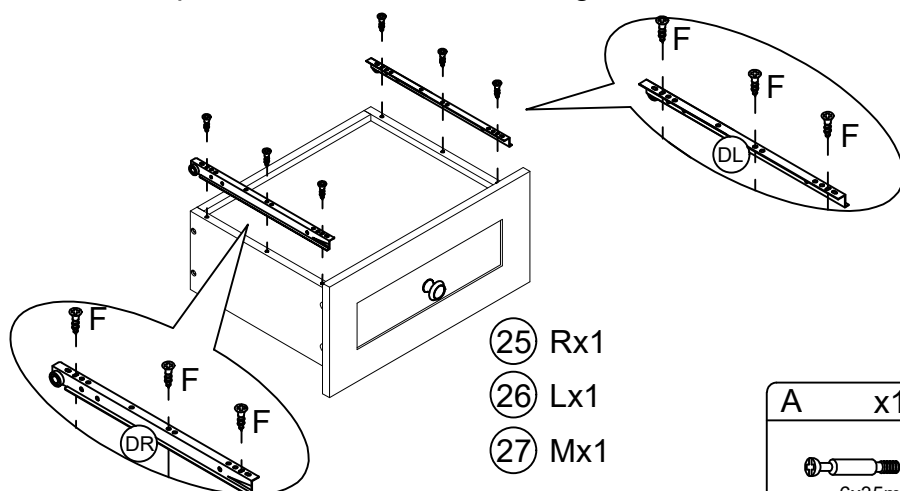

F	x18
	3.5x12mm

K	x3
	4x18mm

A	x12
	6x35mm

B	x12

E	x12
	4x30mm




L	x3

DR	x3

DL	x3




STEP 18

Use the screws in component O&N to fasten the back plate buckle.
The installation position is as shown in the figure below.

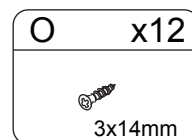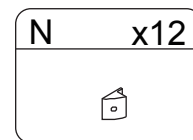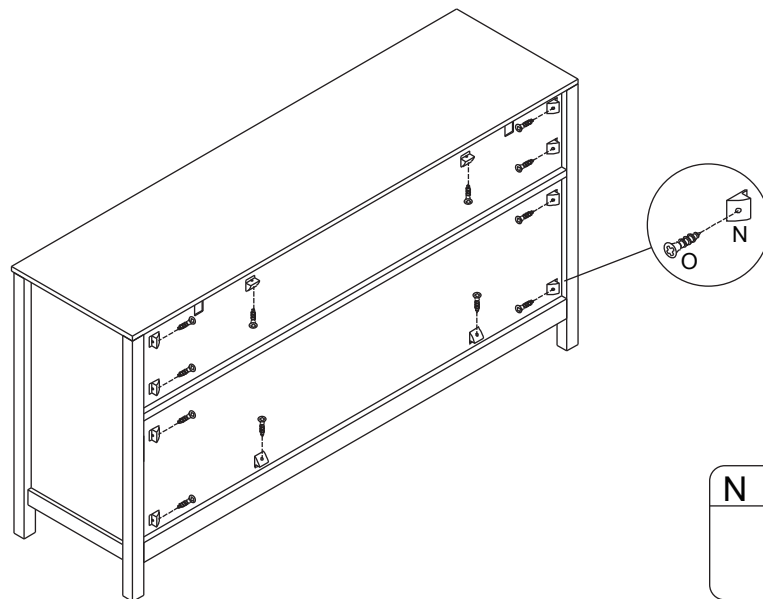

STEP 19

First drill holes on the wall where it is placed, and then use the long screw and expansion screw J to fix the cabinet with screw P.
The installation location is as shown in the figure below.

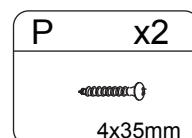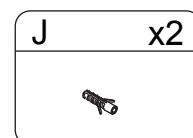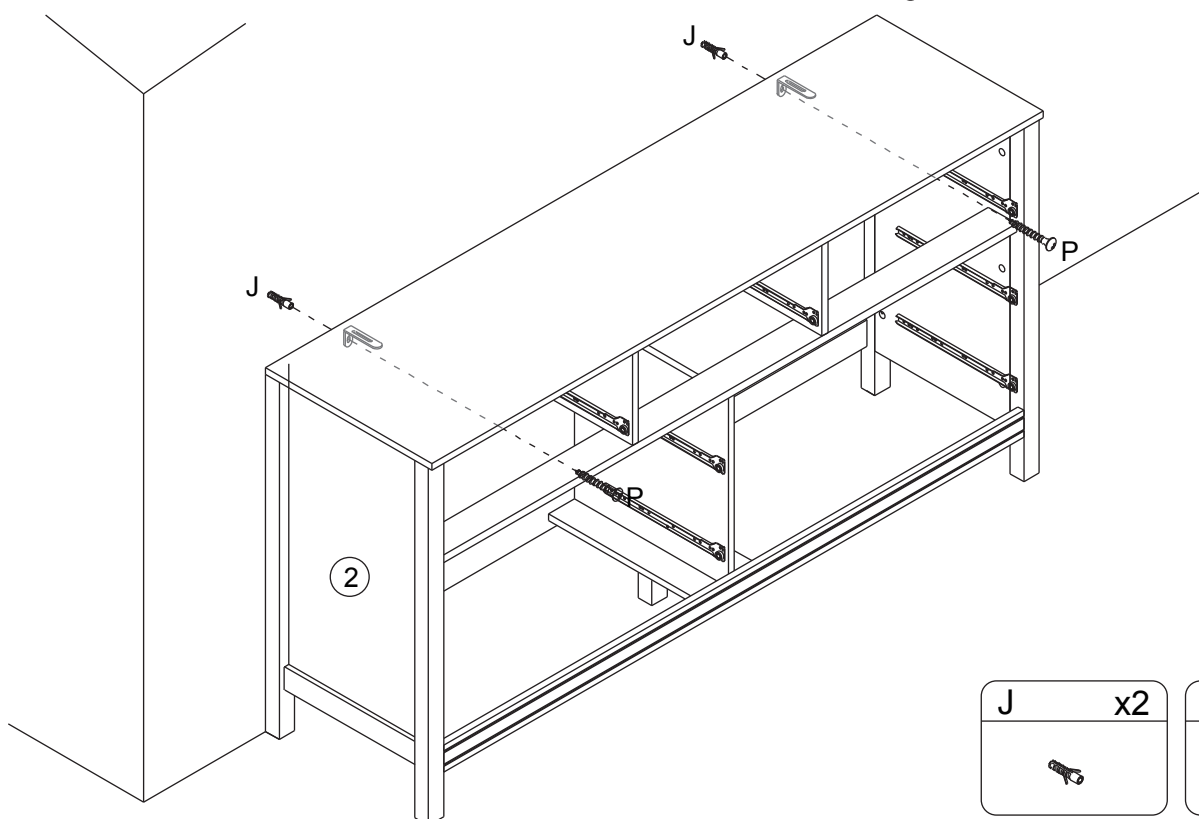

STEP 20

