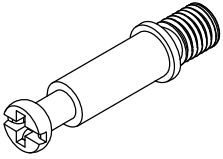
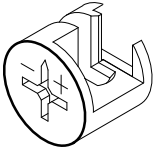
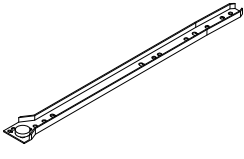
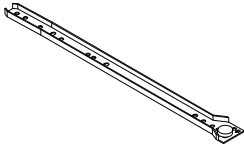
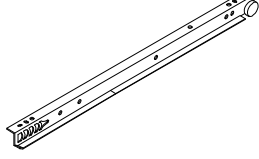
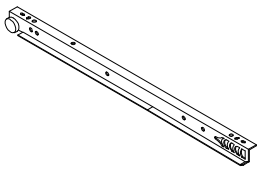


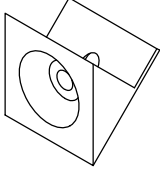



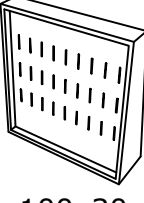


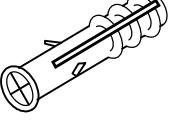
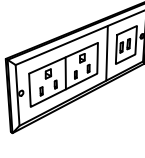
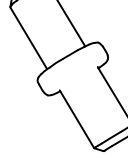
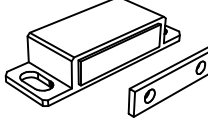
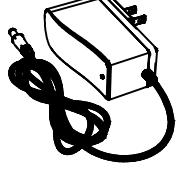


Please have these tools ready in advance


Tips:

Before installing this product, please double-check that the quantity of each of the following parts is accurate, and if anything is missing, please contact your supplier immediately.

<p>A x 0</p>  <p>M6x25mm</p>	<p>B x 0</p>  <p>Ø12x10mm</p>	<p>CL x 0</p>  <p>300mm</p>	<p>CR x 0</p>  <p>300mm</p>	<p>DL x 0</p>  <p>300mm</p>
<p>DR x 0</p>  <p>300mm</p>	<p>E x 0</p>  <p>Ø3.5x30mm</p>	<p>F x 0</p>  <p>Ø3.5x12mm</p>	<p>G x 12</p>  <p>15x15x9mm</p>	<p>H x 7</p>  <p>25x15x25mm</p>
<p>I x 7</p>  <p>M3x18mm</p>	<p>J x 8</p>  <p>15x6mm</p>	<p>K x 1</p>  <p>100x100x30mm</p>	<p>L x 1</p>  <p>125x90x50mm</p>	<p>M x 1</p>  <p>120x15mm</p>
<p>N x 1</p>  <p>30x6mm</p>	<p>receptacle x 1</p> 	<p>P x 2</p>  <p>20x5mm</p>	<p>Q x 1</p>  <p>30x15x10mm</p>	<p>R x 1</p>  <p>DC-3.7-5v</p>

Tips:


Before installing this product, please double-check that the quantity of each of the following parts is accurate, and if anything is missing, please contact your supplier immediately.

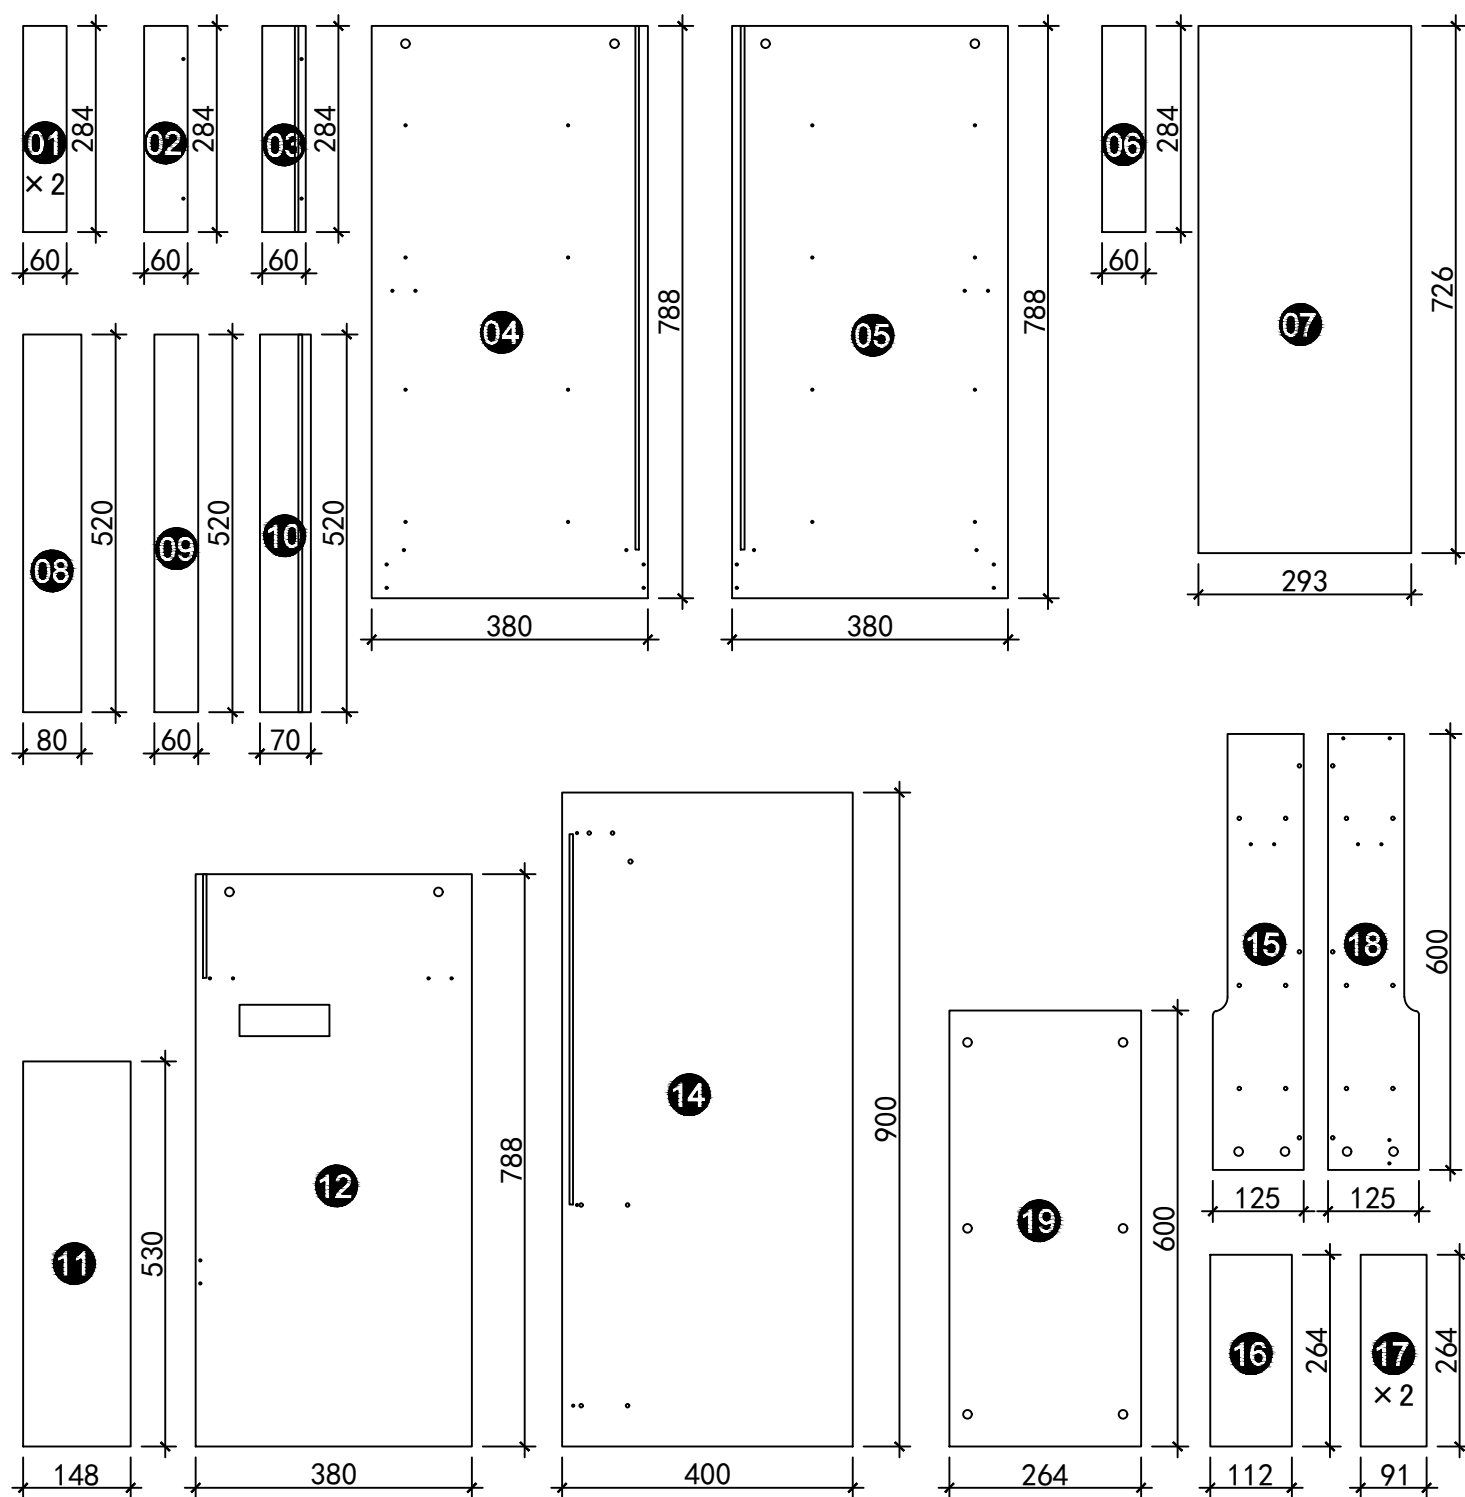


Drawing unit: mm





Tips:

Before installing this product, please double-check that the quantity of each of the following parts is accurate, and if anything is missing, please contact your supplier immediately.

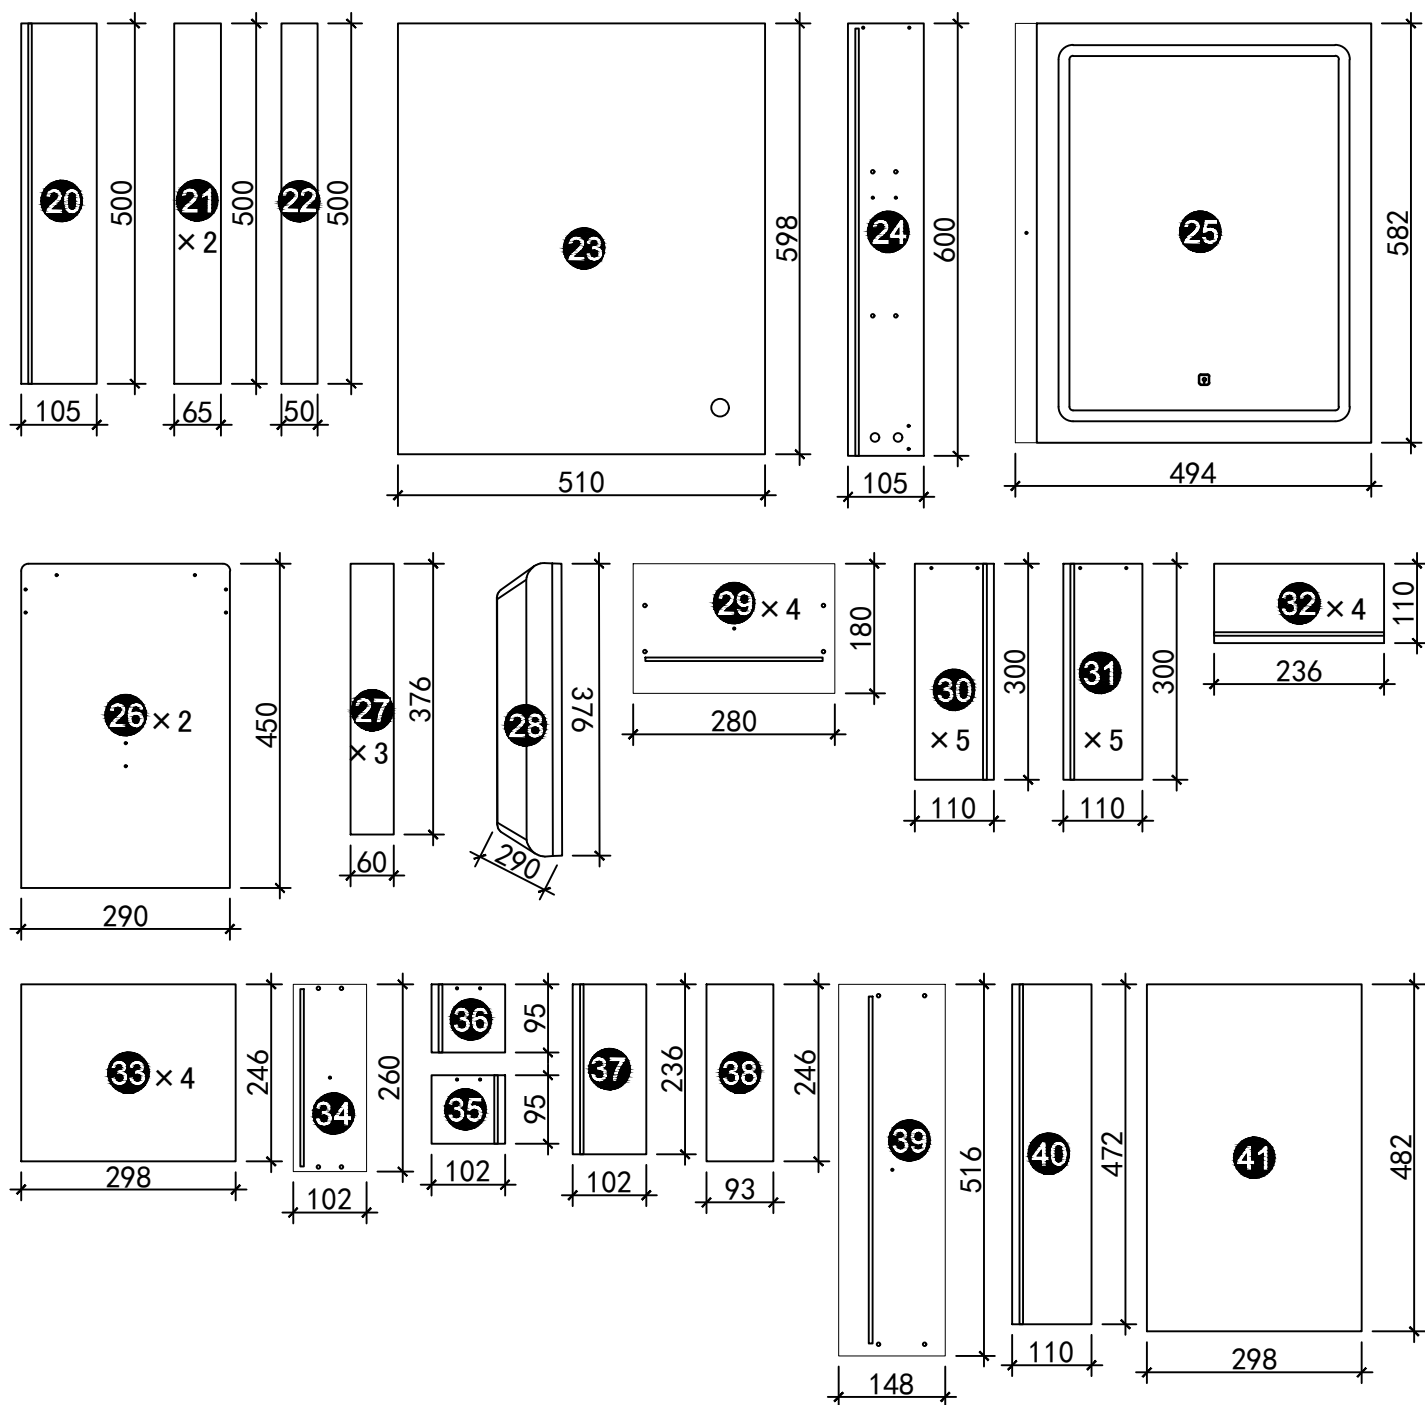


Drawing unit: mm

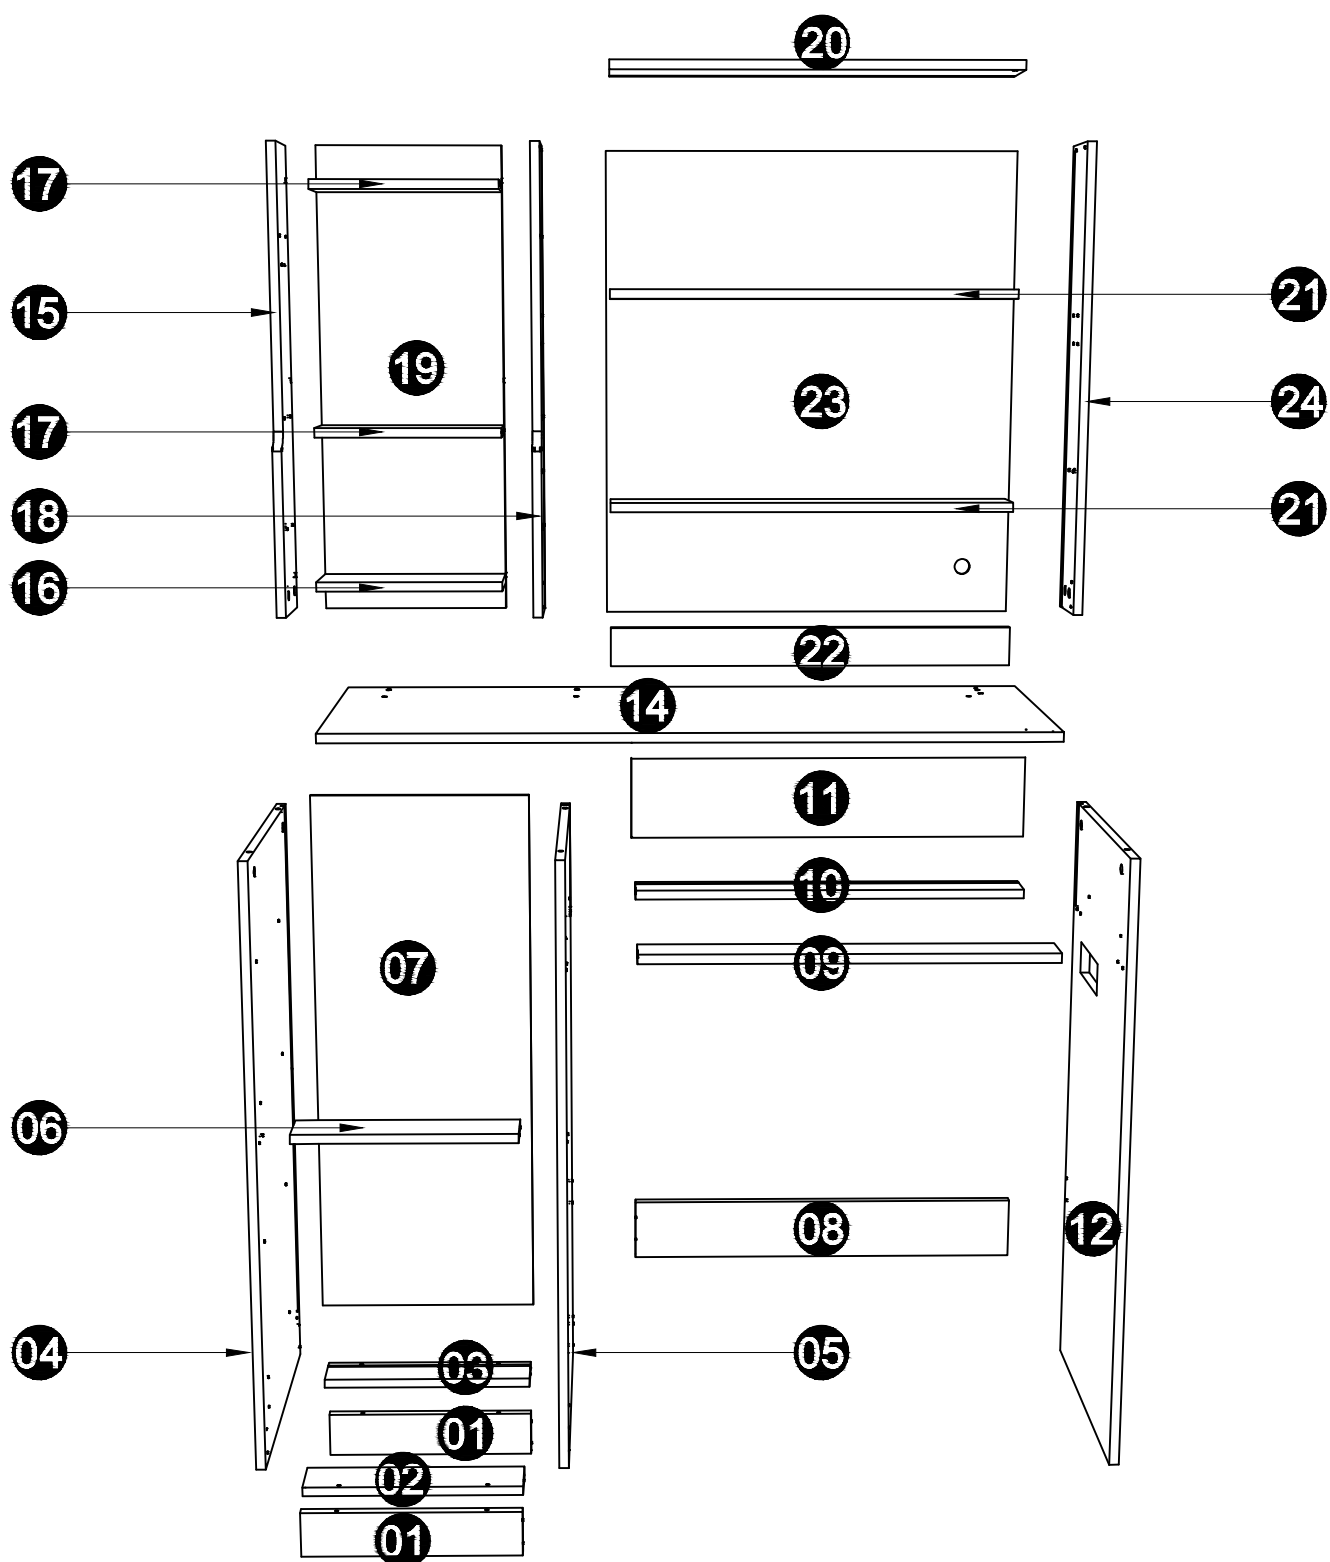

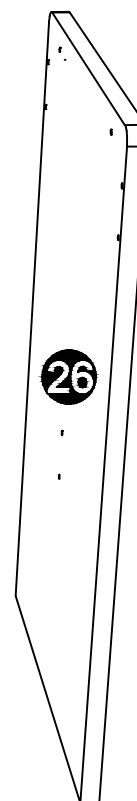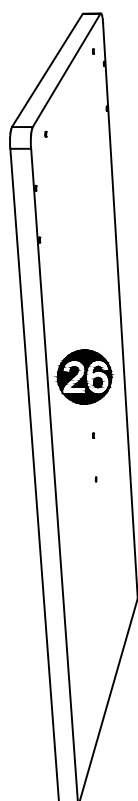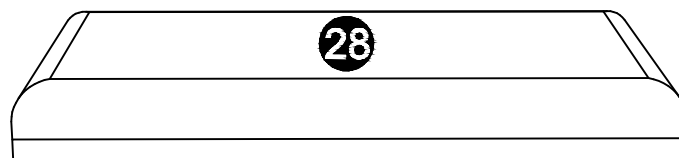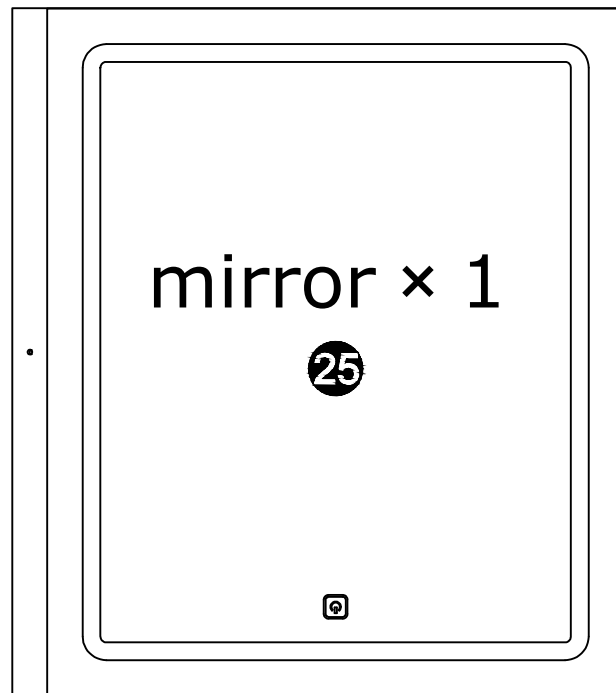


stool x 1


drawers × 4

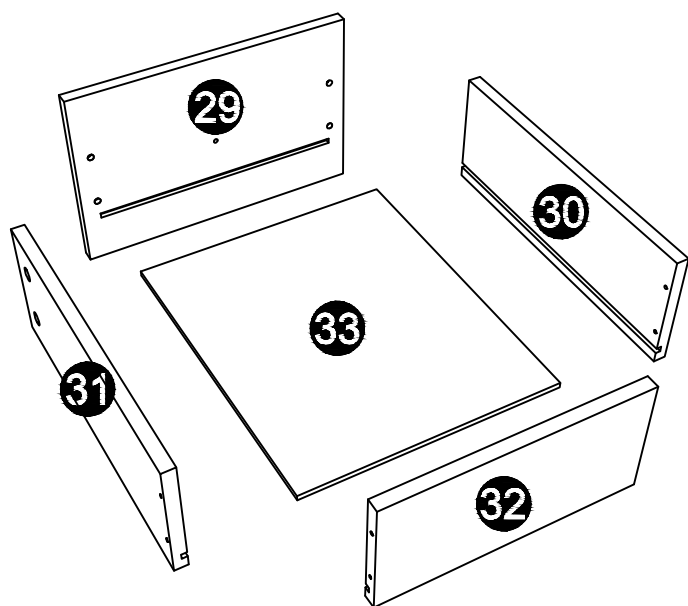





drawers × 1








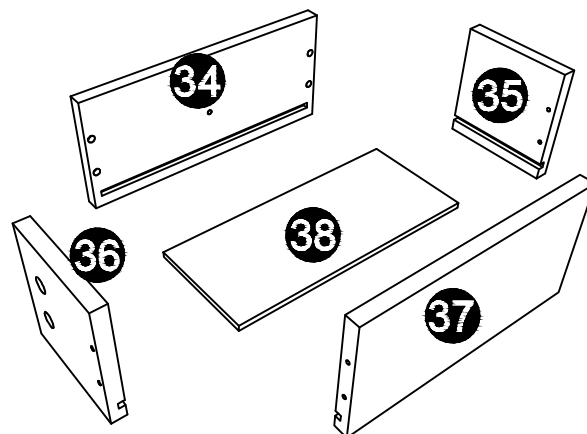


drawers × 1

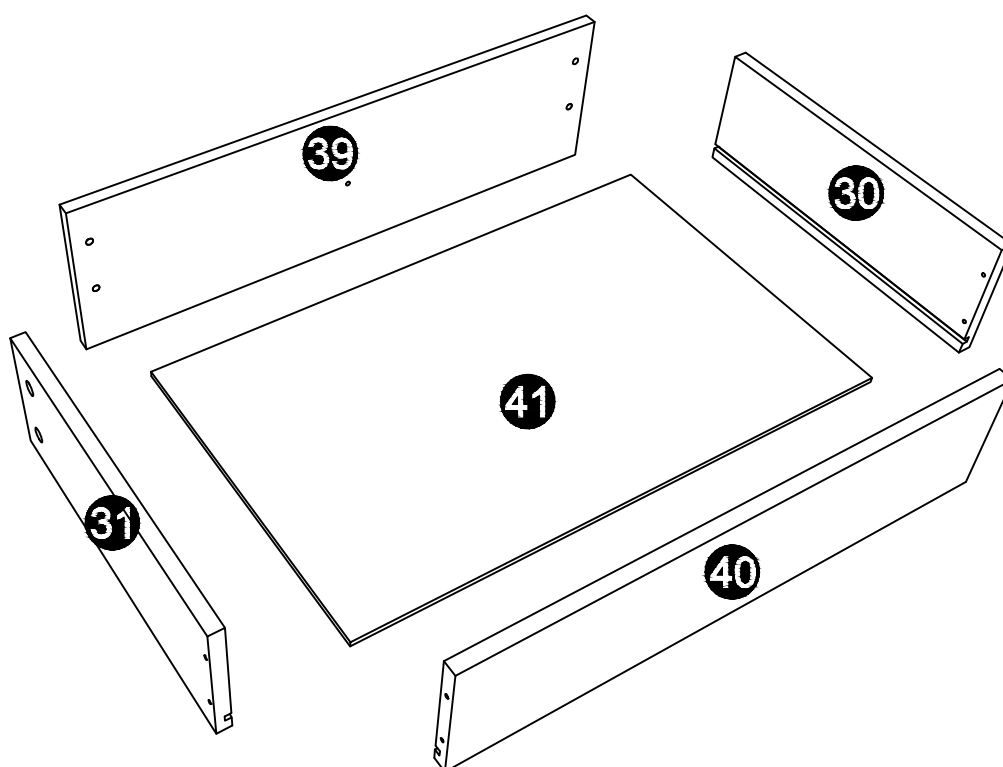





STEP 1



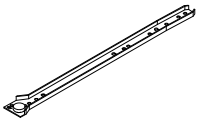
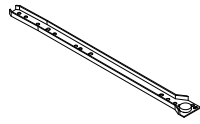

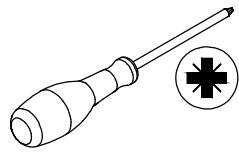
CL x 4  300mm	CR x 4  300mm	F x 16  Ø3.5x12mm	
---	---	--	--

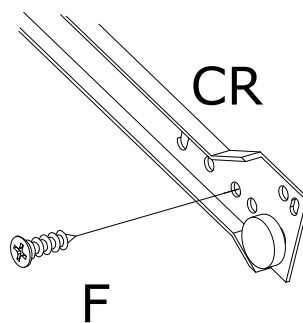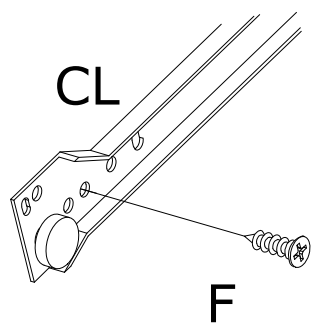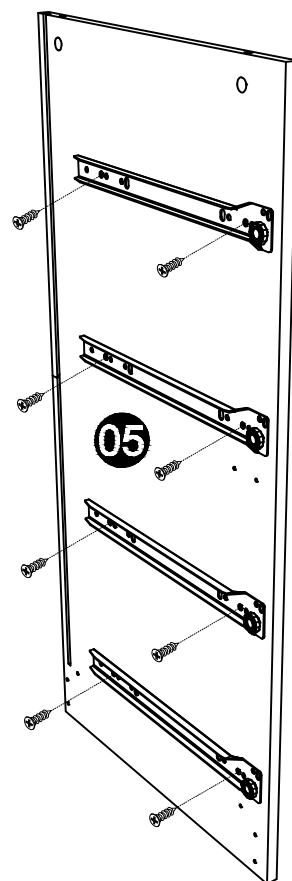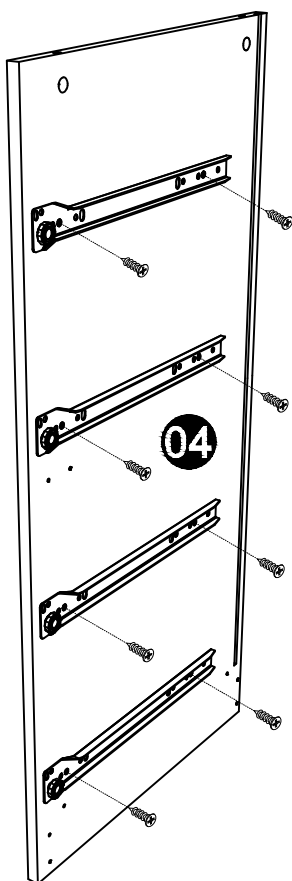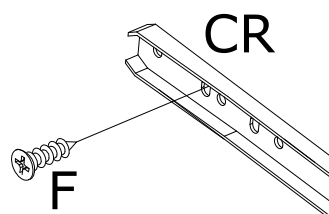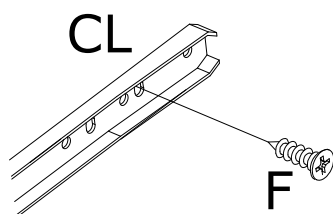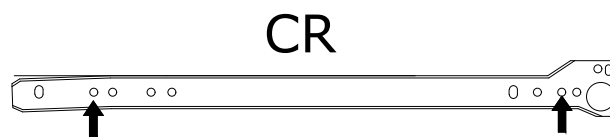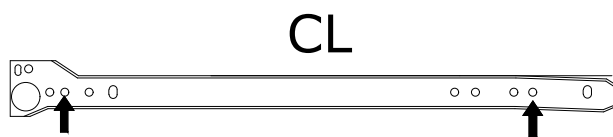

 Pay attention to the location of the holes

STEP 2

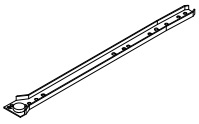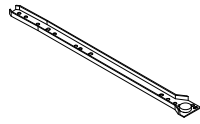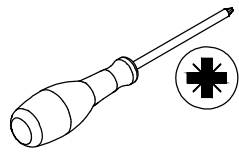
CL x 1  300mm	CR x 1  300mm	F x 4  Ø3.5x12mm	
---	---	---	--

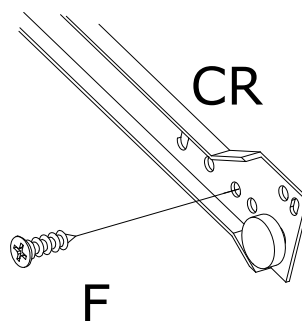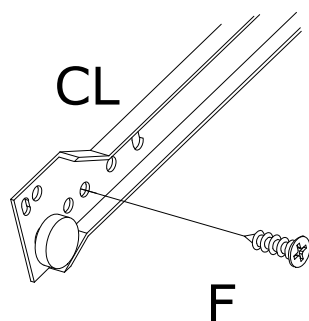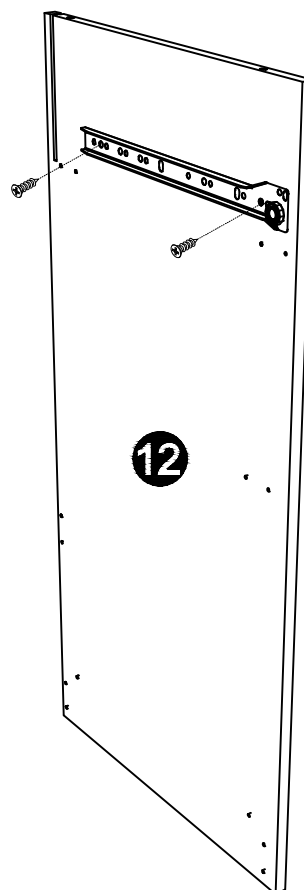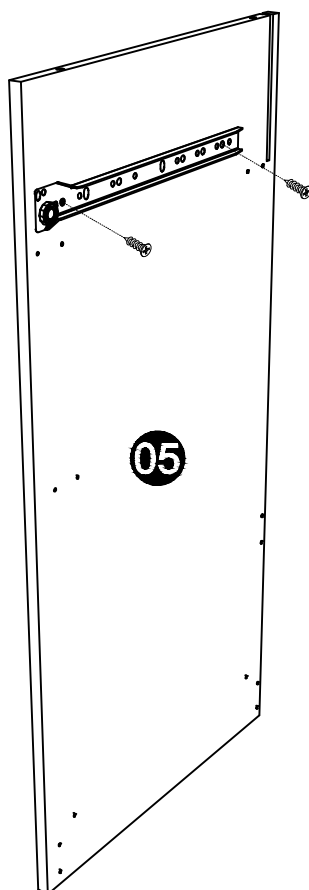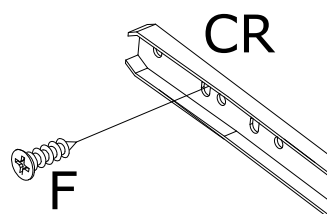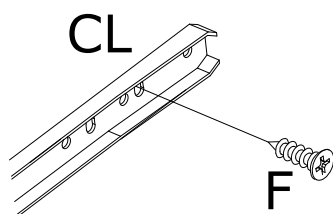



 Pay attention to the location of the holes

STEP 3


A x 6



M6x25mm

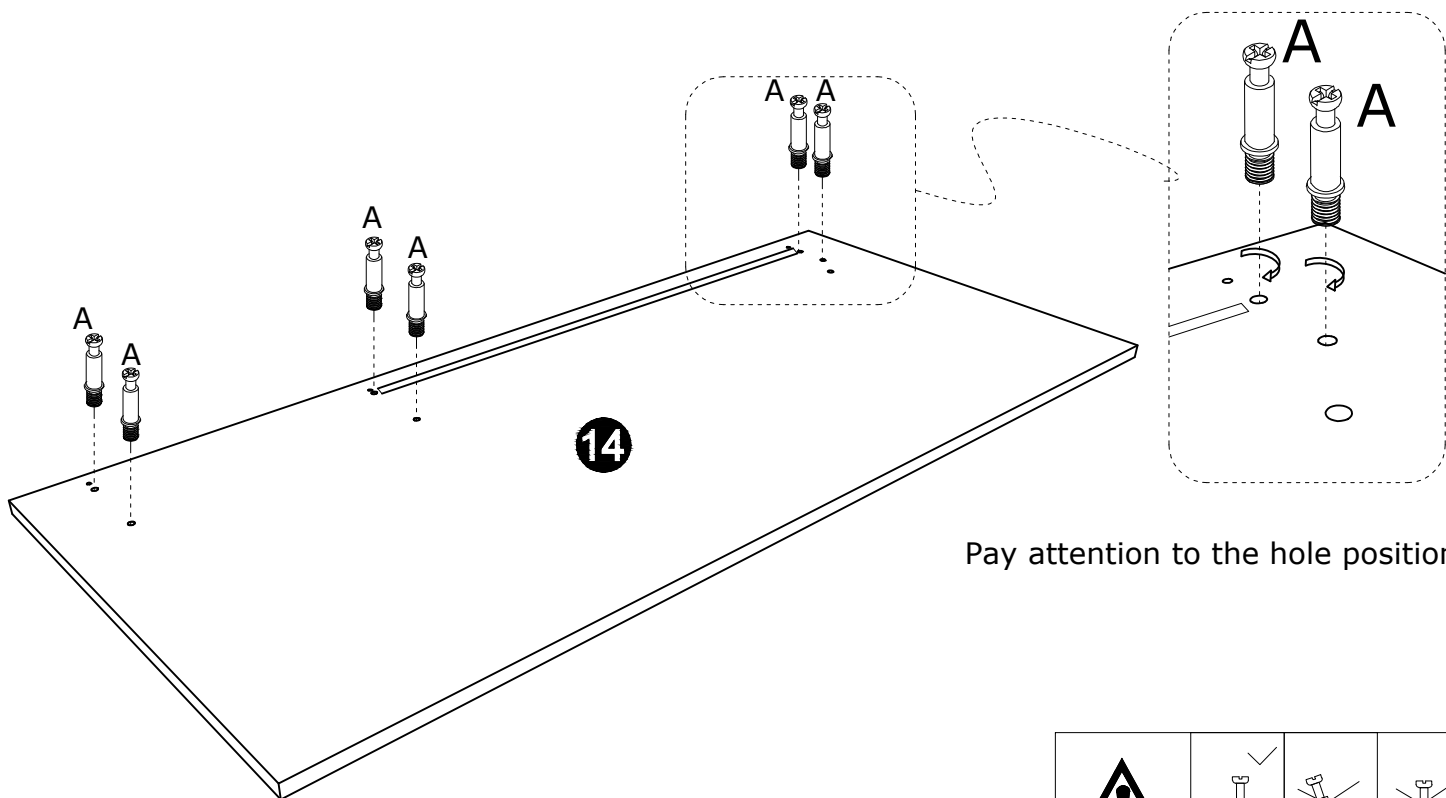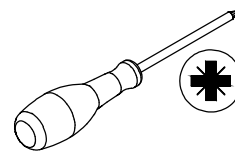


Pay attention to the hole position



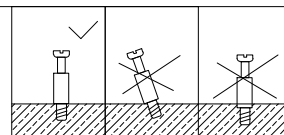


STEP 4


A x 6





M6x25mm

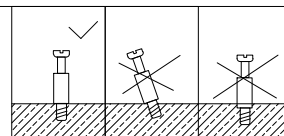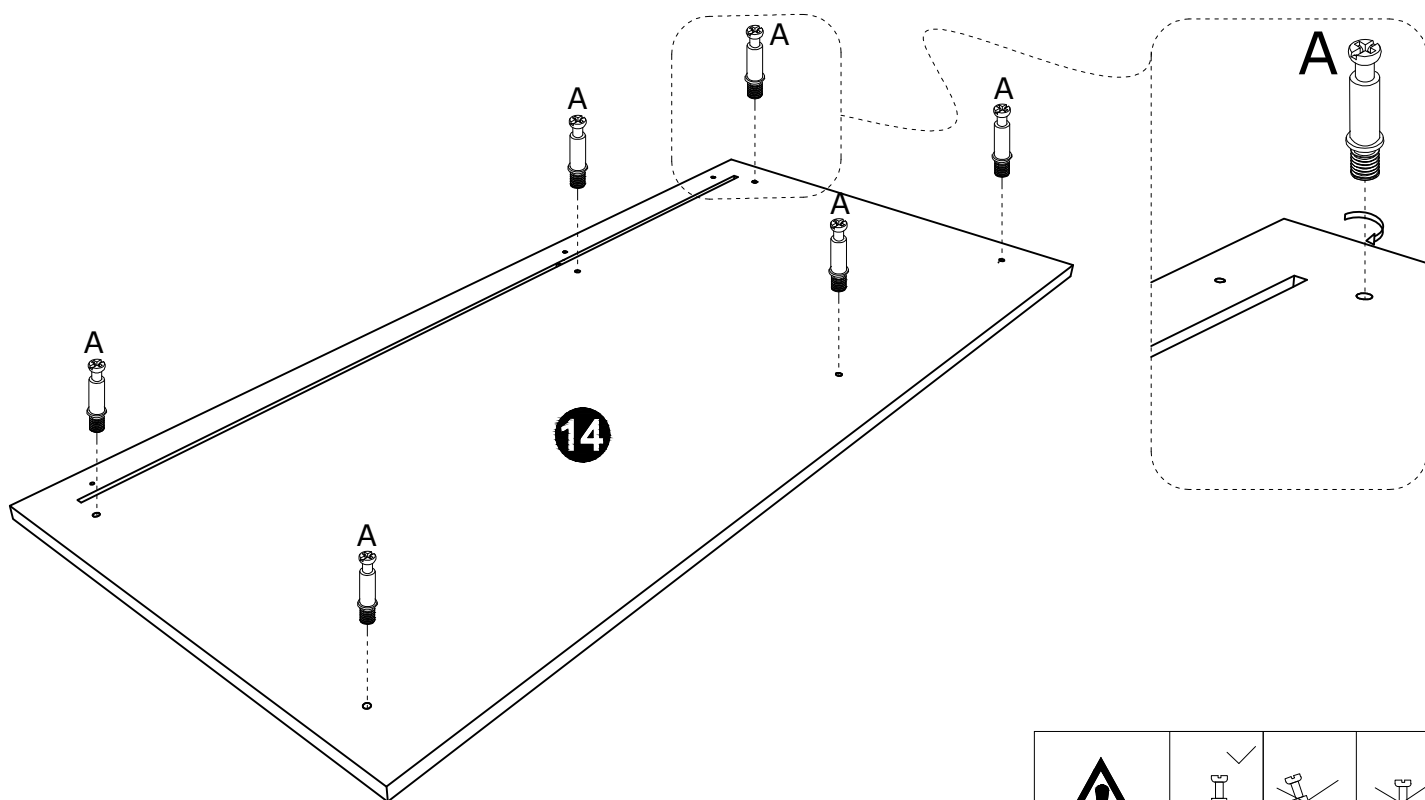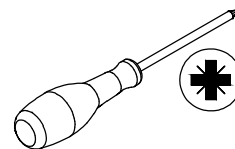




STEP 5

E x 4

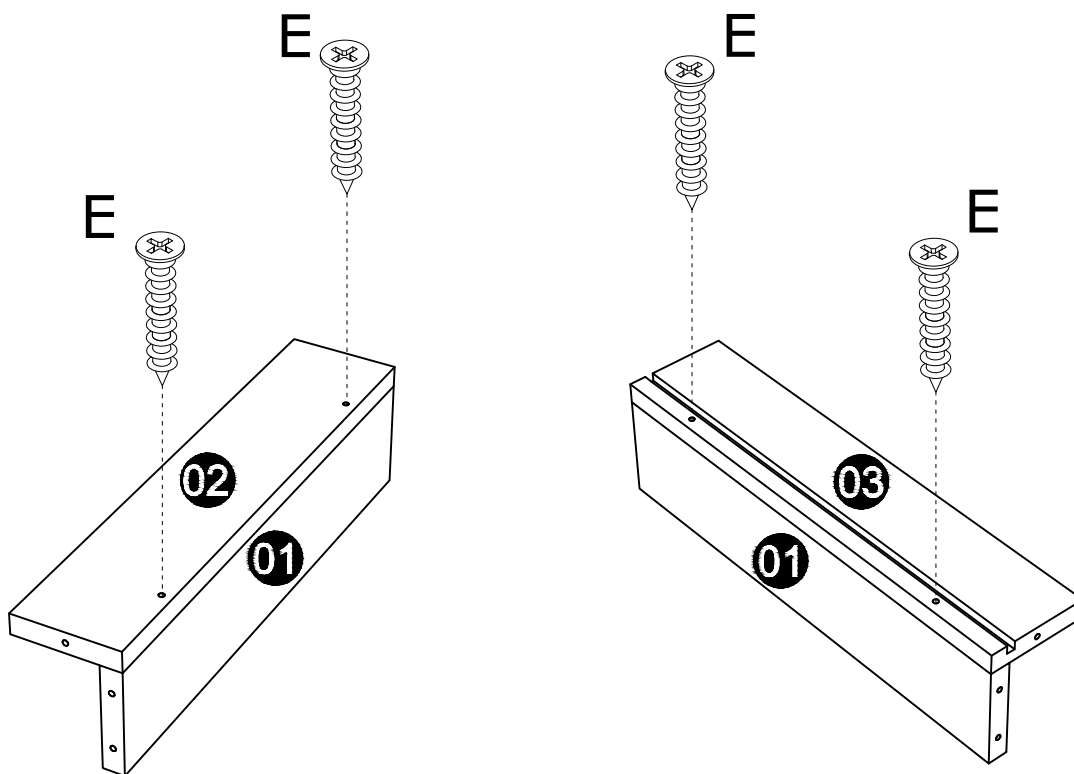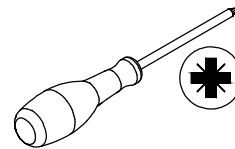 Ø3.5x30mm




STEP 6

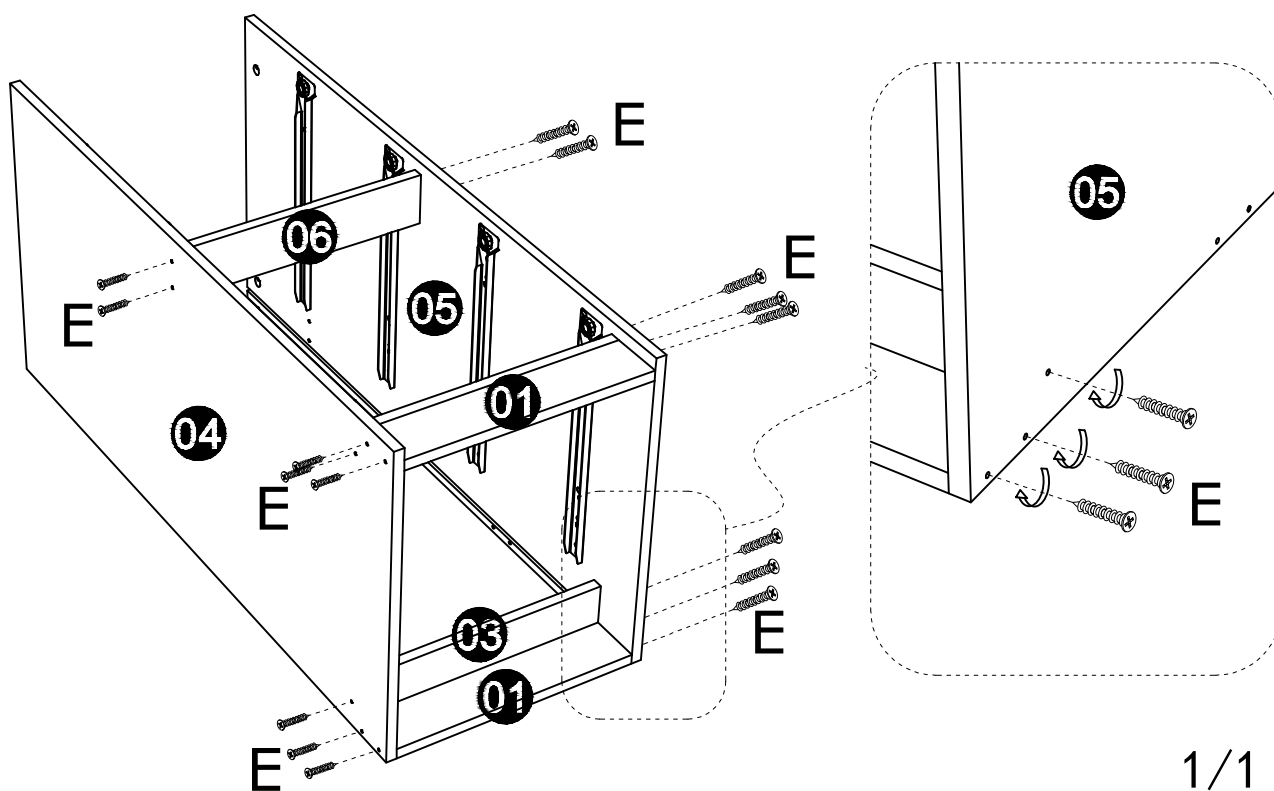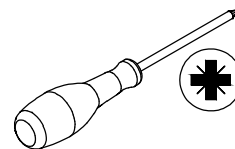E x 16

 Ø3.5x30mm




STEP 7


E x 12



Ø3.5x30mm

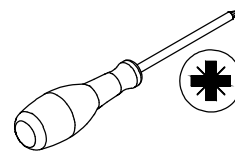


Please remove the first screw of this slide rail,
install the No. 9 part,
and then reset the slide rail

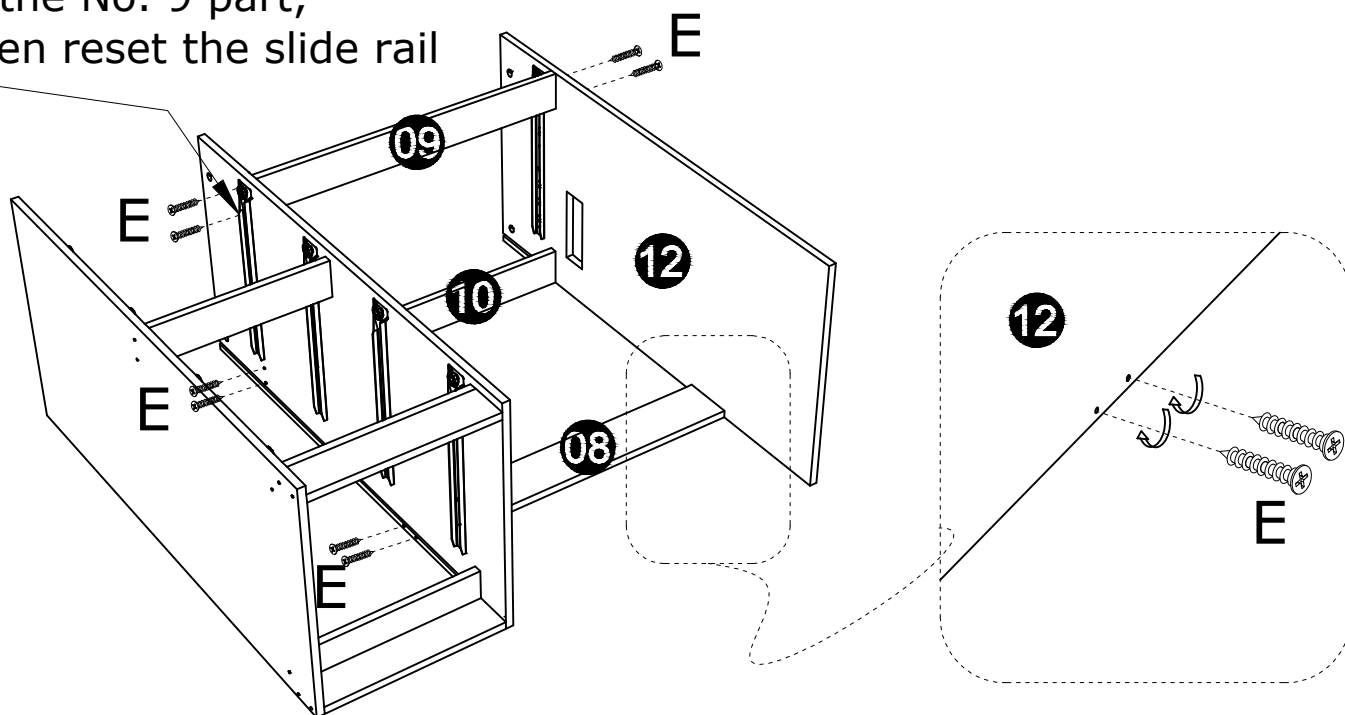


STEP 8

Insert the backplate into the card slot




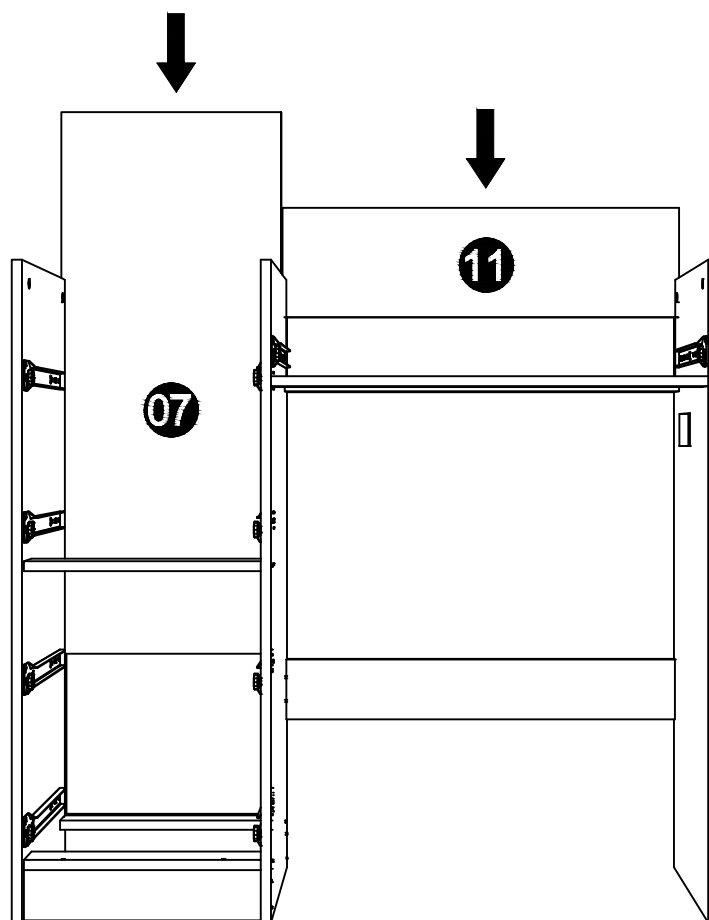


STEP 9

B x 6




Ø12x10mm

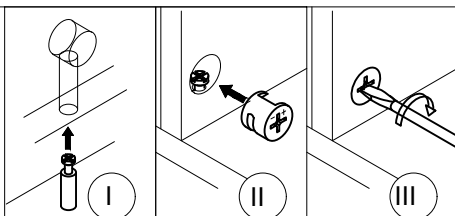
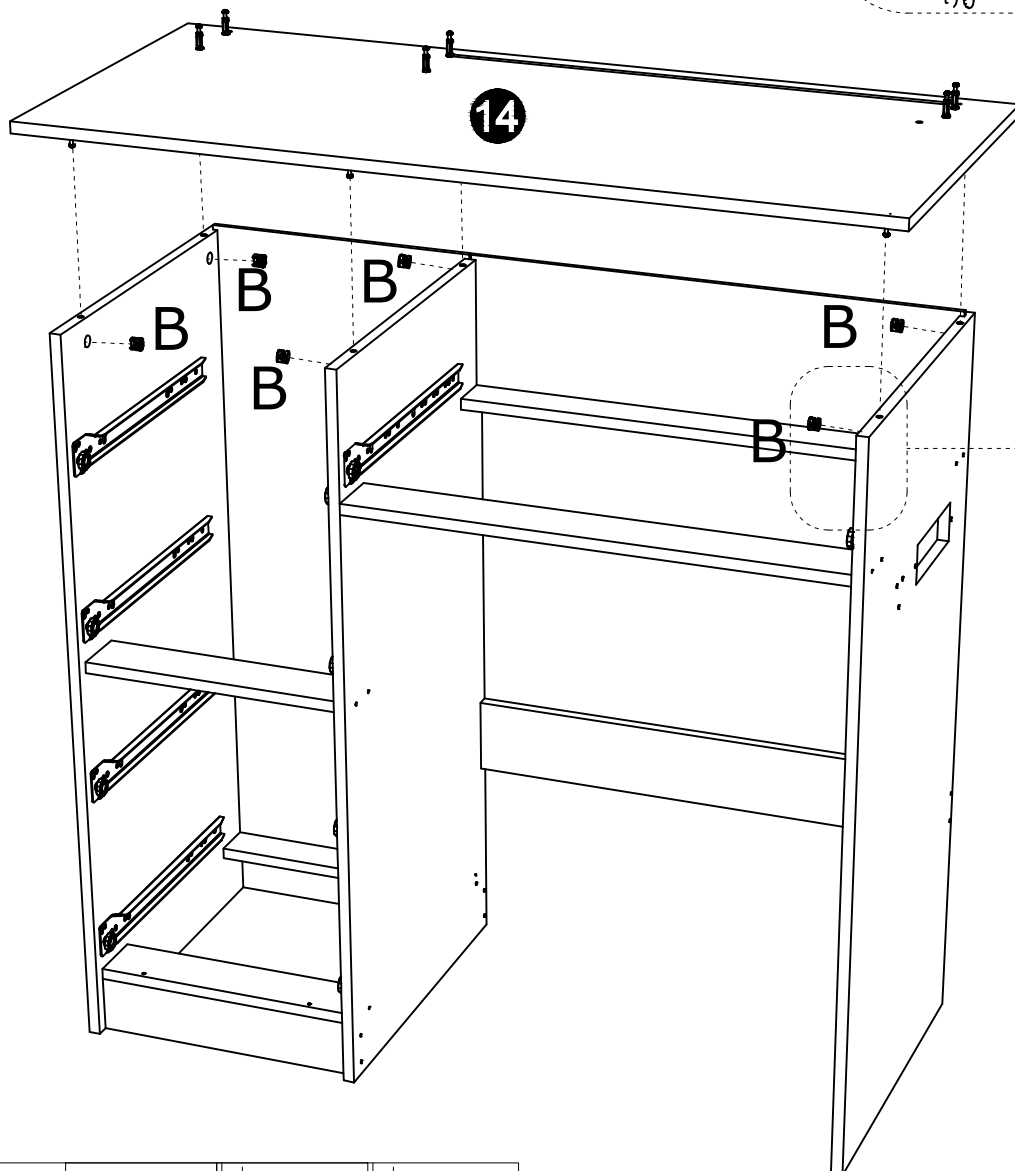
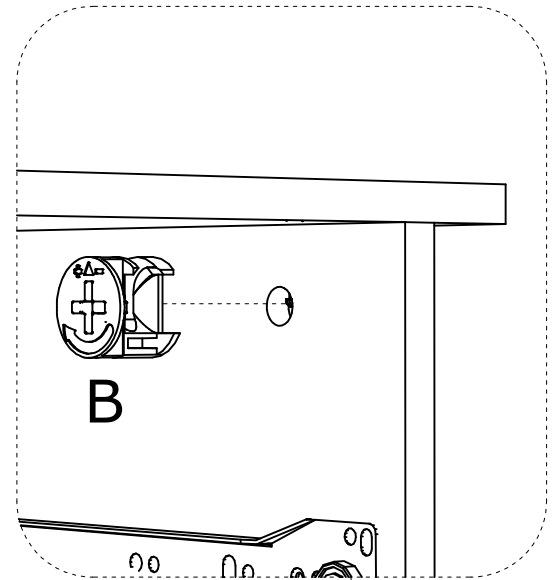
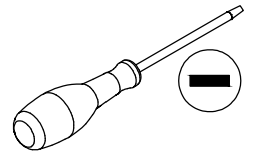


STEP10

A x 6




M6x25mm

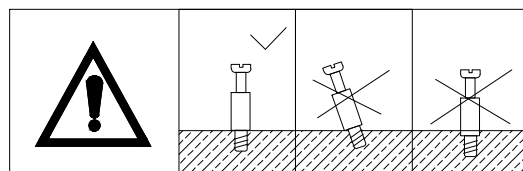
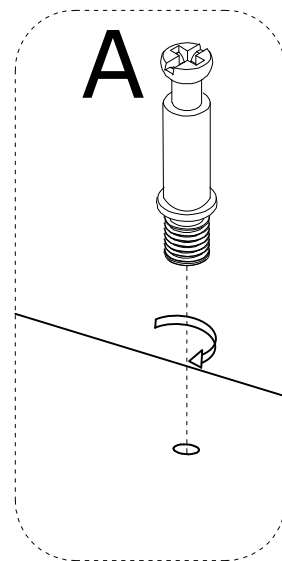
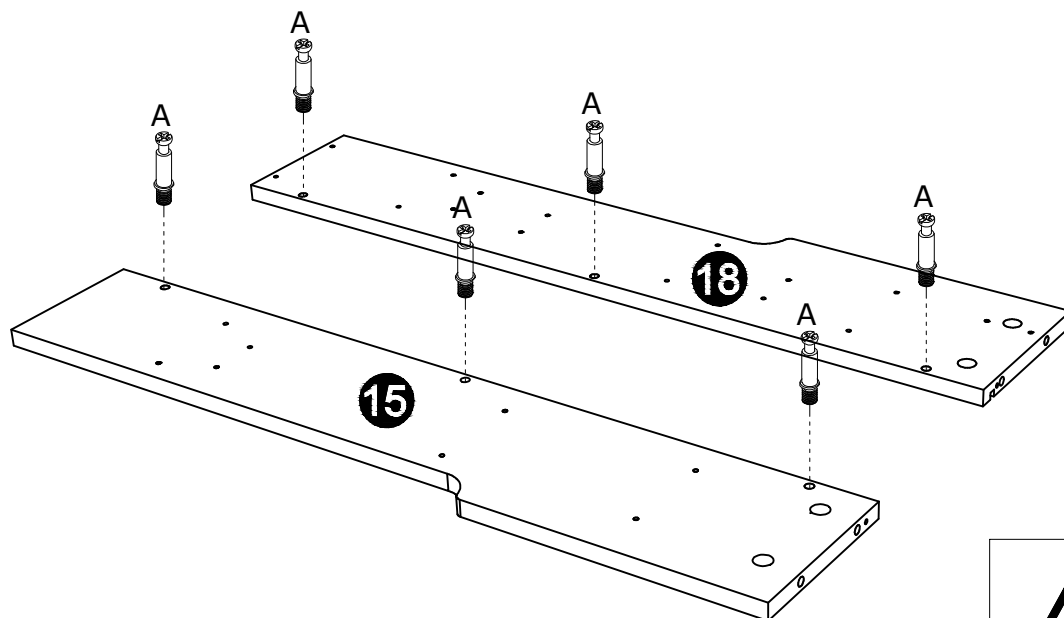
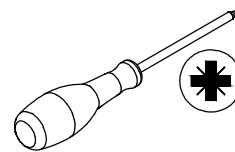


STEP11

B x 6







Ø12x10mm

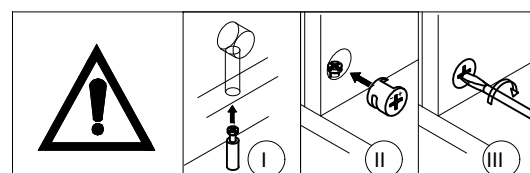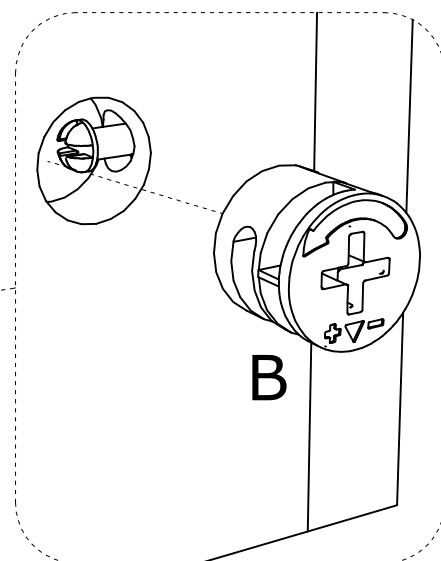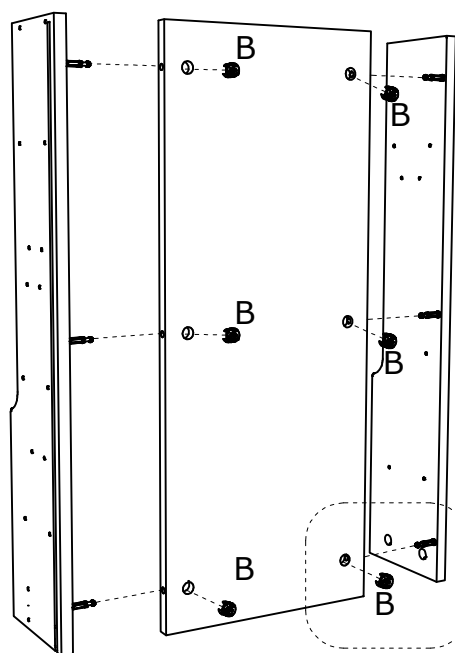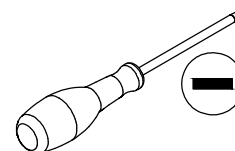





STEP12

A x 6
M6x25mm

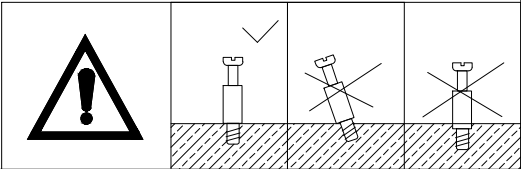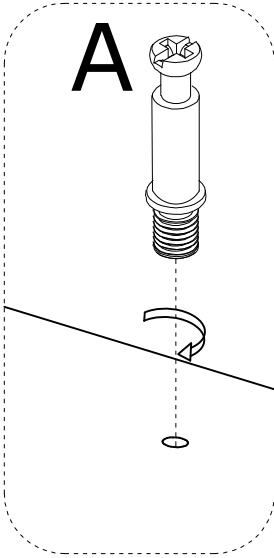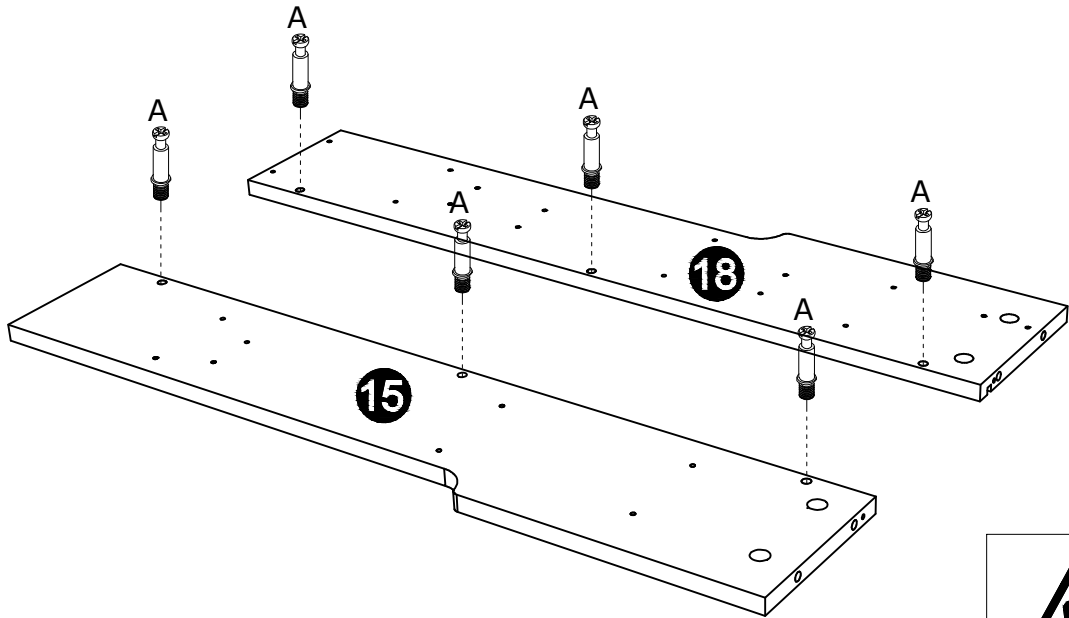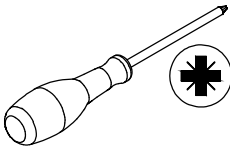


STEP13

B x 6
Ø12x10mm


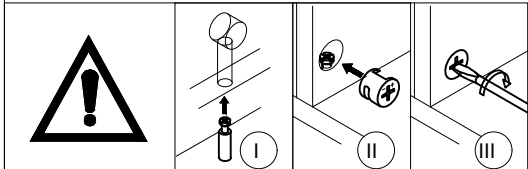
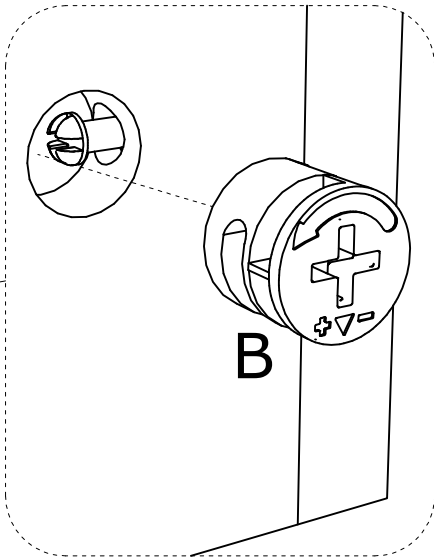
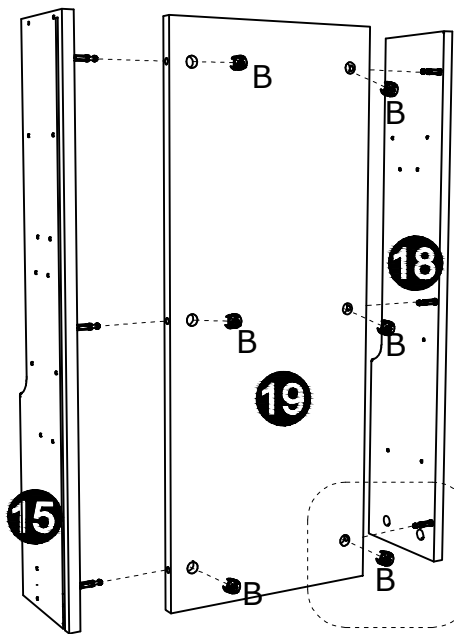
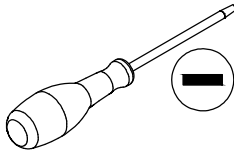


STEP14

B x 4




Ø12x10mm

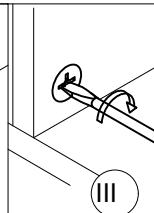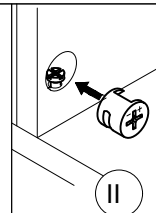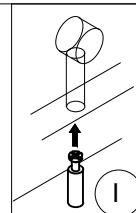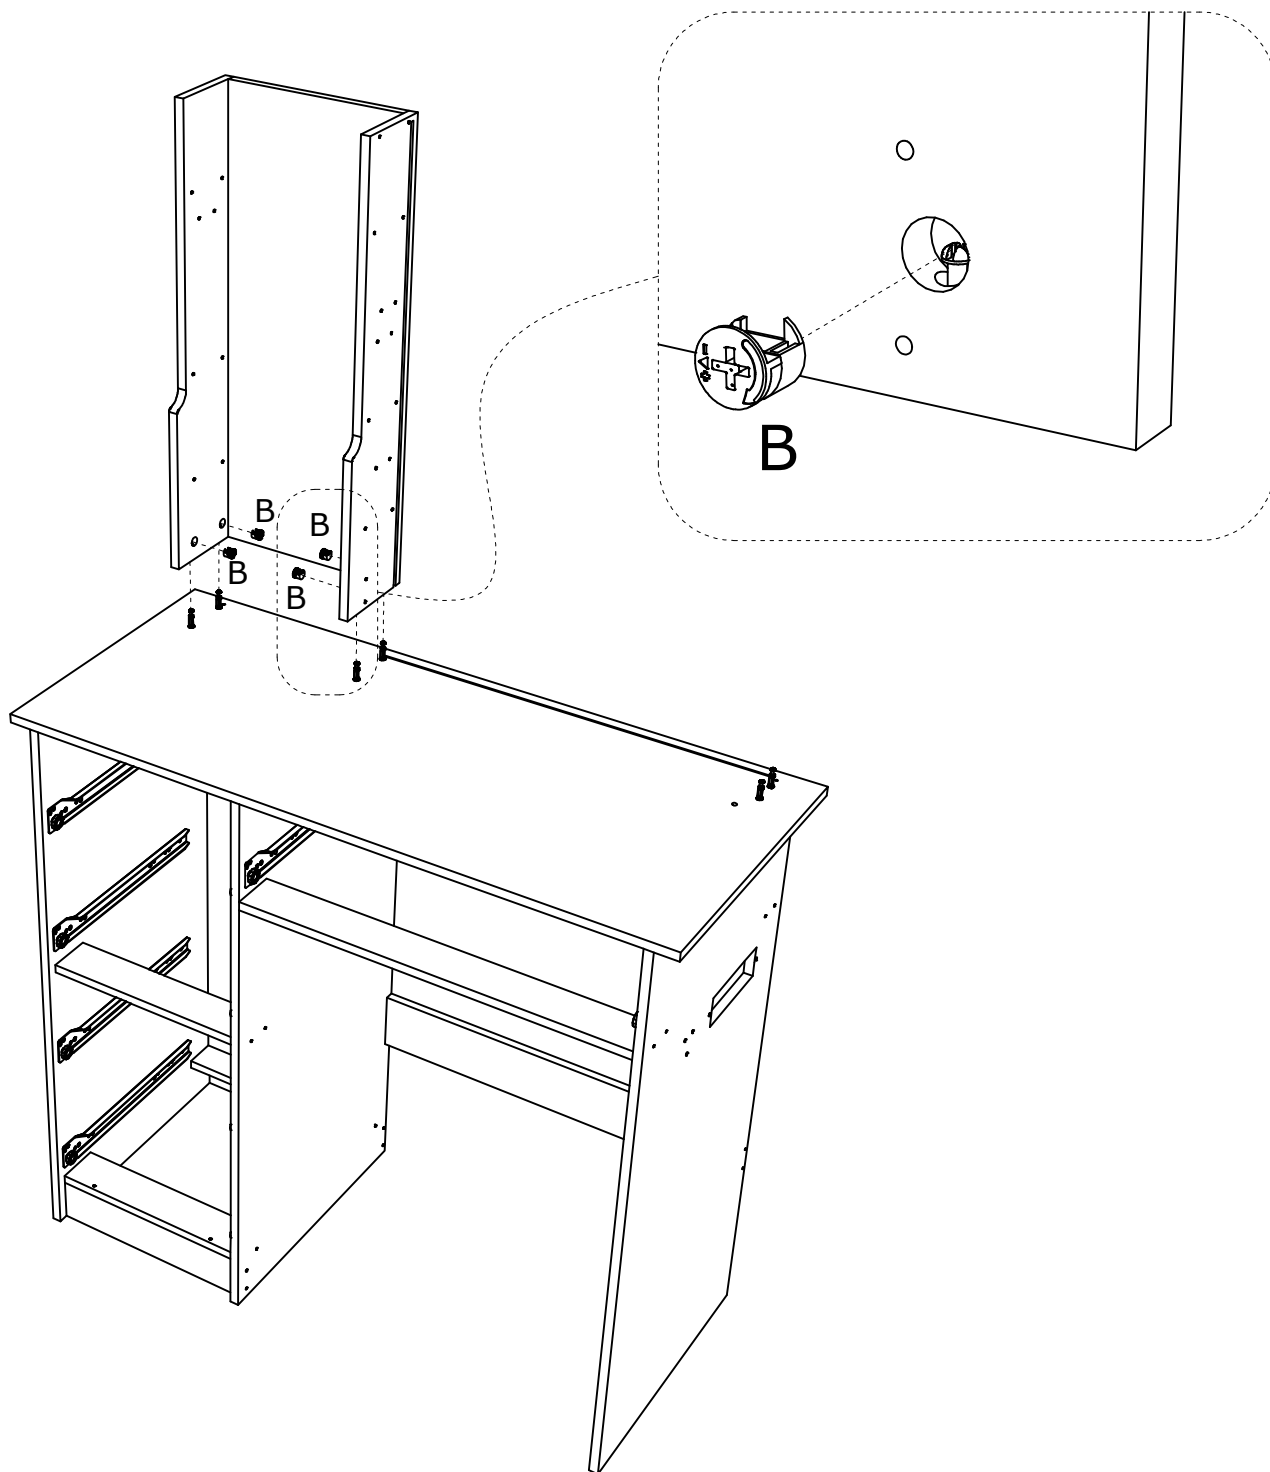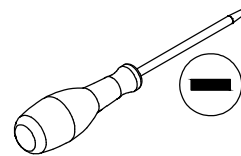


STEP15

Insert the backplate into the card slot


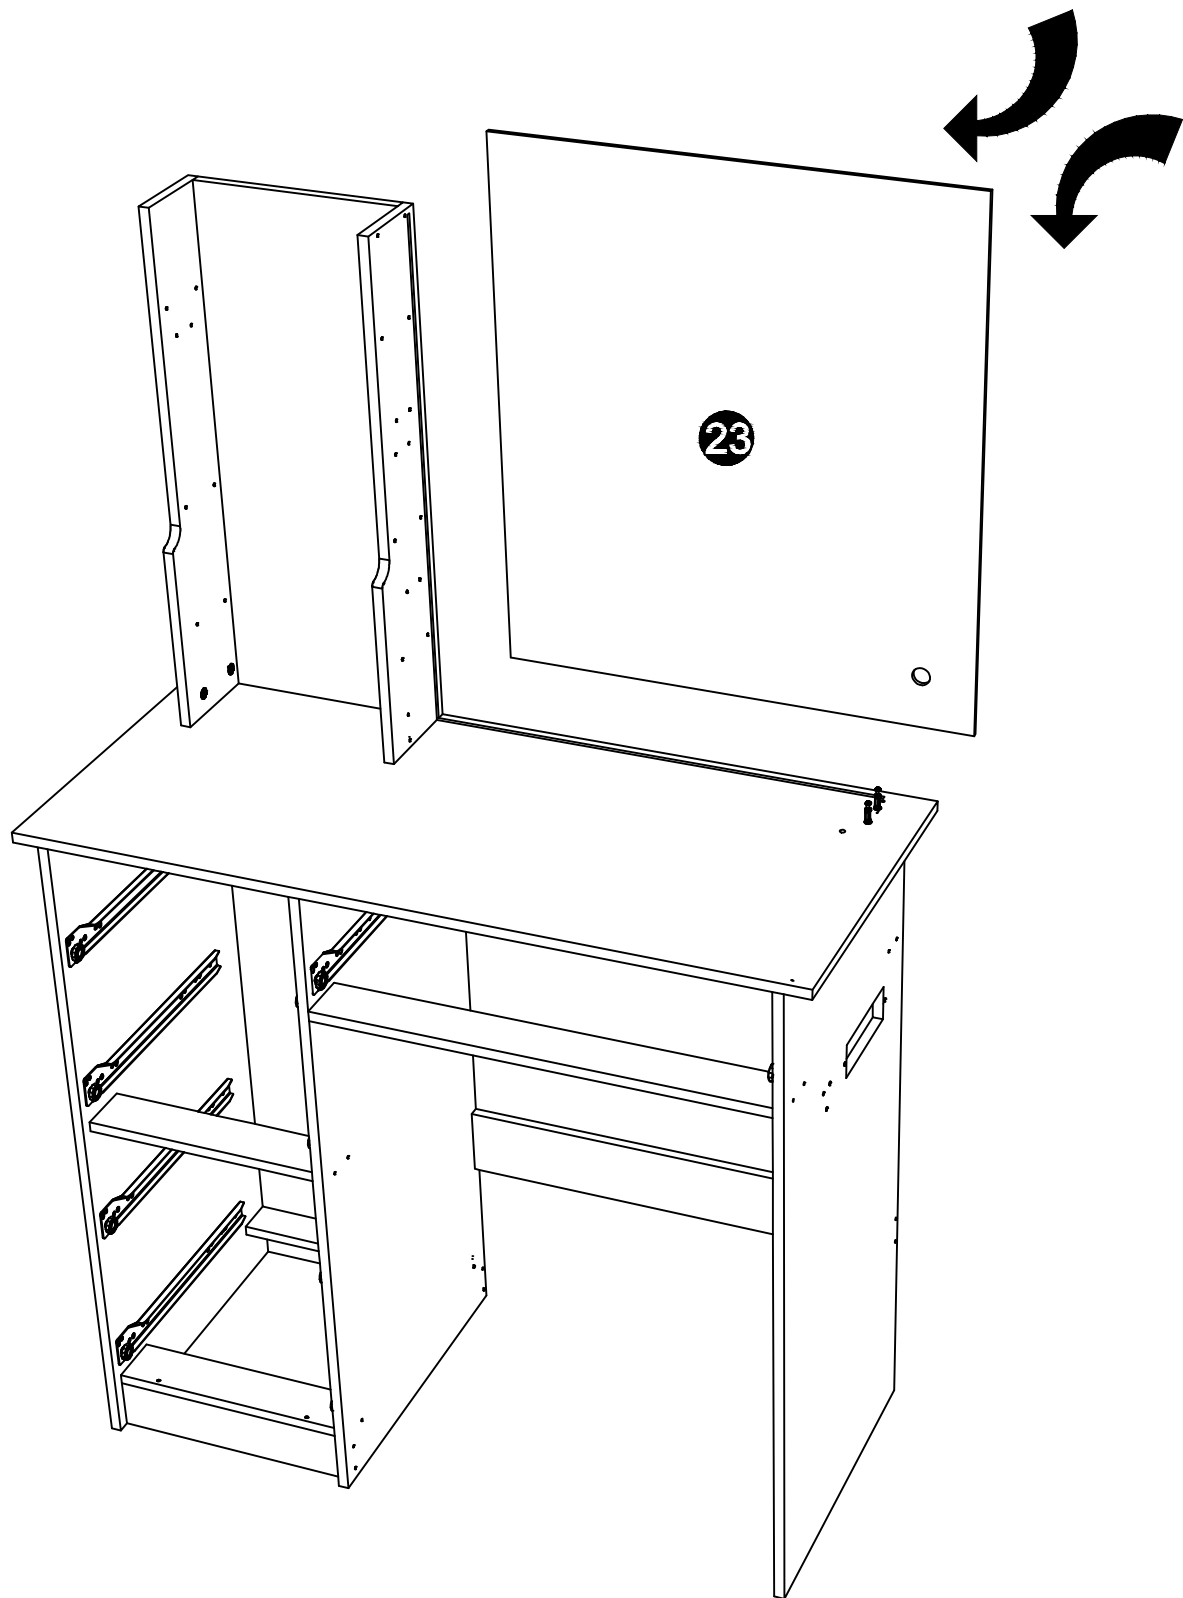


STEP16

B x 2




Ø12x10mm

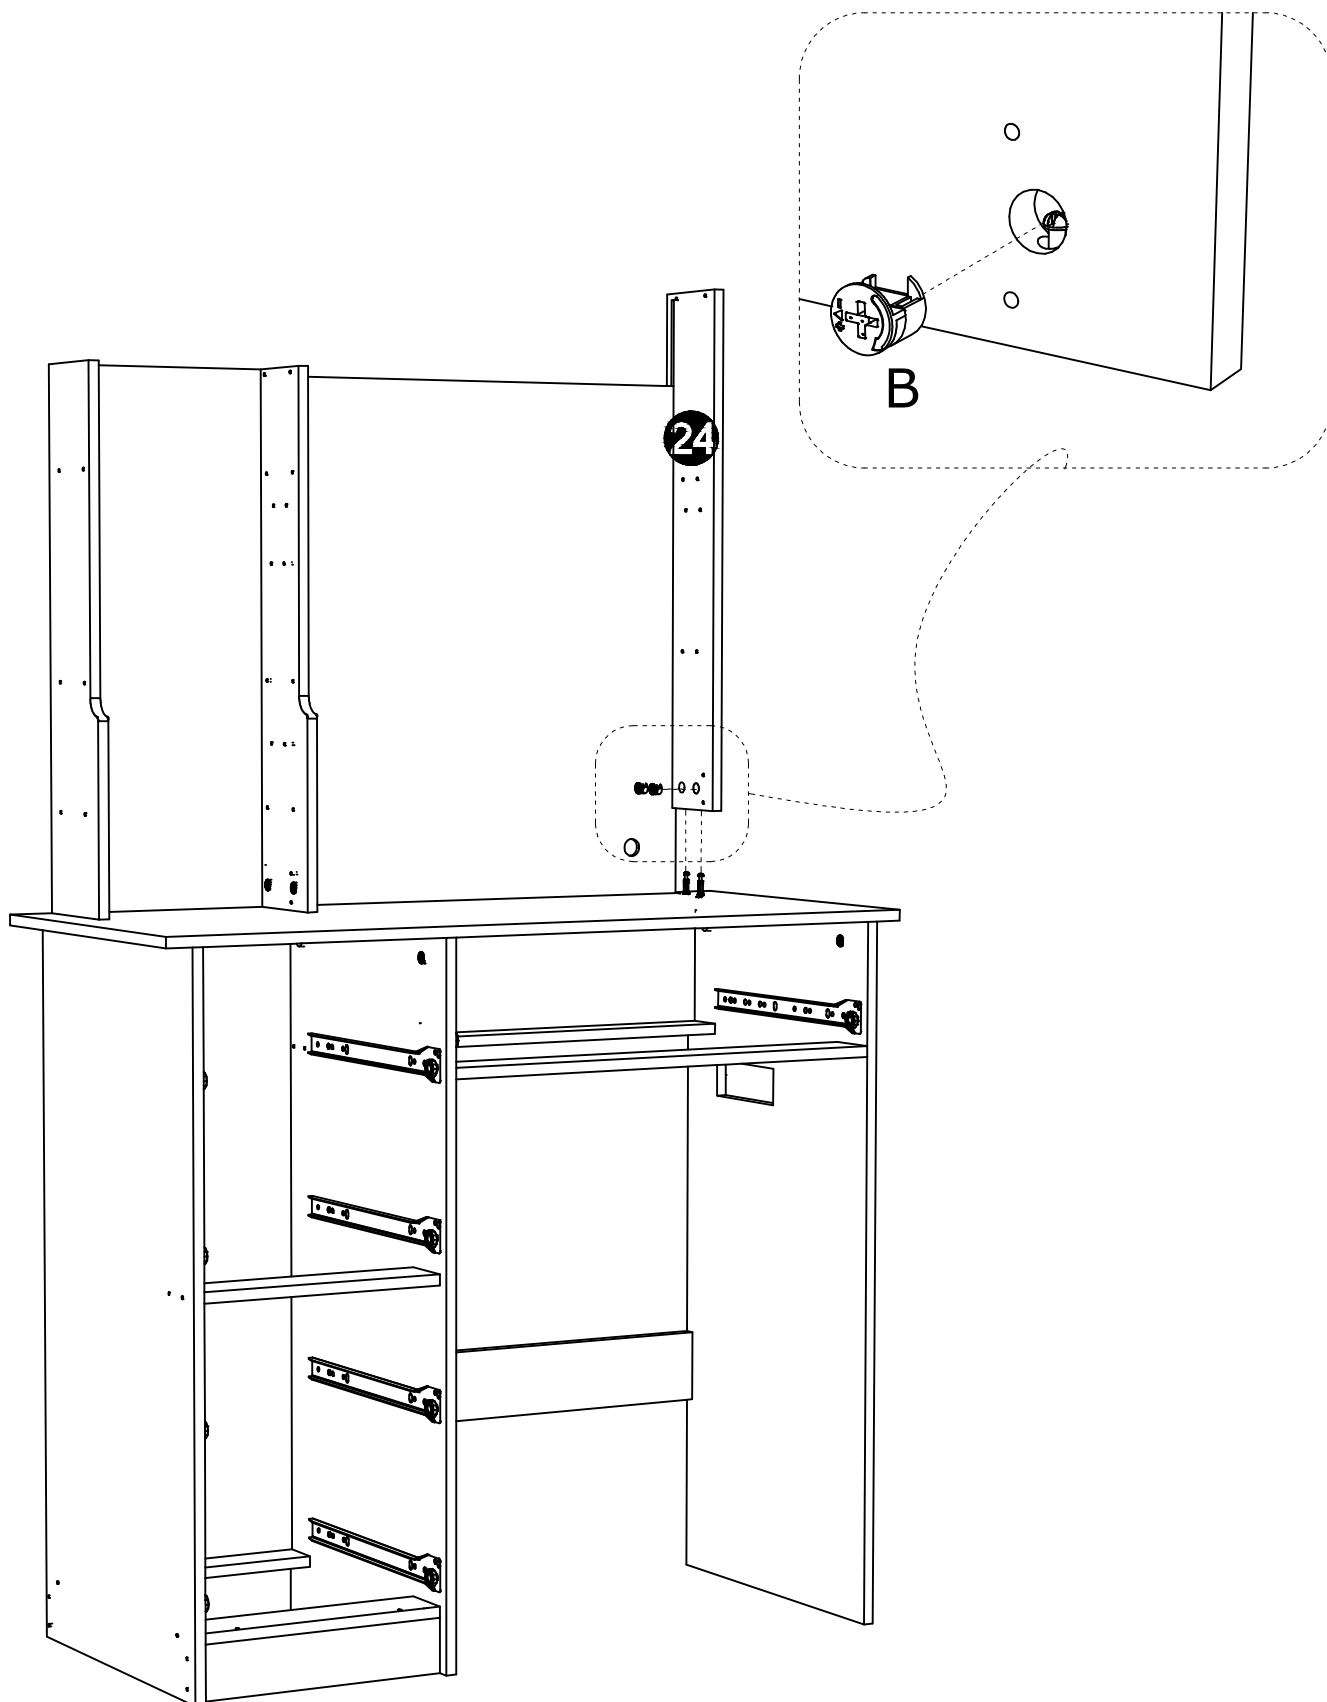
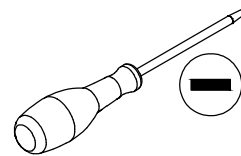


STEP17

E x 4




Ø3.5x30mm

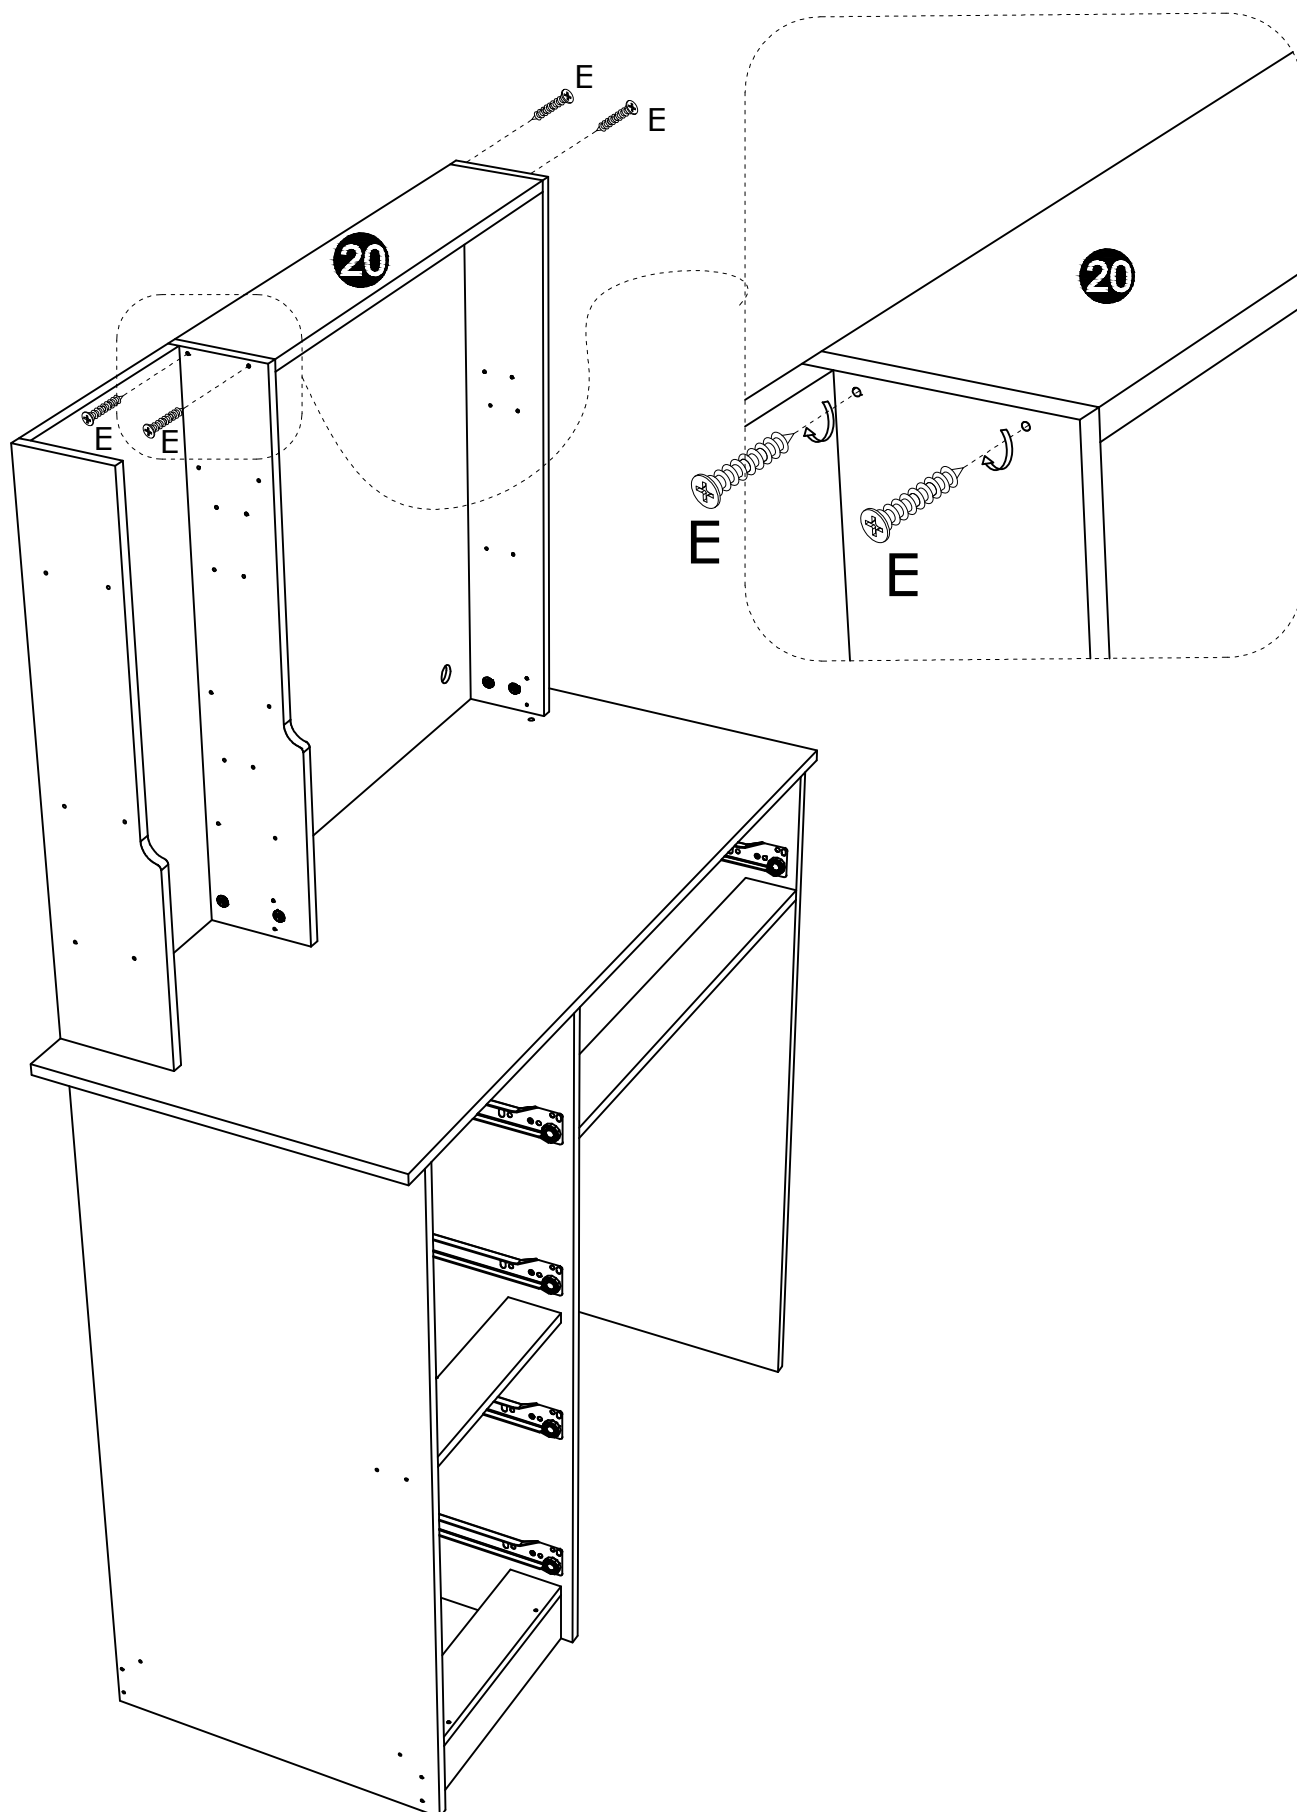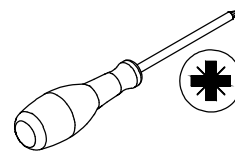


STEP18


E x 20



Ø3.5x30mm

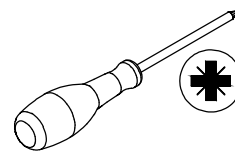


Please install No. 16, No. 17, and No. 21 planks as shown.


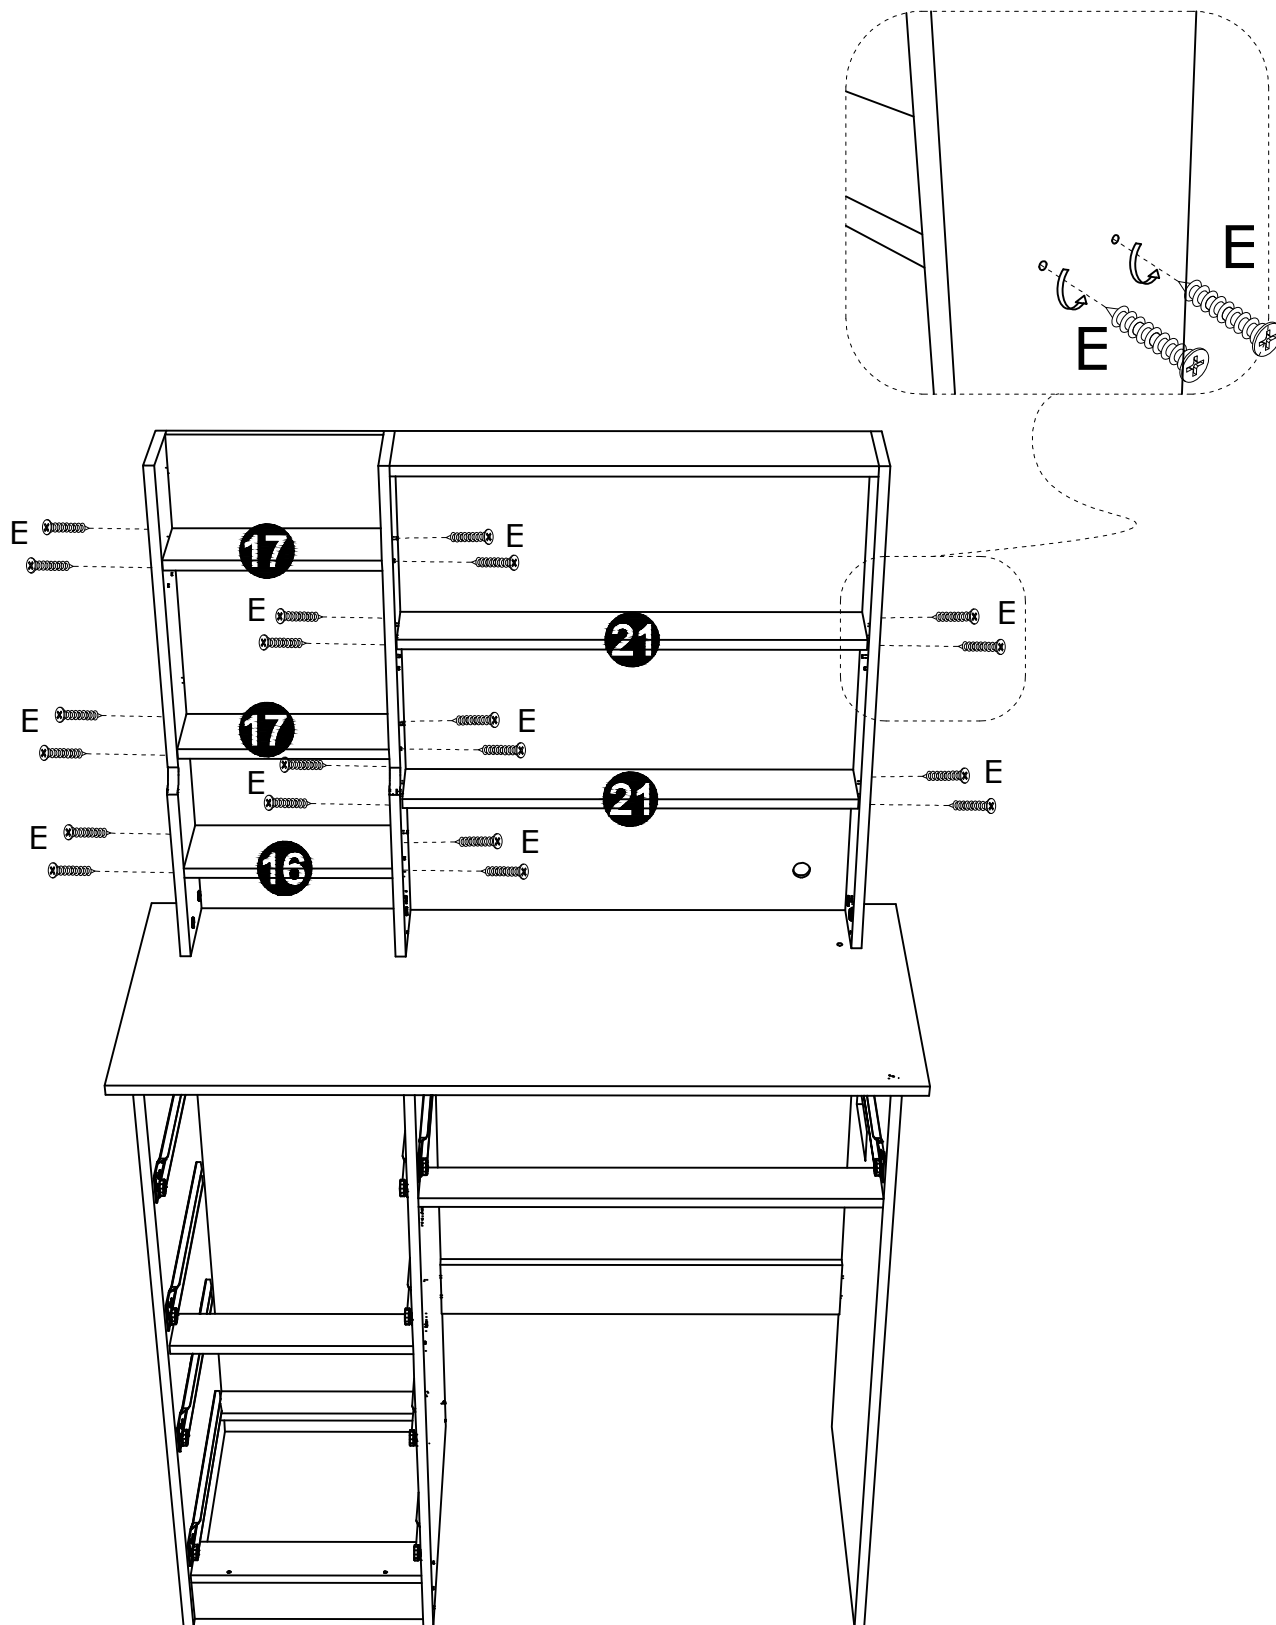


STEP 19

E x 4




Ø3.5x30mm

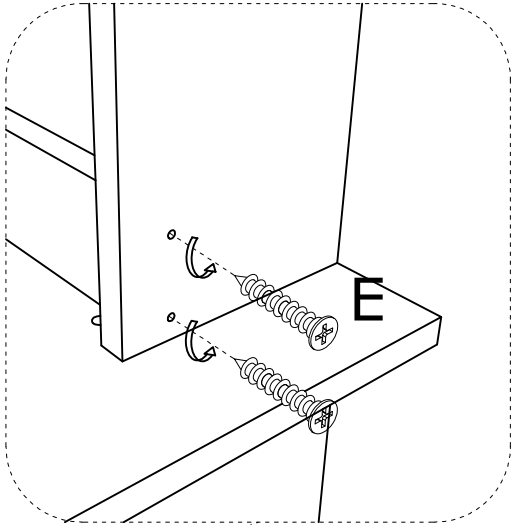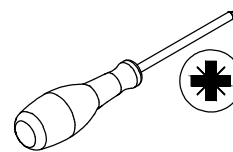


STEP20



E x 3



Ø3.5x30mm

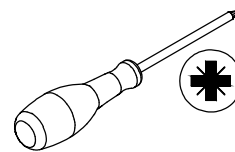


Please install these three self-tapping wires, this step is very important

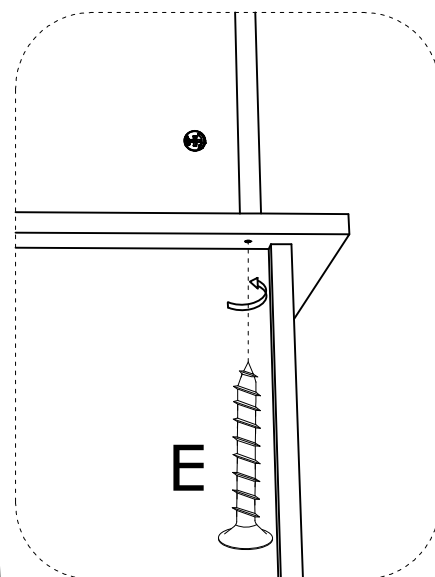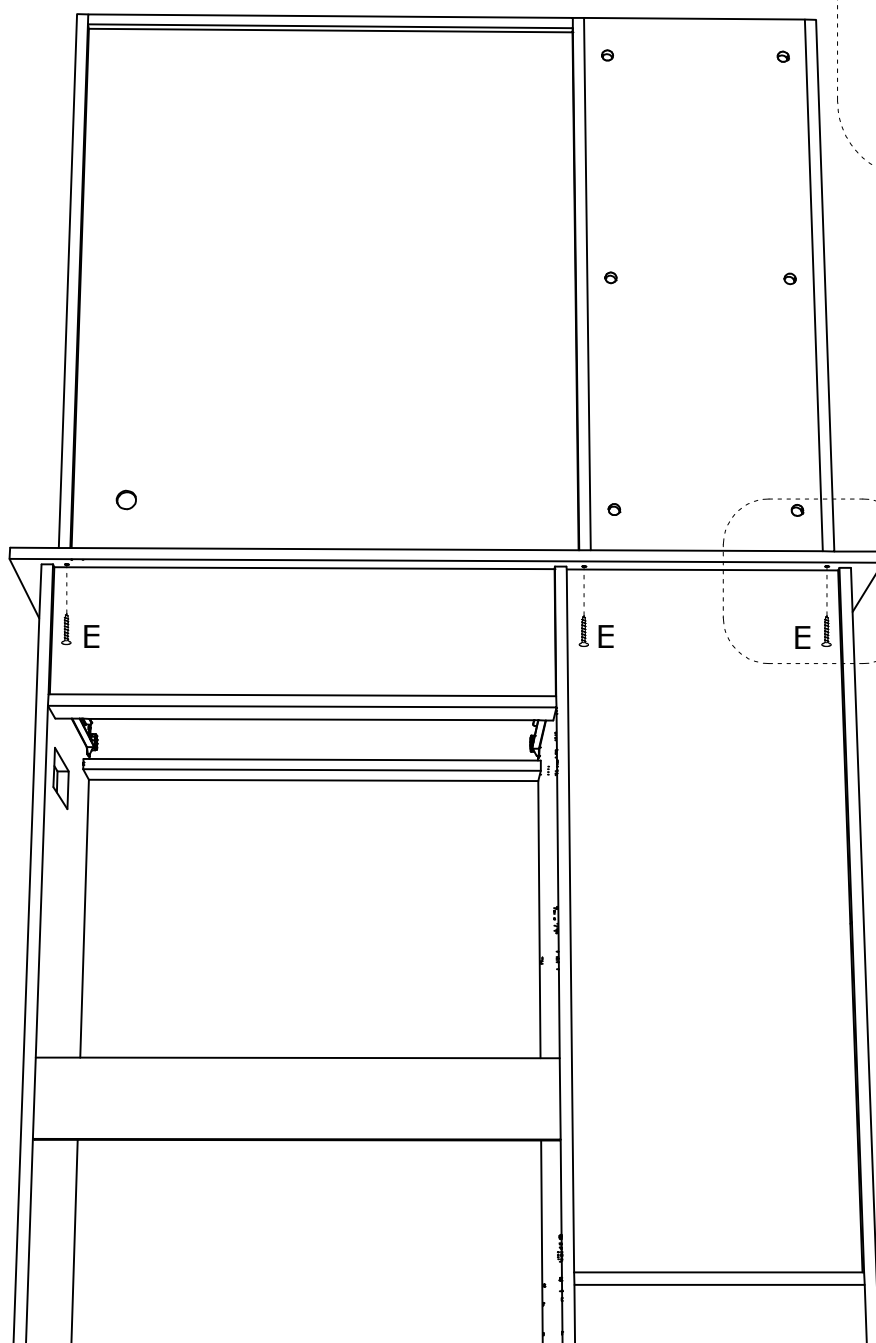


STEP21

F x 12






Ø3.5x12mm

G x 12




15x15x9mm

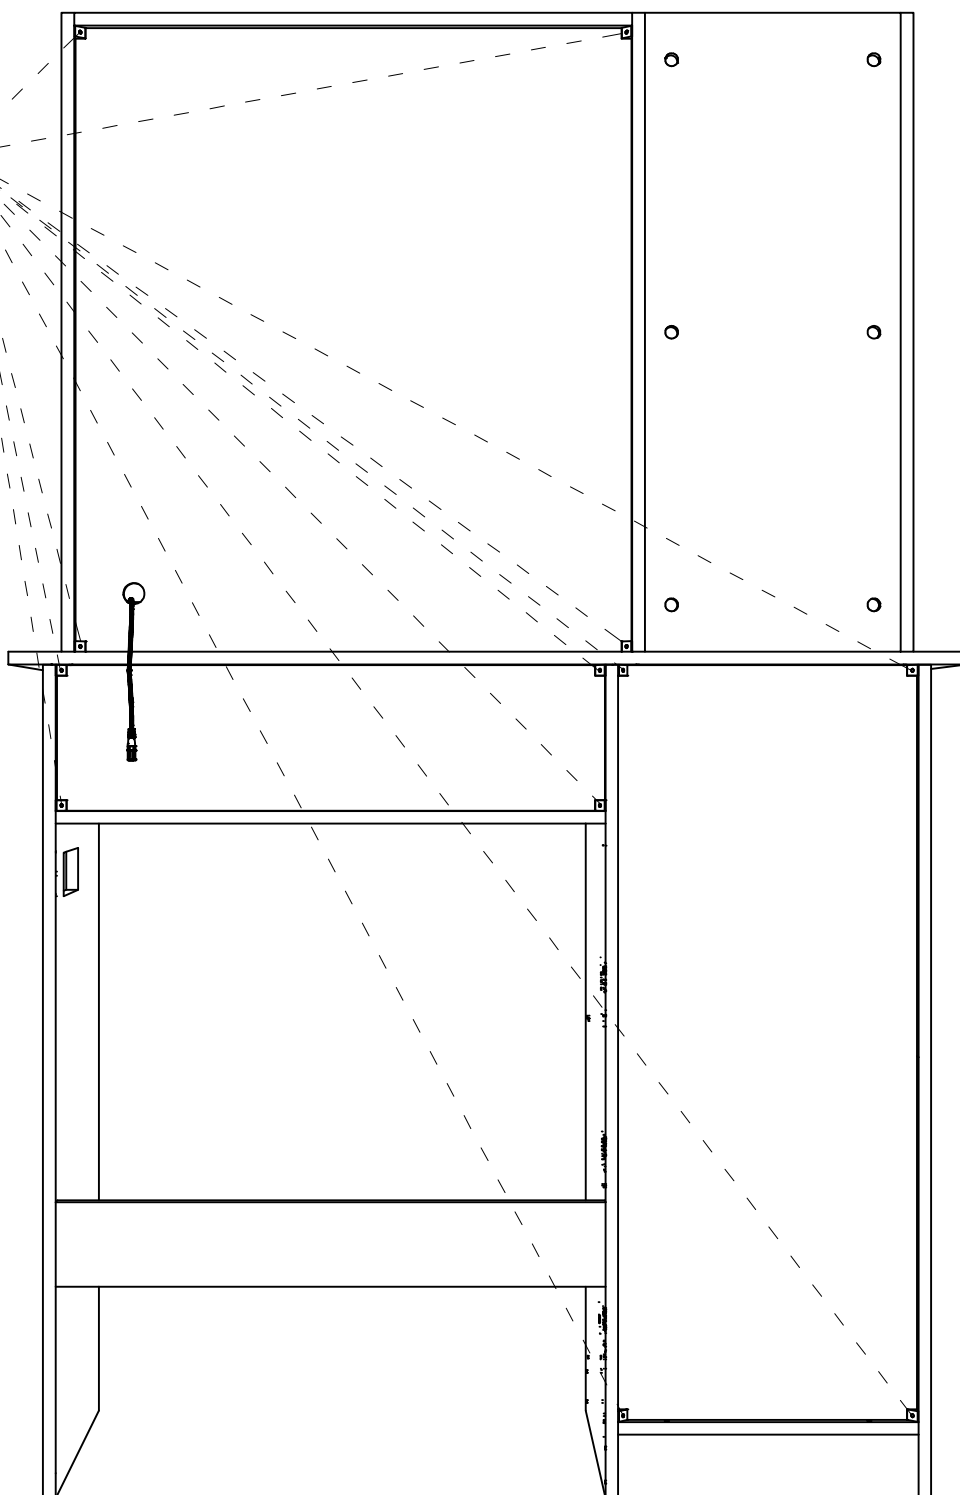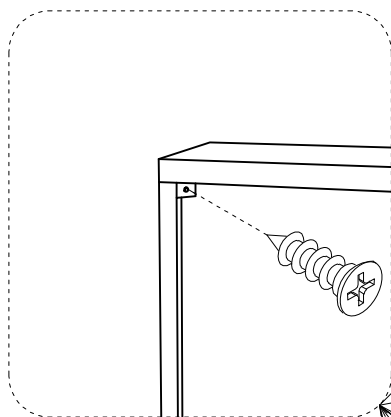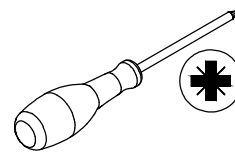

XX=YY=90°


STEP22

P x 2




20x5mm

Q x 1




30x15x10mm





F x 4



Ø3.5x12mm




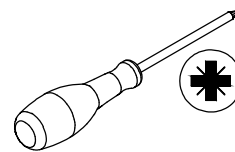


Install the non-resilient end of the fitting on the cabinet door, and gently press the fittings until they slide into the recessed holes of the cabinet.

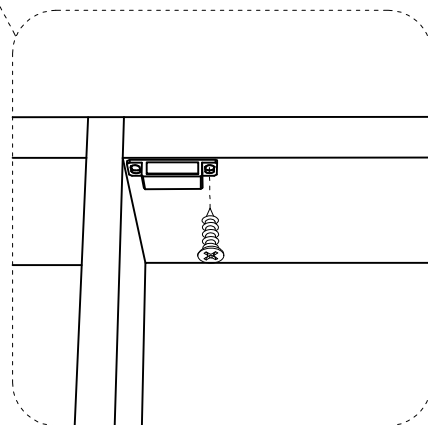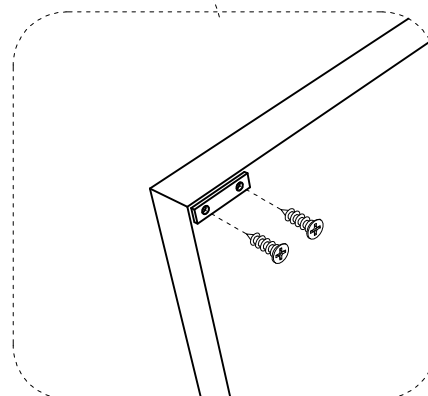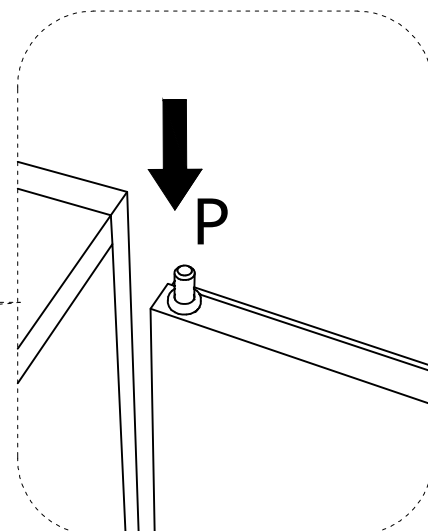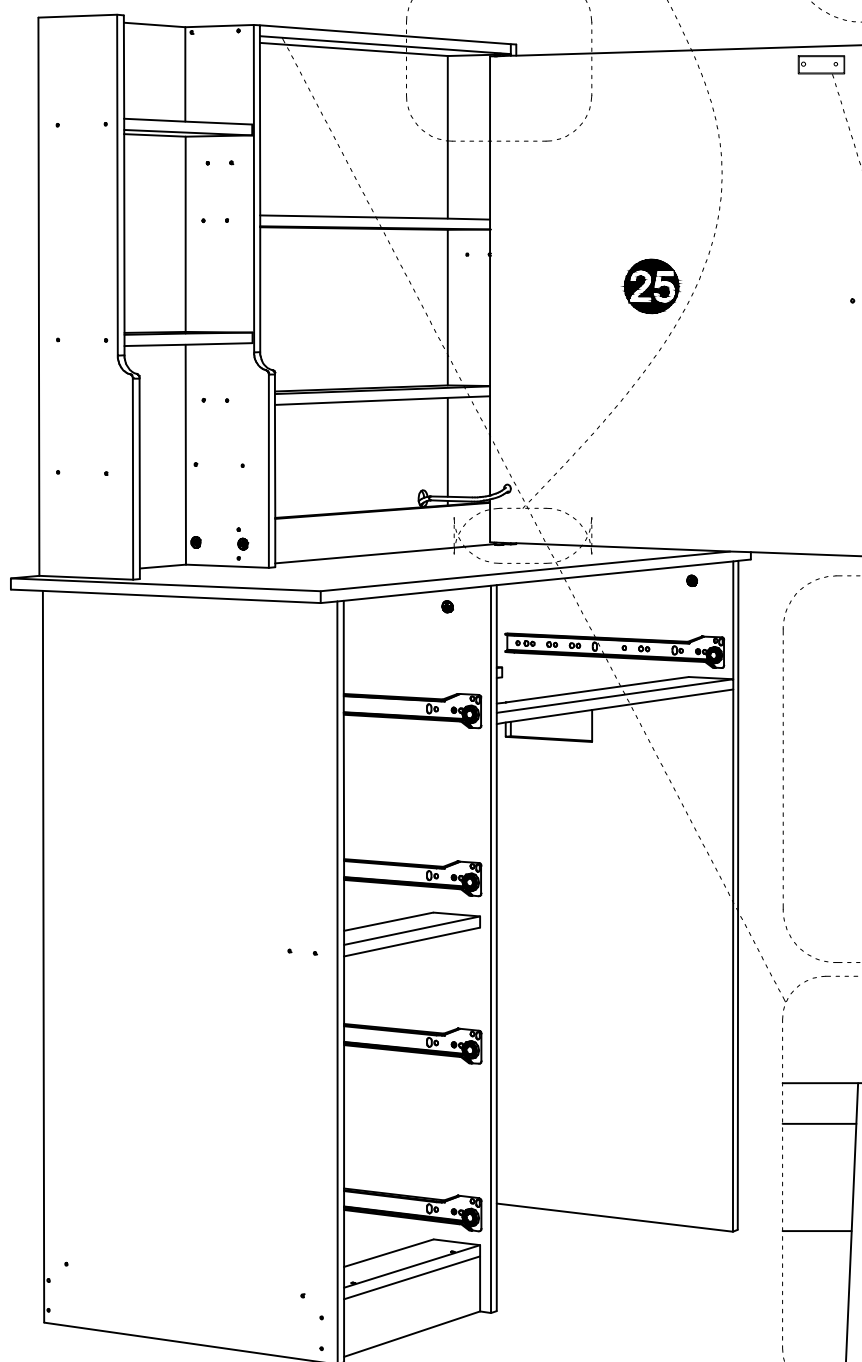




STEP23

A x 20
M6x25mm

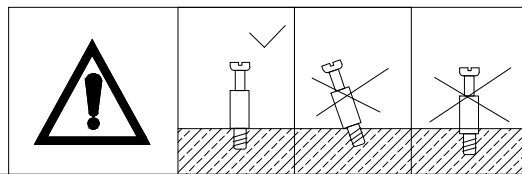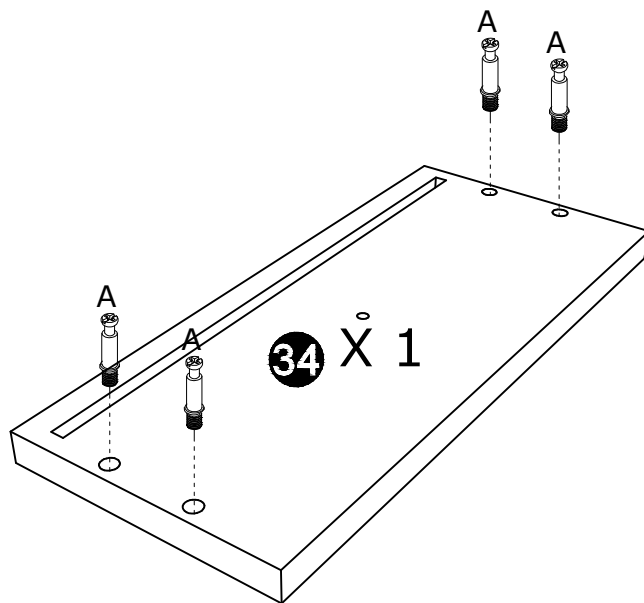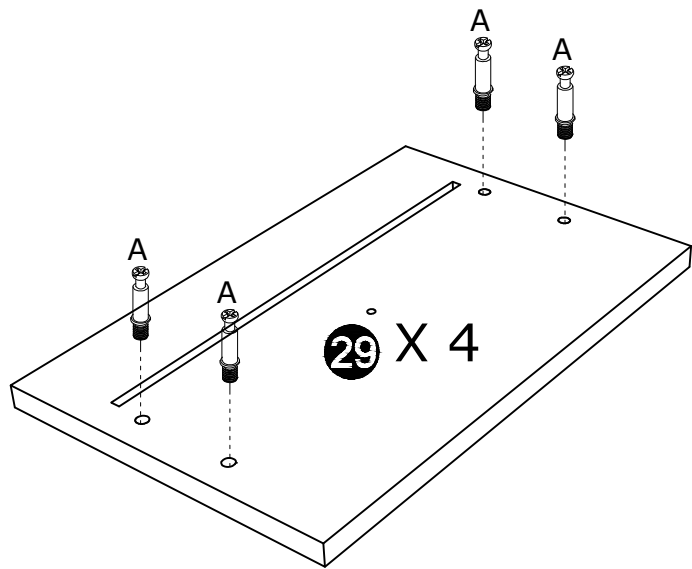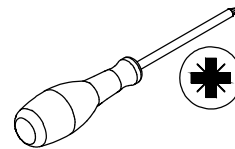


STEP24

A x 4
M6x25mm

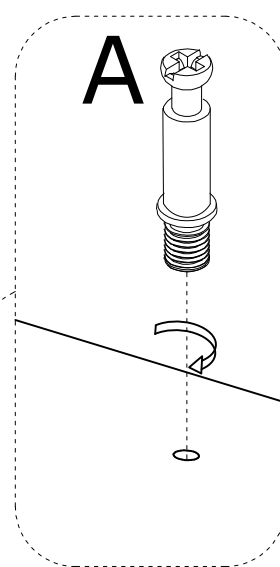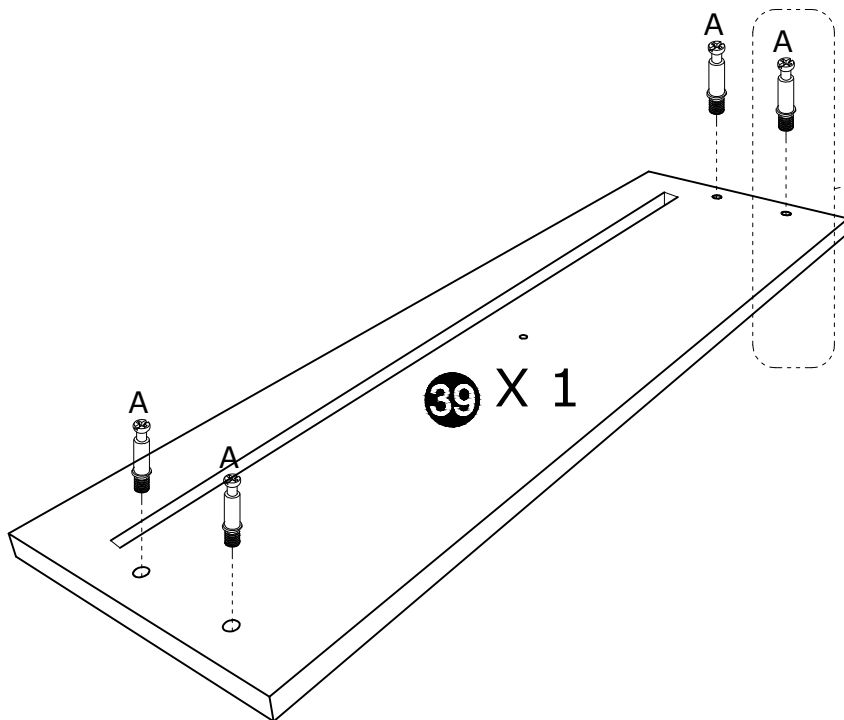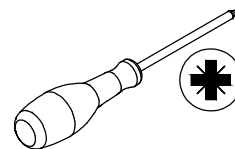


STEP25


B x 16






Ø12x10mm

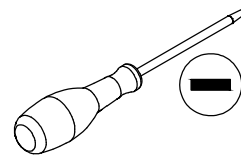

There are 4 drawers of this size, so please assemble them all.

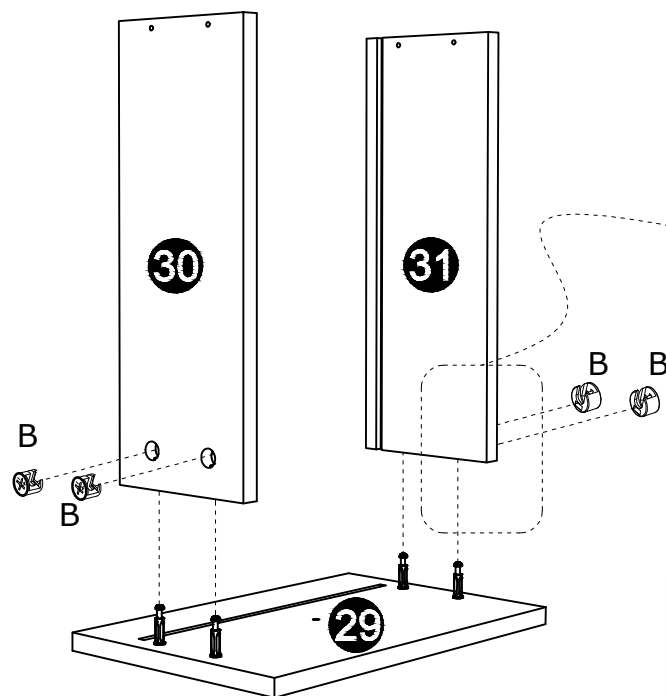


X 4

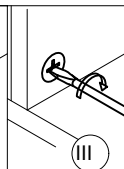


STEP26

E x 16




Ø3.5x30mm

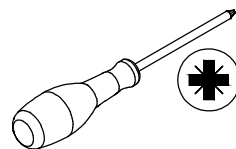


Insert the backplate into the card slot.

X 4

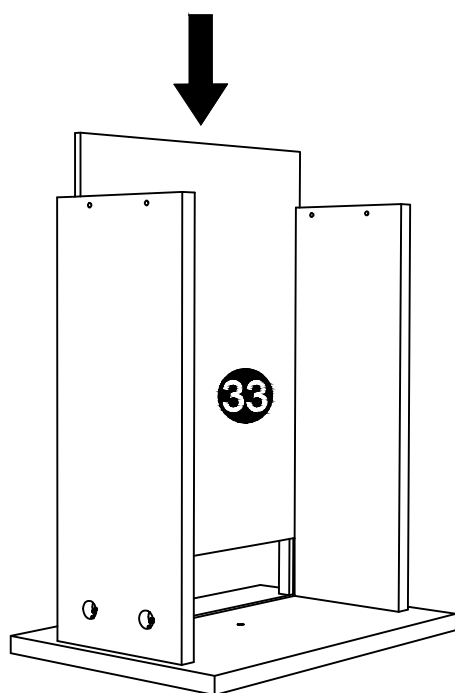


X 4




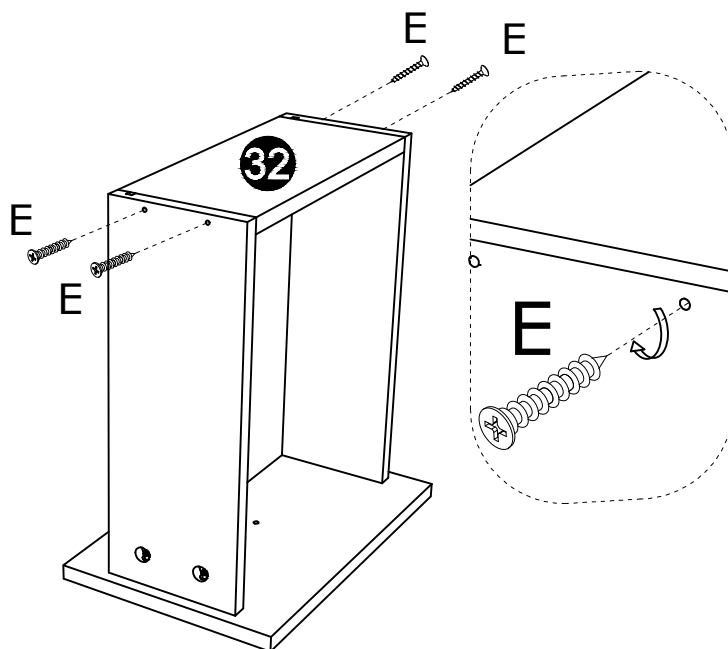


STEP27

B x 4




Ø12x10mm

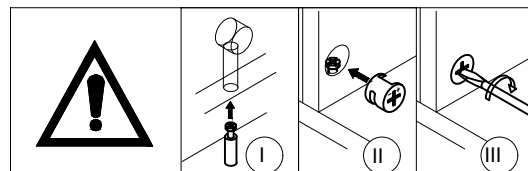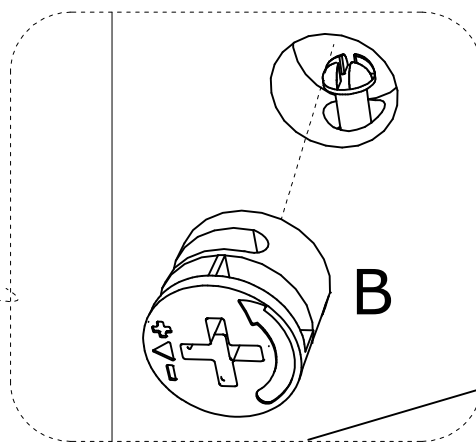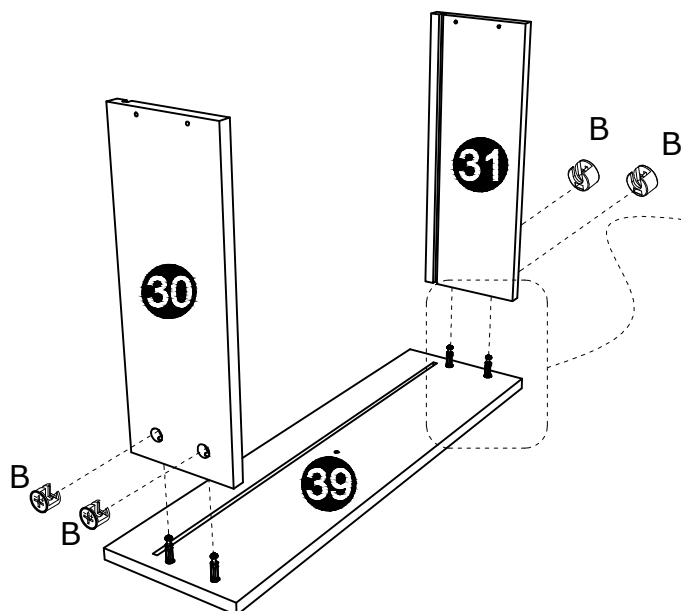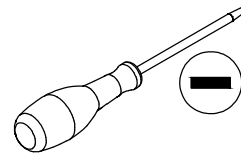


STEP28



E x 4



Ø3.5x30mm

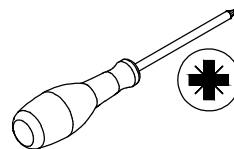


Insert the backplate into the card slot.

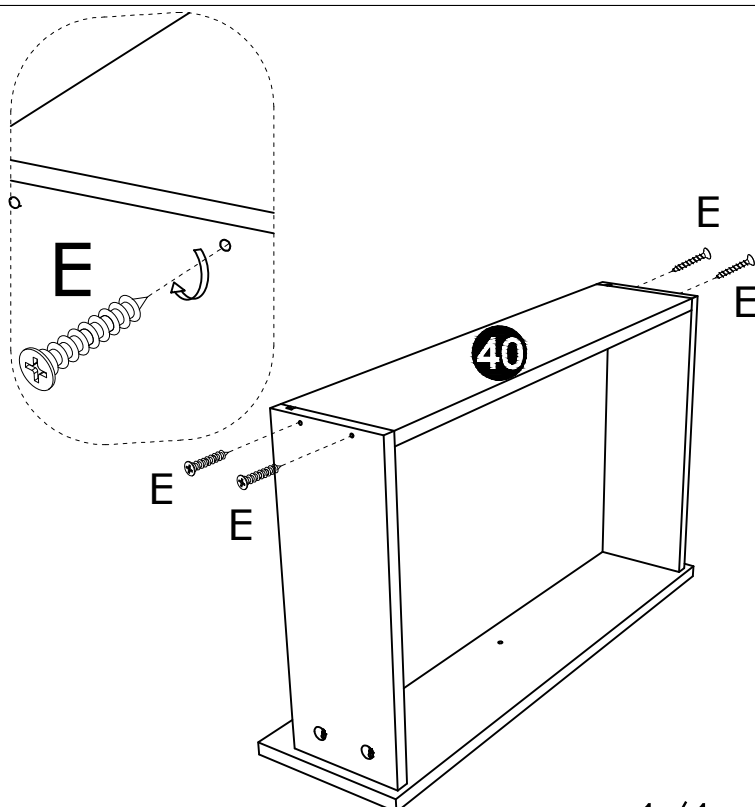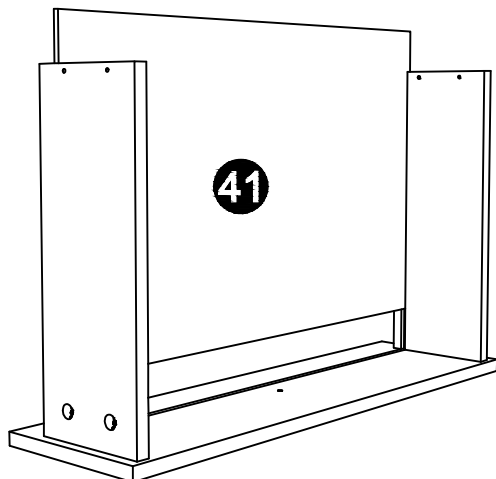


STEP29

F x 16




Ø3.5x12mm

DL x 4






300mm

DR x 4




300mm

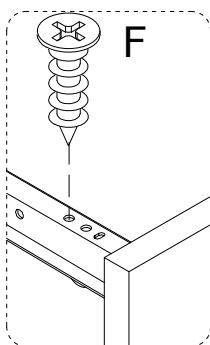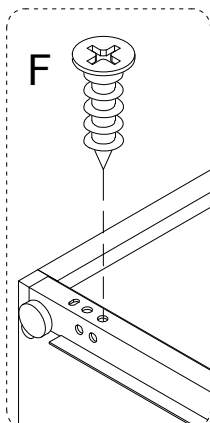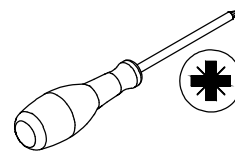


X 4

There are 4 drawers of this size,
so please assemble them all.

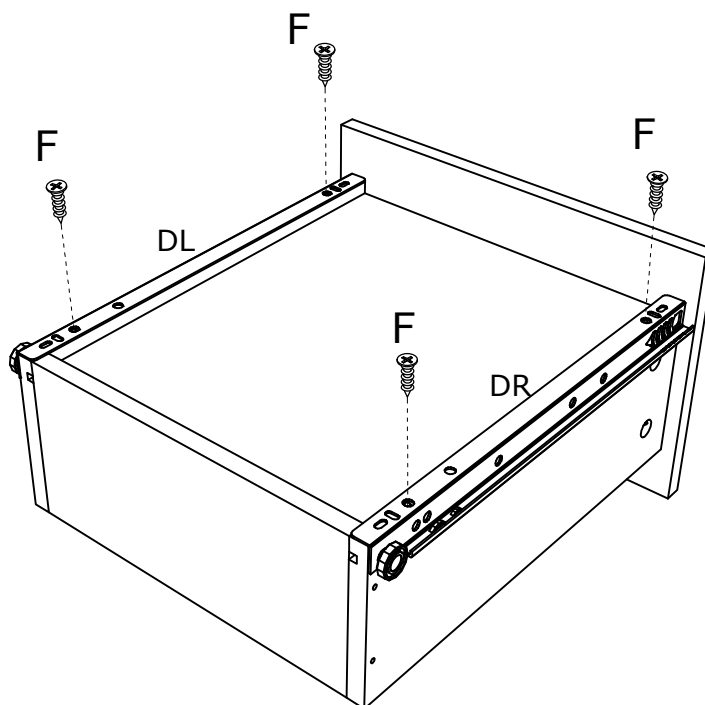


STEP30

F x 4




Ø3.5x12mm

DL x 1







300mm

DR x 1




300mm


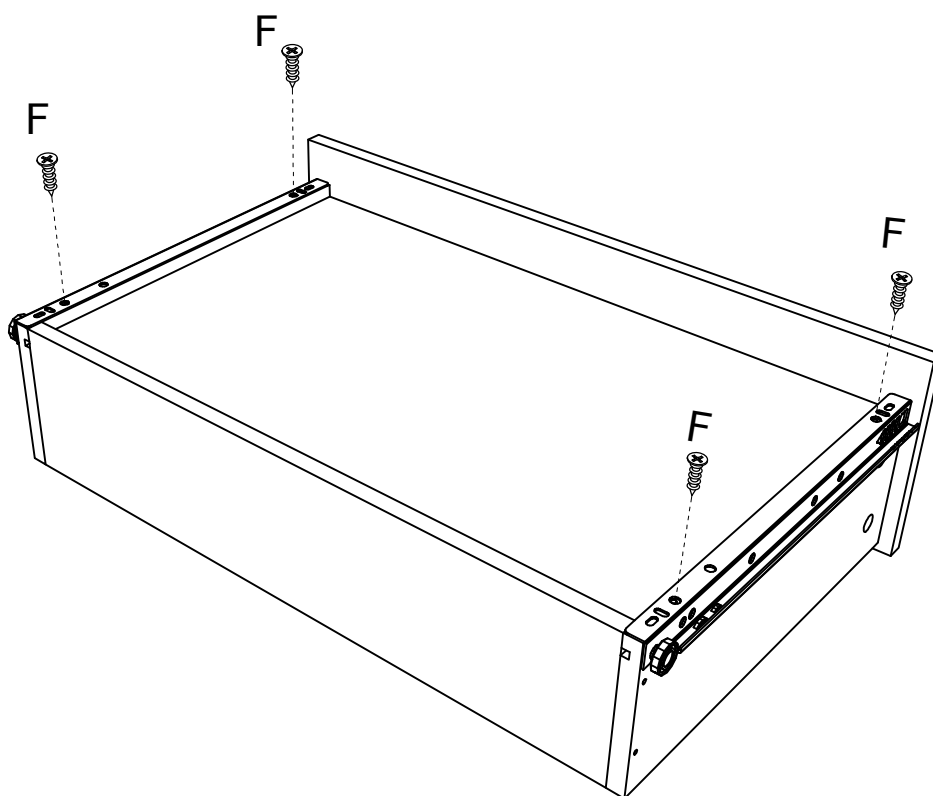
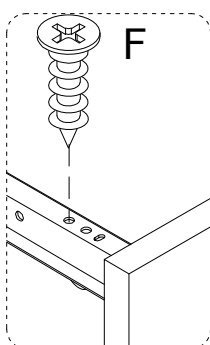
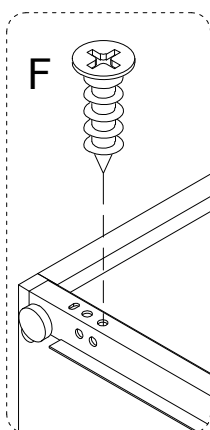
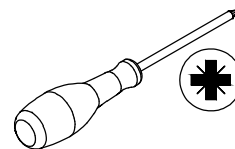


STEP31

B x4




Ø12x10mm

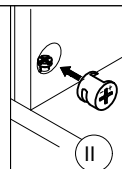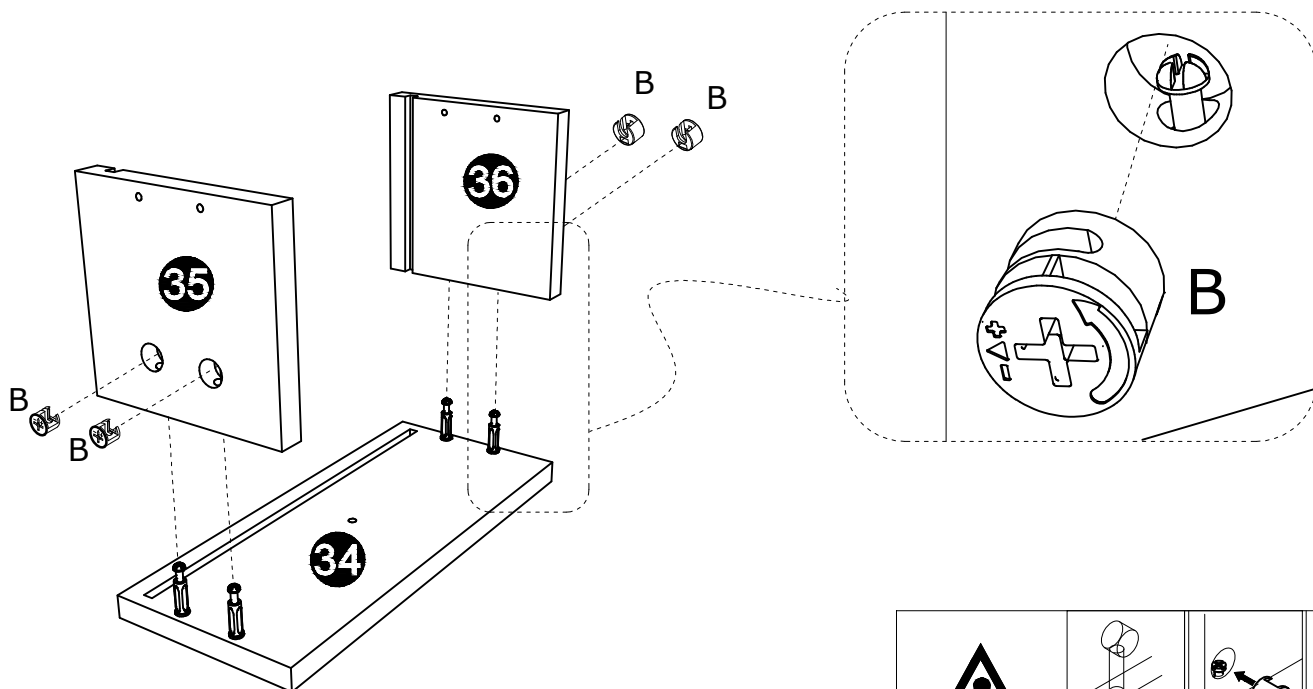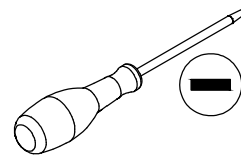


STEP32



E x 4



Ø3.5x30mm

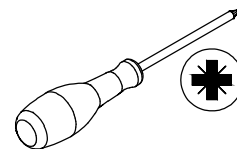


Insert the backplate into the card slot.

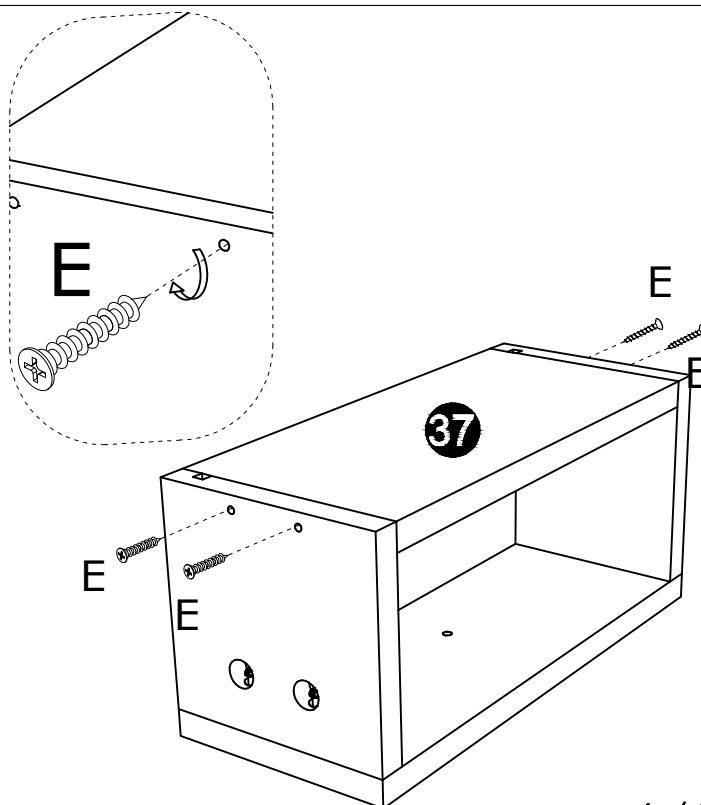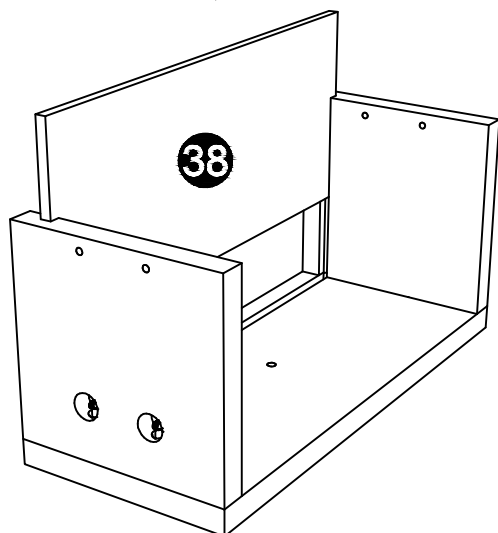

STEP33

Please place the drawer in the cabinet.

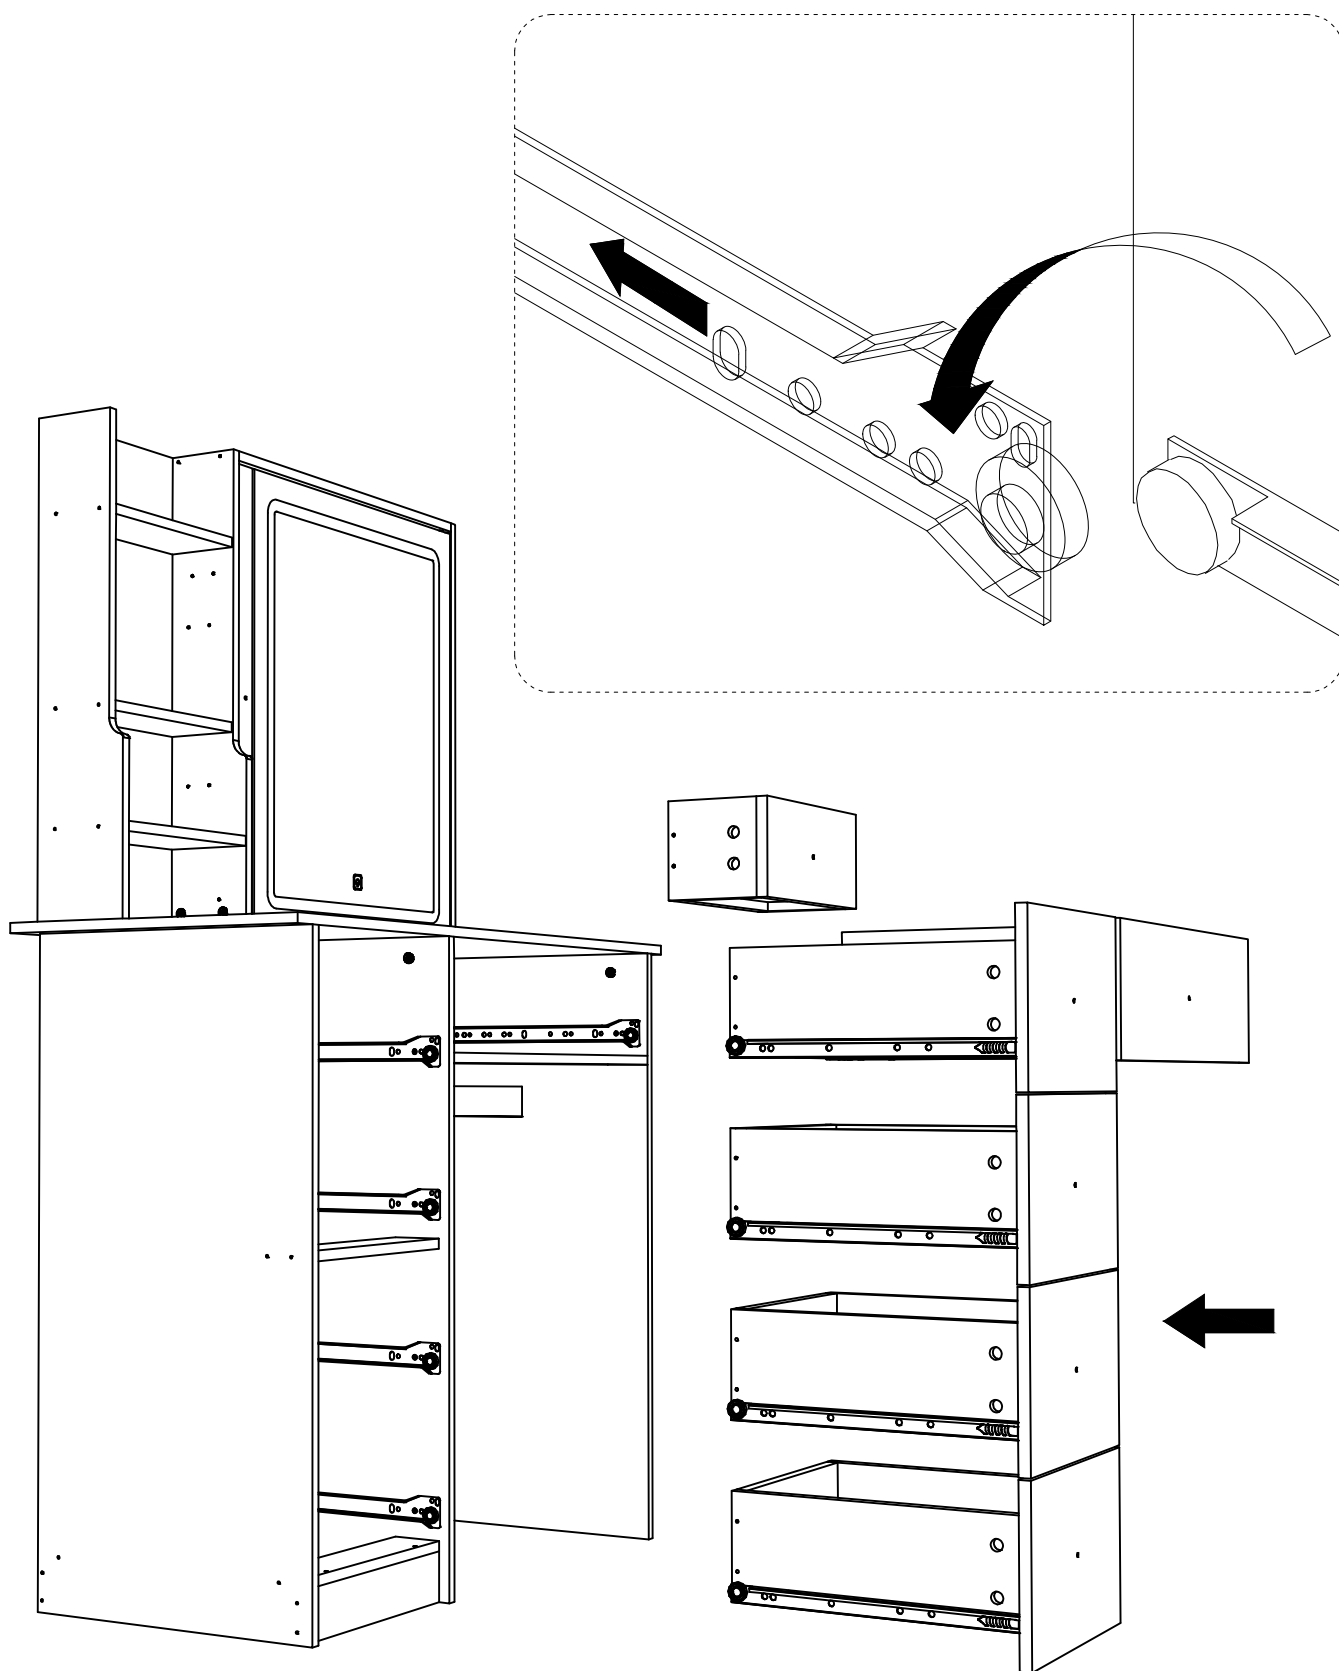

STEP 34

H x 7




25x15x25mm



I x 7



M3x18mm

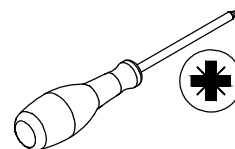


Please install the 7 handles on the cabinet door and drawer.

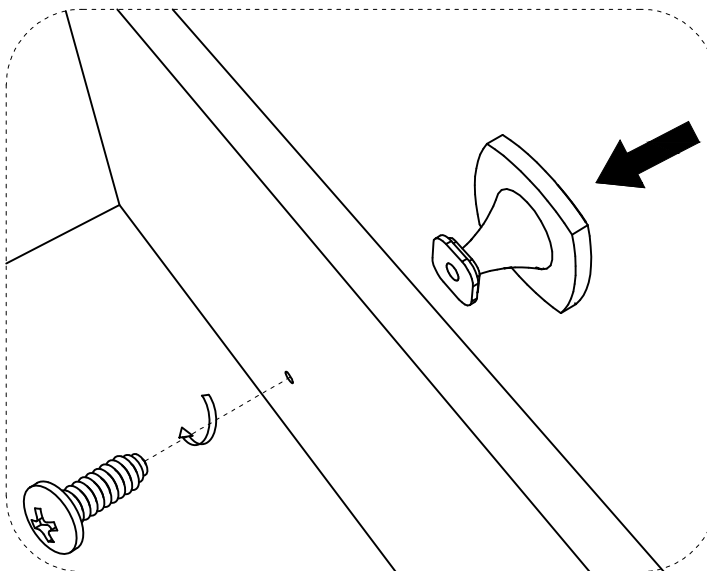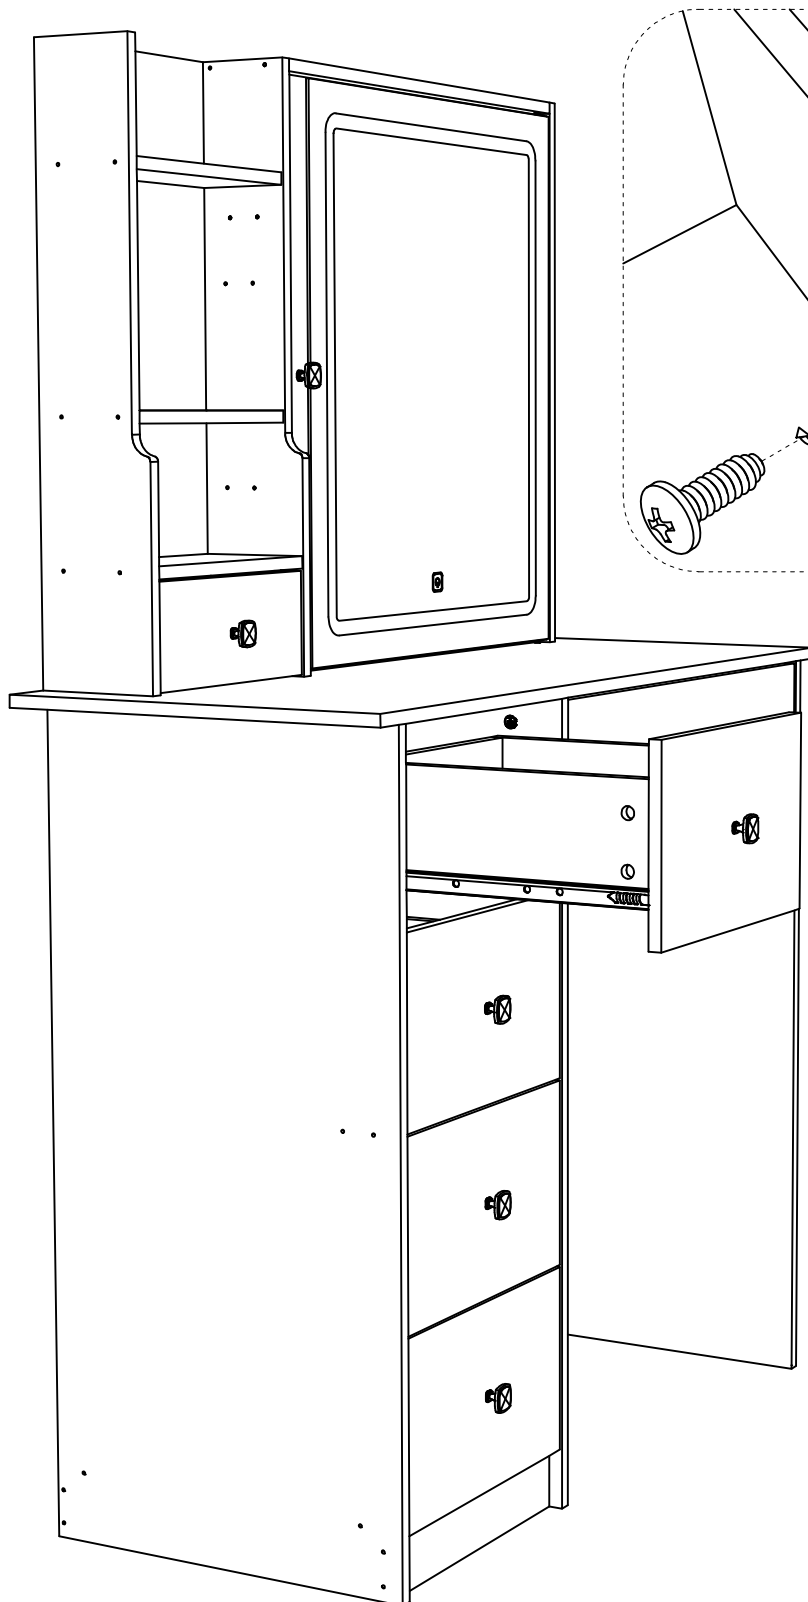


STEP 35

F x 7



Ø3.5x12mm







receptacle x 1

L x 1



125x90x50mm

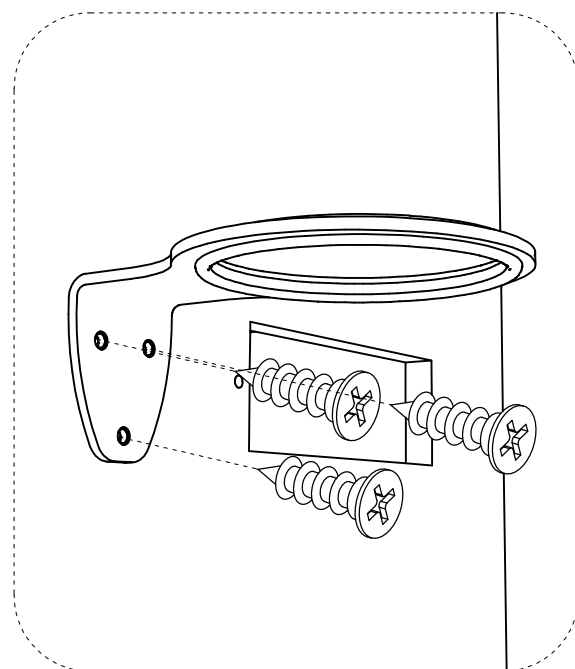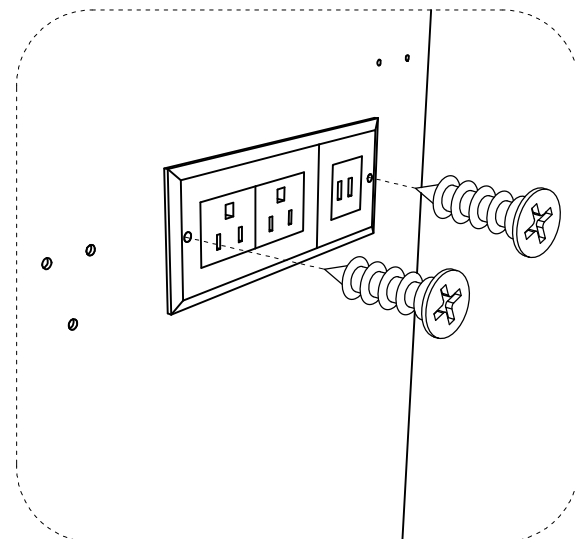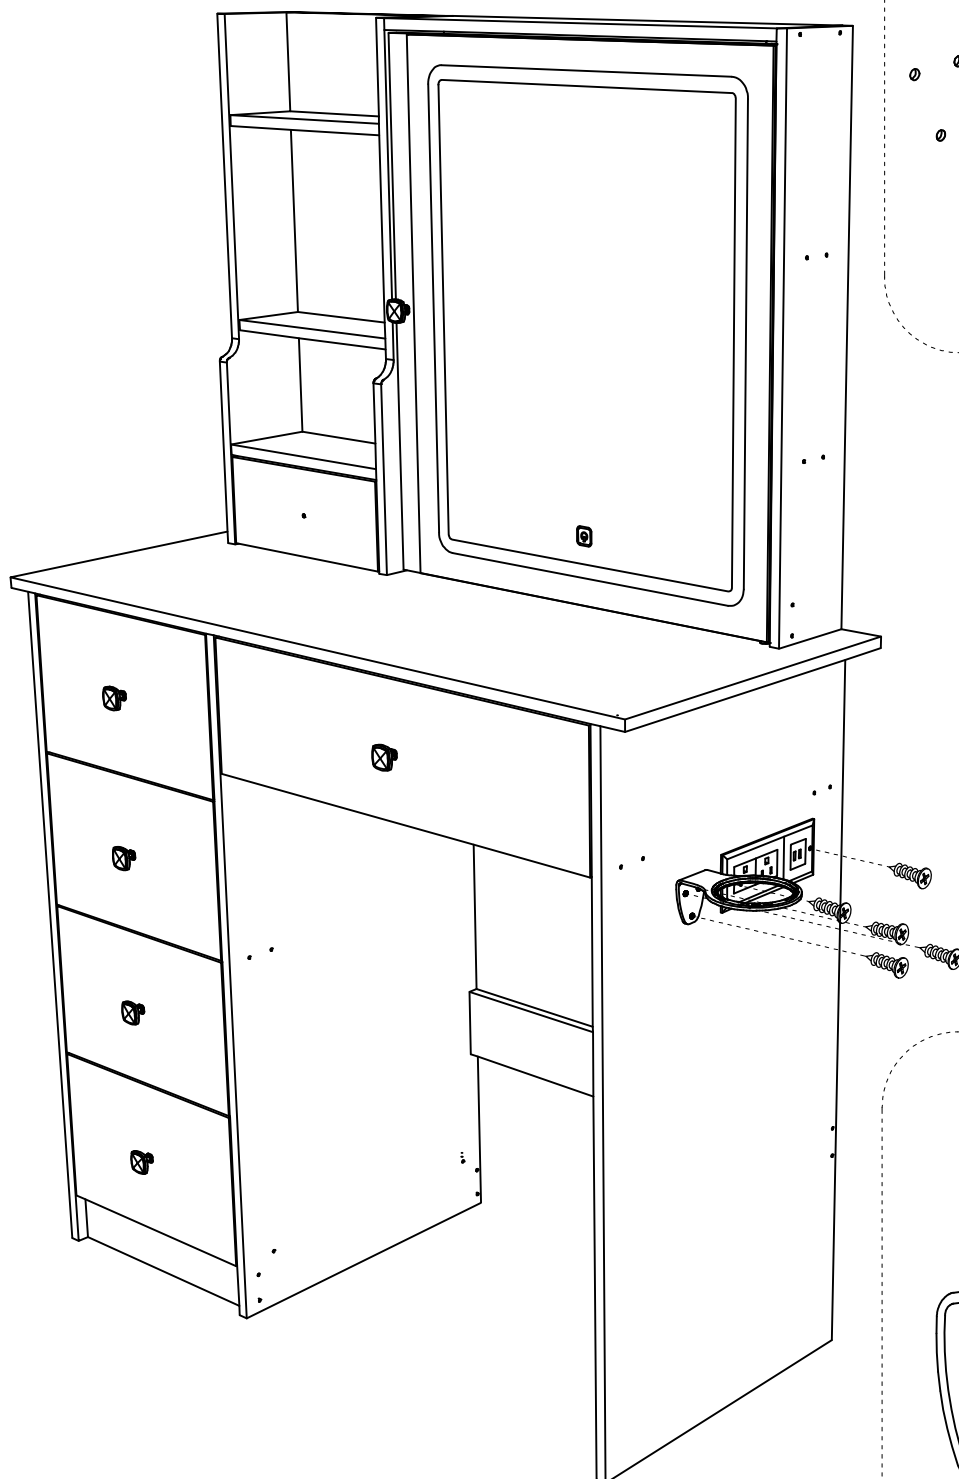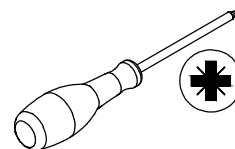




STEP36

J x 8








15x6mm

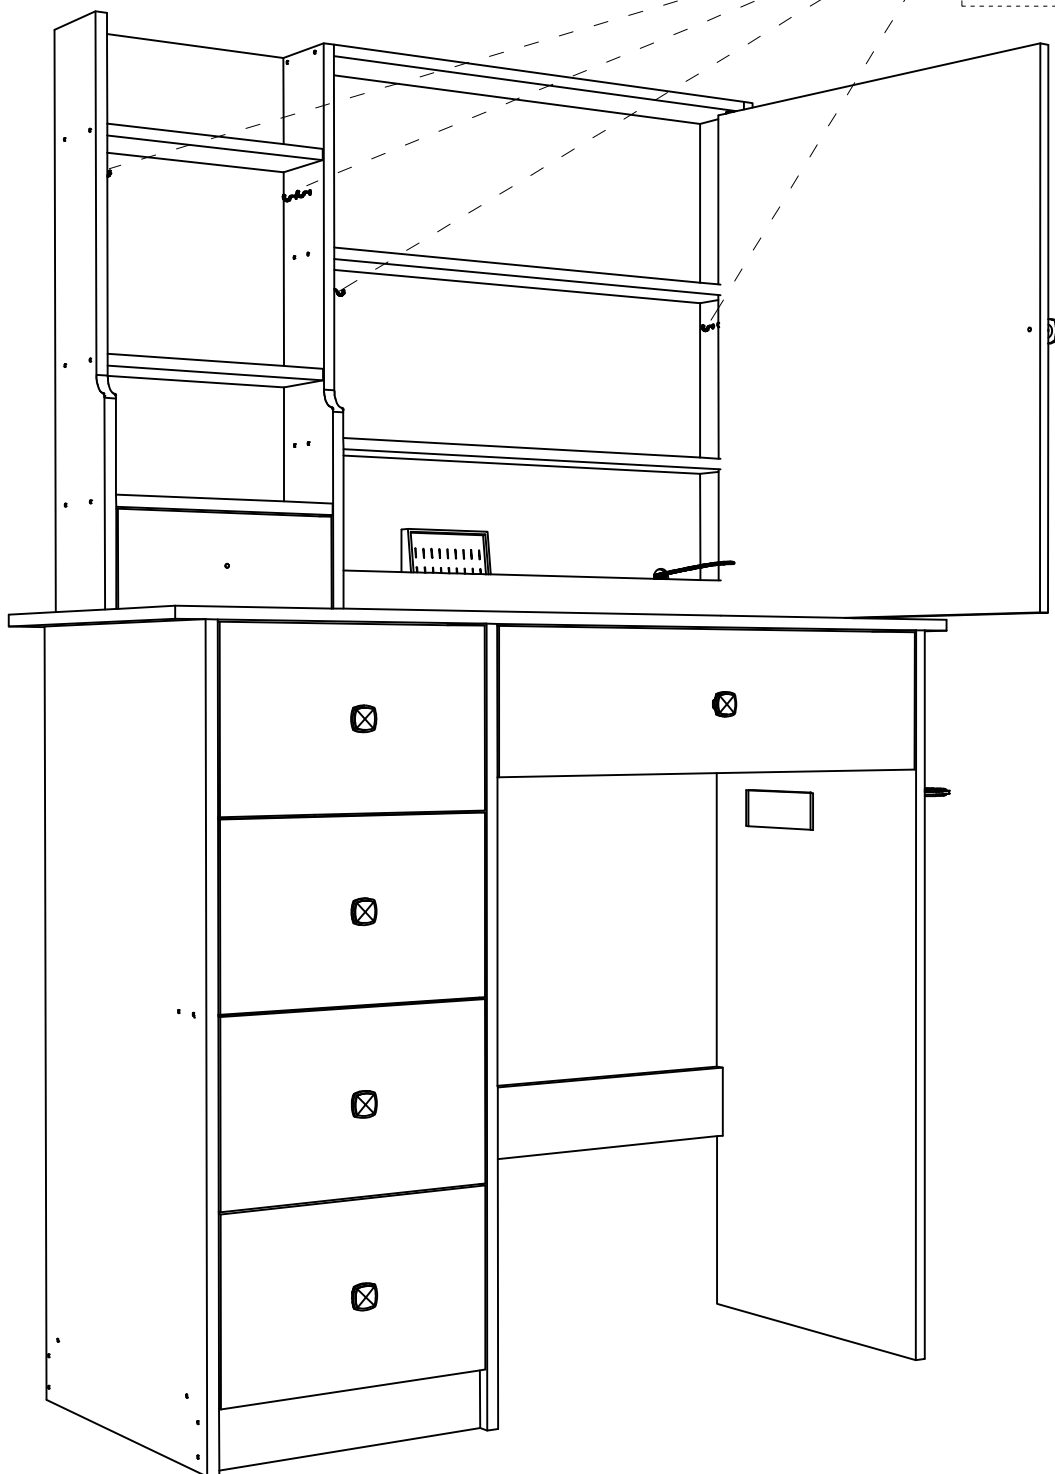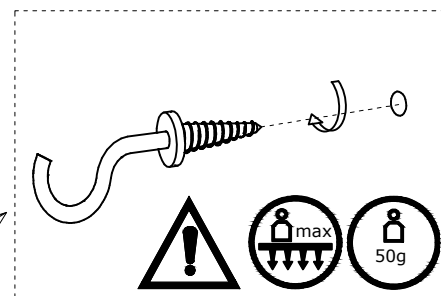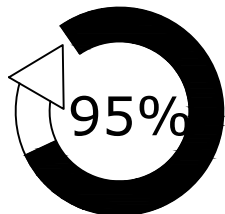
Turn the hook gently, don't tighten it too tightly.



STEP37


N x 1	R x 1	M x 1	E x 1	F x 1
				
30x6mm	DC-3.7-5v	120x15mm	Ø3.5x30mm	Ø3.5x12mm

Connect the light strip connector first,
and then fix the cabinet to the wall.

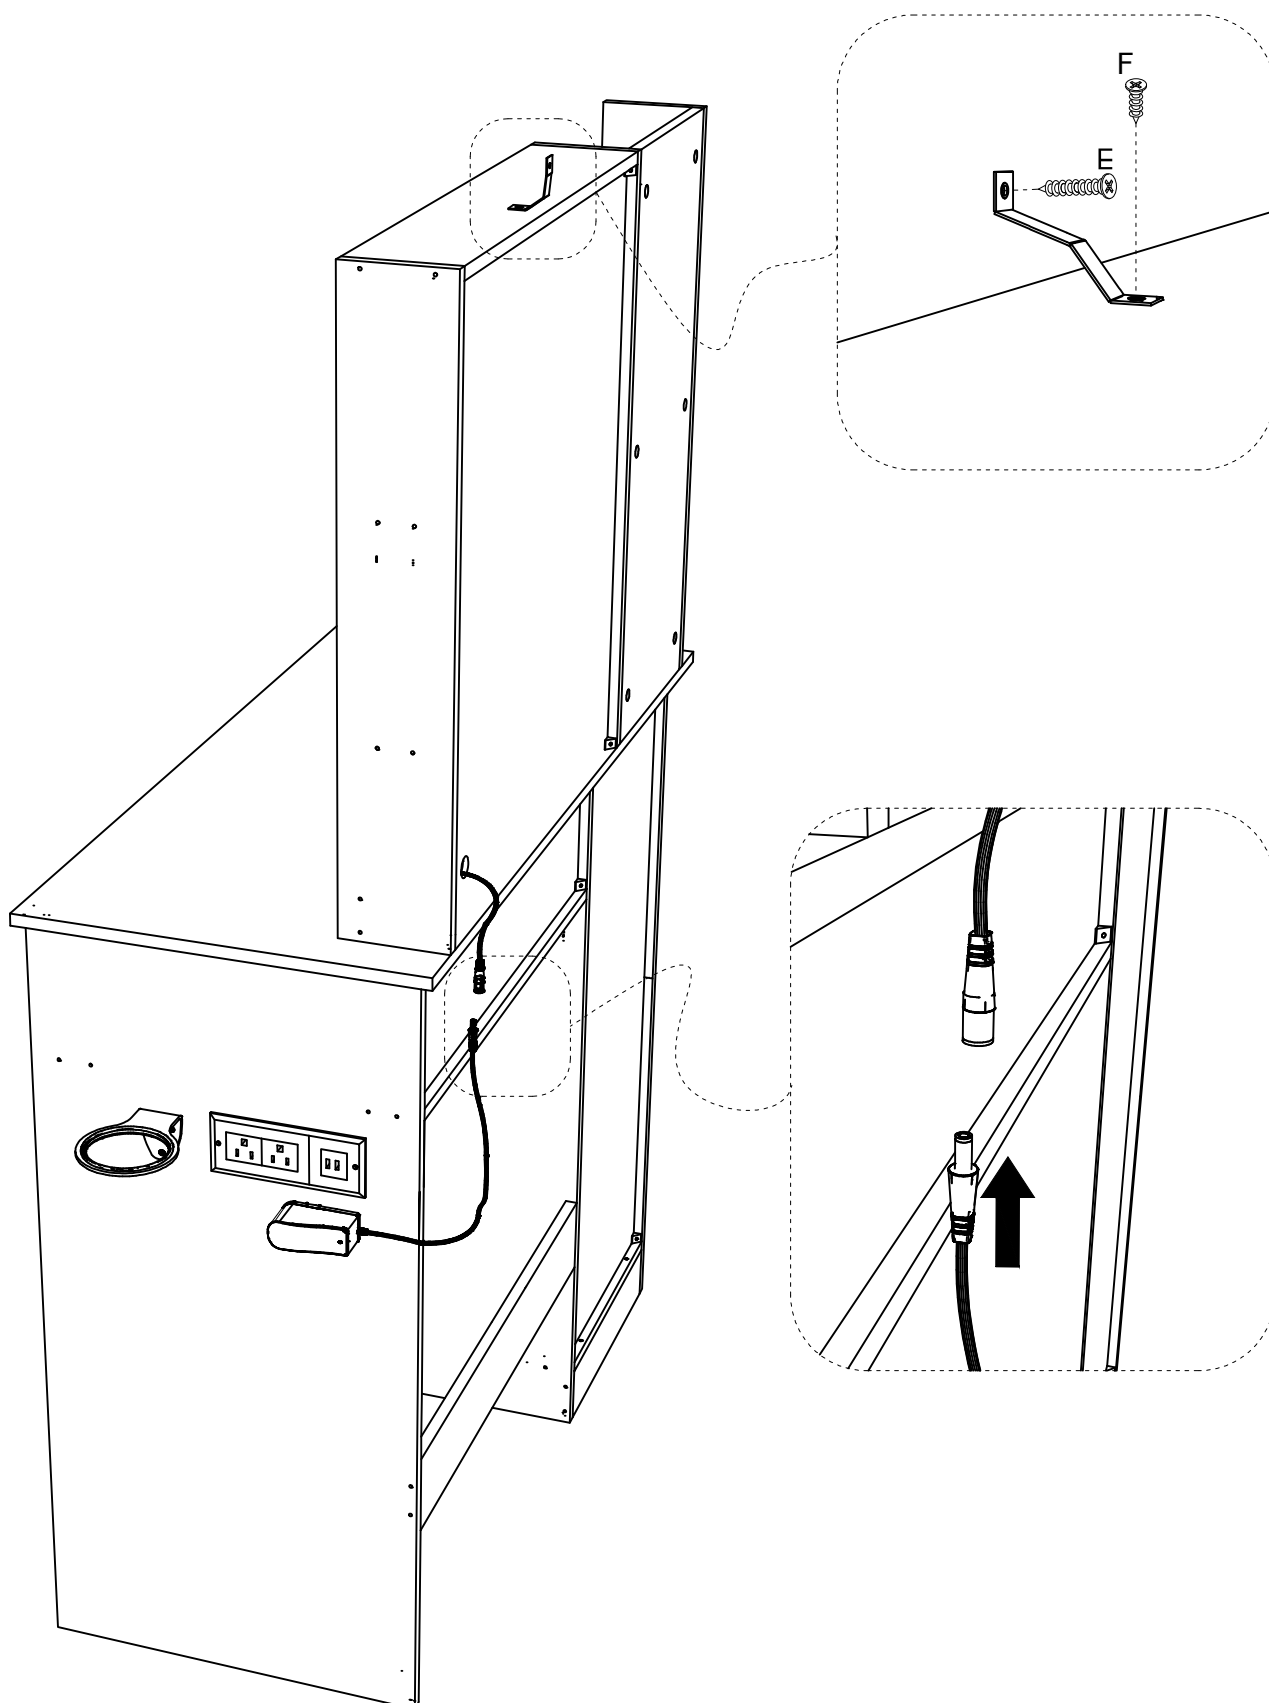


STEP38


E x 12



Ø3.5x30mm

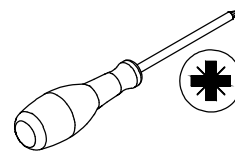


Next, let's start assembling the stool.


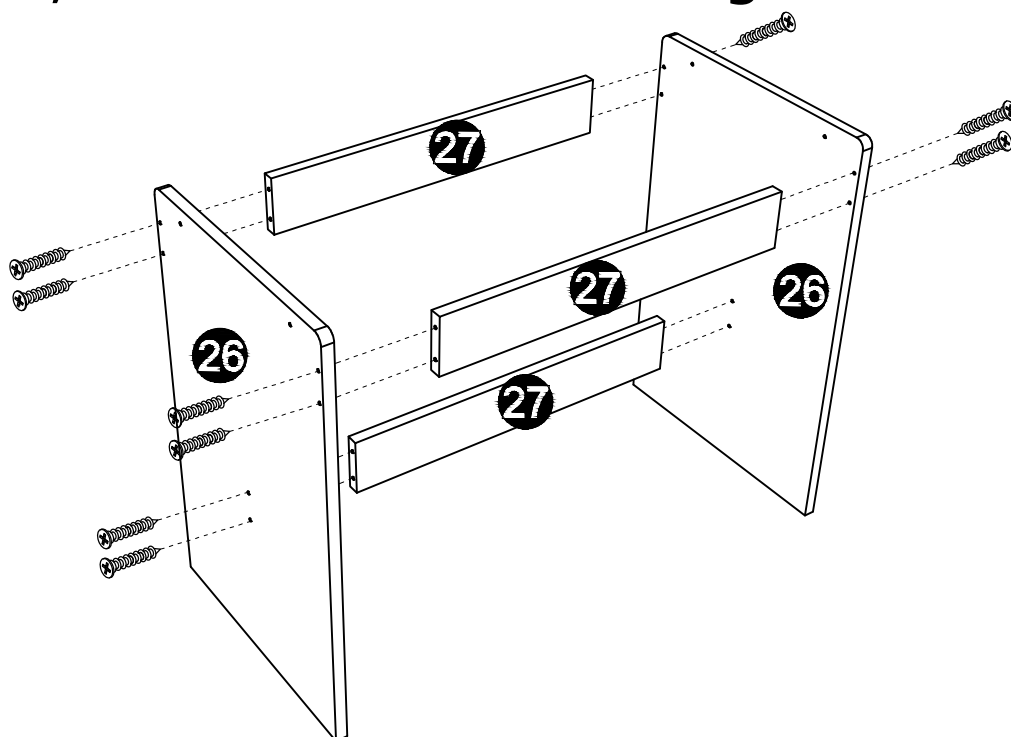


STEP39

E x 4



Ø3.5x30mm

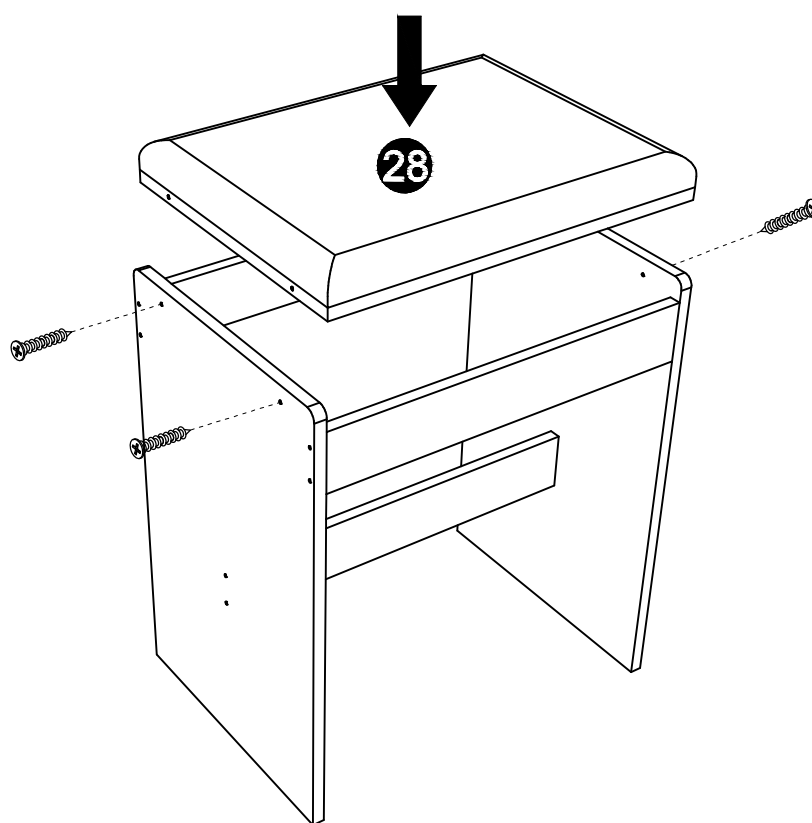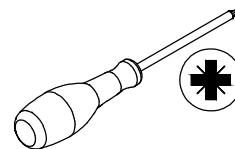

thank you for your patience in reading.
Wish you a pleasant day today

