


ASSEMBLY INSTRUCTION

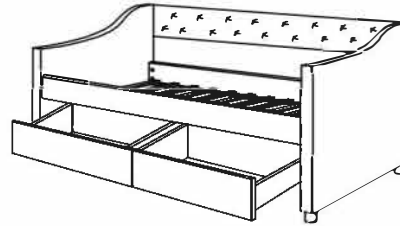

Part list

| No. | Parts | Description | QTY |
|-----|-------|----------------------------|-----|
| A | | Headboard | 1 |
| B | | Footboard | 1 |
| G | | Back panel of Drawer box | 2 |
| H | | Side panel of Drawer box | 4 |
| K | | Bottom panel of Drawer box | 2 |
| J | | Foot | 4 |


Hardware package

| | | | |
|---|--|---------------------------------------|----|
| C | | Bed Rail | 2 |
| D | | Backboard | 1 |
| E | | Bed Slats | 10 |
| F | | Upholstered Front panel of Drawer box | 2 |
| M | | Stop Rail behind the Drawer box | 1 |

Hardware list

| No. | Parts | Description | QTY |
|-----|-------|----------------------|-----|
| 1 | | Hang Bolt | 8 |
| 2 | | Crescent Spacer | 8 |
| 3 | | Spring Washer 5/16" | 4 |
| 4 | | Nut 5/16" | 8 |
| 5 | | Wrench | 1 |
| 6 | | Bolt 5/16" x 1 1/2" | 4 |
| 7 | | Flat Washer | 4 |
| 8 | | Allen Wrench (5/16") | 1 |
| 9 | | Wheel | 8 |
| 10 | | Bolt 1/4" x 1" | 18 |
| 11 | | Wood Screw #8 x 1" | 20 |
| 12 | | Wood Screw #8 x 3/4" | 36 |
| 13 | | L metal bracket | 2 |


- STEP 1:**
1. Screw four feet (J) into the bottom of about Headboard and footboard, as show in Figure 1
 2. Screw Hang Bolts (1) into Headboard (A).Make sure there is enough length of the Hang Bolts (1) for next step as show in Figure 2.
 3. Insert Hang Bolts (1) through the hole of Bed Rails (C) as shown in Figure 3.
 4. Attach Bed Rail (C) to Headboard (A) using Crescent Spacer (2), and Nut (4). tighten with Wrench(5) as show in Figure 4. Don't tight Nut (4) fully.
 5. Repeat the steps 1,2,& 3 for Footboard (B).
 6. When Headboard (A), Footboard (B) and Bolt Rails (C) fixed, please fully tighten all Nuts (4).

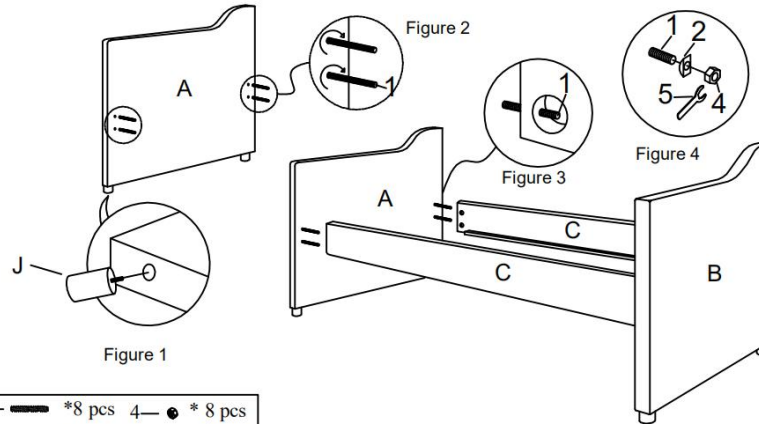

| | | | |
|-----|---------|-----|---------|
| 1 — | *8 pcs | 4 — | * 8 pcs |
| 2 — | * 8 pcs | 5 — | *1pcs |
| J — | * 4 pcs | | |


STEP 2:

1. Attach Backboard (D) to Headboard (A) and Footboard (B) by using 4 pieces of Bolts (6), 4 pieces of Flat washer (7),and 4 pieces of Spring Washers (3) as shown.
2. Use Allen Wrench (8) to tighten all Bolts (6) clockwise as shown.

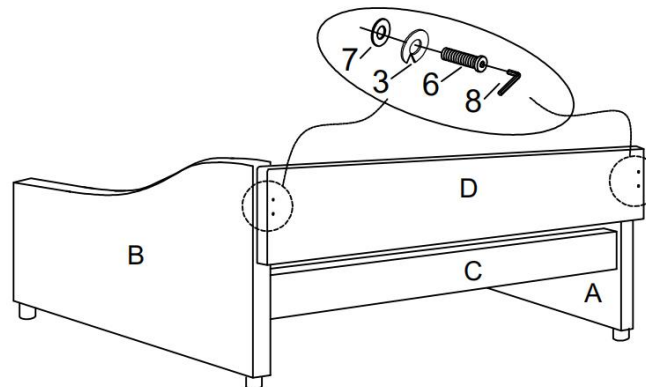

| | | | |
|-----|---------|-----|---------|
| 6 — | *4 pcs | 3 — | * 4 pcs |
| 7 — | * 4 pcs | 8 — | * 1 pc |

- STEP 3:**
1. Attach the L metal bracket(13) to stop rail (M) using Screw (12). As shown Figure 1.
 2. Attach the stop rail to both Headboard and Footboard using Bolt (10).and Tighten with Allen Wrench (8). As shown in Figure 2.
 3. Put 10 pieces of Bed Slats (E) on the Bed Rails (C).
 4. Install Slat Pack with slats starting and ending flush with the end of the support cleat attached to your bed rails **Figure 3**.
 5. Using Screw driver to tighten 20 Pieces of Wood Screws (11) clockwise as shown.

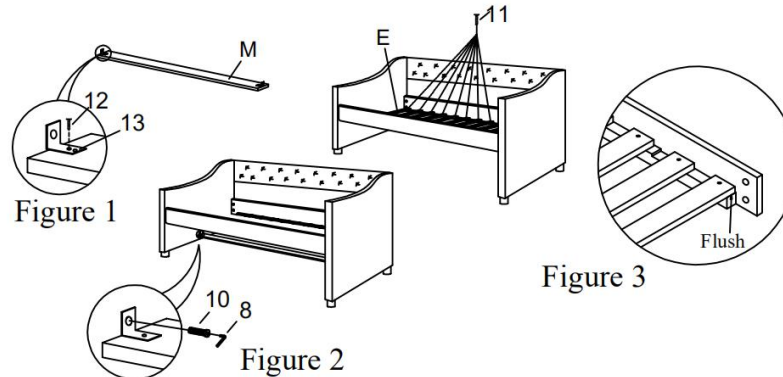

- 8 — *1 pc
 10 — 1/4"*1" *2 pcs
 11 — #8*1" 20 pcs 12 — #8*3/4" 2 pcs
 13 — 2 pcs

- STEP 4:**
1. Insert bottom panel (K) to slot in one side panel (H) and both back panel (G) and Upholstered Front panel (F). As shown Figure 1.
 2. Attach side panel to both front and back panel using bolt (10), tighten with Allen Wrench (8), as shown Figure 2.
 2. Attach another side panel (H) to bottom panel (K) and both Upholstered front panel (F) and back panel (G), tighten with Allen Wrench (8) as shown Figure 3.

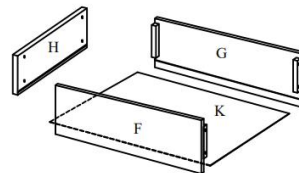


Figure 1

- 8 — *1 pc
 10 — *16 pcs

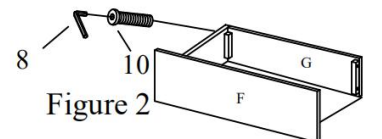


Figure 2





Figure 3

STEP 5: 1. Attach 8 pieces of Wheels (9) to the back side of both drawer boxes with 16 pieces of Wood Screws (12), as shown in figure 1.

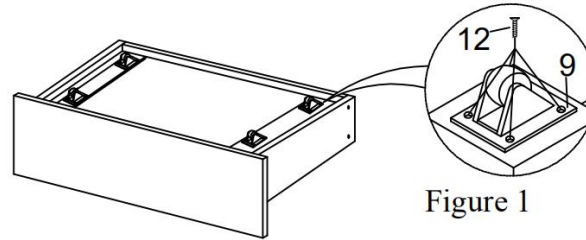

9 —  8 pcs
12 —  32 pcs

STEP 6: Push the Under Box of bed into the Bed.

