


Installation instructions



1. Component presentation

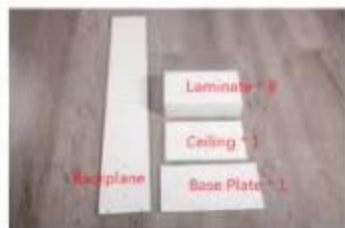

2. Take Out 8 layers



3. Take out the 2 boards and connect them as shown.
Note: The two boards face up



4. Install other combinations in the same way



5. Place side faces facing up as shown



6. Screw the T assembly



7. Install a roof



8. Step 7 details



9. Place the bottom plate on the bottom



10. Remove the backboard



11. Install as shown and secure with screws (step 3 screws)



12. Installation complete