





# TRUNDLE BED

## ASSEMBLY INSTRUCTIONS



Before assembling your Trundle bed, please read through these instructions carefully. Familiarize yourself with the different parts.

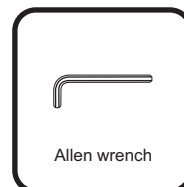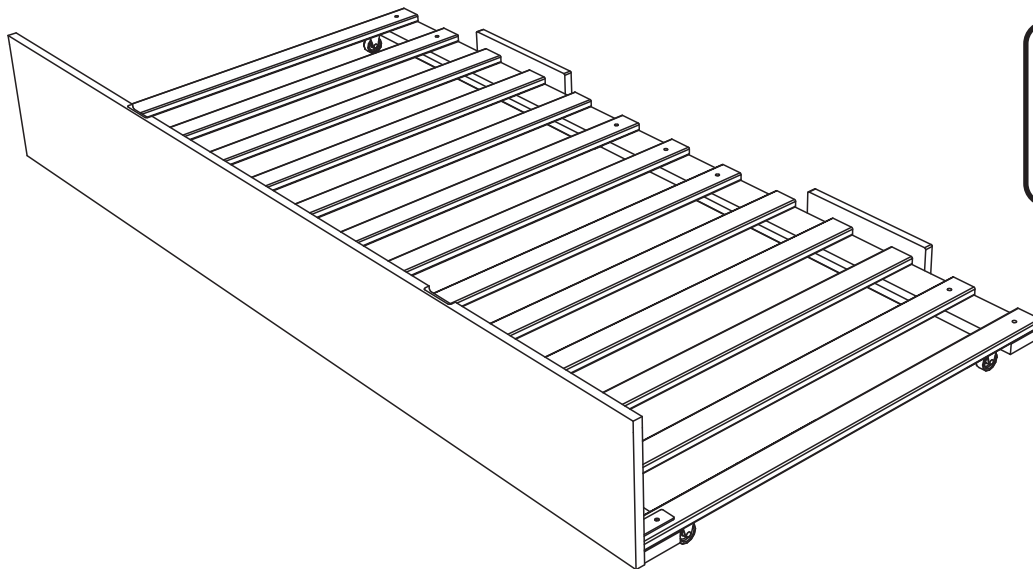



PO :





## HARDWARE


NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

- A**  JCB M6 X 2 3/8 "( 60mm ) - 4 pcs  
Spare - 1 pc

- B**  JCB M6 X 1 3/4 "( 45mm ) - 17 pcs  
Spare - 2 pcs

- C**  JCB M6 X 5/8 "( 15mm ) - 6 pcs  
Spare - 2 pcs  
Fix L bracket to front panel

- D**  Barrel nut - 4 pcs  
Spare - 1 pc  
For JCB M6 X 2"(50mm )

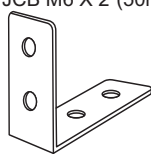- E**  L Bracket - 3 pcs


- F**  Allen wrench - 1 pc  
Spare - 1 pc



# TRUNDLE BED





## PARTS LIST

|    |             |       |    |                   |       |
|----|-------------|-------|----|-------------------|-------|
| 01 | HARDWARE    | 1 BOX | 05 | SIDE CROSS RAIL   | 2 PCS |
| 02 | FRONT PANEL | 1 PC  | 06 | CENTER CROSS RAIL | 1 PC  |
| 03 | FRONT RAIL  | 1 PC  | 07 | REAR BLOCK        | 2 PCS |
| 04 | BACK RAIL   | 1 PC  | 08 | SLAT KIT          | 2 SET |

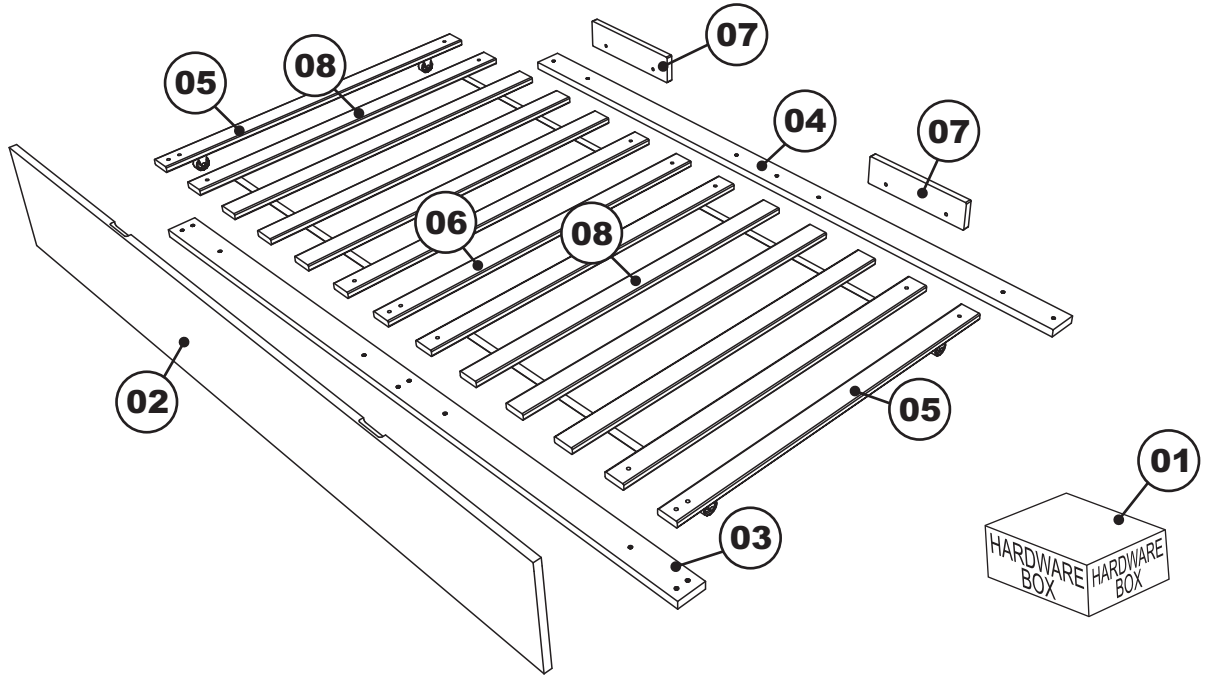

### Step 1

Attach the side cross rails (05) and center cross rail (06) to the front and back rail (03)(04), using L bracket (E), JCB M6 X 1 3/4"(B). Tighten with the Allen wrench (F).

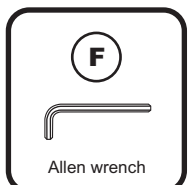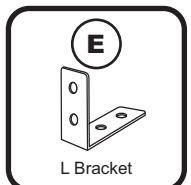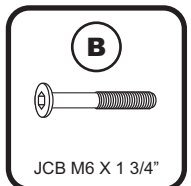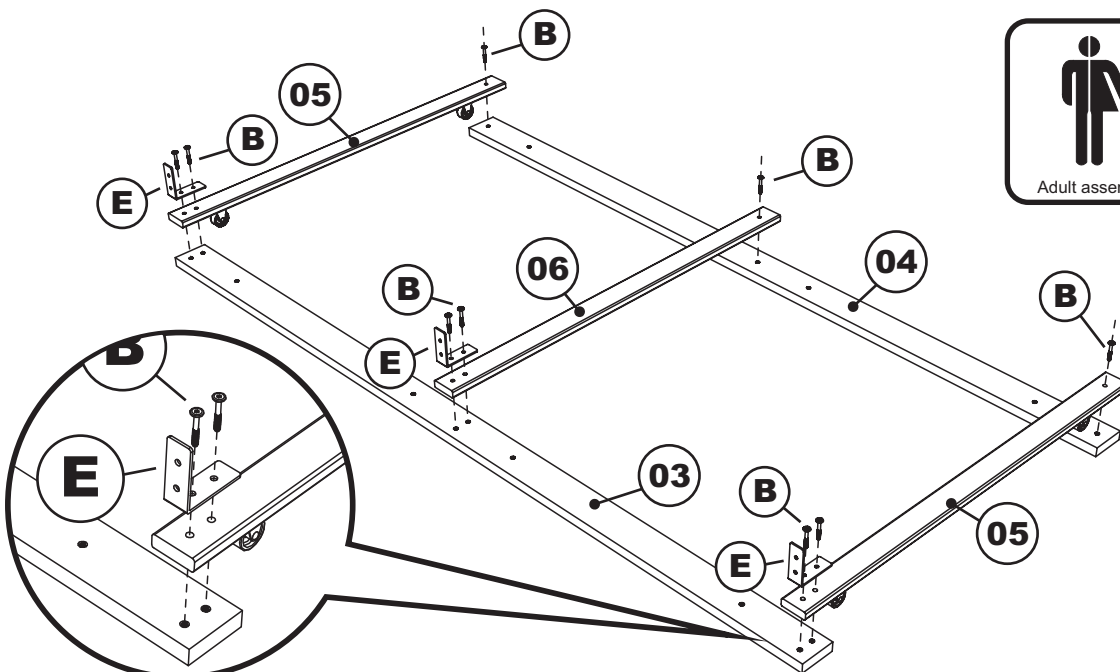




## TRUNDLE BED

### Step 2

Attach the front panel (02) to the front rail as shown, using JCB M6 X 5/8" (C). Tighten with the Allen wrench (F).

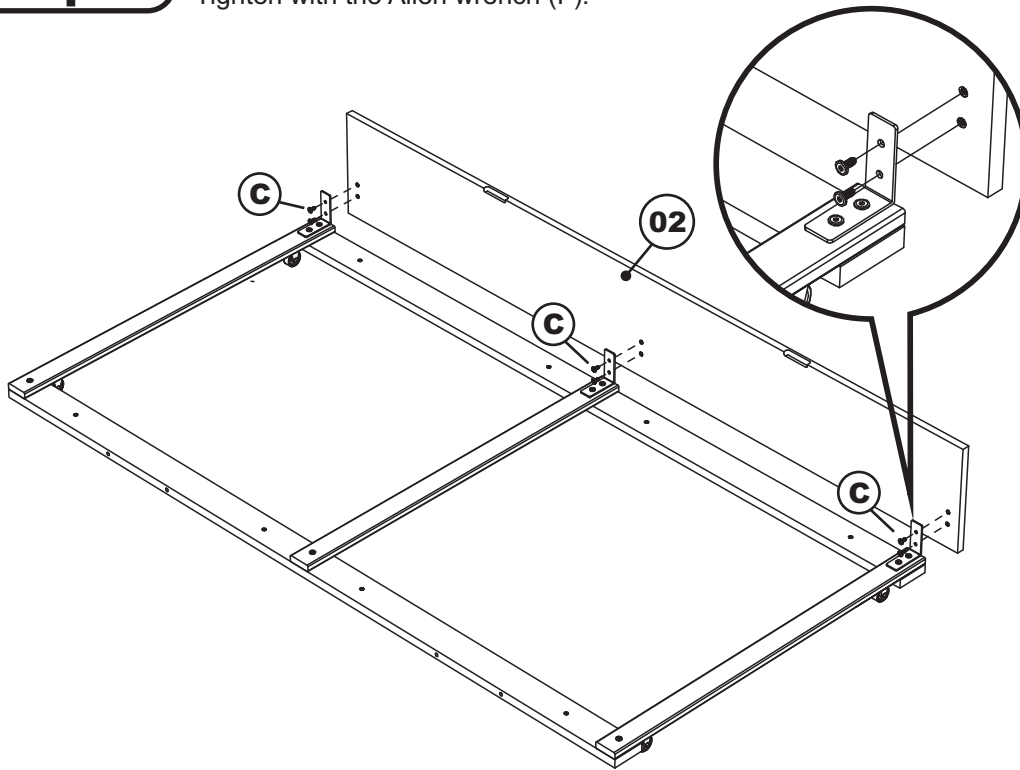

Adult assembly

(C)



JCB M6 X 5/8"


(F)



Allen wrench

### Step 3

Lay the slat kit (08) onto the rail assembly as shown, using JCB M6 X 1 3/4" (B). Tighten with the Allen wrench (F).

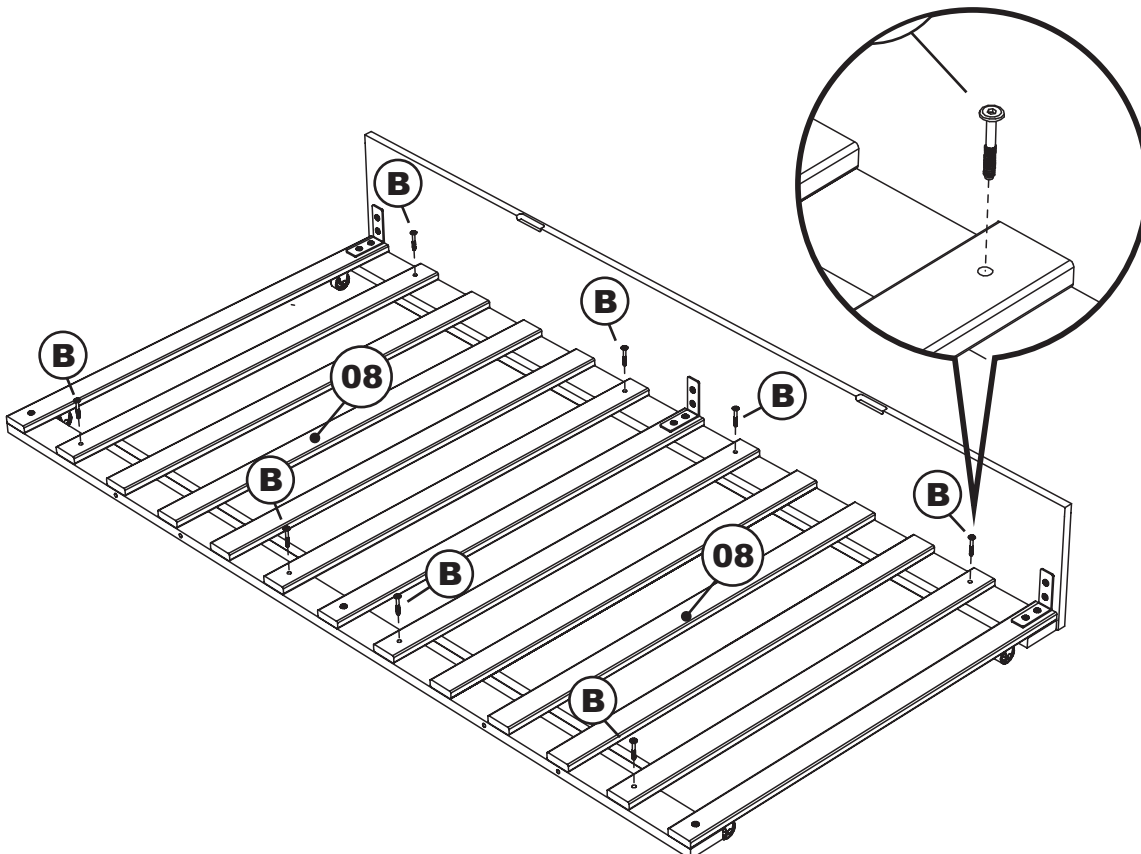

Adult assembly

(B)



JCB M6 X 1 3/4"

(F)




Allen wrench



## TRUNDLE BED

### Step 4

Attach the rear block (07) to the back rail as shown. Using JCB M6 X 2 3/8" (A) barrel nut (D), tighten with the Allen wrench (F)

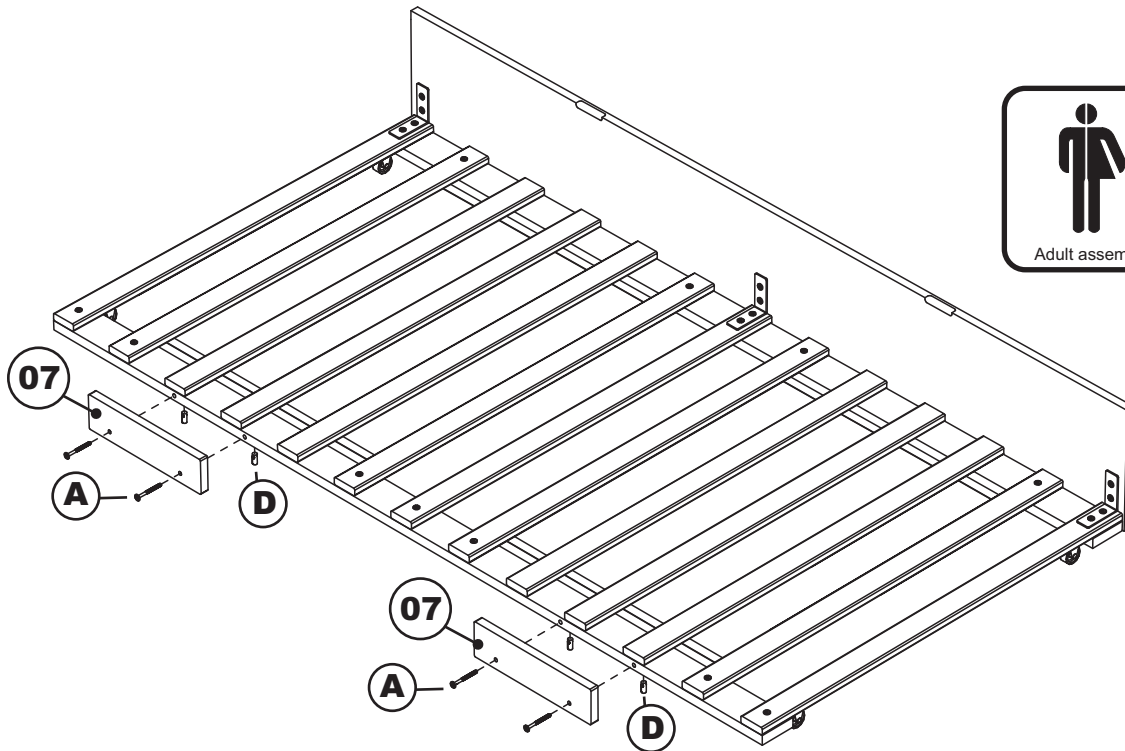

Adult assembly

A



JCB M6 X 2 3/8"

D




Barrel nut

F



Allen wrench

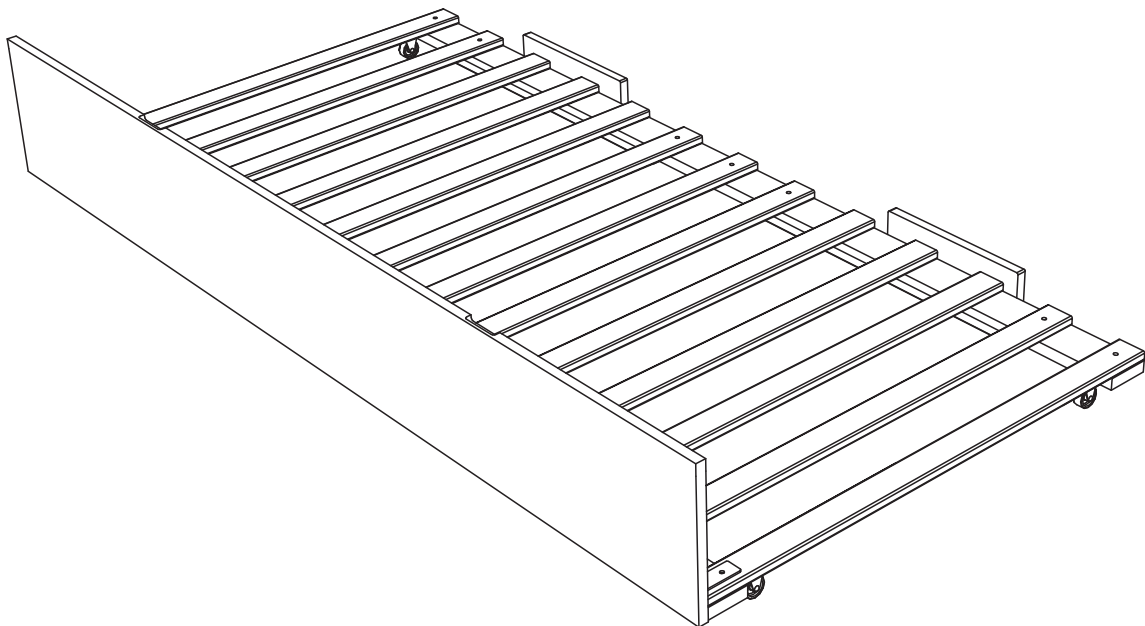

### Congratulations!

Your Trundle bed is now ready for use.

We recommend that you periodically check that all screws are tight and all parts are secure to ensure lasting safety.